

HANDBOOK



3008



EXTERIOR

Welcome lighting

This additional exterior and interior lighting, controlled remotely, makes your approach to the vehicle easier when the light is poor.



88

Panoramic sunroof

This roof provides incomparable visibility and light in the passenger compartment.



103



Directional lighting

This lighting automatically provides additional visibility when cornering.



90

Grip control

This special traction control system improves the traction of 2 wheel drive vehicles in snow, mud and sand.



122



EXTERIOR

Temporary tyre repair kit

This kit is a complete system, consisting of a compressor and an integrated sealant, for the temporary repair of a tyre.



When using an automatic car wash:

- unscrew the aerial,
- fold back the mirrors.



Lower tailgate

This lower tailgate permits remarkable accessibility and makes the loading of bulky objects easier.



Visual and audible front and/or rear parking sensors

This system warns you if an obstacle is detected behind or in front of the vehicle in reverse or forward gear.



OPEN**Remote control key****A. Unfolding/Folding of the key.**

Normal locking
(press once; fixed lighting of the direction indicators).

or



Deadlocking of the vehicle
(press twice in succession; fixed lighting of the direction indicators).



Complete or selective unlocking of the vehicle
(rapid flashing of the direction indicators).



71

Welcome lighting

When the light is poor, detected by a sensor, the remote switching on of the dipped headlamps and sidelamps makes your approach to the vehicle easier.

This function can be programmed via the configuration menu.



88

Fuel tank

1. Opening the fuel filler flap.
2. Opening and hooking the fuel filler cap.


The type of fuel to be used is indicated on the inner face of the fuel filler flap.
Capacity of the tank: approximately 60 litres.



84


OPEN

Boot

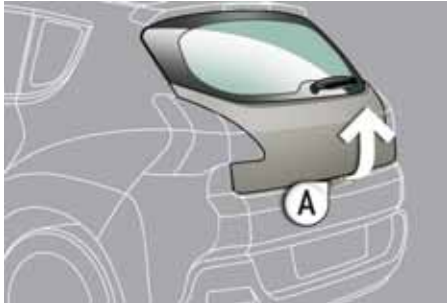

Opening

- After unlocking the vehicle using the remote control or the key, press the handle **A** and lift the tailgate.

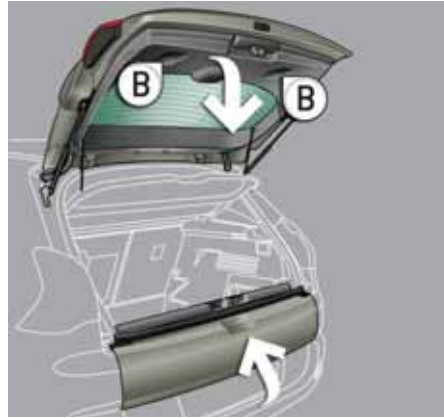


Closing

- After closing the lower tailgate, pull the handle **B** downwards to guide the tailgate.



Lower tailgate

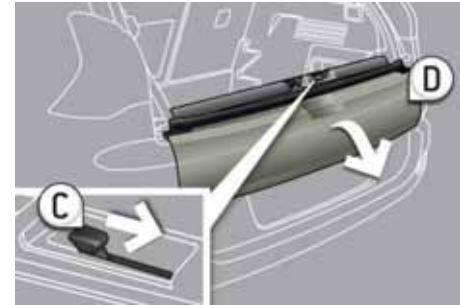

Opening

- Push the handle **C** to the right and tilt the tailgate **D**.



Closing

- Raise the tailgate **D**, push it fully to close it, check that it is locked correctly.



INTERIOR

Electric parking brake

This combines the functions of **auto-matic application** on switching off the engine and **automatic release** on acceleration.

Manual application/release is possible.



Head-up display

This system projects certain information into the field of vision of the driver: speed, cruise control/speed limiter and Distance alert.




Audio and communication systems

These systems benefit from the latest technology: MP3 compatible Peugeot Connect Sound, Peugeot Connect USB, Bluetooth, Peugeot Connect Navigation or Peugeot Connect Media with 16/9 retractable colour screen, JBL audio system, auxiliary sockets.


Dual-zone digital air conditioning

This systems allows different levels of comfort to be set for the driver and front passenger. It then controls these level automatically according to the ambient conditions.




Peugeot Connect Media  203

Peugeot Connect Navigation  243


Peugeot Connect Sound  273

Peugeot Connect USB  224, 280

Bluetooth  229, 261, 283


PEUGEOT Assistance  201

INSTRUMENTS AND CONTROLS

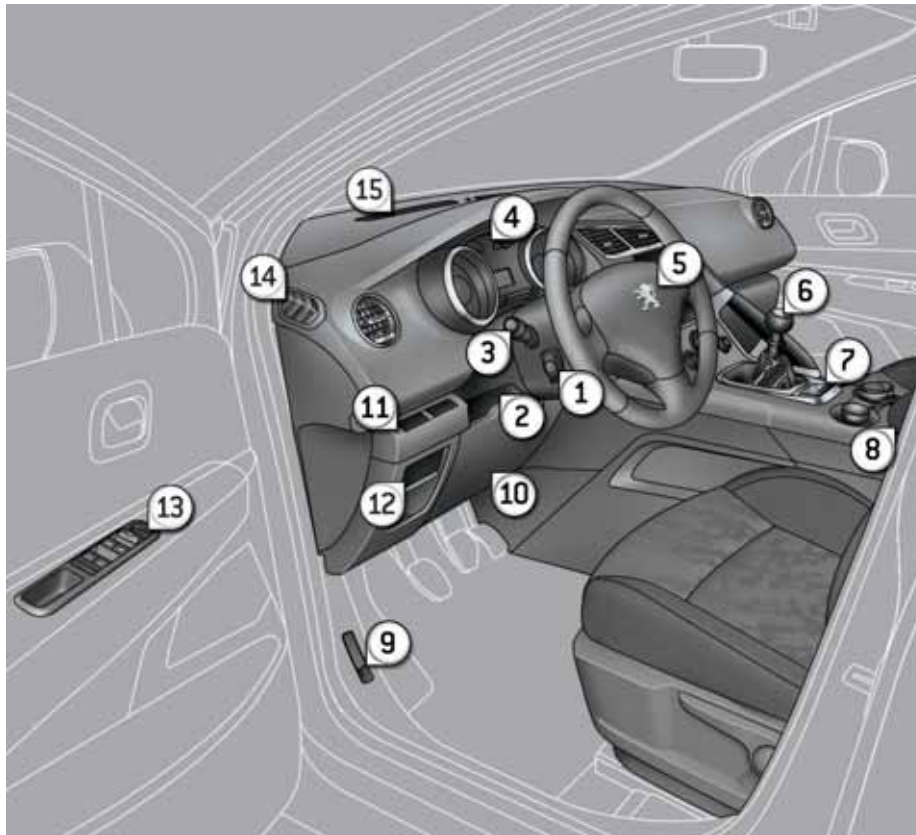

1. Cruise control/speed limiter switches.
2. Steering wheel adjustment control.
3. Lighting and direction indicator control stalk.
4. Instrument panel.
5. Driver's airbag.
Horn.
6. Gear lever.
7. Electric parking brake.
8. Front armrest - Peugeot Connect USB and/or auxiliary socket.
9. Bonnet release.
10. Driver's storage compartment (Handbook).
11. Alarm button.
Parking sensors button.
Dynamic stability control button (ESP/ASR).
12. Manual headlamp adjustment.
Instrument panel navigator associated with the Peugeot Connect Media.
13. Door mirror controls.
Electric window controls.
Child lock.
14. Front side window demisting vent.
15. Windscreen demisting vent.

INSTRUMENTS AND CONTROLS

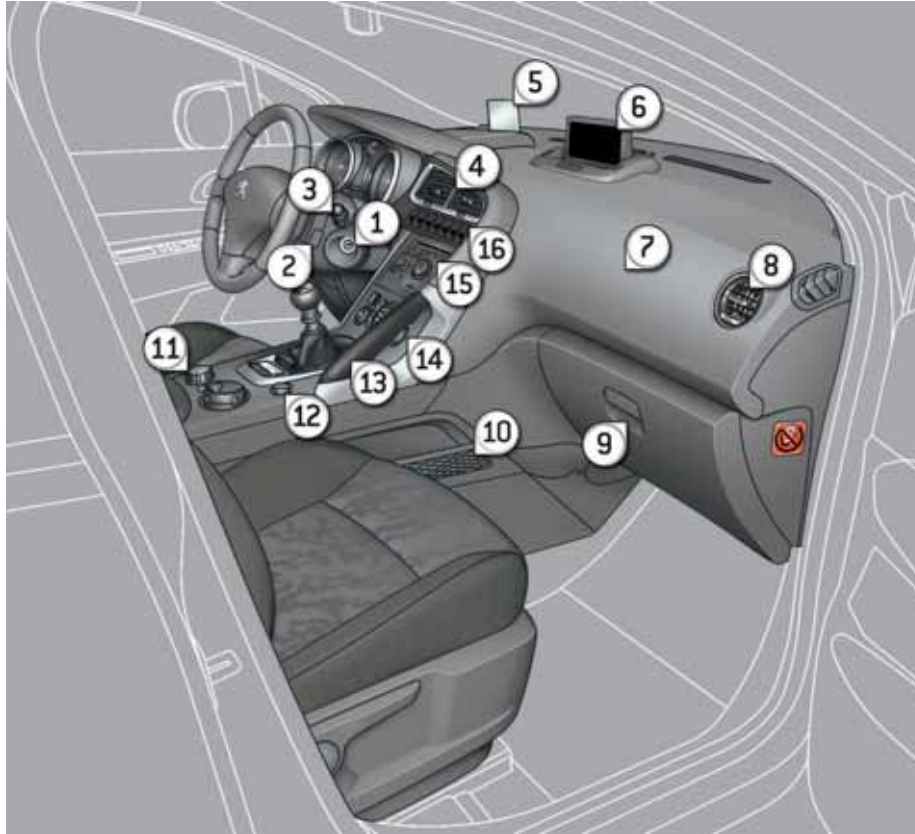

1. Steering lock and ignition.
2. Audio and telematics system steering mounted control.
3. Wipers/wash-wipe/trip computer control stalk.
4. Central adjustable air vents.
5. Head-up display.
6. Multifunction screen.
7. Passenger's airbag.
8. Side adjustable air vent.
9. Glove box - Audio/video sockets - Passenger's airbag deactivation.
10. Storage compartment with net.
11. Grip control switch.
12. 12 V accessories socket.
13. Grab handle.
14. Heating/air conditioning controls.
15. Audio and telematics system.
16. Buttons:
 - head-up display,
 - hazard warning lamps,
 - Distance alert,
 - central locking.

SITTING COMFORTABLY

Driver's seat

Forwards-backwards




Height



Seat back angle



Manual adjustment

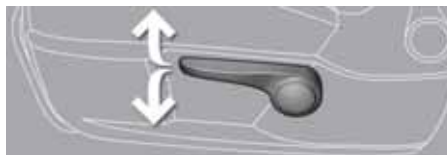

Electric adjustment




SITTING COMFORTABLY

Front seats


Head restraint height and angle



Lumbar

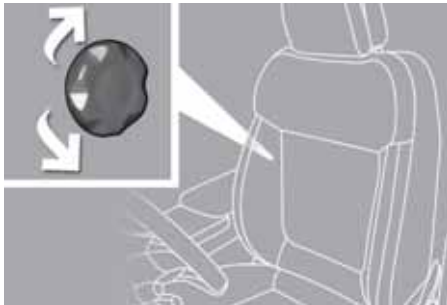

Steering wheel adjustment

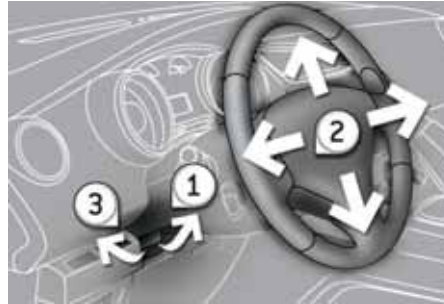


1. Unlock the control.
2. Adjust for height and reach.
3. Lock the control.

As a safety precaution, these operations must only be carried out when stationary.



Table position (front passenger seat)

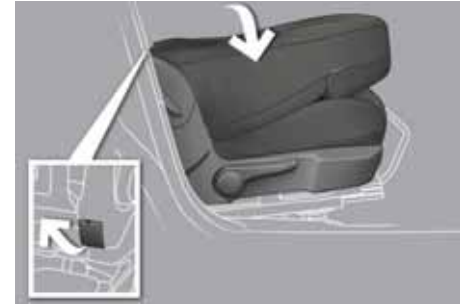

To place objects on the table or to make the loading of long objects in the vehicle easier.



Front armrest




This incorporates the Peugeot Connect USB and/or a JACK auxiliary socket.



SITTING COMFORTABLY

Door mirrors

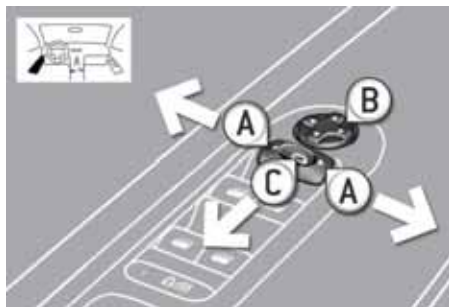


Adjustment

- A. Selection of the mirror to be adjusted.
- B. Adjustment of the position of the mirror in the four directions.




Also...
C. Folding/Unfolding.

Rear view mirror

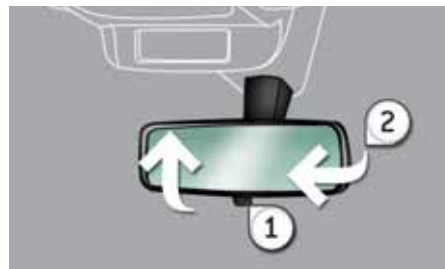

Manual model

1. Selection of the "day" position of the mirror.
2. Adjustment of the mirror.

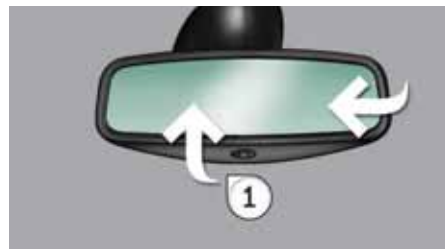

Automatic day/night model


1. Adjustment of the mirror.



Front seat belts



1. Fastening of the buckle.

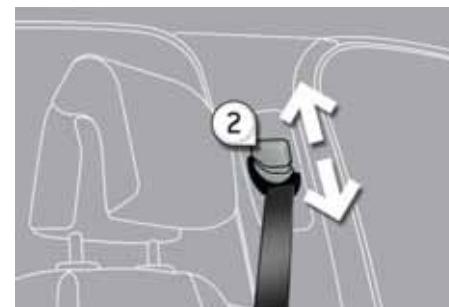


2. Height adjustment.



SEEING CLEARLY

Lighting

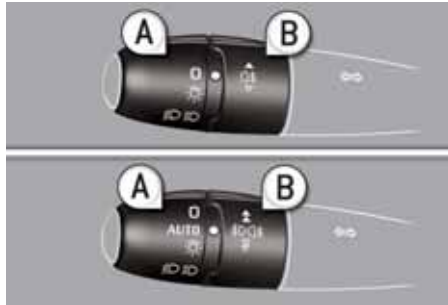

Ring A

- Lighting off.
- AUTO** Automatic illumination of headlamps.
- Sidelamps.
- Dipped/main beam headlamps.

Ring B

- Rear foglamp.

or

- Front and rear foglamps.

87

Direction indicators



Raise or lower the lighting stalk passing the point of resistance; the corresponding direction indicators will flash for as long as the stalk remains in this position.


"Motorway" function

Press the lighting stalk up or down once, without passing the point of resistance; the corresponding direction indicators will flash three times.

This function can be used at any speed, but it is particularly useful when changing lane on high-speed roads.

118

Wipers

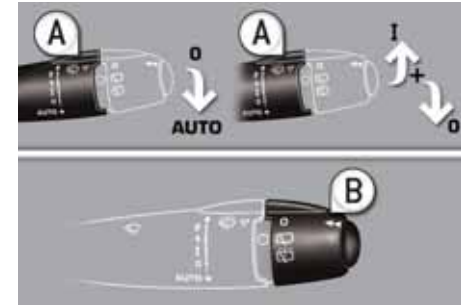

Stalk A: windscreen wipers

Switching on "AUTO"

- Press the stalk down and release it.

Switching off "AUTO"

- Push the stalk up and return it to position "0".

91














Ring B: rear wiper

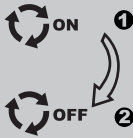- Park.
- Intermittent wipe.
- Wash-wipe.

 92

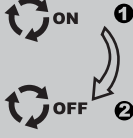VENTILATION


Recommended interior settings

I require...	Heating or Manual Air Conditioning				
	Air distribution	Air flow	Air recirculation/ Intake of outside air	Temperature	Manual A/C
HOT					
COLD					ON
DEMISTING DEFROSTING					ON

Digital air conditioning: we recommend use of the fully automatic mode by pressing the "AUTO" button.

MONITORING

Instrument panel

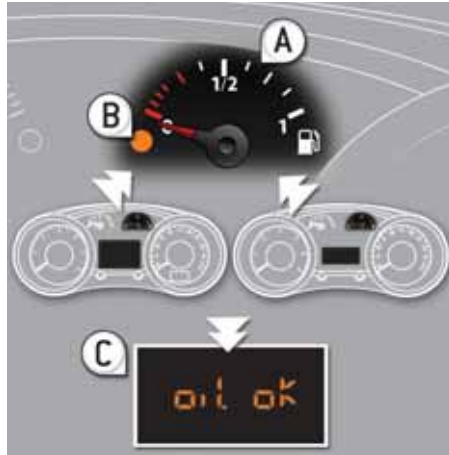

- With the ignition on, the needle should indicate the level of fuel remaining.
- With the engine running, its associated low level warning light should switch off.
- With the ignition on, the oil level indicator should display "OIL OK" for a few seconds.

If the levels are not correct, top up the levels which are low.



24

Warning lamps



- With the ignition on, the orange and red warning lamps come on.
 - With the engine running, these warning lamps should switch off.
- If warning lamps remain on, refer to the page concerned.




26





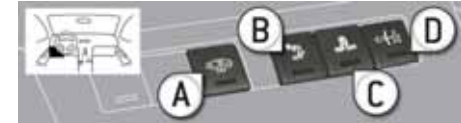

Switch panels

Lower







Lighting of the indicator lamp indicates the status of the corresponding function.

- | | | |
|--|---|---------|
| A. Interior volumetric protection alarm. |  | 76 |
| B. Visual and audible parking sensors. |  | 155 |
| C. ESP OFF (without Grip control). |  | 120 |
| D. Child lock |  | 79, 117 |

Central



- | | | |
|--------------------------|---|-----|
| E. Head-up display. |  | 139 |
| F. Hazard warning lamps. |  | 118 |
| G. Distance alert. |  | 141 |
| H. Central locking. |  | 72 |

PASSENGER SAFETY


Passenger's front airbag



1. Insert the key.
2. Select the position:
"OFF" (deactivation), with "rear facing" child seat,
"ON" (activation), with front passenger or "forwards facing" child seat.
3. Remove the key keeping the switch in the new position.



Seat belts and passenger's front airbag

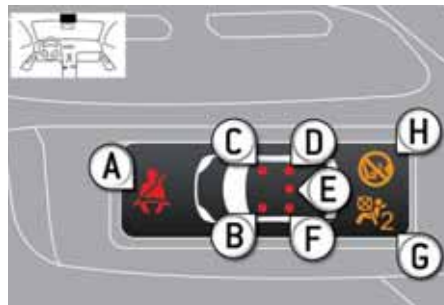

- A. Front and/or rear seat belts not fastened/unfastened warning lamp.
- B. Front left seat belt warning lamp.
- C. Front right seat belt warning lamp.
- D. Rear right seat belt warning lamp.
- E. Rear centre seat belt warning lamp.
- F. Rear left seat belt warning lamp.
- G. Passenger's front airbag deactivated warning lamp.
- H. Passenger's front airbag activated warning lamp.



Child lock (locking of the rear doors)




Lighting of the indicator lamp indicates the status of the corresponding function.




ARRANGE YOUR BOOT


3 position adjustable boot

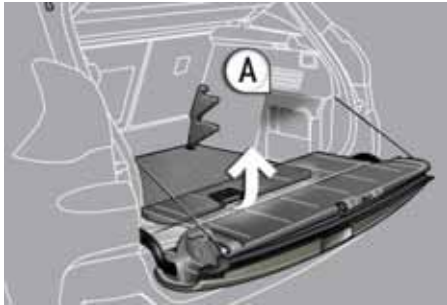

Low position (150 kg max).

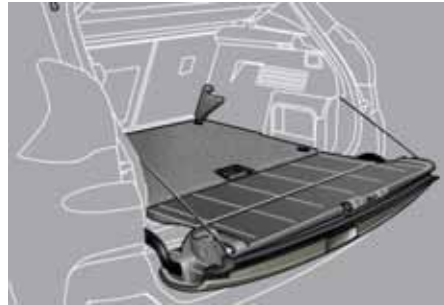

Intermediate position (100 kg max).

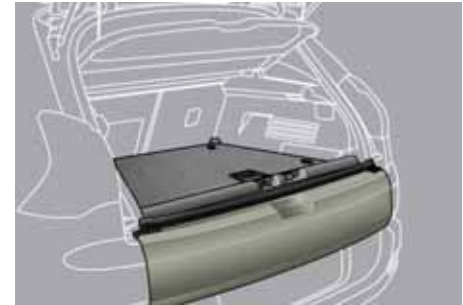

High position (50 kg max) with the lower tailgate closed to isolate the lower part of the boot.



- ☞ To release the floor, push slightly forwards then raise.
- ☞ Use the stops **A**, placed on each side of the boot to change the height of the floor more easily.



From the high position, place the floor in this position (at an angle), two stops support it to allow access underneath it or to the spare wheel.



ARRANGE YOUR BOOT

Rear seats



- ☞ Place the movable floor in the **intermediate position**.
- ☞ Check that nothing is preventing the seat backs from folding (front seats sufficiently advanced, head restraints, seat belts, ...).
- ☞ Check also that no object on or under the seat could hinder its movement.



- ☞ Pull the control of the 1/3 section, from the boot.



- ☞ Pull the control of the 2/3 section, from the boot.

The seats are aligned with the movable floor and the lower tailgate.



DRIVING SAFELY

Electric parking brake



Manual application/release

The parking brake can be **applied manually** by **pulling** the control **A**.

When the ignition is on, the parking brake can be **released** manually by **pressing the brake pedal** and **pulling** then **releasing** the control **A**.



Before getting out of the vehicle, check that the braking warning lamp (red !) and the warning lamp **P** on the control **A**, are on (not flashing).



If you get out of your vehicle with the engine running, apply the parking brake manually.



Automatic application/release

Press the accelerator and release the clutch, the parking brake is released automatically and progressively on acceleration.

When the **engine is switched off**, the parking brake is **applied** automatically.



If this warning lamp is lit on the instrument panel, the automatic application/release are **deactivated**.



Before getting out of the vehicle, check that the braking warning lamp (red !) and the warning lamp **P** on the control **A** are on (not flashing).



Do not leave a child alone in the vehicle with the ignition on; they could release the parking brake.

Hill start assist



Your vehicle is equipped with a system which keeps it immobile for a short time (approximately 2 seconds) to assist you when starting on a hill, the time required for you to move your foot from the brake pedal to the accelerator pedal.

This function is only active:


- when the vehicle has been immobilised completely with your foot on the brake pedal,
- on certain gradients,
- when the driver's door is closed.




Do not get out of the vehicle during the hill start assist temporary hold phase.

DRIVING SAFELY


Head-up display

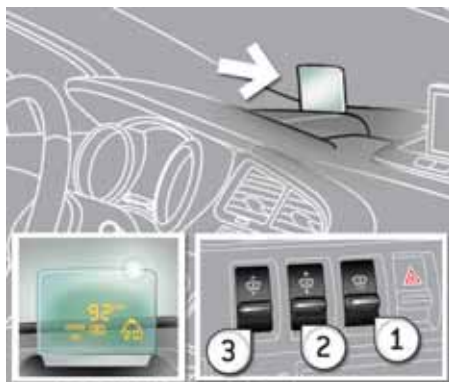

1. Head-up display on/off.
2. Brightness adjustment.
3. Display height adjustment.

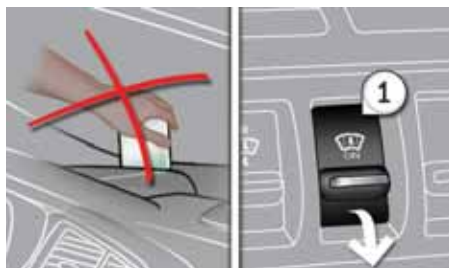

Distance alert

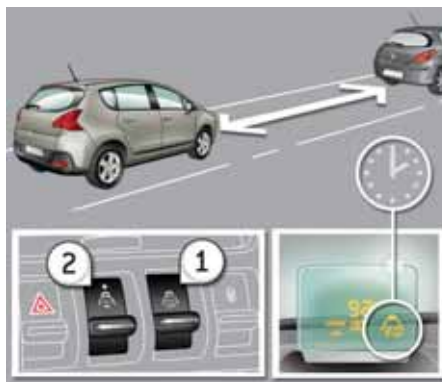

1. Distance alert on /off.
2. Alert value increase/decrease.



The adjustments must be made with the engine running and the vehicle stationary.

Grip control



ESP (normal mode).



Snow.



All terrain.




Sand.



ESP OFF.

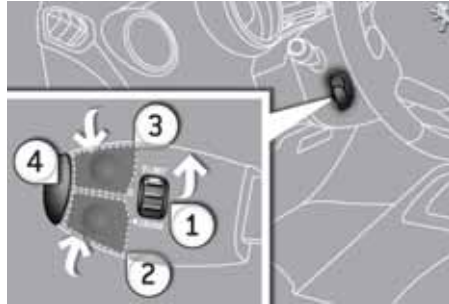

DRIVING SAFELY**Speed limiter "LIMIT"**


1. Limiter mode Selection/Off.
2. Decreasing the programmed value.
3. Increasing the programmed value.
4. Speed limiter On/Off.



The values must be set with the engine running.



143

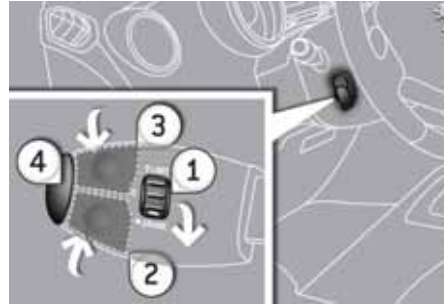Cruise control "CRUISE"

1. Cruise control mode Selection/Off.
2. Programming a speed/Decreasing the programmed value.
3. Programming a speed/Increasing the programmed value.
4. Cruise control Off/Resume.



In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least fourth gear engaged on the manual gearbox (second gear for the 6-speed electronic gear control gearbox or automatic gearbox).



145

Display on the instrument panel


The cruise control or speed limiter mode appears on the instrument panel when it is selected.

**Cruise control****Speed limiter**

DRIVING SAFELY

6-speed electronic gear control gearbox

This 6-speed gearbox offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

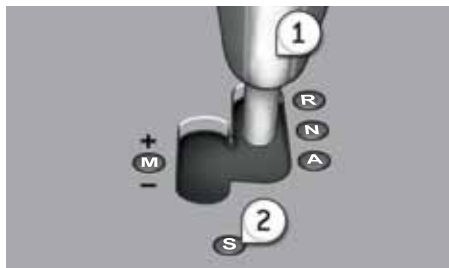

1. Gear lever.
2. Button "S" (sport).



3. Steering mounted "-" paddle.
4. Steering mounted "+" paddle.

Moving off

- ☞ Select position **N** and press the brake pedal firmly while starting the engine.
- ☞ Engage first gear (position **A** or **M**) or reverse (position **R**) using the gear lever **1**.
- ☞ Take your foot off the brake pedal then accelerate.

"Tiptronic - Porsche system" gearbox



This six-speed gearbox offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

1. Gear lever.
2. Button "S" (sport).
3. Button "M" (snow).

Moving off

- ☞ Select position **P** or **N** and press the brake pedal firmly while starting the engine.
- ☞ Select position **R**, **D** or **M**.
- ☞ Take your foot off the brake pedal, then accelerate.