



Handbook

Partner Tepee






PRESENTATION

This handbook is designed to familiarise you with the new vehicle from the moment you get behind the wheel and to describe the operating features.

Reading the handbook is made easy by a content consisting of 10 identified chapters which can be located by means of a colour code specific to each one. Its sections cover, by theme, all of the functions of the vehicle in its most complete specification.

Chapter 8 indicates all of the technical data relating to your vehicle. At the end of the document, diagrams of the outside and inside of the vehicle will assist you in locating equipment or functions and page numbers refer you to the relevant section of the handbook.

Within the chapters symbols draw your attention to specific information:

-  directs you to the chapter and section which contains detailed information concerning a function,
-  indicates important information relating to use of the equipment,
-  alerts you to the safety of individuals and equipment on board.

PEUGEOT COMMUNICATION PUTS AN INTERNET SITE AT YOUR DISPOSAL



The technical data, equipment and accessories may change during the year. To obtain this new data, refer to the "Latest Information" section on the SERVICE BOX Internet site free of charge.

<http://public.servicebox.peugeot.com>, select:

- your model,
- the body type: saloon, CC, SW, estate, van...
- the period corresponding to the date of first registration,
- the "Latest Information" section.



Exterior

Key - Remote control

Complete unlocking of the vehicle.
Complete locking of the vehicle.



2a ▶ 17

Sliding side door

Pull the handle towards you then towards the rear and open the door guiding the rearward sliding until the point of resistance has been passed.




2b ▶ 21



Key

 : chapter identification

 : page identification

Opening the bonnet


Take care when working under the bonnet.

Raise the bonnet slightly by reaching in a flat hand, palm down, to make access to the lever easier. Engage the base of the strut in the hole provided to hold the bonnet open.

High pressure washing of the engine compartment is prohibited, to guarantee correct operation of the vehicle.



6a ▶ 126

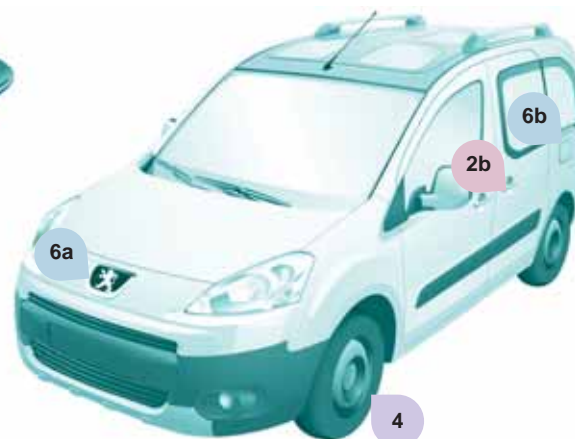

"Grip Control"

The anti-slip "GRIP CONTROL" Electronic Stability Programme (ESP) System improves traction on snow, mud and sand.

4 ▶ 104

Fuel filler flap open



A mechanical system prevents opening of the left-hand side door when the fuel filler flap is open.

6b ▶ 133

Side-hinged rear doors

Asymmetrical (2/3 - 1/3).



This lock makes it possible to keep the large door closed and drive with the small door open.



This control permits opening to approximately 180°.

2c ▶ 23

Rear roof flap

The rear roof flap is only compatible with side hinged doors.




2d ▶ 25

Tailgate and rear screen

Use the strap to close the rear tailgate.
Close by pressing firmly without slowing the travel of the tailgate.

2e ▶ 22

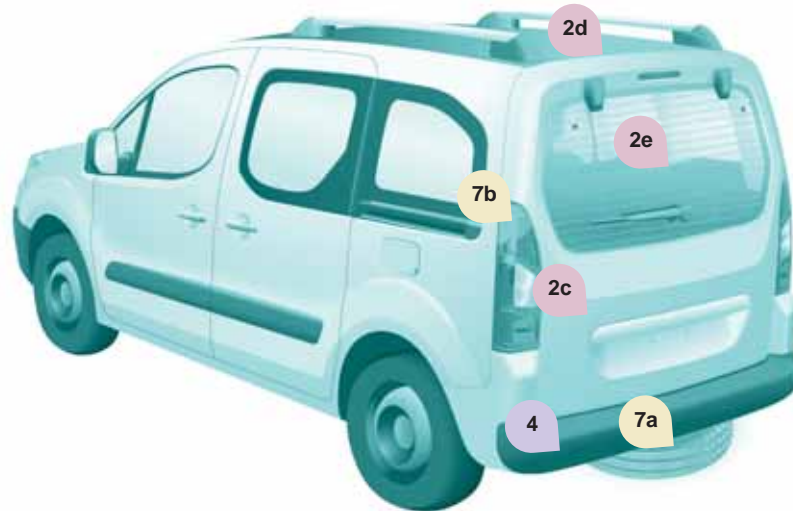

Spare wheel and repair kit

7a ▶ 136, 137

Parking assistance

4 ▶ 100

Changing bulbs

7b ▶ 142



INSTRUMENTS AND CONTROLS

1. Lighting and direction indicators stalk.
2. Instrument panel with display.
3. Wipers, screenwash, trip computer controls.
4. Ignition.
5. Audio equipment.
6. Driver's airbag, horn.
7. Steering wheel height and reach adjustment.
8. Cruise control, speed limiter switch.
9. Control panel, parking assistance, headlamp beam adjustment, ESP.
10. Bonnet release.
11. Electric exterior mirror adjustment.



CENTRE CONSOLE

1. Gear lever.
2. Control panel: electric windows.
3. Control panel: hazard warning lamps, central locking.
4. Cigar lighter.
5. Heating-ventilation controls.
6. Storage compartment.
7. Audio equipment.
8. Screen.

9. Grip Control. 4 ▶ 104

10. Emergency call. 4 ▶ 106



SIT COMFORTABLY

10



Driver's seat



1. Forwards-backwards adjustment.



2. Angle.



3. Seat cushion height.



4. Head restraint height and angle.


3 ▶ 59



Steering wheel

Adjust the height and reach of the steering wheel.

2 ▶ 39

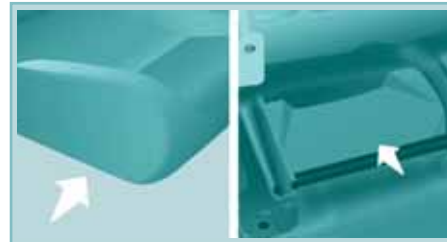

Storage compartments

The tools are stored under the right-hand seat.

3 ▶ 78



Seat belts

Height adjustment.
Fastening.

4 ▶ 107



Mirrors



Manual adjustments.
Electric adjustments.



3 ▶ 96

SEE CLEARLY



Lighting stalk

-  Lighting off.
-  Sidelamps.

-  Main beam headlamps (blue).
-  Dipped headlamps (green).

AUTO AUTO, automatic lighting.


Motorway function: press the stalk up or down to flash the direction indicator three times.

3 ▶ 42



Wiper stalk

- 2 fast.
- 1 normal.
- I intermittent.
- 0 park.
- ↓ single wipe.

 AUTO, press the stalk down. Reactivate if the ignition has been off for more than one minute.

3 ▶ 45

Special position for the front wipers

For one minute after switching off the ignition, any action on the wiper stalk places the wiper arms and blades vertically alongside the screen pillars.

3 ▶ 46, 151



Changing bulbs

In bad weather or in winter, ensure that the lamps are not covered with mud or snow.

7 ▶ 142

Interior

DRIVE SAFELY

12



Cruise control

The vehicle speed must be higher than 25 mph (40 km/h) with at least 4th gear engaged.


3 ▶ 47



Hill start assist

From the time you release the brake pedal, the vehicle is held for approximately 2 seconds without need to use the parking brake, to allow you to set off.

2 ▶ 41

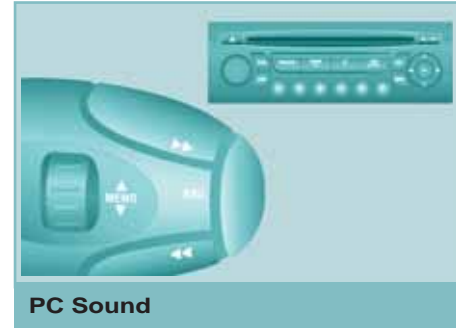

PC Sound

9



Speed limiter

The minimum speed which can be programmed is 20 mph (30 km/h).

3 ▶ 50



USB Player - Plug

9

Emergency or roadside assistance call



This in-car system allows you to send an emergency or roadside assistance call to the dedicated PEUGEOT centres.

2 ▶ 106

PASSENGER COMPARTMENT SPACE



Front fittings

3 ▶ 76



Zenith roof, Scented air freshener

The multifunction roof console extends the overhead storage compartment.

The fragrance is diffused in the passenger compartment from the vents of the roof console.

3 ▶ 80, 82



Central storage console

Clipped between row 1 and row 2, this offers an additional storage area and 2 cup holders.

3 ▶ 77



Armrest

If the vehicle is fitted with the additional console and an armrest, to fold the passenger seat to the table position remove the console or the armrest.

3 ▶ 60


REAR FITTINGS

14



Rear seats, 5 seat version

3 ▶ 64

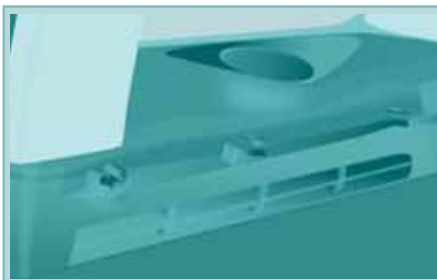

Load space cover, 5 seat version

3 ▶ 88



Interior rack

3 ▶ 94



Rear seats, 7 seat version

3 ▶ 67



Load space cover, 7 seat version

3 ▶ 92

Maximum loads

Overhead storage compartment: 5 kg.

Zenith roof:

- central storage compartments: 6 kg,
- box: 10 kg,
- roof bars placed longitudinally or transversely: 35 kg.

Transverse roof bars: 75 kg.

Interior rack: 10 kg per bar.

CHILD SAFETY



Side door child lock

5 ▶ 120



Child monitoring mirror

3 ▶ 97




Child seats

5 ▶ 114



Safety anti-pinch

3 ▶ 98

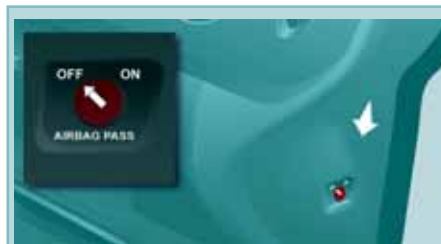

Airbag deactivation

5 ▶ 113

Interior

VENTILATION

16



Heating

3 ▶ 53



Air conditioning

3 ▶ 53



Automatic air conditioning

3 ▶ 55

Recommended settings for the Manual Air Conditioning

For optimum use of the system, we recommend:

If I require...	Air distribution	Temperature	Air flow	Air recirculation	AC
Heating					-
Cooling					A/C
Demisting Defrosting					3 ▶ 57

With Automatic Air Conditioning, operation in AUTO mode is recommended irrespective of the requirement.



Remember to switch the system off when the ambient air suits your requirements.