




**>> OWNER'S MANUAL
QUICK REFERENCE GUIDE**



The Power to Surprise


Interior Overview

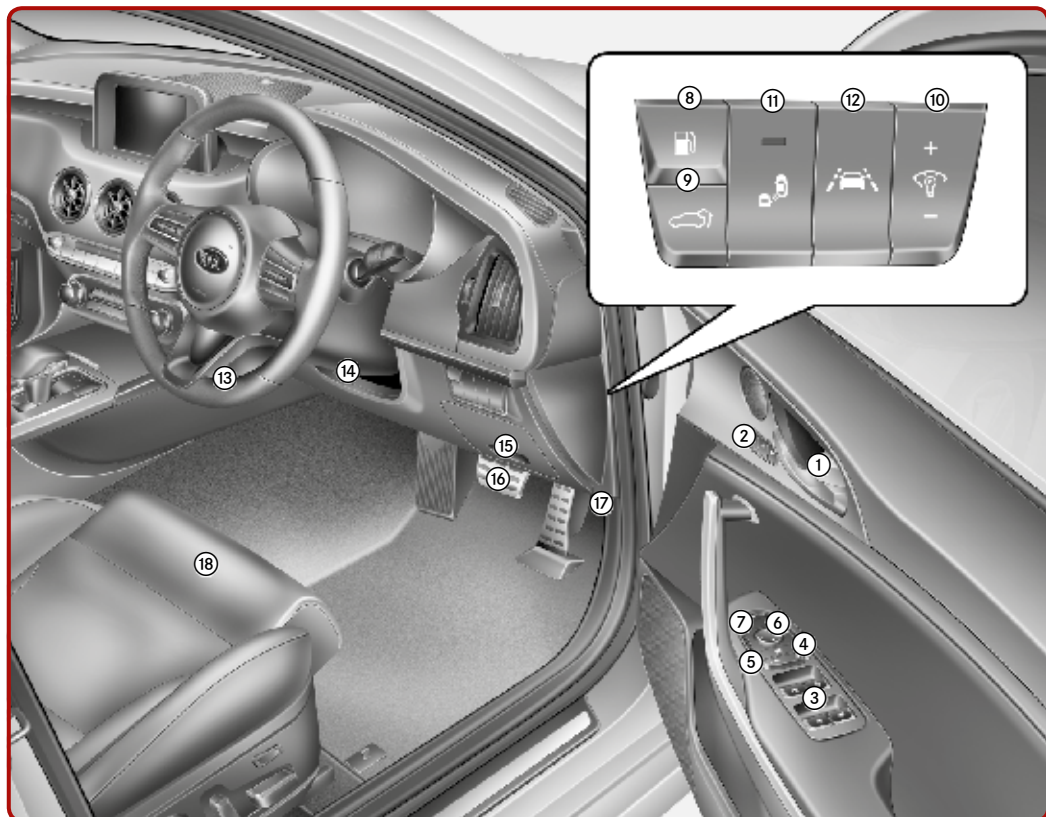

- | | | |
|--|--|---|
| ① Inside door handle [4] | ⑦ Outside rearview mirror folding switch [4] | ⑫ LKAS ON/OFF button* [5] |
| ② Driver position memory system* [3] | ⑧ Fuel filler lid release button [4] | ⑬ Steering wheel [4] |
| ③ Power window switches [4] | ⑨ Power tailgate release button [4] | ⑭ Tilt and telescopic steering column control lever [4] |
| ④ Central door lock switch [4] | ⑩ Instrument panel illumination control [4] | ⑮ Interior fuse box [7] |
| ⑤ Power window lock button [4] | ⑪ BCW ON/OFF button* [5] | ⑯ Brake pedal [5] |
| ⑥ Outside rearview mirror control switch [4] | | ⑰ Bonnet release lever [4] |
| | | ⑱ Seat [3] |

* if equipped


[#] Number in brackets indicates chapter in Owner's Manual.
The illustrations in this guide may vary from the actual vehicle.

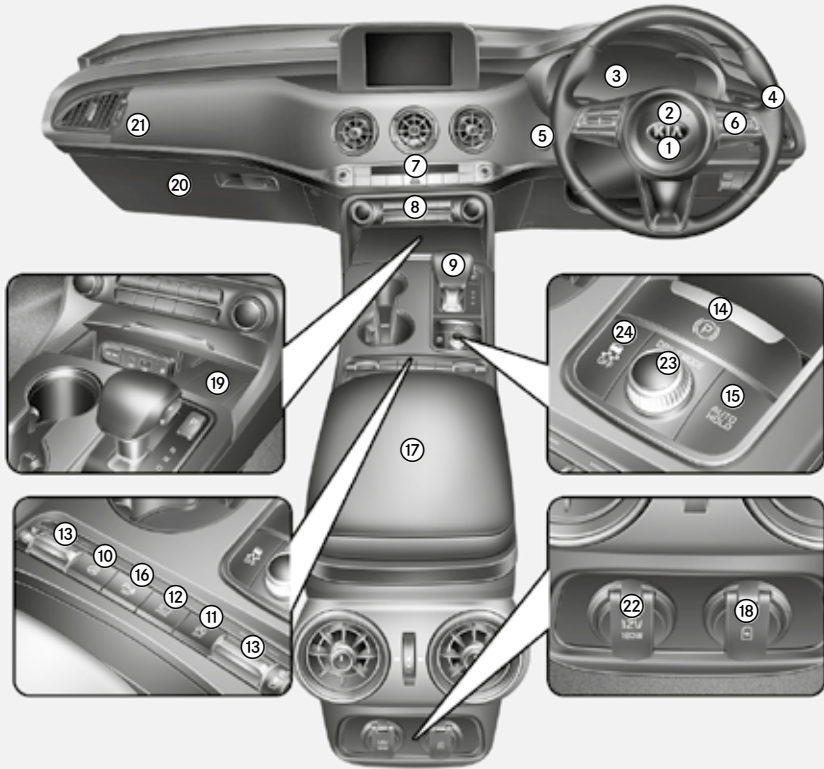

- ① Driver's front air bag [3]
- ② Horn [4]
- ③ Instrument cluster [4]
- ④ Wiper and washer control lever [4]
- ⑤ ENGINE START/STOP button [5]
- ⑥ Cruise control/Speed limiter control buttons* [5]
- ⑦ Hazard warning light [6]
- ⑧ Climate control system [4]
- ⑨ Shift lever [5]
- ⑩ Heated steering wheel button* [4]
- ⑪ Idle Stop and Go (ISG) OFF button* [5]
- ⑫ Surround view monitoring system ON/OFF button* [4]
- ⑬ Seat warmer/cooler button* [4]
- ⑭ Electronic parking brake (EPB) switch* [5]
- ⑮ Auto Hold ON/OFF button* [5]
- ⑯ Parking assist system ON/OFF button [4]
- ⑰ Center console storage box [4]
- ⑱ USB charger* [4]
- ⑲ Smart phone wireless charger* [4]
- ⑳ Glove box [4]
- ㉑ Passenger's front air bag [4]
- ㉒ Power outlet* [4]
- ㉓ Drive mode integrated control system [5]
- ㉔ ESC OFF button [5]


Instrument Cluster / Engine Compartment

Instrument cluster [4]

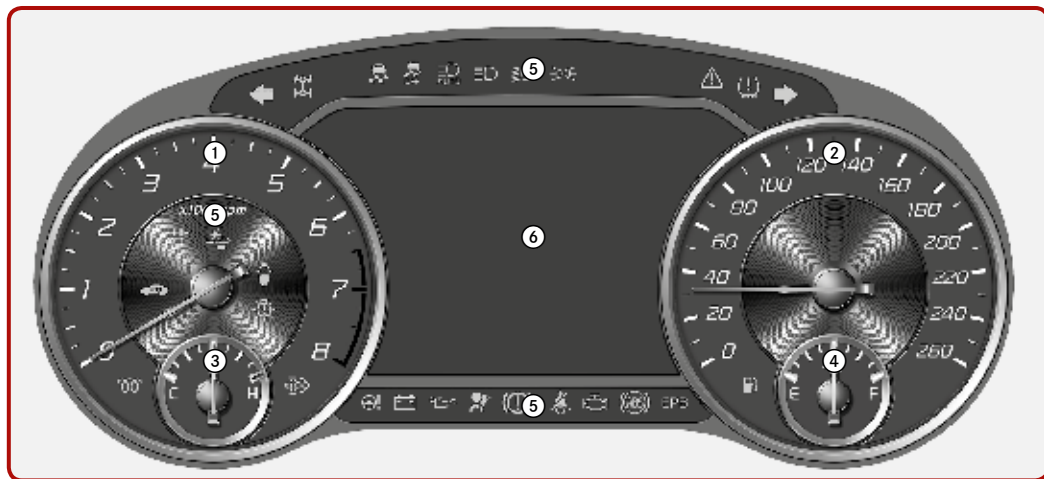

- ① Tachometer
- ② Speedometer
- ③ Engine coolant temperature gauge
- ④ Fuel gauge
- ⑤ Warning and indicator lights
- ⑥ LCD display


Engine compartment [2]

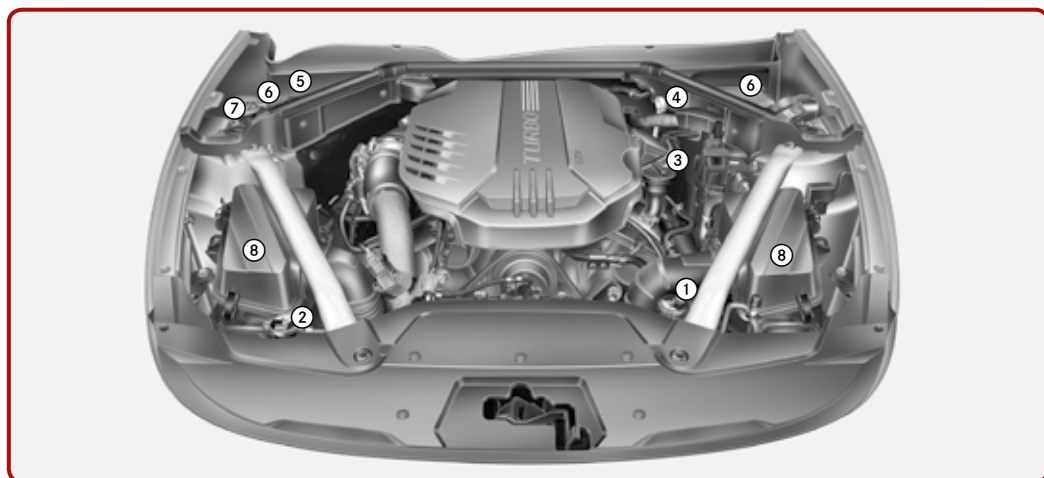


- ① Engine coolant reservoir [8]
- ② Radiator cap [8]
- ③ Engine oil filler cap [8]
- ④ Engine oil dipstick [8]
- ⑤ Brake fluid reservoir [8]
- ⑥ Engine room fuse box [8]
- ⑦ Windscreen washer fluid reservoir [8]
- ⑧ Air cleaner [8]

Note: The battery is in the luggage room.

Automatic climate control system* [4]

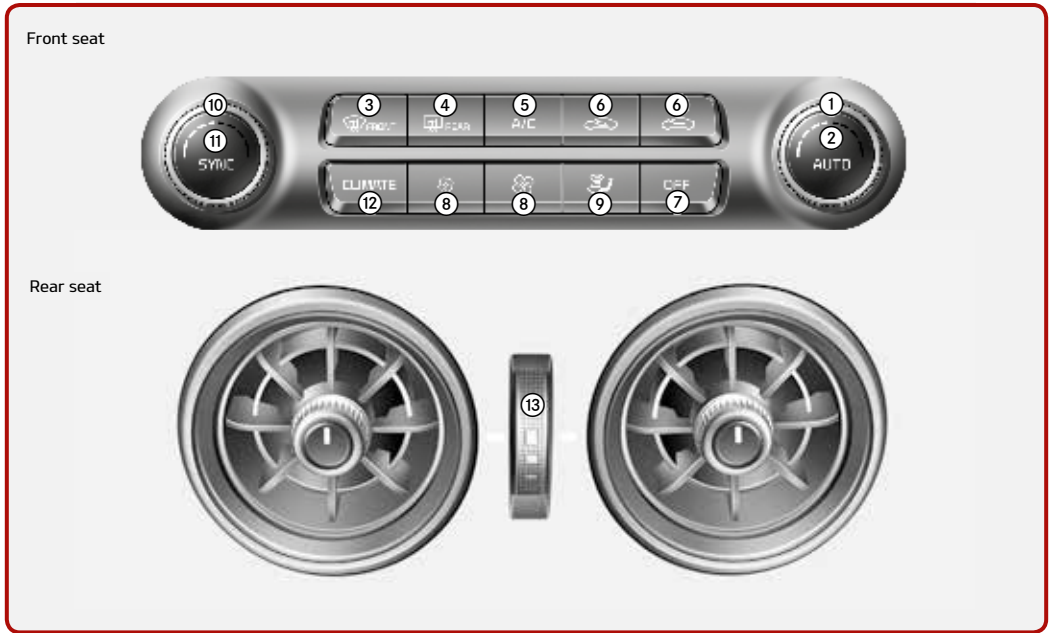

- | | | |
|--------------------------------|-----------------------------------|--------------------------------------|
| ① Driver's temperature control | ⑥ Air intake control | ⑪ SYNC temperature control selection |
| ② AUTO (automatic control) | ⑦ OFF | ⑫ Climate control display |
| ③ Front windscreen defroster | ⑧ Fan speed control | ⑬ Rear temperature control |
| ④ Rear window defroster | ⑨ Mode selection | |
| ⑤ Air conditioning* | ⑩ Passenger's temperature control | |

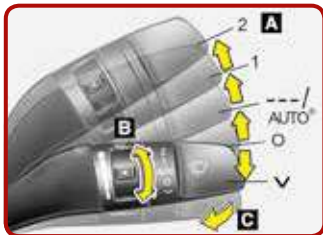

Wipers and Washers [4]
Type B

A: Wiper speed control

- | | |
|-------|------------------------|
| 2 | High wiper speed |
| 1 | Low wiper speed |
| --- | Intermittent wipe |
| AUTO* | Automatic control wipe |
| 0 | Off |
| ✓ | Single wipe |

B: Intermittent wipe time adjustment


C: Wash with brief wipes (front)*

Lighting Control / Steering Wheel / Cruise Control System



Lighting control [4]

- ① OFF
- ② Auto light/DBL position*
- ③ Position light
- ④ Headlight

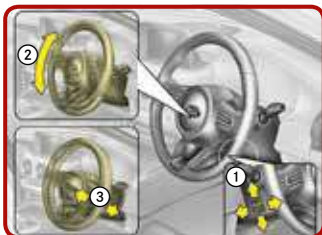

Tilt & telescopic steering
Electric type* [4]


Steering wheel adjustment:

- ① Adjust steering wheel angle and position with the switch in the appropriate direction
- ② Adjust the steering wheel to the desired angle
- ③ Height adjustment



Heated steering wheel* [4]

When the ignition switch is in the ON position, press the button shown to switch on the heated steering wheel. The indicator on the button will illuminate. To turn off the heating function, press the button once again.

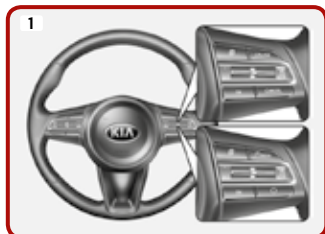

Cruise control system* [5]

ON-OFF button (CRUISE/⏻) to activate cruise control system



Set cruise control speed by moving the lever down to SET -



To increase cruise control set speed




To decrease cruise control set speed



Cancel cruise control set speed by pressing the cancel button (CANCEL/O)




Resume cruising speed by moving the lever up to RES +

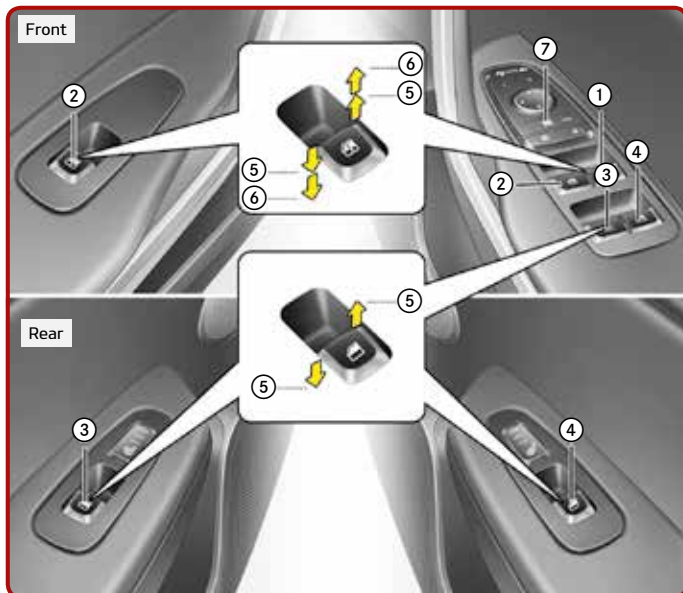

- ① Driver's door power window switch
- ② Front passenger's door power window switch
- ③ Rear door (left) power window switch
- ④ Rear door (right) power window switch
- ⑤ Window opening and closing
- ⑥ Automatic power window up*/down*
- ⑦ Power window lock button*

Note: In cold and wet climates, power windows may not work properly due to freezing conditions.

Windows [4]

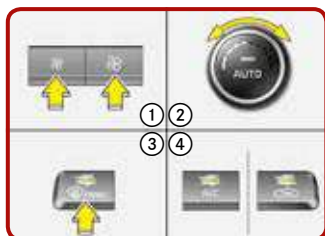

Windscreen defrosting and defogging [4]

To defog inside windscreen:

- ① Set the fan speed to the desired position.
- ② Select desired temperature.
- ③ Press the defroster button.
- ④ The air conditioning will turn on according to the detected ambient temperature and outside (fresh) air position will be selected automatically.



To defrost outside windscreen:


- ① Set the fan speed to the highest position.
- ② Set the temperature to the extreme hot (HI) position.
- ③ Press the defroster button.
- ④ The air conditioning will turn on according to the detected ambient temperature and outside (fresh) air position will be selected automatically.



Auto defogging system* [4]

Auto defogging reduces the possibility of fogging up the inside of the windscreen by automatically sensing the moisture of inside the windscreen.

Seat / Air Bag / Child Restraint System

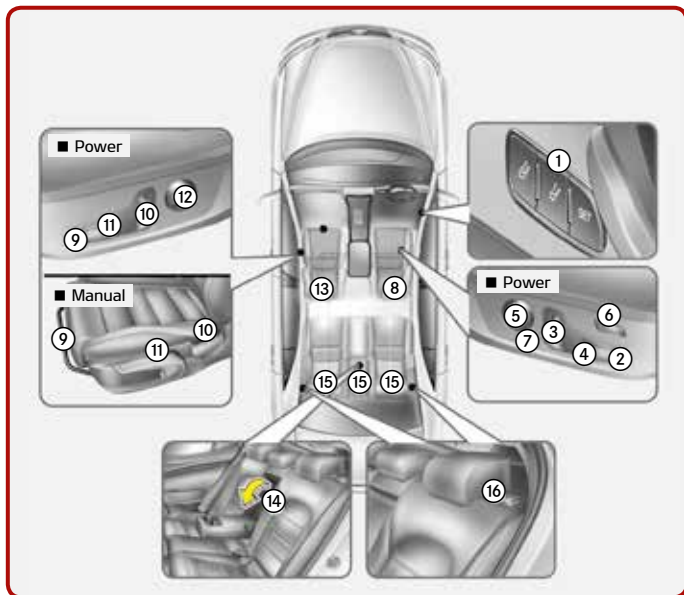

Seats [3]

Driver's seat

- ① Driver position memory system*
- ② Forward and backward
- ③ Seatback angle
- ④ Seat cushion height
- ⑤ Lumbar support
- ⑥ Cushion extension*
- ⑦ Seat back bolster control*
- ⑧ Headrest

Front passenger's seat


- ⑨ Forward and backward
- ⑩ Seatback angle
- ⑪ Seat cushion height
- ⑫ Lumbar support*
- ⑬ Headrest

Rear seat


- ⑭ Armrest
- ⑮ Headrest
- ⑯ Seatback folding lever*




Passenger's front air bag ON/OFF switch [3]

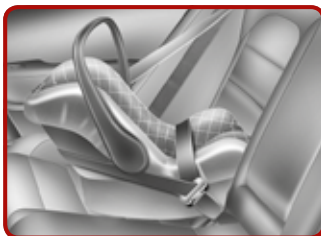


Rearward-facing child restraint system [3]

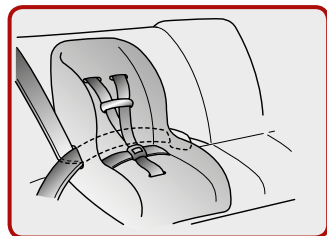

Installing a child restraint system by lap/shoulder belt [3]

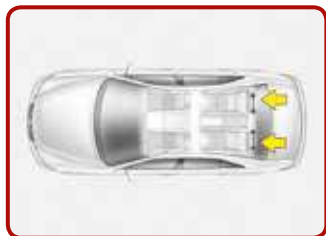


Securing with "ISOFIX" system and "Tether Anchorage" system [3]

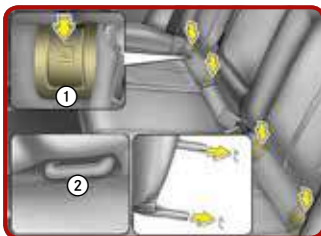

- ① ISOFIX Anchor Position Indicator
- ② ISOFIX Anchor



Securing with "Tether Anchorage" system [3]

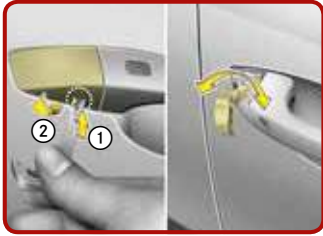

Operating door locks manually [4]

- ① Lock
- ② Unlock



Central door lock switch [4]

- ① Lock
- ② Unlock



Child-protector rear door lock [4]



Opening the tailgate [4]



Closing the tailgate [4]




Emergency tailgate safety release [4]



Opening the fuel filler lid [4]

Push the fuel filler lid release button.

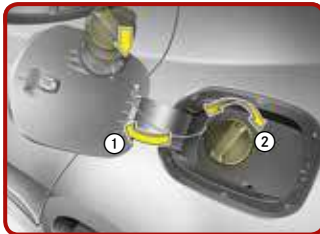

- ① Fully open the lid
- ② Turn cap counterclockwise to open

Closing the fuel filler

- > Turn cap clockwise until it "clicks" to ensure it is securely closed.
- > Close the lid and press the edge until it is securely locked.



Opening the bonnet [4]

Pull the release lever to unlatch the bonnet



- ① Lift the bonnet slightly
- ② Push the secondary latch inside and lift the bonnet

Closing the bonnet

- > Before closing the bonnet, check if all filler caps are correctly installed and any other combustible material must be removed from the engine compartment.
- > Lower the bonnet halfway and push down to securely lock in place.

Towing / Spare Tyre, Jack And Tools / Tyre Mobility Kit



Towing [6]

When towing the vehicle in an emergency without wheel dollies:

1. Set the ignition switch in the ACC position.
2. Place the transaxle shift lever in N (Neutral).
3. Release the parking brake.


Emergency towing

If towing is necessary, it is recommended to have it done by an authorised Kia dealer or a commercial tow truck service.

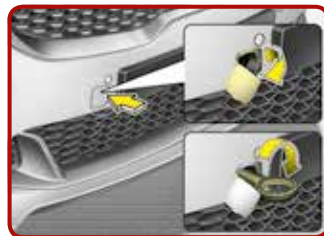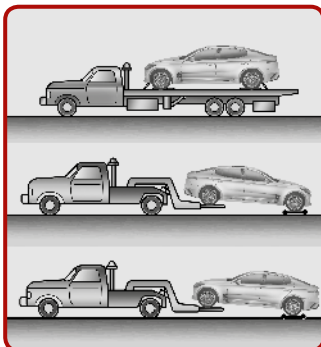

Removable towing hook [6]

1. Open the tailgate and remove the towing hook from the tool case.
2. Remove the hole cover by pressing the lower part of the cover on the bumper.
3. Install the towing hook by turning it clockwise until it is fully secured.
4. Remove the towing hook and install the cover after use.

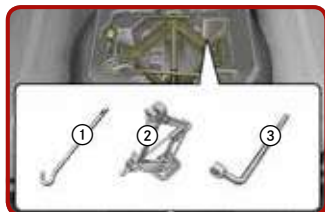

Spare tyre, jack and tools* [6]

The shown tools are stored in the luggage compartment. Pull up the luggage box cover to reach this equipment.

- ① Jack handle
- ② Jack
- ③ Wheel lug nut wrench



Tyre Mobility Kit* [6]

Please read the instructions before using the Tyre Mobility Kit.

- ① Compressor
- ② Sealant bottle




With the Tyre Mobility Kit you stay mobile even after experiencing a tyre puncture. After you ensure that the tyre is properly sealed you can drive cautiously on the tyre (up to 200 km (120 miles)) at a max. speed of 80 km/h (50 mph) in order to reach a vehicle or tyre dealer to have the tyre replaced.



Checking the engine oil level [7]

Warm up the engine to operating temperature and switch off. On level ground pull the dipstick out and wipe clean before re inserting it fully. Pull the dipstick out again and check the level. The level should be between F and L.

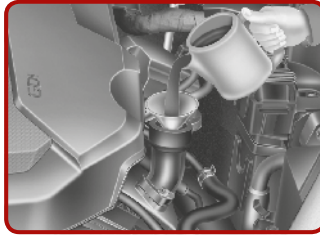

Refilling engine oil [7]

Only refill with the specified engine oil [9], using a funnel to avoid spillage on engine components.



Checking the washer fluid level [7].



Adding the urea solution* [7]



Urea solution level gauge* [7]

Low urea solution warning message* [7]

When "Refill Urea tank or vehicle will not start" message is displayed with SCR warning lamp (⚠️), the vehicle can't be restarted once the engine is turned off. For the above cases, full replenishment is always recommended.

Note: 2.2 CRDi derivatives of the Stinger require a urea solution (also known as DEF (Diesel Exhaust Fluid)) for emission control that is added to a separate tank. The filler for the urea tank is located behind the fuel flap next to the diesel fuel filler.

If the Urea level is not regularly checked and topped up this may cause the vehicle not to start.

Additional Info*

Idle Stop & Go (ISG)

When enabled, ISG automatically stops the car's engine to reduce fuel consumption and emissions. The ISG function may not work if the car's battery charge status, ambient temperature and/or engine temperature is too low. Air conditioning/heater control settings may also affect ISG function.

Hill-Start Assist Control (HAC)

This is designed to assist with hill starts by preventing the car rolling backwards when driving off. The system maintains the braking pressure in certain circumstances for 2 seconds enabling to pull away when you are ready.

Parking brake (EPB)

When engaging the parking brake, apply the brake pedal first and keep it depressed. Then ensure the electric parking brake is properly applied by lifting up the EPB switch and make sure the warning light comes on.

We strongly recommend that when leaving the car both the transmission P (Park) mode and Electric Parking Brake (EPB) are applied.

Bluetooth®

Many of our cars have Bluetooth® connectivity to enable the driver to safely enjoy the convenience of the mobile phone. For Bluetooth® compatibility please visit the owners section on our website.

Starting your vehicle with the parking brake applied:

Make sure the automatic transaxle is in the P (Park) position and the brake pedal fully depressed before starting the vehicle.

Additional Info*

Kia Service App

The Kia Service App – now available for free on iPhone/iPad and Android. With the Kia Service App, you have (almost) all Kia dealers in Europe within reach*. Looking for a showroom or just a service, the app displays all dealers around your current location on the map. With one click you can call a dealer, visit their website or get directions to the showroom.

(* In selected markets only)



Kia Service App



Kia Service App



For full details and instructions on any item contained in this quick reference guide, please read the owner's manual.



The Kia 7 year warranty 7-year/100,000 mile new car warranty. Valid in all EU member states (plus Norway, Switzerland, Iceland and Gibraltar), subject to local terms and conditions.

Copyright © 2018 Kia Motors Europe GmbH, all rights reserved.
18.000574 – QRG CK – ENG-UK RHD



The Power to Surprise