

## FIAT OBDII DTC

- P1001 CAN line
- P1003 Ext. influence on quantity
- P1101 Barometer pressure
- P1101 Pressure loss in the boost circuit
- P1105 Altitude sensor
- P1106 Boost pressure sensor
- P1107 Spirl solenoid
- P1108 Electric fan - assembly 1
- P1109 Electric fan - assembly 2
- P1110 A/C control break off
- P1110 Signal disconnection A/C
- P1112 Control fuel pressure
- P1118 Diesel pressure control
- P1121 Throttle position potentiometer 1 [signal implausible]
- P1121 Throttle potentiometer track 1
- P1122 Throttle position sensor [signal implausible]
- P1122 Throttle potentiometer track 2
- P1132 Fuel rail pressure
- P1132 Sensor of catalyst temperature
- P1133 Lambda 1 signal above catal.(deviated)
- P1133 Oxygen sensor B1-S1
- P1135 In position 3 piston
- P1135 Oxygen sensor B1-S2
- P1135 Preheating resistance 1 above catal.
- P1138 Diesel pressure circuit
- P1141 Worheiwid. 1 below
- P1153 Lambda 2 signal above catal.(deviated)
- P1155 Preheating resistance 2 above catal.
- P1169 Voltage condition 1
- P1170 Mixture ratio [Minimum lean fuel]
- P1170 Voltage condition 2
- P1171 Self adaptive parameter DTV
- P1171 Test break off, cylinder regulating
- P1171 Test interruption Testing One
- P1172 Mixture 1 stength (multiplicative)
- P1172 Self adaptive parameter TRA
- P1173 Mixture 1 stength (additive)
- P1173 Ratio mixture 1
- P1173 Self adaptive parameter FRA
- P1175 Mixture 2 stength (multiplicative)
- P1176 Mixture 2 stength (additive)
- P1177 Mixture 1 stength (multiplicative)

- P1178 Mixture 2 strength (multiplicative)  
P1220 Throttle position [signal implausible]  
P1221 Accelerator potent. track 1  
P1221 Line driven potentiometer 1 [signal implausible]  
P1222 Accelerator potent. track 2  
P1222 Line driven potentiometer 2 [signal implausible]  
P1226 Accelerator pedal movement  
P1300 Relais pre/after heating  
P1300 Tonrad [run] takeover  
P1300 Tooth wheel [Accomplish]  
P1301 Classification injector  
P1314 Vertical acc.  
P1320 Synchronise Pulse/RPM  
P1320 Timing/revs synchronisation  
P1325 Circuit detonation value  
P1325 Detonate sensor [signal implausible]  
P1325 Knock measuring circuit  
P1325 Knock test regulating circuit [open or short to earth]  
P1326 Knock control  
P1336 Torque control(request)  
P1337 Torque control(comparision)  
P1402 Flap  
P1402 Ventol EGR throttle valve  
P1403 Additional heating  
P1403 Auxiliary heater  
P1404 Circuit TL4226  
P1408 Coolant heating circuit  
P1408 Heater from heat circuit  
P1421 Catalytic converter 1 temperature  
P1425 Catalytic converter 2 temperature  
P1429 Pressure sensor discharging  
P1435 Additve addition system  
P1446 Additive  
P1448 Particle filter (FAP)  
P1451 Intake air heater control  
P1458 Water valve  
P1481 Fan control  
P1504 Input key  
P1511 Battery voltage below sensing  
P1511 Battery voltage low  
P1511 Idle speed regulation potentiometer  
P1512 Driver minute block  
P1513 Idle speed regulator  
P1514 MIL [signal implausible]

- P1519 Cooler control unit  
P1521 Contact voltage supply  
P1529 Clutch switch  
P1531 A/C compressor relay  
P1531 Climate control [open circuit]  
P1536 ESP system  
P1555 Brake/Accelerate signal implausible  
P1565 Cruise control level line  
P1565 Lever cruise control Line  
P1601 Cruise control switch off  
P1602 A/D converter  
P1602 Battery voltage  
P1602 Voltage circuit  
P1602 Voltage regulator  
P1603 Control Unit Power Supply  
P1604 Main relay  
P1606 Diagnostic lamp  
P1606 MIL  
P1608 Coolant temperature warning lamp  
P1608 Engine coolant temperature indicator  
P1612 Fuel filter heater relay  
P1613 Fuel contain water  
P1613 Remote coding  
P1614 Battery voltage sensor  
P1614 Supply voltage sensor  
P1620 Error in ECU gas [Error]  
P1653 Camshaft position (phase) regulation  
P1653 Phase variator  
P1654 Control module malfunction  
P1654 Modular manifold  
P1655 Control module malfunction  
P1664 Repeat throttle angle [over max. value]  
P1671 Diesel pressure regulation  
P1671 Fuel rail pressure regulator  
P1672 Control module memory  
P1673 Voltage condition 1  
P1674 Voltage condition 2  
P1680 Motorised throttle(spring)  
P1681 Motorised throttle(spring)  
P1682 Motorised throttle  
P1683 Motorised throttle(recovery)  
P1684 Motorised throttle(plausibility)  
P1685 Motorised throttle(without learn)  
P1686 Motorised throttle(1st idle learn)

- P1686 TP adjustment self adaptive [signal implausible]
- P1687 Motorised throttle(stop learn)
- P1687 Throttle driven [signal implausible]
- P1688 Motorised throttle(2nd idle learn)
- P1689 Motorised throttle(self-compensation)
- P1690 Safety cut-off
- P1691 Secure breakdown
- P1702 Connector lamp from A/T
- P1703 Engine shut-down from aut. gearbox
- P1703 Manual position switch
- P1704 Auto transmission
- P1704 Secondary pressure sensor
- P1705 Auto transmission RPM Regulation
- P1705 Connection with ABS
- P1705 Control revs A/T
- P1705 Reg. revs A/T
- P1706 Throttle signal
- P1707 Pulley check
- P1708 Secondary pressure check
- P1709 Clutch check
- P1710 Brake Switch
- P1711 Key lock solenoid
- P1712 Lever Release solenoid
- P1713 Neutral Signal to engine ECU
- P1722 Idle Increase Signal to Engine ECU