

FIAT DUCATO FAULT CODES

P0016 Timing/RPM Synchronisation
P0053 Lambda Sensor Resistance
P0089 Fuel Pressure (Regulator at High Pressure Pump Inlet)
P0090 Fuel Pressure (Regulator at High Pressure Pump Inlet)
P0091 Fuel Pressure (Regulator at High Pressure Pump Inlet)
P0092 Fuel Pressure (Regulator at High Pressure Pump Inlet)
P0093 Fuel Pressure (Regulator at High Pressure Pump Inlet)
P0094 Fuel Pressure (Regulator at High Pressure Pump Inlet)
P0095 Air Temperature Sensor (Inside Turbo)
P0100 Air Flow Meter Signal
P0102 Air Flow Meter Adapt Offset Presetting
P0103 Air Flow Meter Adapt Offset
P0104 Air Flow Meter Adapt Offset (Engine Idling)
P0105 Air Flow Meter Adapt Offset (Engine under Loading)
P010F Air Mass/Air Flow Meter Mismatch
P0110 Air Flow Meter Air Temperature Signal
P0111 Air Flow Meter Air Temperature Signal
P0115 Water Temperature Sensor
P0116 Water Temperature Sensor
P011A Water Temperature Sensor
P0120 Accelerator Pedal Sensor 1
P0122 Accelerator Pedal Connector
P0130 Lambda Sensor Electrical Diagnosis
P0135 Lambda Sensor Electrical Diagnosis
P0168 Limit for High Fuel Temperature
P0180 Fuel Temperature Sensor
P0190 Fuel High Pressure Sensor
P0191 Fuel Pressure Signal
P0201 Cylinder 1 Injector
P0202 Cylinder 2 Injector
P0203 Cylinder 3 Injector
P0204 Cylinder 4 Injector
P0216 Injection Time
P0219 High Engine RPM
P0220 Accelerator Pedal 2
P0230 Fuel Pump Relay Command
P0234 Turbocharging Pressure
P0235 Turbocharging Pressure Sensor
P0262 Cylinder 1 Injector
P0265 Cylinder 2 Injector
P0268 Cylinder 3 Injector
P0271 Cylinder 4 Injector
P0335 Engine RPM Sensor
P0336 RPM Sensor (Phonic Wheel)
P0340 Timing Sensor
P0380 Preheating Unit Command
P0401 EGR Valve
P0402 EGR Valve
P0403 EGR Valve
P0480 Cooling Fan Command 1 or PWM

P0481 Cooling Fan Command 2
P0482 Cooling Fan Command 3
P0500 Vehicle Speed Signal (CAN)
P0504 Brake Switch
P0520 Oil Pressure Switch
P0530 Air Conditioner Pressure Sensor
P0560 Battery Voltage
P0564 Cruise Control (Irreversible Cut-off)
P0579 Cruise Control Cut-in Commands
P0601 ECU Faulty (EEPROM)
P0606 ECU Faulty (Microprocessor)
P060A Monitoring Interrupted During Initialisation
P060B Adc Control
P0611 Injection Control
P061B ECU Calibration
P061C Shut-off Control
P062D ECU Faulty (Injector Control)
P062E ECU Faulty (Injector Control)
P0638 Throttle Valve Command
P0641 Sensor Power Supply 1
P0645 AC Relay Command
P0651 Sensor Power Supply 2
P0683 Preheating Control Unit (Feedback)
P0685 Main Relay
P0697 Sensor Power Supply 3
P0700 Request to Turn on MIL from AT
P0704 Clutch Switch
P0748 Fuel Pressure Regulator (at High Pressure Pump Inlet)

P1131 Upstream Lambda 1 Signal (Plausibility)
P1132 Upstream Lambda 1 Signal (Plausibility)
P1140 Lambda Sensor
P1205 Particulate Filter
P1206 Particulate Filter
P1218 ECU Faulty (HW Recovery)
P1219 Regeneration Time too Long
P1301 Injector Registration
P1303 Speed Limitation
P1304 Speed Limitation
P1605 ECU Faulty (HW CY310)
P1606 ECU Faulty (Communication)
P1607 Lambda Sensor Control Circuit
P1611 Lambda Sensor Control Circuit
P1618 ECU Faulty (HW CY940)
P1619 ECU Faulty (HW CY940)
P1623 ECU Faulty (BUS Com)

P2084 Temperature Sensor at Particulate Filter Inlet
P2085 Temperature Sensor at Particulate Filter Inlet
P2135 Accelerator Pedal Power (Plausibility)
P2146 Group 1 Injector Command
P2148 Group 1 Injector Command
P2149 Group 2 Injector Command
P2151 Group 2 Injector Command

P2226 Atmospheric Pressure Sensor
P2231 Lambda Sensor Resistance
P2243 Lambda Sensor Electrical Diagnosis
P2264 Water in Fuel Filter Sensor
P2299 Accelerator/Brake Plausibility
P2452 Differential Pressure Sensor
P2453 Differential Pressure Sensor Signal
P2455 Differential Pressure Sensor
P2505 Key Input
P250A Engine Oil Level Sensor
P2626 Lambda Sensor Electrical Diagnosis
P2A00 Lambda Sensor

U1601 C-CAN Line Error
U1700 CAN Network (NCM - NBC)
U1706 CAN Network (NCM - NFR)
U1711 CAN Network (NCM - NCA)