

# OWNER'S HANDBOOK



CITROËN DISPATCH

<https://www.automotive-manuals.net/>



# MyCITROËN

## On-line owner's handbook

You can find your handbook on the CITROËN website, under "MyCITROËN".

This personal and customisable space allows you to establish direct and special contact with CITROËN.

Referring to the owner's handbook on-line also gives you access to the latest information available, easily identified by the bookmark, associated with this symbol:



Select:

- > The Vehicle documentation link in the home page (no registration is needed),
- > the language,
- > the vehicle, its body style,
- > the print edition of your handbook appropriate for the date of registration of your vehicle.

You have access to your handbook on line, together with the latest information, identified by the symbol:

<https://www.automotive-manuals.net/>



If the "MyCITROËN" function is not available on the CITROËN public website for your country, you can find your handbook at the following address:

<http://service.citroen.com/ddb/>

We draw your attention to the following...

The "Familiarisation" section at the start of this document is intended as a quick way of getting to know your vehicle. Reading the detailed sections is essential to make the most of your vehicle, in complete safety.

Your vehicle is fitted with only some of the equipment described in this document, depending on the trim level, version and the specifications for the country in which it is sold.

The fitting of electrical equipment or accessories which are not recommended by CITROËN may result in a failure of your vehicle's electronic system. Please note this specific warning and contact a CITROËN dealer to be shown the recommended equipment and accessories.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a CITROËN dealer is able to provide.

CITROËN has a presence on every continent,  
a complete product range,  
bringing together technology and a permanent spirit of innovation,  
for a modern and creative approach to mobility.

We thank you and congratulate you on your choice.

At the wheel of your new vehicle,  
getting to know each system,  
each control, each setting,  
makes your trips, your journeys  
more comfortable and more enjoyable.

Happy motoring!

1. FAMILIARISATION		2. READY TO GO		3. EASE OF USE and COMFORT		4. SAFETY	
4-19		20-45		46-84		85-104	
Presentation	4	Remote control	20	Controls for lighting	46	Parking brake	85
Exterior	6	Key	21	wipers	49	Hazard warning lamps	85
Sitting comfortably	11	Alarm	22	Cruise control	51	Parking sensors	86
Seeing clearly	13	Doors	24	Fixed speed limiter	53	Horn	87
Driving safely	14	Instrument panel	27	Speed limiter	54	Anti-lock braking system (ABS)	87
Cab fittings	15	Adjusting the time	28	Heating / air conditioning, manual	57	Emergency braking assistance	87
Load space	16	Warning lamps	29	digital	59	ASR and DSC	88
Ventilation	17	Fuel gauge	35	Demisting and defrosting	63	"Grip control"	89
Eco-driving	18	Coolant	35	Additional heating	65	Seat belts	91
		Tyre under-inflation detection	36	Seats	68	Airbags	94
		Service indicator	38	2-seat front bench	70	Lateral airbags	96
		Lighting dimmer	39	Cab fittings	72	Front airbags	97
		5-speed manual gearbox	40	Courtesy lamps	75	Child seats	98
		6-speed manual gearbox	40	Toll cards/car park tickets	75	Deactivating the passenger's front airbag	99
		Automatic gearbox	41	Crew cab	76	Recommended seats	102
		Gear efficiency indicator	44	Load space fittings	77		
		Steering wheel adjustment	45	Rear suspension	79		
		Starting and stopping	45	Mirrors	82		
				Electric windows	84		

<b>5. ACCESSORIES</b>	
<b>105-108</b>	
Towing a trailer	105
Other accessories	107
Trade range	108

<b>6. CHECKS</b>	
<b>109-119</b>	
Opening the bonnet	109
Diesel engines	110
Petrol engine	111
Levels	112
Checks	114
Fuel	117
Fuel cut-off	118
Diesel priming pump	118

<b>7. QUICK HELP</b>	
<b>120-143</b>	
Battery	120
Puncture repair kit	122
Changing a wheel	124
Removable snow screen	128
Snow chains	129
Changing	
a bulb	130
a fuse	135
a wiper blade	140
Towing the vehicle	141

<b>8. TECHNICAL DATA</b>	
<b>144-152</b>	
Dimensions	144
Weights	150
Identification markings	152

<b>9. TECHNOLOGY on BOARD</b>	
Emergency or assistance	9.1
eMyWay	9.3
Audio system	9.63
<p>The "Technology on board" section presents the new audio/navigation systems.</p>	

<b>10. VISUAL SEARCH</b>	
<b>153-160</b>	
Exterior	153
Instruments and controls	154
Interior	156
Technical data - Maintenance	157
<p>The "Visual search" section assists you in finding the controls and functions and their associated page numbers on the schematic outlines of the vehicle (visual index).</p>	




## PRESENTATION


This handbook has been designed to familiarise you with your new vehicle from the moment you get behind the wheel and to describe the operating features.

Reading the handbook is made easy with the content consisting of 10 identified chapters, which can be located by means of a colour code specific to each one. Its sections cover, by subject, all of the functions of the vehicle in its most complete specification.


Chapter 8 gives all of the technical data relating to your vehicle. At the end of the document, diagrams of the outside and inside of the vehicle will assist you in locating equipment or functions and page numbers refer you to the relevant section of the handbook.

Within the chapters, symbols draw your attention to specific information:

-  directs you to the chapter and section which contains detailed information concerning a function,
-  indicates important information relating to use of the equipment,
-  alerts you to the safety of individuals and equipment on board.

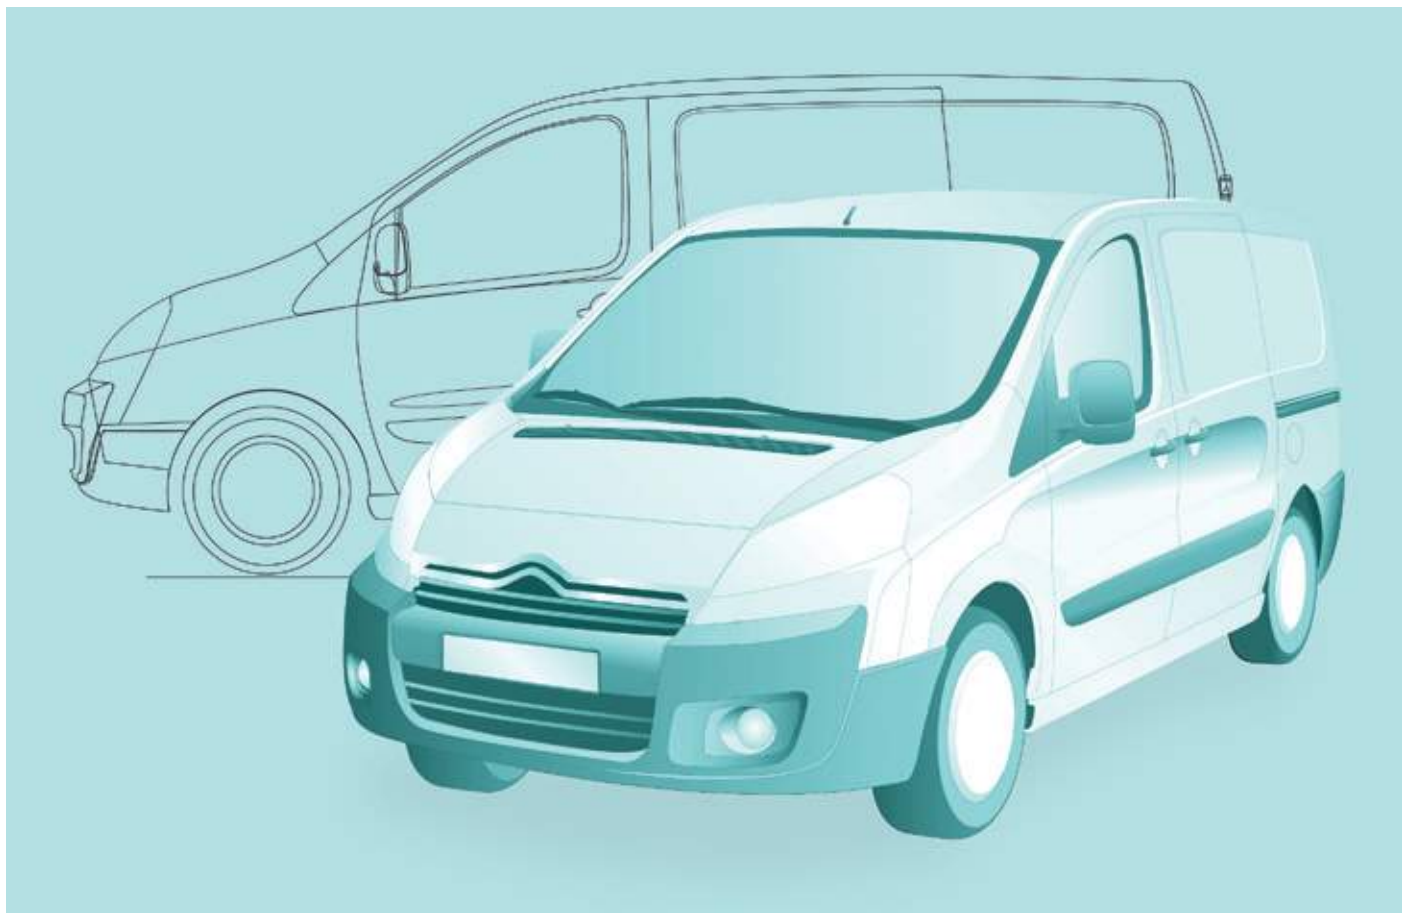

<https://www.automotive-manuals.net/>

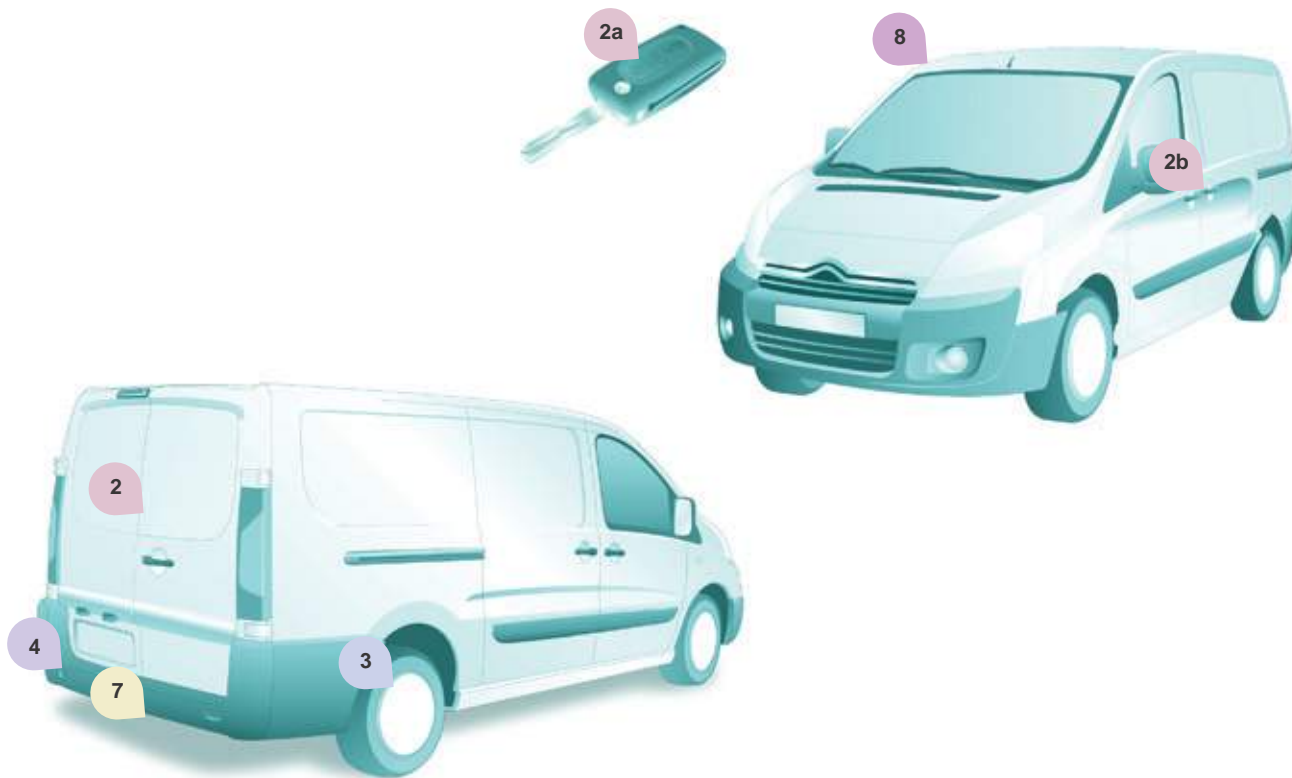



## Side-hinged rear doors

2 ▶ 26

## Rear suspension

3 ▶ 79

## Changing a wheel

7 ▶ 124

## Key - Remote control

2a ▶ 20

## Parking sensors

4 ▶ 86

## Usable dimensions

8 ▶ 144



## Sliding side door

2b ▶ 25


## Repairing a wheel

7 ▶ 122

## Key


-  : section identification
-  : page identification

<https://www.automotive-manuals.net/>

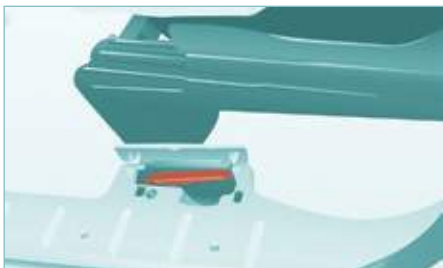

### Opening the bonnet

Lift the cover located at the foot of the left-hand seat and pull the release lever upwards.

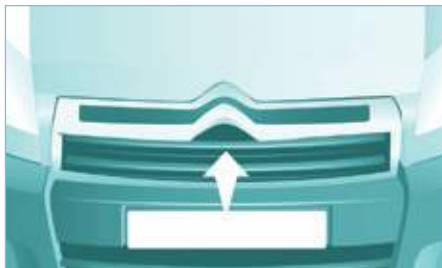

Partially open the bonnet, lift the safety catch and raise the bonnet.



Secure the stay in one of the two notches, according to the height required, to hold the bonnet open.


6 ▶ 109



### Towing eye

At the front, unclip the cover by pressing it at the bottom.


At the rear, unclip the cover using a coin or the flat part of the towing eye.

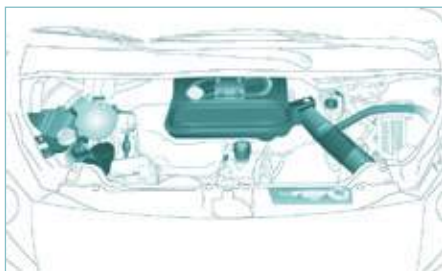

### Diesel engines

Take care when carrying out work under the bonnet.

Refer to "Levels" in section 6 for instructions on the use of fluids.

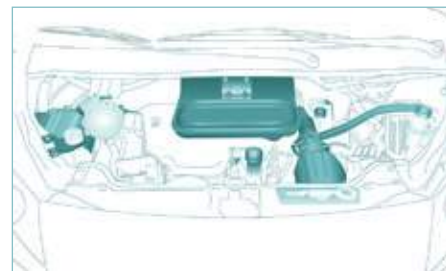

### Petrol engine

6 ▶ 110


6 ▶ 111

7 ▶ 141



## INSTRUMENTS AND CONTROLS

1. Lighting and direction indicator control stalk.
2. Instrument panel with screen.
3. Wiper, screenwash, trip computer control stalk.
4. Gear lever.
5. Ignition.
6. Audio system controls.
7. Driver's airbag, horn.
8. Steering wheel height and reach adjustment.
9. Headlamp beam adjustment.
10. Cruise control, speed limiter switches.
11. 12 volt accessory socket (120 W max), cigarette lighter type.
12. Ashtray.
13. Glove box, auxiliary socket, passenger's airbag deactivation switch.
14. "Grip control".

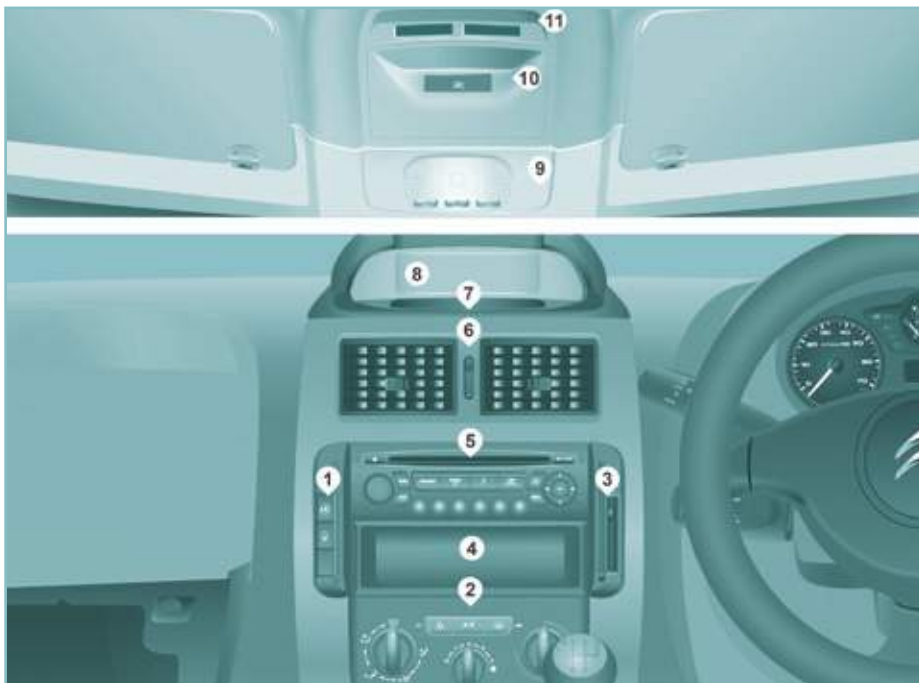

## CENTRE CONSOLE AND OVERHEAD STORAGE UNIT

1. Location of controls:
  - central locking/unlocking,
  - locking/unlocking the load space.
2. Heating and/or air conditioning controls.
3. Location of the ticket/card storage or controls:
  - deactivation of the DSC,
  - deactivation of the interior protection alarm, alarm LED,
  - deactivation of the parking sensors.
4. Storage compartment.
5. Audio system or storage compartment.
6. Central adjustable vents.
7. Hazard warning lamps switch.
8. Screen or storage compartment.
9. Courtesy lamp.
10. Passenger's airbag deactivated warning lamp.
11. Location of the ticket/card storage, heated seat controls.



## ADJUSTING THE TIME

Depending on the configuration of your vehicle, you have either:

- a centre console with screen: refer to "Adjusting the date and time" in section 9,
- a centre console without screen: refer to "Instruments and controls" in section 2.

## SITTING COMFORTABLY



1. Forwards-backwards adjustment.



2. Backrest angle.



3. Cushion height.



4. Lumbar.



5. Head restraint height.

<https://www.automotive-manuals.net/>



**Steering wheel**

Adjust the steering wheel for height and reach.

2 ▶ 44



**Door mirrors**

Manual adjustments.



**Electric windows**

3 ▶ 84



**Seat belts**

Height adjustment.  
Fastening.


4 ▶ 91



Electric adjustments, electric folding /  
unfolding.

3 ▶ 82

## SEEING CLEARLY

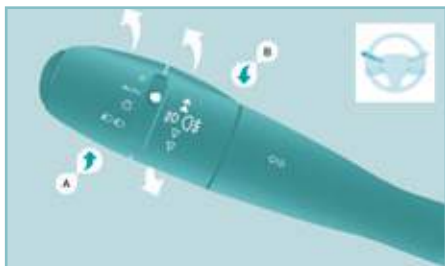

Lighting control stalk



Lighting off.



Sidelamps.




Dipped beam headlamps (green).  
Main beam headlamps (blue).

**AUTO**

AUTO, automatic illumination  
of headlamps.

3 ▶ 46

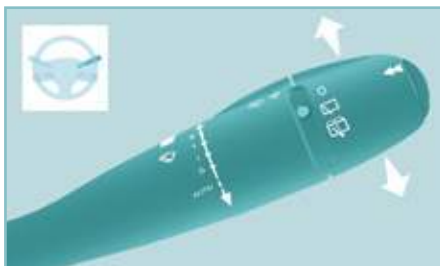

Wiper control stalk

- 2 fast.
- 1 normal.
- I intermittent.
- 0 off.
- ↓ single wipe.



**AUTO**, press the stalk down.

3 ▶ 49



Changing bulbs

In bad weather or in winter, check that the lamps are not covered with mud or snow.

7 ▶ 130

## DRIVING SAFELY

14

### Emergency or assistance call

This system allows an emergency or assistance call to be sent to the dedicated CITROËN centre.

For more information on the use of this system, refer to section 9, "Technology on board".



**Audio system**

9



**eMyWay**

9

This easy to use audio system offers a map of Europe on SD Card, a Bluetooth telephone connection and the playing of MP3 / WMA files.

9

### USB Player

CITROËN recommends the use of a suitable lead to connect your portable player to the USB port.

In the right-hand drive configuration, the lead is essential.

9



**Cruise control / Speed limiter**

For the cruise control, the vehicle speed must be higher than 25 mph (40 km/h) with at least 4th gear engaged

For the speed limiter, the minimum vehicle speed that can be programmed is 20 mph (30 km/h).

3

▶ 51, 54

### Fixed speed limiter

3

▶ 53



**Grip control**

This allows the vehicle to make progress in most conditions of low grip.

4

▶ 89



## CAB FITTINGS



Overhead storage unit

3 ▶ 74



Glove box

3 ▶ 72




Storage compartment

3 ▶ 72

<https://www.automotive-manuals.net/>

## LOAD SPACE

16

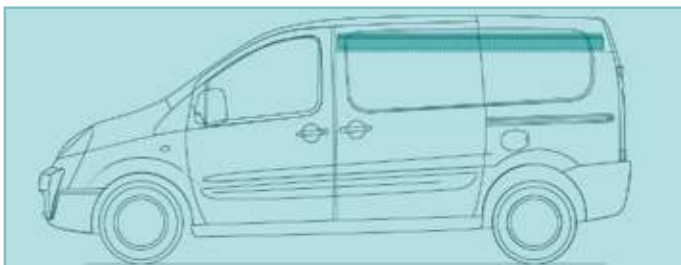

Interior rack

5 ▶ 107



Vertical partition



Location for stowing rail



Lashing rings

You are advised to immobilise the load by securing it firmly using the lashing rings on the floor.

3 ▶ 78

3 ▶ 77

3 ▶ 77

## VENTILATION



3 ▶ 57



3 ▶ 59

Recommended settings					
For optimum use of the system, we recommend:					
If I require...	Air distribution	Temperature	Air flow	Air recirculation	AC
Heating					-
Cooling					<b>A/C</b>
Demisting Defrosting					

## ECO-DRIVING

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO<sub>2</sub> emissions.

### Optimise the use of your gearbox

With a manual gearbox, move off gently and change up without waiting. During acceleration change up early.

With an automatic or electronic gearbox, give preference to automatic mode and avoid pressing the accelerator pedal heavily or suddenly.

The gear efficiency indicator invites you engage the most suitable gear: as soon as the indication is displayed in the instrument panel, follow it straight away.

For vehicles fitted with an electronic or automatic gearbox, this indicator appears only in manual mode.

### Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO<sub>2</sub> emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

### Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

## Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

## Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.

Don't forget the spare wheel and the tyres on a trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter, passenger compartment filter...) and observe the schedule of operations recommended in the maintenance and warranty guide.

When refuelling, do not continue after the third cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.



## ACCESS

### REMOTE CONTROL

#### Unlocking the cab



Press this button once to unlock your vehicle's cab. The direction indicators flash twice.

Press this button a second time to unlock the side door(s) and the rear doors.

This selective door locking function is active when the vehicle is delivered. At your request, the dealer network can deactivate

this selectivity of opening between the cab and the load space; contact a CITROËN dealer.

#### Unlocking the load space



Press this button to unlock all of the rear doors.

This separation of the locking of the cab and load space is an operating security feature. It enables you to prevent access to the part of the vehicle from which you are absent.

#### Central locking



Press this button to lock your vehicle, cab and rear doors.

The direction indicators flash once.

If one of the front doors is open or is not closed correctly, the central locking will not work.

#### Deadlocking

If your vehicle is fitted with deadlocking, **a second press** on the closed padlock on the remote control within five seconds after locking changes the locking to deadlocking.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Deadlocking renders the exterior and interior door opening handles inoperative: do not leave anyone inside the vehicle when it is deadlocked.

If deadlocking is activated from inside the vehicle, it will change to normal locking when the vehicle is started.

#### Folding / unfolding the key



Press this button to release the key from its housing.

To fold the key, press the chromed button then fold the key into the housing. If you do not press the button, the mechanism may be damaged.

#### Good practice

Take care not to allow the remote control to come into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (key ring, ...) weighing on the shaft of the key in the switch, may cause a malfunction.



## KEY

This locks and unlocks the doors on the vehicle, opens and closes the fuel filler cap, as well as starting and stopping the engine.

## REMOTE CONTROL

### Changing the battery

Battery ref.: CR1620 / 3 volts.

The "battery flat" information is given by an audible signal, accompanied by a message in the screen.

To replace the battery, unclip the casing using a coin at the ring.

If the remote control does not work after the battery has been changed, reinitialise the remote control.



There is a risk of damage if the replacement battery is not the correct type.

Use only identical batteries or batteries of an equivalent type to those recommended by CITROËN dealers.

Do not discard the remote control batteries, they contain metals which are harmful to the environment.

Deposit them at a CITROËN dealership, or at an authorised collection point.

### Reinitialising the remote control

Following changing of the remote control battery or disconnection of the vehicle battery, the remote control may have to be reinitialised.

Wait at least one minute before using the remote control.

Insert the key in the ignition switch with the buttons (padlocks) of the remote control facing you.

Switch on the ignition.

Press the locking padlock for at least five seconds within the next ten seconds.

Switch off the ignition.

Wait at least one minute before using the remote control.

The remote control is now working again.

## ELECTRONIC IMMOBILISER

All of the keys contain an electronic immobiliser device.

This device locks the engine supply system. It is activated automatically when the key is removed from the ignition.

After the ignition is switched on, a dialogue is established between the key and the electronic immobiliser system.

The metal part of the key must be unfolded correctly for correct dialogue to take place.

### If you lose your keys

Visit a CITROËN dealer with the vehicle's V5 registration document and your identification document.

A CITROËN dealer will be able to retrieve the key code and the transponder code so that a replacement key can be ordered.

### Good practice

Do not make any modifications to the electronic immobiliser system.

Operating the remote control, even when it is in your pocket, may result in involuntary unlocking of the doors.

The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...), may interfere with the operation of the remote control temporarily. The remote control does not operate while the key is in the ignition, even if the ignition is off.

### When purchasing a second-hand vehicle:

- have the keys memorised by a CITROËN dealer to ensure that the keys in your possession are the only ones which can start the vehicle.



When leaving the vehicle, check that the lamps are off and nothing of value is visible.

As a safety precaution (with children on board), remove the key from the ignition when leaving the vehicle, even for a short time.



### ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a front/rear door or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

If your vehicle is fitted with a separation partition, the interior protection is not active in the load space.

### Locking the vehicle with complete alarm

#### Setting the alarm

- Switch off the ignition and get out of the vehicle.

- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control. The red LED, located on the centre console, flashes once per second.

### Disarming

- Unlock the vehicle with the remote control or switch on the ignition, the red LED goes off.

### Locking the vehicle with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Switch off the ignition.



- In the next ten seconds, press this button, located on the centre console, until the red LED is on continuously.
- Get out of the vehicle.
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red LED flashes once a second).



## Triggering

The siren sounds, the direction indicators flash for approximately 30 seconds and the red LED flashes rapidly.

- To switch it off, insert the key and switch on the ignition.

When the alarm has been triggered ten times in succession (when triggered for the eleventh time) it is deactivated. Repeat the rules for setting the alarm.

## Locking the vehicle without alarm

- Insert the key in the lock on the driver's door and lock it.

Do not set the alarm when washing your vehicle.

## Failure of the remote control

When the alarm is set but the remote control does not operate:

- Unlock the doors with the key and open the door. The alarm is triggered.
- Switch on the ignition in the next ten seconds. The alarm is disarmed.

## Malfunction

When the ignition is switched on, if the red LED remains on for ten seconds, this indicates a malfunction with the siren connection.

Have the system checked by a CITROËN dealer or a qualified workshop.

## Automatic setting of the alarm

Depending on the country in which the vehicle is sold, the alarm is set automatically approximately 2 minutes after the last door is closed.

To prevent triggering of the alarm when a door is opened, it is imperative to press the remote control unlocking button again.



Do not make any modifications to the alarm system as this could cause faults.



## DOORS

### From the outside

Use the remote control to lock/unlock the vehicle.

Insert the metal part of the key in the lock on the driver's side if the remote control does not work.

### From the inside



#### Cab and load space

The first press permits central locking of the front and rear doors, if they are closed.

A second press permits central unlocking of the vehicle.

The control does not work if the vehicle has been locked using the remote control or the key from the outside.



### Load space



Pressing permits locking/unlocking of the rear doors from the cab.

This selective door locking function is activated on delivery. At your request, the dealer network can deactivate this opening selectivity between the cab and load space; contact a CITROËN dealer. The doors can still be opened from the inside.

The indicator lamp the control:



- flashes if the doors are locked when stationary with the engine off,



- comes on if the doors are locked and from the time the ignition is switched on.



Driving with the doors locked may make access to the cabin more difficult in an emergency.

### Anti-intrusion protection

When the vehicle is started, the system automatically locks the front doors. When you reach approximately 6 mph (10 km/h), the system locks the rear doors.

### Activation / deactivation of the function



With the ignition on, a long press on this button activates or deactivates the function.

### Opening warning lamp



If this warning lamp comes on, check that the cab doors and the rear or side doors are closed correctly.



## SLIDING SIDE DOOR

If fitted on your vehicle, do not open the left-hand side door while filling with fuel as you risk damaging the fuel filler flap.



### From the outside

Pull the handle towards you then towards the rear.

### From the inside

To unlock and open, push the handle towards the rear. Ensure that the door opens fully to lock the device at the base of the door.

### Good practice

Take care not to block the guide space on the floor to allow the door to slide correctly.

For safety and operation reasons, do not drive with the sliding side door open.



### Operation in the event of a battery failure

#### Front and side passenger doors

In the event of a battery or of the central locking fault, use the lock to lock the doors mechanically.

- To open the door and get out of the vehicle, pull the interior control.
- To lock the door, insert the key in the lock, located on the edge of the door, then turn it **one eighth of a turn**.

#### Driver's door

- Insert the key in the lock, then turn it to the right to lock or to the left to unlock.



## HINGED REAR DOORS

### From the outside

The two hinged doors open to 90°.

To open, pull the handle towards you then pull the lever to open the left-hand door.


To close, start with the left-hand door then close the right-hand door.

### Opening to 180°

A retractable check strap system permits extension of the opening from 90° to 180°.

Disengage the check strap towards you when the door is partially open.

The check strap will re-attach automatically on closing.

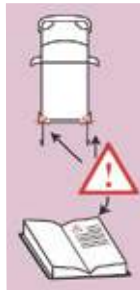

When parked with the rear doors open to 90°, the doors mask the rear lamps.

To signal your position to road users travelling in the same direction who may not have noticed that you have stopped, use a warning triangle or any other device stipulated by the legislation and regulations of your country.



## TAILGATE

### From the outside

If fitted on your vehicle, locking/unlocking is via the remote control.

To open, press the control then raise the tailgate.

A strap is provided to secure the tailgate in the upper position.

### From inside

#### Emergency control

In the event of a central unlocking operating fault, this permits unlocking of the tailgate from the inside.

Fold the rear seats to gain access to the lock.

Insert a small screwdriver in this opening to unlock the tailgate.



## INSTRUMENTS AND CONTROLS INSTRUMENT PANEL

1. Distance recorder in miles / kilometres.
2. Screen.
3. Fuel level, coolant temperature.
4. Rev counter.
5. Instrument panel lighting dimmer.
6. Trip distance recorder / service indicator zero reset.



### Instrument panel screen

- Speed limiter / cruise control.
- Miles / kilometres travelled.
- Service indicator, engine oil level indicator, total miles / kilometres.
- Presence of water in the Diesel filter.
- Diesel pre-heating.
- Gear efficiency indicator.



### Warning lamp and controls in the overhead storage unit

- Passenger's airbag deactivated warning lamp.
- Driver / passenger heated seat controls (version with 2 front seats).



Instrument panel without screen

## ADJUSTING THE TIME

### Centre console without screen



To adjust the time of the clock on the instrument panel, use the left-hand button on the instrument panel then carry out the operations in the following order:

- turn to the left: the minutes flash,
- turn to the right to increase the minutes (hold the button to the right for rapid scrolling),
- turn to the left: the hours flash,
- turn to the right to increase the hours (hold the button to the right for rapid scrolling),

- turn to the left: 24H or 12H is displayed,
- turn to the right to select 24H or 12H,
- turn to the left to complete the time adjustment.

After approximately 30 seconds without any action, the screen returns to the normal display.



### Centre console with screen






The display - time sequence is linked according to model (version). The access to the Date is only active when the model version offers a date in words.







To adjust the time indicated in the screen, refer to the "Adjusting the date and time" section of chapter 9.






## WARNING LAMPS

Each time the engine is started: a series of warning lamps comes on applying a check auto-test. They go off again almost immediately. When the engine is running: the warning lamp becomes a warning if it remains on continuously or flashes. This initial warning may be accompanied by an audible signal and a message in the screen.  
Do not ignore these warnings

Warning lamp		is	indicates	Solution - action
	<b>STOP</b>	on, associated with another warning lamp and accompanied by a message in the screen.	major faults linked with the "Brake fluid level", "Engine oil pressure and temperature", "Coolant temperature", "Electronic brake force distribution" or "Power steering" warning lamps.	<b>You must stop as soon as it is safe to do so. Park, switch off the ignition and call a CITROËN dealer or a qualified workshop.</b>
	<b>Parking brake / Brake fluid level / EBFDF</b>	on.	parking brake applied or not released correctly.	Releasing the parking brake switches off the warning lamp.
		on.	low brake fluid level.	Top up using a fluid recommended by CITROËN.
		remains on, even though the level is correct and associated with the ABS warning lamp.	failure of the electronic brake force distribution.	<b>You must stop as soon as it is safe to do so. Park, switch off the ignition and call a CITROËN dealer or a qualified workshop.</b>
	<b>Engine oil pressure and temperature</b>	on while driving.	insufficient pressure or temperature too high.	Park, switch off the ignition and allow to cool. Visually check the level. Chapter 6, "Levels" section.
		remains on, even though the level is correct.	major fault.	Call a CITROËN dealer or a qualified workshop.






Warning lamp		is	indicates	Solution-action
	<b>Coolant temperature and level</b>	on with needle in the red zone.	abnormal increase in temperature.	Park, switch off the ignition then allow to cool. Visually check the level.
		flashing.	drop in coolant level.	Chapter 6, "Levels" section. Contact a CITROËN dealer or a qualified workshop.
	<b>Service</b>	on temporarily.	minor faults or warnings.	Consult the warnings log in the display or on the screen. See chapter 9, "Trip computer" section then "Warnings log". Depending on the seriousness of the fault, contact a CITROËN dealer or a qualified workshop.
		remains on.	major faults.	
	<b>Row 1 seat belt not fastened</b>	lit then flashing.	the driver or a front passenger has not fastened his seat belt.	Pull the strap then insert the tongue in the buckle.
		accompanied by an audible signal then remains on.	the vehicle is moving with the driver or front passenger seat belt not fastened.	Check that the seat belt is fastened by pulling the strap. Chapter 4, "Seat belts" section. The driver must ensure that all passengers have fastened their seat belt and use it correctly.
	<b>Under-inflation detection</b>	on.	a deflated or punctured tyre.	Park and switch off the ignition. Change or repair the wheel.
		on, accompanied by the service warning lamp.	a faulty sensor.	Have it checked by a CITROËN dealer or a qualified workshop.










Warning lamp	is	indicates	Solution-action
 <b>Front / lateral / curtain airbag</b>	flashing or remains on.	failure of an airbag.	Have the system checked by a CITROËN dealer or a qualified workshop without delay. Chapter 4, "Airbags" section.
 <b>Front passenger airbag deactivated</b>	on.	intentional deactivation of this airbag in the presence of a rearwards facing child seat.	Chapter 4, "Airbags-children on board" section.
 <b>Low fuel level</b>	on with gauge needle in the red zone.	that when it first comes on <b>approximately 8 litres</b> of fuel remain.	It is essential to fill the tank to avoid running out of fuel. Never continue to drive until you run out of fuel, this could damage the emissions control and injection systems. Tank capacity: approximately 80 litres.
	remains on each time the ignition is switched on.	not enough fuel added.	
	flashing.	fuel supply cut off following a serious impact.	Restore the supply. Chapter 6, "Fuel" section.
 <b>EOBD emission control system</b>	flashing or remains on.	malfunction of the system.	Have the system checked by a CITROËN dealer or a qualified workshop as soon as possible.
 <b>Battery charge</b>	on.	fault in the charging circuit.	Check the battery terminals, ... Chapter 7, "Battery" section.
	flashing.	placing of the active functions on standby (economy mode).	Chapter 7, "Battery" section.
	remaining on, in spite of the checks.	faulty circuit, injection or ignition malfunction.	Contact a CITROËN dealer or a qualified workshop.

<https://www.automotive-manuals.net/>









## Instruments and controls

Warning lamp		is	indicates	Solution-action
	<b>Power steering</b>	on.	system malfunction.	The vehicle retains conventional steering without assistance. Have the system checked by a CITROËN dealer or a qualified workshop.
	<b>Opening detection</b>	on and accompanied by a message in the screen.	door not closed correctly.	Check that the cab doors, the rear and side doors and the bonnet are closed (if your vehicle is fitted with an alarm).
	<b>Rear suspension with pneumatic height correction</b>	flashing.	abnormal difference between the detected sill height and the optimum sill height.	In automatic correction mode: drive slowly (approximately 6 mph (10 km/h)) until the warning lamp goes off. In manual correction mode: return the sill which is still at the upper or lower limit to an optimum height. Chapter 3, "Rear suspension" section.
		on when starting or while driving.	malfunction of the pneumatic height correction.	You must stop as soon as it is safe to do so. Contact a CITROËN dealer or a qualified workshop.
	<b>ABS</b>	remains on.	malfunction of the anti-lock braking system.	The vehicle retains conventional braking without assistance but you are advised to stop. Contact a CITROËN dealer or a qualified workshop.
	<b>DSC</b>	flashing.	DSC regulation triggered.	The system optimises drive and permits improvement of the directional stability of the vehicle. Chapter 4, "Driving safety" section.
		remains on with the LED in the button (in the dashboard) on.	system malfunction. E.g.: under-inflation of the tyres.	E.g.: Check the pressure of the tyres. Have them checked by a CITROËN dealer or a qualified workshop.

Warning lamp	is	indicates	Solution-action
 <b>Brake pads</b>	on.	brake pad wear.	Have the pads replaced by a CITROËN dealer or a qualified workshop.
 <b>Dipped beam headlamps / Daytime running lamps</b>	on.	manual selection or automatic lighting.	Turn the lighting stalk to the second position.
		lighting of the dipped beam headlamps from the time the ignition is switched on - daytime running lamps.	Depending on the country in which the vehicle is sold. Chapter 3, "Steering mounted controls" section.
 <b>Main beam headlamps</b>		pulling the stalk towards you.	Pull the stalk to return to dipped beam headlamps.
 <b>Direction indicators</b>	flashing with audible signal.	change of direction via the lighting stalk, to the left of the steering wheel.	To the Right: control to be pushed upwards. To the Left: control to be pushed downwards.
 <b>Front foglamps</b>	on.	manual selection.	The foglamps only operate if the sidelamps or dipped beam headlamps are on.
 <b>Rear foglamps</b>	on.	manual selection.	The lamps only operate if the sidelamps or dipped beam headlamps are on. In conditions of normal visibility, take care to switch them off to avoid any penalty. "This light is a dazzling red."
 <b>Particle emission filter</b>	on.	a malfunction of the particle emissions filter (Diesel additive level, risk of clogging, ...).	Have the filter checked by a CITROËN dealer or a qualified workshop. Chapter 6, "Checks" section.

<https://www.automotive-manuals.net/>

## Instruments and controls

Screen	is	indicates	Solution-action
 <b>Cruise control</b>	on.	cruise control selected.	Manual selection. Chapter 3, "Steering mounted controls" section.
 <b>Speed limiter</b>	on.	speed limiter selected.	Manual selection. Chapter 3, "Steering mounted controls" section.
 <b>Gear efficiency indicator</b>	on.	a recommendation that is independent of the traffic configuration and density.	To reduce fuel consumption, engage the gear recommended with a manual gearbox. The driver retains responsibility for following this indication or not.
 <b>Diesel pre-heating</b>	on.	climatic conditions requiring pre-heating.	Wait until the warning lamp goes off before operating the starter.
 <b>Particle emissions filter</b>	on.	a malfunction of the particle emissions filter (Diesel additive level, risk of clogging, ...).	Have the filter checked by a CITROËN dealer or a qualified workshop. Chapter 6, "Checks" section.
 <b>Presence of water in the Diesel filter</b>	on and accompanied by a message in the screen.	water in the Diesel filter.	Have the filter bled by a CITROËN dealer or a qualified workshop without delay. Chapter 6, "Checks" section.
 <b>Service spanner</b>	on.	service due shortly.	Refer to the list of checks in maintenance and warranty guide. Have the service carried out by a CITROËN dealer or a qualified workshop.
 <b>Time</b>	on.	adjustment of the time.	Use the left-hand button on the instrument panel. Chapter 2, at the beginning of the "Instruments and controls" section.




## FUEL GAUGE

The fuel level is tested each time the key is turned to the "running" position.

The gauge is positioned on:

- **1**: the fuel tank is full, approximately 80 litres.
- **0**: the reserve is now being used, the warning lamp comes on continuously.

The reserve when the warning first comes on is approximately 8 litres.

 Refer to the "Fuel" section of chapter 6.



## COOLANT TEMPERATURE

**The needle is positioned before the red zone:** normal operation.

In arduous conditions of use or hot climatic conditions, the needle may move close to the red graduations.

**What you should do if the needle enters the red zone:**

Reduce your speed or let the engine run at idle.


**What you should do if the warning lamp comes on:**

- stop immediately, switch off the ignition. The fan may continue to operate for a certain time, up to approximately 10 minutes,
- wait for the engine to cool down in order to check the coolant level and top it up if necessary.

 
As the cooling system is pressurised, follow this advice in order to avoid any risk of scalding:

- wait at least one hour after switching off the engine before carrying out any work,
- unscrew the cap by 1/4 turn to allow the pressure to drop,
- when the pressure has dropped, check the level on the expansion bottle,
- if necessary, remove the cap to top up.

If the needle remains in the red zone, have the system checked by a CITROËN dealer or a qualified workshop.

 Refer to the "Levels" section of chapter 6.

## EMISSIONS CONTROLS



EOBD (European On Board Diagnosis) is a diagnostics system which complies with, among others, the standards

concerning authorised emissions of:

- CO (carbon monoxide),
- HC (unburnt hydrocarbons),
- NOx (nitrous oxides) or particles, detected by oxygen sensors placed upstream and downstream of the catalytic converters.

The driver is warned of any malfunction of this emission control system by the illumination of this specific warning lamp in the instrument panel.

There is a risk of damage to the catalytic converter. Have it checked by a CITROËN dealer or a qualified workshop.




## TYRE UNDER-INFLATION DETECTION


System which automatically checks the pressures of the tyres while driving.

The system continuously monitors the pressures of the four tyres, as soon as the vehicle is moving.


A pressure sensor is located in the valve of each tyre (except the spare wheel).


The system triggers an alert if a drop in pressure is detected in one or more tyres.

 The tyre under-inflation detection system is an aid to driving which does not replace the need for the driver to be vigilant or to drive responsibly.

 This system does not avoid the need to check the tyre pressures regularly (including the spare wheel) and before a long journey.

Driving with under-inflated tyres adversely affects road holding, extends braking distances and causes premature tyre wear, particularly under arduous conditions (vehicle loaded, high speed, long journey).

 Driving with under-inflated tyres increases fuel consumption.

 The tyre pressures for your vehicle can be found on the tyre pressure label (see the "Identification markings" section). The tyre pressures must be checked when the tyres cold (vehicle stopped for 1 hour or after driving for less than 6 miles (10 km) at moderate speed). Otherwise, add 0.3 bar to the values indicated on the label.

## Under-inflation alert



The alert is given by the fixed illumination of this warning lamp, accompanied by an audible signal, and depending on equipment, the display of a message.

In the event of a problem on one of the tyres, the symbol or the message appears, according to equipment, to identify it.

- Reduce speed, avoid sudden steering movements or harsh brake applications.
- Stop as soon as it is safe to do so.
- In the event of a puncture, use the temporary puncture repair kit or the spare wheel (according to equipment), or
- if you have a compressor, the one in the temporary puncture repair kit for example, check the four tyre pressures when cold, or
- if it is not possible to check the tyre pressures at the time, drive carefully at reduced speed.



The loss of pressure detected does not always lead to visible deformation of the tyre. Do not rely on just a visual check.



The alert is maintained until the tyre or tyres concerned is reinflated, repaired or replaced.

The spare wheel (space-saver type or a steel rim) does not have a sensor.

## Operating fault



The flashing and then fixed illumination of the under-inflation warning lamp accompanied by the illumination of the "service" warning lamp, and depending on equipment, the display of a message indicates a fault with the system. In this case, monitoring of the tyre pressures is not assured.



This alert is also displayed when one or more wheels is not fitted with a sensor (for example, a space-saver or steel spare wheel).

Go to a CITROËN dealer or a qualified workshop to have the system checked or, following the repair of a puncture, to have the original wheel, equipped with a sensor, refitted.

## SERVICE INDICATOR

This programme's service intervals according to the use of the vehicle.

### Operation

A few moments after the ignition has been switched on, the spanner indicating a service operation comes on; the display for the total distance recorder gives (in round figures) the distance remaining before the next service.

The points at which a service is due are calculated from the last indicator zero reset. The point at which a service is due is determined by two parameters:

- the distance travelled,
- the time which has elapsed since the last service.

**i** The distance remaining before the next service may be weighted by the time factor, depending on the type of driving.

### More than 1 000 miles/km before the next service is due

**Example:** 4 800 miles/km remain before the next service is due. When the ignition is switched on and for a few seconds, the screen shows:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation showing the total and trip distances.

### Less than 1 000 miles/km before the next service is due

Each time the ignition is switched on and for a few seconds, the spanner flashes and the number of miles/kilometres remaining is displayed:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation and the spanner remains on. This indicates that a service should be carried out shortly.

### Service overdue



Each time the ignition is switched on and for a few seconds, the spanner flashes and the excess distance is displayed.

**i** With the engine running the spanner remains on until the service has been carried out.




## Zero re-set

Your CITROËN dealer or a qualified workshop carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- switch off the ignition,
- press and hold the trip recorder reset button,
- switch on the ignition.

The display begins a countdown.

 When the display shows "=0", release the button; the spanner disappears.

After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

## Engine oil level indicator

Depending on your vehicle's engine, when the ignition is switched on, the engine oil level is indicated for a few seconds, after the service information.



**Oil level correct**



**Low oil level**


Flashing of "OIL", linked with the service warning lamp, accompanied by an audible signal and a message in the screen, indicates a low oil level which could damage the engine.

If the low oil level is confirmed by a check using the dipstick, it is essential that the level is topped up.



**Oil level gauge fault**

Flashing of "OIL--" indicates a malfunction of the engine oil level indicator. Contact a CITROËN dealer or a qualified workshop.

 The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.



## Dipstick

**A** = maximum, never exceed this level as a surplus of oil may damage the engine.

Contact a CITROËN dealer or a qualified workshop without delay.  
**B** = minimum, top up the level via the oil filler cap, using the grade of oil suited to your engine.



## Trip recorder zero reset button

With the ignition on, press the button until the zeros appear.



## Lighting dimmer

With the lighting on, press the button to vary the brightness of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness.

As soon as the lighting is of the required brightness, release the button.



### 5-SPEED MANUAL GEARBOX

#### Engaging reverse gear

- ☞ With clutch pedal fully down, place the gear lever in neutral.
- ☞ Push the gear lever to the right then backwards.

Only engage reverse gear when the vehicle is stationary with the engine at idle.

As a safety precaution and to facilitate starting of the engine:

- always select neutral,
- press the clutch pedal.



### 6-SPEED MANUAL GEARBOX

#### Engaging 5<sup>th</sup> or 6<sup>th</sup> gear

- ☞ Move the lever fully to the right to engage 5<sup>th</sup> or 6<sup>th</sup> gear.
- Failure to follow this advice may cause permanent damage to the gearbox (engagement of 3<sup>rd</sup> or 4<sup>th</sup> gear by mistake).

#### Engaging reverse gear


- ☞ Raise the ring under the knob and move the gear lever to the left then forwards.

Only engage reverse gear when the vehicle is stationary with the engine at idle.

👁 As a safety precaution and to facilitate starting of the engine:

- always select neutral,
- press the clutch pedal.

👁 When traversing a flooded road or a ford, drive at walking pace.

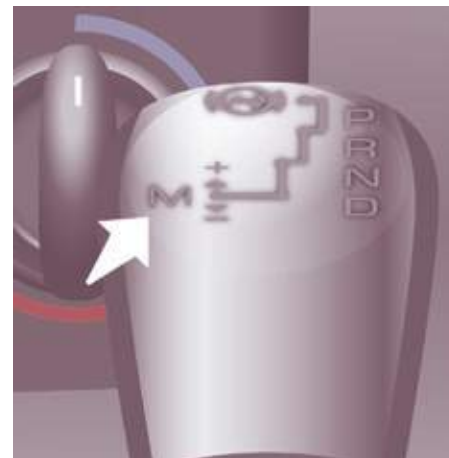

## AUTOMATIC GEARBOX

### Selecting positions

- Move the lever select a position.  
Once the position is selected, the corresponding indicator lamp appears in the instrument panel screen.

**P**

Park: position of the lever for parking.  
To immobilise the vehicle or start the engine.

**R**

Reverse: position of the lever for reverse gear.  
To reverse the vehicle.

**N**

Neutral: position of the lever for neutral.  
To park the vehicle (parking brake on) and start the engine.

**D**

Drive: position of the lever for driving.  
To move the vehicle forwards in automatic mode.

**M**

Manual: selection of the gears by pushing or pulling the gear lever (+ or -).  
To move the vehicle forwards in manual mode.

<https://www.automotive-manuals.net/>

## Gearboxes and steering wheel

### Moving off

42

With the engine running, to move off from position **P**.



- Press the brake pedal to come out of position **P**,



- select position **R** or **D**,



- gradually release the pressure on the brake pedal; the vehicle then moves off.

You can also move off from position **N**.



- With your foot on the brake, release the parking brake,



- select position **R**, **D** or **M**,



- gradually release the pressure on the brake pedal; the vehicle then moves off.



- Select position **D**.

The gearbox always selects the most suitable gear taking account of the following:

- the style of driving,
- the road profile,
- the vehicle load.

The gearbox is then operating in auto-adaptive mode, without any action on your part.

**i** For immediate maximum acceleration without touching the gear lever, depress the accelerator pedal to the extent of its travel, passing the point of resistance (kickdown). The gearbox will automatically change down or maintain the gear selected until maximum engine speed is reached.

On a descent, the gearbox will automatically change down in order to provide efficient engine braking and good pickup.

If you take your foot off the accelerator suddenly, the gearbox will not change to a higher gear for reasons of safety.

When stationary with the gear lever in position **D** (drive), a vibration limiting device is activated by pressing the brake pedal.

### Reverse gear



- Select position **R**, with the vehicle stationary and the engine at idle.

### Stopping the vehicle, starting the engine



- Select position **P** to **immobilise the vehicle** or to **start the engine**, with the parking brake on or off.

**i** If the battery is flat and the gear lever is in position **P**, it will be impossible to change to another position.



- You can also select position **N** to **park** or to **start the engine**, with the parking brake on.

**i** If position **N** is engaged inadvertently while driving, allow the engine to return to idle before engaging position **D** to restore drive.

## Operating fault

Any operating fault is indicated by an audible signal, accompanied by the message "**Automatic gear fault**" in the screen.


In this situation the gearbox operates in downgrade mode (locked in 3rd gear). You may feel a substantial knock when changing from **P** to **R** and from **N** to **R** (this will not cause any damage to the gearbox).

Do not exceed 60 mph (100 km/h), keeping within the limit of local speed restrictions. Contact a CITROËN dealer or a qualified workshop as soon as possible.

## Manual mode

Manual sequential gear changing.

- Select gear lever position **M**,
- push the gear lever towards the + sign to change up, from 1 through to 6,
- conversely, push the gear lever towards the - sign to change down.

 You can change from position **D** (automatic mode) to position **M** (manual mode) at any time.

In manual mode, it is only possible to change from one gear to another if the vehicle speed and engine speed permit. If they do not, the vehicle will operate temporarily in automatic mode.

When the vehicle is stationary or moving very slowly, the gearbox automatically selects first gear.

## Good practice

Never select position **N** when the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is stationary.


Never change between positions to optimise braking on a slippery surface.

There is a risk of damage to the gearbox:

- if you press the accelerator and brake pedals at the same time,
- if you force the gear lever from position **P** to another position in the event of a battery failure.

When the engine is at idle, brakes not applied, if position **R**, **D** or **M** is selected the vehicle moves even without the accelerator being pressed.

For this reason, **do not leave children unsupervised inside the vehicle, with the engine running.**

 When traversing a flooded road or a ford, drive at walking pace.



### GEAR EFFICIENCY INDICATOR

This system allows fuel consumption to be reduced by suggesting when to change up.

With an automatic gearbox, the system is only active in manual mode.

### Operation

Depending on the driving conditions and the equipment of your vehicle, the system may recommend skipping one or more gears. You can follow this indication without going through the intermediate gears.

The gear engagement recommendations should not be considered to be compulsory. This because the configuration of the road, the traffic density and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system.

This system cannot be deactivated.



The information appears in the instrument panel in the form of an arrow.

The system adapts its gear change recommendations according to the driving conditions (slope, load, ...) and demands from the driver (for power, acceleration, braking, ...).



The system never recommends engaging first gear or reverse, or changing down.



### STEERING WHEEL HEIGHT AND REACH ADJUSTMENT

When the vehicle is stationary, release the steering wheel adjustment mechanism by lowering the lever.

Adjust the steering wheel for height and reach, then lock the adjustment mechanism by pushing the lever fully upwards.



## STARTING AND STOPPING

### Running and accessories position.

To unlock the steering, turn the steering wheel gently while turning the key, without forcing. In this position, certain accessories can be used.

### Starting position.

The starter is operated, the engine turns over, release the key.

### STOP position: steering lock.

The ignition is off. Turn the steering wheel until the steering locks. Remove the key.

## Good practice when starting

### Minimise engine and gearbox wear

To ensure the correct operation and long life of your engine and gearbox, when the ambient temperature is below  $-23^{\circ}\text{C}$ , it is necessary to leave the engine idling for four minutes.

### Door or bonnet open warning lamp



If this warning lamp comes on, a door or the bonnet is not closed correctly, check it!

### Diesel pre-heating warning lamp



If the temperature is high enough, this warning lamp comes on for less than one second, you can start without waiting.

In cold weather, wait for the warning lamp to go off, then operate the starter (Starting position) until the engine starts.



## Key

Take care to prevent the key from coming into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (key ring, ...) weighing the key down in the ignition switch may cause a malfunction.

## Good practice when stopping

### Minimise engine and gearbox wear

When switching off the ignition, let the engine run for a few seconds to allow the turbocharger (Diesel engine) to return to idle.

Do not press the accelerator when switching off the ignition.

There is no need to engage a gear after parking the vehicle.

## Steering mounted controls



### STEERING MOUNTED CONTROLS

#### DIRECTION INDICATORS (flashing indicators)




**Left:** downwards passing the point of resistance.

**Right:** upwards passing the point of resistance.

#### LIGHTING CONTROL

##### Front and rear lamps

Selection is by turning ring **A**.

-  Checking by means of the indicator lamps in the instrument panel is described in the "Instruments and controls" section of chapter 2.



Lighting off

**AUTO**

Automatic illumination of headlamps if your vehicle is fitted with a sunshine sensor.



Sidelamps



Dipped beam (green)  
Main beam (blue)

##### Dipped beam/main beam change

Pull the stalk fully towards you.

##### Lighting-on audible warning

When the ignition is switched off, when the driver's door is opened, there is an audible warning if you have left the vehicle's lighting on.



 
## Front and rear foglamps

Rotate ring **B** forwards to switch on and rearwards to switch off. The status is confirmed by the warning lamp in the instrument panel.

These operate with the sidelamps and the dipped beam headlamps.



Front foglamps (green, 1st rotation of the ring forwards).



Front foglamps (green) and rear foglamps (amber, 2nd rotation of the ring forwards).



To switch off the front and rear foglamps, turn the ring rearwards twice in succession.



In clear weather or in rain, both day and night, rear foglamps dazzle and their use is prohibited.

Do not forget to switch them off when they are no longer needed.

Automatic illumination of the headlamps switches off the rear foglamps, but the front foglamps remain on.

## Daytime running lamps

Depending on the country in which the vehicle is sold, the vehicle may be equipped with daytime running lamps. The dipped headlamps come on when the vehicle is started.



This warning lamp comes on in the instrument panel.



The instruments and controls (instrument panel, screen, air conditioning control panel, ...) are only illuminated on switching to the automatic illumination of headlamps mode or when the lamps are switched on manually.

## Steering mounted controls

### Automatic illumination of headlamps

# AUTO

The sidelamps and dipped beam headlamps switch on automatically if the light is poor, or during operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop.

This function is not compatible with the daytime running lamps.

**i** In foggy weather or in snow, the sunshine sensor may detect sufficient light. As a consequence, the lighting will not come on automatically. If necessary, you must switch on the dipped beam headlamps manually.

**i** Do not cover the sunshine sensor located on the windscreen, behind the mirror. It is used for the automatic illumination of headlamps and for the automatic rain sensitive wipers.

### Activation

Turn the ring to the **AUTO** position. The activation of this function is accompanied by a message in the screen.

### Deactivation

Turn the ring forwards or rearwards. The deactivation of this function is accompanied by a message in the screen.

The function is deactivated temporarily when you use the manual lighting control stalk.

### If the sunshine sensor does not

**function correctly**, the lighting comes on accompanied by the service warning lamp, an audible signal and a message in the screen.

Contact a CITROËN dealer or a qualified workshop.



### HEADLAMP BEAM

Depending on the load in your vehicle, the beam setting must be adjusted.

**0** - No load.

**1** - Partial load.

**2** - Average load.


**3** - Maximum authorised load.

**Initial setting is position 0.**

### **i** Travelling abroad

If using your vehicle in a country that drives on the other side of the road, the headlamps must be adjusted to avoid dazzling on-coming drivers.

Contact a CITROËN dealer or a qualified workshop.

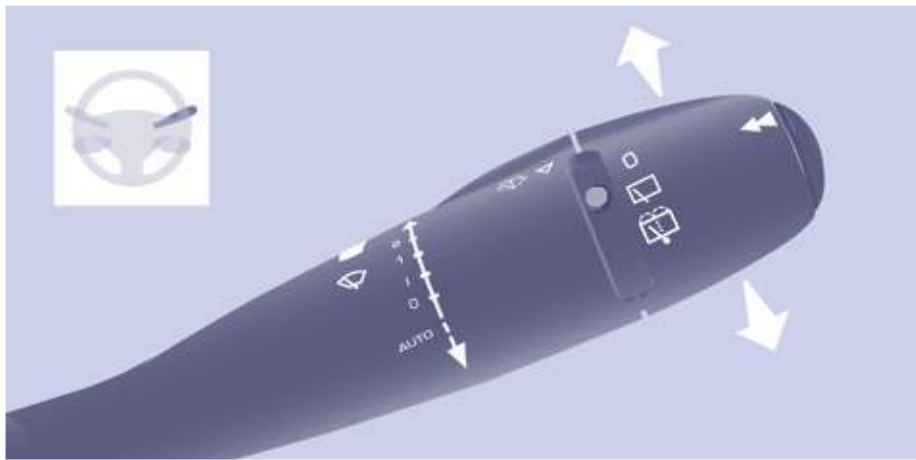

## WINDSCREEN WIPER STALK

### Manual windscreen wipers

- 2 Fast wipe (heavy rain).
- 1 Normal wipe (moderate rain).
- I Intermittent wipe.
- 0 Off.
- ↓ Single wipe (press downwards).

In the Intermittent position, the wiping speed is in proportion to the vehicle speed.


Whenever the ignition has been switched off for more than one minute, with the windscreen wiper stalk in position 2, 1 or I, the stalk must be reactivated:

- move the stalk to any position,
- then move it back to the required position.


### Wash-wipe and headlamp wash

Pull the stalk towards you, the wash-wipe is accompanied by a timed sweep of the wipers.

The headlamp wash is linked with the wash-wipe, it is triggered if the dipped headlamps are on.

 To top up the levels, refer to the "Levels" section of chapter 6.

### Automatic rain sensitive windscreen wipers

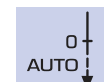 Do not cover the rain sensor, located in the centre of the windscreen, behind the mirror.

In the **AUTO** position, the windscreen wipers operate automatically and adapt their speed to the intensity of the rainfall.

When not in **AUTO** mode, for the other positions, refer to the manual windscreen wipers section.

## Steering mounted controls

### Activation

Press the control downwards. Activation of the function is accompanied by a message in the screen.


The automatic rain sensitive windscreen wipers function must be reactivated by pressing the stalk downwards, if the ignition has been switched off for more than one minute.

### Deactivation / Switching off

Place the windscreen wipers stalk in position **I**, **1** or **2**. Deactivation of the function is accompanied by a message in the screen.

In the event of malfunction of the automatic windscreen wipers, the windscreen wipers will operate in intermittent mode.


Contact a CITROËN dealer or a qualified workshop to have the system checked.

 When using an automatic car wash, switch off the ignition to avoid triggering the automatic wiping.


In winter, it is advisable to wait for the windscreen to completely clear of ice before operating automatic wipe.

### Special position of the windscreen wipers

In the minute following switching off of the ignition, any action on the stalk positions the wipers against the windscreen uprights.

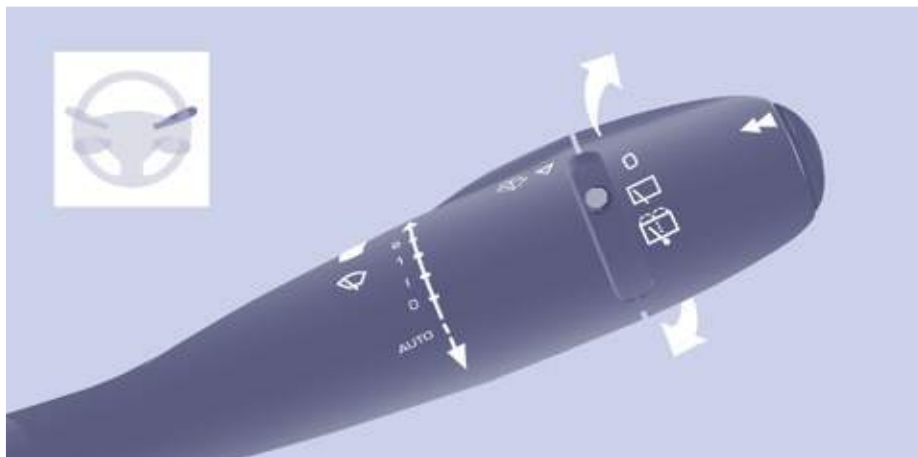

This action enables you to position the wiper blades for winter parking, cleaning or replacement.

 Refer to the "Changing a windscreen wiper blade" section of chapter 7.

To park the wipers in their normal position after this has been done, switch on the ignition and move the stalk.




### Rear wiper

Turn the ring to the first position.



### Rear screenwash

Turn the ring past the first position: the rear screenwash then the rear wiper operates for a fixed time.

 In winter, in the event of a considerable amount of snow or ice, switch on the heated rear screen. Once the screen is clear, remove the snow or ice which has accumulated on the rear wiper blade. You can then operate the rear windscreen wiper.



## CRUISE CONTROL "CRUISE"

"This is the speed at which the driver wishes to drive".

This aid to driving in free-flowing traffic enables the vehicle to maintain the speed programmed by the driver, unless a steep gradient makes this impossible.

In order for it to be programmed or activated, the vehicle speed must be greater than 25 mph (40 km/h) with at least 4th gear engaged.

This cruise control shows the function selection status in the instrument panel and displays the programmed speed:



Function selected, display of the "Cruise Control" symbol.



Function deactivated, **OFF**.



Function activated.



Vehicle speed above the programmed speed, which is displayed flashing.



Operating fault detected, **OFF** - the dashes flash.

## Steering mounted controls



### Selecting the function

- Place the switch in the **CRUISE** position. The cruise control is selected but is not yet active and no speed has been programmed.



### First activation/ programming a speed


- Reach the chosen speed by pressing the accelerator.
- Press the **SET** - or **SET +** button. This programmes/activates the reference speed and the vehicle will maintain this speed.



### Temporarily exceeding the speed

It is possible to **accelerate** and drive momentarily at a speed greater than the programmed speed. The value programmed flashes.

When the accelerator pedal is released, the vehicle will return to the programmed speed.

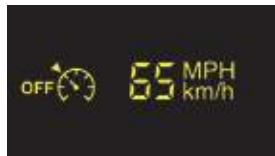

### Deactivation (off)

- Press this button or the brake or clutch pedal.



### Reactivation

- Following deactivation of the cruise control, press this button. Your vehicle will return to the last programmed speed. Alternatively, you can repeat the "first activation" procedure.



### Changing the programmed speed

There are two methods of memorising a speed higher than the previous one:

Without using the accelerator:

- press the **Set +** button. A brief press increases the speed by 1 mph (km/h). A maintained press increases the speed in steps of 5 mph (km/h).

Using the accelerator:


- exceed the memorised speed until the speed required is reached,
- press the **Set +** or **Set -** button.

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).

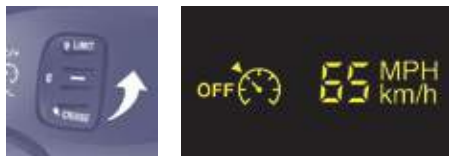

### Switching the function off

- Place the dial in position **0** or switch off the ignition to switch everything off.

### Cancelling the programmed reference speed

When the vehicle becomes stationary, after switching off the ignition, the system no longer memorises a speed.



### Operating fault

The programmed speed is cleared then replaced by three dashes. Contact a CITROËN dealer or a qualified workshop to have the system checked.

### Good practice

When changing the programmed reference speed by means of a maintained press, pay attention as the speed can increase or decrease rapidly.

Do not use the cruise control on slippery roads or in heavy traffic.

In the event of a steep slope, the cruise control cannot prevent the vehicle from exceeding the programmed speed.

In any event, the cruise control cannot replace the need to observe the speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

It is advisable to leave your feet near the pedals.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,

never place one mat on top of another



### FIXED SPEED LIMITER

If your vehicle is fitted with this function, the speed of your vehicle can be limited to a fixed speed of approximately 56, 60, 70 or 80 mph (90, 100, 110 or 130 km/h). The fixed maximum speed cannot be changed.

**i** The fixed speed limiter is not a function of the cruise control type. It cannot be activated or deactivated by the driver while driving.



## SPEED LIMITER "LIMIT"

"This is the selected speed which the driver does not wish to exceed".

This selection is made with the engine running while stationary or with the vehicle moving. The minimum speed which can be programmed is 20 mph (30 km/h).

The speed of the vehicle responds to the pressure of the driver's foot as far as the accelerator pedal point of resistance which indicates that the programmed speed has been reached.

However, pressing the pedal beyond this point of resistance to the floor allows the programmed speed to be exceeded. To resume use of the limiter, simply reduce the pressure on the accelerator pedal gradually and return to a speed below that programmed.

**The operating actions may be carried out when stationary, with the engine running, or with the vehicle moving.**

This speed limiter shows the function selection status in the instrument panel and displays the programmed speed:



Function selected, displaying of the "Speed Limiter" symbol.



Function deactivated, last programmed speed - OFF.



Function activated.



Vehicle speed above the programmed speed, which is displayed flashing.




Operating fault detected, **OFF** - the dashes flash.





### Selecting the function

- Place the switch in the **LIMIT** position. The limiter is selected but is not yet active. The screen indicates the last programmed speed.

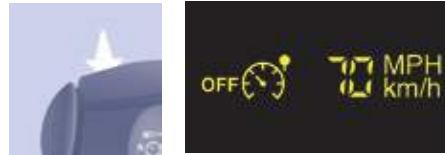

### Programming a speed

A speed can be programmed without activating the limiter but with the engine running.

To memorise a speed higher than the previous one:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).



### Activation/Deactivation (off)

Pressing this button once activates the limiter, pressing the button again deactivates it (OFF).



## Steering mounted controls



### Exceeding the programmed speed

Pressing the accelerator pedal in order to exceed the programmed speed will have no effect unless you press the pedal **firmly** beyond the **point of resistance**.

The limiter is deactivated temporarily and the programmed speed flashes.

To return to the limiter function, reduce your speed to below the programmed speed.

### Flashing of the speed

The speed flashes:

- following forcing of the accelerator point of resistance,
- when the limiter cannot prevent an increase in the vehicle speed due to the profile of the road or on a steep descent,
- in the event of sharp acceleration.



### Switching the function off

- Place the switch in position **0** or switch off the ignition to switch the system off. The last programmed speed remains in the memory.



### Operating fault

The programmed speed is cleared then replaced by three dashes. Contact a CITROËN dealer or a qualified workshop to have the system checked.

### Good practice

In any event, the speed limiter cannot replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Always pay attention to the profile of the road and sharp acceleration and stay in complete control of your vehicle.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.



## VENTILATION

### WITH MANUAL SETTINGS

If your vehicle is fitted with these controls, they are located on the control panel of the dashboard centre console.

### Air conditioning A/C

If fitted on your vehicle, the air conditioning can only operate with the engine running.



Pressing the button triggers the operation of the air conditioning, the LED is on. Pressing the button again switches the function off and the LED goes off.

The air conditioning does not operate if the air flow is set to 0.

### Temperature adjustment

Control positioned:



- in the blue zone, produces cool air,



- in the red zone, produces heating of the interior air.

### Air flow



The fan speed varies from 1 to the fastest 4. Position 0 switches it off.

Remember to adjust this control in order to attain the desired comfort level.

### Air distribution

Air distribution is directed by turning the control towards:



the side vents and the central vents,



the side vents, the central vents and the footwells,



the footwells,



the windscreen and the footwells,



the windscreen.



The air distribution can be modulated by placing the control in the intermediate positions, marked "•".

## Ventilation

### Intake of exterior air



The LED in the button is off.  
This is the preferred operating position.

### Recirculation of interior air



The LED in the button is on.  
Recirculation temporarily prevents exterior odours and smoke from entering the passenger compartment.

Used with the air conditioning switched on and setting of the force of blown air (from 1 to 4), recirculation enables you to obtain the required ambient air comfort level more quickly with both hot or cold settings.

This position should only be temporary.  
When your ambient air comfort level has been reached, return to the intake of exterior air position to permit renewal of the air in the passenger compartment and avoid misting.  
This operating mode is preferable.

## Recommended settings

For optimum operation of the manual system, the settings below are recommended:

If I require...	Air distribution	Temperature	Air flow	Air recirculation	Air conditioning A/C
Heating					-
Cooling					<b>A/C</b>
Demisting Defrosting					<b>A/C</b>



## DIGITAL AIR CONDITIONING WITH SEPARATE SETTINGS

If your vehicle is fitted with this control panel, it is located on the centre console.

### Good practice

For maximum cooling or heating of the passenger compartment, it is possible to exceed the value 15 by turning until LO is displayed or the value 27 by turning until HI is displayed.

For optimum comfort, the difference between the value displayed for the driver and for the passenger should not be greater than 3.

On entering the vehicle, the inside temperature may be much colder (or warmer) than is comfortable. There is no advantage in changing the value displayed in order to quickly reach the level of comfort required. The system will use its maximum performance to reach the comfort value set.

<https://www.automotive-manuals.net/>

## Ventilation

### Automatic operation

#### AUTO comfort programme

This is the normal air conditioning system operating mode.



Press this button, the **AUTO** symbol is displayed.

Depending on the comfort value selected, the system controls the distribution, the flow and the intake of air to guarantee comfort and a sufficient circulation of air in the passenger compartment. No further action on your part is required.

When the engine is cold, to prevent an excessive diffusion of cold air, the ventilation will reach its optimum level gradually.

For your comfort, the settings are stored when the ignition is switched off and are reinstated the next time the vehicle is started, if the temperature in the passenger compartment has not changed significantly; otherwise, operation resumes in automatic mode.

#### Driver or passenger side comfort value

The value indicated on the display corresponds to a level of comfort and not a temperature in degrees Celsius or Fahrenheit.



Turn this control to the left or to the right to decrease or increase the value. A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is usual.



Do not cover the sunshine sensor, located on the windscreen behind the mirror, it is used for regulation of the air conditioning.

## Manual operation

You can, according to your requirements, make a different selection from that offered by the system by changing a setting. The other functions will still be controlled automatically. Pressing the **AUTO** button restores fully automatic operation.



### Air distribution

Pressing this button several times in succession directs the air flow towards:

- the windscreen,
- the windscreen and footwells,
- the footwells,
- the side vents, central vents and footwells,
- the side vents and central vents.



### Air flow

Press the **small fan** button to reduce the flow or the **large fan** button to increase the flow.

On the display, the blades of the fan darken when the flow is increased.



### Deactivating the system

Press the air flow **small fan** button until the fan symbol disappears.

This action deactivates all of the system's functions, with the exception of the air recirculation and rear screen demisting (if fitted on your vehicle). Your comfort setting is no longer maintained and is switched off.



For your comfort, do not deactivate the system for long periods. Pressing the **large fan** button or the **AUTO** button reactivates the system with the values set before it was deactivated.



### Intake of exterior air / Recirculation of interior air

Press this button to recirculate the interior air. The recirculation symbol is displayed.

Recirculation prevents exterior odours and smoke from entering the passenger compartment. Avoid prolonged operation in interior air recirculation mode (risk of condensation, odour and humidity).

Pressing this button again activates the intake of exterior air.



### Switching the air conditioning On / Off

Press this button, the **A/C** symbol is displayed and the air conditioning is activated.

Pressing this button again switches off the air cooling.

## CORRECT USE OF THE VENTILATION AND AIR CONDITIONING

### Vents

#### "Leave them open"

For optimum distribution and diffusion of hot or cool air in the passenger compartment, there are adjustable central and side vents which can be directed sideways (right or left) towards the top of the body. For your comfort while driving, do not close them, direct the flow of air towards the windows instead.

The air vents directed towards the floor of the vehicle complete the equipment.

### Passenger compartment filter, carbon filter

Ensure that this filter is in good condition and have all of the filter elements replaced regularly.



Refer to the "Checks" section of chapter 6.

### Air conditioning

In all seasons, the air conditioning should only be used with the windows closed. However, if the interior temperature remains high after a prolonged period parked in the sun, first ventilate the passenger compartment for a few minutes.




Use the AUTO mode as much as possible as it permits optimised control of all of the functions: air flow, passenger compartment comfort temperature, air distribution, air intake mode or air recirculation in the passenger compartment. Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in perfect working order.

It is normal that the condensation created by the air conditioning system results in a flow of water which may form a puddle under the vehicle when parked.

If the system does not produce cold air, do not use it and contact a CITROËN dealer or a qualified workshop.



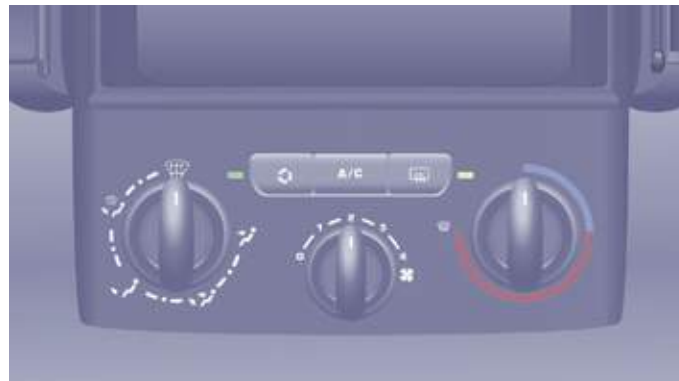

## DEMISTING AND DEFROSTING

### Manual mode



Turn the control to this air distribution setting.



Turn the control to this temperature setting.



Increase the air flow setting.



Press the air conditioning button.



Returning to exterior air intake open permits renewal of the air in the passenger compartment (LED off).

<https://www.automotive-manuals.net/>



**Demisting the rear screen and/or mirrors**

Pressing this button, with the engine running, activates the rapid demisting - defrosting of the rear screen and/or electric mirrors.

This function switches off:

- when the button is pressed,
- when the engine is switched off,
- automatically to prevent excessive energy consumption.




**Automatic air conditioning: visibility programme**

The comfort programme (AUTO) may not be sufficient to quickly demist or defrost the windows (humidity, several passengers, ice).

In this case, select the visibility programme. The visibility programme indicator lamp comes on.

It activates the air conditioning, the air flow, the defrosting of the rear screen and provides optimum distribution of the ventilation to the windscreen and side windows.

It deactivates the air recirculation.

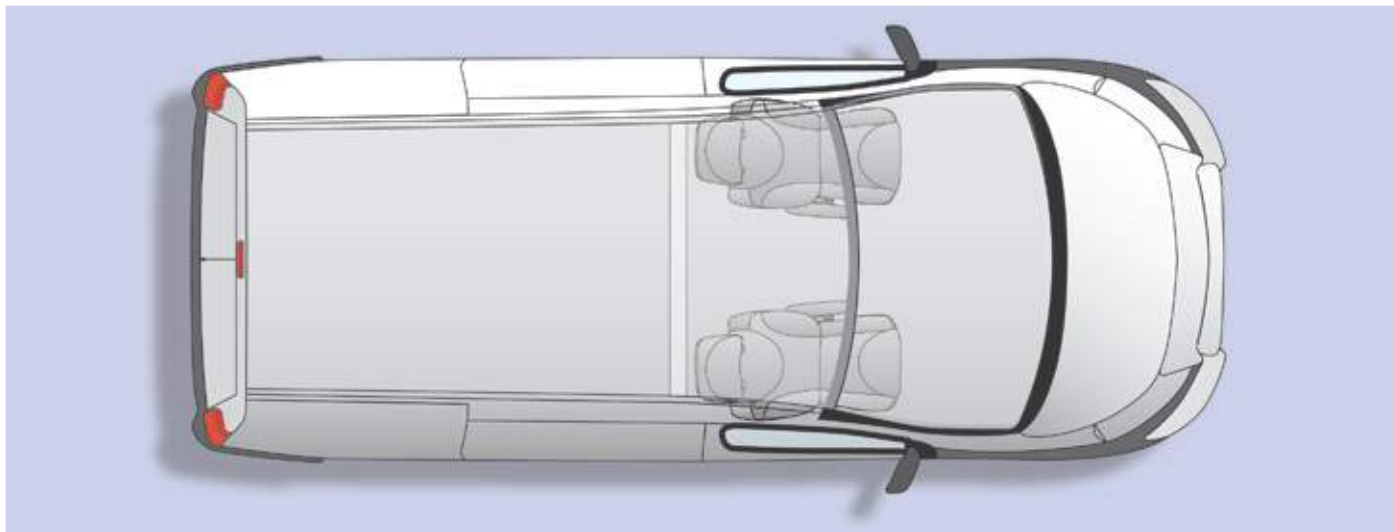

## ADDITIONAL HEATING

### Coolant circuit heater

This is an additional and separate system which heats the Diesel engine cooling system to make starting easier.

It improves the demisting and defrosting performance.

Vehicles fitted with an HDi engine may be fitted with a heater. When the engine is at idle or the vehicle is stationary, it is normal to notice a high-pitched whistling noise and a slight emission of smoke and odour.

### Good practice

To avoid any risk of poisoning or asphyxiation, the heater must not be used, even for short periods, in an enclosed space such as a garage or workshop which is not fitted with an exhaust gas extraction system.


Do not park the vehicle on an inflammable surface (dry grass, dead leaves, paper...), there is a risk of fire.

The temperature near the heater must not exceed 120 °C. A temperature higher than this (for example in the case of painting in an oven) could damage the components of the electronic circuits.

The heater is supplied by the vehicle's fuel tank. Ensure that the low fuel warning lamp is not on.

<https://www.automotive-manuals.net/>

## Ventilation

 Have the heater checked at least once a year at the beginning of winter.

Maintenance and repairs should only be carried out by a CITROËN dealer or a qualified workshop. Use recommended replacement parts only.



<https://www.automotive-manuals.net/>



## FRONT SEATS

Depending on the version and configuration of your vehicle, different front seats are fitted, either:

- a driver's seat and a passenger seat,
- an individual driver's seat and a two-seat passenger bench.

Depending on the models, the following adjustments are available:



### 1 - Forwards/backwards adjustment

Lift the bar and slide the seat forwards or backwards.



### 2 - Seat back angle adjustment

Pull the lever upwards and set the required angle.



### 3 - Driver's seat height adjustment

Depending on the version and configuration of your vehicle, you have either:

- a passive adjustment: pull the handle upwards then take your weight off the seat to raise, or push on the seat to lower,



- an active adjustment: operate the handle upwards or downwards until the desired position is reached.



#### 4 - Driver's seat lumbar adjustment

Move the lever up or down to obtain the required position.



#### Head restraint height adjustment

To raise or lower the restraint, pull it forwards, then slide it.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

To remove it, set it in the high position, press the tabs and pull upwards and forwards at the same time.

To re-install, engage the head restraint rods in the holes, making sure they are aligned with the seat back.



Never drive with the head restraints removed; they must be in place and correctly adjusted.



#### Adjustable armrest

To place the armrest in its rest position:

- raise it until it is in the centreline of the seat back.

To place the armrest in a position for use:

- fold it down fully,
- raise it slowly to the required position,
- if you pass the required position, raise it fully then repeat the operations above.

#### Front heated seat controls



Press the corresponding control, located on the overhead storage unit.

The temperature is controlled automatically.

Pressing a second time stops operation.



## 2-SEAT FRONT BENCH

If your vehicle is fitted with this bench seat, it is fixed and has a 3rd seat belt.

### Head restraint

Press the tab to adjust the height of the head restraint.

To remove the head restraint, press the tabs and raise the head restraint.

The adjustment is correct when the upper edge of the head restraint is level with the top of your head.

Never drive with the head restraints removed; they must be in place and adjusted correctly.





<https://www.automotive-manuals.net/>



## PRACTICAL INFORMATION

### CAB FITTINGS

Depending on the vehicle's equipment, the various fittings below enhance your cab.

#### Sun visor

To prevent dazzle from ahead, fold the sun visor down.

A pocket is provided in the driver's sun visor for storing toll cards, tickets, ...




#### Glove box

This is fitted with a lock, you can lock it using the key.

It contains three sockets for the connection of portable electronic equipment (video equipment, ...) if the vehicle is fitted with a colour screen.

It also contains cup holders and compartments for storing maps, a packet of cigarettes, an A4 format document, a pen, etc.

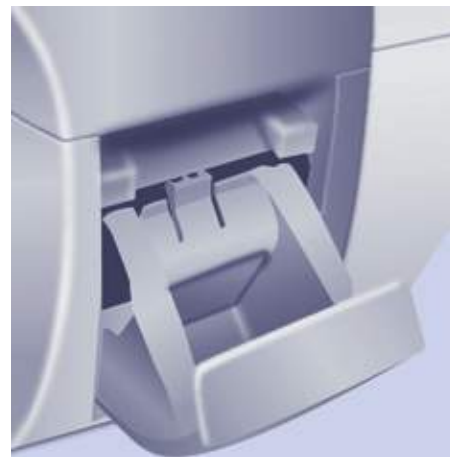

#### Storage compartment



### Ashtray

#### 12 volt socket

The maximum power of the socket, which is of the cigarette lighter type, is 120 W.



### Storage tray and bottle holder (1.5 L)

Any liquid carried in an open receptacle (cup or other) may be spilt, with the risk of damage to switches and controls at the driving position and centre console. "Take care".



### Ticket storage

According to the configuration of the vehicle.



### Overhead storage unit

This is located above the sun visors and has two compartments for storing a jumper, a file, ...

Be aware that storing a hard object in direct contact with the compartment may result in noise.

Tip: the central cavity of the overhead storage unit, located in the extension of the vehicle's roof between the rear space and the cab, allows long objects to be carried. Take care to support and wedge them securely.

The tunnel may be added to by an internal rack, offered as an accessory.

For raised vehicles, a shelf located above the overhead storage unit can be used to store small objects and materials (straps, cloths, gloves, helmets, etc...).



Front courtesy lamp

## COURTESY LAMPS

### Automatic operation

The front courtesy lamp comes on when the key is removed from the ignition, when the vehicle is unlocked, when one of the front doors is opened and for location of the vehicle using the remote control.

It goes off gradually after the ignition is switched on and when the vehicle is locked.



Permanently on, ignition on.



Rear courtesy lamp



Cab: comes on when one of the front doors is opened.



Load space: comes on when one of the rear doors is opened.  
If the doors remain open for a few minutes, the courtesy lamps go off.



Permanently off.




Front individual reading lamps

**i** These are switched on and off by means of a manual switch, with the ignition on.

### Areas for toll cards / car park tickets

The athermic windscreen has two non-reflective zones located either side of the base of the interior mirror.

They are intended for affixing toll cards and/or car park tickets.

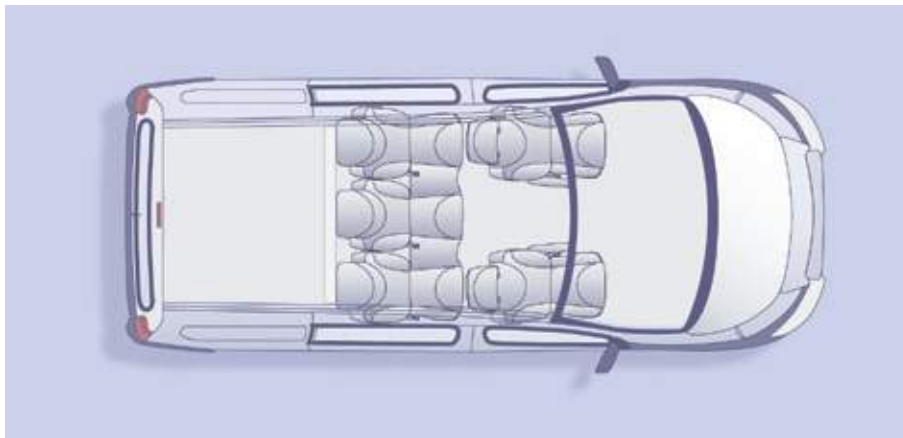

## CREW CAB

### Bench seat

The crew cab consists of a 3-seat bench, located in row 2, the one-piece back of which is fixed to the "load retainer" glazed partition.

Access to the rear seats is via the sliding side door.

### Good practice

The rear seat belt stalks are not designed for securing the load transported. Use the lashing rings on the floor only.

The bench seat of the crew cab is not suitable for the installation of a child seat.

### Head rests and seat belts

Each seat has a head rest adjustable for height and angle.

The three seats are equipped with inertia reel seat belts. The seat belts are integral with the backrest of the bench seat.

Ensure that the seat belt is attached to the correct buckle.

For more information on the use of this equipment, refer to "Seat belts" in section 4.



### Rear side glasses

If fitted to your vehicle, the side glasses can be opened.

Squeeze the two controls together then slide the window. There are 4 position notches.

When driving, the glass should be closed or secured at one of the 4 notches.

## LOAD SPACE FITTINGS

Depending on the vehicle's equipment, the various fittings below enhance your load space.



### Lashing rings

Use the lashing rings on the rear floor to secure your loads.

As a safety precaution in case of sharp braking, you are advised to place heavy objects as far forwards towards the cab as possible.

You are advised to immobilise the load by securing it firmly using the lashing rings on the floor.



### Locations for lashing rails

Locations for fitting a lashing rail are available on each side of the vehicle.

### Trims

The lower parts of the sides are fitted with load protection trims.

### Roof box on raised version

This is a storage compartment located in the load space, above the cab roof.



**12 volt socket**

This operates with the ignition on.  
Maximum power: 120 W.



**Load retainer**

On the floor, behind the front seats, a horizontal partition protects the driver and front passengers against the risk of load movement.

Panel or glazed separation partitions permit separation of the load space from the cab.



**Ladder type vertical separation or partition**

Behind the driver's seat, a ladder type vertical separation or partition protects the driver against the risk of load movement.





## REAR SUSPENSION

Two types of suspension are available.

### Metal suspension

This equipment adopts long movement limiters which make it possible to guarantee stable behaviour both when loaded and when empty. No action on your part is required except to ensure that maintenance is carried out and that the authorised loads are complied with.

### Rear suspension with pneumatic height correction

If fitted on your vehicle, this type of suspension regulates the variations in the height of the rear platform of your vehicle

irrespective of the weight of the load, within the limit of the authorised values. On board, the increasing or lightening of the load on the vehicle's platform is detected by two height sensors. When all of the doors are closed, the sensors trigger the automatic height correction and determine the optimum height of the sill for the vehicle's driving conditions.

### Two functions



1. Automatic height correction
2. Manual height correction

### 1 - Automatic correction of the height of the rear sill

The pneumatic suspension automatically regulates the variations in the height of the rear platform of your vehicle.



A red warning light on your instrument panel flashes if the height is not at its optimum level and requires correction, drive slowly until this warning lamp goes off.

The automatic height correction is temporarily inactive:

- if a door / the tailgate is open,
- when braking or when stopped at a red traffic signal (brake pedal pressed).

### Deactivation of automatic height correction

The control which permits deactivation of automatic regulation is located on the right-hand side, at the rear of the vehicle.



With the vehicle stationary:

- press and hold,
- release the control.

Deactivation is confirmed by the LED which is on. It remains on for approximately 30 seconds.



You must deactivate automatic height correction manually in the following situations:

- when working underneath the vehicle,
- when changing a wheel,
- when the vehicle is being transported by lorry, train, ferry, boat, ...

### Return to automatic correction



With the vehicle stationary:

- press and hold,
- release the control.

Return to automatic height correction is confirmed by the LED which goes off.

According to the configurations, a beep may be heard during these operations.



### 2 - Manual correction of the height of the rear sill

If your vehicle is fitted with this adjustment, the control is located on the right-hand side at the rear of the vehicle.

This manual adjustment permits "lowering" or "raising" of the height of the sill of the rear platform to facilitate operations in a parking area.

This adjustment of the height of the sill is restricted by a lower limit and an upper limit.

Carry out these operations with the vehicle still stationary and:

- with the front and side doors closed,
- with the parking brake applied,
- do not leave your foot on the brake pedal.

#### First use

To initialise the function, press the control for approximately 2 seconds.



#### Lower: downwards adjustment of the platform sill

Press the control downwards continuously.

Release the button to stop the movement, "3 beeps" indicate that you have reached the maximum limit, the movement stops automatically.



#### Raise: upwards adjustment of the platform sill

Press the control upwards continuously.

Release the button to stop the movement, "3 beeps" indicate that you have reached the maximum limit, the movement stops automatically.

#### Return to the optimum sill height

Press the control up or down twice in succession, the opposite of the position of the load sill.

#### Malfunctions

If the load sill is not adjusted when the control is pressed, "3 beeps" indicate a malfunction for the following reasons:

- foot on the brake pedal with the key in the ignition,
- excessive use of the manual correction,
- low battery charge,
- other.

If the audible signal persists, contact a CITROËN dealer or a qualified workshop.

### Deactivation of manual height correction



With the vehicle stationary:

- press and hold,
- release the control.

Deactivation is confirmed by the LED which is on. It remains on for approximately 30 seconds.

### Return to manual height correction



With the vehicle stationary:

- press and hold,
- release the control.

Return to manual correction is confirmed by the LED which goes off.

According to the configuration, a beep may be heard during these operations.



You must deactivate the manual height correction in the following situations:

- when working underneath the vehicle,
- when changing a wheel,
- when the vehicle is being transported by lorry, train, ferry, boat, ...

### Good practice

When stationary and with the ignition key removed, excessive use of the system consumes battery power.

Driving with the height of the rear platform:

- too low, risks damaging the technical components underneath the vehicle,
- too high, risks unstable driving.

If you start and the warning lamp flashes, to switch it off:

- correct the position of the manual control which is still at the lower or upper limit,
- or drive slowly at above 6 mph (10 km/h), until height correction returns to automatic mode.

### Long term parking

Avoid parking for a long duration on ground which could present a potential obstacle as your vehicle could lower.

Following a long period out of use, the height of the platform may change due to the automatic height correction on unlocking or on opening one of your vehicle's doors.

### Warning lamp



Refer to the "Instruments and controls" section of chapter 2.



## MIRRORS AND WINDOWS

### MIRRORS

The mirror is convex to broaden the field of side vision. Objects observed are, in reality, closer than they appear. Therefore, take this into account in order to judge the distance correctly.

#### Electric door mirrors

- Move switch **A** to the right or to the left to select the corresponding mirror.
- Move knob **B** in all four directions to adjust.
- Return switch **A** to the centre position.



#### Electric folding / unfolding

If your vehicle is fitted with this function, the mirrors can be folded or unfolded electrically from the inside, with the vehicle parked and the ignition on:

- Place switch **A** in the centre position.
- Pull switch **A** rearwards.

#### Heated mirrors

If your vehicle is fitted with this function, press the rear screen demisting button.



#### Manual door mirrors

Move the lever in all four directions to adjust.

When the vehicle is parked, the door mirrors can be folded back manually.

If the mirror casing has come out of its initial location, with the vehicle stationary, reposition the mirror casing manually or use the electric folding switch.

There is no risk of breakage even in the presence of ice.




### Manual rear view mirror

The rear view mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.

<https://www.automotive-manuals.net/>

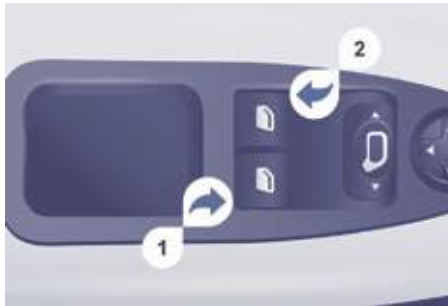

## ELECTRIC WINDOWS

1. Driver's electric window control
2. Passenger electric window control


There are two operating modes:

### Manual mode

Press or pull the control, without passing the point of resistance. The window stops when you release the control.

### Automatic mode

Press or pull the control, beyond the point of resistance. The window opens or closes fully when the control is released. Pressing the control again stops the movement of the window.

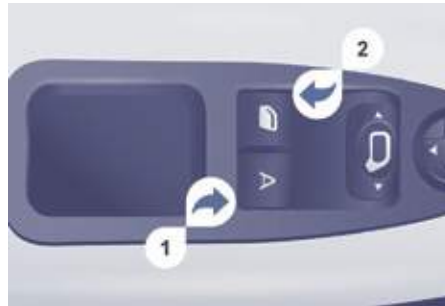

The electrical functions of the electric windows are deactivated:

- approximately 45 seconds after the ignition is switched off,
- after one of the front doors is opened, if the ignition is off.

### Safety anti-pinch

If your vehicle is fitted with the safety anti-pinch function, when the window rises and meets an obstacle, it stops and partially lowers.

In the event of unwanted opening of the window on closing, press the control until the window is fully open. Within the next 4 seconds, pull the control until the window is fully closed.

The safety auto-reverse does not operate during these operations.

## Reinitialisation

Following reconnection of the battery, the safety anti-pinch function must be reinitialised.

Lower the window fully, then raise it, it will rise in steps of a few centimetres each time the control is pressed. Repeat the operation until the window is fully closed.

Continue to press the control for at least one second after the window closed position has been reached.

The safety anti-pinch does not operate during these operations.


## Good practice

If the electric windows meet an obstacle during operation, you must reverse the movement of the window. To do this, press the control concerned.

When the driver operates the passenger electric window controls, he must ensure that no one is preventing correct closing of the windows.

The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

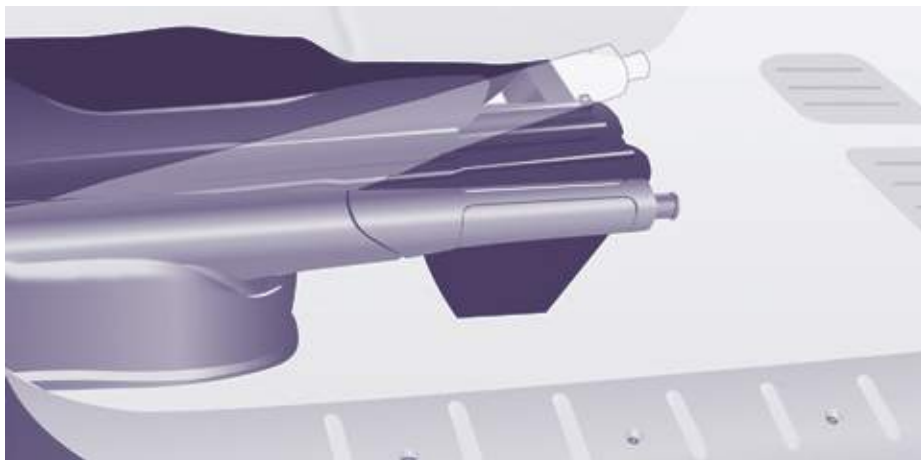

## DRIVING SAFELY

### PARKING BRAKE

#### Applying

Pull the parking brake lever up to immobilise your vehicle.

Check that the parking brake is applied firmly before leaving the vehicle.



If the parking brake is still on or has not been released properly, this is indicated by this warning lamp which comes on on the instrument panel.

When parking on a slope, direct your wheels towards the pavement and pull the parking brake lever up.

There is no advantage in engaging a gear after parking the vehicle, particularly if the vehicle is loaded.

Pull on the parking brake lever, **only with the vehicle stationary**.

In the exceptional case of use of the parking brake when the vehicle is moving, apply the brake by pulling gently to avoid locking the rear wheels (risk of skidding).

#### Releasing

Pull the lever and press the button to lower the parking brake lever.

### HAZARD WARNING LAMPS

Press this button, the direction indicators flash.

They can operate with the ignition off.

The hazard warning lamps should only be used in dangerous situations, when stopping in an emergency or when driving in unusual conditions.



### REAR PARKING SENSORS

The audible and/or visual rear parking sensor system consists of four proximity sensors, installed in the rear bumper. The sensors detect any obstacle which enters the field: person, vehicle, tree, fence, behind the vehicle during the manoeuvre.

Certain objects detected at the beginning of the manoeuvre will no longer be detected at the end of the manoeuvre due to the blind spots between and below the sensors. Examples: stake, roadworks cone or pavement post.




### Engage reverse gear

An audible signal confirms the activation of the system by engaging reverse gear.

The proximity information is indicated by an audible signal which becomes more rapid as the vehicle approaches the obstacle. When the distance between the rear of the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous.

### Display in the screen

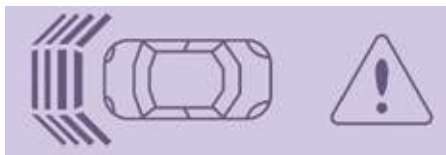

### Stop the assistance

### Activation / Deactivation



You can activate or deactivate the system by pressing this button.

The activation or deactivation of the system is stored when the vehicle stops.

### Malfunction

In the event of a malfunction, when reverse gear is engaged the LED in the button comes on, accompanied by an audible signal and a message in the screen. Contact a CITROËN dealer or a qualified workshop.

### Good practice

In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow.

The system will be deactivated automatically if a trailer is being towed or if a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by CITROËN).

The parking assistance cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

You are advised to deactivate the system if your vehicle is fitted with a rear ladder or if you are transporting a load which exceeds the length of the vehicle.





## HORN

Press the centre of the steering wheel.

## ANTI-LOCK BRAKING SYSTEM (ABS - EBFDF)

The ABS and EBFDF (electronic brake force distribution) systems improve the stability and manoeuvrability of your vehicle on braking, in particular on poor or slippery surfaces.

The ABS prevents locking of the wheels, the EBFDF provides control of the braking pressure wheel by wheel.

## Good practice

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock. It does not reduce the braking distance.

On very slippery surfaces (ice, oil, etc...) the ABS may increase the braking distance. When braking in an emergency, do not hesitate to press the brake pedal firmly, without releasing the pressure, even on a slippery surface, you will then be able to continue to manoeuvre the vehicle to avoid an obstacle.

Normal operation of the ABS may be felt by slight vibration of the brake pedal.

When changing wheels (tyres and rims), ensure that these are recommended by CITROËN.



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, it indicates a malfunction of the

ABS which could result in a loss of control of the vehicle on braking.



If this warning lamp comes on, together with the brake and STOP warning lamps, accompanied by an audible signal and a message in the screen, it indicates a malfunction of the electronic brake force distribution which could result in a loss of control of the vehicle on braking.

## Stop as soon as it is safe to do so.


In both cases, contact a CITROËN dealer or a qualified workshop.

## EMERGENCY BRAKING ASSISTANCE SYSTEM (EBA)

In an emergency, this system enables the optimum braking pressure to be reached more quickly, press the pedal firmly without releasing it. It is triggered by the speed at which the brake pedal is activated.

This alters the resistance of the brake pedal under your foot.

To prolong the operation of the emergency braking assistance system: keep your foot on the brake pedal.

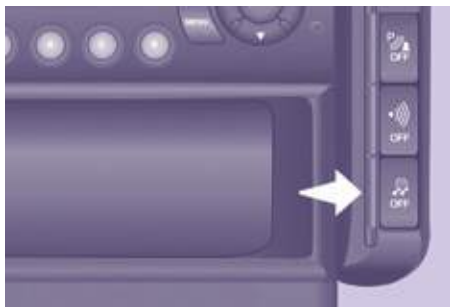

## ANTI-SLIP REGULATION (ASR) AND DYNAMIC STABILITY CONTROL (DSC)

These systems are linked and complement the ABS.

The ASR system is very useful for maintaining optimum drive and avoiding losses of control of the vehicle on acceleration.

The system optimises drive to prevent the wheels skidding, by acting on the brakes of the drive wheels and on the engine. It also allows the directional stability of the vehicle to be improved on acceleration.

Use the DSC to hold your course without attempting to countersteer.

If there is a variation between the trajectory followed by the vehicle and that required by the driver, the DSC system automatically acts on the engine and the brake of one or more wheels, in order to put the vehicle back on course.

### Operation



The warning lamp flashes when operation of the ASR or DSC is triggered.

### Deactivation

In certain exceptional conditions (starting the vehicle when stuck in mud or snow, or on loose ground...), it could prove useful to deactivate the ASR and DSC systems to make the wheels spin and regain grip.



- Press the button, located on the centre console.
- The LED comes on: the ASR and DSC systems no longer operate.

### They engage again:

- automatically above 30 mph (50 km/h),
- manually by pressing the button again.

### Operating fault



When a malfunction of the systems occurs, the warning lamp and the LED come on, accompanied by an audible signal and a message in the screen.

Contact a CITROËN dealer or a qualified workshop to have the system checked.

The warning lamp may also come on if the tyres are under-inflated. Check the pressure of each tyre.

### Good practice

The ASR/DSC systems offer increased safety during normal driving, but should not encourage the driver to take risks or to drive at high speed.

The operation of these systems is assured only if the recommendations of the manufacturer regarding the wheels (tyres and rims), the braking components, the electronic components and fitting and repair procedures are observed.

After an impact, have these systems checked by a CITROËN dealer or a qualified workshop.



### "GRIP CONTROL"

On snow, mud and sand, this traction system, associated with the Michelin® Agilis 51 M+S all terrain tyres, provides a compromise between safety, adhesion and traction.

It allows progress to be made in most conditions of low adhesion.



The accelerator pedal must be pressed sufficiently so that the engine power can be used to effectively manage the various parameters.

### Correct use

Your vehicle is designed principally to drive on tarmac roads but it allows you to drive on other less passable terrain occasionally.

However, particularly when your vehicle is heavily laden, it does not permit off-road activities such as:

- crossing and driving on ground which could damage the underbody or tear off components (fuel pipe, fuel cooler, ...), particularly by obstacles or stones,
- driving on ground with steep gradients and poor grip,
- crossing a stream.

## Driving safely



This **DSC** mode is calibrated for a low level of skidding, based on different conditions of grip encountered on the road.

When the ignition is switched off, the system returns automatically to DSC mode.



This **DSC OFF** mode is only suitable for specific conditions encountered when moving off or at low speed.

Above 30 mph (50 km/h) the system returns to DSC mode automatically.



This **snow** mode allows the vehicle to adapt its strategy to the conditions of grip encountered for each of the two front wheels, on moving off.

When moving, the system optimises wheelspin to provide the best acceleration possible for the grip available.



This **off-road** mode (mud, wet grass...) allows, when moving off, considerable wheelspin on the wheel with the least grip to favour clearing of the mud and regain "grip". At the same time, the wheel with the most grip is controlled in such a way as to transmit as much torque as possible.

When moving, the system optimises wheelspin to meet the driver's requirements as fully as possible.



This **sand** mode allows a little wheelspin on the two driving wheels at the same time to allow the vehicle to move forward and reduces the risk of getting stuck in the sand.

Do not use the other modes on sand as the vehicle may become stuck.



## SEAT BELTS

### Height adjustment

Squeeze the control with the return and slide the assembly on the driver's seat side and on the individual passenger seat side.

If your vehicle is fitted with a front bench, the height of the seat belt associated with the centre seat cannot be adjusted.

### Fastening

Pull the strap, then insert the tongue into the buckle.

Check that the seat belt is fastened correctly by pulling the strap.



### Unfastening

Press the red button.

### Driver's seat belt not fastened warning lamp



When the vehicle is started, this warning lamp comes on if the driver has not fastened their seat belt.

### Passenger seat belt not fastened warning lamp



If your vehicle is fitted with a front passenger seat, when the vehicle is started, this warning lamp comes on if the passenger has not fastened their seat belt.

### Good practice

The driver must ensure that passengers use the seat belts correctly and that they are all strapped in securely before moving off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

The seat belts are fitted with an inertia reel which automatically adjusts the length of the strap to your size.

Do not use accessories (clothes pegs, clips, safety pins, etc.) which allow the seat belt straps to fit loosely.

Ensure that the seat belt has reeled in correctly after use.

After folding or moving a seat or a rear bench seat, ensure that the seat belt has reeled in correctly and that the buckle is ready to accommodate the tongue.

Depending on the nature and seriousness of any impact, the pretensioning device may be deployed before and independently of inflation of the airbags. It instantly tightens the seat belts against the body of the occupants.

Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

## Seat belts

The force limiter reduces the pressure of the seat belt against the body of the occupants.

The pretensioning seat belts are active when the ignition is switched on.

The inertia reels are fitted with a device which automatically locks the strap in the event of a collision or emergency braking or if the vehicle rolls over.

You can unfasten the seat belt by pressing the red button on the buckle. Guide the seat belt after unfastening.

The airbag warning lamp comes on if the pretensioners are deployed. Contact a CITROËN dealer or a qualified workshop.

In order to be effective, a seat belt must:

- restrain one person only,
- must not be twisted, check by pulling in front of you with an even movement,
- be tightened as close to the body as possible.

The upper part of the seat belt should be positioned in the hollow of the shoulder.

The lap part should be placed as low as possible on the pelvis.

Do not invert the seat belt buckles as they will not fulfil their role completely. If the

seats are fitted with armrests, the lap part of the seat belt should always pass under the armrest.

Check that the seat belt is fastened correctly by pulling the strap firmly.

### Recommendations for children:

- use a suitable child seat if the passenger is less than 12 years old or shorter than one metre fifty,
- never allow a child to travel on your lap, even with the seat belt fastened.



For more information on child seats, refer to the "Children on board" section of chapter 4.

In accordance with current safety regulations, your CITROËN dealer can guarantee all work or any checks, from testing to maintenance, on your seat belt equipment.

Have the seat belts checked regularly (even after a minor impact) by a CITROËN dealer or a qualified workshop: they must not show any signs of wear, cutting or fraying and they must not be converted or modified.



Clean the seat belt straps with soapy water or a textile cleaning product, sold by CITROËN dealers.


## FRONT SEAT BELTS

### With front airbags

The front seats are fitted with pretensioners and force limiters.

### Without front airbag

If your vehicle is fitted with a front bench without front airbag, the centre passenger's seat belt does not have a pretensioner.

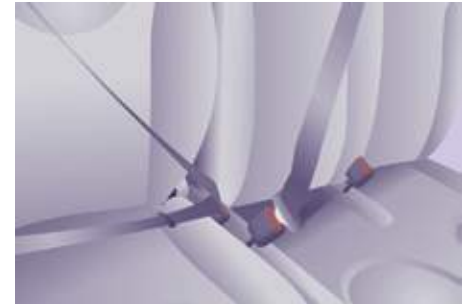


### With bench seat

If your vehicle is fitted with a front bench seat, take care to fasten the correct seat belt using the correct buckle. Do not mix the driver's seat belt or buckle with the buckle or seat belt of the centre seat.



<https://www.automotive-manuals.net/>

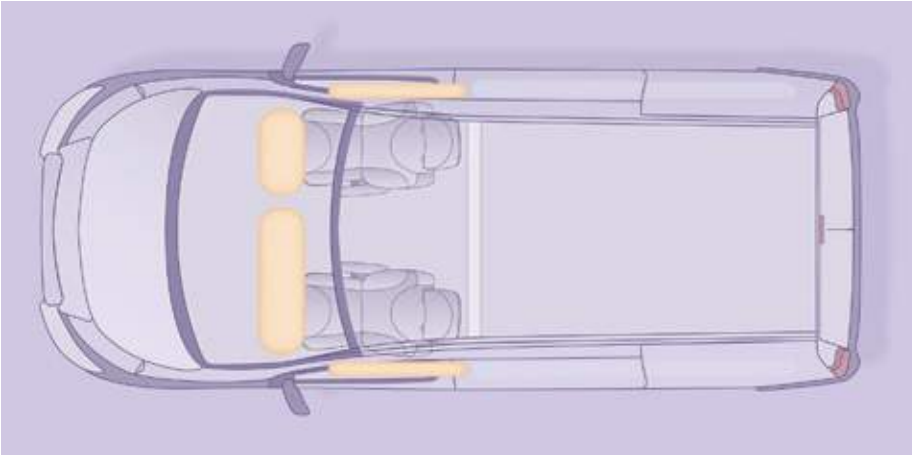

## AIRBAGS

The airbags have been designed to maximise the safety of the occupants in the event of a serious collision; they work in conjunction with the force limiting seat belts. In the event of a serious collision, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the airbags inflate instantly and contribute towards better protecting the occupants of the vehicle. Immediately after the impact, the airbags deflate rapidly, so that they do not hinder the visibility of the occupants nor their possible exit from the vehicle.

- in the event of a minor or rear impact and in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to contribute towards your protection in these situations.

The seriousness of the collision depends on the nature of the obstacle and the speed of the vehicle at the moment of impact.

**i** Airbags only operate when the ignition is switched on.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not operate.

The deployment of an airbag or airbags is accompanied by a slight discharge of smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation. The noise of the detonation may result in a slight loss of hearing for a short time.



**+** It is imperative that the passenger's airbag is deactivated if a child seat is installed facing rearwards. Refer to the "Children on board" section of chapter 4.



### Good practice

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hinder the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel at a CITROËN dealer or a qualified workshop.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. In fact, the bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

### Lateral airbags

Only put recommended covers on the seats. These will not hinder inflation of the lateral airbags. Contact a CITROËN dealer or a qualified workshop.

Do not fix or attach anything to the seat backs. This could cause injury to the chest or arms when the lateral airbag inflates.

Do not sit with the upper part of the body any nearer to the door than necessary.

### Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Do not allow passengers to place their feet on the dashboard, they risk serious injury if the airbag is deployed.

Smoke as little as possible as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.



### Lateral airbags


If fitted on your vehicle, this is a system which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each lateral airbag is fitted in the front seat back frame, on the door side.

### Deployment

It is deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the front occupant of the vehicle and the corresponding door trim panel.

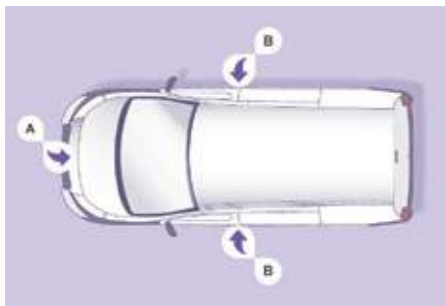

### Impact detection zones

- A.** Front impact zone.
- B.** Side impact zone.

**i** In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

The airbag is not deployed in the event of a rear or front collision.

### Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the screen, contact a CITROËN dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



### Front airbags

The front airbags are fitted in the centre of the steering wheel for the driver and in the dashboard for the front passenger.

### Deployment

They are deployed, except the passenger's front airbag if it has been deactivated, in the event of a serious front impact applied to all or part of the front impact zone **A** in the longitudinal centreline of the vehicle on a horizontal plane directed from the front towards the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion their forward movement.




### Deactivation

The passenger's front airbag alone can be deactivated:

- **with the ignition switched off**, insert the key into the passenger's airbag deactivation switch,
- turn it to the **"OFF"** position,
- then remove the key keeping the switch in the new position.



The airbag warning lamp in the instrument panel is on while the airbag is deactivated.

 To ensure the safety of your child, it is essential to deactivate the passenger's airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured if the airbag were to inflate.

### Reactivation


In the **"OFF"** position, the passenger's airbag will not be deployed in the event of an impact.

As soon as the child seat is removed, turn the airbag switch to the **"ON"** position to reactivate the airbag and thus ensure the safety of your passenger in the event of an impact.

### Front airbag fault



If this warning lamp comes on, accompanied by an audible signal and a message in the screen, contact a CITROËN dealer or a qualified workshop to have the system checked.


 If the two airbag warning lamps are on continuously, do not install a "rearward facing" child seat. Contact a CITROËN or a qualified workshop.

## GENERAL POINTS ON CHILD SEATS

Although one of CITROËN's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please follow these precautions:


- all children under the age of 12 or less than one metre fifty tall must travel in approved child seats suited to their weight, on seats fitted with a seat belt or ISOFIX mountings,
- statistically, the safest seats in your vehicle for the transportation of children are the rear seats,
- a child weighing less than 9 kg must travel in the "rearward facing" position both in the front and in the rear,
- the passenger must not travel with a child on their lap.

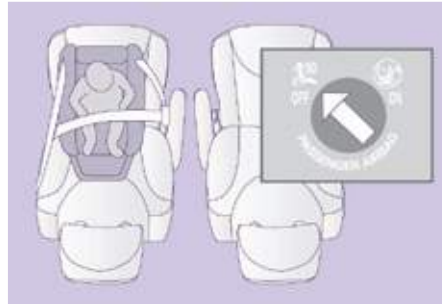

### Installing a child seat at the front

#### "Rearward facing"

When a "rearward facing" child seat is installed on the front passenger seat, it is essential that the passenger's front airbag is deactivated. Otherwise, the child would risk being seriously injured or even killed if the airbag were deployed.

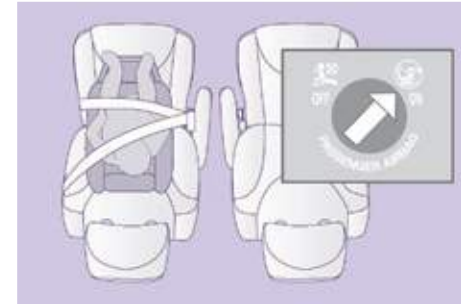


#### "Forward facing"

When a "forward facing" child seat is installed on the front passenger seat, leave the passenger's front airbag activated.

The rules for carrying children are specific to each country. Consult the current legislation in your country.

Please consult the list of seats approved in your country. The Isofix mountings, the rear seats, the passenger airbag and the deactivation of this airbag depend on the version sold.


 The child seats function and the passenger's front airbag deactivation function are common to the entire CITROËN range.

If the passenger's front airbag is not deactivated, the installation of a "rearward facing" child seat in the front is strictly prohibited.




### DEACTIVATING THE PASSENGER'S FRONT AIRBAG

The warning label present on both sides of the passenger's sun visor repeats this advice. In line with current legislation, the following tables contain this warning in all of the languages required.

 Never install a rearward facing child restraint system on a seat protected by an active front airbag. This could cause the death of the child or serious injury.



Passenger airbag OFF

 For information on deactivating the passenger's front airbag, refer to the "Airbags" section.

## Child safety

AR	لإجلال الطفل الوجه باتجاه الورااء على مقعد سيارة مجهز بإسائة أمان هوائية أمامية مغلقة، فقد يؤدي هذا إلى التسبب بموت الطفل أو بإصابات خطيرة لديه.
BG	НИКОГА НЕ инсталирайте детско столче на седалка с АКТИВИРАНА предна ВЪЗДУШНА ВЪЗГЛАВНИЦА. Това можеда причини СМЪРТ или СЕРИОЗНО НАРАНЯВАНЕ на детето.
CS	NIKDY neumístujte dětské zádržné zařízení orientované směrem dozadu na sedadlo chráněné AKTIVOVANÝM čelním AIRBAGEM. Hrozí nebezpečí SMRTI DÍTĚTE nebo VÁŽNĚHO ZRANĚNÍ.
DA	Brug aldrig en bagudvendt barnestol på et sæde der er beskyttet af en aktiv airbag. Død eller alvorlig skade på barnet kan forekomme.
DE	Verwenden Sie NIEMALS einen Kindersitz oder Babyschale gegen die Fahrtrichtung bei AKTIVIERTEM Airbag, TOD oder ERNSTHAFTE VERLETZUNGEN können die Folge sein.
EL	Μη χρησιμοποιείτε ΠΟΤΕ παιδικό κάθισμα με την πλάτη του προς το εμπρός μέρος του αυτοκινήτου, σε μια θέση που προστατεύεται από ΜΕΤΩΠΙΚΟ αερόσακο που είναι ΕΝΕΡΓΟΣ. Αυτό μπορεί να έχει σαν συνέπεια το ΘΑΝΑΤΟ ή το ΣΟΒΑΡΟ ΤΡΑΥΜΑΤΙΣΜΟ του ΠΑΙΔΙΟΥ
EN	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur
ES	NO INSTALAR NUNCA EL SISTEMA DE RETENCIÓN PARA NIÑOS DE ESPALDAS AL SENTIDO DE LA CIRCULACIÓN SOBRE UN ASIENTO PROTEGIDO CON UN COJÍN INFLABLE FRONTAL ( AIRBAG ) ACTIVADO. ESTO PUEDE CAUSAR LA MUERTE DEL BEBE O HERIRLO GRAVEMENTE.
ET	Ärge kasutage kunagi lapse turvatooli seljaga sõidusuunas sõiduki istmel mis on kaitstud AKTIVEERITUD TURVAPADJAGA. See võib põhjustada lapsele RASKEID VIGASTUSI või SURMA.
FI	ÄLÄ KOSKAAN aseta lapsen turvaistuinta selkä ajosuuntaan istuimelle, jonka edessä suojana on käyttöön aktivoitu TURVATYÖNY. Sen laukeaminen voi aiheuttaa LAPSEN KUOLEMAN tai VAKAVAN LOUKKAANTUMISEN.
FR	NE JAMAIS installer de système de retenue pour enfants faisant face vers l'arrière sur un siège protégé par un COUSSIN GONFLABLE frontal ACTIFÉ. Cela peut provoquer la MORT de l'ENFANT ou le BLESSER GRAVEMENT
HR	NIKADA ne postavljati dječju sjedalicu leđima u smjeru vožnje na sjedalo zaštićeno UKLJUČENIM prednjim ZRAČNIM JASTUKOM. To bi moglo uzrokovati SMRT ili TEŠKŪ OŽLJEDU djeteta.
HU	SOHA ne használjon menetírányrak háttal beszerelt gyermekülést olyan ülésen, amely AKTIVÁLT ÁLLAPOTÚ (BEKAPCSOLT) FRONTLÉGSÁKKAL van védve. Ez a gyermek halálát vagy súlyos sérülését okozhatja.
IT	NON installare MAI seggiolini per bambini posizionati in senso contrario a quello di marcia su un sedile protetto da un AIRBAG frontale ATTIVATO. Ciò potrebbe provocare la MORTE o FERITE GRAVI al bambino.
LT	NIEKADA neįrenkite vaiko prilaikymo priemonės su atgal atgręžtu vaiku ant sėdynės, kuri saugoma VEIKIANČIOS priekinės ORO PAGALVĖS. Išsiskleidus oro pagalvei vaikas gali būti MIRTINAI arba SUNKIAI TRAUMUOTAS.
LV	NAV PIEĻĀUJAMS uzstādīt uz aizmuguri vērstu bērnu sēdekļi priekšējā pasažiera vietā, kurā ir AKTIVIZĒTS priekšējais DROŠĪBAS GAISA SPILVENS. Tas var izraisīt BĒRNA NĀVI vai radīt NOPIETNUS IEVAINOJUMUS.

MT	Qatt m'għandek thalli tifel/tifla marbut f'siggu dahu lejn l-Airbag attiva, għalix tista' tikkawza korriment serju jew anke mewt lit-tifel/tifla
NL	Plaats NOOIT een kinderzitje met de rug in de rijrichting op een zitplaats waarvan de AIRBAG is INGESCHAKELD. Bij het afgaan van de airbag kan het KIND ERNSTIG OF DODELIJK GEWOND raken.
NO	Installer ALDRI et barnesete med ryggen mot kjøretningen i et sete som er beskyttet med en frontal AKTIVERT KOLLISJONSPUTE, BARNET risikerer å bli DREPT eller HARDT SKADET.
PL	NIGDY nie instalować fotelika dziecięcego w pozycji "tyłem do kierunku jazdy" na siedzeniu wyposażonym w CZOŁOWĄ PODUSZKĘ POWIETRZNA w stanie AKTYWNYM. W przeciwnym razie dziecko narażone będzie na ŚMIERĆ lub BARDZO POWAŻNE OBRAŻENIA CIAŁA w momencie wyzwolenia poduszki powietrznej
PT	NUNCA instale um sistema de retenção para crianças de costas para a estrada, num banco protegido por um AIRBAG frontal ACTIVADO. Esta instalação poderá provocar FERIMENTOS GRAVES ou a MORTE da CRIANÇA.
RO	Nu instalati NICIODATA un sistem de retinere pentru copii, dispus cu spatele in directia de mers, pe un loc din vehicul protejat cu AIRBAG frontal ACTIVAT. Aceasta ar putea provoca MOARTEA COPILULUI sau RANIREA lui GRAVA.
RU	ВО ВСЕХ СЛУЧАЯХ ЗАПРЕЩАЕТСЯ использовать обращенное назад детское удерживающее устройство на сиденье, защищенном ФУНКЦИОНИРУЮЩЕЙ ПОДУШКОЙ БЕЗОПАСНОСТИ, установленной перед этим сиденьем. Это может привести к ГИБЕЛИ РЕБЕНКА или НАНЕСЕНИЮ ЕМУ СЕРЬЕЗНЫХ ТЕЛЕСНЫХ ПОВРЕЖДЕНИЙ
SK	NIKDY nepoužívajte na prednom sedadle chránenom AKTÍVNYM AIRBAGOM detské zadrživacie zariadenie umiestnené v proti smere jazdy. Môže to spôsobiť SMŤ, alebo VÁŽNE ZRANENIE DIEŤAŤA.
SL	NIKOLI ne nameščajte otroškega sedeža s hrbtom v smeri vožnje, če je VARNOSTNA BLAZINA pred sprednjim sopotnikovim sedežem AKTIVIRANA. Takšna namestitvev lahko povzroči SMRT OTROKA ali HUDE POŠKODBE.
SR	NIKADA ne koristite dečje sedište koje se okreće unazad na sedištu zaštićenim AKTIVNIM VAZDUŠNIM JASTUKOM ispred njega, jer mogu nastupiti SMRT ili OZBILJNA POVREDA DETETA.
SV	Använd ALDRIG en bakåtvänd barnstol i ett säte skyddat av en AKTIV AIRBAG framför det. Det kan orsaka ALLVARLIGA eller DÖDLIGA skador på barnet.
TR	KEŞİNLKLE HAVA YASTIĞI AKTİF olan ön koltuğa yüzü arkaya dönük bir çocuk koltuğu yerleştirmeyiniz. Bu ÇOCUĞUN ÖLMESİNE veya ÇOK AĞIR YARALANMASINA sebep olabilir.

## CHILD SEATS RECOMMENDED BY CITROËN

CITROËN offers a range of recommended child seats which are **secured using a three point seat belt**:

### Group 0+: from birth to 13 kg



#### L1

"ROMER Baby-Safe Plus"

Installed in the rearward facing position.

### Groups 2 and 3: from 15 to 36 kg



#### L4

"KLIPPAN Optima"

From 22 kg (about 6 years), the booster is used on its own.



#### L5

"RÖMER KIDFIX"



Can be fixed on the vehicle's ISOFIX mountings.

The child is restrained by the seat belt.



## INSTALLING CHILD SEATS ATTACHED USING THE SEAT BELT

In line with European legislation, this table indicates the options for installing child seats secured using a seat belt and universally approved (a) for the weight of the child and the seat in the vehicle.

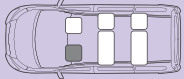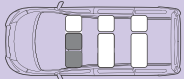Seat			Weight of the child and indicative age			
			Under 13 kg (groups 0 (b) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Row 1 (c) (d)		Individual seat	U	U	U	U
		Bench, outer seat	U	U	U	U
		Bench, centre seat	L1	-	L4, L5	L4, L5

- (a) Universal child seat: child seat that can be installed in any vehicle using the seat belt.
- (b) Group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat.
- (c) Consult the legislation in force in your country before installing your child on this seat.

- (d) When a "rearward facing" child seat is installed on the front passenger seat, the front passenger airbag must be deactivated. Otherwise the child risks being seriously injured or even killed if the airbag is deployed.
- When a "forward facing" child seat is installed on the front passenger seat, the front passenger airbag must remain active.

**U:** seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rearward facing" and/or "forward facing".

**L-:** only the child seats indicated can be installed in the seat in question (depending on country of sale).

**i** Remove and stow the head restraint before installing a child seat with backrest on a passenger seat.

Refit the head restraint once the child seat has been removed.

<https://www.automotive-manuals.net/>

## ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Check that there is no seat belt or seat belt buckle under the child seat, as this could destabilise the seat.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For the installation of a child seat using the seat belt, ensure that the seat belt is well tensioned on the child seat and that it is holding the child seat firmly against the vehicle's seat. If the passenger seat is adjustable, move it forward if necessary.

At the rear, always leave sufficient space between the front seat and:

- a "rearward facing" child seat,
- the feet of a child seated in a "forward facing" child seat.

For this, move the front seat forward and, if necessary, straighten its backrest as well.

For the optimum installation of a "forward facing" child seat, ensure that the back of the child seat is as close as possible to the backrest of the vehicle's seat, or in contact if possible.

The head restraint must be removed before installing a child seat with a backrest on the passenger seat.

Ensure that the head restraint is stowed or attached securely so that it is not thrown around the vehicle in the event of sharp braking.

Refit the head restraint as soon as the child seat is removed.

### Children at the front

The legislation on carrying a child on the front passenger seat is specific to each country. Refer to the legislation in force in your country.

Deactivate the passenger's airbag when a "rearward facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

### Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

CITROËN recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child Lock".

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds to the rear windows.



## TOWING A TRAILER, CARAVAN, BOAT, ETC...

**+** For more information about weights, refer to the administrative documents (registration document, ...) or to the "Weights" section of chapter 8.

### Driving advice

A towed vehicle must free wheel: gearbox in neutral.

### Distribution of loads

Distribute the load in the trailer so that the heaviest objects are as close as possible to the axle and the nose weight is close to the maximum authorised without, however, exceeding it.

### Cooling

Towing a trailer on a slope increases the coolant temperature.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

<https://www.automotive-manuals.net/>

## Towing a trailer

You should therefore use a high gear to lower the engine speed and reduce your speed.

In all cases, pay attention to the coolant temperature.

### Good Practice

In certain cases of particularly arduous use (towing the maximum load up a steep slope in high temperatures), the engine automatically limits its power. In this case, the air conditioning is automatically cut off to save engine power.



If the coolant temperature warning lamp comes on, stop the vehicle and switch off the engine as soon as possible.



See the "Levels" section of chapter 6.

### + Tyres

Check the tyre pressures of the towing vehicle (see the "Identification markings" section of chapter 8) and of the trailer, observing the recommended pressures.

### Brakes

Towing increases the braking distance. Drive at a moderate speed, change down early and brake gradually.

### Side wind

Sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

### ABS/DSC

The ABS or DSC systems only control the vehicle, not the trailer or caravan.

### Rear parking sensors

The parking sensors system does not function while the vehicle is towing.

## Towbar

We recommend the use of genuine CITROËN towbars and their harnesses, which have been tested and approved from the design stage of your vehicle, and that you entrust the fitting of this equipment to a CITROËN dealer.

If this equipment is not fitted by a CITROËN dealer, it is imperative that it is fitted using the electrical pre-equipment installed at the rear of the vehicle and in accordance with the manufacturer's instructions.

In accordance with the general instructions a reminder of which has been given above, we draw your attention to the risk associated with fitting a towbar or electrical accessory not recommended by CITROËN. Fitting such equipment could result in the failure of your vehicle's electronic system. Please obtain information from the Manufacturer before fitting this type of equipment.

## OTHER ACCESSORIES

**i** For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a CITROËN dealer is able to provide.

### ROOF BARS

Maximum load: 100 kilograms.


**i** Accessory not available on the H2 version.

### ROOF RACK

To install the transverse roof bars, use the fixings provided for this purpose.

Maximum load: 170 kilograms.

**i** Accessory not available on the H2 version.

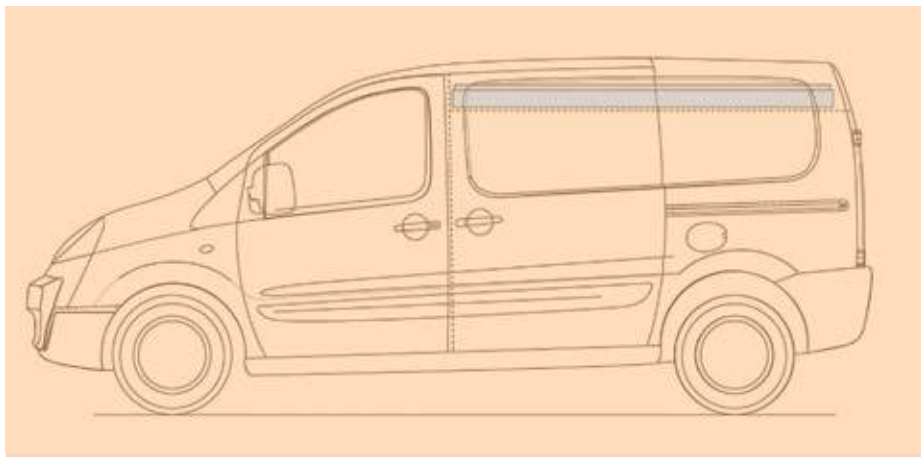

### INTERIOR RACK

This rack allows you to carry long items of low weight (electrical conduits, pipes, etc...).

## Equipment

### Range of trade equipment

Parts and Services technical information publishes an accessory catalogue offering various equipment and fittings, such as:

Roof bars for short, medium and long wheelbase (load retainers for all models).

Sill plate, loading roller, sill. Sill plate, loading roller, sill.

Towbar, towbar harness: trailer towbar which must be fitted by the network.

Roof bars for the various heights, roof bars, ladder.

Separation partitions and grilles, smooth, non-slip wooden protective floor.

Protective grilles, multimedia.

Another range is also available, structured around comfort, leisure and maintenance:

Anti-theft alarm, window engraving, first aid kit, high visibility safety vest, rear parking sensors, warning triangle, ...

Front seat covers compatible with airbags, bench, rubber mats, carpet mats, snow chains.

To prevent the mat from becoming caught under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never fit one mat on top of another.

Audio equipment, hands-free kit, speakers, CD changer, navigation, ...

Regardless of the audio and telematic equipment offered on the market, the technical constraints linked with the fitting of equipment of these families of products mean that the special features of the equipment and its compatibility with the capacities of the your vehicle's standard equipment must be taken into account. Please contact a dealer for information before fitting such equipment.

### Installation of radiocommunication transmitters

Before installing accessory radiocommunication transmitters with an external aerial on your vehicle, you are advised to contact a representative of the CITROËN marque.

The CITROËN dealer network can inform you of the specifications (frequency band, maximum output power, aerial position, specific installation conditions) of the transmitters which can be fitted, in accordance with the Motor Vehicle Electromagnetic Compatibility Directive (2004/104/CE).

Front mud flaps, rear mud flaps, ...

Screenwash, replacement fuses, wiper blades, interior and exterior cleaning and maintenance products, replacement bulbs, ...



The fitting of electrical equipment or accessories which are not recommended by CITROËN may result in the failure of your vehicle's electronic system. Please note this specific warning. You are advised to contact a representative of the Marque to be shown the range of recommended equipment and accessories. Depending on the country in which the vehicle is sold or operated, it is compulsory to have a high visibility safety vest, warning triangle and replacement bulbs available in the vehicle.



## OPENING THE BONNET

### From inside:

- lift the cover located at the foot of the front left seat.
- pull the release lever upwards.



**From outside:** partially open the bonnet, lift the safety catch and raise the bonnet.

### Bonnet stay

Secure the stay in one of the two notches, according to the height required, to hold the bonnet open.

Before closing the bonnet, replace the stay in its housing.



### To close

Lower the bonnet and release it at the end of its travel. Check that the bonnet is properly latched.


### "Bonnet open" warning

This warning is linked to the **alarm option** only.



With the engine running or the vehicle moving, a warning lamp and a diagram in the screen, accompanied by an audible signal, warn you that the bonnet is not properly closed.


## Under the bonnet

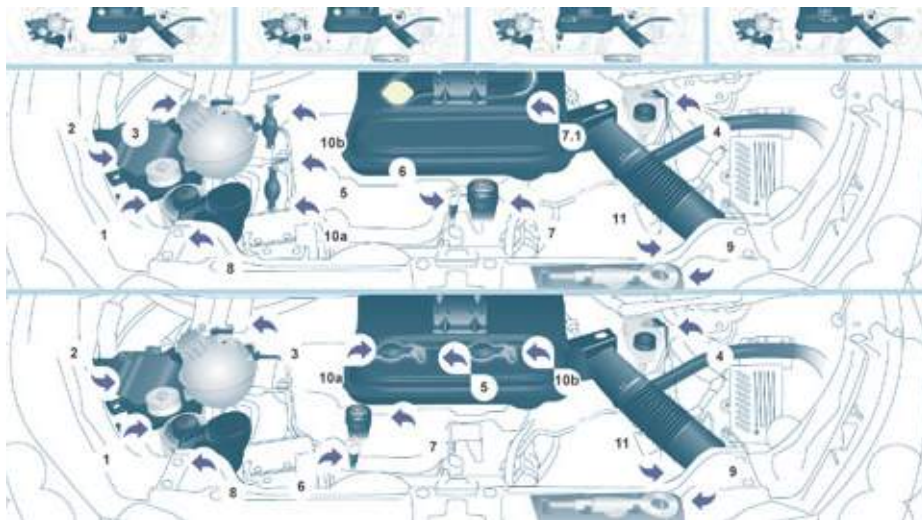

## UNDER THE BONNET

## DIESEL ENGINES

- |                                       |  |
|---------------------------------------|--|
| 1 - Screen/headlamp wash reservoir.   | 8 - Power steering reservoir.                            |
| 2 - Fusebox.                          | 9 - Removable towing eye.                                |
| 3 - Coolant header tank.              | 10 - Priming pump<br>(a: 1.6 litre HDi; b: 2 litre HDi). |
| 4 - Brake and clutch fluid reservoir. | 11 - Engine oil filling funnel<br>(2 litre HDi).         |
| 5 - Air filter.                       |  |
| 6 - Engine oil dipstick.              |  |
| 7 - Engine oil filler cap.            |  |

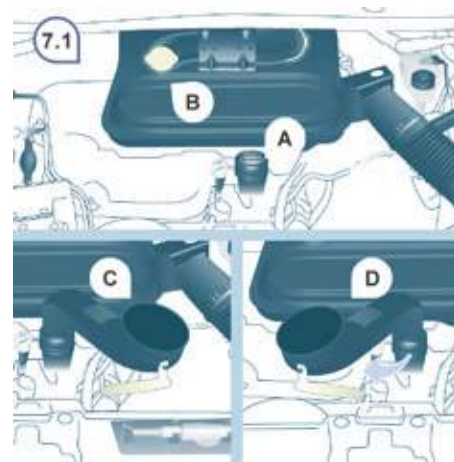


## 7.1 - Engine oil filler cap.

If your vehicle is fitted with this oil filler tube, proceed as follows:

- A - Remove the oil filler cap.
- B - Remove the filler tube from its location.
- C - Place the filler tube in the filler opening as shown on the illustration.
- D - Turn it a 1/4 of a turn to the left to lock it then top up the oil.

To refit, proceed in the reverse order without forgetting to retighten the cap **A** correctly.



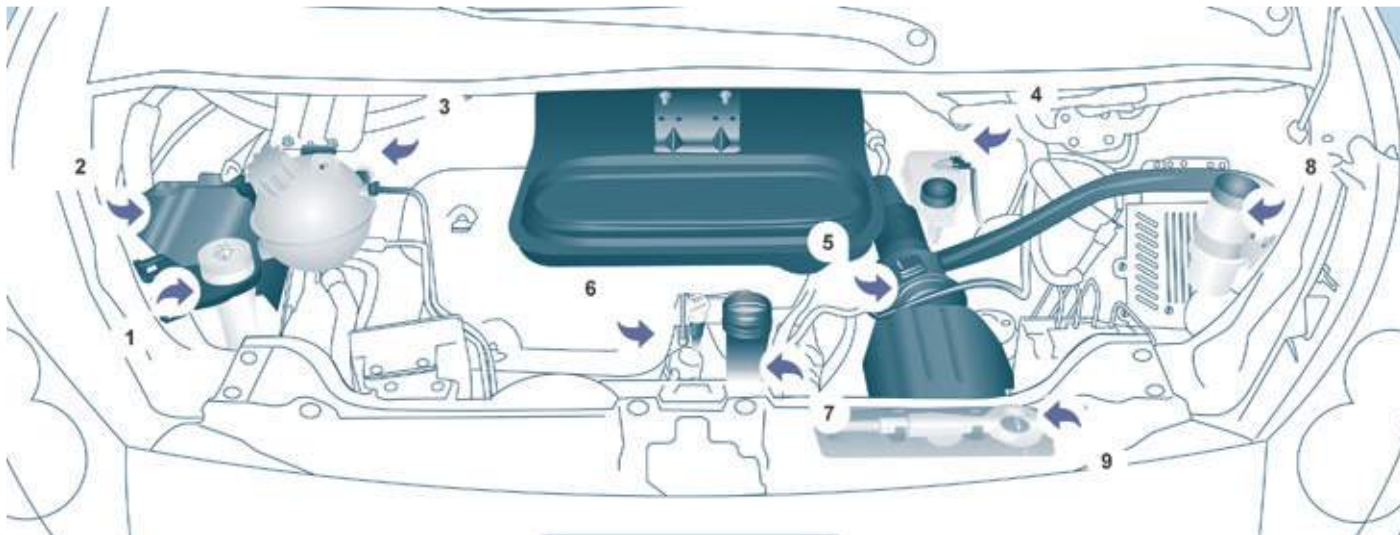

## PETROL ENGINE

- |                                    |                                      |                              |
|------------------------------------|--------------------------------------|------------------------------|
| 1. Screen/headlamp wash reservoir. | 4. Brake and clutch fluid reservoir. | 7. Engine oil filler cap.    |
| 2. Fusebox.                        | 5. Air filter.                       | 8. Power steering reservoir. |
| 3. Coolant header tank.            | 6. Engine oil dipstick.              | 9. Removable towing eye.     |

## Levels

### LEVELS


**i** These regular maintenance operations will keep your vehicle in good running order. Consult a CITROËN dealer or the servicing and warranty booklet enclosed in the handbook pack.

**👁** If you have to remove / refit the engine style cover, handle it with care to avoid damaging the fixing clips.

### Oil level

Check the level regularly and top up between changes.

Check the level with the vehicle level, engine cold, using the dipstick.

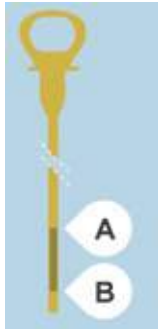

#### Dipstick


There are two marks on the dipstick:

A = maximum

If you fill past this mark, contact a CITROËN dealer or a qualified workshop.

B = minimum

Never allow the level to fall below this mark.

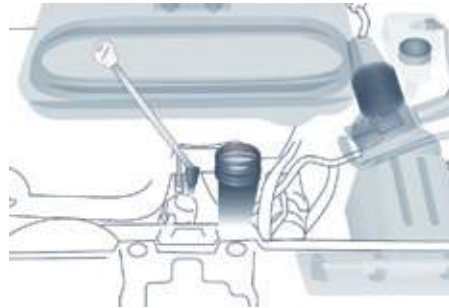

To maintain the reliability of engines and emission control systems, the use of additives in engine oil is prohibited.

### Oil change

It is imperative that this is carried out at the intervals specified and the viscosity grade of the oil selected must fulfil the requirements in accordance with the manufacturer's servicing schedule. Ask for advice from a CITROËN dealer. Remove the dipstick before filling.

For the 2 litre HDi engine, use the funnel supplied when filling via the sump opening.

Check the level after filling (never exceed the max mark).

Screw the cap back onto the sump before closing the bonnet.

### Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.



### Changing the brake fluid

The brake fluid must be changed at the intervals stated, according to the manufacturer's servicing schedule.

Use fluids recommended by the manufacturer, which fulfil DOT4 standards.

The level must be between the MIN and MAX marks on the reservoir.

If fluid has to be added frequently, this indicates a fault which must be checked by a CITROËN dealer or a qualified workshop as soon as possible.

### Warning lamps

**+** Checking by means of the warning lamps in the instrument panel is described in chapter 2, refer to the "Instruments and controls" section.

## Cooling system

Only use the fluid recommended by the manufacturer.

Otherwise, you risk seriously damaging your engine.

When the engine is warm, the temperature of the coolant is controlled by the engine fan. As this fan can operate with the ignition key removed and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.

Slacken the cap by 1/4 of a turn to release the pressure to prevent any risk of scalding. When the pressure has dropped, remove the cap and top up the level with coolant.

If fluid has to be added frequently, this indicates a fault which must be checked by a CITROËN dealer or a qualified workshop as soon as possible.

## Topping up

The level must be between the MIN and MAX marks on the expansion bottle. If more than 1 litre of fluid is required to top up the level, have the system checked by a CITROËN dealer or a qualified workshop.

## Power steering fluid level

The vehicle must be parked on level ground with the engine cold. Unscrew the cap integrated with the gauge and check the level which must be between the MIN and MAX marks.

## Screenwash and headlamp wash level

For best quality cleaning and for your safety, we would advise that you use products of the CITROËN range.

Capacity of the screenwash reservoir: approximately 4.5 litres.

If your vehicle is fitted with headlamp washers, the capacity of the reservoir is 7.5 litres.

To ensure optimum cleaning and prevent freezing, this fluid must not be topped up or replaced with plain water.



## Diesel additive level (Diesel with particle emission filter)

The minimum level of this additive is indicated by lighting of the service warning light, accompanied by an audible signal and a message in the screen.

When this occurs with the engine running it is due to the start of saturation of the particle emission filter (exceptionally prolonged urban type driving conditions: low speed, long traffic jams, ...).

In order to regenerate the filter, you are advised to drive at a speed higher than 40 mph (60 km/h) for at least five minutes as soon as possible, when traffic conditions permit (until the message disappears and the service warning lamp goes off).

During regeneration of the particle emission filter, relay noise may be heard under the dashboard.

If the message is still displayed and if the service warning lamp remains on, contact a CITROËN dealer or a qualified workshop.

## Topping up

This additive must be topped up by a CITROËN dealer or a qualified workshop without delay.

## CHECKS

### Battery

At the start of winter, have your battery checked by a CITROËN dealer or a qualified workshop.

### Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances. It may be necessary to check the thickness of the pads, even between services.

Unless there is a leak in the system, a drop in the brake fluid level indicates that the brake pads are worn.

### Brake disc / drum wear

For any information on checking the brake disc / drum wear, contact a CITROËN dealer or a qualified workshop.

### Parking brake

Where the parking brake travel is too great or there is a reduction in the performance of the system, the parking brake should be adjusted, even between services.

Have the system checked by a CITROËN dealer or a qualified workshop.

### Oil filter

Change the filter regularly, in accordance with the servicing schedule.

### Carbon filter and passenger compartment filter

The carbon filter permits continuous and effective filtering of dust.

If the passenger compartment filter becomes clogged, this may reduce the performance of the air conditioning system and generate unpleasant odours.

We recommend the use of a combined passenger compartment filter. By means of its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanness of the passenger compartment (reduction of allergic symptoms, unpleasant odours and greasy deposits).

Refer to the servicing and warranty booklet to find out the replacement interval for these components.

Depending on the environment (dusty atmosphere...) and the use of the vehicle (urban driving...), change them twice as often if necessary.



Refer to "Under the bonnet" in section 6.

### Particle emission filter (Diesel)



This filter actively contributes to the preservation of air quality by trapping unburnt polluting particles. It is controlled

completely and automatically by the engine management system.

This warning lamp comes on if there is a risk of blockage of the filter.

This alert signals the start of saturation of the particle emissions filter (exceptionally prolonged driving in urban conditions: reduced speed, traffic jams...).

If this alert persists, contact a CITROËN dealer or a qualified workshop.

On acceleration after the vehicle has been running for a prolonged period at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust. This water vapour does not have any adverse effect on vehicle handling or the environment.

To regenerate the filter, it is recommended that as soon as driving conditions permit, you drive at a speed of at least 36 mph (60 km/h) for at least 5 minutes (until the warning lamp goes off and/or the message disappears).

During this regeneration, you may notice that the idling speed is higher than normal and that the cooling fan is running. As operation of the exhaust emissions controls may cause the exhaust gas temperature to reach very high levels, it is recommended that you do not stop the vehicle over easily inflammable surfaces (dry grass and leaves, pine needles, edge of a meadow or forest).



1.6 litre HDi

### Bleeding the water contained in the Diesel filter



If this warning lamp comes on, bleed the filter. Otherwise bleed regularly each time the engine oil is changed.

To evacuate the water, unscrew the bleed screw located on the end of the transparent pipe.

Operate until all of the water in the transparent pipe has been drained out then tighten the bleed screw.

HDi engines use advanced technology.

Contact a CITROËN or a qualified workshop for all work on the system.



2 litre HDi

### Manual gearbox

Have the level checked in accordance with the manufacturer's servicing schedule.

### Good practice

To check the main levels and certain components, in accordance with the manufacturer's servicing schedule, refer to the pages of the maintenance and warranty guide which correspond to your vehicle's engine.

**i** Only use products recommended by CITROËN or products of equivalent quality and specification.

In order to optimise the operation of units as important as the braking system, CITROËN selects and offers specific products.

In order to avoid damaging the electrical units, high pressure washing to clean the engine compartment is strictly prohibited.

After washing the vehicle dampness, or in winter, ice may form on the brake discs and pads: braking efficiency may be reduced. Make some light brake applications to dry and de-ice the brakes.

# TOTAL & CITROËN

**PARTNERS IN PERFORMANCE AND  
PROTECTING THE ENVIRONMENT**

## **Innovation in the search for performance**

For over 40 year, the TOTAL Research and Development departments have developed for CITROËN, lubricants to match the latest technical innovations on CITROËN vehicles, both for competition and for everyday motoring.

For you, this is an assurance that you will obtain of the best performance for your engine.

## **Optimum protection for your engine**

By having your CITROËN vehicle serviced with TOTAL lubricants, you are contributing towards improving the life and performances of your engine, while also protecting the environment.



CITROËN prefers TOTAL



<https://www.automotive-manuals.net/>



## FILLING WITH FUEL

### Low fuel level



When this warning lamp first comes on and when the needle is at the start of the red zone, the minimum fuel tank level has been reached.

At this moment, you have **approximately 8 litres** of fuel remaining.

Fill up without delay to avoid running out of fuel.



Never continue to drive until you run out of fuel as this may damage the emission control and injection systems.

### Filling with fuel

The fuel tank must be filled **with the engine off**.



When filling with fuel, do not open the left-hand side door, if fitted on your vehicle, as there is a risk of damage to the fuel filler flap.

- Open the fuel filler flap. Insert the key, then turn it a quarter turn.
- Remove the cap and hook it onto the clip located on the inside of the flap.

It is normal to hear the noise of an inrush of air when the cap is opened as there is a vacuum caused by the sealing of the fuel system.

A label affixed to the inside of the flap reminds you of the type of fuel to be used. More than 8 litres of fuel must be added in order to be registered by the fuel gauge. When filling the fuel tank, do not continue after the 3rd cut-off of the nozzle. This could cause malfunctions.

The capacity of the fuel tank is approximately 80 litres.

- After filling the fuel tank, lock the cap and close the flap.

### Quality of the fuel used for petrol engines



The petrol engines are perfectly compatible with E10 or E24 type petrol biofuels (containing 10 % or 24 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).

### Quality of the fuel used for Diesel engines



The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a CITROËN dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

### FUEL CUT-OFF

In a serious collision, a mechanism automatically prevents fuel from reaching the engine.



The flashing of this warning lamp is accompanied by a message in the screen.

Check that there is no odour or leakage of fuel outside the vehicle and re-establish the fuel supply:


- switch off the ignition (STOP position),
- remove the key,
- put the key back in the ignition,
- switch on the ignition and start.

### DIESEL PRIMING PUMP

If you should run out of fuel, it is necessary to prime the circuit:

- fill the fuel tank with at least five litres of diesel,
- squeeze and release the manual priming pump, under the bonnet under the protective cover, until fuel appears in the transparent pipe,
- operate the starter until the engine starts.



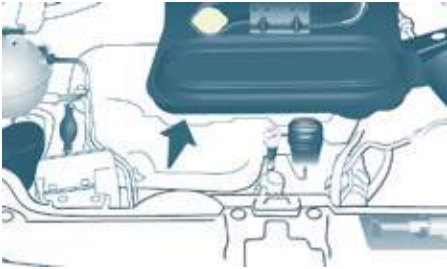

## DIESEL PRIMING BUTTON

If you should run out of fuel, it is necessary to prime the system using the priming button:

- fill the fuel tank with at least five litres of Diesel fuel,
- open the bonnet,



- unclip the protective cover for access to the priming push button,
- place the cover to the right of the engine,



- place the two slots in the lugs behind the engine to allow the protective cover to be refitted,



- firmly squeeze and release the manual priming pump until fuel stiffens the pipe,
- operate the starter until the engine starts,



- clip the protective cover in place,
- close the bonnet.


**i** If the engine does not start first time, do not keep trying. Operate the priming push button again, then start the engine.

<https://www.automotive-manuals.net/>

## Battery

### BATTERY

This is housed in a compartment located underneath the floor, in front of the front right seat.

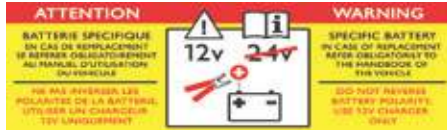

**i** The presence of this label indicates the use of a 12 V lead-acid battery with special technology and specification, for which the involvement of a CITROËN dealer or qualified workshop is required when replacing or disconnecting the battery. Failure to observe this recommendation may cause premature ageing of the battery.

### To charge the battery using a battery charger

- Disconnect the battery,
- Follow the instructions for use given by the battery charger manufacturer,
- Reconnect starting with the negative (-) terminal,
- Check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

### To start the vehicle from another battery

- Connect the red cable to the positive (+) terminals of the two batteries,
- Connect one end of the green or black cable to the negative (-) terminal of the slave battery,
- Connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery,
- Operate the starter, let the engine run,
- Wait for the engine to return to idle, then disconnect the cables.

**i** It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.



Before disconnecting the battery, you must wait for 2 minutes after switching off the ignition.

Never disconnect a terminal when the engine is running.

Never charge a battery without first disconnecting the terminals.

After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. If some problems persist after this operation, please contact a CITROËN dealer or a qualified workshop.

## ECONOMY MODE

After the engine has stopped, with the key in the ignition position, certain functions (windscreen wiper, electric windows, courtesy lamps, audio equipment, etc.) can only be used for a cumulative duration of thirty minutes, to prevent discharging of the battery.

Once the thirty minutes are over, the active functions are put on standby and the battery warning lamp flashes accompanied by a message in the screen.

To resume the use of these functions immediately, start the engine and let it run for a few minutes.

The time available will then be double the time for which the engine was left running. However, this time will always be between five and thirty minutes.

A flat battery will prevent the engine from starting.

## Repairing a wheel



### PUNCTURE REPAIR KIT

The kit is located at the left hand rear of the vehicle.

The temporary puncture repair kit consists of a compressor and a cartridge (containing a sealant).

**i** Vehicles supplied with a temporary puncture repair kit do not have a spare wheel or tooling (jack, wheelbrace, ...).

### Using the kit

- switch off the ignition,
- affix the speed limitation sticker to the vehicle's steering wheel to remind you that a wheel is in temporary use,
- check that the switch **A** is at position "**0**",
- connect the pipe of the bottle **1** to the valve of the tyre to be repaired,
- connect the compressor's electrical plug to the vehicle's 12V socket,
- start the vehicle and let the engine run,
- switch on the compressor by pressing the switch **A** to position "**1**" until the tyre pressure reaches 2.0 bars,

- remove the compressor, unclip and store the bottle in a sealed bag to avoid staining your vehicle with traces of fluid,
- drive immediately, for approximately two miles (three kilometres), at reduced speed (between 12 and 37 mph (20 and 60 km/h)), to seal the puncture,
- stop to check the repair and the pressure,

**i** If, after approximately five to ten minutes, you are not able to obtain this pressure, the tyre cannot be repaired; contact a CITROËN dealer or a qualified workshop for roadside assistance.



- connect the compressor pipe directly to the valve of the repaired wheel.
  - connect the compressor's electrical plug to the vehicle's 12V socket again,
  - start the vehicle again and let the engine run,
- adjust the pressure using the compressor (to inflate: switch **A** in position "1"; to deflate: switch **A** in position "0" and press button **B**), in accordance with the vehicle's tyre pressure label (located on the door aperture, on the driver's side), then remember to check that the leak has been sealed correctly (no further loss of pressure after several miles (kilometres)),
  - remove the compressor, then stow the complete kit,
  - drive at reduced speed (50 mph (80 km/h) max) limiting the distance travelled to approximately 125 miles (200 km),
  - visit a CITROËN dealer or a qualified workshop as soon as possible to have the tyre repaired or replaced by a technician.



Warning, the sealant cartridge contains ethylene-glycol, this product is harmful if swallowed and causes irritation to the eyes. Keep this product out of reach of children.

The expiry date of the sealant is indicated under the cartridge.

The cartridge is intended for a single use; once opened, it must be replaced.

After use, do not discard the cartridge into the environment, take it to a CITROËN dealer or to a specialised waste disposal site.

Do not forget to obtain a new sealant cartridge, available from a CITROËN dealer or a qualified workshop.



### CHANGING A WHEEL

If your vehicle is equipped with a spare wheel located underneath the vehicle, follow these instructions.

#### 1. PARKING THE VEHICLE

- You must ensure that the occupants get out of the vehicle and wait in a safe location.
- If possible, park the vehicle on level, stable and non-slippery ground.
- Apply the parking brake, switch off the ignition and engage first or reverse gear.
- If available, place a chock under the wheel diagonally opposite the one to be changed.

On certain types of ground and/or if heavy loads are being transported, the vehicle must be raised in order to disengage the spare wheel from the carrier. Call a CITROËN dealer or a qualified workshop.

**+** If your vehicle is fitted with suspension with pneumatic height correction, please deactivate the system. Refer to the "Rear suspension" section of chapter 3.



#### 2. TOOLS

- If fitted on your vehicle, open the plastic flap located at the rear left of the vehicle.
- Unscrew the nut then take out the jack and the wheelbrace.

1. Wheelbrace.
2. Jack.
3. Towing eye.

**👁** The jack and the tool kit are specific to your vehicle. Do not use them for other purposes.



### 3. SPARE WHEEL

- Gain access to the spare wheel from the rear.

**i** You can switch on the courtesy lamp to improve visibility.



- Open the rear doors.





- Open the cover, located on the sill, to access the carrier bolt.



- Unscrew the bolt using the wheelbrace until the carrier is lowered fully.




- Detach the carrier from the hook and place the spare wheel near the wheel to be changed.

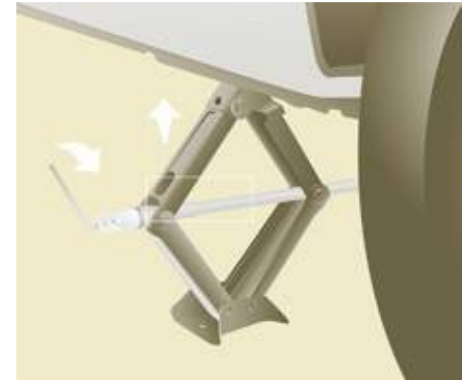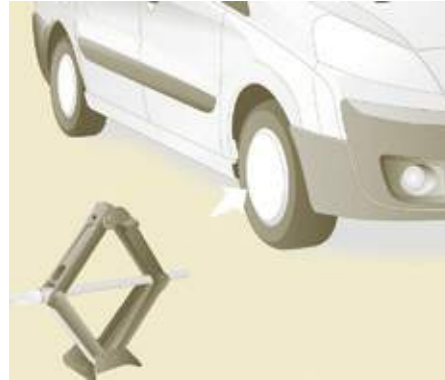

### 4. OPERATING PROCEDURE

- Remove the trim pulling it using the towing eye.
- Loosen the wheel bolts and start unscrewing them.


- Place the jack in contact with the locating point provided, the one which is closest to the wheel to be changed. Ensure that the jack is straight and that the base of the jack is fully in contact with the ground.
- Extend the jack to lift the wheel clear of the ground.
- Resume and complete the unscrewing of the wheel bolts.
- Remove the bolts and remove the wheel.

 Do not extend the jack until you have started unscrewing the bolts on the wheel to be changed and have placed the chock under the wheel diagonally opposite.





## 5. FITTING THE SPARE WHEEL

- Position the wheel on the hub and start tightening the wheel bolts by hand.
  - Carry out an initial tightening of the bolts using the wheelbrace.
  - Lower the vehicle completely by folding the jack, then remove the jack.
  - Tighten the bolts again using the wheelbrace, tighten them fully without forcing them.
  - Place the wheel to be repaired in the carrier.
  - Secure the carrier on the hook then raise the carrier using the bolt and the wheel brace. Check that the wheel and the carrier are flush against the floor of the vehicle.
  - Remember to close the flap, located on the sill.
  - Store the trim in the vehicle.
-  Never go underneath the vehicle when it is supported only by the jack. Never use a screwdriver in place of the wheelbrace.

<https://www.automotive-manuals.net/>

## Snow screen

### 6. REFITTING THE REPAIRED WHEEL

The wheel is refitted as described in step 5, not forgetting to refit the wheel trim.

**+** Refer to the "Identification markings" section of chapter 8 to locate the tyre label.


**i** The spare wheel is not designed to be used over long distances. Have the tightening of the bolts and the tyre pressure checked by a CITROËN dealer or a qualified workshop as soon as possible. Also, have the original wheel repaired and refitted by a CITROËN dealer or a qualified workshop as soon as possible.



#### REMOVABLE SNOW SCREEN

According to country, the removable snow screen is installed on the lower part of the front bumper to prevent the accumulation of snow at the radiator cooling fan.

Do not forget to remove the snow screen when the exterior temperature is higher than 10°C (no risk of snowfall) and when towing.

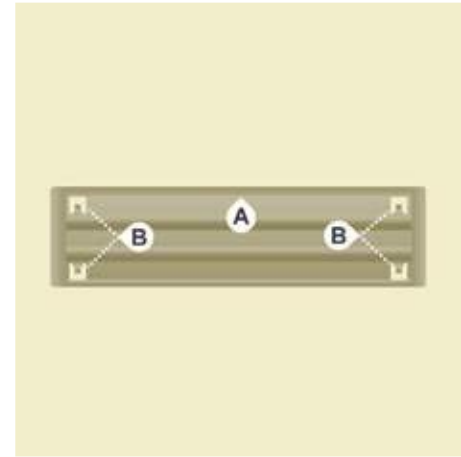

#### FITTING

- Offer up the snow screen facing its centring pin **A** on the front bumper.
- Put it in place by pressing at each clip **B** located in the four corners.

#### REMOVAL

- Pass a screwdriver into the hole located near each of the clips.
- Use the screwdriver as a lever to unclip the four clips **B** in turn.

## SNOW CHAINS

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.

**i** The snow chains must be fitted only to the driving wheels. They must never be fitted to "space-saver" type spare wheels.






Use only the chains designed to be fitted to the type of wheel fitted to your vehicle:

Original tyre size	Maximum link size.
215/65 R15	12 mm
215/60 R16 MICHELIN	
215/60 R16 BRIDGESTONE	

For more information on snow chains, contact a CITROËN dealer or a qualified workshop.

**i** Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.

### Advice on installation

-  If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
-  Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
-  Fit the chains following the instructions provided by the manufacturer.
-  Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
-  Stop your vehicle and check that the snow chains are correctly tightened.

**i** Avoid driving on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. It is recommended that before you leave, you practise fitting the snow chains on a level and dry surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.

 
## Changing a bulb



## CHANGING A BULB


### TYPES OF BULB

Various types of bulb are installed on your vehicle. To remove them:



#### Type A

 All glass bulb: pull gently as it is fitted by pressure.



#### Type B


Bayonet bulb: press on the bulb then turn it anticlockwise.



#### Type C

Halogen bulb: release the retaining spring from its housing.



 Halogen bulbs must be changed after the headlamp has been off for several minutes (risk of serious burns). Do not touch the bulb directly with your fingers, use lint-free cloths.

When each operation has been completed, check the operation of the lighting.



## FRONT LAMPS

Open the bonnet. To access the bulbs, reach behind the headlamp unit.

Carry out the operations in reverse order to refit each bulb.

### 1. Dipped / Main beam headlamps

#### Type C, H4 - 55W

- Remove the centre cover by pulling the flexible rubber tab.
- Disconnect the electrical connector.
- Release the retaining spring.
- Change the bulb taking care to align the metal part with the slots in the lamp.



### 2. Sidelamps

#### Type A, W5W - 5W

- Remove the cover by pulling the flexible rubber tab.
- Remove the bulb holder fitted by pressure by pulling the connector.
- Change the bulb.
- Ensure that the cover is refitted correctly all the way round to ensure sealing.



### 3. Direction indicators

#### Type B, PY21W - 21W (amber)

- Turn the bulb holder a quarter turn anticlockwise.
- Remove the bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

### 4. Foglamps

#### Type C, H1 - 55W

Contact a CITROËN dealer or a qualified workshop.

## Changing a bulb



### DIRECTION INDICATOR SIDE REPEATER

#### Type A, WY5W - 5W (amber)

- Push the repeater towards the rear and disengage it.
- Support the connector and turn the bulb holder a quarter turn to the left.
- Turn the bulb a quarter turn to the left, remove it and change it.
- When refitting, engage the repeater towards the rear and bring it towards the front.

Amber coloured bulbs (direction indicators and side repeaters) must be replaced with bulbs of identical specification and colour.




Front / Rear


### COURTESY LAMPS

#### Type A, 12V 5W - 5W

- Unclip the lens by sliding a screwdriver in the slots on each side of the courtesy lamp.
- Pull the bulb and change it.
- Clip the lens in its housing and ensure that it is secured correctly.

## High pressure jet washing

 When using this type of jet washer on stubborn dirt, do not persist on the headlamps, the lamps and their surrounds to avoid damaging their coating and seals.

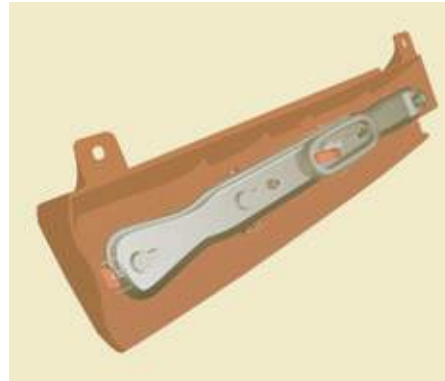

## REAR LAMPS

For more information on bulbs, refer to the "Types of bulb".

### 1. Brake lamps / sidelamps

**Type B**, P21/5W - 21/5W

### 2. Direction indicators

**Type B**, PY21W - 21W (amber)

### 3. Reversing lamps

**Type B**, P21W - 21W

### 4. Foglamps

**Type B**, P21W - 21W

- Identify the faulty bulb then open the rear doors to 180°. Refer to the "Access" section of chapter 2.
- Remove the two fixing nuts. Pull the lens unit from the outside.
- Holding the lamp unit, disconnect the electrical connector.

- Move aside the 8 tabs then extract the bulb holder.
- Remove the failed bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

When refitting, take care to correctly reposition:

- the 8 tabs,
- the two white lugs in the two rubber holes to maintain the sealing of the lamp unit,
- the supply wire to avoid trapping it.

<https://www.automotive-manuals.net/>

## Changing a bulb



### NUMBER PLATE LAMPS


#### Type A, W5W - 5W

##### With tailgate

- Move aside the plastic lens using a screwdriver, on the point indicated by the arrow.
- Change the bulb.
- Replace the plastic lens and press on it.

##### With hinged doors

- Unclip the interior trim.
- Disconnect the connector by moving aside its tab.
- Remove the plastic cover.
- Turn the bulb holder a quarter turn anticlockwise.
- Change the bulb.

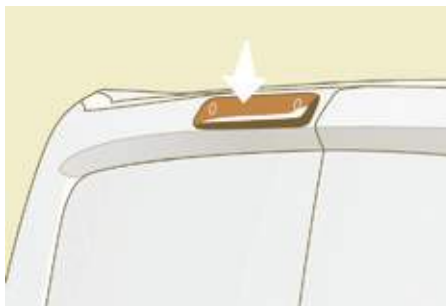

### THIRD BRAKE LAMP

#### Type A, W5W - 5W

##### Lamp located on the outside (hinged doors)

- Unscrew the two screws using a Torx™ 20 screwdriver.
- Remove the lamp.
- Change the bulb.

#### Type B, P21W - 21W

##### Lamp on door top

- Remove the screws using an 8 mm spanner.
- Remove the failed bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.



#### Type B, P21W - 21W

##### Lamp located on the inside (tailgate)

- Unscrew the two screws using a Torx™ 20 screwdriver.
- Remove the plastic cover.
- Remove the bulb holder moving aside the two tabs.
- Remove the failed bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.



## CHANGING A FUSE


The three fuseboxes are placed:

- in the dashboard on the right-hand side (behind the storage compartments, retractable),
- in the passenger compartment (battery compartment),
- under the bonnet.

If fitted on your vehicle, a further fusebox is added for towing, the towbar and the connections for the coachbuilder and platform cab conversions. It is located on the right behind the load retaining partition.

The descriptions communicated are only the fuses which can be changed by the user. For any other operations, go to a CITROËN dealer or a qualified workshop.

**i** For motor trade use: for complete fuse and relay information, consult the "Repair procedure" wiring diagrams via the dealer network.

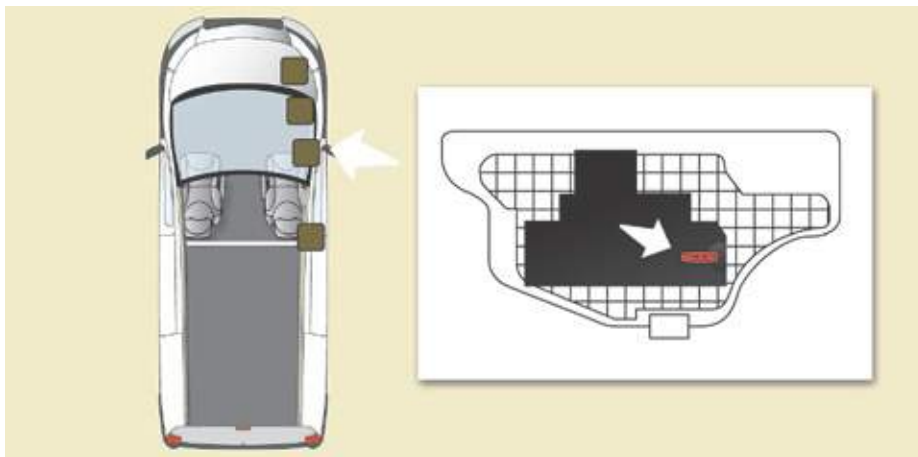


### Removing and fitting a fuse

Before changing a fuse, the cause of the fault must be found and rectified.

**Always replace a failed fuse with a fuse of the same rating.**

CITROËN will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by CITROËN and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.


## Changing a fuse

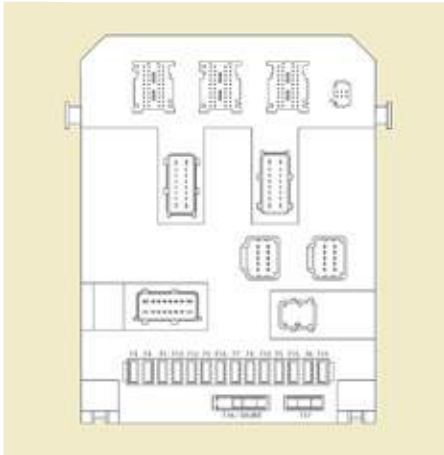

### RIGHT-HAND SIDE DASHBOARD FUSES

- Tilt the storage compartment then pull it firmly to access the fuses.

Fuses F	Amperes A	Allocation
1	15	Rear wiper
2	-	Free
3	5	Airbag control unit
4	10	Steering wheel angle sensor, Diagnostic socket, DSC sensor, Manual ventilation, Clutch switch, Headlamp beam height, Particle emission filter pump
5	30	Electric mirrors, Passenger electric window motor
6	30	Front electric windows supply
7	5	Courtesy lamps and glove box lamp
8	20	Multifunction screen, Anti-theft alarm siren, Audio equipment, Compact disc changer, Audio/telephone, Trailer fusebox (accessory), Coachbuilder/vehicle converter unit (platform cab)
9	10	Load space accessory socket
10	30	Rear ride height corrector, Steering wheel switching, Instrument panel
11	15	Diagnostic socket, Ignition switch
12	15	Hands-free kit, Airbag control unit, Parking sensors control unit
13	5	Engine fusebox, Trailer fusebox
14	15	Rain sensor, Digital air conditioning, Instrument panel
15	30	Locking/unlocking/deadlocking
16	-	Free
17	40	Heated rear screen, Heated mirrors
17	10	Heated mirrors only

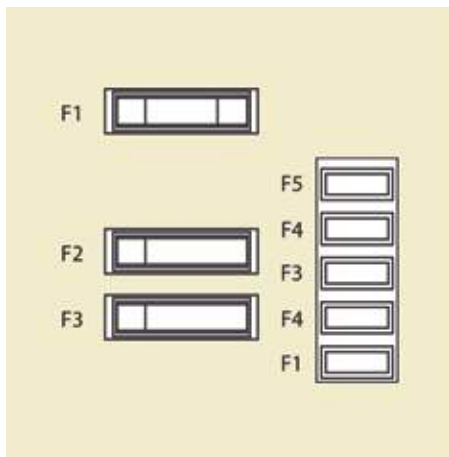


## PASSENGER COMPARTMENT FUSES

- Unclip the battery compartment cover.
- Remove the red battery terminal (+).

**When you have finished, close the cover carefully.**


Fuses F	Amperes A	Allocation
1	30	Heated seats
2	20/-	Battery state of charge unit/Free
3	40/50	Trailer fuse box (accessory) / Coachbuilder/vehicle modifier unit (platform cab)
4	-	Free
36	15	Hinged door locks
37	10	Hinged door locks
38	20	Hinged door rear wiper
39	-	Free
40	5	Folding door mirrors

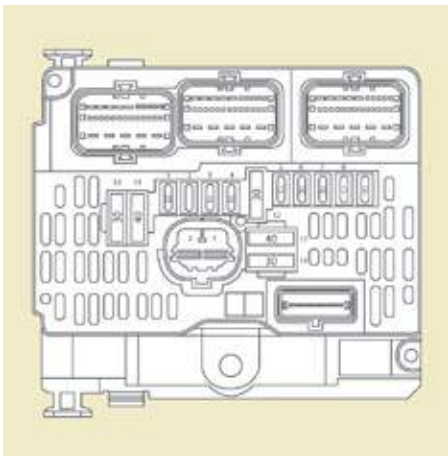

### FUSES UNDER THE BONNET

- After opening the bonnet, slide the screenwash support to make access easier.
- Unclip and tilt the box to access the fuses.

Fuses	Amperes	Allocation
F	A	
1	20	Engine control unit, Fuel supply and air supply systems, Fan assembly
2	15	Horn
3	10	Front and rear screenwash pump
4	20	Headlamp wash pump
5	15	Fuel supply system
6	10	Power steering, Secondary brake pedal switch
7	10	Braking system (ABS/DSC)
8	20	Starter motor control
9	10	Main brake pedal switch
10	30	Fuel supply and air supply systems, Emissions control systems
11	40	Front ventilation
12	30	Windscreen wipers
13	40	Built-in systems interface
14	30	Free

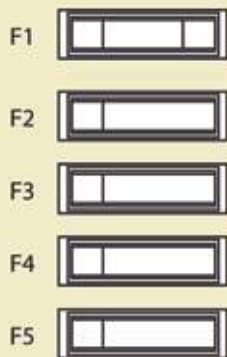

### TOWING / TOWBAR / COACHBUILDERS / PLATFORM CAB FUSES

The descriptions communicated are an indication only as this additional box relates to other information which depends on the coachbuilder/vehicle converter for which this document cannot act as a technical support.

Fuses F	Amperes A	Allocation
1	15	Free
2	15	Ignition relay and optional generator
3	15	Trailer 12V supply
4	15	Permanent supply for vehicle converters
5	10	Hazard warning lamps



### CHANGING A WIPER BLADE

#### Placing the windscreen wiper blades in the special position

- Less than a minute after switching off the ignition, press the wiper stalk downwards to position the wiper blades along the windscreen pillars (special position).


#### Changing a front wiper blade

- Lift the wiper arm.
- Unclip the blade and remove it.
- Fit the new blade.
- Push back the wiper arm.

To return the windscreen wipers to their normal position, switch on the ignition and operate the wiper stalk.

#### Changing the rear wiper blade

- Lift the wiper arm, then unclip the blade and remove it.
- Fit the new blade and push back the wiper arm.

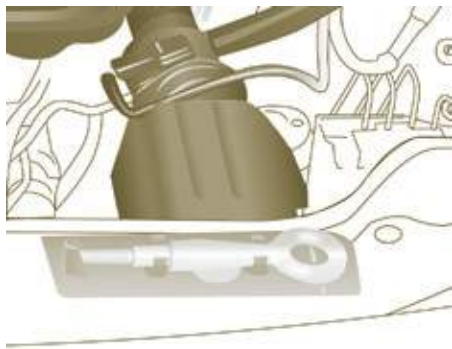

## TOWING THE VEHICLE

### Without lifting (4 wheels on the ground)

You should always use a towing bar.

#### From the front

- Unclip the cover by pressing at the bottom,
- Fully screw in the removable towing eye.

#### From the rear

- Unclip the cover using a coin or the flat part of the towing eye,
- Fully screw in the removable towing eye.



### Lifting (2 wheels on the ground only)

It is preferable to lift the vehicle using professional lifting equipment.



### Vehicles fitted with a manual gearbox (Diesel version)

In the case of vehicles fitted with a manual gearbox, the gear lever must be in the neutral position. Failure to observe this special condition may result in damage to certain braking components and the absence of braking assistance the next time the engine is started.

## Having your vehicle towed

### **i** General recommendations

Observe the legislation in force in your country.

Ensure that the weight of the towing vehicle is higher than that of the towed vehicle.

The driver must remain at the wheel of the towed vehicle and must have a valid driving licence.

When towing a vehicle with all four wheels on the ground, always use an approved towing bar; rope and straps are prohibited.

The towing vehicle must move off gently.




When towing a vehicle with the engine off, there is no longer any power assistance for braking or steering.

In the following cases, you must always call on a professional recovery service:

- vehicle broken down on a motorway or fast road,
- four-wheel drive vehicle,
- when it is not possible to put the gearbox into neutral, unlock the steering, or release the parking brake,
- towing with only two wheels on the ground,
- where there is no approved towing bar available...



<https://www.automotive-manuals.net/>

		m <sup>3</sup>
	L1H1	5
	L2H1	6
	L2H2	7




**DIMENSIONS (MM)**

The vehicle is available in 2 lengths (L1, L2) and 2 heights (H1, H2), refer to the tables:


		L1	L2	
		H1	H1	H2
L	Overall length	4 805 to 4 813	5 135 to 5 143	
H	Overall height	1 894* / 1 942		2 204*/ 2 276
A	Wheelbase	3 000	3 122	
B	Front overhang	975		
C	Rear overhang	830 to 838	1 038 to 1 046	
D	Overall width:			
	over panels	1 870		
	with mouldings	1 895		
	with mirrors folded	1 986		
	with mirrors unfolded	2 194		
E	Width of front track	1 562 to 1 570		
F	Width of rear track	1 596 to 1 604		
I	Length of interior floor	2 254	2 584	
J	Maximum interior height under roof	1 449	1 750	
K	Maximum interior width	1 600		
M	Interior width between wheel arches	1 245		
	Turning circle between kerbs (m)	12.18	12.59	
	Maximum loads (kg)			
	Payload	1 000 to 1 200		
	On roof	170		
	m <sup>3</sup>	5	6	7

\* Value for rear suspension.

<https://www.automotive-manuals.net/>

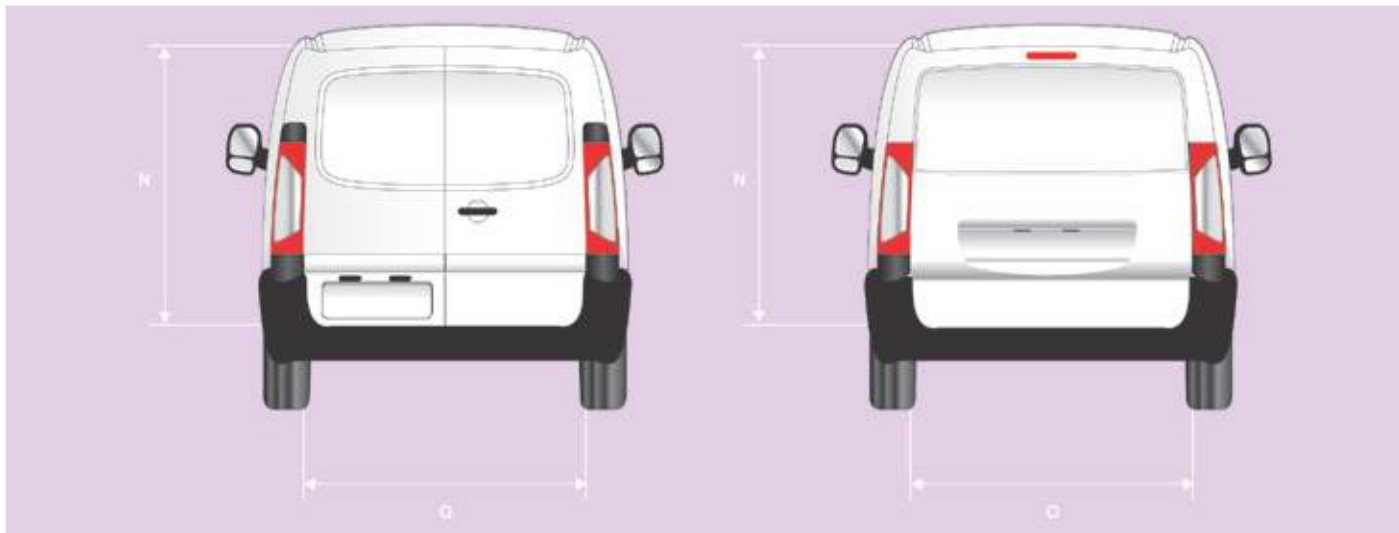


		REAR DOORS (mm)		
		L1	L2	
		H1	H1	H2
N	Usable height	1 272		1 630
O	Usable width	1 237		

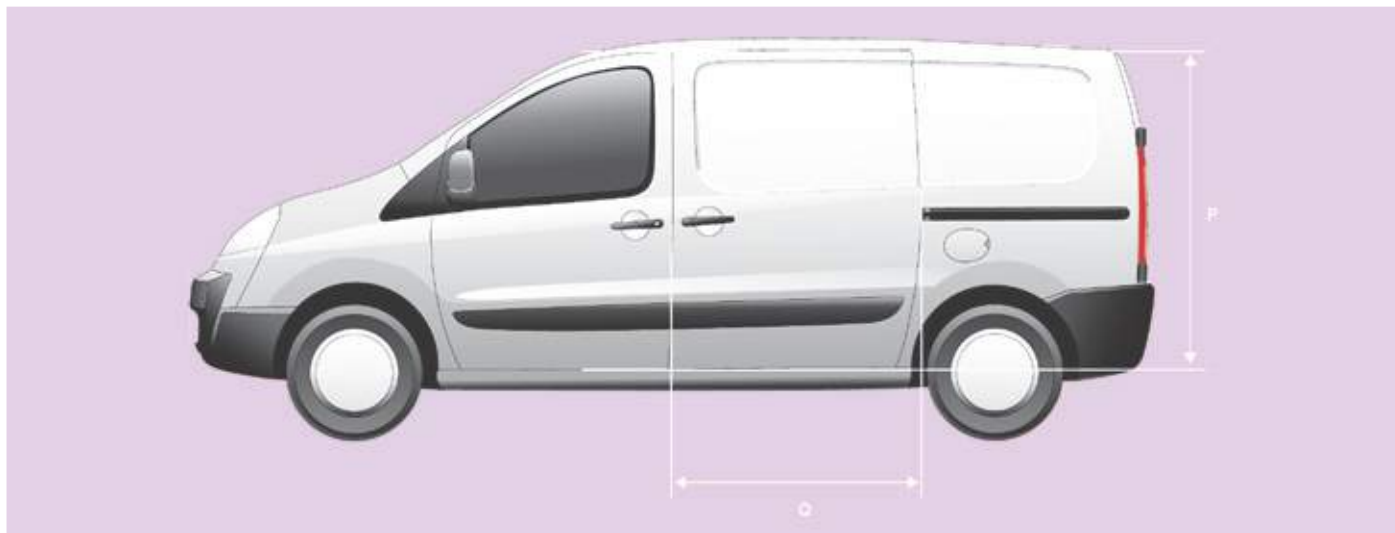

		SLIDING SIDE DOOR (mm)		
		L1	L2	
		H1	H1	H2
P	Height	1 293		1 301
Q	Width	924		

<https://www.automotive-manuals.net/>

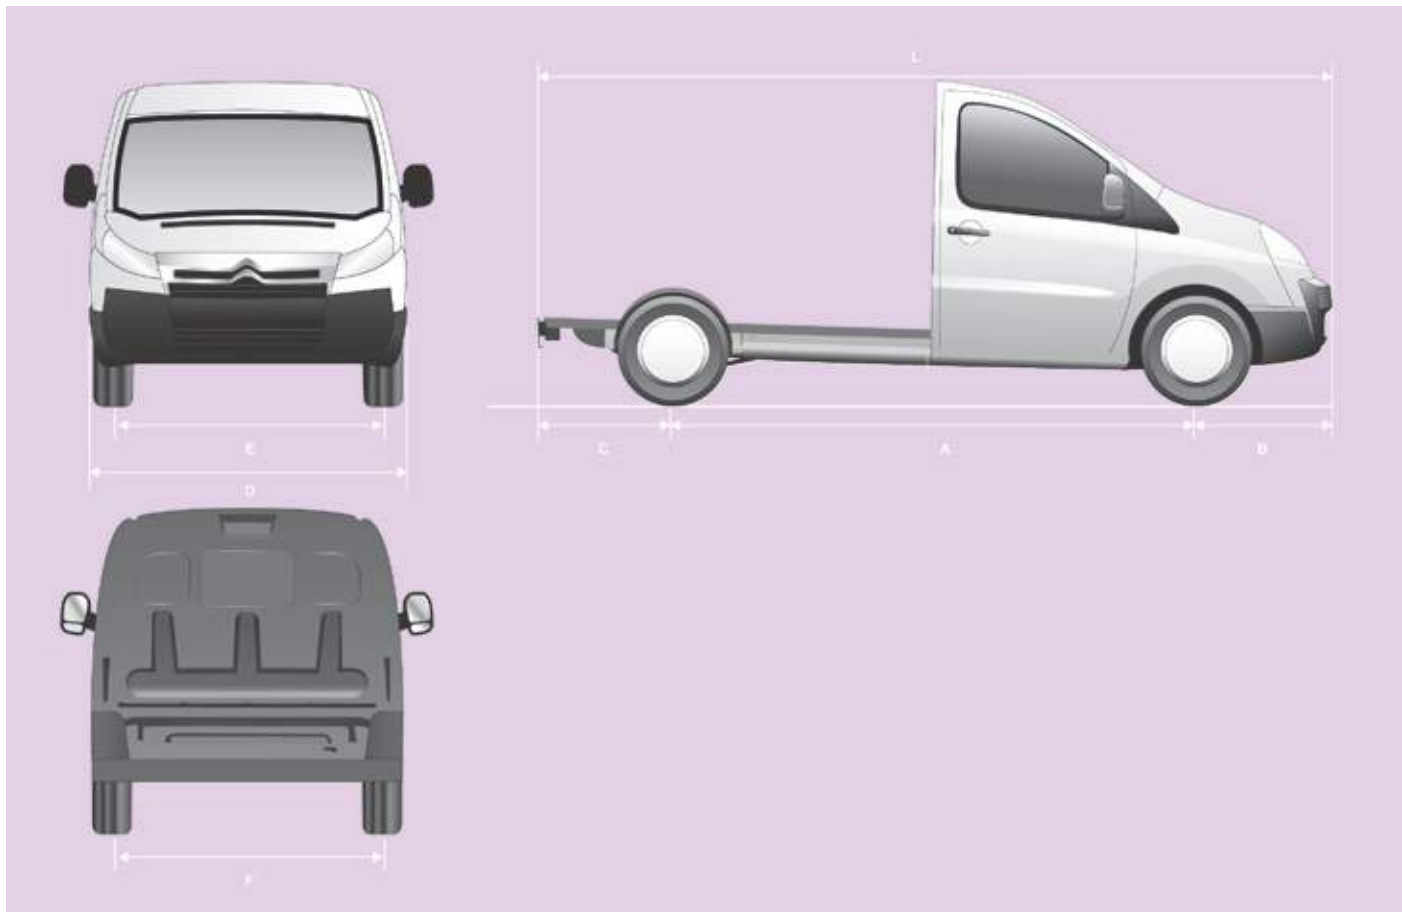

		PLATFORM CAB (mm)
		L2
L	Overall length	5 016
A	Wheelbase	3 122
B	Front overhang	975
C	Rear overhang	920
	Max rear body overhang	1 420
D	Overall width (excluding mirrors)	1 895
E	Width of front track	1 574
F	Width of rear track	1 574
-	Gross vehicle weight	-
-	Max weight at the front	1 400
-	Max weight at the rear	1 700

## **WEIGHTS AND TOWED LOADS (KG)**

For further information, refer to your registration certificate.

In each country, it is imperative that the towed loads permitted by local legislation are complied with. To find out your vehicle's towing capabilities and its gross train weight, contact a CITROËN dealer.

### **Load transfer**

If the towing vehicle has not reached the GVW, it is possible to transfer this weight to the trailer.

In all cases, do not exceed the weight of the trailer and the GTW, indicated on your registration certificate.

Observe the towing capacities of your vehicle.



The weight of a braked trailer with load transfer can be increased on condition that the equivalent weight is removed from the vehicle and the GTW is not exceeded.

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine. If the ambient temperature is above 37 °C, limit the towed load to 700 kg, without any transfer of load.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).





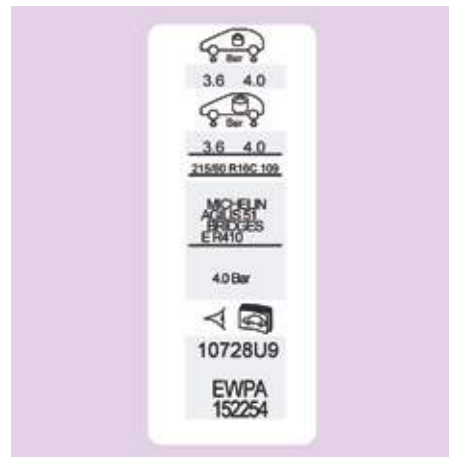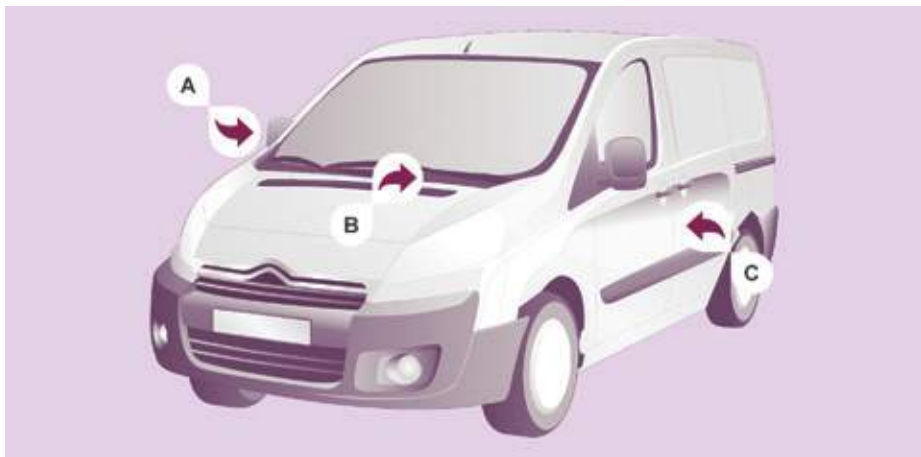

## IDENTIFICATION MARKINGS

### A. Manufacturer's label.

- 1 - VF Type serial number.
- 2 - Gross vehicle weight (GVW).
- 3 - Gross train weight (GTW).
- 4.1 - Maximum weight on front axle.
- 4.2 - Maximum weight on rear axle.

### B. Model serial number.

Use the flat end piece of the towing eye to open the flap.

### C. Tyres and paint colour code.

The label **C**, on the front door gives:

- the wheel and tyre sizes,
- the brands of tyres recommended by the manufacturer,
- the tyre pressures (the tyre pressures must be checked when the tyres are cold, at least once a month),
- the paint colour code.



## **EMERGENCY OR ASSISTANCE CALL**

<https://www.automotive-manuals.net/>

# EMERGENCY OR ASSISTANCE CALL

## CITROËN LOCALISED EMERGENCY CALL




In an emergency, press this button for more than 2 seconds. Flashing of the green LED and a voice message confirm that the call has been made to the CITROËN Emergency service\*.

Pressing this button again immediately cancels the call. The green LED goes off.

Pressing this button (at any time) for more than 8 seconds cancels the call.

The green LED remains on (without flashing) when communication is established. It goes off at the end of communication.

This call is dealt with by the CITROËN Emergency team which receives locating information from the vehicle and can send a detailed alert to the appropriate emergency services. In countries in which the team is not operational, or when the locating service has been expressly declined, the call is dealt with directly by the emergency services (112) without the vehicle location.

 If an impact is detected by the airbag control unit, and independently of the deployment of any airbags, an emergency call is made automatically.

If you benefit from the CITROËN eTouch offer, you also have available additional services in your MyCITROËN personal space, via the CITROËN Internet website in your country, accessible on [www.citroen.com](http://www.citroen.com).

\* These services are subject to conditions and availability.  
Consult a CITROËN dealer.

## CITROËN LOCALISED ASSISTANCE CALL



Press this button for more than 2 seconds to request assistance if the vehicle breaks down.  
A voice message confirms that the call has been made\*.

Pressing this button again immediately cancels the request.  
The cancellation is confirmed by a voice message.

## OPERATION OF THE SYSTEM



When the ignition is switched on, the green LED comes on for 3 seconds indicating that the system is operating correctly.



If the orange LED flashes: there is a system fault.


If the orange LED is on continuously: the backup battery must be replaced.

In either case, contact a CITROËN dealer.

If you purchased your vehicle outside the CITROËN dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

For technical reasons, particularly to improve the quality of Telematic services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.

<https://www.automotive-manuals.net/>

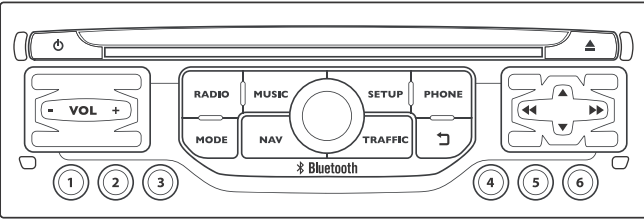

# eMyWay

## SATELLITE NAVIGATION SYSTEM MULTIMEDIA BLUETOOTH TELEPHONE AUDIO SYSTEM

### CONTENTS

<b>01</b>	<b>First steps - Control panel</b>	<b>p. 9.4</b>
<b>02</b>	<b>General operation</b>	<b>p. 9.6</b>
<b>03</b>	<b>Steering mounted controls</b>	<b>p. 9.8</b>
<b>04</b>	<b>Audio settings</b>	<b>p. 9.9</b>
<b>05</b>	<b>Navigation - Guidance</b>	<b>p. 9.10</b>
<b>06</b>	<b>Traffic information</b>	<b>p. 9.23</b>
<b>07</b>	<b>Using the telephone</b>	<b>p. 9.27</b>
<b>08</b>	<b>Radio</b>	<b>p. 9.38</b>
<b>09</b>	<b>Music media players</b>	<b>p. 9.42</b>
<b>10</b>	<b>Configuration</b>	<b>p. 9.48</b>
<b>11</b>	<b>Trip computer</b>	<b>p. 9.51</b>
<b>12</b>	<b>Screen menu map</b>	<b>p. 9.52</b>
	<b>Frequently asked questions</b>	<b>p. 9.56</b>



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

# 01 FIRST STEPS

Long press: open the **"Audio settings"** menu: music ambience, bass, treble, loudness, left/right balance, front/rear fader, automatic volume adjustment.

Selection and confirmation OK dial:

Selection of an item on the screen or in a list or a menu, then confirmation with a short press.

Other than for menus and lists, a short press displays a contextual menu depending on the current screen.

Rotation with map displayed: zoom the map scale in and out.

Access to the **"RADIO"** menu and display the list of stations received.

Access to the **"MUSIC"** menu, and display of the CD/MP3/Apple® tracks and folders.


Long press: display the audio settings screen for the radio tuner source.

Long press: display the audio settings screen for the **"MEDIA"** (CD/USB/iPod/Streaming/AUX) sources.

Short press without the engine running: on / off.

Short press with the engine running: audio source off / restore.

Volume adjustment (each source is independent, including TA messages and navigation instructions).

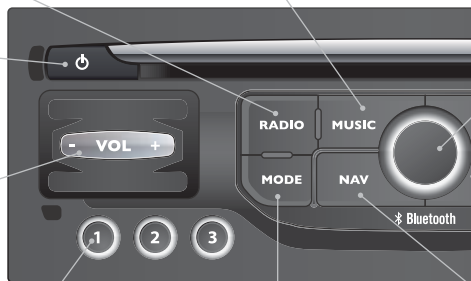

Short press: select pre-set radio station.

Long press: pre-set the current station.

**MODE** button: Selection of the type of permanent display.

Long press: black screen (DARK).

Access to the **"Navigation - guidance"** menu and display the recent destinations.

# 01 FIRST STEPS

Open the **"Configuration"** menu.


Long press: access to the GPS coverage and the navigation demonstration mode.

Open the **"Telephone"** menu and display the list of recent calls or accept an incoming call.

Select:

- the previous/next line in a list or menu.
- the previous / next media folder.
- step by step selection of the previous/next radio frequency.
- the previous / next MP3 folder.

Move up/down, in **"Move the map"** mode.

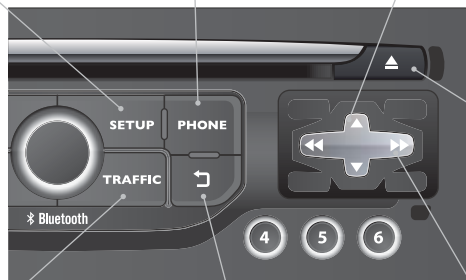

Continuous press: reinitialisation of the system.

Open the **"Traffic information"** menu and display the current traffic alerts.

Abandon the current operation, up one level in the menu.  
Long press: return to the permanent display.

Select:

- the next lower / higher radio frequency automatically.
- the previous / next CD track, MP3 track or media.
- the left / right of the screen when a menu is displayed.

Move left / right in **"Move the map"** mode.

## 02 GENERAL OPERATION




Press the **MODE** button several times in succession for access to the following displays:

"**RADIO**"



"**TELEPHONE**"

(If conversation in progress)

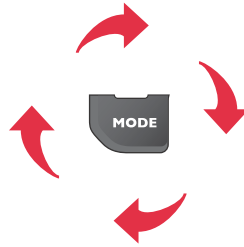

"**MAP IN WINDOW**"

(If navigation guidance in progress)



"**FULL SCREEN MAP**"



**SETUP: PARAMETERS**

date and time, display configuration, sound.



Changing the audio source:

**RADIO:** RADIO broadcasts.

**MUSIC:** playing MUSIC.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.



## 02 GENERAL OPERATION

### DISPLAY ACCORDING TO CONTEXT



A press on the dial gives access to short-cut menus according to the display in the screen.

#### RADIO:

- 1 Activate / Deactivate TA
- 1 Activate / Deactivate RDS
- 1 Change waveband
- 1 TA
- 2 FM
- 2 AM

#### TELEPHONE (call in progress):

- 1 Private mode
- 1 Put call on hold

1 DTMF ring tones

1 Hang up

#### MUSIC MEDIA PLAYERS, CD or USB (according to media):

Play modes:

- 1 Normal
- 1 Random
- 1 Random on all media
- 1 Repetition

#### FULL SCREEN MAP OR IN A NEW WINDOW:

1 Stop / Restore guidance

1 Select destination

2 Enter an address

2 Directory

2 GPS coordinates

1 Divert route

1 Move the map

2 Info. on location

2 Select as destination

2 Select as stage

2 Save this place (contacts)

2 Quit map mode

1 Guidance criteria

# 03 STEERING MOUNTED CONTROLS

RADIO: select the previous/next preset station.


Select the next entry in the address book.

RADIO: change to the next radio station in the list.

Long press: automatic search for a higher frequency.

CD: select the next track.

CD: continuous press: fast forward play.

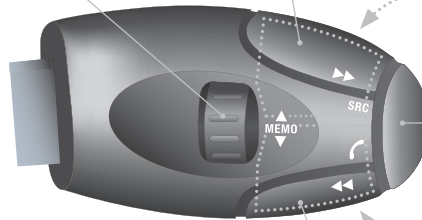

Volume increase.

Change the audio source.  
Start a call from the address book.  
Call/End call on the telephone.  
Press for more than 2 seconds:  
access to the address book.

Volume decrease.

Mute: press the volume increase and decrease buttons simultaneously.  
Restore the sound by pressing one of the two volume buttons.

RADIO: change to the previous radio station in the list.

Long press: automatic search for a lower frequency.

CD: select the previous track.


CD: continuous press: fast reverse.

# 04 AUDIO SETTINGS

1



They are accessible by the **MUSIC** button in the control panel or by a long press on **RADIO** according to the source in use.

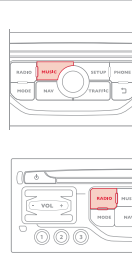

!

The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

2

- "Equalizer" (choice of 6 musical ambiances)
- "Bass"
- "Treble"
- "Loudness" (Activate/Deactivate)
- "Distribution" ("Driver", "All passengers")
- "Le-Ri balance" (Left/Right)
- "Fr-Re balance" (Front/Rear)
- "Auto. Volume" depending on road speed (Activate/Deactivate)

!

The audio settings (**Equalizer**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source.  
The settings for distribution and balance are common to all sources.


# 05 NAVIGATION - GUIDANCE

## Access to the "NAVIGATION" menu



Press **NAV**.

A short press on the end of the lighting control stalk repeats the last navigation message.

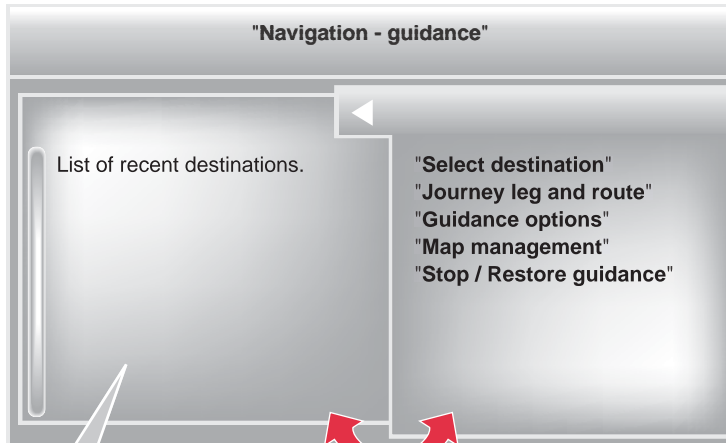

Contact a CITROËN dealer for mapping updates.

To delete the list of recent destinations, select "**Guidance options**" in the navigation menu then select "**Delete last destinations**" and confirm. Select "**Yes**" then confirm. Deleting just one destination is not possible.

Go from the list to the menu (left/right).




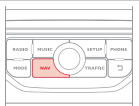

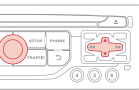

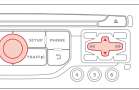

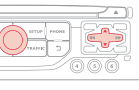


or


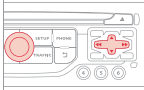









# 05 NAVIGATION - GUIDANCE

## SELECTING A DESTINATION

### TOWARDS A NEW DESTINATION

1		Press <b>NAV</b> to display the "Navigation - guidance" menu.	
2		Select " <b>Select destination</b> " and confirm, then select " <b>Enter an address</b> " and confirm.	
3		Select the " <b>Country</b> " function then confirm.	
4		Select " <b>Town</b> " function then confirm to enter the destination town.	
5		Select the letters in the name of the town one at a time, confirming each one with the dial.	

6		Select the town from the list offered, then confirm. A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed directly by selecting and confirming " <b>List</b> " on the screen.	
7		Turn the dial and select " <b>OK</b> " then confirm.	
8		If possible, enter the " <b>Road</b> " and " <b>N°/X</b> " information in the same way.	
		Select " <b>Archive</b> " to save the address entered in a contact file. The system allows up to 400 contact files to be recorded.	
9		Confirm " <b>OK</b> " to start guidance.	
10		Select the guidance criteria: " <b>Fastest route</b> ", " <b>Shortest route</b> " or optimised " <b>Distance/Time</b> ", then select the desired restriction criteria: " <b>With tolls</b> ", " <b>With Ferry</b> ", or " <b>Traffic info</b> " then confirm " <b>OK</b> ".	

# 05 NAVIGATION - GUIDANCE


## SELECTING A DESTINATION

### TO ONE OF THE RECENT DESTINATIONS

1




Press **NAV** to display the "**Navigation - guidance**" menu.

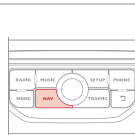

2



Select the desired destination and confirm to start guidance.

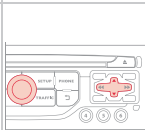

Delete the recent destinations:

- Press on **"NAV"**.
- Select **"Guidance options"** and confirm.
- Select **"Delete last destinations"** and confirm.

### TOWARDS A CONTACT IN THE CONTACTS DIRECTORY

 
i

Navigation towards a contact imported from your telephone is only possible if the address is compatible with the system.

1




Press **NAV** to display the "**Navigation - guidance**" menu.



2



 
Select **"Select destination"** and confirm, then select **"Directory"** and confirm.



3



 Selection the desired destination from your contacts and confirm **"OK"** to start the guidance.




# 05 NAVIGATION - GUIDANCE

## TOWARDS GPS COORDINATES

1



 Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select "**Select destination**" and confirm, then select "**GPS coordinates**" and confirm.



3



Enter the GPS coordinates and confirm "**OK**" to start the guidance.



## TOWARDS A POINT ON THE MAP

1



 
With the map displayed, press **OK** to display the contextual menu. Select "**Move the map**" and confirm.



2




Move the cursor using the control to identify the desired destination.



3



 
Press **OK** to display the contextual menu for "**Move the map**" mode.



4



 Select "**Select as destination**" or "**Select as stage**" and confirm.



# 05 NAVIGATION - GUIDANCE


## TOWARDS POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1



Press **NAV** to display the "Navigation - guidance" menu.

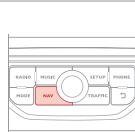


Select "**Search by Name**" to search for POIs by name and not by proximity.

2




Select the "**Enter an address**" function and confirm, then select "**Select destination**" and confirm.

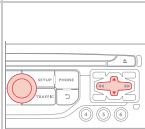

4



Search for POIs in the categories suggested in the following pages.

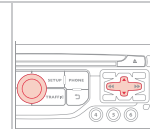

3



To select a POI close to your current location, select "**POI**" and confirm, then select "**Around the current place**" and confirm.

To select a POI as a stage on the route, select "**POI**" and confirm, then select "**On the route**" and confirm.


To select a POI as a destination, first enter the country and town (see "Towards a new destination"), select "**POI**" and confirm, finally select "**Near**" and confirm.



5



Select the POI and confirm "**OK**" to start the guidance.

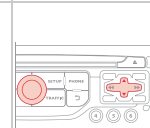















# 05 NAVIGATION - GUIDANCE








This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



## LIST OF PRINCIPAL POINTS OF INTEREST (POI)

-  Service station
-  Garage
-  CITROËN
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Cafeteria
-  Bed and breakfast
-  Airport

-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Sports complex, sports centre, sports ground
-  Swimming pool
-  Winter sports resort
-  Entertainment, show
-  Cinema

-  Theme parks
-  Hospital, Chemist, Vet
-  Police station
-  School
-  University
-  Town hall
-  Post office
-  Museum, Culture, Theatre, Historic monument
-  Tourist information, Tourist attraction
-  Risk area\*

The detailed procedure for updating POIs can be found at "<http://citroen.navigation.com>".

<https://www.automotive-manuals.net/>

\* According to availability in the country.

 
# 05 NAVIGATION - GUIDANCE

## ALERT PARAMETERS RISK AREAS

1




Press **NAV** to display the "**Navigation - guidance**" menu.



2



 Select "**Guidance options**" and confirm, then select "**Set parameters for risk areas**" and confirm.



3

 


Select:

- "Visual alert"
- "Audible alert"
- "Alert only in guidance"
- "Overspeed alarm only".

The choice of time of notification defines how long in advance that Risk area warnings are given.

Select "**OK**" to confirm the screen.



These functions are only available if risk areas have been downloaded and installed on the system.

The detailed procedure for updating risk area POIs can be found at [www.citroen.com](http://www.citroen.com).


# 05 NAVIGATION - GUIDANCE

## ADDING A STAGE

1




Press **NAV** to display the "Navigation - guidance" menu.

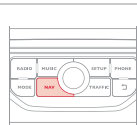

2



 Select "**Journey leg and route**" then confirm.



3



 
Select "**Add a stage**" then confirm.  
The address of the stage is entered as a destination, by "**Enter an address**", a contact in "**Directory**", or "**Previous destinations**".



4



Select "**Close to**" a route passing close to the stage or "**Strict**" for a route passing through the stage.  
Confirm "**OK**" to start the guidance, and give a general indication of the guidance route.




## ORGANISING STAGES

1



 
To organise stages, carry out operations 1 to 2 again, then select "**Order/delete journey legs**" and confirm.



2



 
Select the stage that you want to move in the order.



3



 Select and confirm to save the modifications.




Select "**Delete**" to delete the stage.

# 05 NAVIGATION - GUIDANCE

 
## ROUTE OPTIONS

### CALCULATION CRITERIA

1



 Press **NAV** to display the "Navigation - guidance" menu.



2



Select "**Guidance options**" and confirm.



 
3



Select "**Define calculation criteria**" and confirm.

This function allows modification of:

- the guidance criteria: ("**Fastest route**", "**Shortest route**", "**Distance/Time**"),
- the exclusion criteria: ("**With tolls**" or "**With Ferry**"),
- traffic avoidance: ("**Traffic info**").



i

If traffic avoidance (Traffic info) is selected, the system suggests an alternative route if there is a delay on the guidance route.

4



Select "**OK**" and confirm to save the modifications.



# 05 NAVIGATION - GUIDANCE

 
## MAP MANAGEMENT

### SELECTING THE POINTS OF INTEREST DISPLAYED ON THE MAP

1



Press **NAV** to display the "Navigation - guidance" menu.



2



Select "**Map management**" and confirm.



3



Select "**Map details**" and confirm.



4



Select from the various categories the ones that you want to display on the screen.

 


Select "**By default**" to have only "**Oil stations, garages**" and "**Accident-prone area**" appear on the map (if installed in the system).

5



Select "**OK**" then confirm and select "**OK**" again then confirm to save the modifications.




# 05 NAVIGATION - GUIDANCE

## MAP ORIENTATION

1



 
Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select **"Map management"** and confirm.



3



 Select **"Map orientation"** and confirm.




4



Select:

 - **"Vehicle direction"** to have the map follow the direction of travel,
- **"North direction"** to keep the map always North up,
- **"Perspective view"** to display a perspective view.



The colour of the map, different from the day and night mode, is configured in the **"SETUP"** menu.



Street names are visible on the map from the 100 m scale.

# 05 NAVIGATION - GUIDANCE

## ADJUSTING THE GUIDANCE SPEECH SYNTHESIS

### ADJUSTING THE VOLUME/DEACTIVATION

The volume setting of guidance messages is also accessible via the "SETUP" / "Voice synthesis" menu.




The volume of messages can be adjusted during the transmission of the message using the volume adjustment control.

1




Press NAV to display the "Navigation - guidance" menu.

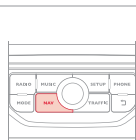

2



 
Select "Guidance options" and confirm.



3



 
Select "Set speech synthesis" and confirm.



4



 
Select the volume graph and confirm.



5



 Adjust the volume to the desired level and confirm.




Select "Deactivate" to deactivate voice messages.

6



 Select "OK" and press the dial to confirm.




# 05 NAVIGATION - GUIDANCE

## MALE VOICE / FEMALE VOICE

1



 Press **SETUP** to display the configuration menu.



2



Select "**Voice synthesis**" and confirm.



3



Select "**Select male voice**" or "**Select female voice**" then confirm "**Yes**" to activate a male or female voice. The system restarts.






# 06 TRAFFIC INFORMATION

Access to the "TRAFFIC INFORMATION" menu



Press "TRAFFIC".

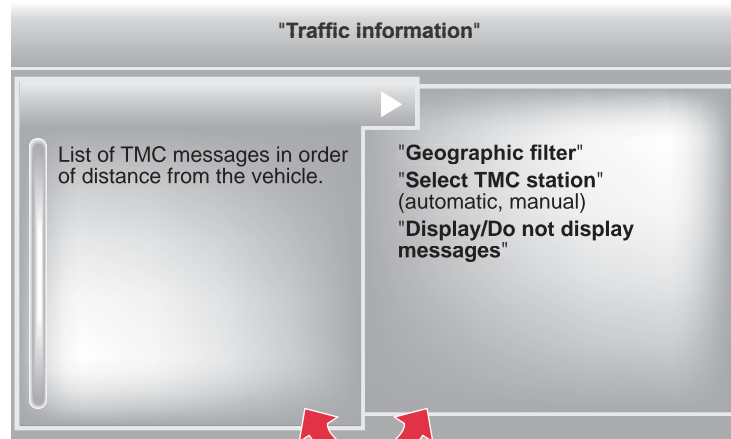

Go from the list to the menu (left/right).



or



# 06 TRAFFIC INFORMATION

## CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

 
TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

The navigation system can then suggest an alternative route to avoid a traffic problem.

1



Press the **TRAFFIC** button to display the **Traffic information** menu.



2



Select the **"Geographic filter"** function and confirm.

 


3



The system offers a choice of:


- **"Retain all the messages"**,
- or
- **"Retain the messages"**
  - **"Around the vehicle"**, (confirm the mileage to modify and select the distance),
  - **"On the route"**.



4



 Confirm **"OK"** to save the modifications.



i

We recommend:

- a filter on the route and
- a filter around the vehicle of:
  - 12 miles (20 km) in urban areas,
  - 30 miles (50 km) on motorways.



# 06 TRAFFIC INFORMATION

## PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



 
2 Red and yellow triangle: traffic information, for example:




## RECEIVING TA MESSAGES


! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


1  Press **RADIO** to display the "FM / AM band" menu.



 
2  Select "**Guidance options**" then confirm.



 3  Activate or deactivate "**TA**" then confirm.



! The volume setting for TA messages can be adjusted only during the transmission of this type of alert.

 Activate or deactivate the function at any time by pressing the button. During a message, press the button to interrupt it.




<https://www.automotive-manuals.net/>

# 07 USING THE TELEPHONE

Access to the "TELEPHONE" menu



Press **PHONE**.

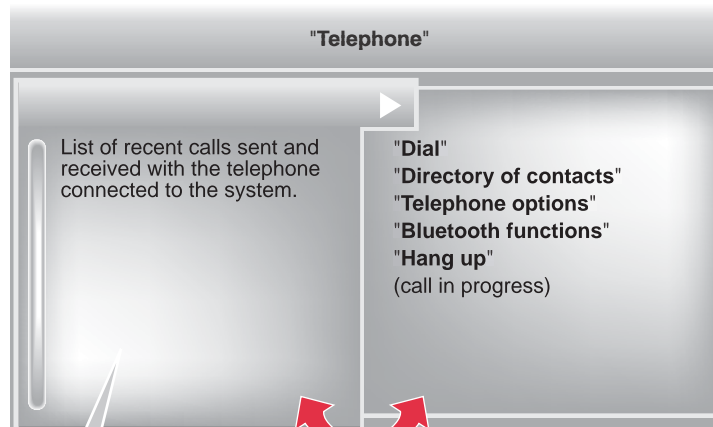

In the top bar of the permanent display

- No telephone connected.
- Telephone connected.
- Incoming call.
- Outgoing call.
- Synchronisation of address book in progress.
- Telephone call in progress.

To make a call, select a number in the list and confirm "OK" to start the call.



Connecting a different telephone deletes the list of recent calls.

Go from the list to the menu (left/right).




or



# 07 USING THE TELEPHONE

## PAIRING A BLUETOOTH TELEPHONE FIRST CONNECTION

 Visit [www.citroen.co.uk](http://www.citroen.co.uk) for more information (compatibility, additional help, ...).

1



 
Activate the telephone's Bluetooth function and ensure that it is "shown to all" (telephone configuration).



2




Press this button.



3



 Select "**Bluetooth functions**" and confirm.




!

For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.

4



 Select "**Peripherals search**" and confirm.  
The list of peripherals detected is displayed. Wait until the "**Connect**" button is available.



5



Select the name of the desired peripheral from the list of devices detected then select "**Connect**" and confirm.



 
6



The system offers to connect the telephone:

- in "**Hands-free mode**" (telephone only),
- in "**Audio**" mode (streaming: playing music files on the telephone),
- or "**All**" (for selection of both modes).

Select "**OK**" and confirm.



## 07 USING THE TELEPHONE



The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.



The "**Hands-free mode**" should be used in preference if "Streaming" is not desired.



The ability of the system to connect in only one mode depends on the telephone. The two modes may both connect by default.

7



Select a code for the connection then confirm "**OK**".



8

Enter the same code on the telephone then accept the connection.



Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.




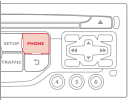



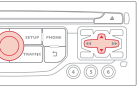
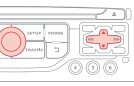

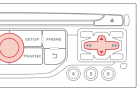

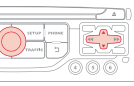

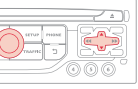

Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated and visible). To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.

# 07 USING THE TELEPHONE


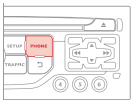

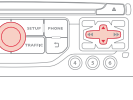

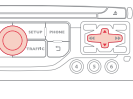



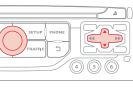



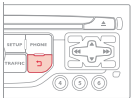

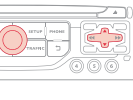
## DIRECTORY / SYNCHRONIZING CONTACTS

<p>1</p>  <p>Press <b>PHONE</b> then select "<b>Contacts management</b>" and confirm.</p>		<p>2d</p>  <p>Select "<b>Import all the entries</b>" to import all the contacts in the telephone and save them in the system. Once imported, a contact remains visible whatever telephone is connected.</p>	
<p>2a</p>  <p>Select "<b>New contact</b>" to enter a new contact.</p>		<p>2e</p> <p>Selection "<b>Synchronization options</b>":</p> <ul style="list-style-type: none"><li>- No synchronization: only the contacts saved in the system (always present).</li><li>- Display telephone contacts: only the contacts saved in the telephone.</li><li>- Display SIM card contacts: only the contacts saved on the SIM card.</li><li>- Display all phone contacts: contacts on the SIM card and in the telephone.</li></ul>	
<p>2b</p>  <p>Select "<b>Sort by Name/First name</b>" to choose the order in which they appear.</p>		<p>2f</p>  <p>Select "<b>Contact mem. status</b>" to see the number of contacts saved in the system or imported, and the free memory.</p>	
<p>2c</p>  <p>Select "<b>Delete all contacts</b>" to delete the contacts saved in the system.</p>			



# 07 USING THE TELEPHONE

## MANAGING CONTACTS

<p><b>1</b></p>  <p>Press <b>PHONE</b> then select "<b>Directory of contacts</b>" and confirm.</p>		<p><b>5</b></p>  <p>Select "<b>Import</b>" to copy one contact to the system.</p>	
<p><b>2</b></p>  <p>Select the desired contact and confirm.</p>		<p><b>6</b></p>  <p>Select "<b>Delete</b>" to delete a contact saved in the system.</p>	
<p><b>3</b></p>  <p>Select "<b>Call</b>" to start the call.</p>		<p><b>7</b></p>  <p>Select <b>OK</b></p> <p>or</p>  <p>press the back button to exit this menu.</p>	 
<p><b>4</b></p>  <p>Select "<b>Open</b>" to view an external contact or modify a contact saved in the system.</p>		<p>Delete the addresses saved in the directory of contacts:</p> <ul style="list-style-type: none"><li>- Press on <b>PHONE</b>.</li><li>- Select "Directory of contacts".</li><li>- Select "Display contacts" and confirm, then select the address.</li><li>- Select "Delete" and confirm.</li></ul> <p>(This operation must be carried out contact by contact).</p>	
<p><b>i</b> It is necessary to import an external contact to modify the record. It will be saved in the system. It is not possible to modify or delete contacts in the telephone or the SIM card via the Bluetooth connection.</p>			

# 07 USING THE TELEPHONE

## MAKING A CALL

 
Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

### CALLING A NEW NUMBER

1



Press **PHONE** twice.



2



 
Select "**Dial**" then confirm.



3



Dial the telephone number using the virtual keypad selecting each number in turn.  
Confirm "**OK**" to make the call.




### CALLING A CONTACT

1



 
Press **TEL** or twice on **PHONE**.



2



 
Select "**Directory of contacts**" then confirm.



3



 
Select the desired contact and confirm.  
If access was via the **PHONE** button, select "**Call**" and confirm.



4



 Select the number and confirm to start the call.



# 07 USING THE TELEPHONE

## CALLING A RECENTLY ENTERED NUMBER

1



 
Press **TEL**, select "Call list" and confirm,



or




Press **PHONE** to display the calls log.



2



 Select the desired number and confirm.




To erase the calls log, press **PHONE** twice, select "Phone functions" and confirm then select "Delete calls log" and confirm.

## ENDING A CALL

 1a



Press **PHONE** then select "OK" to end the call.



1b



Or make a long press on **TEL** at the steering mounted controls.



1c



 
Or make two short presses on **TEL** at the steering mounted controls.




1d



Or press the **MODE** button, as many times as necessary, until the telephone screen is displayed.



 Press "OK" to display the contextual menu then select "Hang up" and confirm.



# 07 USING THE TELEPHONE

## RECEIVING A CALL

 
1

An incoming call is announced by a ring and a superimposed display on the screen.

2



"Yes" to accept the call is selected by default.  
Press "**OK**" to accept the call.  
Select "**No**" and confirm to reject the call.



A short press on **TEL** accepts an incoming call.  
A long press on **TEL** rejects an incoming call.






# 07 USING THE TELEPHONE
   
## OPTIONS DURING A CALL \*

1



During a call, press the **MODE** button several times to select display of the telephone screen, then press "**OK**" to open the contextual menu.



Or make a short press on this button.

2a



 
Select "**Private mode**" and confirm to take the call on the handset.  
Or select "**Hands-free mode**" and confirm to take the call via the vehicle's speakers.



2b




Select "**Put call on hold**" and confirm to put the current call on hold.  
Or select "**Resume the call**" and confirm to resume the call on hold.



2c



 
Select "**DTMF ring tones**" to use the numerical keypad, so as to navigate through the menu of an interactive vocal server.



2d



 Select "**Hang up**" to end the call.




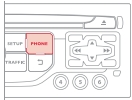

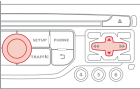


It is possible to hold a 3-way conference call by making 2 calls in succession\*. Select "**Conference mode call**" in the contextual menu accessible using this button.




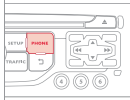

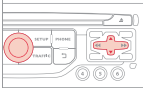

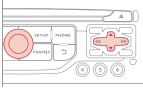



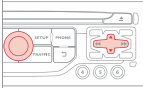
\* Depending on the compatibility of the phone and your service plan.

# 07 USING THE TELEPHONE

## MANAGING PAIRED TELEPHONES

<p>1</p>  <p>Press <b>PHONE</b> twice.</p>	
<p>2</p>  <p>Select "<b>Bluetooth functions</b>".</p>	
<p>3</p>  <p>Select "<b>List of the paired peripherals</b>" and confirm.</p> <p>It is possible to:</p> <ul style="list-style-type: none"><li>- "<b>Connect</b>" or "<b>Disconnect</b>" the selected telephone,</li><li>- delete the pairing of the selected telephone.</li></ul> <p>It is also possible to select all pairings.</p>	

## CHANGING THE RING TONE

<p>1</p>  <p>Press <b>PHONE</b> twice.</p>	
<p>2</p>  <p>Select "<b>Phone functions</b>" and confirm.</p>	
<p>3</p>  <p>Select "<b>Ring options</b>" and confirm.</p>	
<p>4</p>  <p>You can adjust the volume and the type of ring tone.</p>	
<p>5</p>  <p>Select "<b>OK</b>" and confirm to save the changes.</p>	





# 08 RADIO

## Access to the "RADIO" menu



Press RADIO.

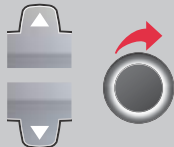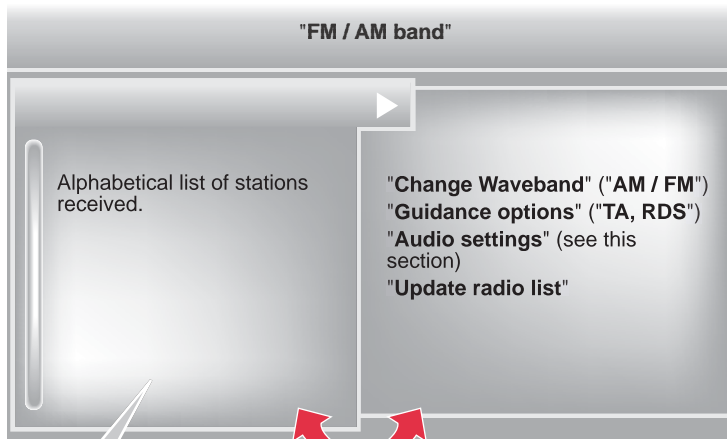

Press ▲ or ▼ or use the rotary control to select the previous or next station in the list.

Go from the list to the menu (left/right).



or





# 08 RADIO

## CHANGING WAVEBAND

 


The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a fault with the audio system.

1




Press **RADIO** or **OK** to display the contextual menu.



2



 Select **"Change waveband"**.



3



Select **"AM / FM"** and confirm.



## SELECTING A STATION



 
The quality of reception is represented by the number of active waves in this symbol.

1a



### By alphabetical list

Press **RADIO**, select the station of your choice and confirm.




1b



### By automatic frequency search

 Press **◀** or **▶** for the automatic search for a lower or higher radio frequency.  
Or turn the thumb wheel at the steering mounted controls.




1c



### By manual frequency search

 Press **▲** or **▼** to adjust the radio frequency step by step.




# 08 RADIO

## PRESETTING A STATION

1



 After selecting a station, press one of the buttons on the numerical keypad for 2 seconds to preset the current station.  
An audible signal confirms that the station has been preset.



2



Press the button on the numerical keypad to recall a preset station.  
Or press then turn the thumb wheel at the steering mounted controls.



## ACTIVATE / DEACTIVATE RDS

 


RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1




Press **RADIO**.



2



 Select "**Guidance options**" then confirm.



3



Activate or deactivate "**RDS**" then confirm.






# 09 MUSIC MEDIA PLAYERS

Access to the "MUSIC MEDIA PLAYER" menu



Press **MUSIC**.

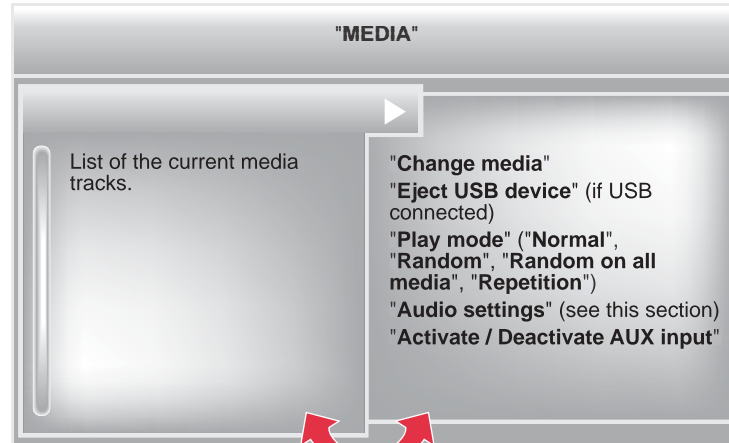

Go from the list to the menu (left/right).




or



# 09 MUSIC MEDIA PLAYERS

## CD, MP3 CD / USB PLAYER

### INFORMATION AND ADVICE

 The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.

No other type of file (.mp4, .m3u...) can be played.

WMA files must be of the standard wma 9 type.

The sampling rates supported are 11, 22, 44 and 48 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage or iPod devices via the USB port (suitable cable not supplied).

If a partitioned USB memory key is connected to the system, only the first partition is recognised.

Control of the peripheral device is with the audio system controls.

The number of tracks is limited to 2000 maximum, 999 tracks per folder.

If the current consumption at the USB port exceeds 500 mA, the system goes into protection mode and deactivates the port.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.



The system does not support the operation of an Apple® player and a USB memory stick connected at the same time.



It is recommended that official Apple® USB cables are used to ensure correct operation.

# 09 MUSIC MEDIA PLAYERS

## SOURCES



Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied)



The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the system memorises these lists and if they are not modified, the loading time will be shorter.




Play starts automatically after a period which depends on the capacity of the USB memory stick.

## SELECTION OF SOURCE




The **SOURCE** button on the steering mounted controls allows a direct change to the next media source.

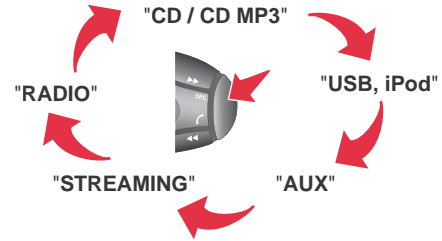

1



 
Press **MUSIC** to display the "MEDIA" menu.



2





 









Select "**Following media source**" and confirm.



Repeat the operation as many times as necessary to obtain the desired media source (except for radio which is accessible either with **SOURCE** or **RADIO**).

# 09 MUSIC MEDIA PLAYERS

## SELECTING A TRACK

Previous track.		<b>MUSIC: List of USB or CD tracks or folders</b>	
Next track.		Up or down in the list.	
Previous folder.		Confirm, next menu level.	
Next folder.		Up one menu level.	
Fast forward.	Long press 		
Fast backward.	Long press 		
Pause: long press on <b>SRC</b> .			

# 09 MUSIC MEDIA PLAYERS

## CONNECTING APPLE® PLAYERS

**1** Connect the Apple® player to the USB port using a suitable cable (not supplied).  
Play starts automatically.

**2** Control is via the audio system.

**i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).  
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.  
The "Shuffle tracks" mode on an iPod® corresponds to the "Random" mode on the audio system.  
The "Shuffle albums" mode on an iPod® corresponds to the "Random all" on the audio system.  
"Shuffle tracks" is restored by default on each connection.

**i** The version of software in the audio system may not be compatible with the generation of your Apple® player.  
The list of devices compatible with software versions is available from CITROËN dealers.

## AUDIO STREAMING



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

**1**

Connect the telephone: see "USING THE TELEPHONE".  
Select "**Audio**" or "**All**" profile.

**2**

If play does not start automatically, it may be necessary to start the audio playback from the telephone.  
Control is from the peripheral device or by using the audio system buttons.

**!**

Once connected in streaming mode, the telephone is considered to be a media source.  
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.



# 09 MUSIC MEDIA PLAYERS

## USING THE AUXILIARY INPUT (AUX) JACK AUDIO/USB CABLE NOT SUPPLIED

 
1

Connect the portable device (MP3, WMA player...) to the JACK auxiliary audio socket or USB port using a suitable cable.

2



Press **MUSIC** to display the "MUSIC" menu.




3



Select "**Activate / Deactivate AUX input**" and confirm.

 First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.



!

Display and management of the controls are via the portable device.


# 10 CONFIGURATION
 
## DISPLAY CONFIGURATION

1




Press **SETUP** to display the "Configuration" menu.



2



 Select "**Display configuration**" and confirm.




3a



Select "**Choose colour**" and confirm to select the screen colour harmony and the map presentation mode:

 
- day mode,
- night mode,
- automatic day/night mode, according to whether the headlamps are on.



3b



 Select "**Adjust luminosity**" and confirm to adjust the screen brightness. Press "**OK**" to save the changes. The settings for day and night are independent.




# 10 CONFIGURATION

## SETTING THE DATE AND TIME

1



 
Press **SETUP** to display the "Configuration" menu.



2



 
Select "**Display configuration**" and confirm.



3



 Select "**Set date and time**" and confirm.




Select "**Synchronize the minutes with GPS**" so that setting the minutes is done automatically by satellite reception.


4



 Select the setting to adjust.  
Confirm by pressing **OK**, then adjust the setting and confirm again to save the modification.



 Adjust the settings one by one.  
Then select "**OK**" on the screen and confirm to save the settings.





<https://www.automotive-manuals.net/>

# 11 TRIP COMPUTER

 
## TRIP COMPUTER

1

Press the MODE button several times in succession until the trip computer is displayed.



- The "vehicle" tab:  
The range, the current fuel consumption and the distance remaining.
- The "1" (trip 1) tab with:  
The average speed, the average fuel consumption and the distance travelled calculated over route "1".
- The "2" (trip 2) tab with the same functions for a second route.



Each press of the button at the end of the wiper stalk displays the different trip computer information in succession, according to the screen.

## A FEW DEFINITIONS

i

**Range:** displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 10 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km). If, whilst driving, dashes are displayed continuously in place of the digits, contact a CITROËN dealer.

**Current fuel consumption:** only calculated and displayed above 20 mph (30 km/h).

**Average fuel consumption:** this is the average fuel consumption since the last trip computer zero reset.

**Distance travelled:** calculated since the last trip computer zero reset.

**Distance remaining to the destination:** calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

**Average speed:** this is the average speed calculated since the last trip computer zero reset (ignition on).

# 12 SCREEN MENU MAP



## MAIN FUNCTION

- 1 OPTION A
  - 2 option A1
  - 3 option A2
- 1 OPTION B...

## "Navigation - guidance" MENU

- 1 **Select destination**
  - 2 Enter an address
  - 2 Directory
  - 2 GPS coordinates
- 1 **Journey leg and route**
  - 2 Add a stage
    - 3 Enter an address
    - 3 Directory

- 3 Previous destinations
- 2 Order/delete journey legs
- 2 Divert route
- 2 Chosen destination

## Guidance options

- 1 Define calculation criteria
  - 2 Fastest route
  - 3 Shortest route
  - 3 Distance/Time
  - 3 With tolls
  - 3 With Ferry
  - 3 Traffic info
- 2 Set speech synthesis
- 2 Delete last destinations
- 2 Set parameters for risk areas

## Map management

- 1 Map orientation
  - 2 Vehicle direction
  - 3 North direction
  - 3 Perspective view
- 2 Map details
  - 2 Move the map
  - 2 Mapping and updating
  - 2 Description of risk areas database
- 1 **Stop / Restore guidance**
  - 2 Fastest route
  - 2 Shortest route
  - 2 Distance/Time
  - 2 With tolls
  - 2 With Ferry
  - 2 Traffic info

# 12 SCREEN MENU MAP

## "TRAFFIC" MENU

- 1 **Geographic filter**
  - 2 Retain all the messages
  - 2 Retain the messages
  - 3 Around the vehicle
  - 3 On the route
- 1 **Select TMC station**
  - 2 Automatic TMC
  - 2 Manual TMC
  - 2 List of TMC stations
- 1 **Display / Do not display messages**

## "Phone" MENU

- 1 **Dial**
- 1 **Directory of contacts**

- 2 **Call**
- 2 **Open**
- 2 **Import**
- 2 **Delete**
- 2 **Cancel**
- 1 **Contacts management**
  - 2 **New contact**
  - 2 **Sort by First name/Name**
  - 2 **Delete all contacts**
  - 2 **Import all the entries**
  - 2 **Synchronization options**
    - 3 **No synchronization**
    - 3 **Display telephone contacts**
    - 3 **Display SIM card contacts**
    - 3 **Display all phone contacts**
  - 2 **Contact mem. status**

- 1 **Phone functions**
  - 2 **Ring options**
  - 2 **Delete calls log**
- 1 **Bluetooth functions**
  - 2 **List of the paired peripherals**
    - 3 **Connect**
    - 3 **Disconnect**
    - 3 **Delete**
    - 3 **Delete all**
    - 3 **Cancel**
  - 2 **Peripherals search**
  - 2 **Rename radiotelephone**
- 1 **Hang up**

# 12 SCREEN MENU MAP

## "RADIO" MENU

1 **Change Waveband**

2 AM / FM

1 **Guidance options**

2 TA

2 RDS

1 **Audio settings**

2 Equalizer

3 None

3 Classical

3 Jazz

3 Rock

3 Techno

3 Vocal

2 Bass

2 Treble

2 Loudness

3 Activated / Deactivated

2 Distribution

3 Driver

2 All passengers

3 Le-Ri balance

2 Fr-Re balance

2 Auto. Volume

3 Activated / Deactivated

1 **Update radio list**

## "MUSIC" MENU

1 **Change Media**

2 CD

2 BT Streaming

2 USB/iPod

2 AUX

1 **Read mode**

2 Normal

2 Random

2 Random on all media

2 Repetition

1 **Audio settings**

1 **Activate / Deactivate AUX input**



# 12 SCREEN MENU MAP

## "SETUP" MENU

### 1 Display configuration

2 Choose colour

3 Harmony

3 Cartography

4 Day mode

4 Night mode

4 Auto Day/Night

2 Adjust luminosity

2 Set date and time

2 Select units

### 1 Speech synthesis setting

2 Guidance instructions volume

2 Select male voice / Select female voice

### 1 Select language

2 Français

2 English

2 Italiano

2 Portuguese

2 Español

2 Deutsch

2 Nederlands

2 Turkish

2 Polski

2 Русский

### 1 Define vehicle parameters\*

2 Parking assistance

2 Operation of wipers

3 Engage rear wiper in REVERSE

2 Lighting configuration

3 Duration of guide-me home lighting

3 Directional headlamps

3 Mood lighting

3 Daytime running lamps

### 1 Trip computer

2 Alert log

2 Status of functions

\* The parameters vary according to the vehicle.

# FREQUENTLY ASKED QUESTIONS

The following table groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options" \ "Define calculation criteria".
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
	The POIs have not been downloaded.	Download the POIs from the website: "http://citroen.navigation.com".
The risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a Risk area alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for a Risk area located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk area. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> <li>- Check that your telephone's Bluetooth function is switched on.</li> <li>- Check in the telephone settings that it is "visible to all".</li> </ul>
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
The CD is ejected automatically or is not played by the player.	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>Le CD has been recorded in a format that is not compatible with the player.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio system.</p>	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section.</li> <li>- The audio system's CD player does not play DVDs.</li> <li>- Some recorded CDs will not be played by the audio system because they are not of the correct quality.</li> </ul>
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

<https://www.automotive-manuals.net/>

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a CITROËN dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

<https://www.automotive-manuals.net/>

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.


# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).



<https://www.automotive-manuals.net/>



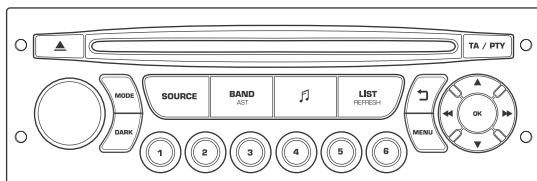

# Audio system

## AUDIO SYSTEM / BLUETOOTH



Your Audio system is coded in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

### CONTENTS

<b>01 First steps</b>	<b>p.</b>	<b>9.64</b>
<b>02 Steering mounted controls</b>	<b>p.</b>	<b>9.65</b>
<b>03 Main menu</b>	<b>p.</b>	<b>9.66</b>
<b>04 Audio</b>	<b>p.</b>	<b>9.67</b>
<b>05 USB Box</b>	<b>p.</b>	<b>9.70</b>
<b>06 Bluetooth functions</b>	<b>p.</b>	<b>9.73</b>
<b>07 Configuration</b>	<b>p.</b>	<b>9.76</b>
<b>08 Trip computer</b>	<b>p.</b>	<b>9.77</b>
<b>09 Screen menu map</b>	<b>p.</b>	<b>9.78</b>
<b>Frequently asked questions</b>	<b>p.</b>	<b>9.83</b>

# 01 FIRST STEPS

Select source:  
radio, audio CD / MP3 CD, USB,  
Jack connection, Streaming,  
AUX.

Select wavebands  
FM1, FM2, FMast  
and AM.

Audio settings: front/  
rear fader, left/right  
balance, bass/treble,  
loudness, audio  
ambiences.

Display the list of  
local stations.  
Long press: CD  
tracks or MP3 folders  
(CD / USB).

Abandon the current  
operation.

Eject CD.

Select the screen display  
mode:  
Date, audio functions, trip  
computer, telephone.

On/off, volume setting.

The DARK button changes the screen display  
for improved driving comfort at night.  
1<sup>st</sup> press: upper bar only illuminated.  
2<sup>nd</sup> press: black screen.  
3<sup>rd</sup> press: return to standard display.

Buttons 1 to 6:  
Select a pre-set radio station.  
Long press: pre-set a station.


Display main menu.

TA (Traffic Announcements)  
on/off.  
Long press: PTY\* (radio  
Programme Type) mode.

Automatic frequency search  
down/up.  
Select previous/next CD, MP3  
or USB track.

Confirm.

Select next frequency down/up.  
Select previous/next MP3 folder.  
Select previous/next folder / genre /  
artist / playlist (USB).

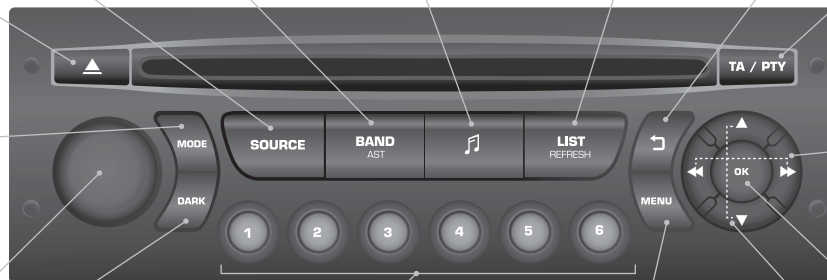

## 02 STEERING MOUNTED CONTROLS

Radio: select the previous/next pre-set station.

USB: select genre / artist / folder from the classification list.


Select the previous/next item in a menu.

Radio: automatic search for a higher frequency.

CD / MP3 / USB: selection of the next track.

CD / USB: continuous press: fast forwards play.

Move in the list.

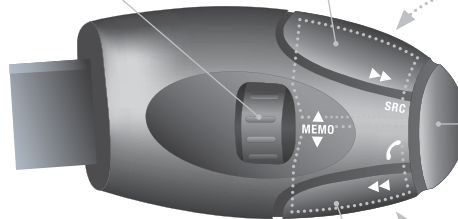

Volume increase.

Change audio source.  
Confirm a selection.  
Call/end call on the telephone.  
Press for more than 2 seconds:  
telephone main menu.

Volume decrease.

Mute: press the volume increase and decrease buttons simultaneously.  
The sound is restored by pressing one of the two volume buttons.

Radio: automatic search for a lower frequency.

CD / MP3 / USB: selection of the previous track.

CD / USB: continuous press: fast reverse.


Move in the list.

## 03 MAIN MENU

> MONOCHROME SCREEN C

**AUDIO FUNCTIONS:**  
radio, CD, USB, options.

**TELEPHONE:**  
Bluetooth hands-free,  
pairing, management  
of a call.

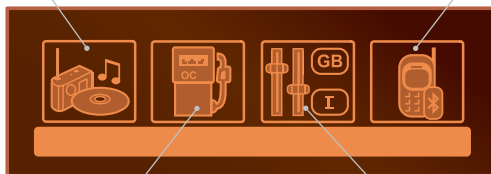

**TRIP COMPUTER:** entering  
of distances, alerts, status of  
functions.

**PERSONALISATION-  
CONFIGURATION:**  
vehicle parameters,  
display, languages.

> MONOCHROME SCREEN A




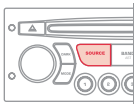

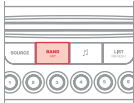

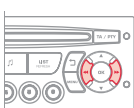

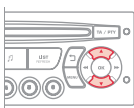



For a detailed global view of  
the menus available, refer to  
the "Screen menu map" in this  
section.

<https://www.automotive-manuals.net/>

# 04 AUDIO


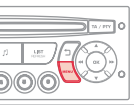



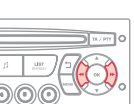

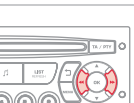


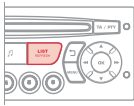

## RADIO SELECTING A STATION

1		Press the SOURCE button several times in succession and select the radio.	
2		Press the BAND AST button to select a waveband: FM1, FM2, FMast, AM.	
3		Briefly press one of the buttons to carry out an automatic search of the radio stations.	
4		Press one of the buttons to carry out a manual search up / down for radio frequencies.	
		Press the LIST REFRESH button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.	

The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

## RDS

1		Press the MENU button.	
2		Select AUDIO FUNCTIONS then press OK.	
3		Select the FM WAVEBAND PREFERENCES function then press OK.	
4		Select ACTIVATE RDS then press OK. RDS appears on the screen.	
		In radio mode, press OK directly to activate / deactivate RDS mode.	
		The RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. Under conditions of very weak reception, the system may change to a regional station.	

# 04 AUDIO

## RECEIVING TA MESSAGES



 
The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1

TA / PTY



Press the TA button to activate or deactivate traffic messages.



## CD PLAYING A CD



 
Insert circular compact discs only.  
Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.  
Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1

SOURCE




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2



 Press one of the buttons to select a track on the CD.




Press the LIST REFRESH button to display the list of tracks on the CD.

3



 Press and hold one of the buttons for fast forwards or fast backwards.



# 04 AUDIO

## MP3 CD PLAYING AN MP3 COMPILATION



Insert an MP3 compilation in the player.

The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.



 
On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

1



To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.




2



Press one of the buttons to select a folder on the CD.

 Press one of the buttons to select a track on the CD.



Press the LIST REFRESH button to display the list of directories of the MP3 compilation.

3



Press and hold one of the buttons for fast forward or backward play.



## MP3 CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.



The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.



Empty CDs are not recognised and may damage the system.

# 05 USB BOX

## USING THE USB BOX

The list of compatible equipment and the compression rates supported are available from CITROËN dealers.

1

This unit consists of a USB port and an auxiliary Jack socket\*. The audio files are transmitted from a portable device - digital player or a USB memory stick - to your Audio system and heard via the vehicle's speakers.



2

USB memory stick (1.1, 1.2 and 2.0) or Apple® player of generation 5 or later:

- USB memory sticks should be formatted FAT or FAT 32 (NTFS not supported),
- the Apple® player lead is essential,
- navigation through the file database is also possible by means of the steering mounted controls.



3

Other Apple® players of earlier generations and players using the MTP protocol\*:

- play via Jack-Jack lead only (not supplied),
- navigation through the file database is from the portable device.



## CONNECTING A USB MEMORY STICK

1

Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB memory stick.



The file formats supported are .mp3 (mpeg1 layer 3 only) and .wma (standard 9 only, 128 kbits/sec compression).

Certain playlist formats are supported (.m3u, ...) On reconnection of the previous memory stick used, play is resumed automatically with the last track played.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB device. The other sources are available during this time.

The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected.

When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

\* According to vehicle



# 05 USB BOX

 
## USING THE USB PORT

2


Press and hold LIST to display the different classifications.  
Select by Folder / Artist / Genre / Playlist, press OK to select the classification required, then press OK again to confirm.



- by Folder: all folders containing audio files recognised on the peripheral device.
- by Artist: all of the artist names defined in the ID3 Tags, classified in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.



 
Press LIST briefly to display the previously selected classification.  
Navigate through the list using the left/right and up/down buttons.  
Confirm the selection by pressing OK.



3



 
Press one of these buttons to gain access to the previous / next track on the classification list currently being played.  
Press and hold one of the buttons for fast forward or backward play.



4



 Press one of these buttons to gain access to the previous / next Genre, Folder, Artist or Playlist on the classification list currently being played.



## CONNECTING AN APPLE® PLAYER VIA THE USB PORT

1

The lists available are Artist, Genre and Playlist (as defined in the Apple® player).  
Selection and Navigation are described in steps 1 to 4 above.

!

Do not connect a hard disk or USB connection device other than audio equipment to the USB port. This could damage your installation.

# 05 USB BOX

## USING THE AUXILIARY INPUT (AUX)

JACK socket or USB port (according to vehicle)



The auxiliary input, JACK or USB, allows the connection of a portable device (MP3 player...).



Do not connect a device to both the JACK socket and the USB port at the same time.

1

 
Connect the portable device (MP3 player...) to the JACK socket or to the USB port, using a suitable cable (not supplied).



2



Press the SOURCE button several times in succession and select AUX.



## ADJUSTING THE VOLUME OF THE AUXILIARY SOURCE

1

 
First adjust the volume of your portable device.



2



Then adjust the volume of your audio system.



The display and control is via the portable device.



# 06 BLUETOOTH FUNCTIONS



## BLUETOOTH TELEPHONE

### SCREEN C

(Available according to model and version)

The services offered depend on the network, the SIM card and the compatibility of the Bluetooth equipment used.

Consult your telephone's manual and your operator to find out which services are available to you.

### PAIRING A TELEPHONE / FIRST CONNECTION




 
**!** For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.


**☀** Go to [www.citroen.co.uk](http://www.citroen.co.uk) for more information (compatibility, more help, ...).

**1** Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).

 


**2**  Press the MENU button.



**3**  In the menu, select:

- Bluetooth telephone function - Audio
- Bluetooth configuration
- Perform a Bluetooth search



**4** A window is displayed with a message that a search is in progress.

**5** The first 4 telephones recognised are displayed in this window.

**!** The TELEPHONE menu permits access to the following functions in particular: Directory\*, Call list, Pairing management.

\* If your telephone is fully compatible.

**6** Select the telephone to be connected from the list. Only one telephone can be connected at a time.

**7** A virtual keypad is displayed in the screen: enter a code with at least 4 digits. Confirm by pressing OK.



**8** A message is displayed in the screen of the telephone chosen. To accept the pairing, enter the same code on the telephone, then confirm with OK.

If pairing fails, the number of attempts is not limited.



**9** A message that the pairing has been successful appears in the screen.

**i** The automatic connection authorised is only active after the telephone has been configured.


The directory and the call list can be accessed after the synchronisation period.


# 06 BLUETOOTH FUNCTIONS


 
## RECEIVING A CALL

**1** An incoming call is announced by a ring and a superimposed display in the vehicle's screen.

**2**  Select the YES tab on the display using the buttons and confirm by pressing OK.




Press this button to accept the call.



## MAKING A CALL


**1** From the Bluetooth telephone function Audio menu, select Manage the telephone call then Call, Call list or Directory.

**2** Press this button for more than two seconds for access to your directory, then navigate with the thumb wheel.  
Or  
To dial a number, use your telephone's keypad, with the vehicle stationary.

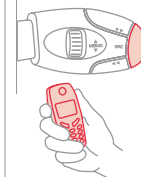

## ENDING A CALL

**1** During a call, press this button for more than 2 seconds.  
Confirm with OK to end the call.

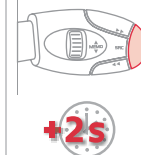

## 06 BLUETOOTH FUNCTIONS



### BLUETOOTH AUDIO STREAMING\*

!

Wireless transmission of the telephone's music files via the audio equipment. The telephone must be able to manage the appropriate Bluetooth profiles (Profiles A2DP / AVRCP).

1

Initiate the pairing between the telephone and the vehicle. This pairing can be initiated from the vehicle's telephone function menu or via the telephone's keypad. See steps 1 to 9 on the previous pages. During the pairing phase, the vehicle must be stationary with the key in the ignition.



 
2

Select the telephone to be connected from the telephone function menu.  
The audio system connects to a newly paired telephone automatically.

3



Activate the streaming source by pressing the SOURCE button\*\*. The tracks to be played can be controlled as usual via the buttons on the audio system control panel and the steering mounted controls\*\*\*. The contextual information can be displayed on the screen.




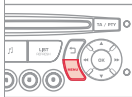

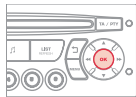




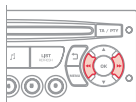

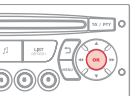

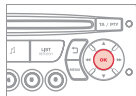

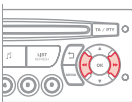

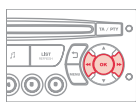
\* Depending on the compatibility of the telephone.

\*\* In certain cases, playing of the Audio files must be initiated from the keypad.

\*\*\* If the telephone supports the function.

# 07 CONFIGURATION

## SETTING THE DATE AND TIME SCREEN C
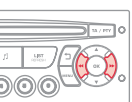
<p>1</p>  <p>Press the MENU button.</p>		<p>5</p>  <p>Press to confirm the selection.</p>	
<p>2</p>  <p>Using the arrows, select PERSONALISATION CONFIGURATION.</p> 		<p>6</p>  <p>Using the arrows, select ADJUST DATE AND TIME.</p>	
<p>3</p>  <p>Press to confirm the selection.</p>		<p>7</p>  <p>Press to confirm the selection.</p>	
<p>4</p>  <p>Using the arrows, select DISPLAY CONFIGURATION.</p>		<p>8</p>  <p>Adjust the settings one by one confirming by pressing the OK button. Next select the OK tab on the screen then confirm.</p>	

# 08 TRIP COMPUTER

## VEHICLE DIAGNOSTICS



Each press of the button, located at the end of the wiper stalk, displays the different trip computer information in succession, depending on the screen.



- the "vehicle" tab with:
- the range, the current fuel consumption and the distance remaining to the destination,
- the "1" tab (trip 1) with:
- the average speed, the average consumption and the distance travelled calculated over trip "1",
- the "2" tab (trip 2) with the same information for a second trip.



### Zero reset

When the required trip is displayed, press the control for more than two seconds.

## A FEW DEFINITIONS

**Range:** displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 10 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a CITROËN dealer.

**Current fuel consumption:** only calculated and displayed above 20 mph (30 km/h).

**Average fuel consumption:** this is the average fuel consumption since the last trip computer zero reset.

**Distance travelled:** calculated since the last trip computer zero reset.

**Distance remaining to the destination:** calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

**Average speed:** this is the average speed calculated since the last trip computer zero reset (ignition on).

# 09 SCREEN MENU MAP



## MONOCHROME A



### 1 MAIN FUNCTION

- 2 OPTION A
- 3 OPTION A1
- 3 OPTION A2
- 2 OPTION B...

### 1 RADIO-CD

- 2 RDS SEARCH
- 2 REG MODE
- 2 CD REPEAT
- 2 RANDOM PLAY

### 1 VEHICLE CONFIG\*

- 2 REV WIPE ACT
- 2 GUIDE LAMPS

### 1 OPTIONS

- 2 DIAGNOSTICS
- 3 CONSULT
- 3 ABANDON

\* The parameters vary according to vehicle.



# 09 SCREEN MENU MAP



## 1 UNITS

2 TEMPERATURE: °CELSIUS / °FAHRENHEIT

2 FUEL CONSUMPTION:  
2 KM/L - L/100 - MPG

## 1 DISPLAY ADJUST

2 YEAR

2 MONTH

2 DATE

2 HOUR

2 MINUTES

2 12 H/24 H MODE

## 1 LANGUAGE

2 FRANCAIS

2 ITALIANO

2 NEDERLANDS

2 PORTUGUES

2 PORTUGUES-BRASIL

2 DEUTSCH

2 ENGLISH

2 ESPANOL

# 09 SCREEN MENU MAP



## MONOCHROME C



Press the OK dial for access to short-cut menus according to the display on the screen:



### RADIO

- 1 activate / deactivate RDS
- 1 activate / deactivate REG mode
- 1 activate / deactivate radiotext

### CD / MP3 CD

- 1 activate / deactivate Intro
- 1 activate / deactivate track repeat (the entire current CD for CD, the entire current folder for MP3 CD)
- 1 activate / deactivate random play (the entire current CD for CD, the entire current folder for MP3 CD)

### USB

- 1 activate / deactivate track repeat (of the current folder / artist / genre / playlist)
- 1 activate / deactivate random play (of the current folder / artist / genre / playlist)

# 09 SCREEN MENU MAP



## MONOCHROME C

Pressing the MENU button displays:



### 1 AUDIO FUNCTIONS

#### 2 FM BAND PREFERENCES

##### 3 alternative frequencies (RDS)

4 activate / deactivate

##### 3 regional mode (REG)

4 activate / deactivate

##### 3 radio-text information (RDTXT)

4 activate / deactivate

#### 2 PLAY MODES

##### 3 album repeat (RPT)

4 activate / deactivate

##### 3 track random play (RDM)

4 activate / deactivate



### 1 TRIP COMPUTER

#### 2 ENTER DISTANCE TO DESTINATION

3 Distance: x miles

#### 2 ALERT LOG

3 Diagnostics

#### 2 STATUS OF THE FUNCTIONS\*

3 Functions activated or deactivated

\* The parameters vary according to vehicle.

# 09 SCREEN MENU MAP



## PERSONALISATION-CONFIGURATION

- 1
- 2 **DEFINE THE VEHICLE PARAMETERS\***
- 2 **DISPLAY CONFIGURATION**
  - 3 **video brightness adjustment**
    - 4 normal video
    - 4 inverse video
    - 4 brightness (- +) adjustment
  - 3 **date and time adjustment**
    - 4 day/month/year adjustment
    - 4 hour/minute adjustment
    - 4 choice of 12 h / 24 h mode
  - 3 **choice of units**
    - 4 l/100 km - mpg - km/l
    - 4 °Celsius / °Fahrenheit
- 2 **CHOICE OF LANGUAGE**



## BLUETOOTH TELEPHONE

- 1
- 2 **BLUETOOTH CONFIGURATION**
  - 3 **Connect/Disconnect a device**
  - 3 **Telephone function**
  - 3 **Audio Streaming function**
    - 4 Consult the paired device
    - 4 Delete a paired device
    - 4 Perform a Bluetooth search
- 2 **CALL**
  - 3 **Calls list**
    - 4 Directory
- 2 **MANAGE THE TELEPHONE CALL**
  - 3 **Terminate the current call**
  - 3 **Activate private mode**

\* The parameters vary according to vehicle.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Due to their quality level, certain writeable CDs will not be played by the audio system.</li> </ul>
The message "USB peripheral error" is displayed on the screen.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
The Bluetooth connection is cut.	The USB memory stick is not recognised. The memory stick may be corrupt.	Reformat the memory stick.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a CITROËN dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.

<https://www.automotive-manuals.net/>

**EXTERIOR**

Van dimensions	144-147
Platform cab dimensions	148-149

Accessories	107-108
Roof bars	107

Rear lamps, direction indicators	46-47, 133
3rd brake lamp	134
Changing rear bulbs	130, 133

Load space	20, 24
Doors, tailgate	24-26
Emergency control	26

Number plate lamp	134
-------------------	-----

Temporary puncture repair kit	122-123
Spare wheel, jack, changing a wheel, tools	124-128
Inflation, pressures	36-37, 152

Towing, lifting	141-142
Towbar	105-106
Rear parking sensors	86

Brakes, brake pads	85, 112, 114
Emergency braking	87
ABS, EBD	87
ASR, DSC	88
Tyre, pressure	36-37, 152
Snow chains	129
Rear suspension	79-81



Remote control	20-21
Changing the battery, reinitialisation	21
Key	21
Starting	45
Central locking / unlocking	20, 24
Locking / unlocking the load space	20, 24
Alarm	22-23

Wiper blades	140
Door mirrors	82
Side repeater	132

Front lamps, foglamps, direction indicators	46-48
Headlamp beam height adjustment	48
Changing front bulbs	130-132
Headlamp wash	49, 113
Snow shield	128

Front doors	24
Sliding side door	25
Key	21
Opening the bonnet	109

Filler cap, fuel tank	117-118
Fuel cut-off, Diesel priming	118-119

<https://www.automotive-manuals.net/>

## INSTRUMENTS AND CONTROLS

Instrument panels, screens, speedometers	27-28
Warning lamps, indicator lamps	29-34
Indicators, gauge	35, 38-39
Setting the time in the instrument panel	28
Dashboard lighting dimmer	39
Gear efficiency indicator	44

Lighting controls	46-48
Automatic illumination of headlamps	48
Foglamps	47
Daytime running lamps	47

Cruise control	51-53
Fixed speed limiter	53
Speed limiter	54-56

Headlamp beam height adjustment	48
Grip control	89-90

Opening the bonnet	109
Parking brake, handbrake	85

Electric windows, electric mirrors	82-84
------------------------------------	-------



Wiper controls	49-50
Automatic wiping	49
Screenwash / headlamp wash	49
Trip computer	Section 9

Starter, ignition	45
-------------------	----

Steering mounted controls:	
- eMyWay system	Section 9
- Audio system	Section 9



Right-hand side dashboard fuses	135-136
---------------------------------	---------

Steering wheel adjustment	44
Horn	87







Rear view mirror	83
Toll cards, car park tickets	75

Hazard warning lamps	85
----------------------	----

Heating, ventilation	
- manual ventilation	57-58, 62
- air conditioning A/C	57-58
- air recirculation	58
Air conditioning with separate adjustments	59-62
Demisting/defrosting	63-64
Additional heating	65-66

Cab fittings	72-74
- glove box,	
- overhead storage,	
- ashtray,	
- sun visor,	
- 12 volt socket,	
- ticket holder,	
- storage compartment.	

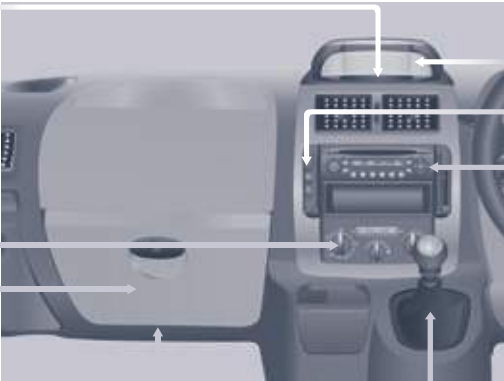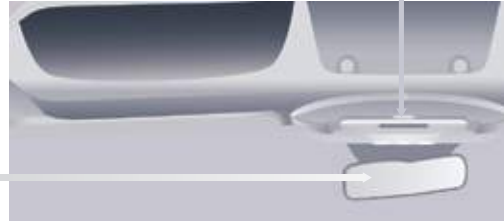

Passenger's front airbag deactivation	97
---------------------------------------	----

Courtesy lamps	75, 132
Warning lamp in the overhead storage unit	27
Heated seats	69





Screens, display	Section 9
Setting the time in the screen	Section 9

Controls	
- central locking	20, 24
- load space locking	20, 24
- alarm	22-23
- parking sensors	86
- ASR, DSC	88


Technology on board	Section 9
- Emergency or assistance call	
- eMyWay	
- Audio system	

Gearbox	40, 41-43
---------	-----------

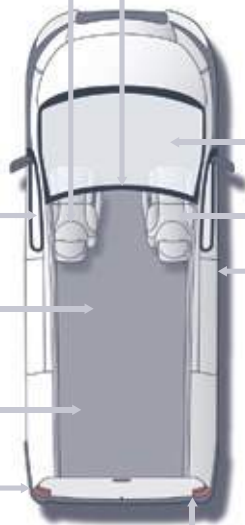
## INTERIOR

<p>Front seats, adjustments, head rests 68-69</p> <p>2-seat front bench 70-71</p> <p>Seat belts 91-92</p> <p>Child seats 98-104</p>	<p>Rear view mirror 83</p> <p>Toll cards, car park tickets 75</p> <p>Front courtesy lamp 75</p> <p>Changing courtesy lamp bulbs 132</p>	<p>Front, lateral airbags 94-97</p> <p>Passenger's airbag deactivation 97</p>
<p>Opening the bonnet 109</p>		<p> </p> <p>Battery, charging, starting 120</p> <p>Passenger compartment fuses 135, 137</p>
<p>Rear courtesy lamp 75</p> <p>Changing courtesy lamp bulbs 132</p> <p>Accessories 107-108</p>		<p>Parking brake, handbrake 85</p>
<p>Load space 77-78, 107</p> <ul style="list-style-type: none"> <li>- stowing rings,</li> <li>- load retainer,</li> <li>- roof box,</li> <li>- trim,</li> <li>- 12 volt socket,</li> <li>- ladder separation or partition,</li> <li>- stowing rail support,</li> <li>- internal rack.</li> </ul>		<p></p> <p>Towing, towbar, converter's fuses 139</p> <p>Platform cab fuses 139</p>
<p>Temporary puncture repair kit 122-123</p> <p>Spare wheel, jack, changing a wheel, tools 124-128</p>	<p>Rear suspension 79-81</p>	

# TECHNICAL DATA - MAINTENANCE

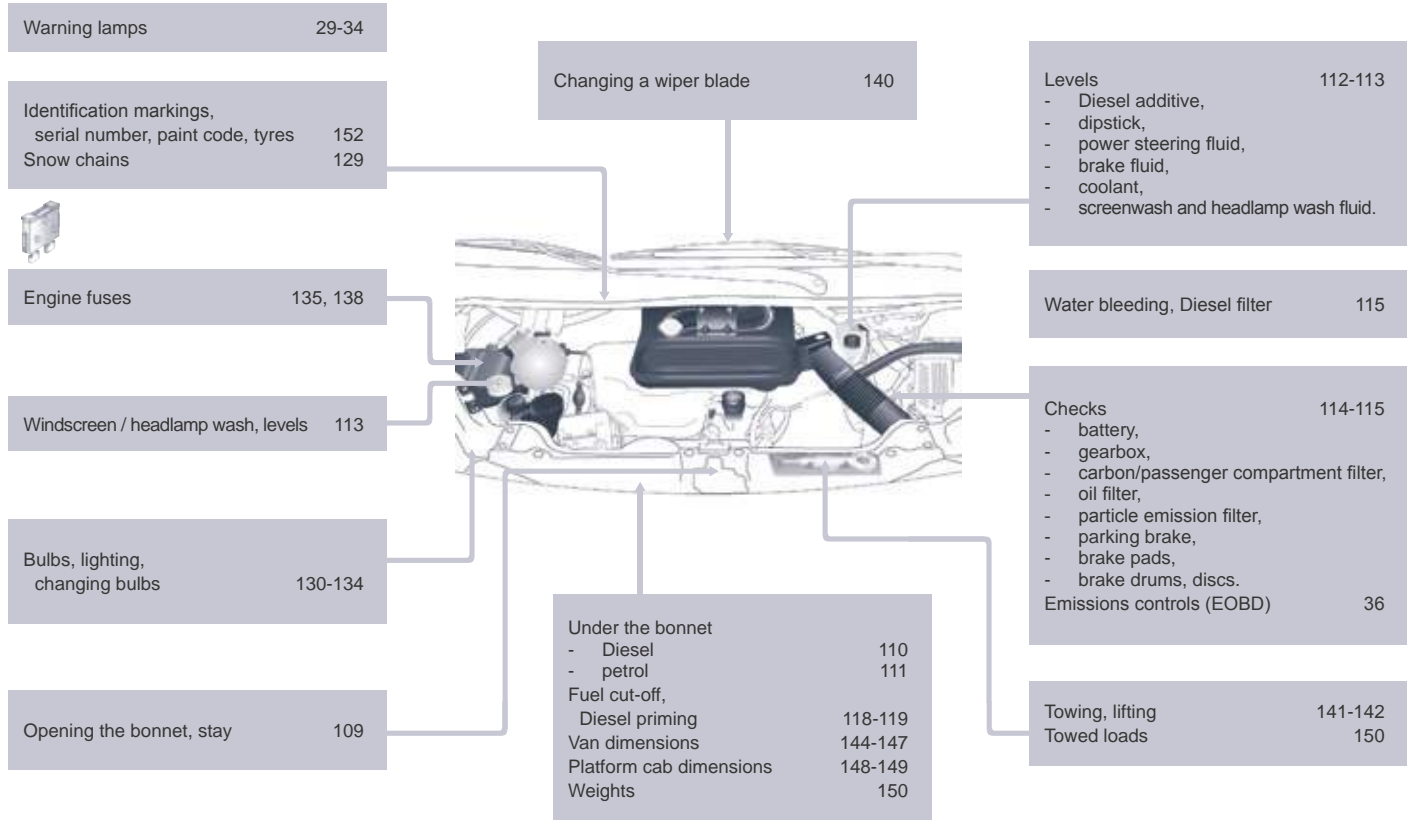

<https://www.automotive-manuals.net/>

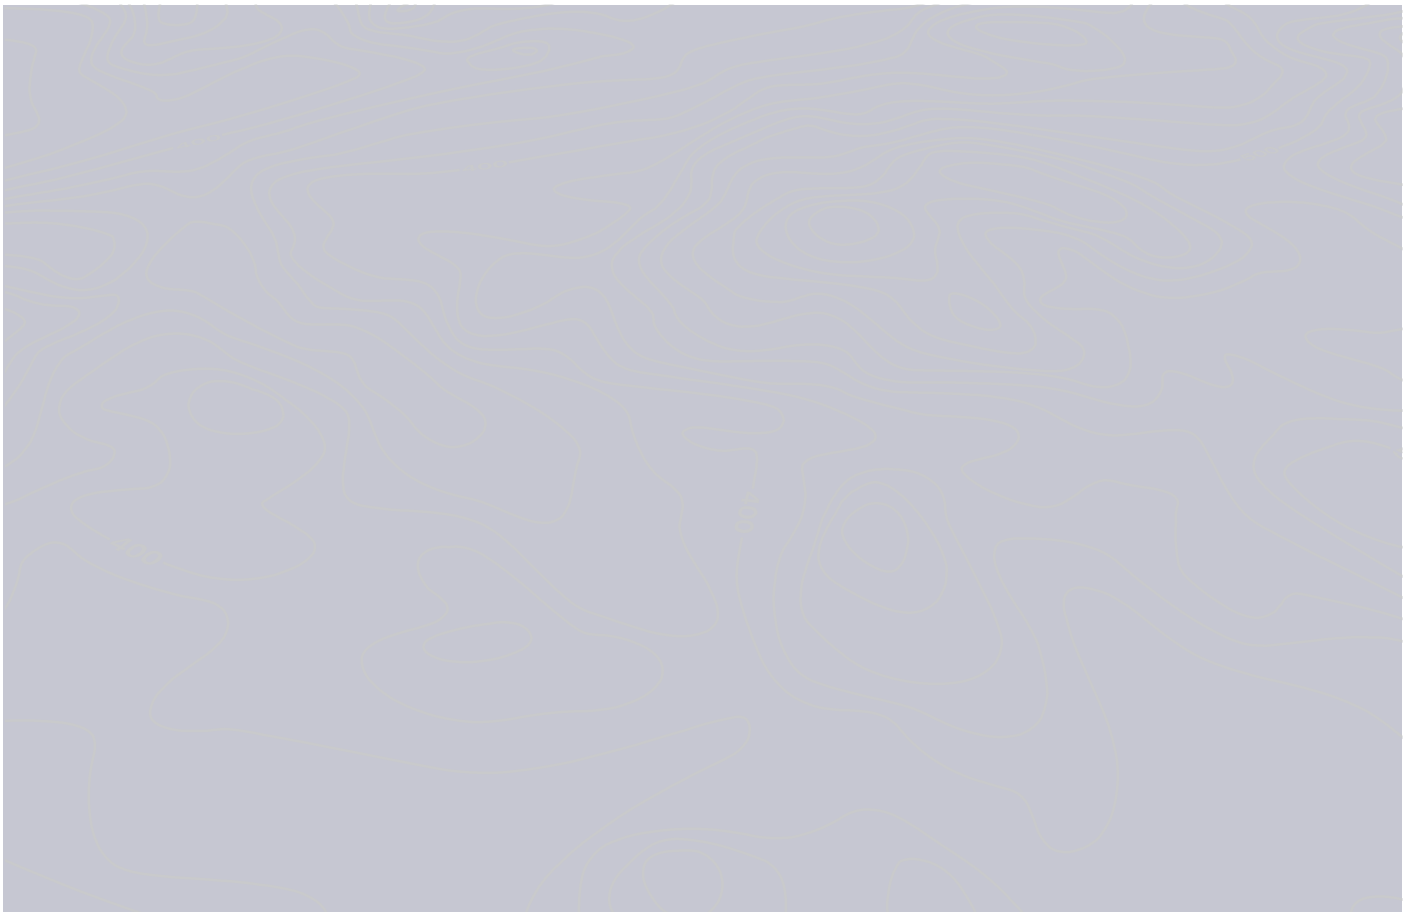

## PRECAUTIONS...



<https://www.automotive-manuals.net/>

<https://www.automotive-manuals.net/>

<https://www.automotive-manuals.net/>

<https://www.automotive-manuals.net/>



<https://www.automotive-manuals.net/>

<https://www.automotive-manuals.net/>

This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles CITROËN reserves the right to modify the technical specifications, equipment and accessories without having to update this edition of the handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles CITROËN declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles CITROËN.

Printed in the EU  
Anglais

01-14

Automobiles CITROËN

Siège social : 6 rue Fructidor - 75835 Paris Cedex 17 - France

TÉL. : +33 (0) 1 58 79 79 79 - [www.citroën.fr](http://www.citroën.fr)

S.A. au capital de 159 000 000 € - R.C.S. Paris 642 050 199 - Siret 642 050 199 00990 - APE 741 J



<https://www.automotive-manuals.net/>

# 14JPY.0630

## Anglais

2014 – DOCUMENTATION DE BORD

4Dconcept

Diadeis

Seenk

Éntagos