

1990
 BMW 525i/535i/M5 (E34)
 Electrical
 Troubleshooting
 Manual
 Vehicles Produced 09/89 to 08/90

CONTENTS

Index	0100.0-00
Introduction	0110.0-00
Systematic Troubleshooting	0130.0-00
Symbols	0140.0-00
Power Distribution Chart	0670.0-00
Fuse Chart	0670.1-00
Power Distribution	0670.2-00
Ground Distribution	0670.4-00
Component Location Chart	7000.0-00
Component Location Views	7100.0-00
Splice Location Views	8000.0-00
Connector Views Chart	8400.0-00
Connector Views	8500.0-00

Antenna	6424.0-01	— Fuse 14	0670.3-05
Antilock Brake System	3450.0-00	— Fuse 15	0670.3-05
Auxiliary Fan	6454.0-00	— Fuse 16	0670.3-06
Brake Lining Warning	6200.0-01	— Fuse 17	0670.3-07
CD Changer	6510.0-05	— Fuse 18	0670.3-08
Cellular Telephone (Provisions)	6561.0-00	— Fuse 19	0670.3-08
Central Body Electronics	6100.0-00	— Fuse 20	0670.3-09
ZKE Central Locking (ZV)	5126.0-00	— Fuse 21	0670.3-10
Charging Plug	6332.0-00	— Fuse 22	0670.3-11
Charging System	1230.0-00	— Fuse 23	0670.3-11
Check Control	6200.0-00	— Fuse 24	0670.3-11
Cigar Lighter	6332.0-01	— Fuse 25	0670.3-12
Component Location Chart	7000.0-00	— Fuse 26	0670.3-12
Component Location Views	7100.0-00	— Fuse 27	0670.3-12
Connector Views	8500.0-00	— Fuse 28	0670.3-13
Connector Views Chart	8400.0-00	— Fuse 29	0670.3-13
Cruise Control (TEMPOMAT)	6571.0-00	— Fuse 30	0670.3-14
Diagnostic Link	0670.5-00	— Fuse 31	0670.3-14
ZKE Door Lock Heating (TSH)	5120.0-00	— Fuse 32	0670.3-15
E-Box Fan	1290.0-00	— Fuse 40	0670.3-15
Electronic Transmission Control (AEGS)	2460.0-00	— Fuse 41	0670.3-15
Fuse Details		— Fuse 42	0670.3-15
— Fuse 1	0670.3-00	— Fuse 43	0670.3-16
— Fuse 2	0670.3-00	— Fuse 44	0670.3-16
— Fuse 3	0670.3-01	— Fuse 46	0670.3-16
— Fuse 4	0670.3-01	— Fuse 47	0670.3-17
— Fuse 5	0670.3-01	— Fuse 48	0670.3-17
— Fuse 6	0670.3-01	— Fuse 49	0670.3-17
— Fuse 7	0670.3-02	Gauges	
— Fuse 9	0670.3-02	— Fuel	6200.0-08
— Fuse 10	0670.3-02	— Fuel Economy	6200.0-07
— Fuse 11	0670.3-02	— Speedometer	6200.0-07
— Fuse 12	0670.3-03	— Tachometer	6200.0-05
— Fuse 13	0670.3-05	— Temperature	6200.0-05

Ground Distribution			
— X165	0670.4-00	IHKR 2 Temperature Controls	6450.3-02
— X166	0670.4-01	IHKR 2 Water Valves	6450.3-04
— X167	0670.4-02	Indicators	
— X173	0670.4-02	— "ABS"	3450.0-02
— X175	0670.4-03	— "Air Bag"	3234.0-00
— X179	0670.4-02	— Brake Lining Wear	6200.0-01
— X490	0670.4-04	— "Check Engine"	6200.0-00
— X491	0670.4-05	— Charge	6200.0-00
— X492	0670.4-06	— Fog Lights	6312.0-01
— X493	0670.4-09	— High Beam	6312.0-00
— X495	0670.4-10	— Left Turn	6313.0-02
— X496	0670.4-12	— Low Fuel Warning	6200.0-08
— X497	0670.4-14	— Oil Pressure Warning	6200.0-00
— X818	0670.4-17	— Park Brake	6200.0-02
— X955	0670.4-17	— Right Turn	6313.0-02
— X1541 (525i)	0670.4-18	Injection Electronics (DME 1.3)	1210.2-00
— X1541 (535i)	0670.4-21	Injection Electronics (DME 1.2, 6 Cylinder) (M5)	1210.4-00
— X1542 (M5)	0670.4-25	Instrument Cluster	6200.0-00
— X1542 (525i)	0670.4-23	Lamp Monitor (LKM)	6301.0-00
— X1542 (535i)	0670.4-22	Lights	
— X1541 (M5)	0670.4-24	— Back Up	6322.0-00
— X2008	0670.4-22	— Brake	6325.0-00
Heated Seats	5203.0-00	— Front Fog	6312.0-01
Horn	6133.0-00	— Glove Box	6332.0-00
IHKR Air Delivery	6450.1-06	— Hazard	6313.0-01
IHKR Auxiliary Water Pump	6450.1-10	— Headlights/Fog Lights	6312.0-00
IHKR Blower Controls	6450.1-01	— Interior Lights (IB) (ZKE)	6330.0-00
IHKR Compressor Controls	6450.1-08	— License	6320.0-00
IHKR Compressor Controls (M5)	6450.1-09	— Makeup Mirror	6300.0-01
IHKR Temperature Controls	6450.1-03	— Park/Tail	6314.0-00
IHKR Water Valves	6450.1-02	— Turn/Hazard	6313.0-00
IHKR 2 Air Delivery	6450.3-03	— Trunk	6320.0-01
IHKR 2 Auxiliary Water Pump	6450.3-09	— Underhood	6314.0-00
IHKR 2 Compressor Controls	6450.3-06	Light Switch Details	6300.0-00
IHKR 2 Power	6450.3-00	On-Board Computer (BCIV)	6581.0-00
		Power Assist Steering	3240.0-00



0100.0

Power Distribution	0670.2-00
Power Mirrors	5116.0-00
Power Seats	5200.0-00
Power Windows (FH) (ZKE)	5133.0-00
Radio/CD Player (Provisions)	6510.0-00
Rear Window Defogger	6424.0-00
Splice Location Views	8000.0-00
Start	
— Automatic Transmission	1240.0-00
— Manual Transmission	1240.0-00
Sunroof (SHD) (ZKE)	5410.0-00
Supplemental Restraint System (Air Bag)	3234.0-00
Thigh Support (M5)	5200.0-04
Windshield Wiper Control (SWS) (ZKE)	6160.0-00
Windshield Washer Jet Heaters	6169.0-00

Schematics

The schematics divide the entire vehicle electrical system into individual circuits, interacting electrical components are shown on one common schematic.

Switches and other components are represented in such a way that their general layout and function are self-explicit. They are arranged on the sheet such that the current path can be followed from positive (top) to negative (bottom).

Important: The components and wires are not drawn to scale. For instance, a lead with a length of over 1m can be shown as a lead which is only a few cm long. To ensure clear arrangement, all connectors, line branches and connected components from the fuses to the component and from the component to ground connection are not shown within the individual cells. If required, reference can be made to the cells 0670.3 Fuse Details and 0670.4 Ground Distribution where all lines are illustrated with all plug connections, line branches and connected components.


All circuit symbols used are listed and explained in the **0140.0 Symbols**.

In cell **7000.0 Component Location Chart** all important connectors, ground points and components are listed in tabular form. It provides a precise description of the component locations in the vehicle.

In cell **7100.0 Component Location Views** the locations of the connectors and components which are difficult to locate are shown in photographs. -This cell is not included in the first issue and will be supplied as a supplement.- In cell **8400.0 Connector Views Chart**, all connectors with more than 2 pins are listed in tabular form. This chart references the page and figure in cell 8500.0 where a view of the connector can be found. In cell **8500.0 Connector Views** diagrams of all connectors with more than 2 pins are illustrated.

Example

General conventions can be explained based on the following schematic example.

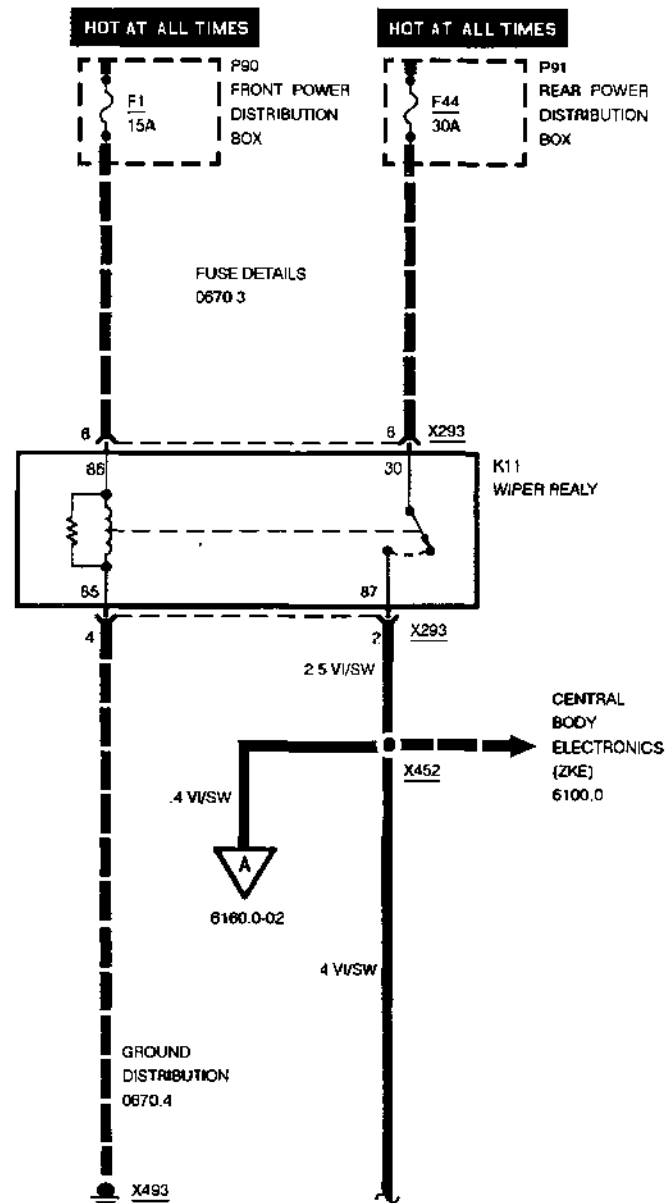



General Conventions

1. Switches and relays are always shown in rest position (e.g. K11).
2. A component shown in a dashed frame signifies that the component is illustrated only in part (e.g. P90 and P91).
3. A component shown in a completely drawn frame signifies that the component is illustrated in full (e.g. K11).
4. The dashed line between pin 8 and pin 6 of connector X293 indicates that both pins belong connector X293.
5. The dashed line from fuse 1 to pin 8 of the connector X293 shows the positive supply of the relay K11. If required, refer to cell 0670.3 Fuse Details at fuse F1 for the complete line progression with a plug connections, line branches, wire colors and cross sections.
6. The dashed line with arrow at connector X452 indicates that several wires lead to connector X452. All lines leading to the connection are illustrated in cell 6100.0 Central Body Electronics (ZKE). An interrupted line with arrow indicates that only this one wire leads to another circuit.
7. The dashed line from pin 4 of connector X293 to ground X493 shows the ground supply for relay K11. If required, refer to cell 0670.4 Ground Distribution at ground X493 for the complete line progression with all plug connections, line branches, wire colors and cross sections.
8. The interrupted line from connector X452 with an A in the open arrow is continued on Page 6160.0-02. Termination of the wire 4 VI/SW from connector X452 with a wavy line indicates that the wire is continued on the opposite page.

TROUBLESHOOTING PROCEDURES

Diagnostic procedures for many of the circuits in this manual are included with the schematics. These procedures are based on a logical problem-solving method. The steps listed below are provided for those circuits that do not include diagnostic procedures. Following these steps will enable you to make a quick diagnosis of the problem.

1. Verify the Problem

Operate the problem circuit to check the accuracy of the complaint. Note the symptoms of the inoperative circuit.

2. Analyze the Problem

Refer to the schematic of the problem circuit in the ETM. Determine how the circuit is supposed to work by tracing the current path(s) from the power feed through the circuit components to ground. Then, based on the symptoms you noted in step 1 and your understanding of circuit operation, identify one or more causes of the problem.

3. Isolate the Problem

Make circuit tests to prove or disprove the preliminary diagnosis made in step 2. Keep in mind that a logical, simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points which are easily accessible.

4. Repair the Problem

Once the specific problem is identified, make the repair using the proper tools and safe procedures.

5. Check the Problem


Operate the circuit to check for satisfactory circuit operation. Good repair practice calls for rechecking all circuits you have worked on.

TROUBLESHOOTING TOOLS

Isolating the problem (Step 3 of TROUBLESHOOTING PROCEDURES) requires the use of a voltmeter and/or ohmmeter. A voltmeter measures voltage at selected points in a circuit. An ohmmeter measures a circuit's resistance to current flow. It has an internal battery that provides current to the circuit under test. Disconnect the car battery when using an ohmmeter because the battery voltage will cause the ohmmeter to give false readings. Also, do not use an ohmmeter on solid-state components. The voltage that the ohmmeter applies to the circuit could damage these components.

Fused Jumper Wire

A jumper wire is made up of an in-line fuse holder connected to a set of test leads. It should have a five ampere fuse. Use it for bypassing open circuits. Never use a jumper wire across any load (motors, etc.). This direct battery short will blow the fuse.

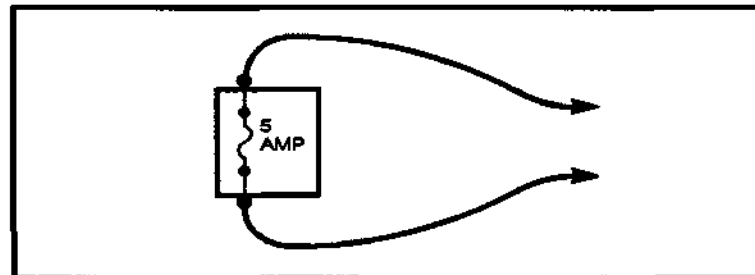


Fused Jumper Wire

TROUBLESHOOTING TESTS

Voltage Test

This test measures voltage in a circuit. By taking measurements at several points (terminals or connectors) along the circuit, you can isolate the problem.

To take a voltage measurement, connect the negative lead of the voltmeter to the battery's negative terminal or other known good ground. Then connect the positive lead of the voltmeter to the point you want to test. The voltmeter will measure the voltage present at that point in the circuit.

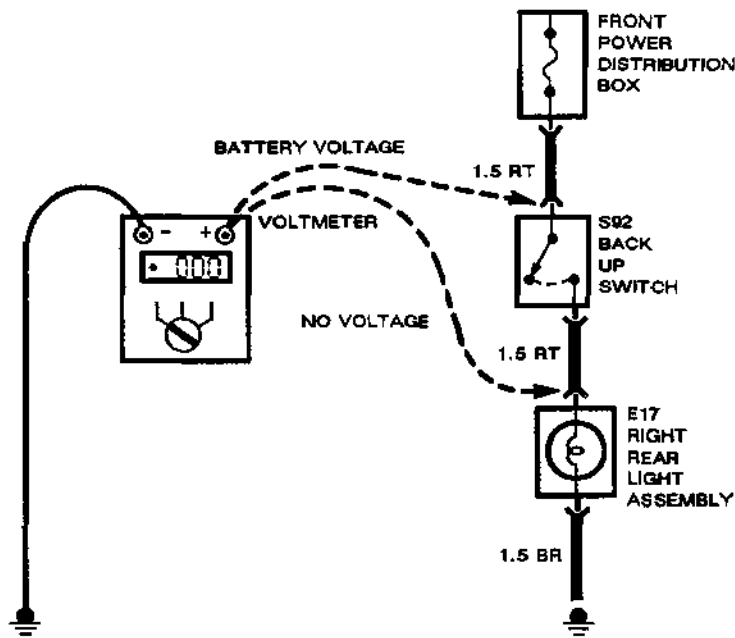


Voltage Test

Voltage Drop Test

Wires, connectors and switches are designed to conduct current with a minimum loss of voltage. A voltage drop of more than one volt indicates a problem.


To test for voltage drop, connect the voltmeter leads to connectors at either end of the circuit's suspected problem area. The positive lead should be connected to the connector closest to the power source. The voltmeter will show the voltage drop between these two points. Any switches in the circuit should be on during this test.

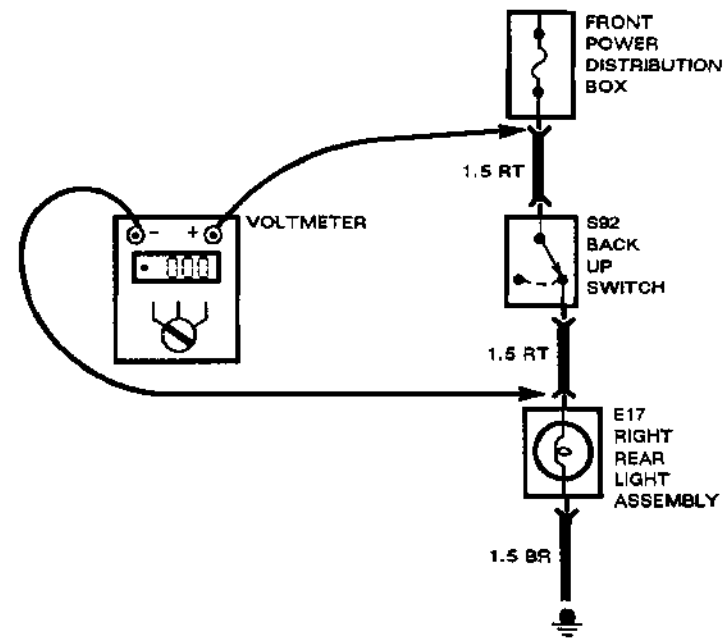

Voltage Drop Test

Continuity Test

To perform a continuity test, first disconnect the car battery. Then, while holding the leads together, adjust the ohmmeter to read zero. Connect the ohmmeter leads to connector or terminals at either end of the circuit's suspected problem area. The ohmmeter will show the resistance across that part of the circuit.

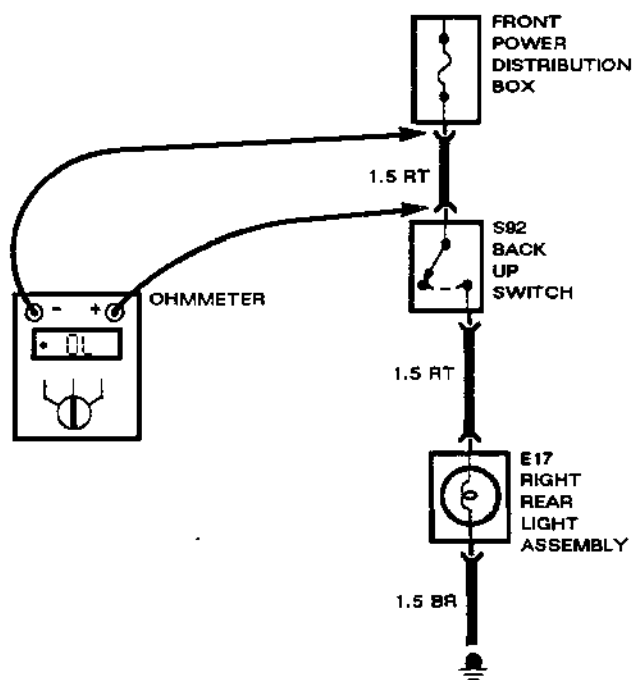


Continuity Test

Short Test Using Voltmeter






To locate a wiring short to ground, remove the blown fuse and disconnect the load. Connect the voltmeter leads to the fuse terminals. The positive lead should be connected to the terminal closest to the power source.

Starting near the FRONT POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the voltmeter reading. If the voltmeter registers a reading, there is a short to ground in the wiring. Somewhere in the area of the harness being moved, the wire insulation is worn away and the circuit is grounding.

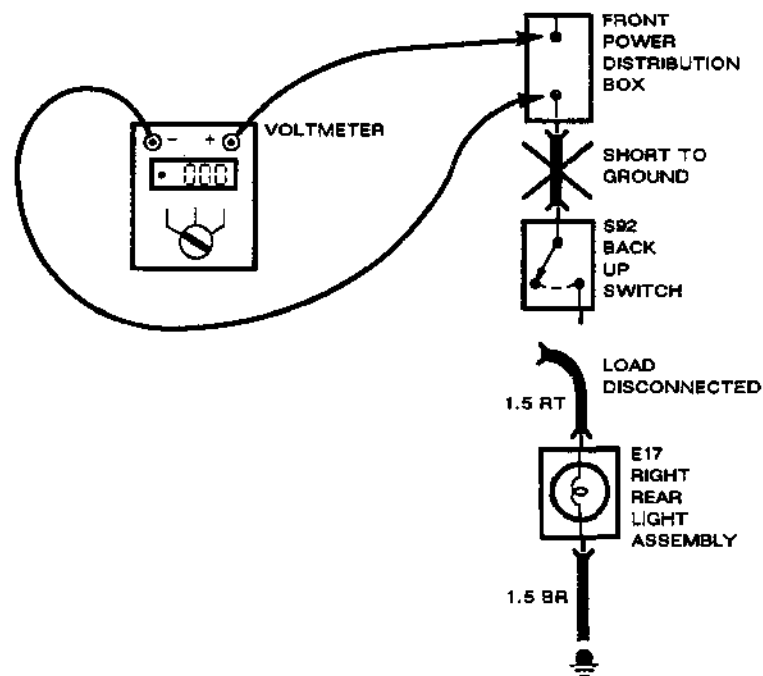

Short Test Using Voltmeter

  SYMBOLS

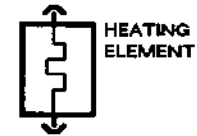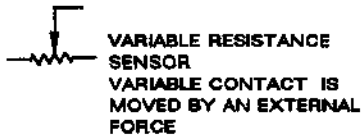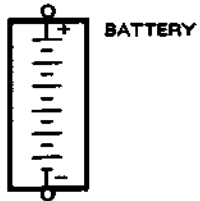




ENTIRE COMPONENT SHOWN




PART OF A COMPONENT SHOWN



COMPONENT WITH SCREW TERMINALS

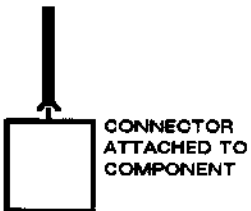


CONNECTOR ATTACHED TO COMPONENT

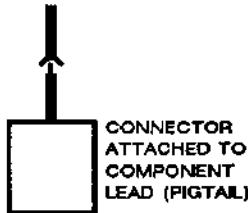

CONNECTOR ATTACHED TO COMPONENT LEAD (PIGTAIL)





COMPONENT CASE DIRECTLY ATTACHED TO METAL PART OF CAR (GROUNDED)


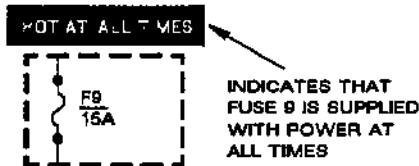


INDICATES THAT FUSE 9 IS SUPPLIED WITH POWER AT ALL TIMES

TERMINAL NUMBER	DESCRIPTION
50	VOLTAGE: IGNITION SWITCH IN START
30	VOLTAGE: SUPPLIED AT ALL TIMES
15	VOLTAGE: IGNITION SWITCH IN RUN OR START
15I	VOLTAGE: IGNITION SWITCH IN RUN
R	VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START
31	GROUND

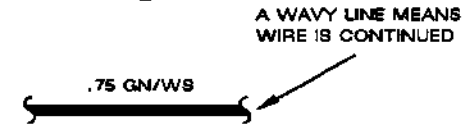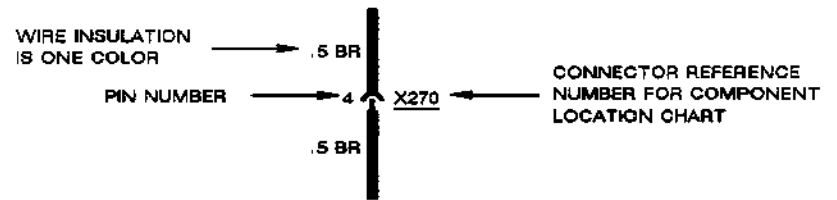


1. FIRST COLOR IS THE WIRE INSULATION.
2. SECOND COLOR IS THE "TRACER" OR "STRIPE" COLOR.
3. THIRD COLOR IS THE COLOR OF THE DOTS.

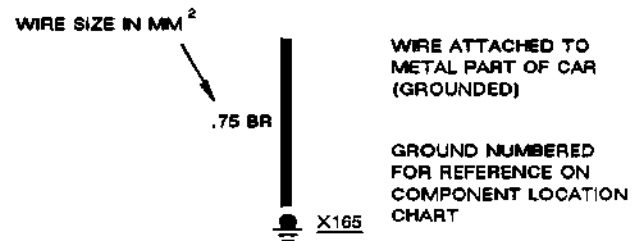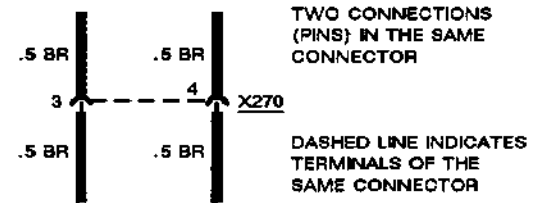




ONE POLE,
TWO POSITION
SWITCH

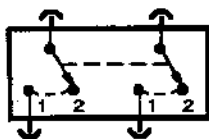


SWITCHES THAT MOVE
TOGETHER
DASHED LINE SHOWS
A MECHANICAL
CONNECTION BETWEEN
SWITCHES

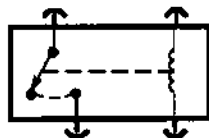


RELAY WITH NO
CURRENT FLOWING
THROUGH COIL

WHEN COIL IS
ENERGIZED, SWITCH
IS PULLED CLOSED

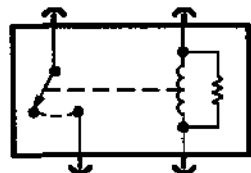


RELAY WITH
RESISTOR ACROSS
COIL

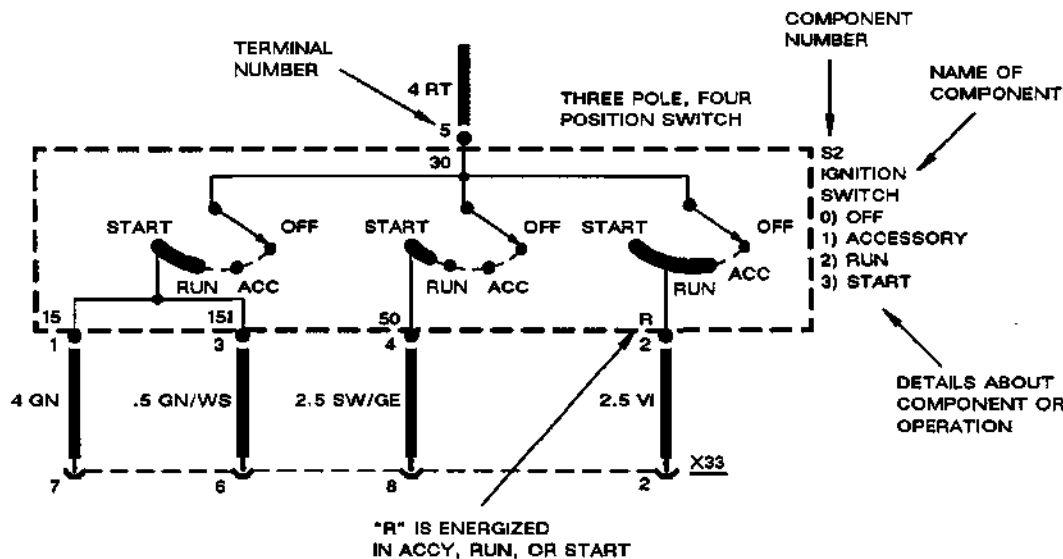

TERMINAL NUMBER	DESCRIPTION
50	VOLTAGE: IGNITION SWITCH IN START
30	VOLTAGE: SUPPLIED AT ALL TIMES
15	VOLTAGE: IGNITION SWITCH IN RUN OR START
15I	VOLTAGE: IGNITION SWITCH IN RUN
R	VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN, OR START
31	GROUND



WIRE COLORS	
BL	BLUE
BR	BROWN
GE	YELLOW
GN	GREEN
GR	GRAY
OR	ORANGE
RS	PINK
RT	RED
SW	BLACK
VI	VIOLET
WS	WHITE

HOT IN ACCY RUN OR START

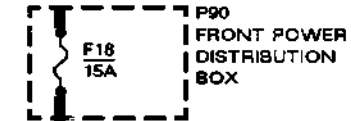

FUSE DETAILS
0670.3

THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED TO FUSE 18 ARE SHOWN IN CELL "0670.3 FUSE DETAILS" AT FUSE 18.

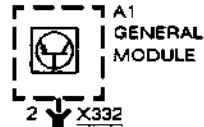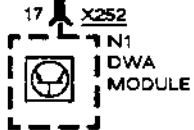

GROUND DISTRIBUTION
0670.4

THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED AT GROUND X497 ARE SHOWN IN CELL "0670.4 GROUND DISTRIBUTION" AT GROUND X497.



2.5 BR



 
0670.0-03

CIRCUIT PATH IS CONTINUED AS LABELED

ARROW SHOWS DIRECTION OF CURRENT FLOW AND IS REPEATED WHERE CURRENT PATH CONTINUES

0670.0-02

2.5 BR




CIRCUIT REFERENCE-
A WIRE WHICH CONNECTS
TO ANOTHER CIRCUIT

1.5 GN/RT



INJECTION
ELECTRONICS
(DME)
1210.1


HOT IN ACCY RUN OR START

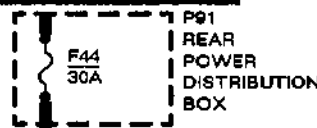

CENTRAL
BODY
ELECTRONICS
(ZKE)
6100.0

CIRCUIT SHOWN IS INCOMPLETE
COMPLETE CIRCUIT CAN BE
REFERENCED IN CENTRAL BODY
ELECTRONICS (ZKE)

SYMBOL INDICATES
A SOLID STATE
DEVICE (INCLUDES
ONLY ELECTRONIC PARTS)

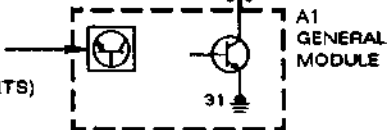





POWER DISTRIBUTION CHARTS

FRONT POWER DISTRIBUTION BOX, AUXILIARY RELAY BOX

P90 FRONT POWER DISTRIBUTION BOX

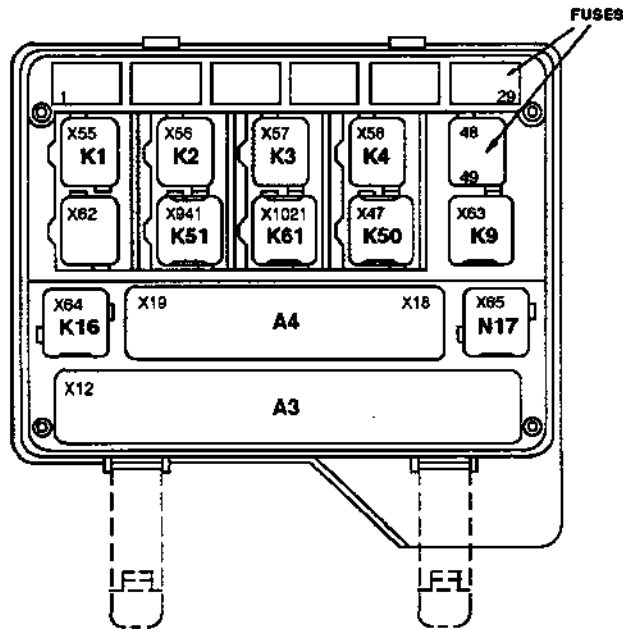

P92 AUXILIARY RELAY BOX

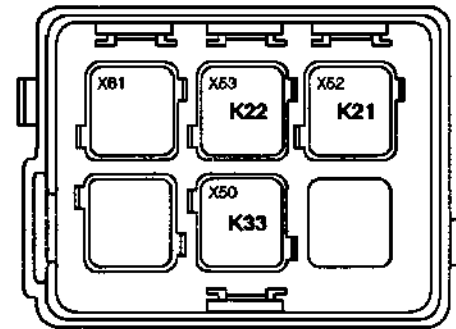



POWER DISTRIBUTION CHARTS

FRONT POWER DISTRIBUTION BOX, AUXILIARY RELAY BOX


COMPONENTS IN FRONT POWER DISTRIBUTION		
NUMBER	CONNECTOR	DESCRIPTION
A3	X12	LAMP CONTROL MODULE
A4	X18, X19	CHECK CONTROL MODULE
K1	X55	STARTER RELAY
B900	X55	JUMPER PLUG (MANUAL)
K2	X56	HORN RELAY
K3	X57	UNLOADER RELAY, KLR
K4	X58	BLOWER RELAY
	X62	NOT IN U.S.
K9	X63	UNLOADER RELAY, KL 15
K16	X64	HAZARD FLASHER RELAY
K50	X47	WATER PUMP RELAY
K51	X941	PHONE ALERT RELAY
K61	X1021	UNLOADER RELAY KL61
N17	X65	CRASH CONTROL UNIT

COMPONENTS IN AUXILIARY RELAY BOX		
NUMBER	CONNECTOR	DESCRIPTION
K21	X52	NORMAL SPEED RELAY
K22	X53	HIGH SPEED RELAY
K33	X50	AIR CONDITIONING RELAY
	X61	NOT IN U.S.



POWER DISTRIBUTION CHARTS

REAR POWER DISTRIBUTION BOX

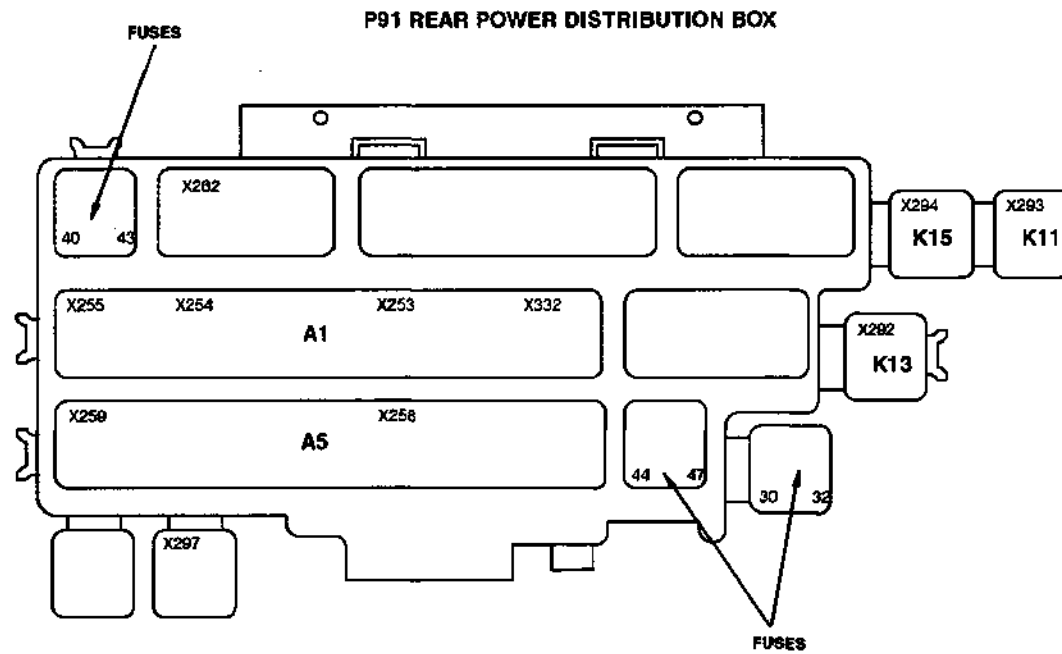



POWER DISTRIBUTION CHARTS

REAR POWER DISTRIBUTION BOX

COMPONENTS IN REAR POWER DISTRIBUTION		
NUMBER	CONNECTOR	DESCRIPTION
A1	X253, X254 X255, X332	GENERAL MODULE
A5	X258, X259	RELAY MODULE
K11	X293	WIPER RELAY
K13	X292	REAR DEFOGGER RELAY
K15	X294	ELECTRIC POWER PROTECTION RELAY
	X297	NOT IN U.S.



FUSE CHARTS

FUSE	CIRCUIT PROTECTED
F1 15A	3450.0 ABS Antilock Brake System (Also Fuse 17) 6200.0 Instrument Cluster Check Control (K/CC) (Also Fuses 17, 20, 29) 6301.0 Lamp Monitor (LKM) (Also Fuses 2, 3, 4, 5, 7, 10, 11, 13, 14, 15) 6325.0 Brake Lights (Also Fuse 15) 6571.0 Cruise Control (Tempomat) (Also Fuse 17) 6581.0 On-Board Computer (BCIV) (Also Fuses 17, 20)
F2 7.5A	6300.0 Light Switch Details (Also Fuses 3, 4, 5) 6301.0 Lamp Monitor (LKM) (Also Fuses 1, 3, 4, 5, 7, 10, 11, 13, 14, 15) 6312.0 Headlights/Fog Lights (Also Fuses 3, 5, 7, 10, 11, 13, 14) 6313.0 Turn/Hazard Lights (Also Fuses 3, 6, 13, 14)
F3 7.5A	6100.0 Central Body Electronics (ZKE) (Also Fuses 5, 17, 30, 44, 47) 6300.0 Light Switch Details (Also Fuses 2, 4, 5) 6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 4, 5, 7, 10, 11, 13, 14, 15) 6312.0 Headlights/Fog Lights (Also Fuses 2, 5, 7, 10, 11, 13, 14) 6313.0 Turn/Hazard Lights (Also Fuses 2, 6, 13, 14)
F4 7.5A	6300.0 Light Switch Details (Also Fuses 2, 3, 5) 6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 5, 7, 10, 11, 13, 14, 15) 6314.0 Park/Tail/Underhood Lights (Also Fuses 5, 15, 20)
F5 10A	6100.0 Central Body Electronics (ZKE) (Also Fuses 3, 17, 30, 44, 47) 6300.0 Light Switch Details (Also Fuses 2, 3, 4) 6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 7, 10, 11, 13, 14, 15) 6312.0 Headlights/Fog Lights (Also Fuses 2, 3, 7, 10, 11, 13, 14) 6314.0 Park/Tail/Underhood Lights (Also Fuses 4, 15, 20) 6320.0 License/Trunk Lights (Also Fuses 15, 21) 6330.0 ZKE Interior Lights (Also Fuses 17, 18, 21, 30, 44) 6332.0 Glove Box Light/Cigar Lighter/Charging Plug (Also Fuses 18, 21, 26)
F6 15A	6313.0 Turn/Hazard Lights (Also Fuses 2, 3, 13, 14)
F7 15A	6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 10, 11, 13, 14, 15) 6312.0 Headlights/Fog Lights (Also Fuses 2, 3, 5, 10, 11, 13, 14)



FUSE CHARTS

FUSE	CIRCUIT PROTECTED
F9 15A	6133.0 Horn 6450.1 Integrated Climate Regulation (IHKR) (Also Fuses 19, 20, 27, 29, 46) 6450.3 Integrated Climate Regulation II (IHKR II) (Also Fuses 19, 20, 27, 29) 6561.0 Cellular Telephone (Provisions) (Also Fuses 18, 31)
F10 7.5A	6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 11, 13, 14, 15) 6312.0 Headlights/Fog Lights (Also Fuses 2, 3, 5, 7, 11, 13, 14)
F11 7.5A	6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 10, 13, 14, 15) 6312.0 Headlights/Fog Lights (Also Fuses 2, 3, 5, 7, 10, 13, 14)
F12 15A	5116.0 Power Mirrors 6169.0 Windshield Washer Jet Heaters 6322.0 Back Up Lights
F13 7.5A	6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 10, 11, 14, 15) 6312.0 Headlights/Fog Lights (Also Fuses 2, 3, 5, 7, 10, 11, 14) 6313.0 Turn/Hazard Lights (Also Fuses 2, 3, 6, 14)
F14 7.5A	6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 10, 11, 13, 15) 6312.0 Headlights/Fog Lights (Also Fuses 2, 3, 5, 7, 10, 11, 13) 6313.0 Turn/Hazard Lights (Also Fuses 2, 3, 6, 13)
F15 7.5A	6301.0 Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 10, 11, 13, 14) 6314.0 Park/Tail/Underhood Lights (Also Fuses 4, 5, 20) 6320.0 License/Trunk Lights (Also Fuses 5, 21) 6325.0 Brake Lights (Also Fuse 1)
F16 30A	5203.0 Heated Seats



FUSE CHARTS

FUSE	CIRCUIT PROTECTED
F17 7.5A	1210.2 Injection Electronics (DME 1.3) (Also Fuse 23) 1230.0 Charging System (Also Fuse 28) 1240.0 Start 1290.0 E-Box Fan (Also Fuse 28) 2460.0 Electronic Transmission Control (AEGS) 3450.0 Antilock Brake System (ABS) (Also Fuse 1) 5120.0 ZKE Door Lock Heating (TSH) (Also Fuse 30) 5133.0 ZKE Power Windows (FH) (Also Fuses 30, 31, 47) 5410.0 ZKE Sunroof (SHD) (Also Fuses 30, 31, 47) 6100.0 Central Body Electronics (ZKE) (Also Fuses 3, 5, 30, 44, 47) 6200.0 Instrument Cluster/Check Control (K/CC) (Also Fuses 1, 20, 29) 6330.0 ZKE Interior Lights (IB) (Also Fuses 5, 18, 21, 30, 44) 6571.0 Cruise Control (Tempomat) (Also Fuse 1) 6581.0 On Board Computer (BCIV) (Also Fuses 1, 20)
F18 15A	6330.0 ZKE Interior Lights (IB) (Also Fuses 5, 17, 21, 30, 44) 6332.0 Glove Box Light/Cigar Lighter/Charging Plug (Also Fuses 5, 21, 26) 6510.0 Radio/CD Player (Provisions) (Also Fuse 41) 6561.0 Cellular Telephone (Provisions) (Also Fuses 9, 31)
F19 30A	6450.1 Integrated Climate Regulation (IHKR) (Also Fuses 9, 20, 27, 29, 46) 6450.3 Integrated Climate Regulation II (IHKR II) (Also Fuses 9, 20, 27, 29)
F20 7.5A	6200.0 Instrument Cluster/Check Control (K/CC) (Also Fuses 1, 17, 29) 6314.0 Park/Tail/Underhood Lights (Also Fuses 4, 5, 15) 6450.1 Integrated Climate Regulation (IHKR) (Also fuses 9, 19, 27, 29, 46) 6450.3 Integrated Climate Regulation II (IHKR II) (Also fuses 9, 19, 27, 29) 6581.0 On Board Computer (BCIV) (Also Fuses 1, 17)
F21 10A	6320.0 License/Trunk Lights (Also Fuses 5, 15) 6330.0 ZKE Interior Lights (IB) (Also Fuses 5, 17, 18, 30, 44) 6332.0 Glove Box Light/Cigar Lighter/Charging Plug (Also Fuses 5, 18, 26)
F22 30A	NOT USED



FUSE CHARTS

FUSE	CIRCUIT PROTECTED
F23 7.5A	1210.2 Injection Electronics (DME 1.3) (Also Fuse 17)
F24 7.5A	6160.0 ZKE Windshield Wiper Control (SWS) (Also Fuse 44)
F25 30A	6454.0 Auxillary Fan (Also Fuse 29)
F26 30A	6332.0 Glove Box Light/Cigar Lighter/Charging Plug (Also Fuses 5, 18, 21)
F27 7.5A	6450.1 Integrated Climate Regulation (IHKR) (Also Fuses 9, 19, 20, 29, 46) 6450.3 Integrated Climate Regulation II (IHKR II) (Also Fuses 9, 19, 20, 29)
F28 15A	1230.0 Charging System (Also Fuse 17) 1290.0 E-Box Fan (Also Fuse 17) 3240.0 Power Assist Steering (Servotronic)
F29 7.5A	6200.0 Instrument Cluster/Check Control (K/CC) (Also Fuses 1, 17, 20) 6450.1 Integrated Climate Regulation (IHKR) (Also Fuses 9, 19, 20, 27, 46) 6450.3 Integrated Climate Regulation II (IHKR II) (Also Fuses 9, 19, 20, 27) 6454.0 Auxiliary Fan (Also Fuse 25)
F30 7.5A	5120.0 ZKE Door Lock Heating (TSH) (Also Fuse 17) 5126.0 ZKE Central Locking (ZV) (Also Fuses 31, 47) 5133.0 ZKE Power Windows (FH) (Also Fuses 17, 31, 47) 5410.0 ZKE Sunroof (SHD) (Also Fuses 17, 31, 47) 6100.0 Central Body Electronics (ZKE) (Also Fuses 3, 5, 17, 44, 47) 6330.0 ZKE Interior Lights (Also Fuses 5, 17, 18, 21, 44)
F31 7.5A	5126.0 ZKE Central Locking (ZV) (Also Fuses 30, 47) 5133.0 ZKE Power Windows (FH) (Also Fuses 17, 30, 47) 5410.0 ZKE Sunroof (SHD) (Also Fuses 17, 30, 47) 6561.0 Cellular Telephone (Provisions) (Also Fuses 9, 18)
F32 7.5A	NOT USED
F40 15A	NOT USED
F41 30A	6510.0 Radio/CD Player (Provisions) (Also Fuse 18)



FUSE CHARTS


FUSE	CIRCUIT PROTECTED	
F42 30A	5200.0	Power Seats (Also Fuse 43)
F43 30A	5200.0	Power Seats (Also Fuse 42)
F44 30A	6100.0 6160.0 6330.0	Central Body Electronics (ZKE) (Also Fuses 3, 5, 17, 30, 47) ZKE Windshield Wiper Control (SWS) (Also Fuse 24) ZKE Interior Lights (IB) (Also Fuses 5, 17, 18, 21, 30)
F46 30A	6450.1	Integrated Climate Regulation (iHKR) (Also Fuses 9, 19, 20, 27, 29)
F47 30A	5126.0 5133.0 5410.0 6100.0	ZKE Central Locking (ZV) (Also Fuses 30, 31) ZKE Power Windows (FH) (Also Fuses 17, 30, 31) ZKE Sunroof (SHD) (Also Fuses 17, 30, 31) Central Body Electronics (ZKE) (Also Fuses 3, 5, 17, 30, 44)
F48 15A	NOT USED	
F49	NOT USED	




POWER DISTRIBUTION

FRONT POWER DISTRIBUTION BOX

525i

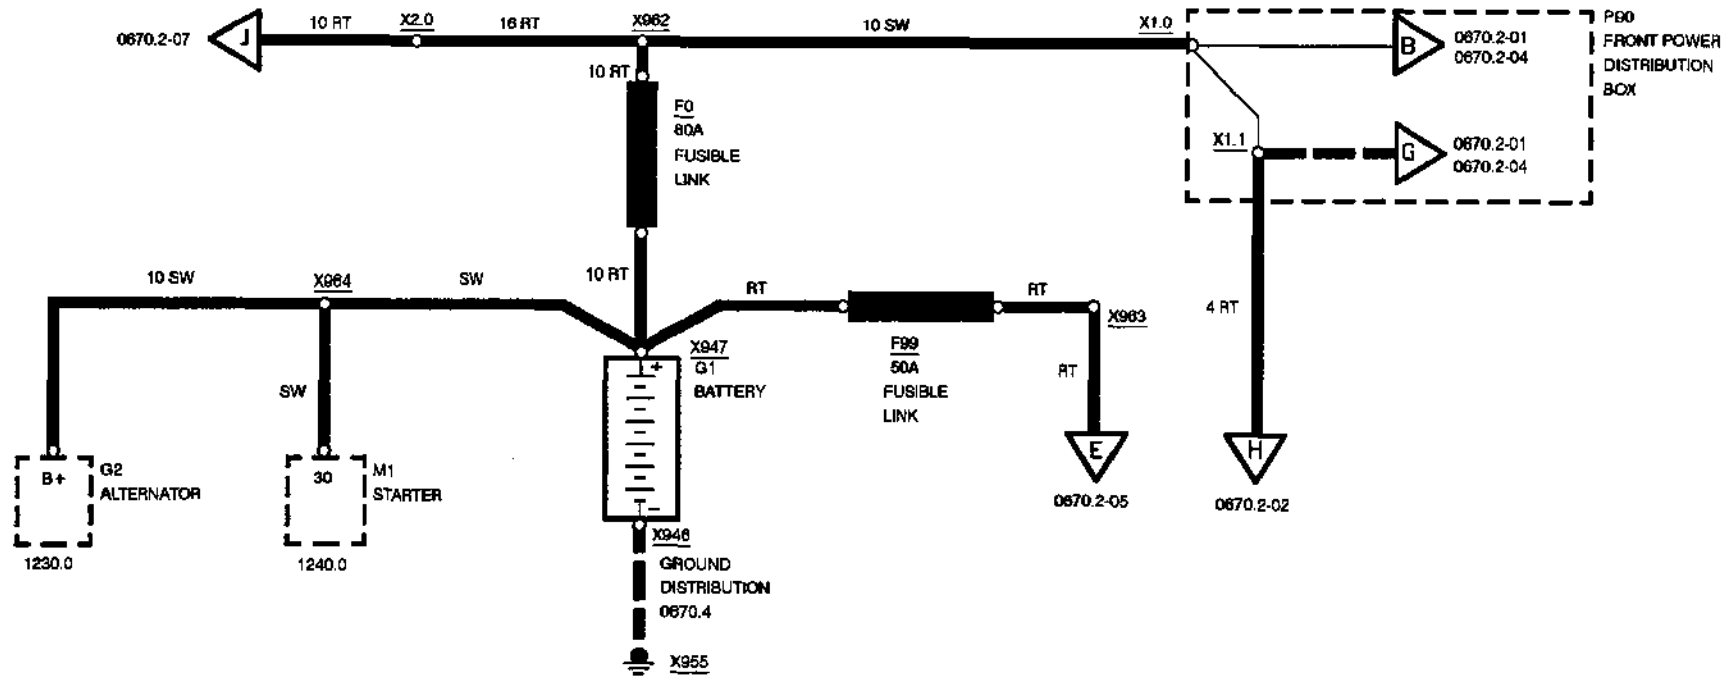

535i, M5

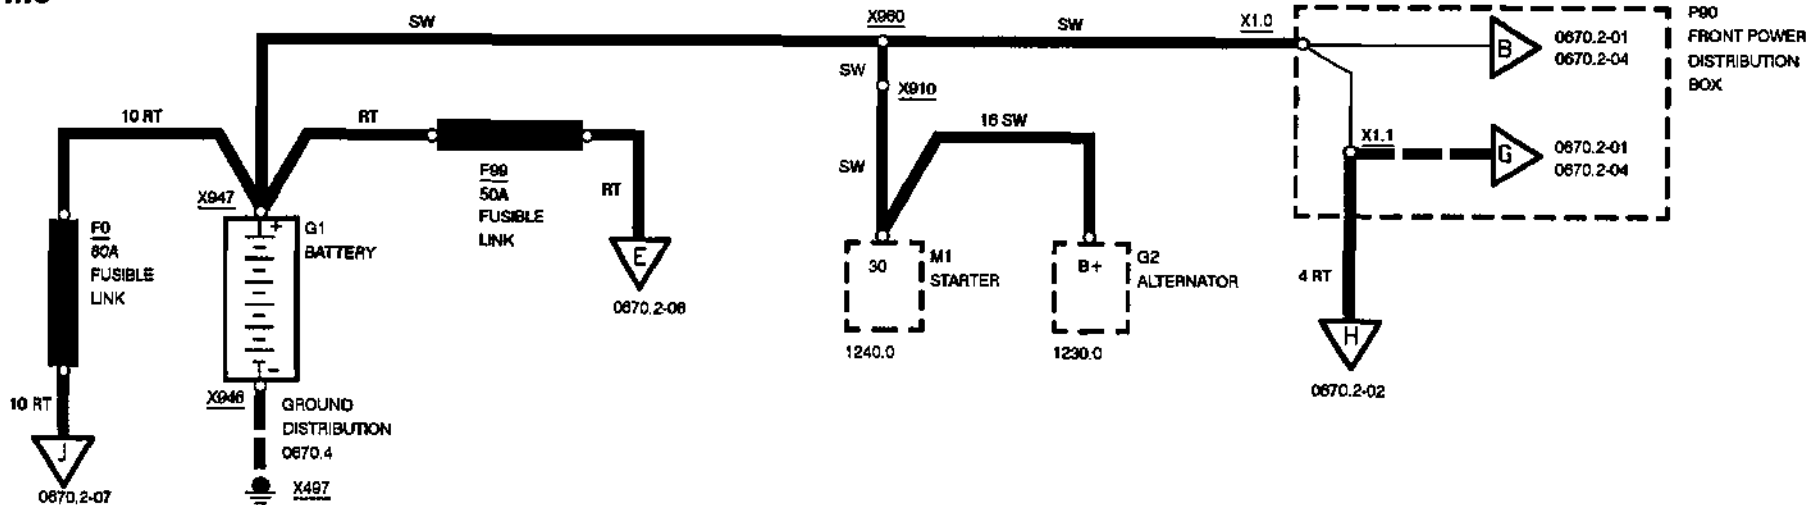

07/90


0670.2-00

1990



POWER DISTRIBUTION

P90
FRONT POWER
DISTRIBUTION
BOX

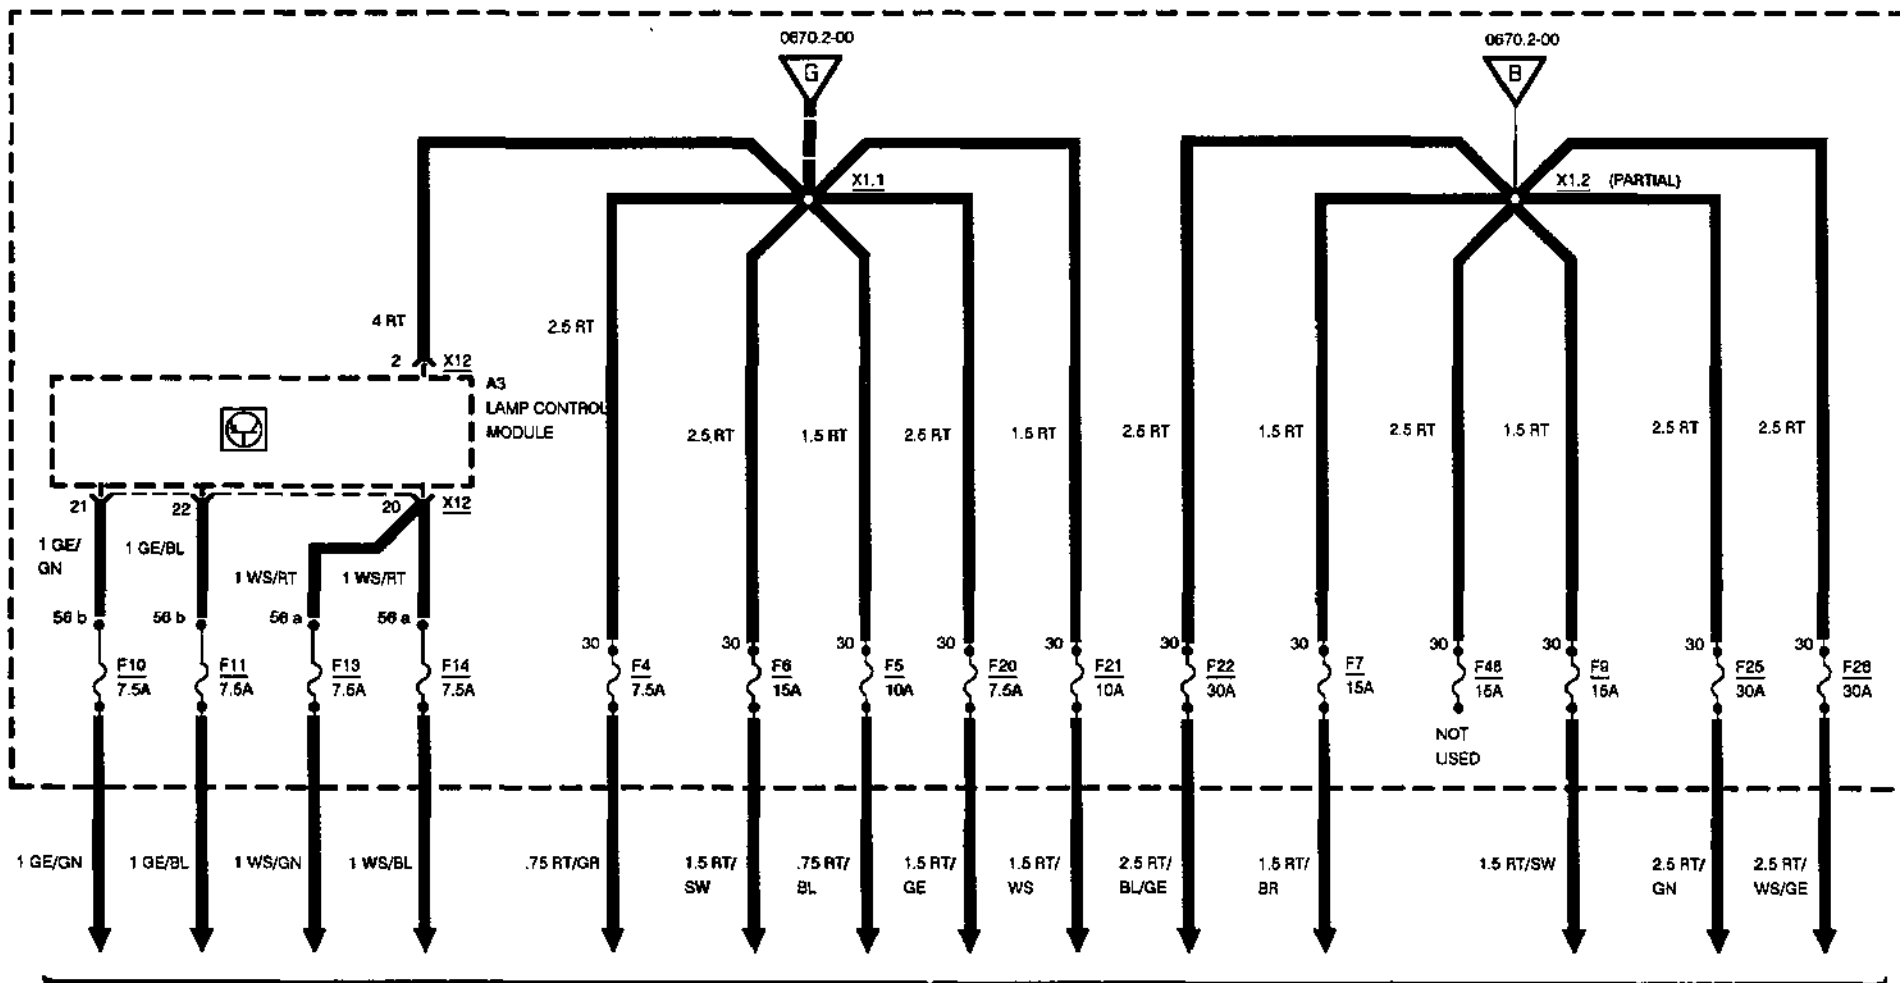

FUSE
DETAILS
0670.3

02/90


0670.2-01

1989



POWER DISTRIBUTION


FRONT POWER DISTRIBUTION BOX

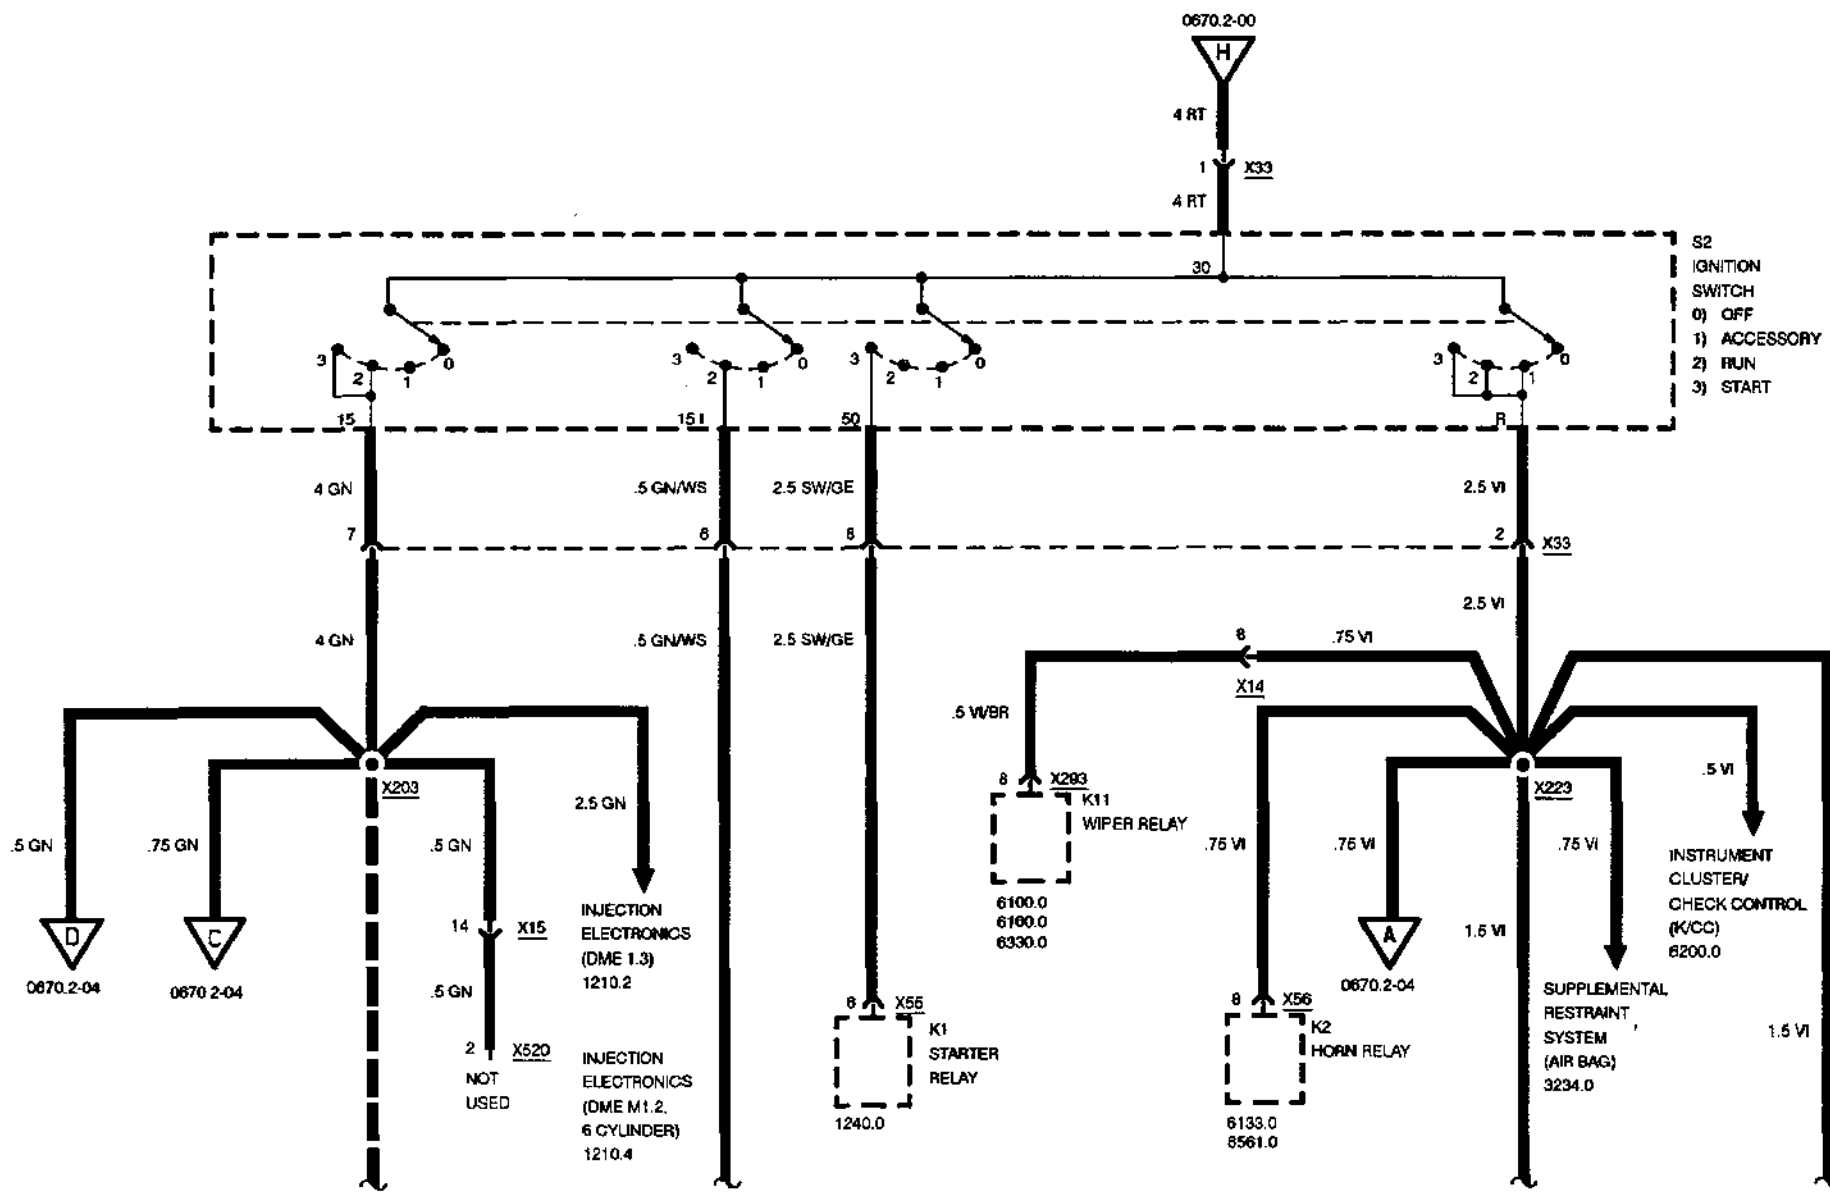

02/90


0670.2-02

1989

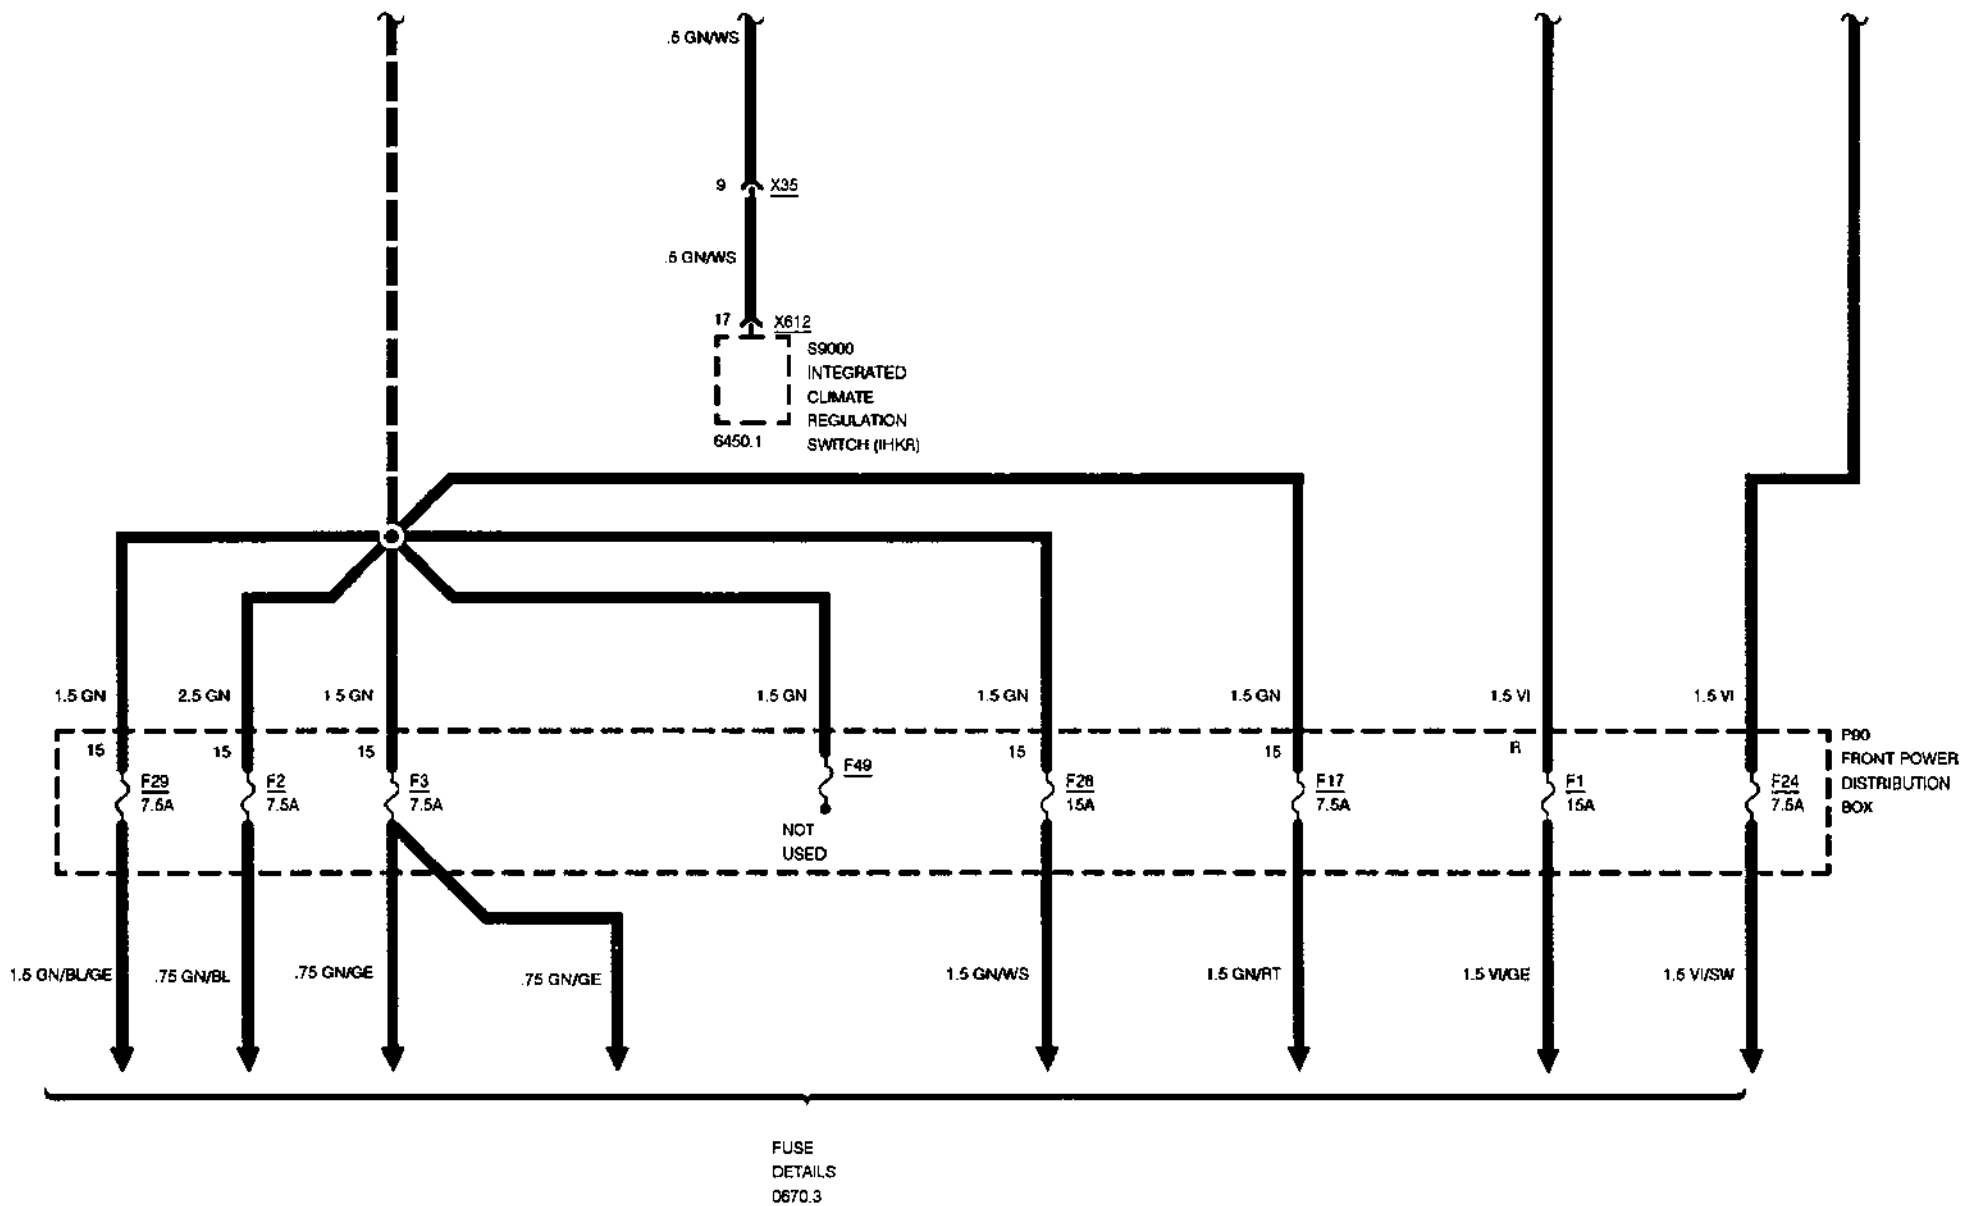



POWER DISTRIBUTION

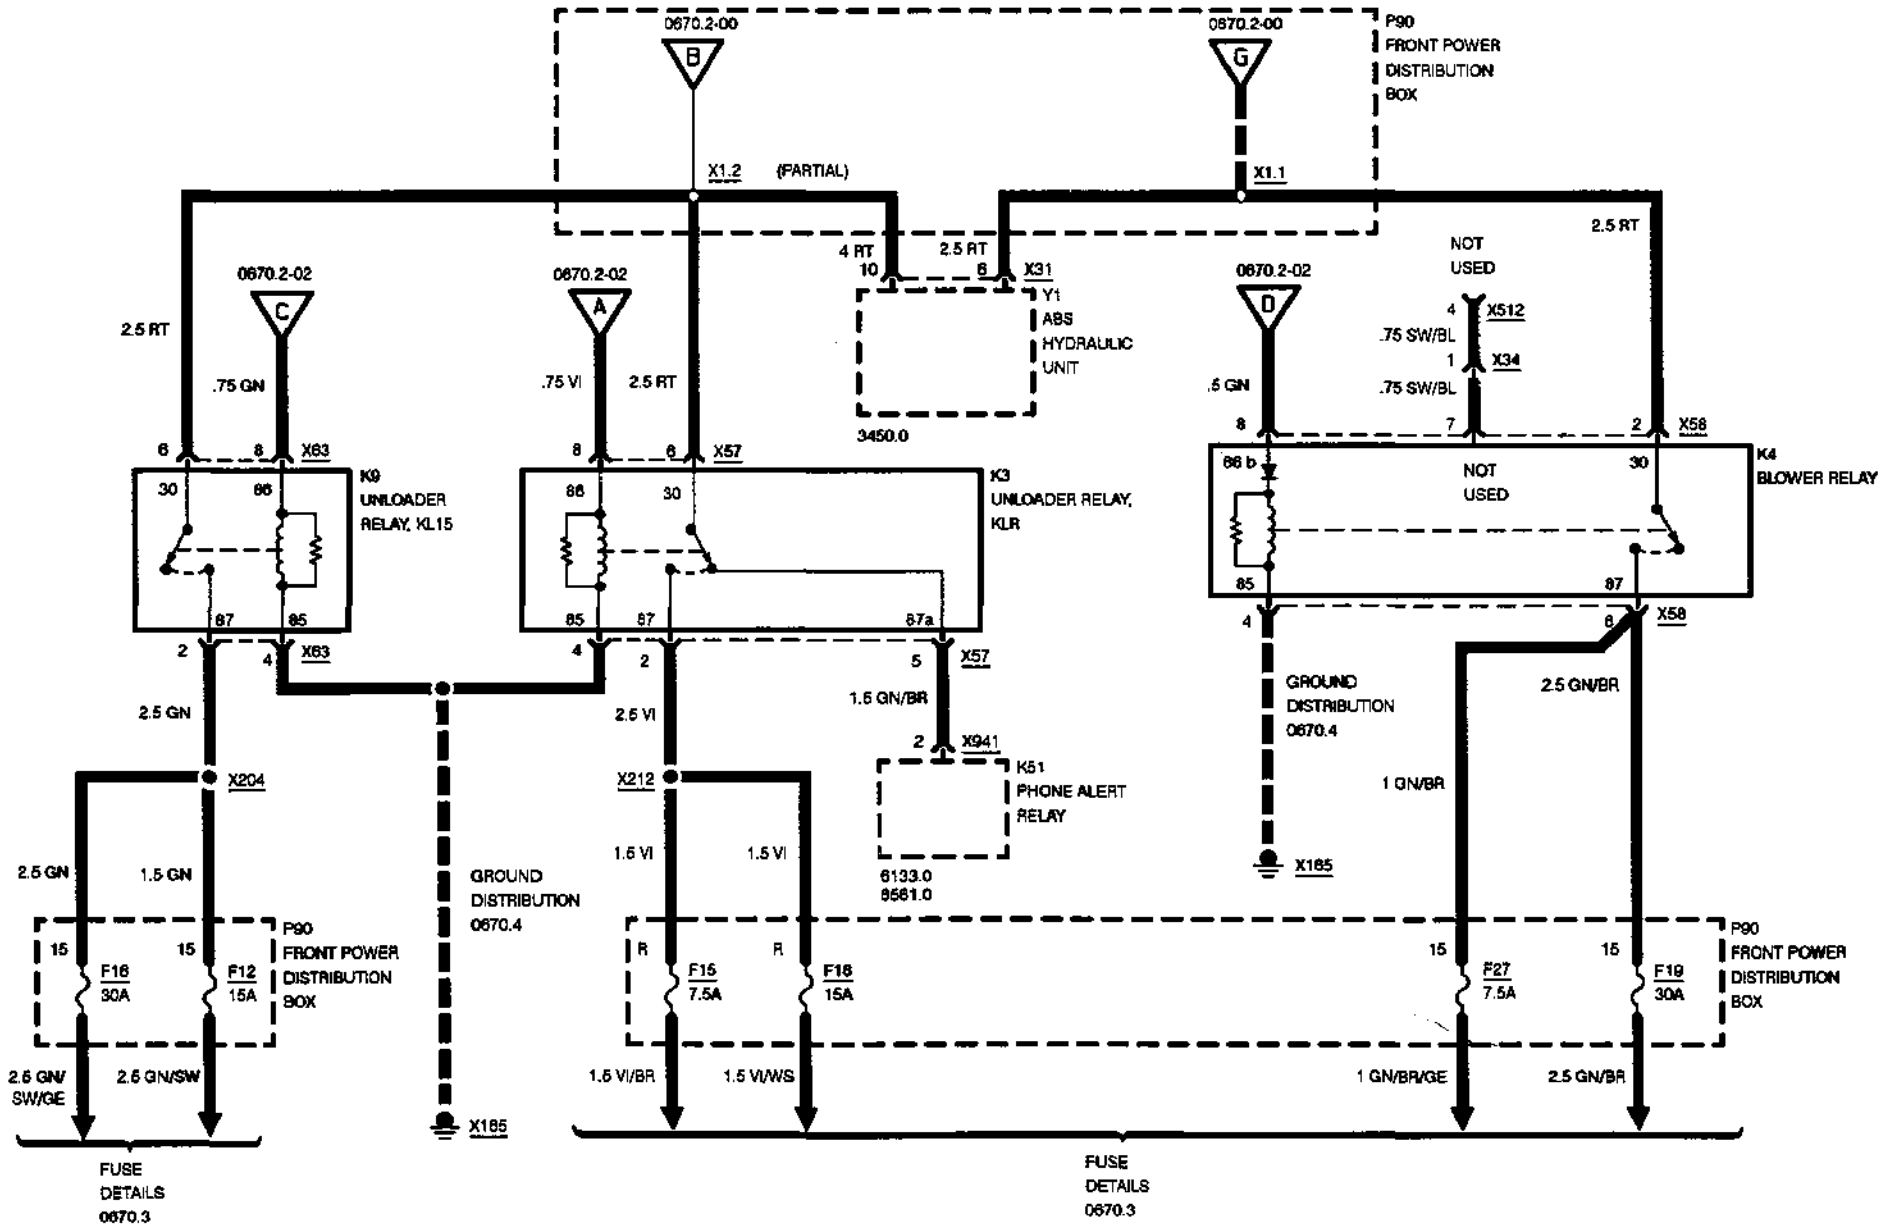

02/90


0670.2-04

1989



POWER DISTRIBUTION

FRONT POWER DISTRIBUTION BOX

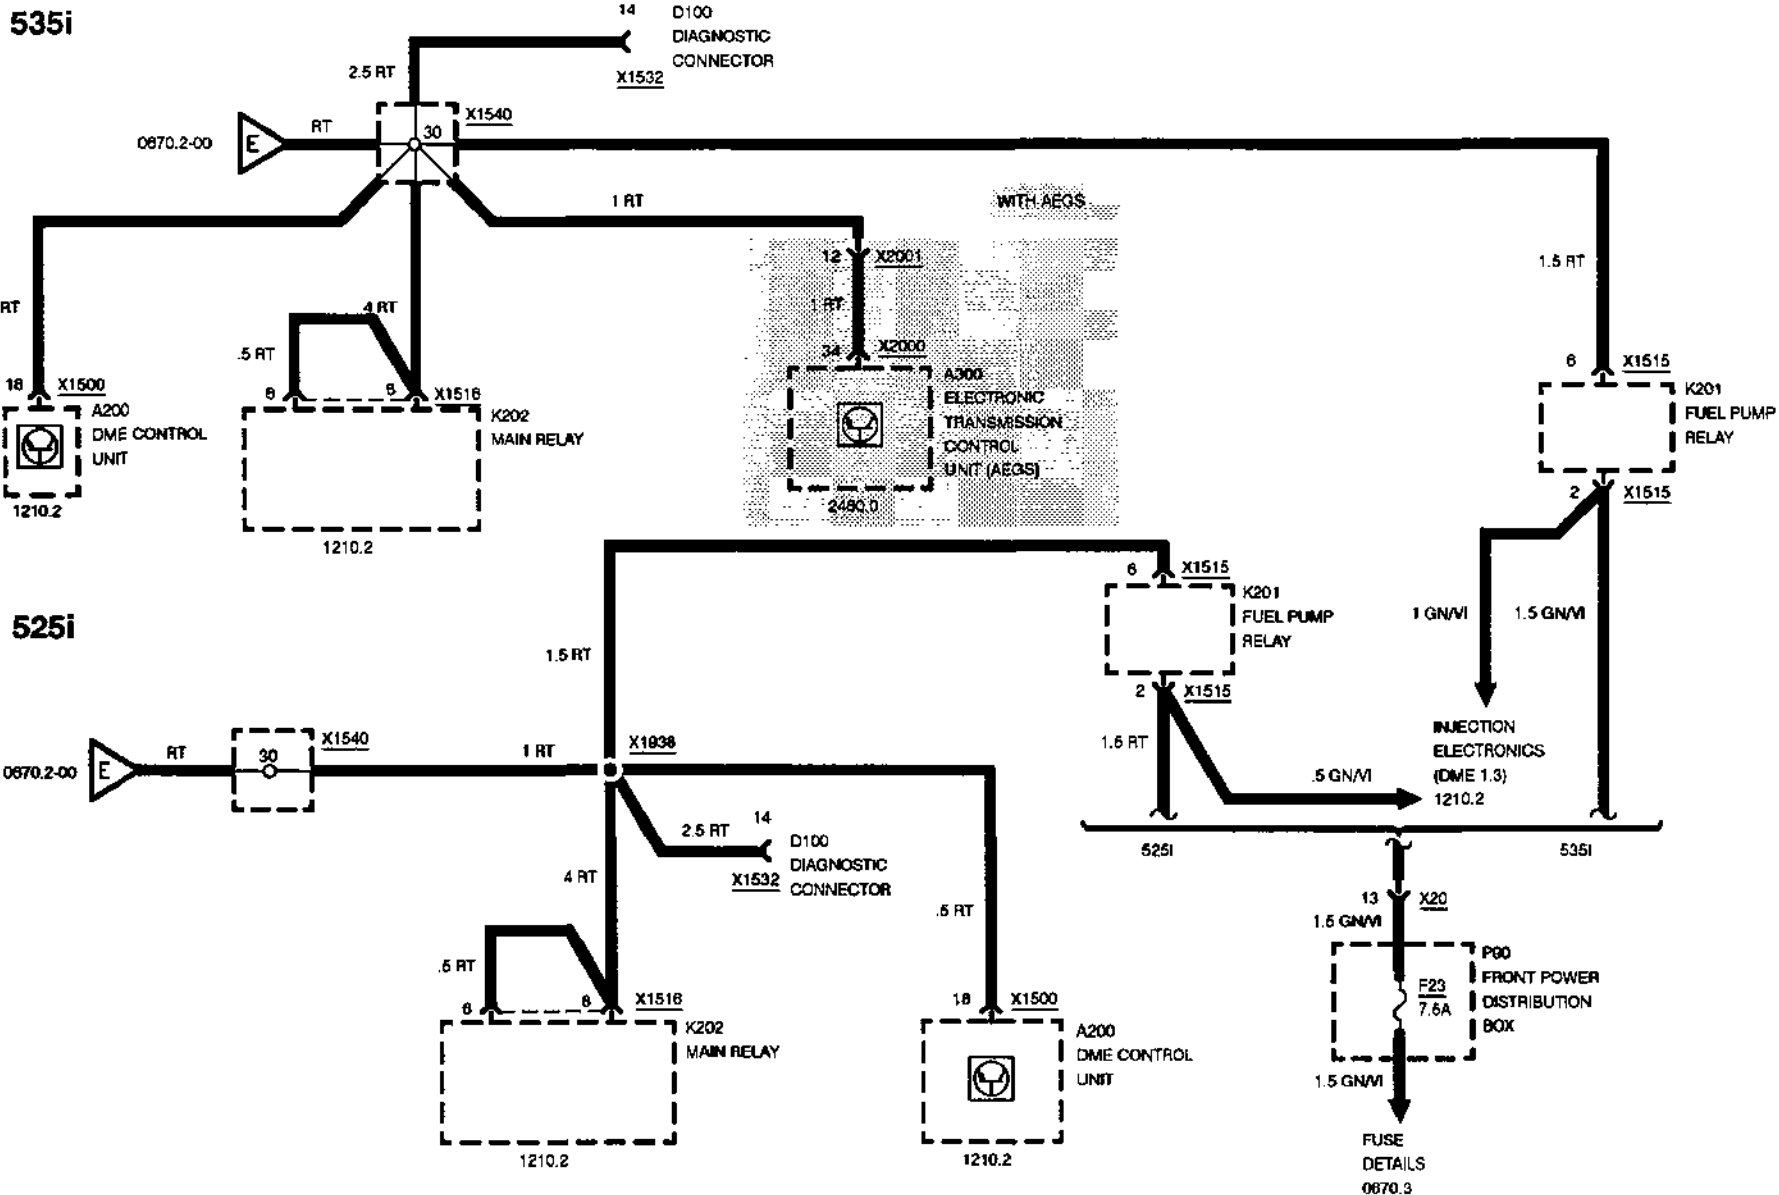




POWER DISTRIBUTION FRONT POWER DISTRIBUTION BOX

M5

M5

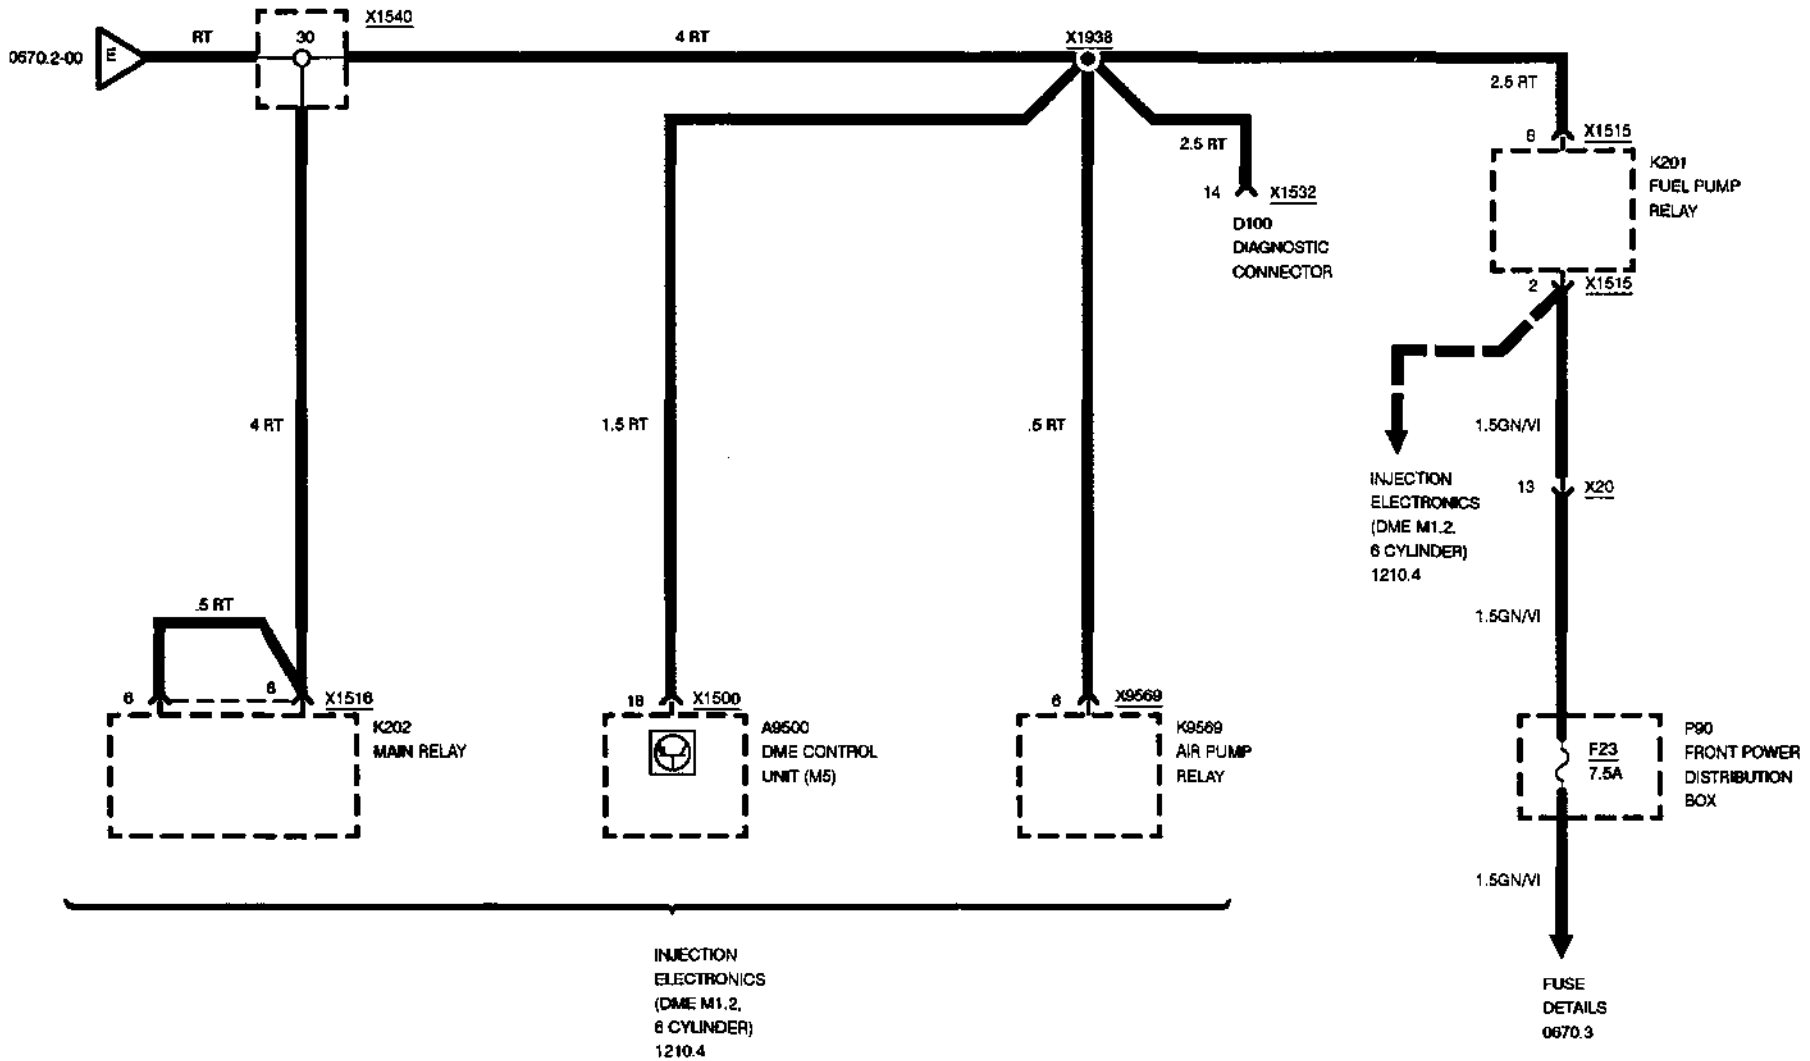

02190


0670.2-06

1990



POWER DISTRIBUTION


REAR POWER DISTRIBUTION BOX

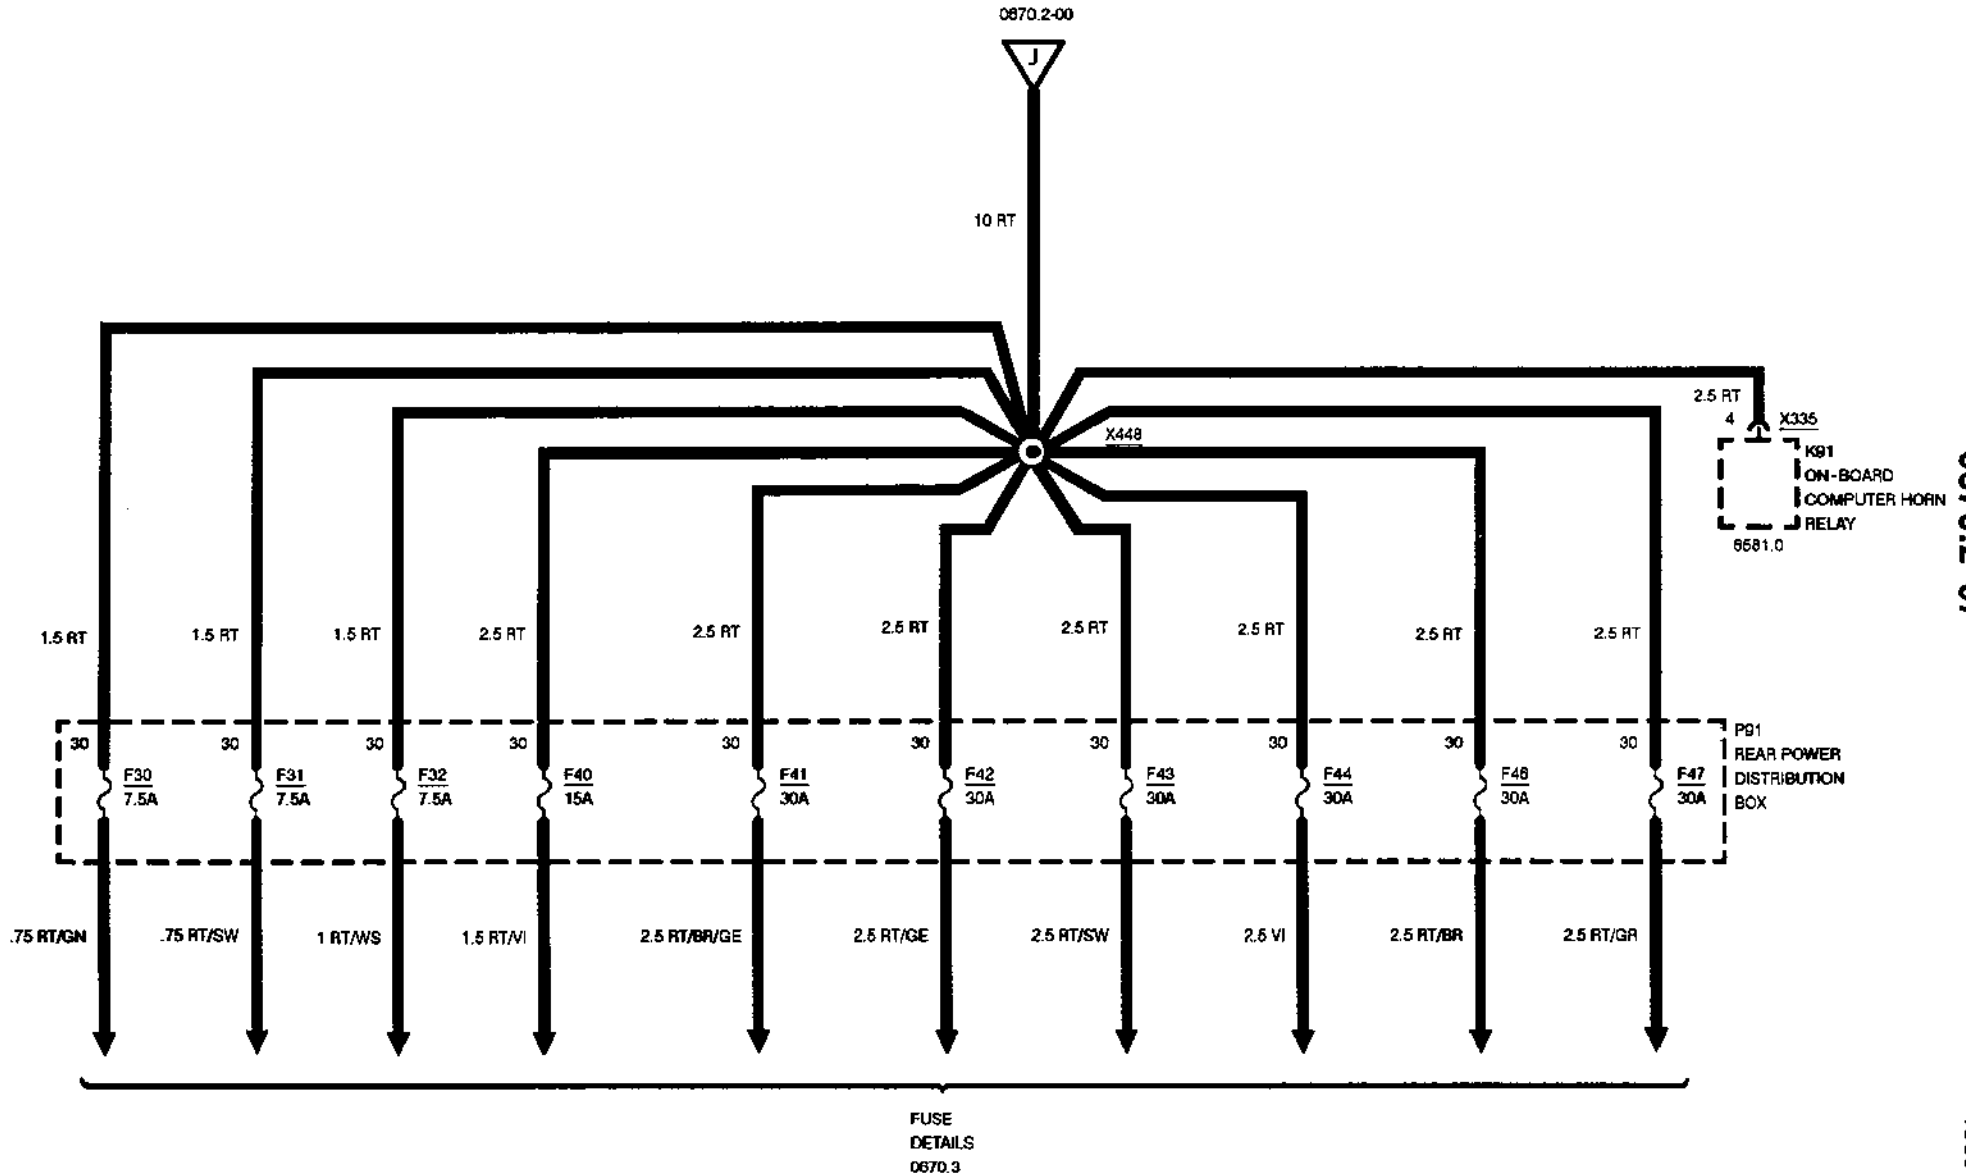



FUSE DETAILS


FUSES 1 AND 2

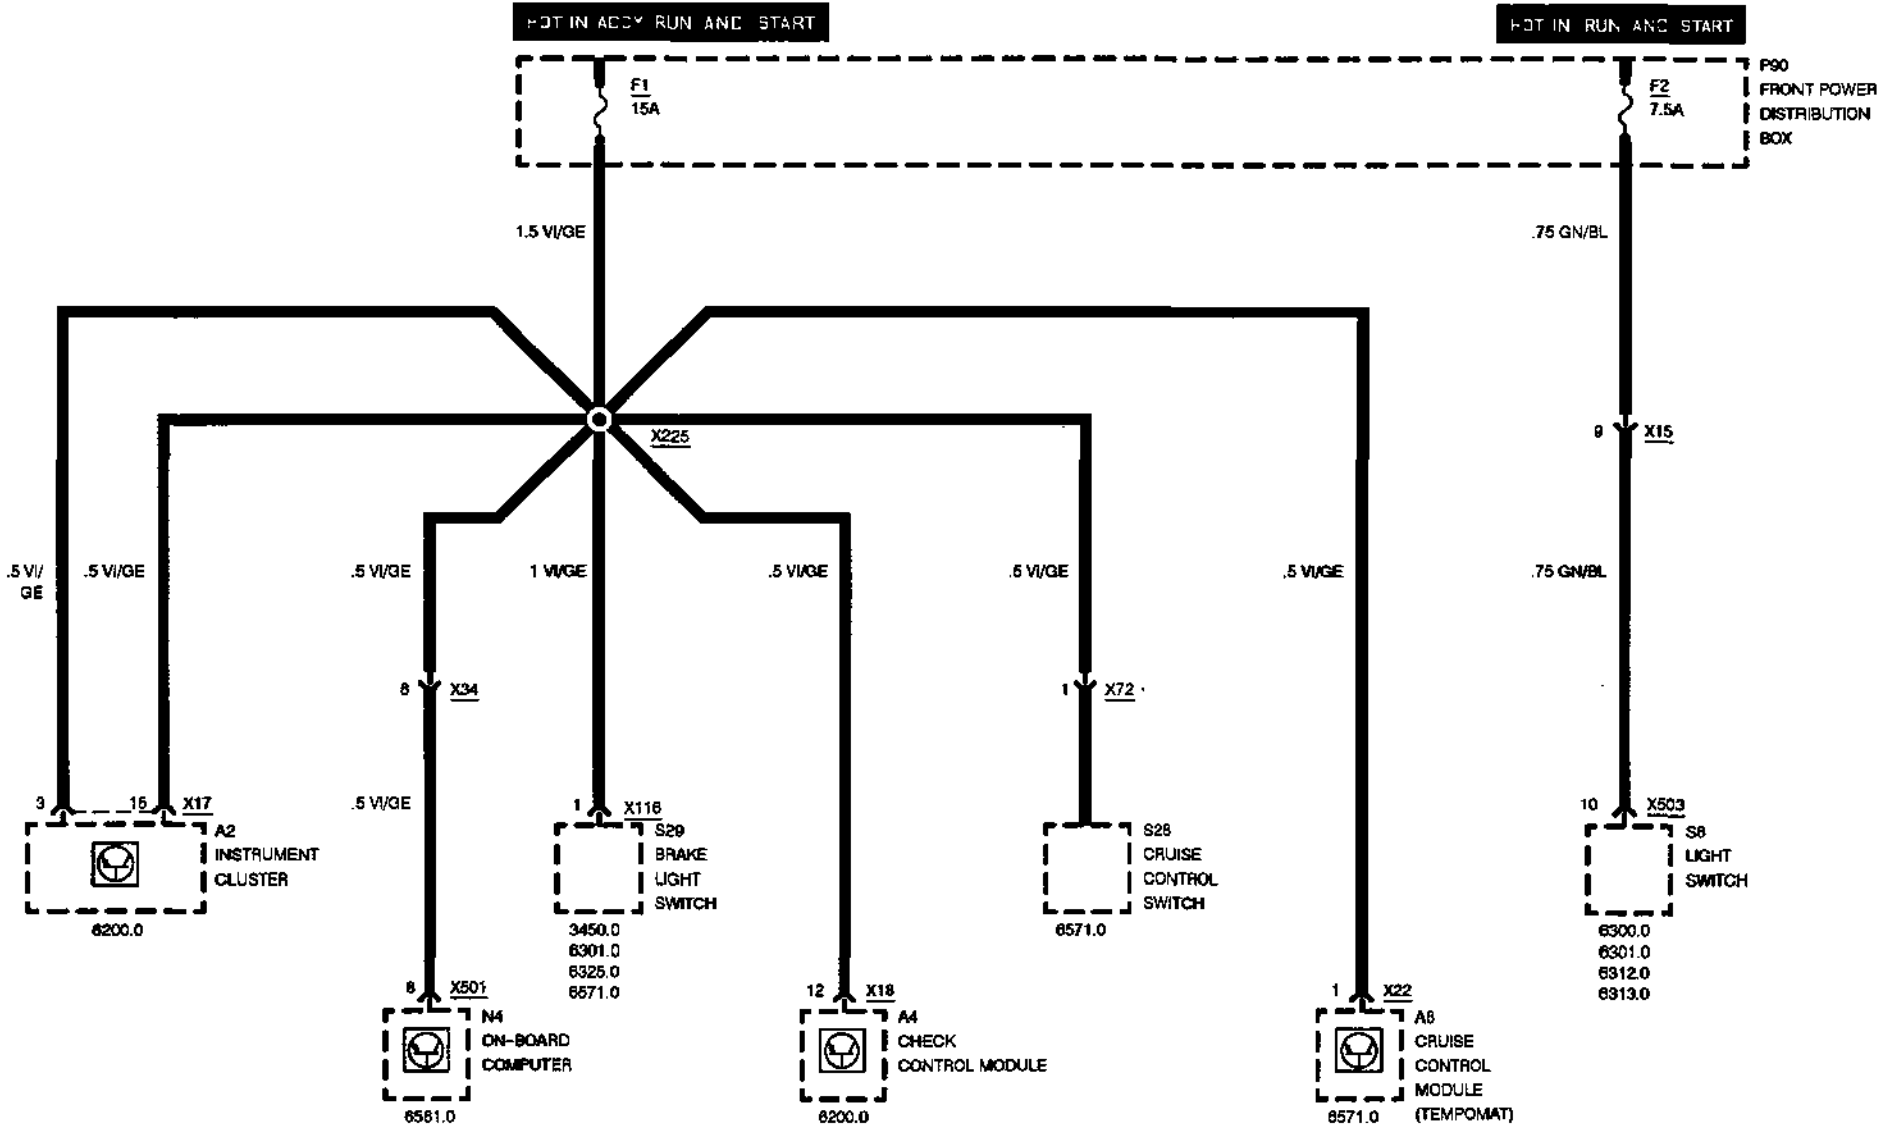




FUSE DETAILS

FUSES 3, 4, 5 AND 6

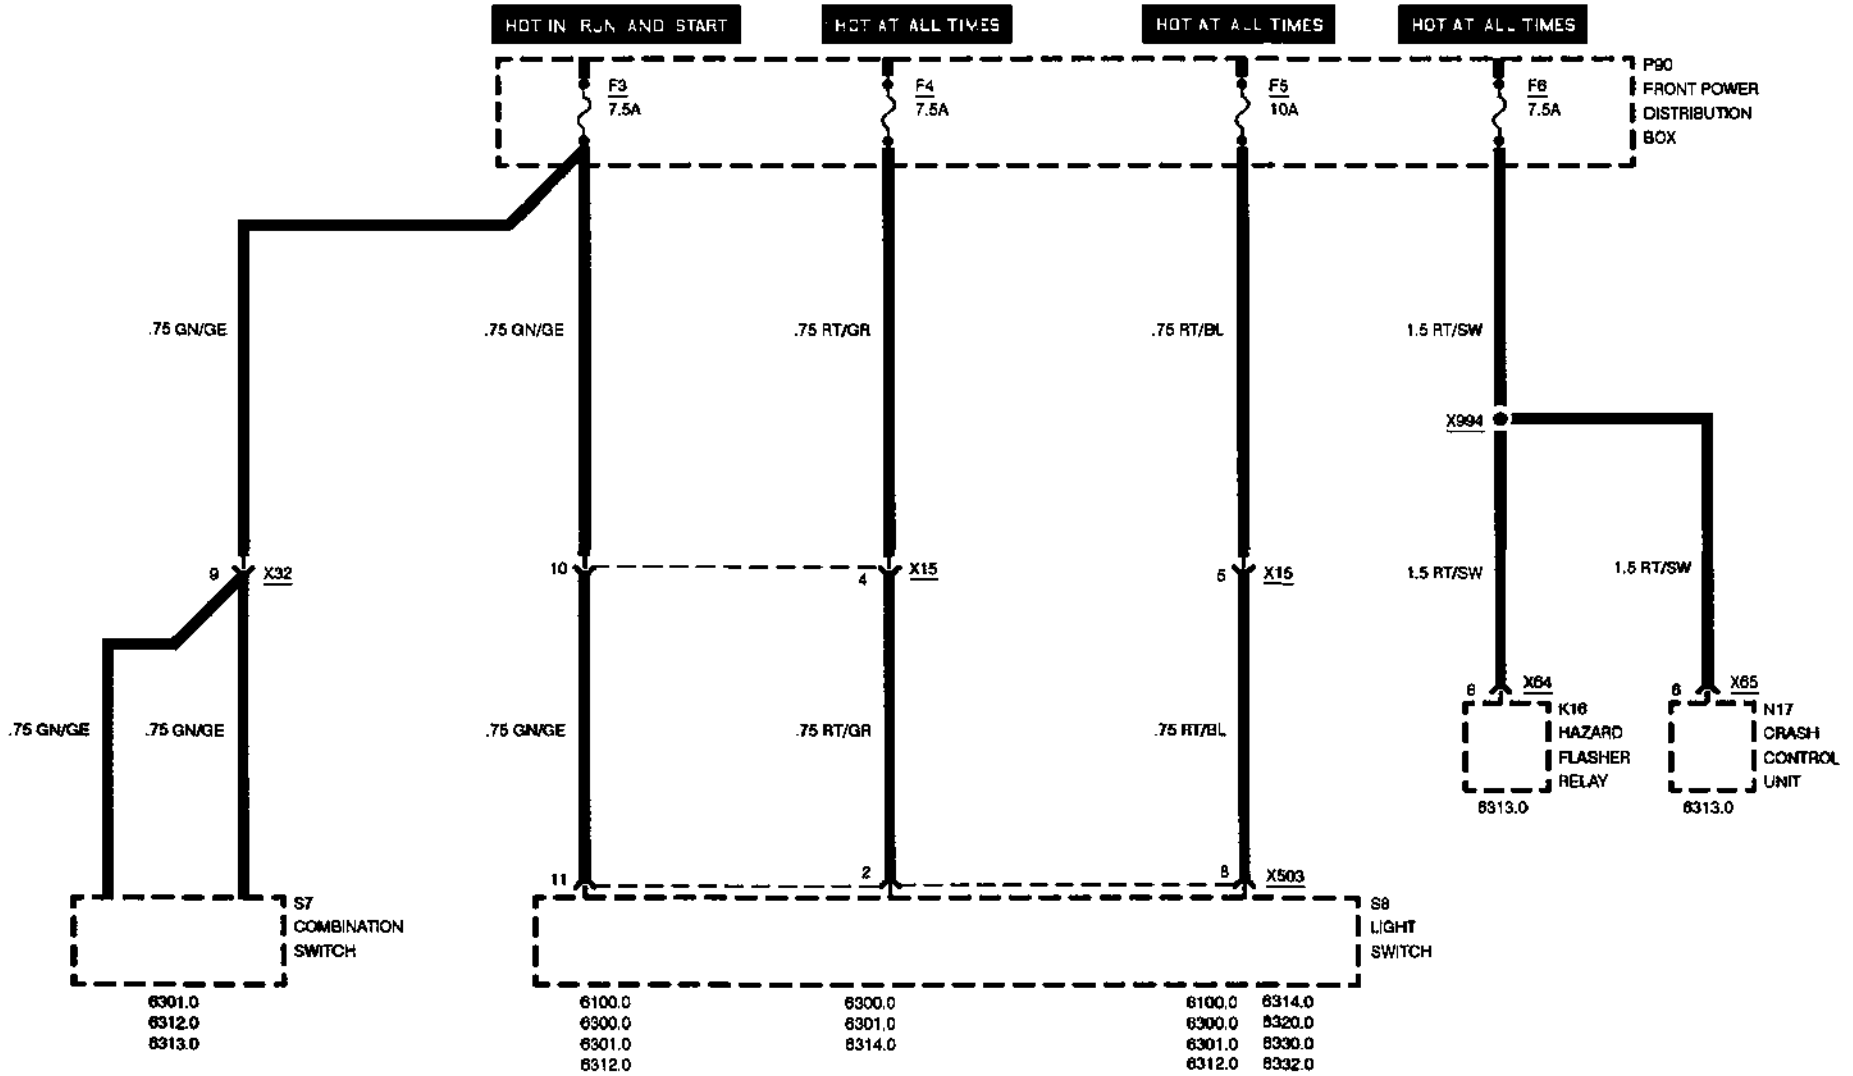


BMW
5 **FUSE DETAILS**
FUSES 7, 9, 10 AND 11

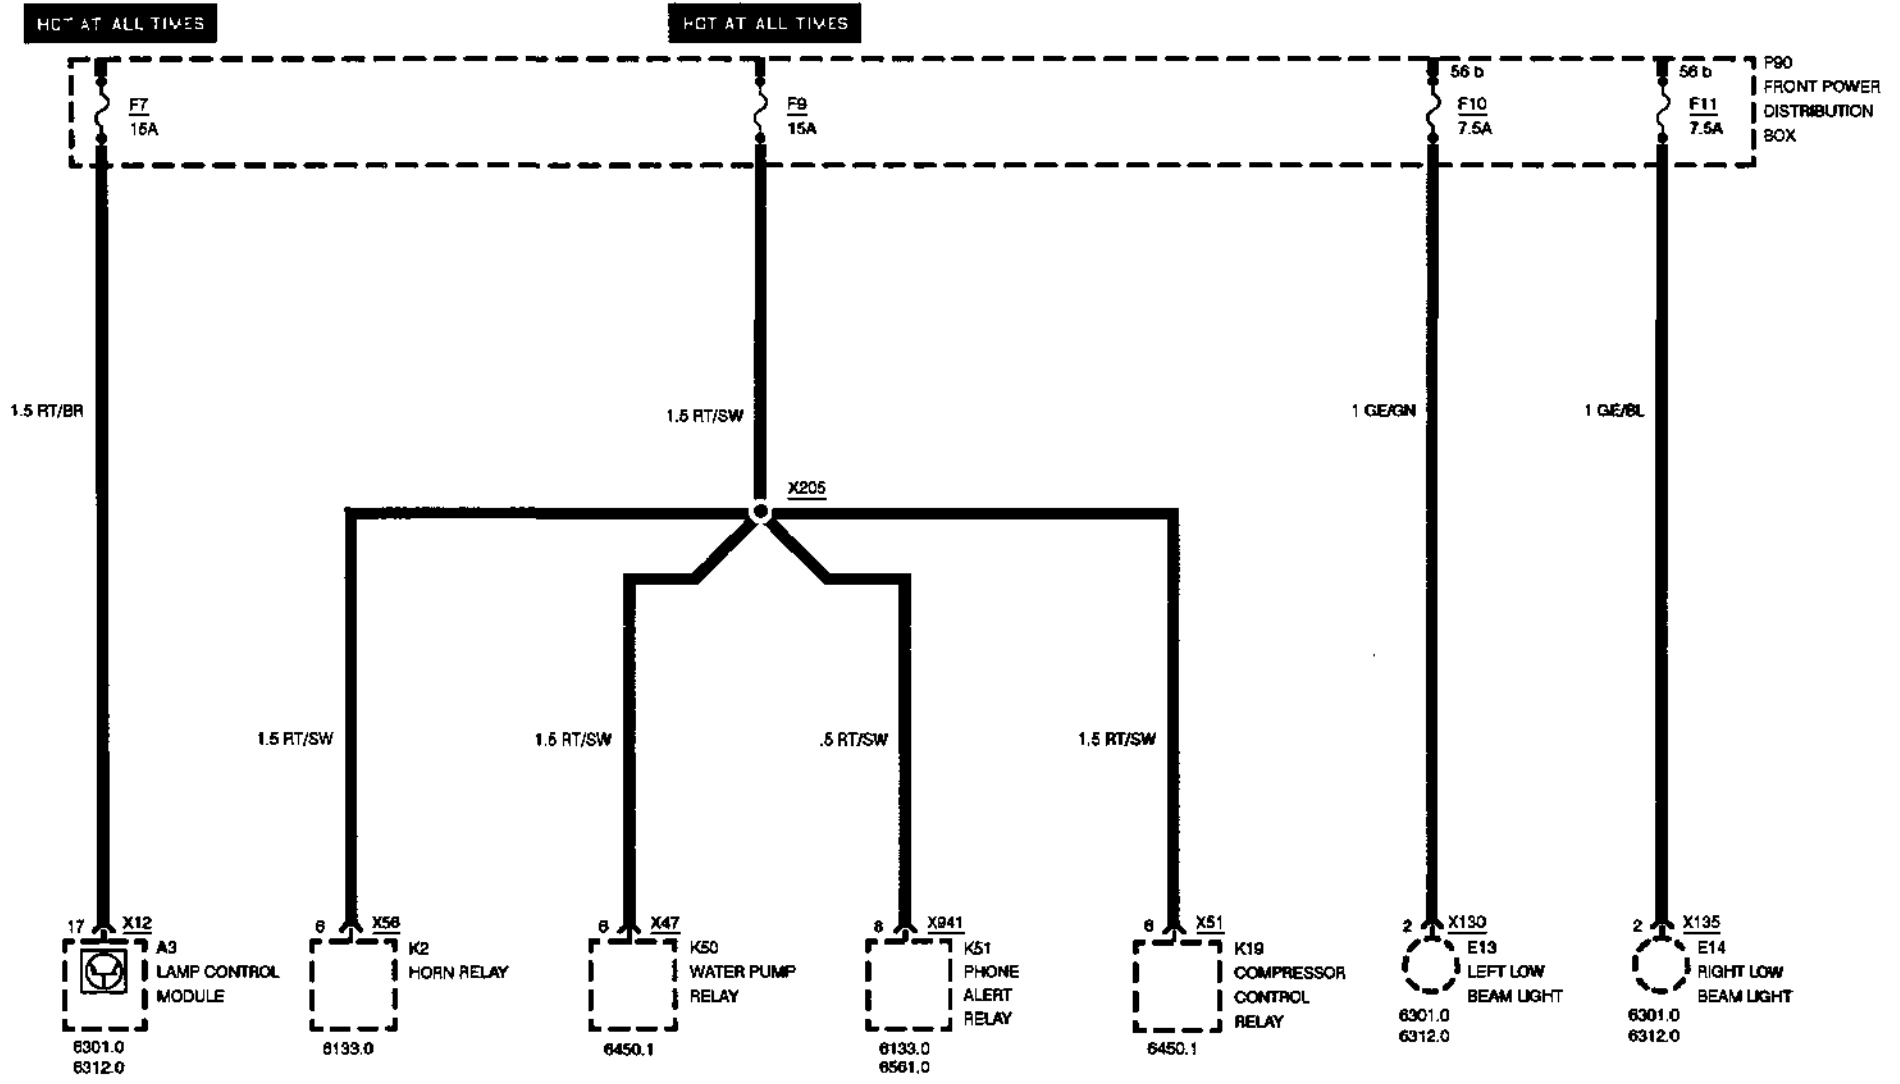



FUSE DETAILS

FUSE 12

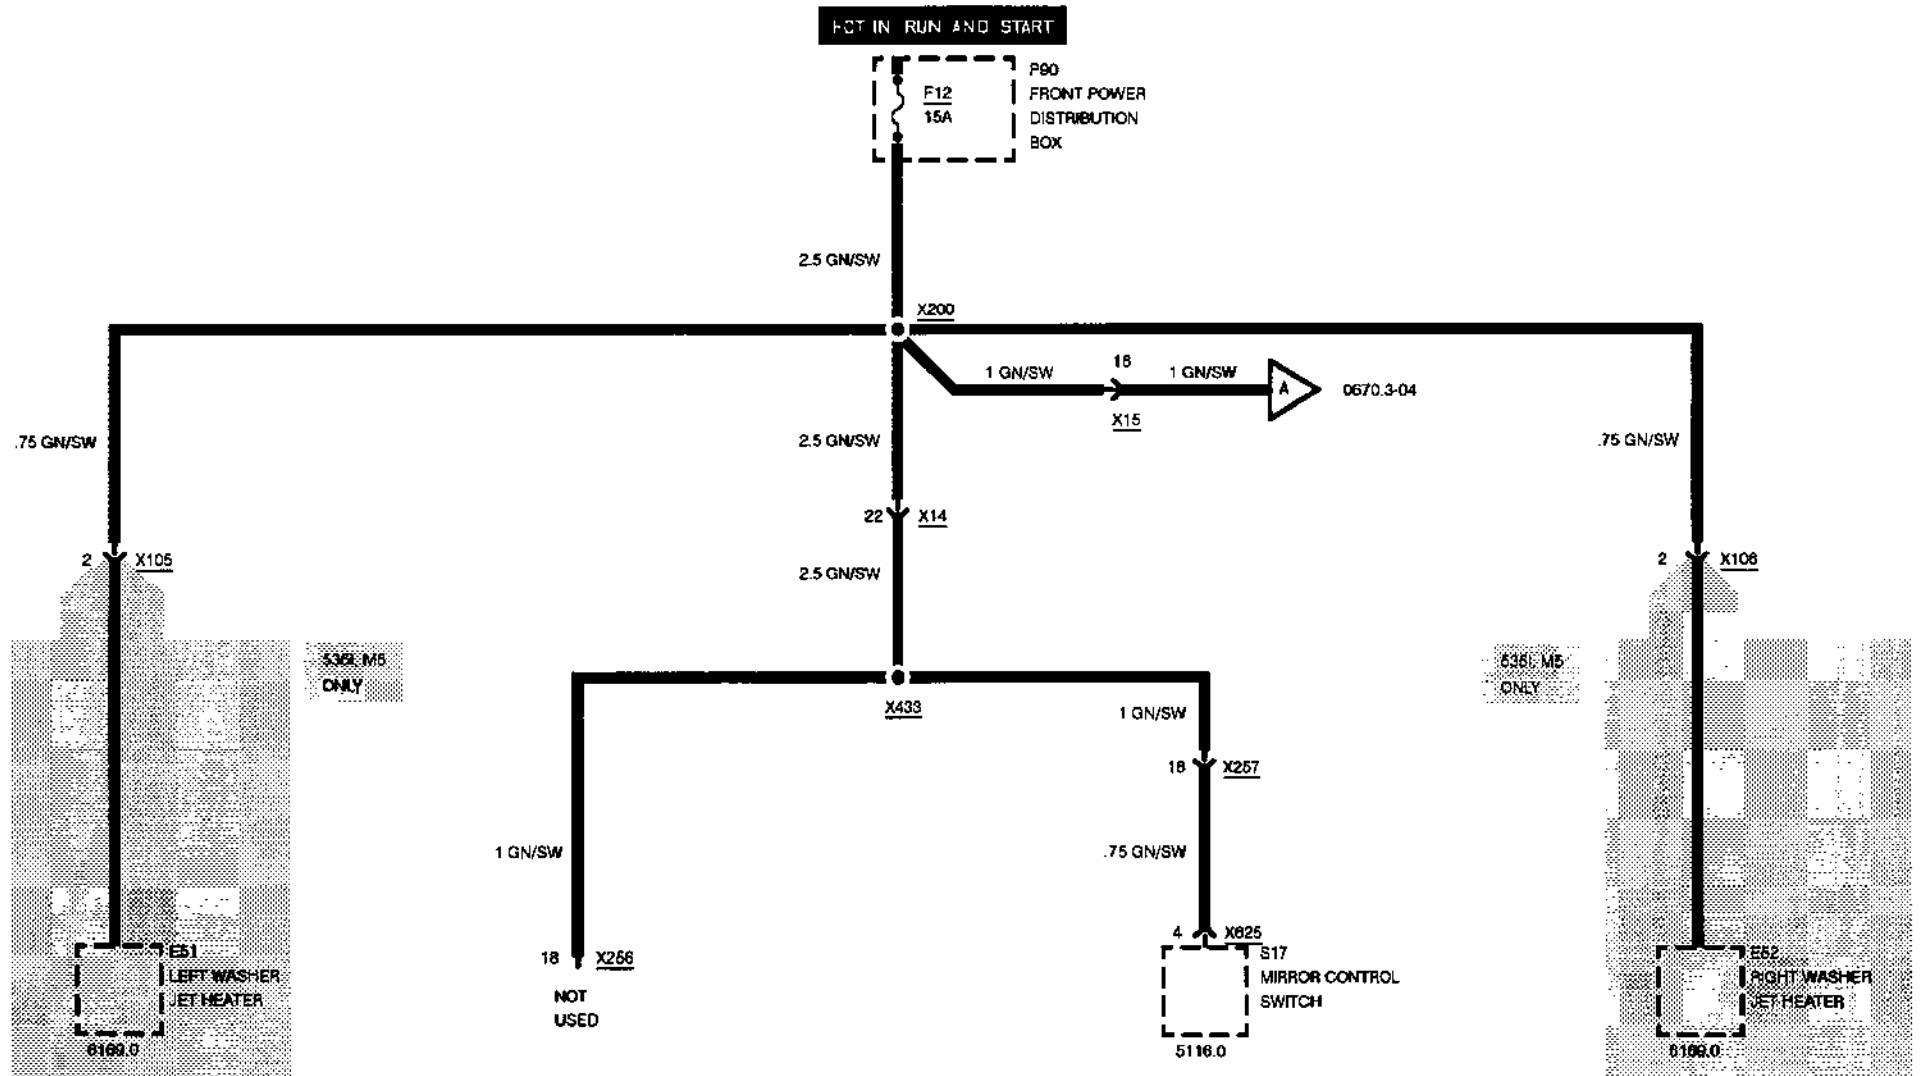

02/90


0670.3-03

1989



FUSE DETAILS


FUSE 12

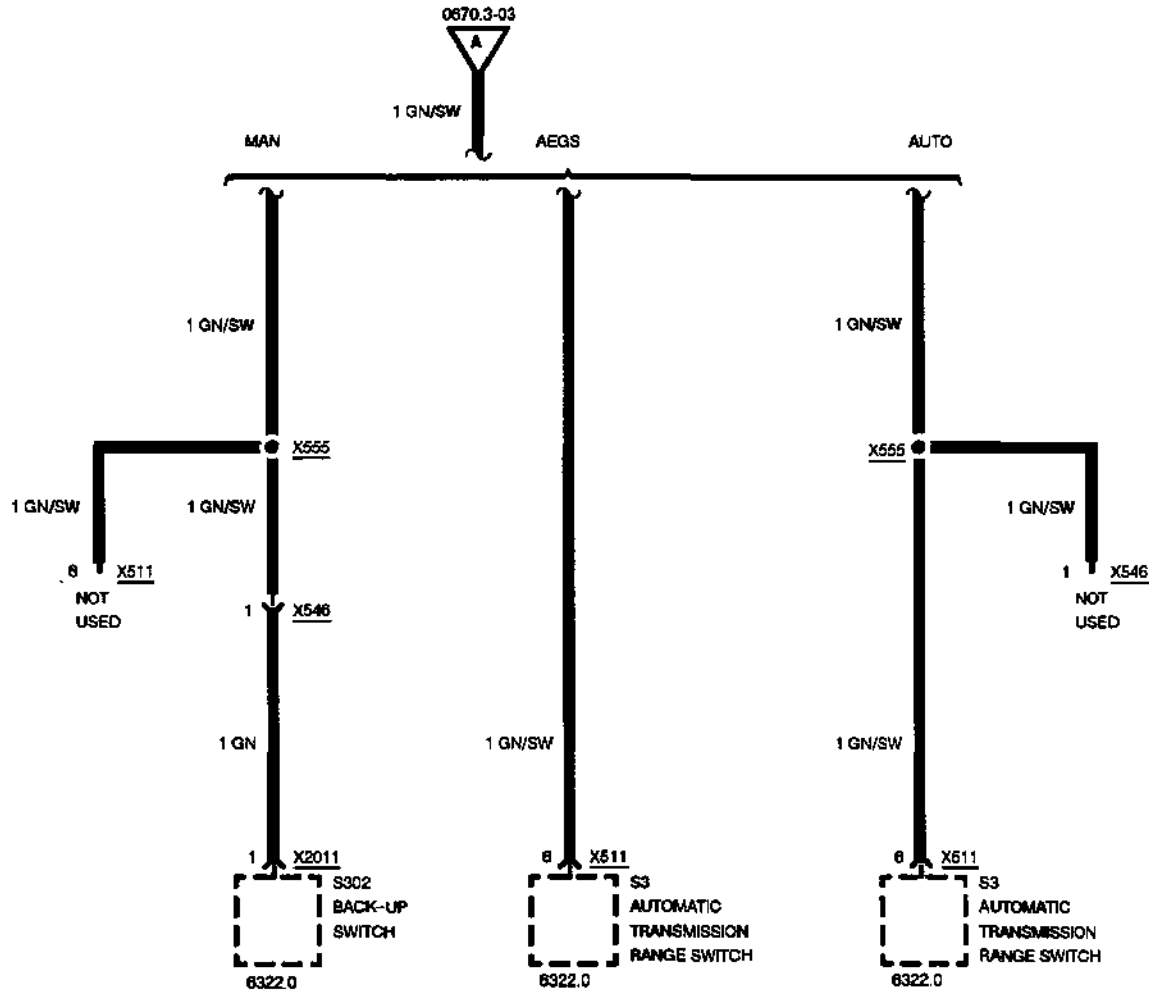




FUSE DETAILS

FUSES 13, 14, AND 15

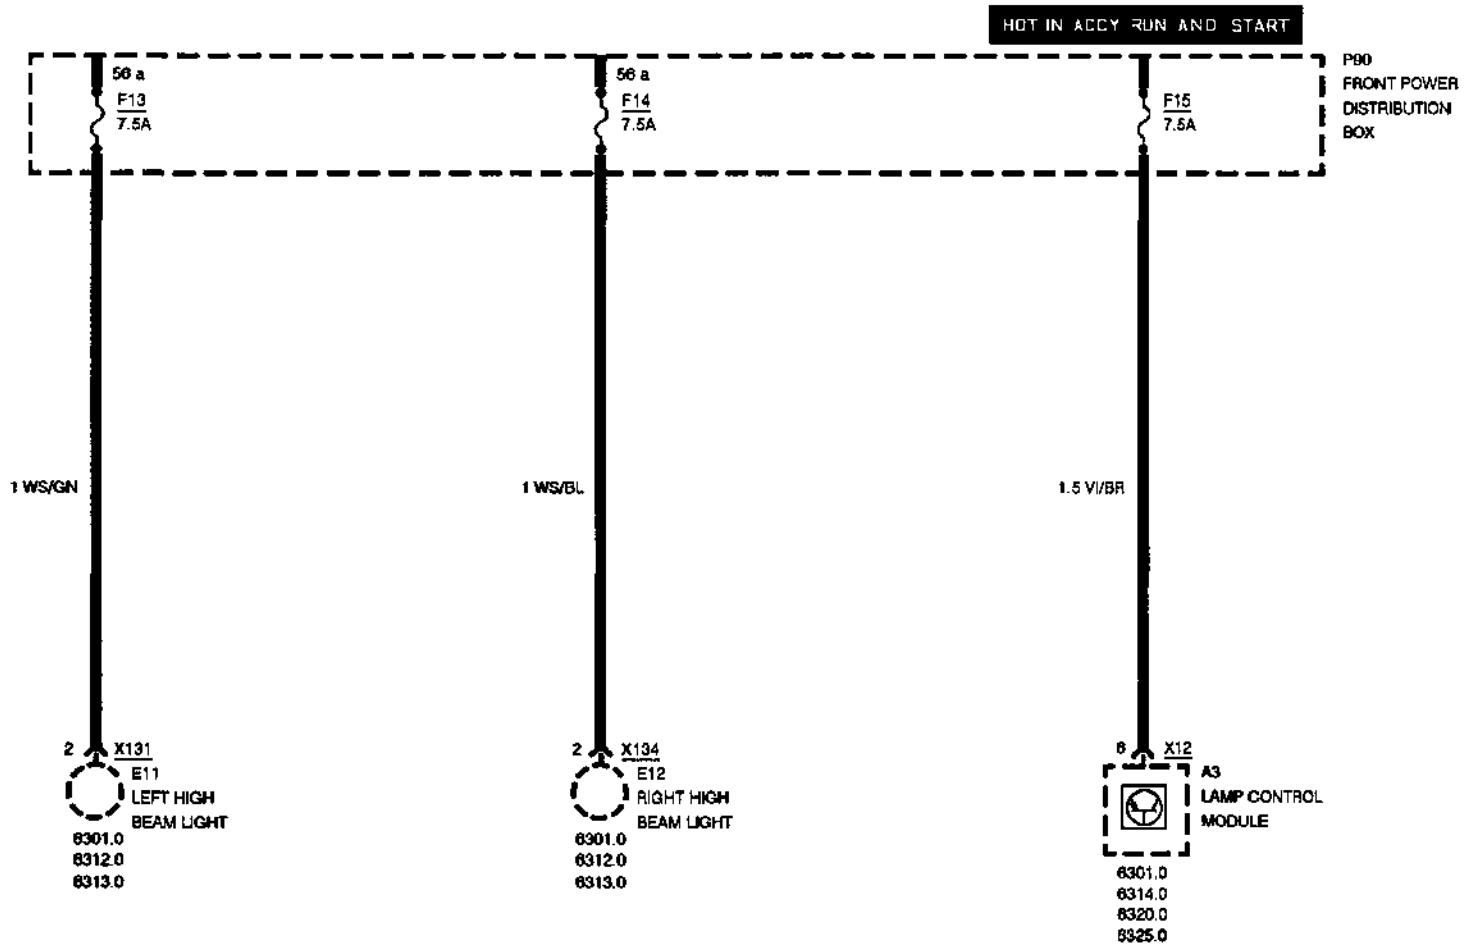

BMW 5 FUSE DETAILS
FUSE 16

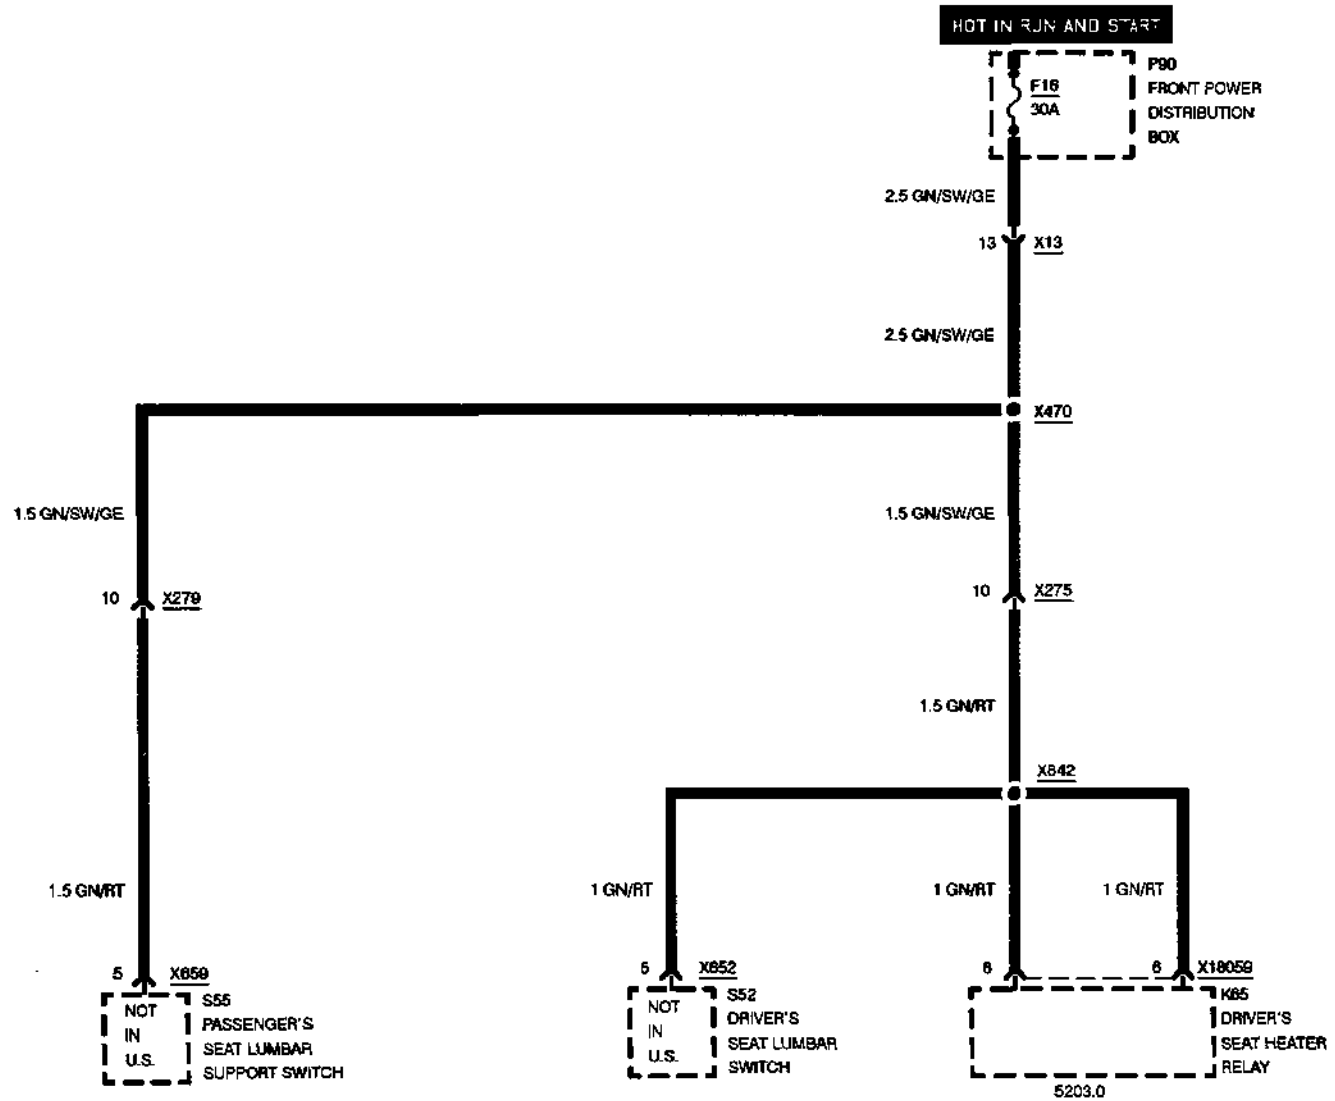

06/89


0670.3-06

1989



FUSE DETAILS


FUSE 17

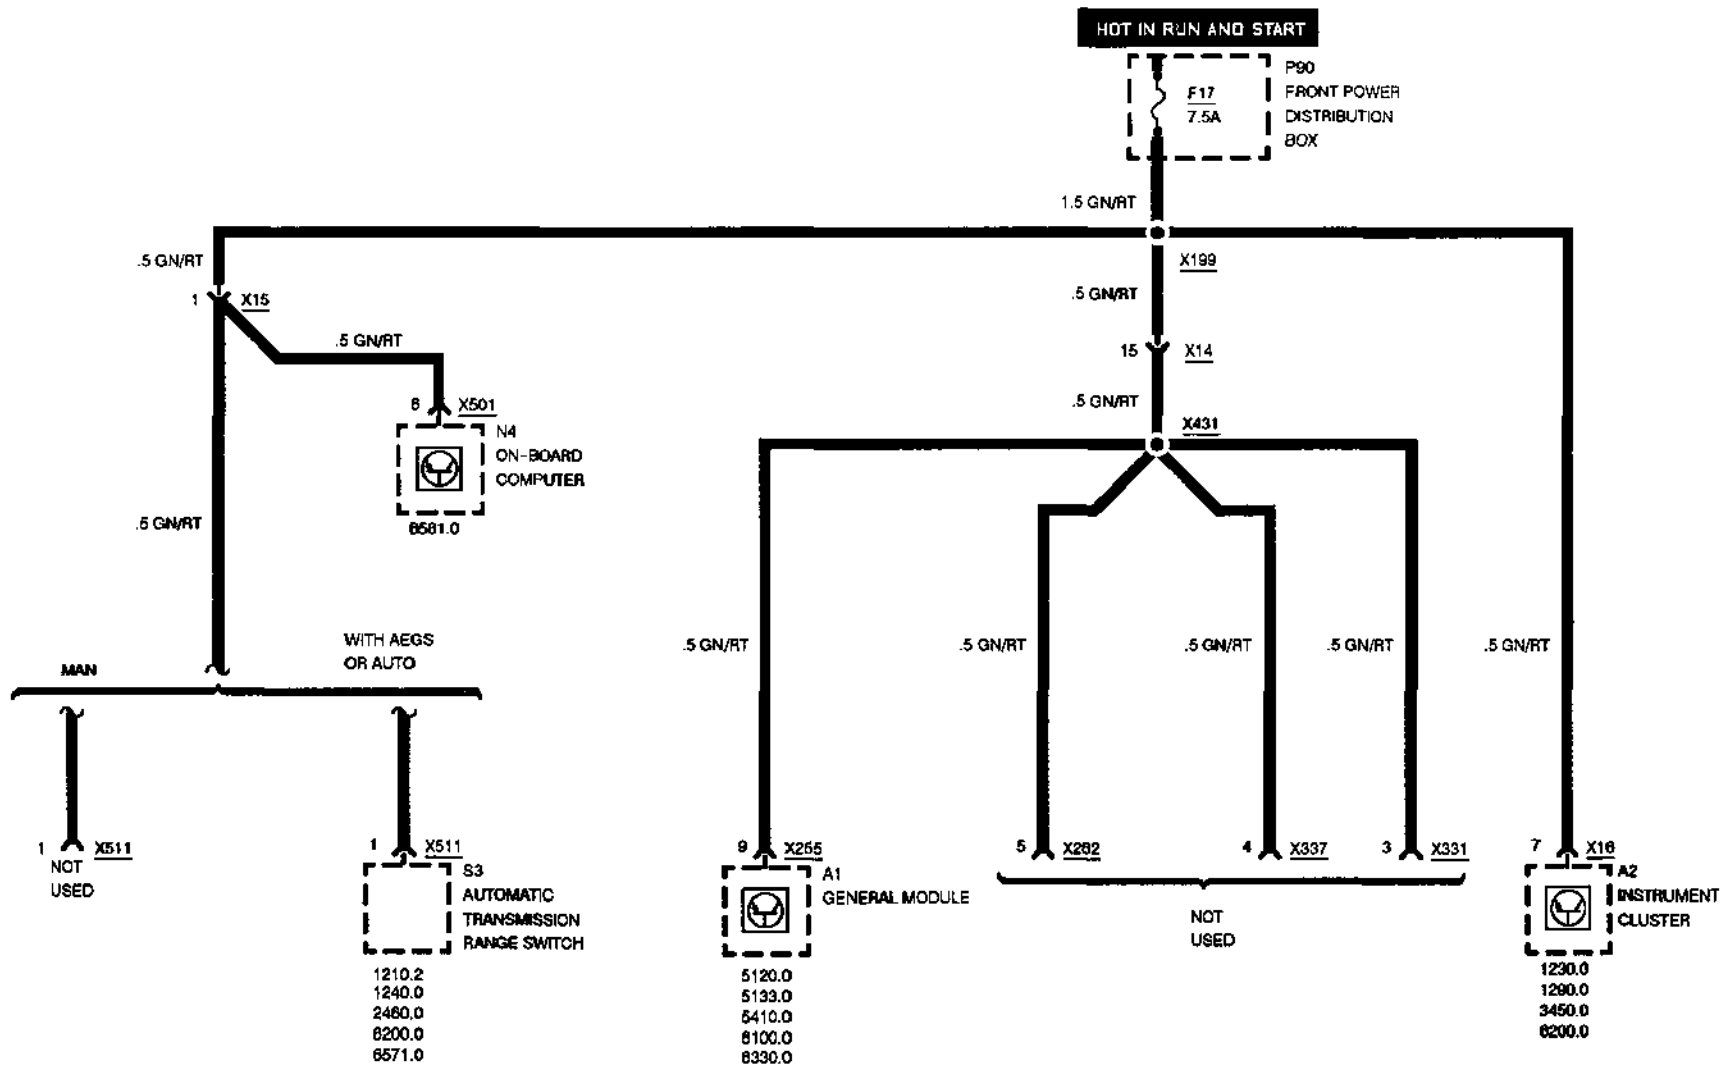



FUSE DETAILS


FUSES 18 AND 19

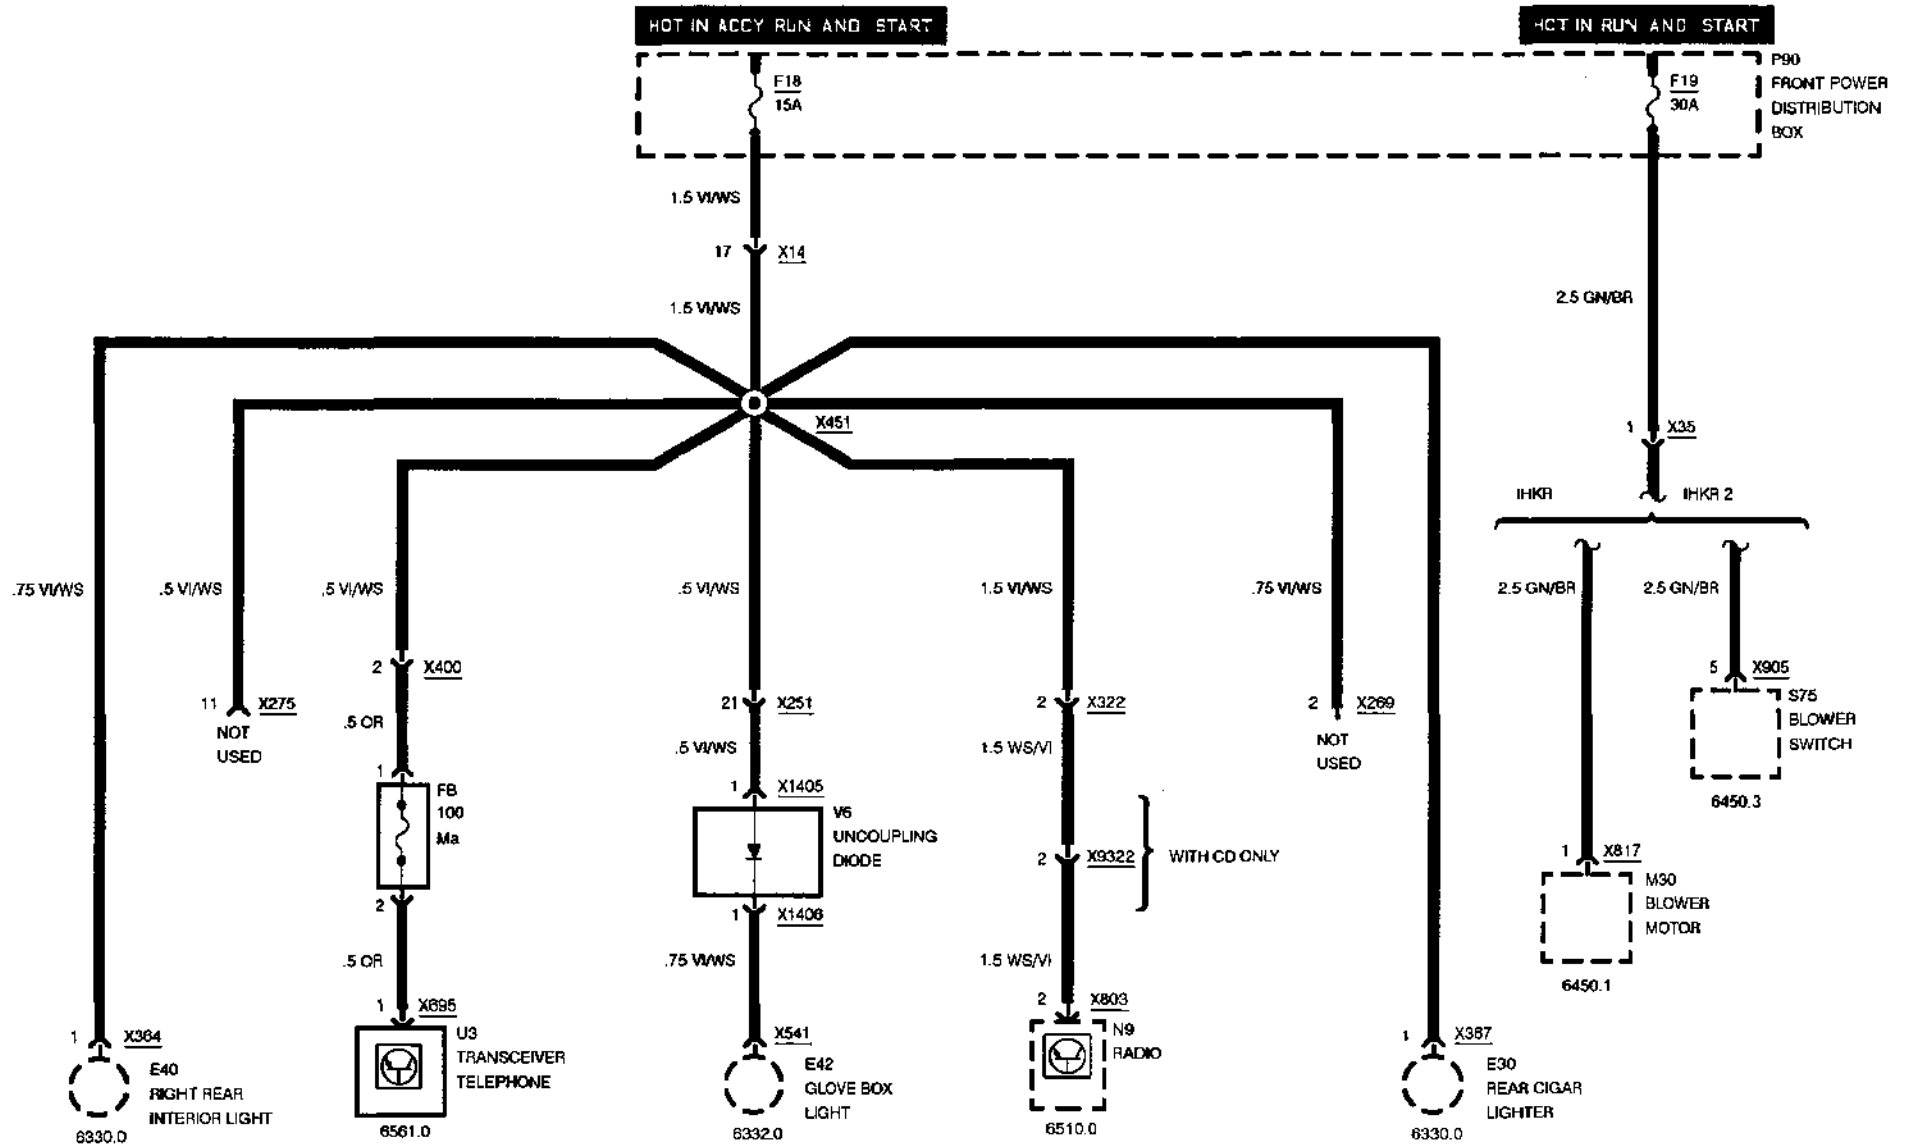



FUSE DETAILS


FUSE 20

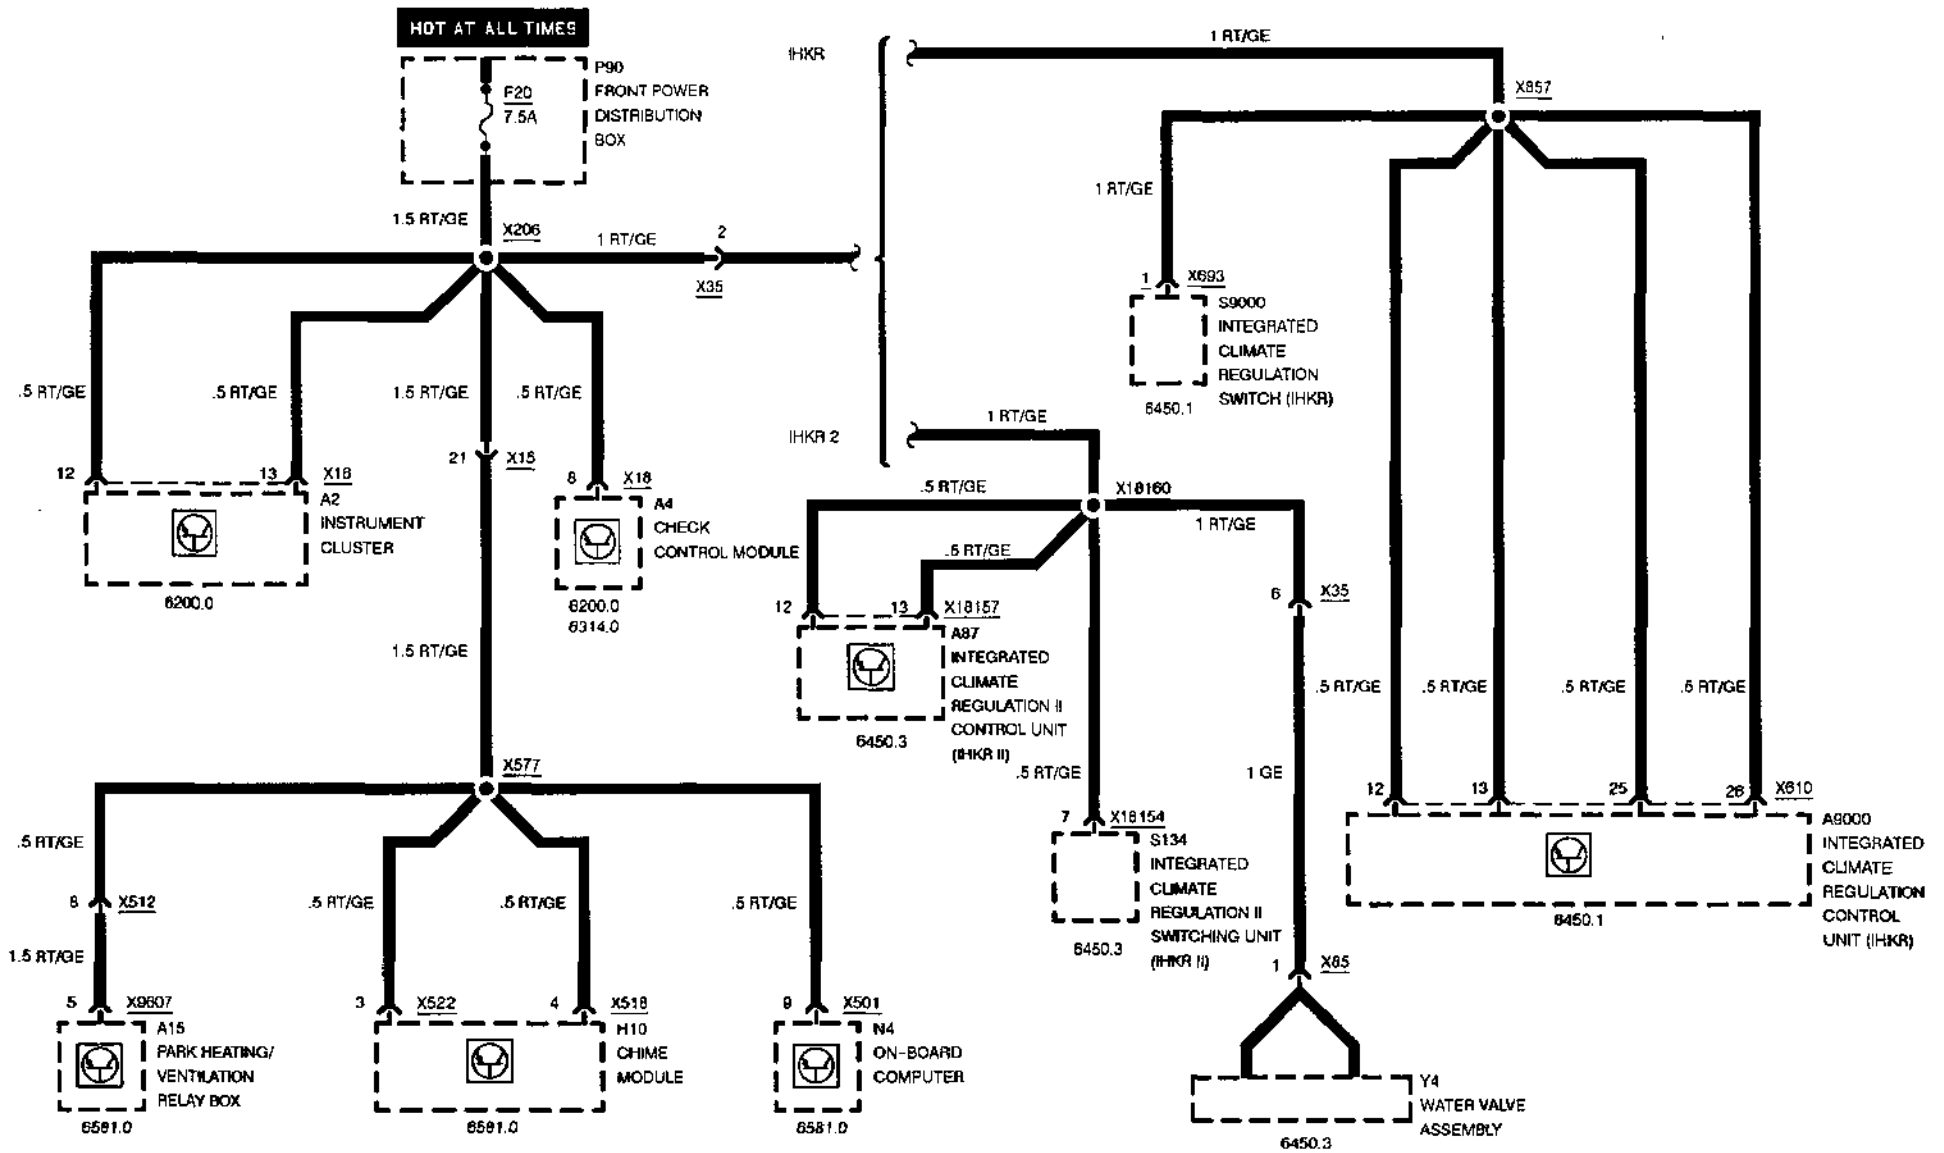




FUSE DETAILS

FUSE 21

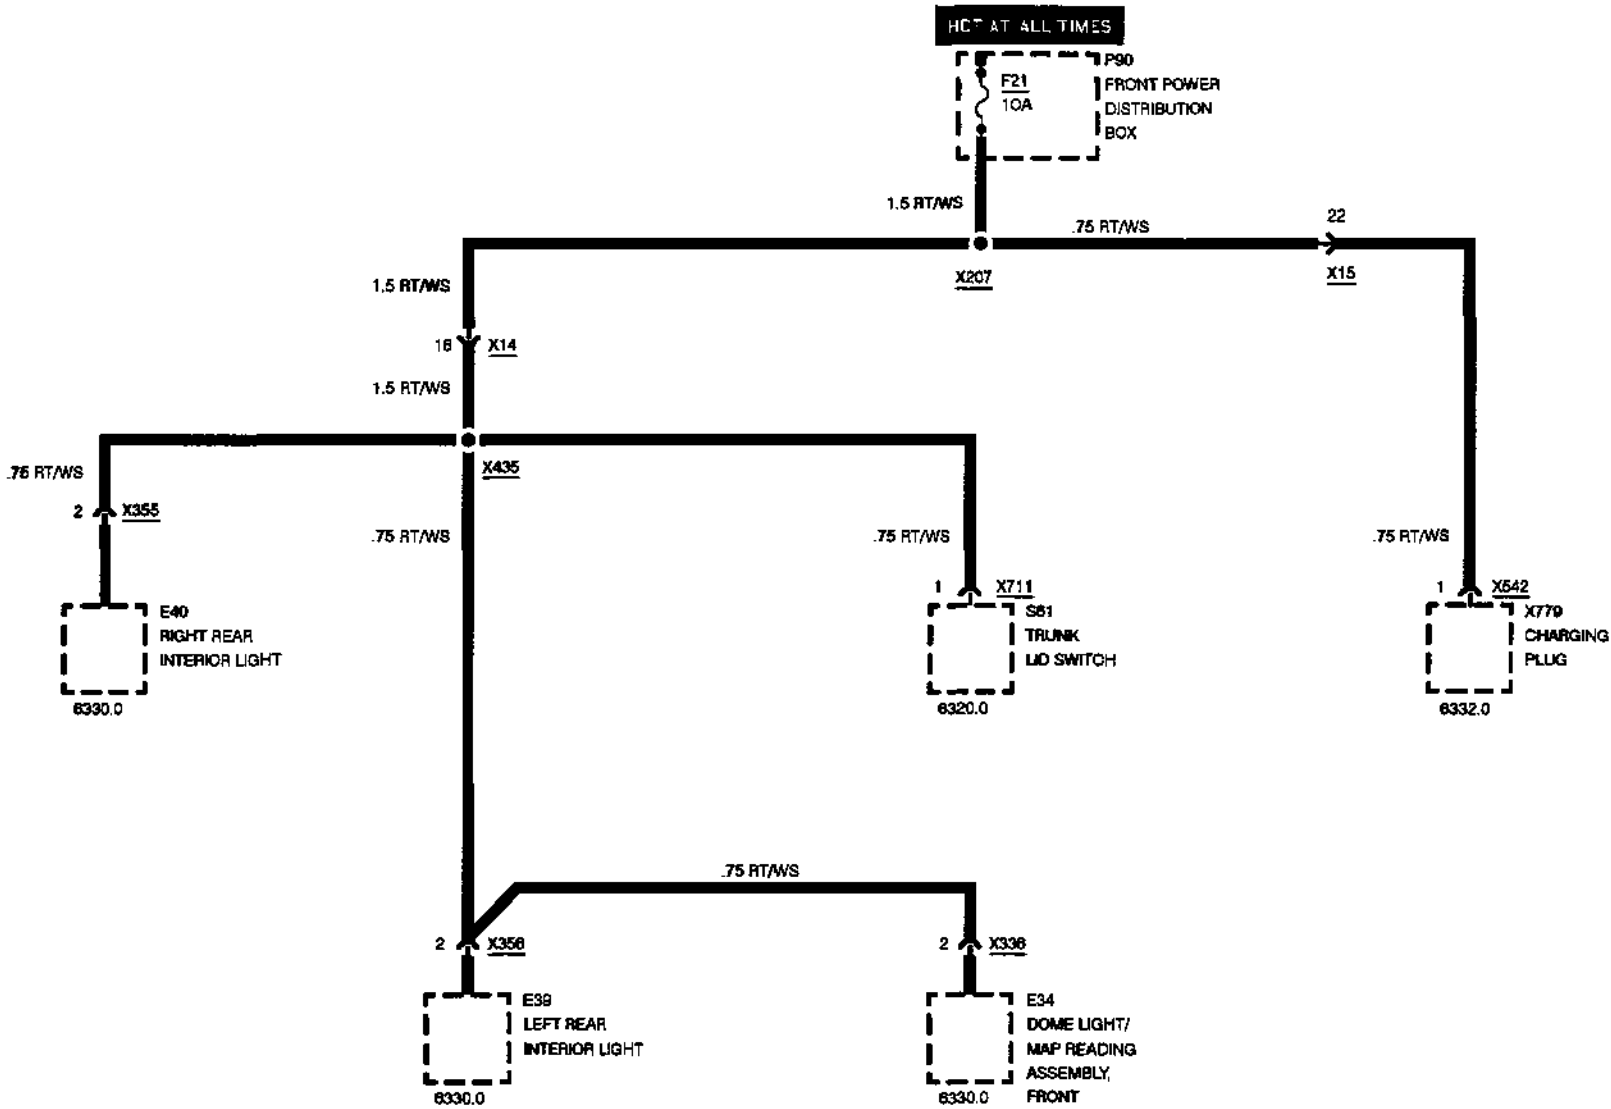


BMW 5 FUSE DETAILS
FUSES 22, 23 AND 24

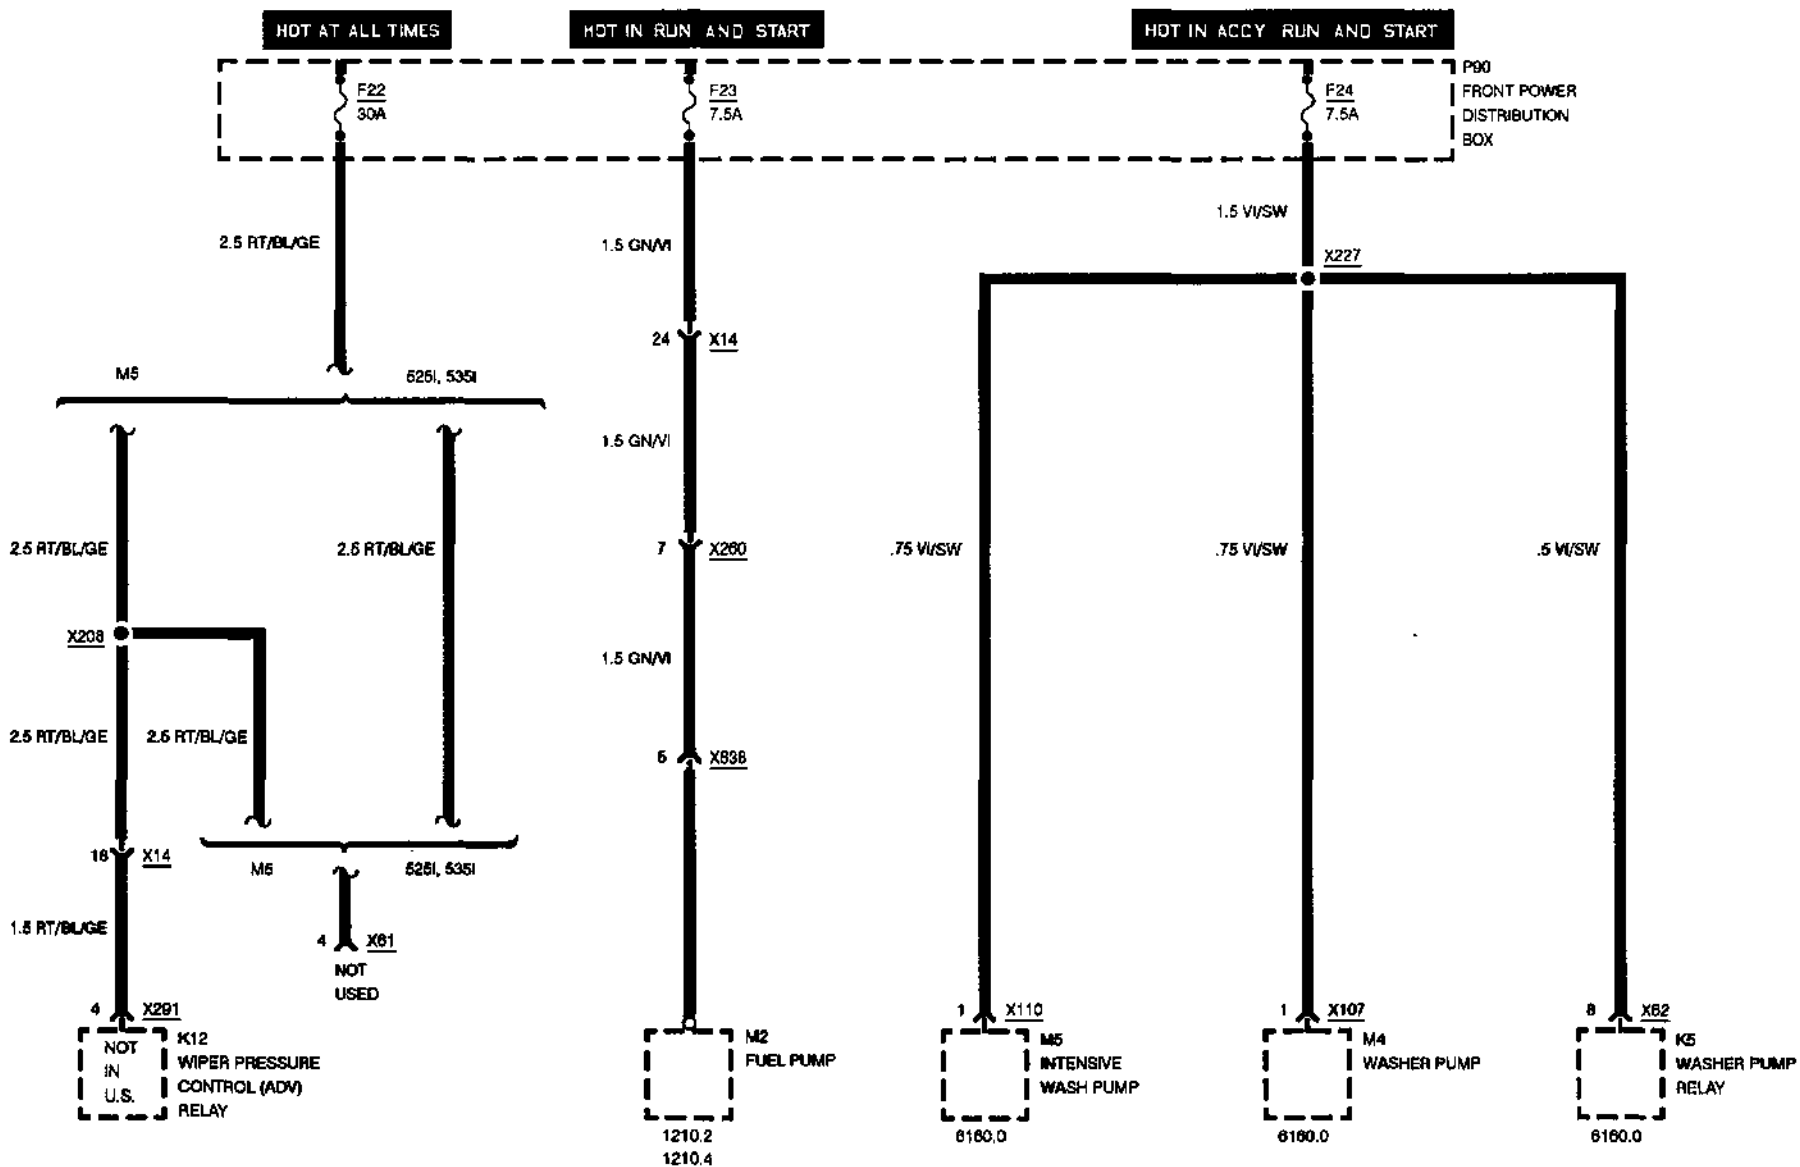



FUSE DETAILS


FUSES 25, 26 AND 27

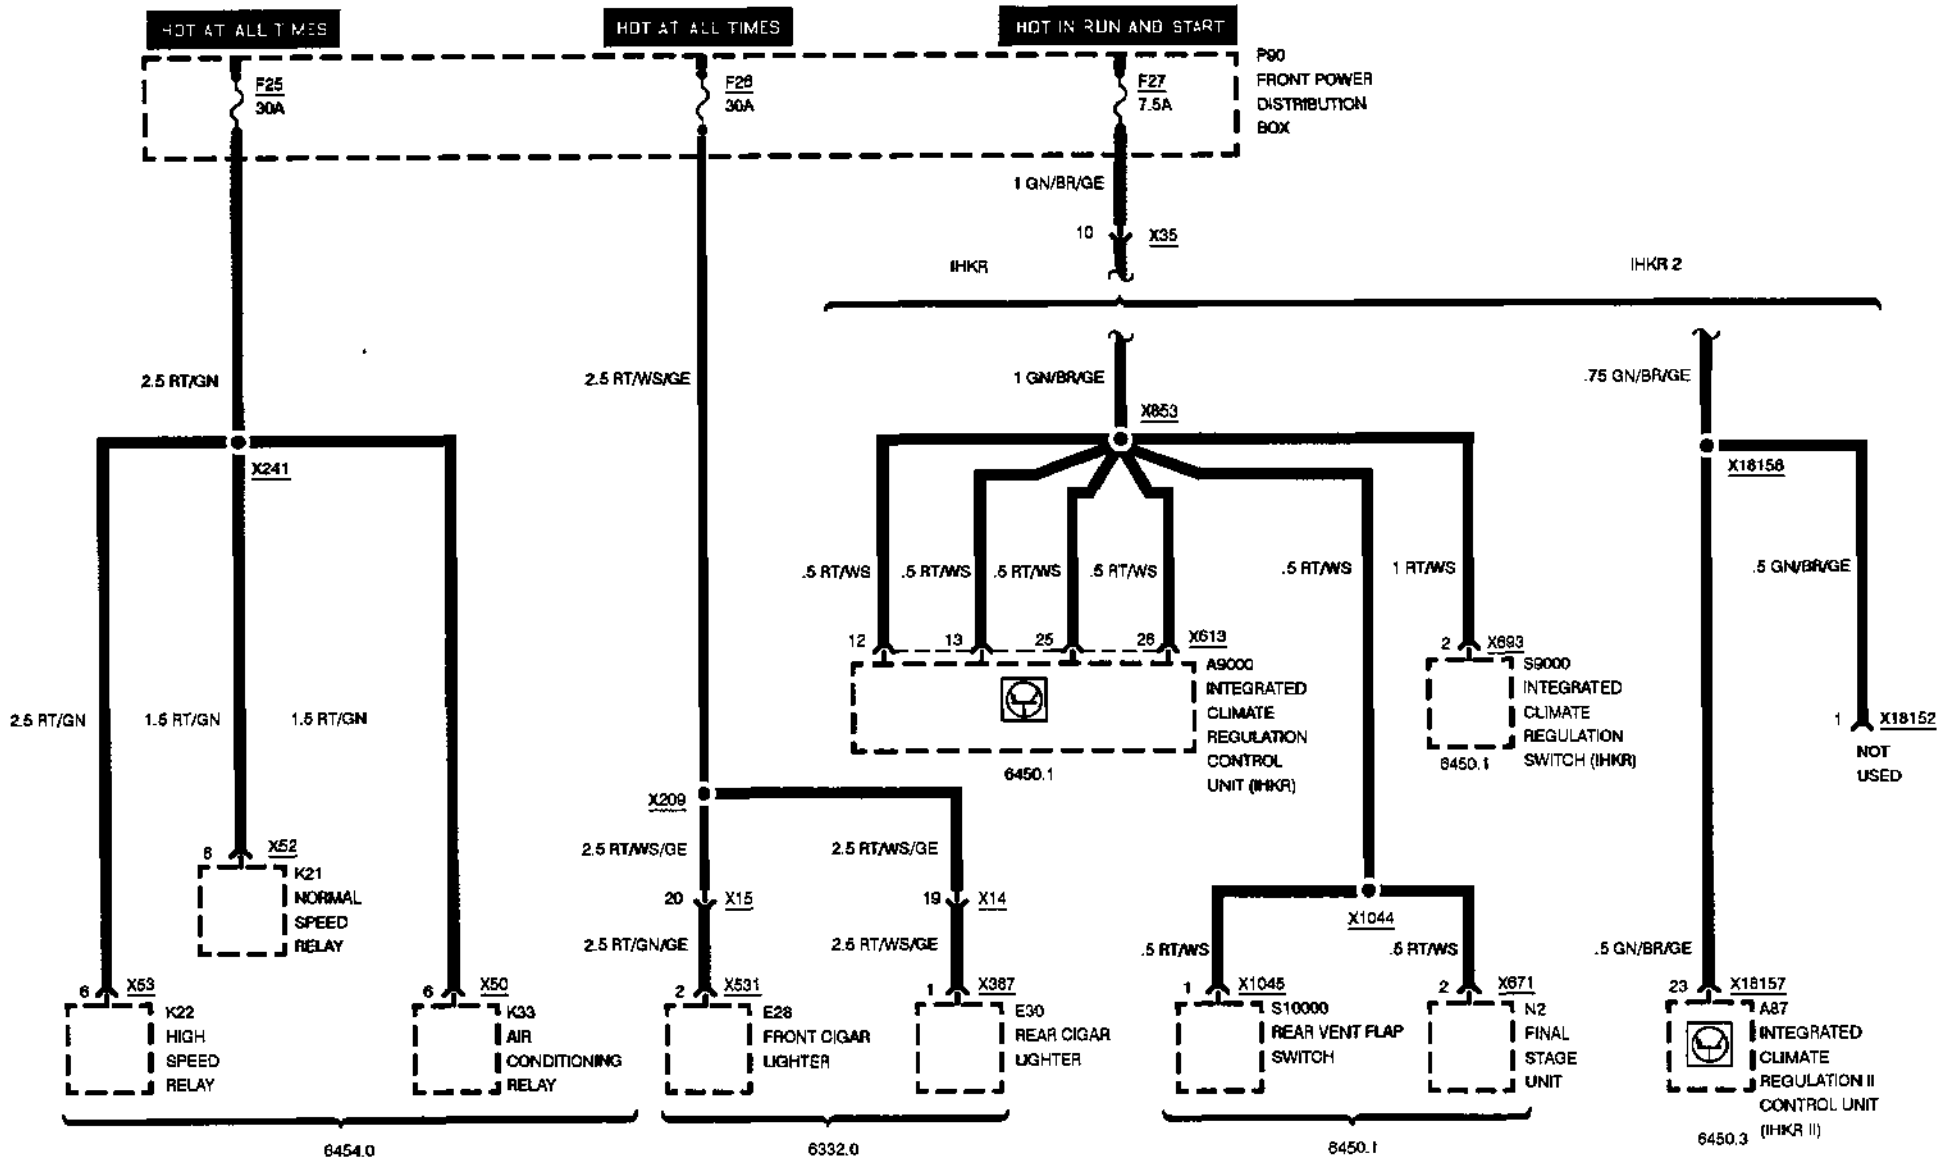



FUSE DETAILS


FUSES 28 AND 29

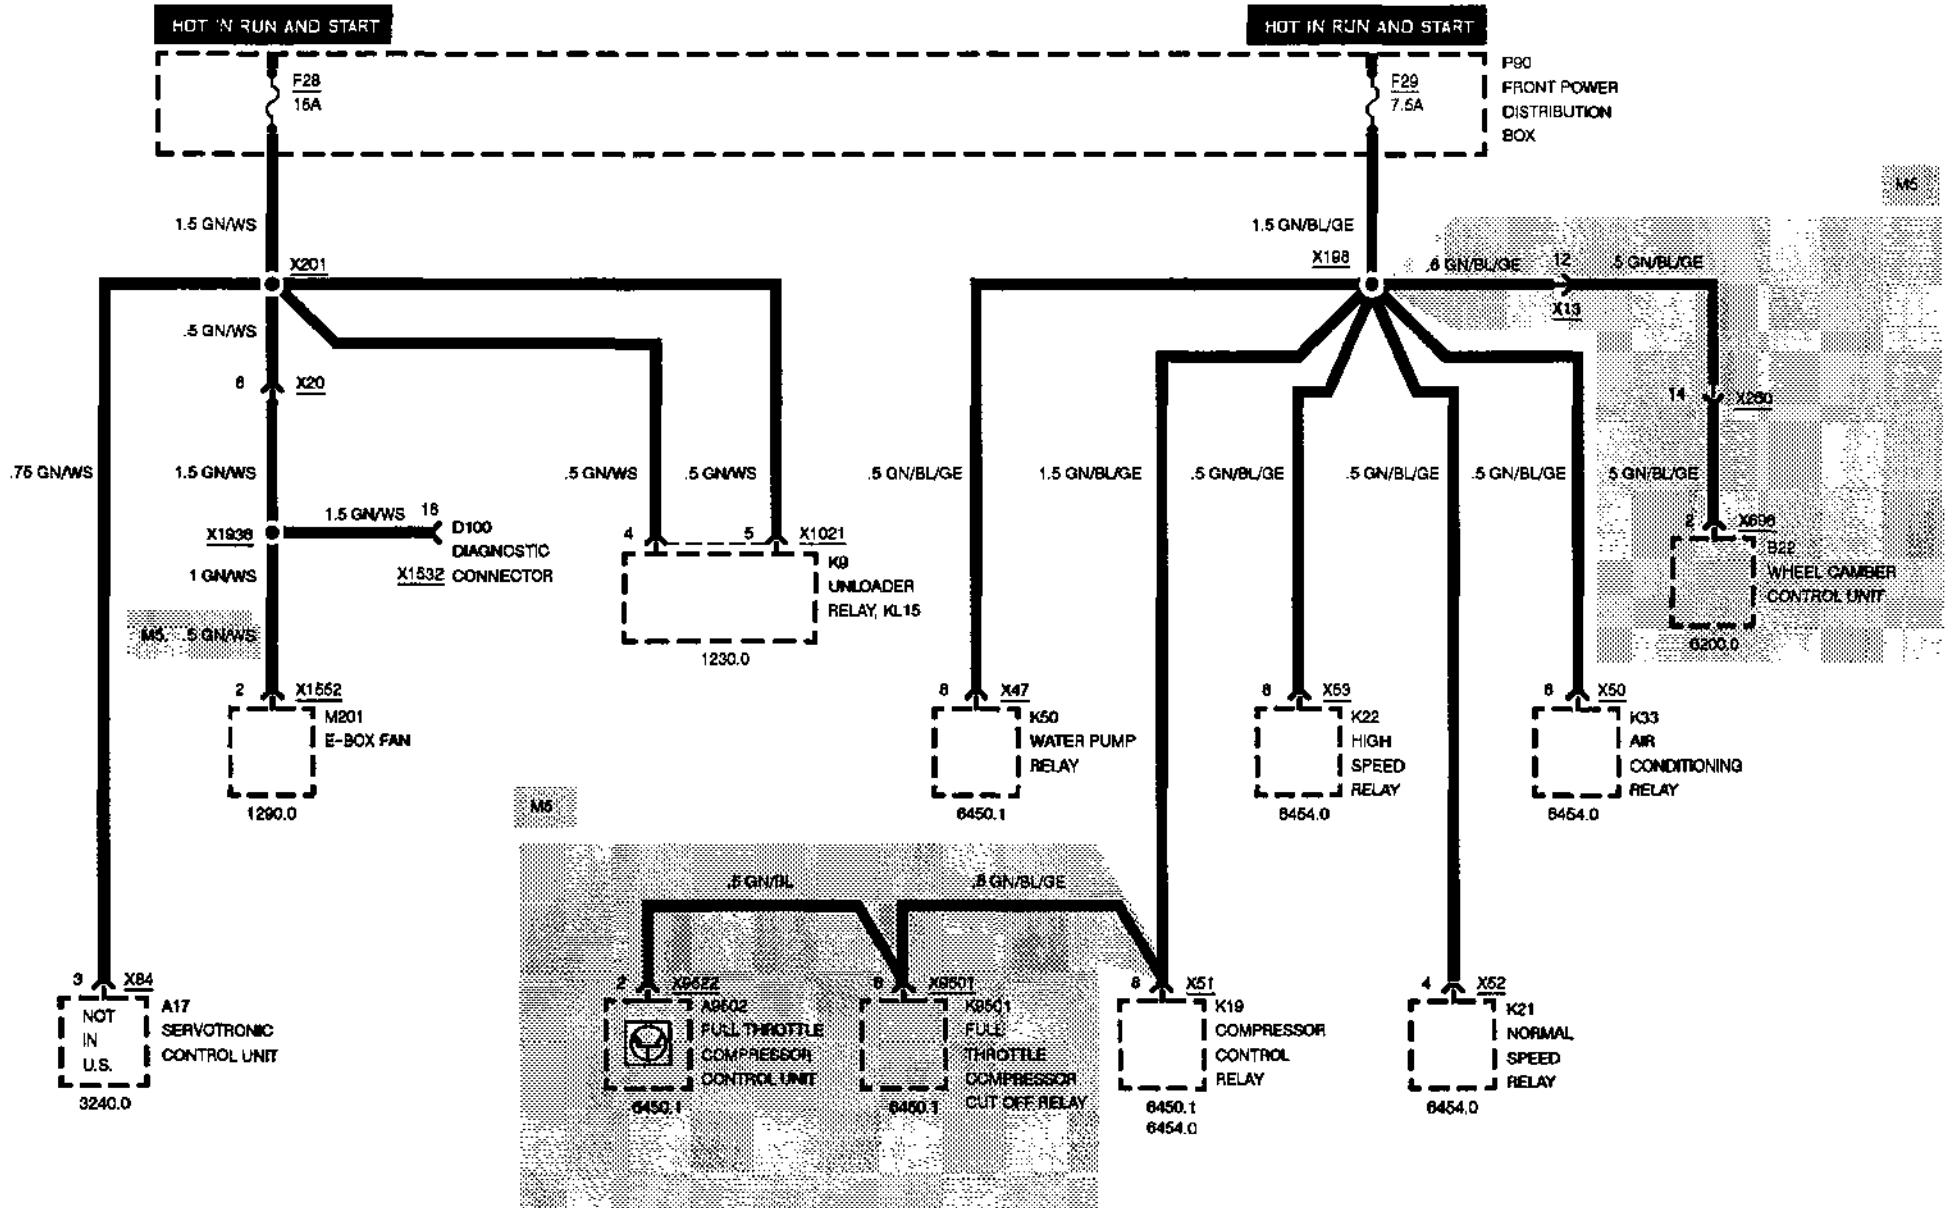




FUSE DETAILS

FUSES 30 AND 31

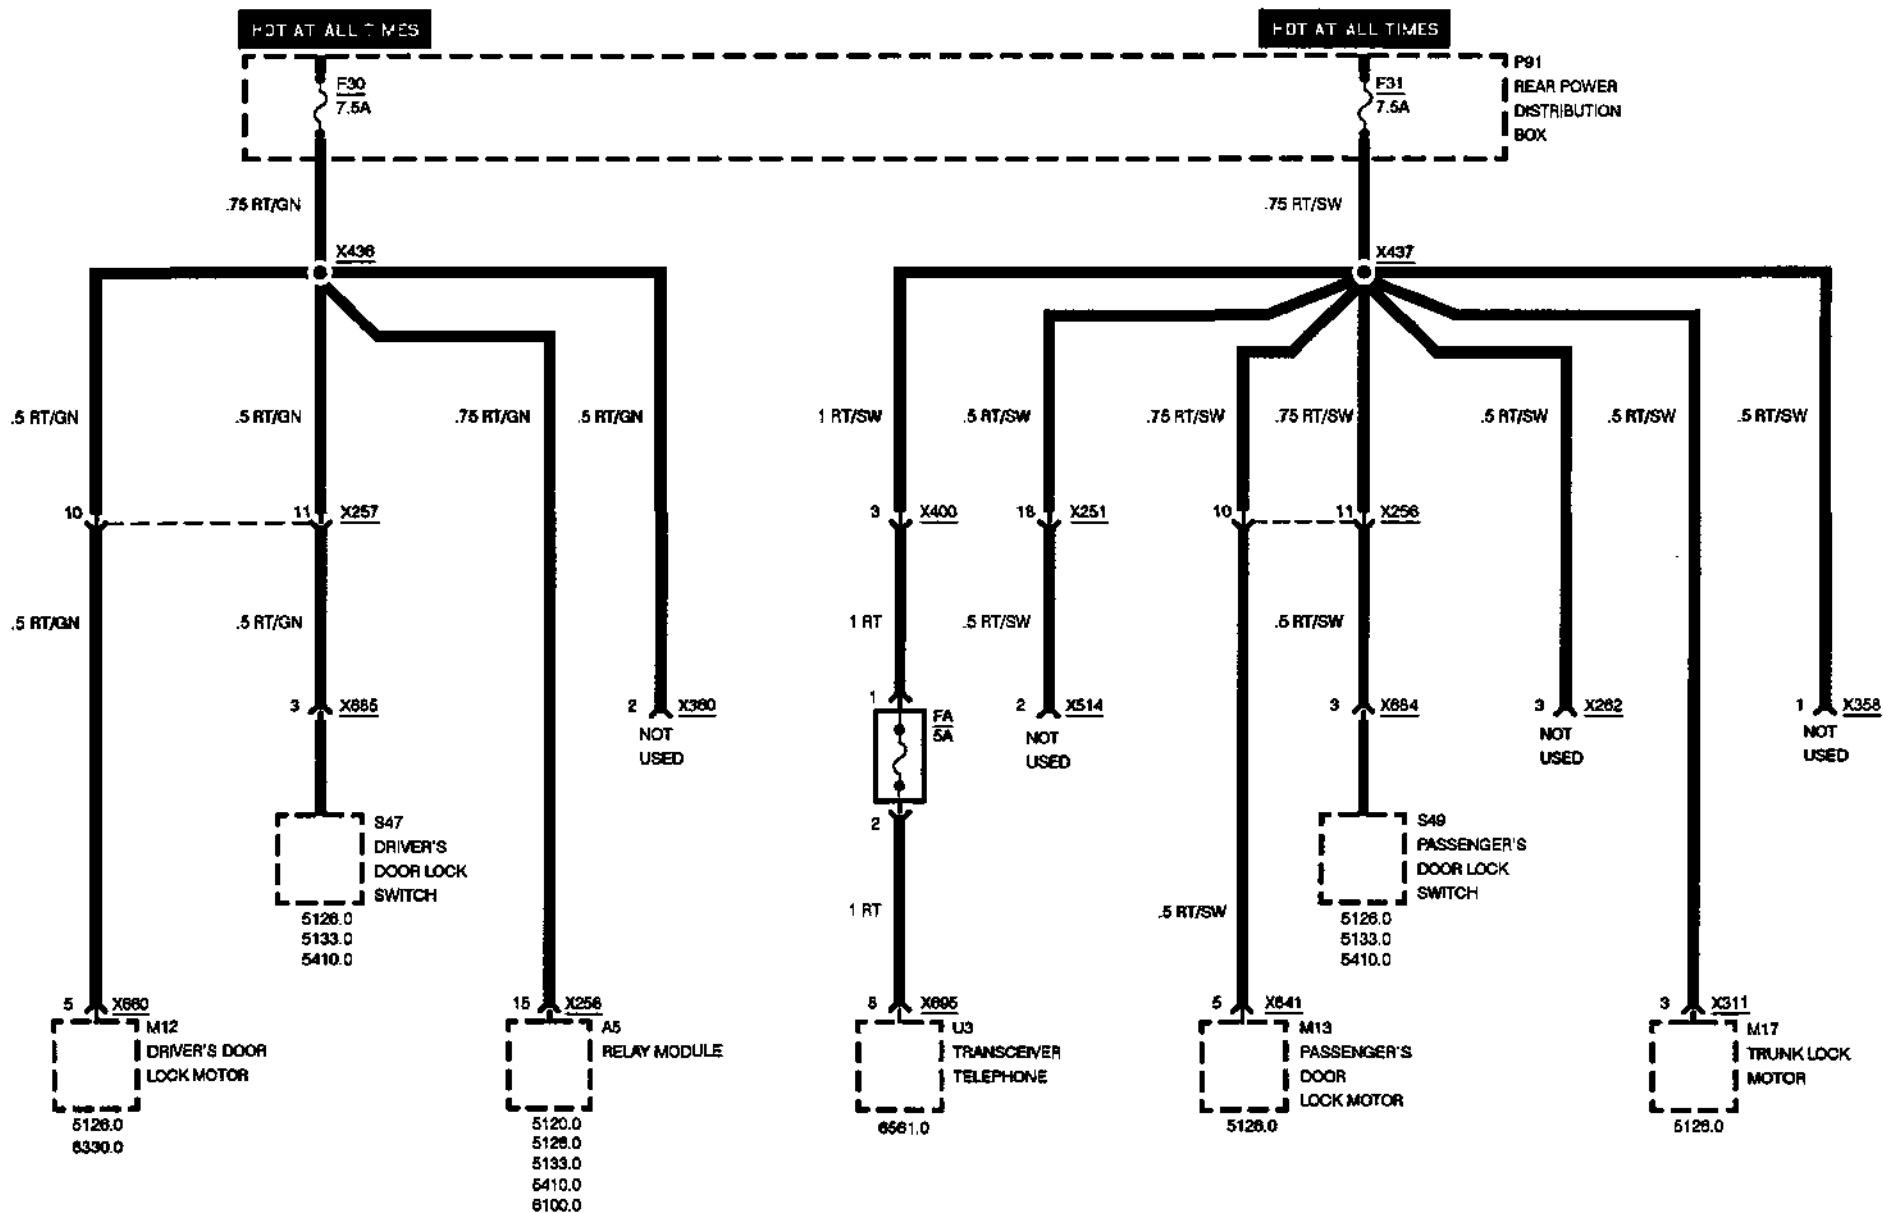


BMW 5 FUSE DETAILS
FUSES 32, 40, 41 AND 42

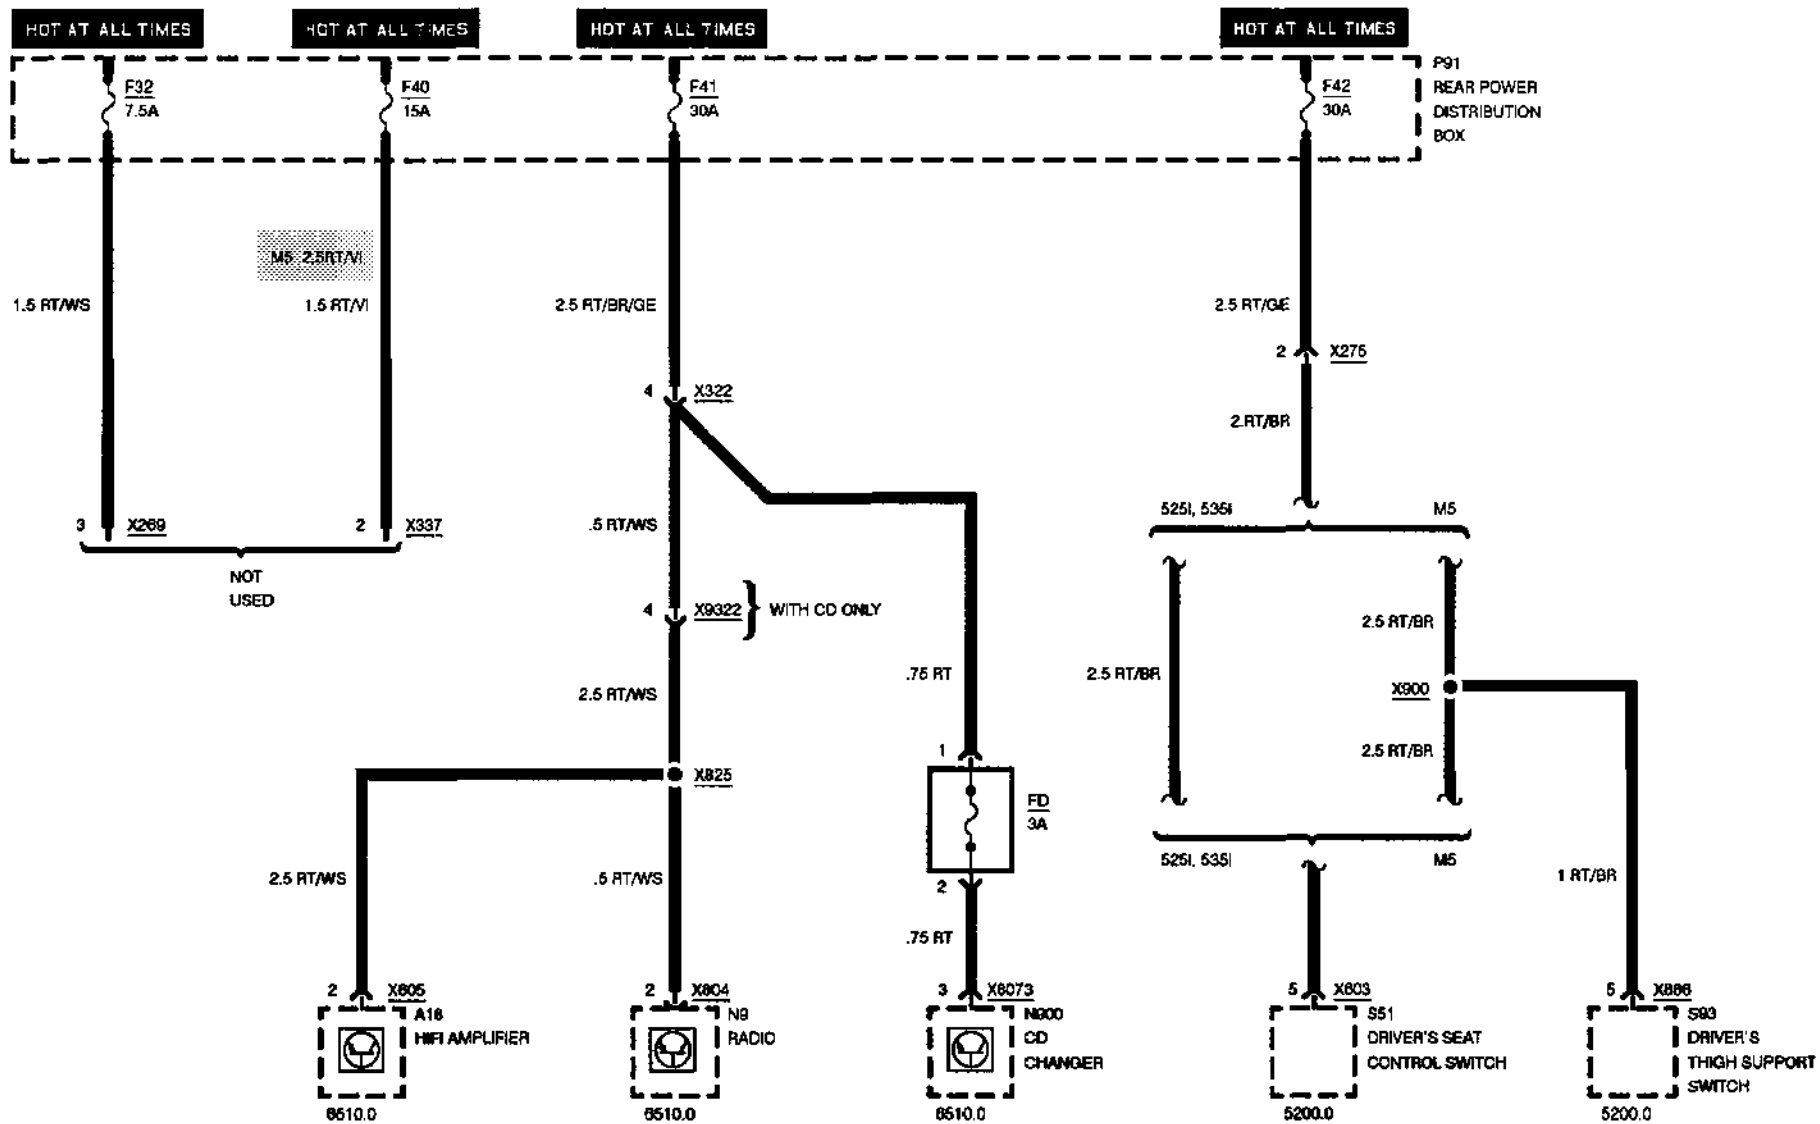



FUSE DETAILS

FUSES 43, 44 AND 46

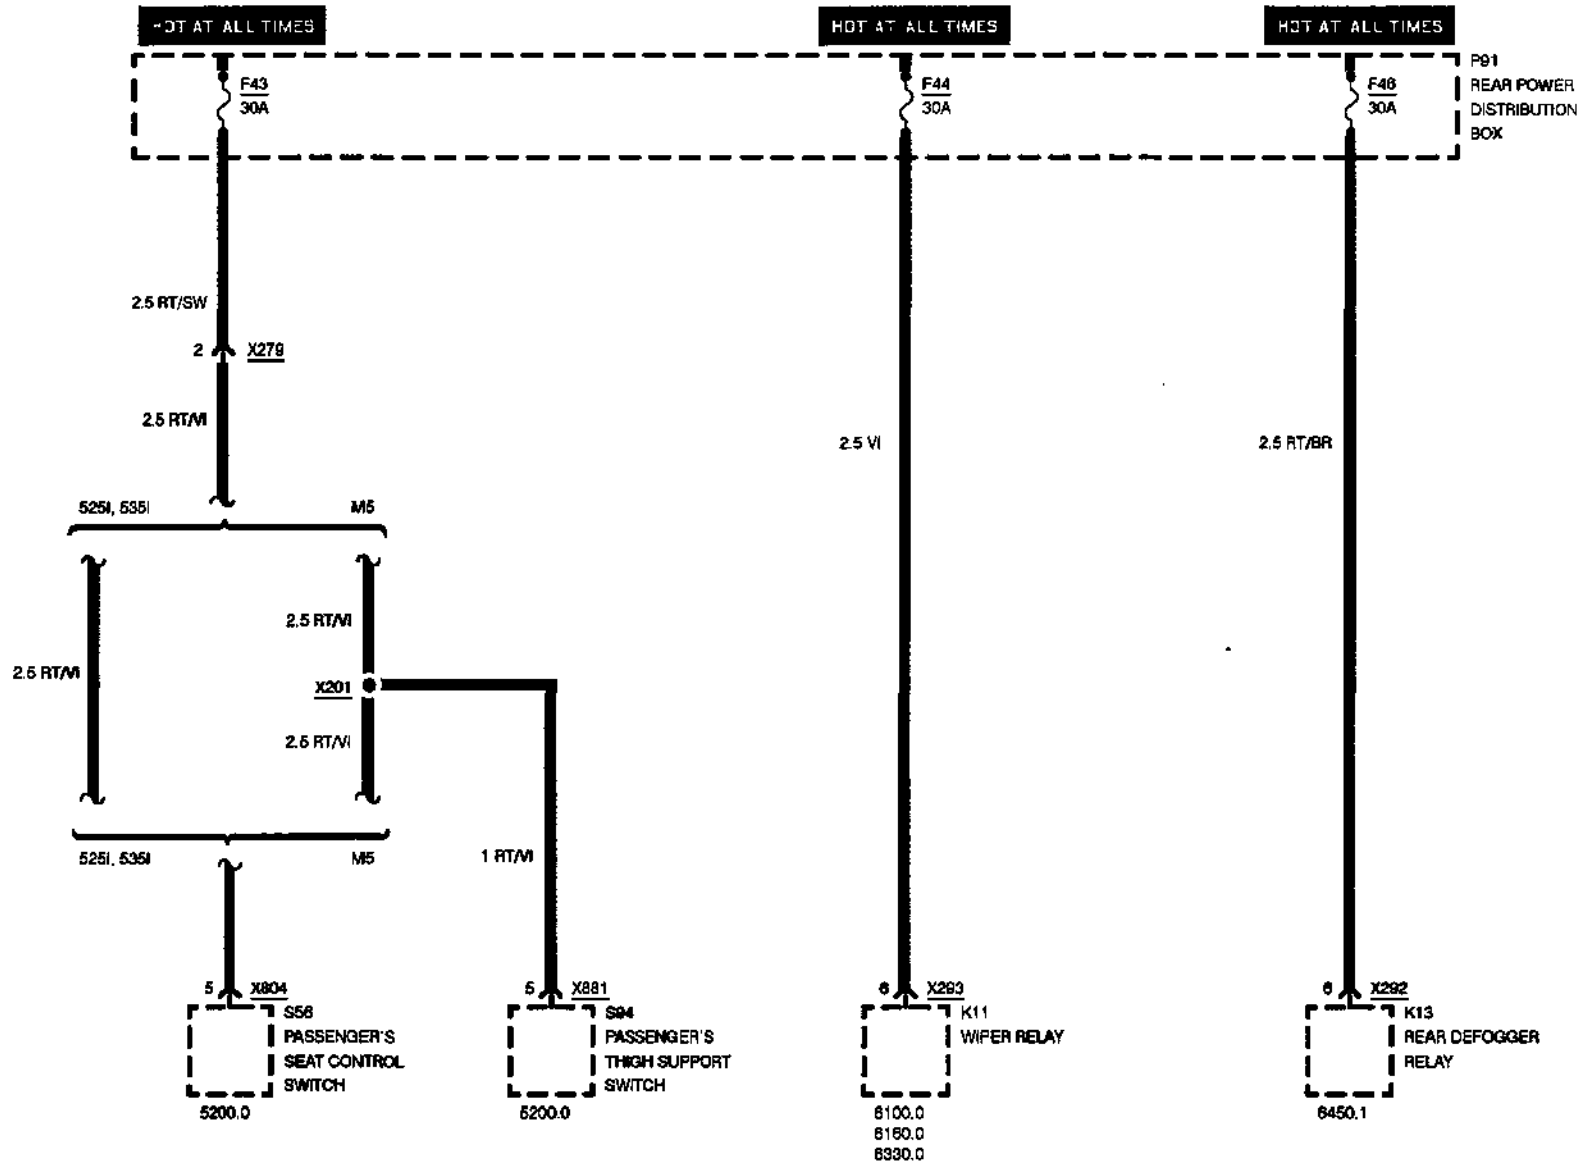

02/90


0670.3-16

1989



FUSE DETAILS


FUSES 47, 48 AND 49

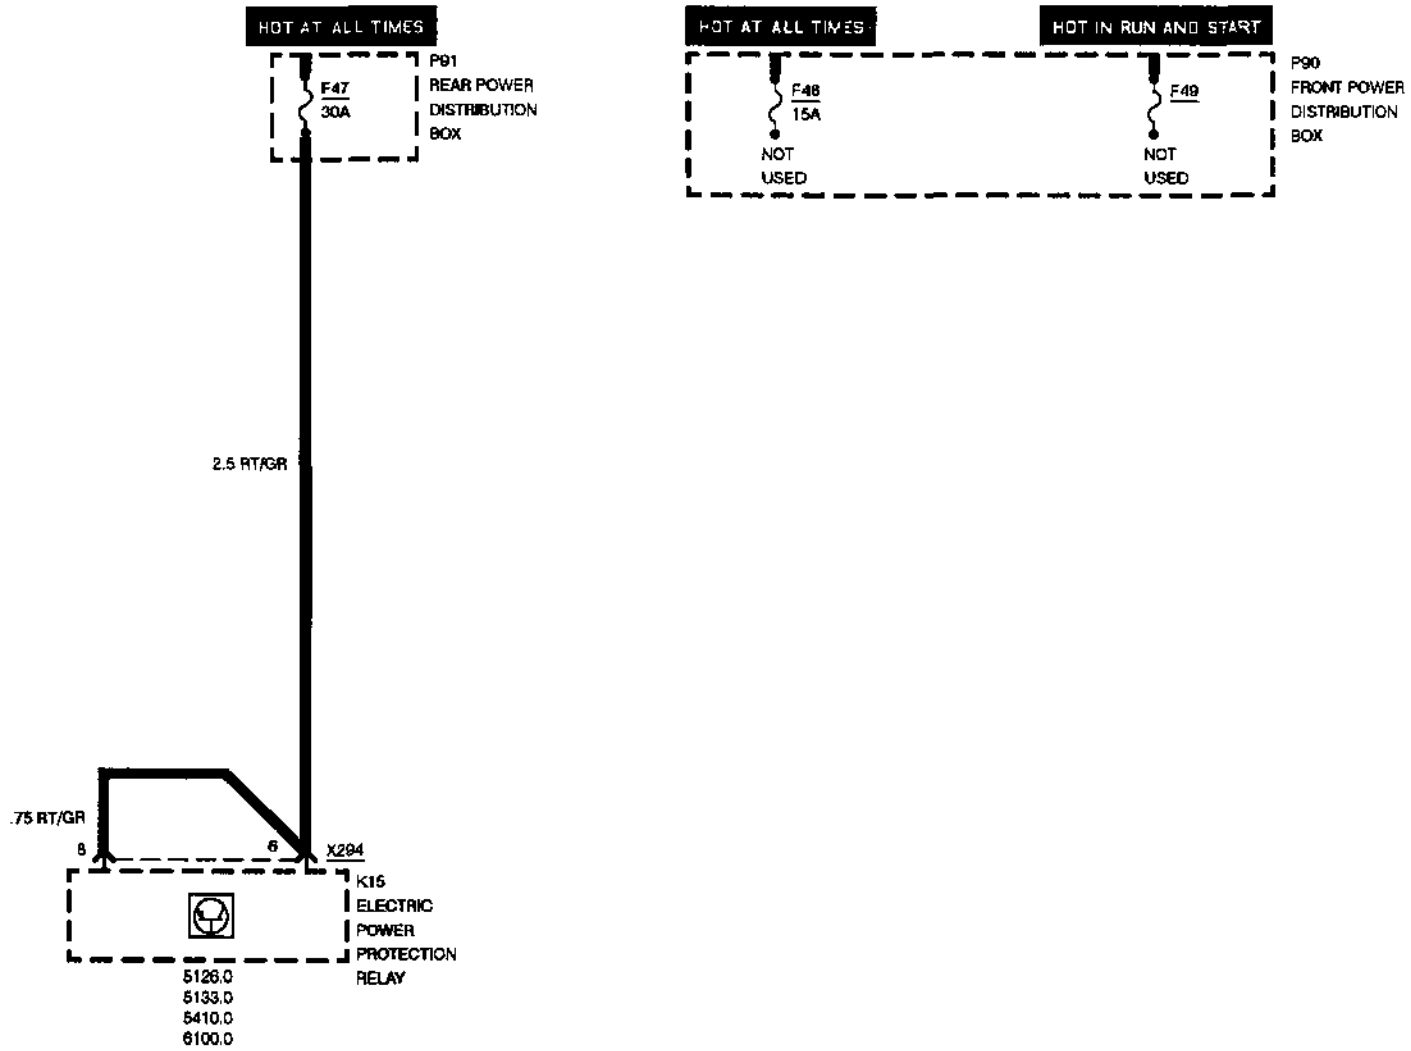



GROUND DISTRIBUTION

GROUND X165

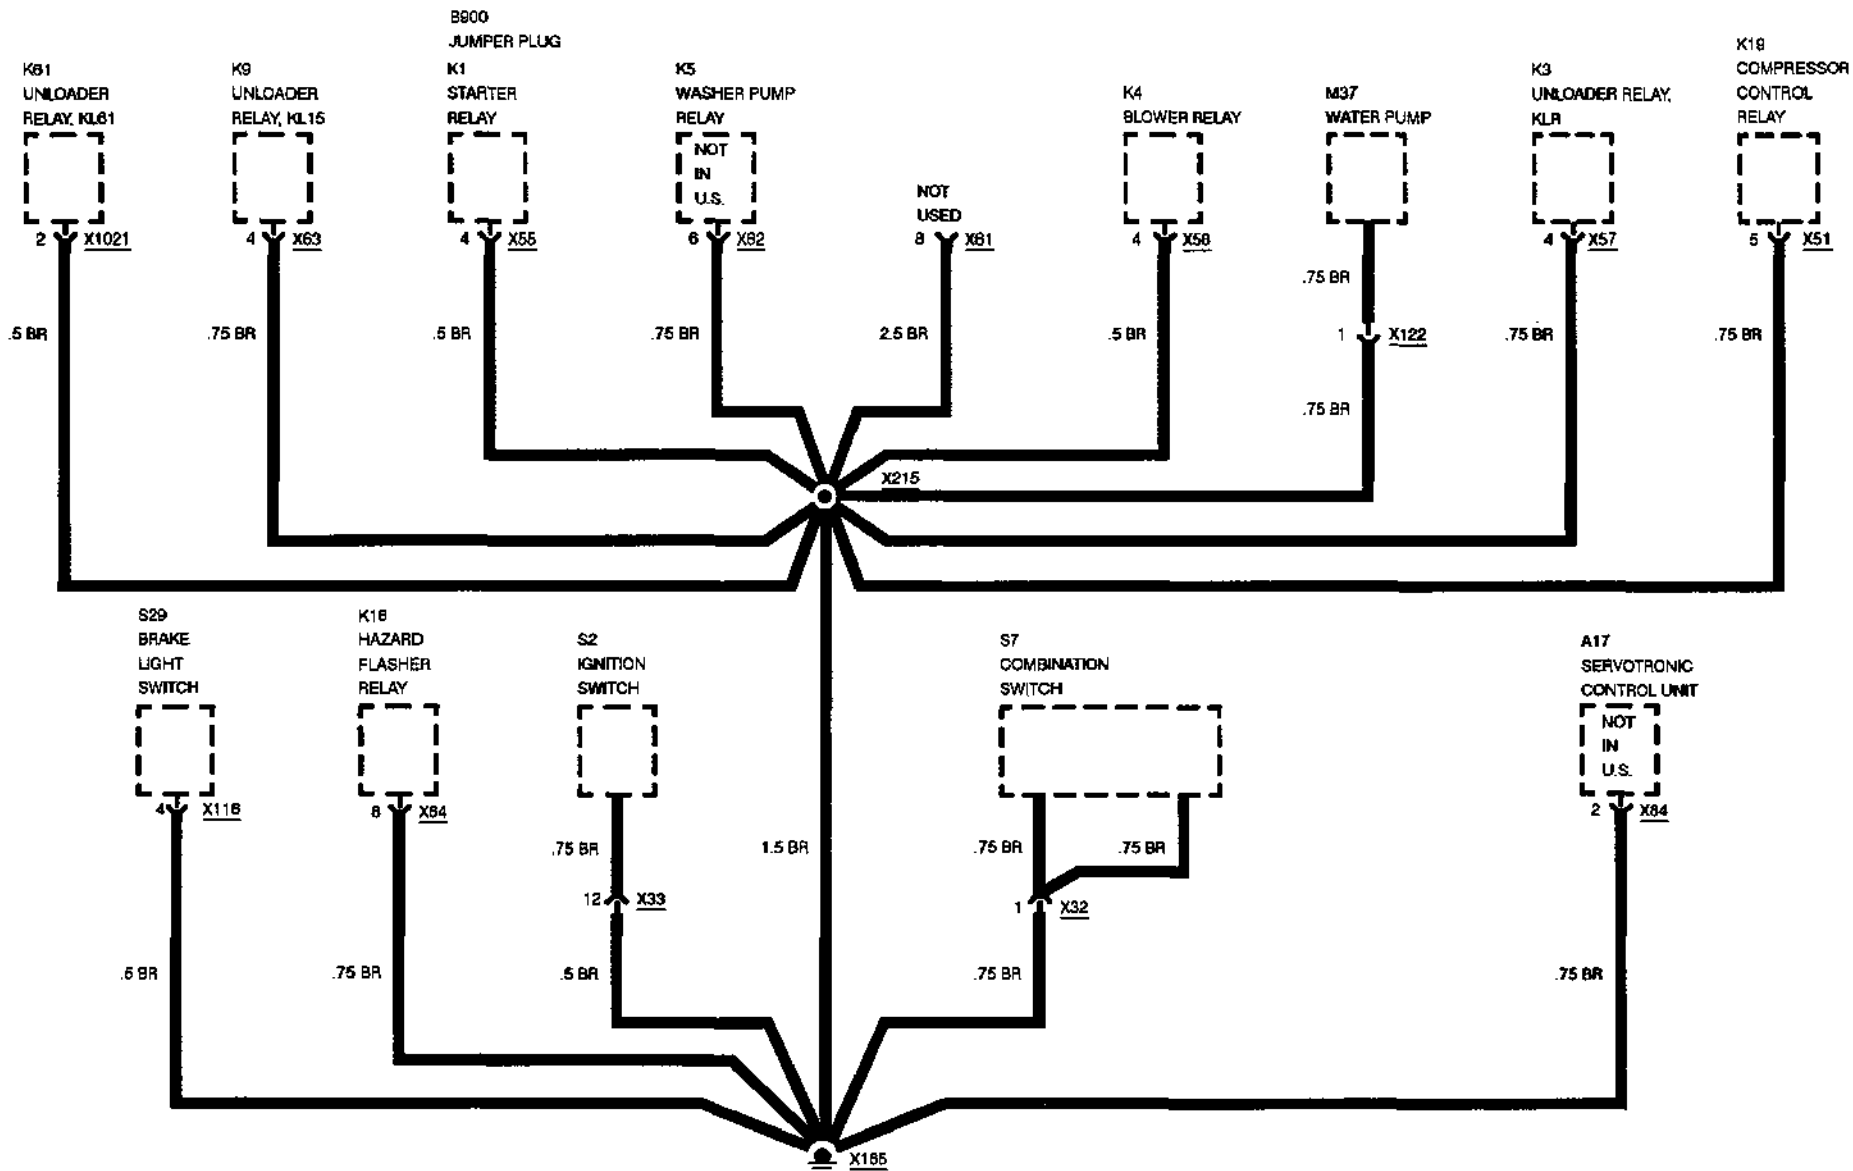

02/90


0670.4-00

1989



GROUND DISTRIBUTION


GROUND X166

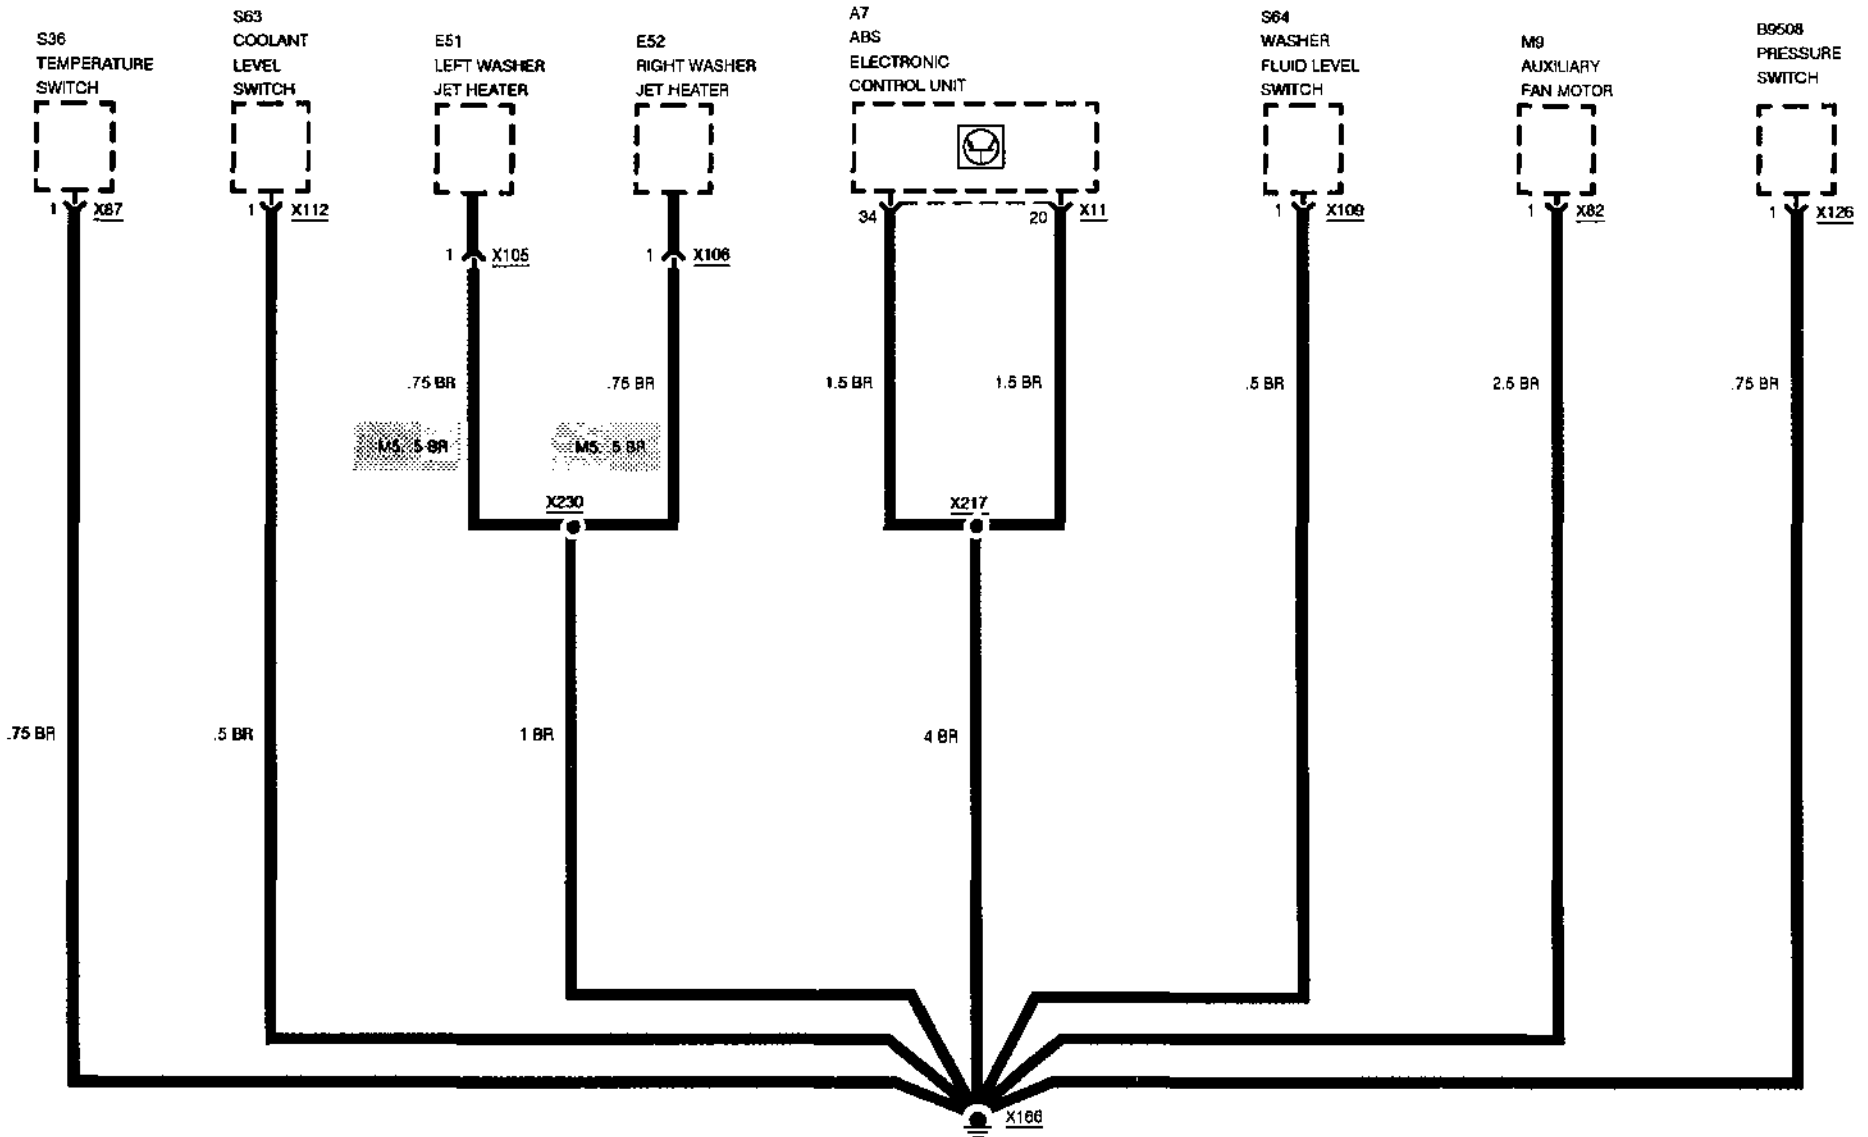



GROUND DISTRIBUTION


GROUNDS X167, X173 AND X179

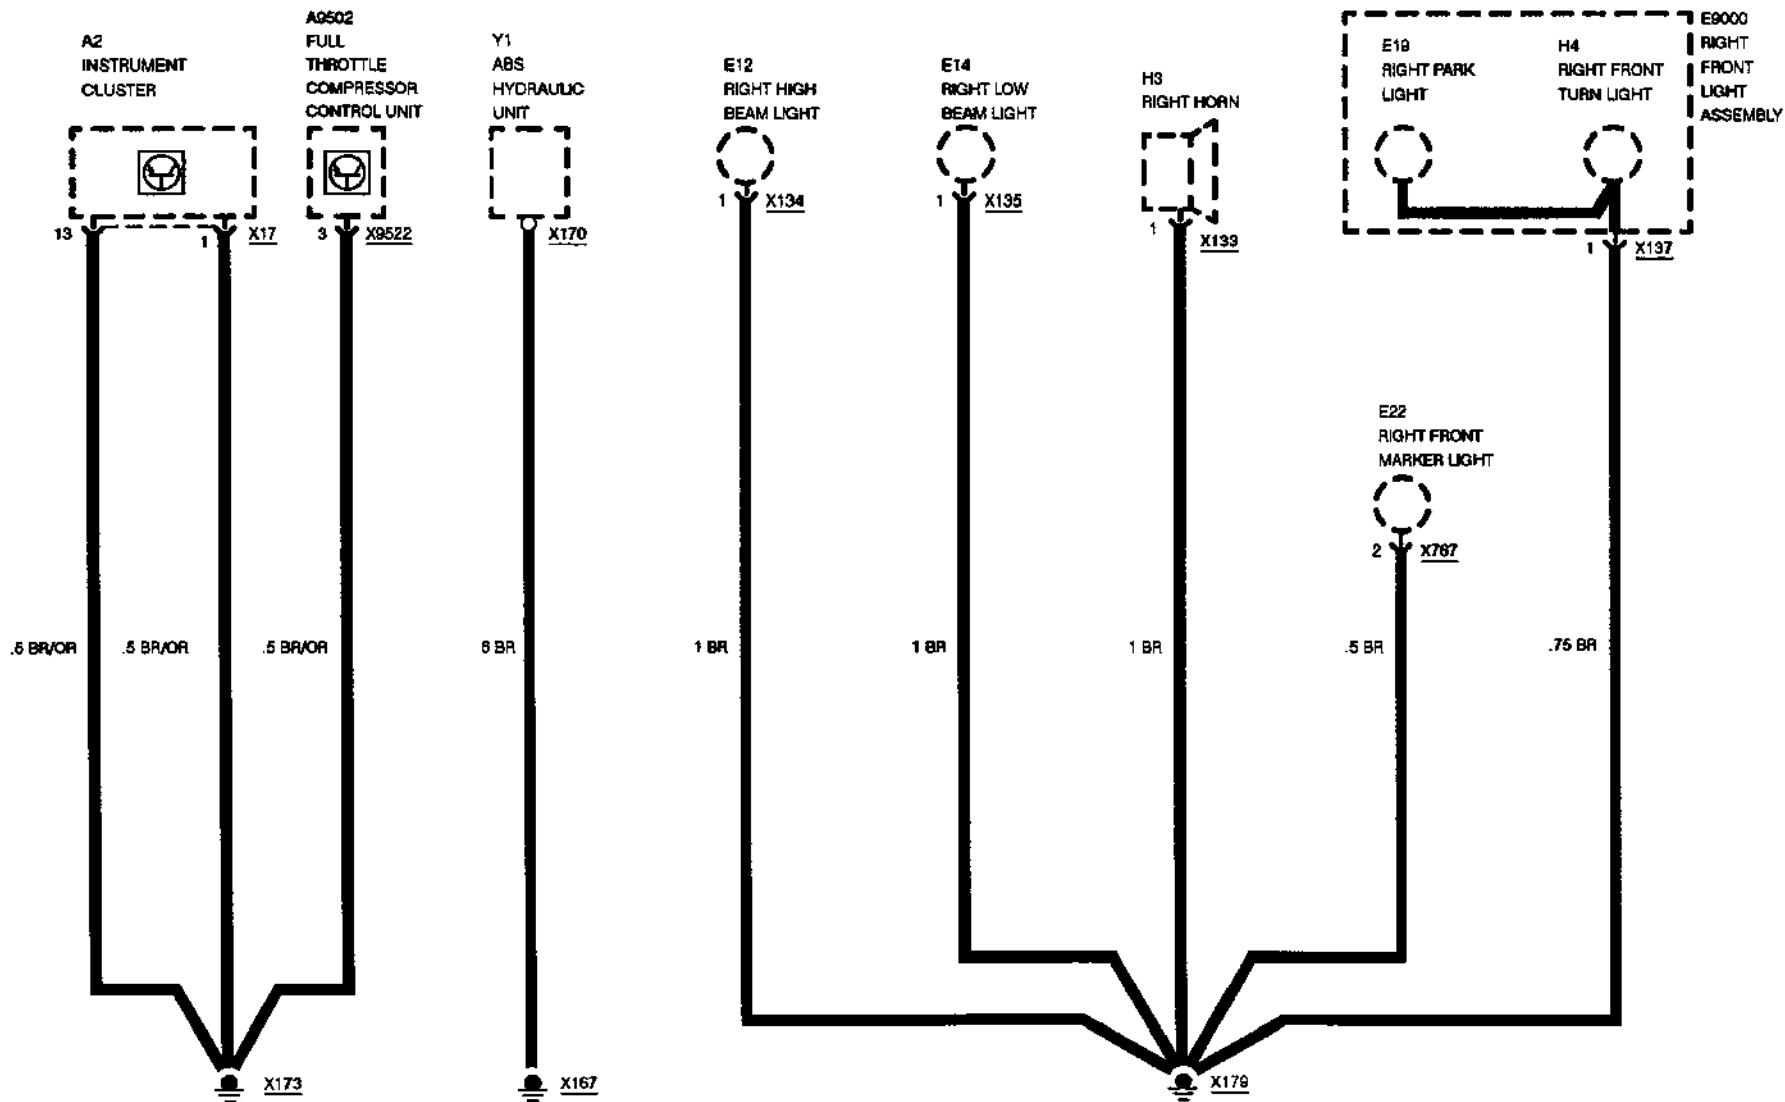




GROUND DISTRIBUTION

GROUND X175

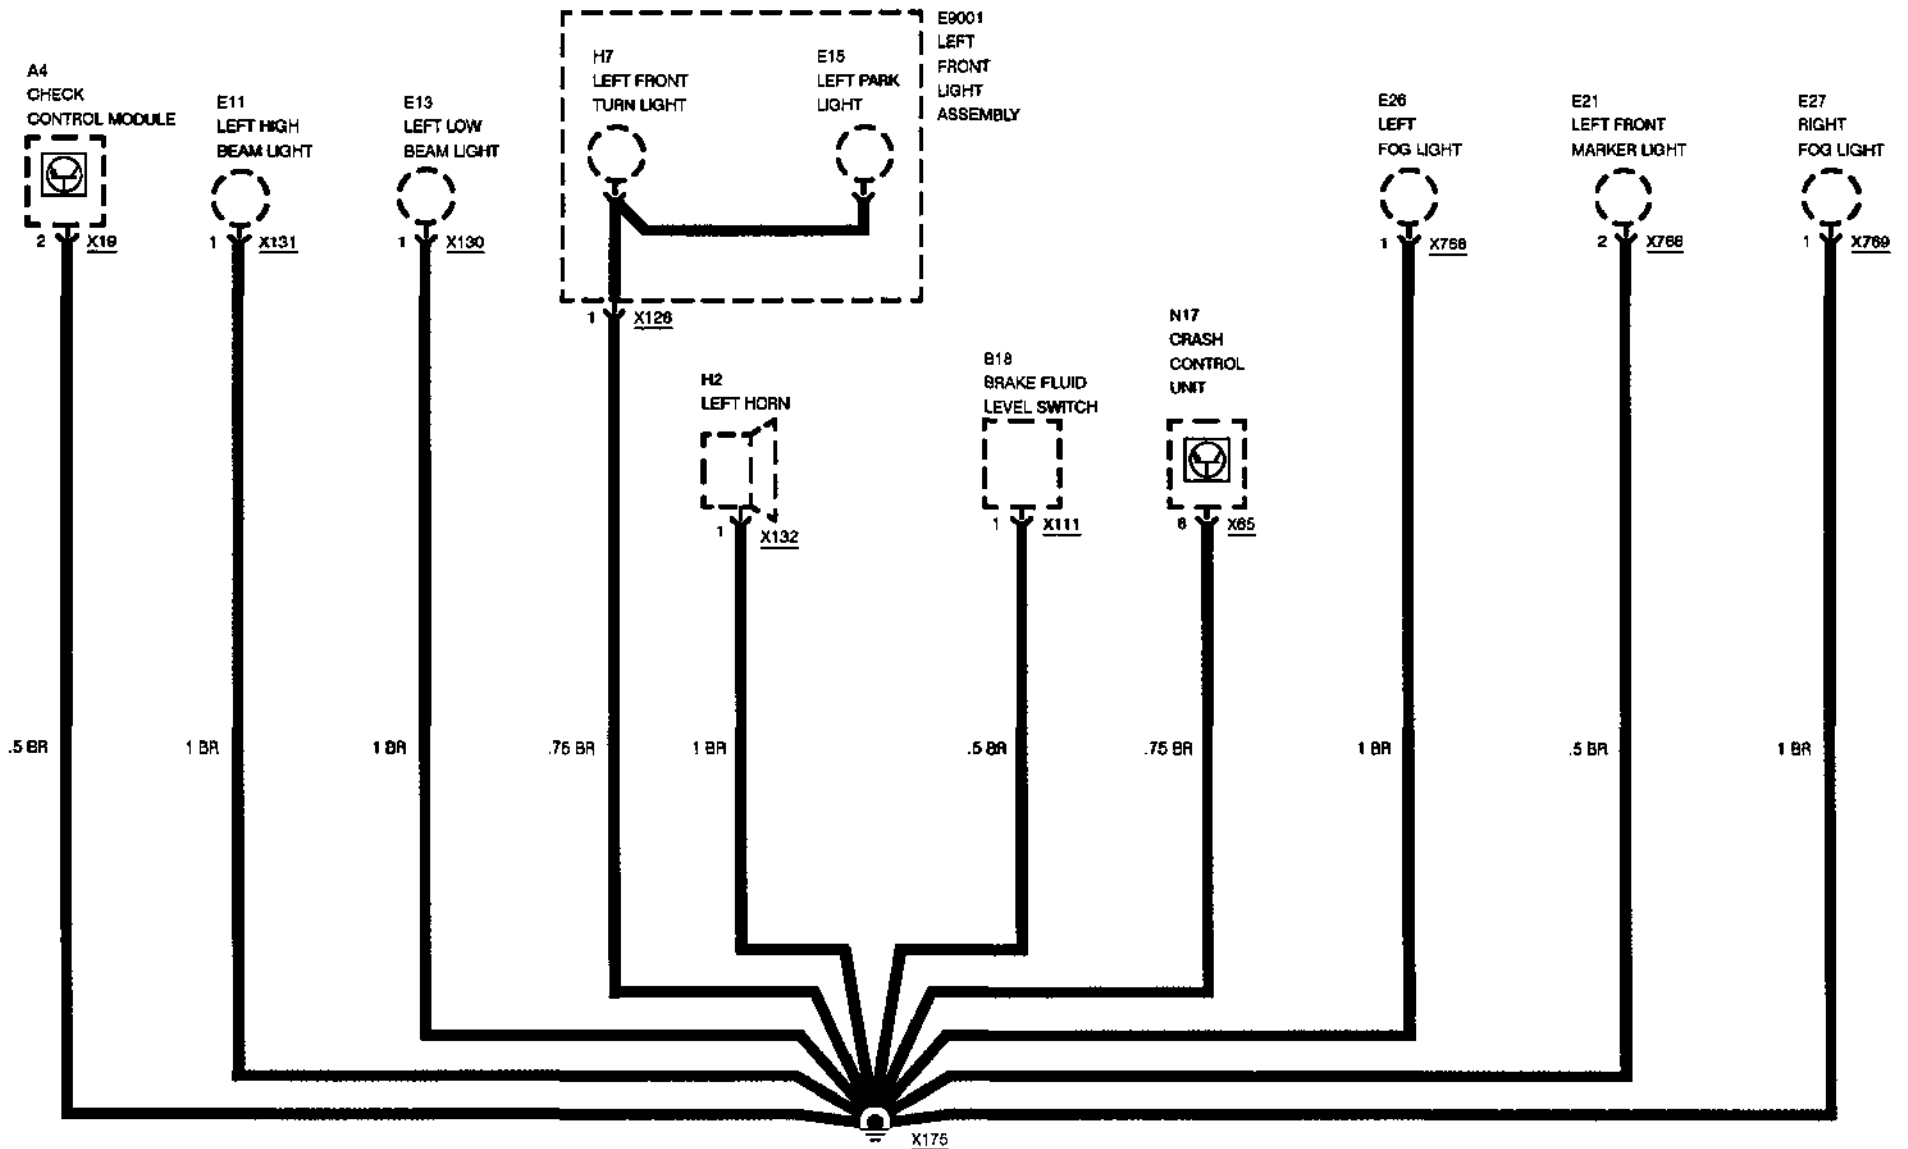




GROUND DISTRIBUTION GROUND X490

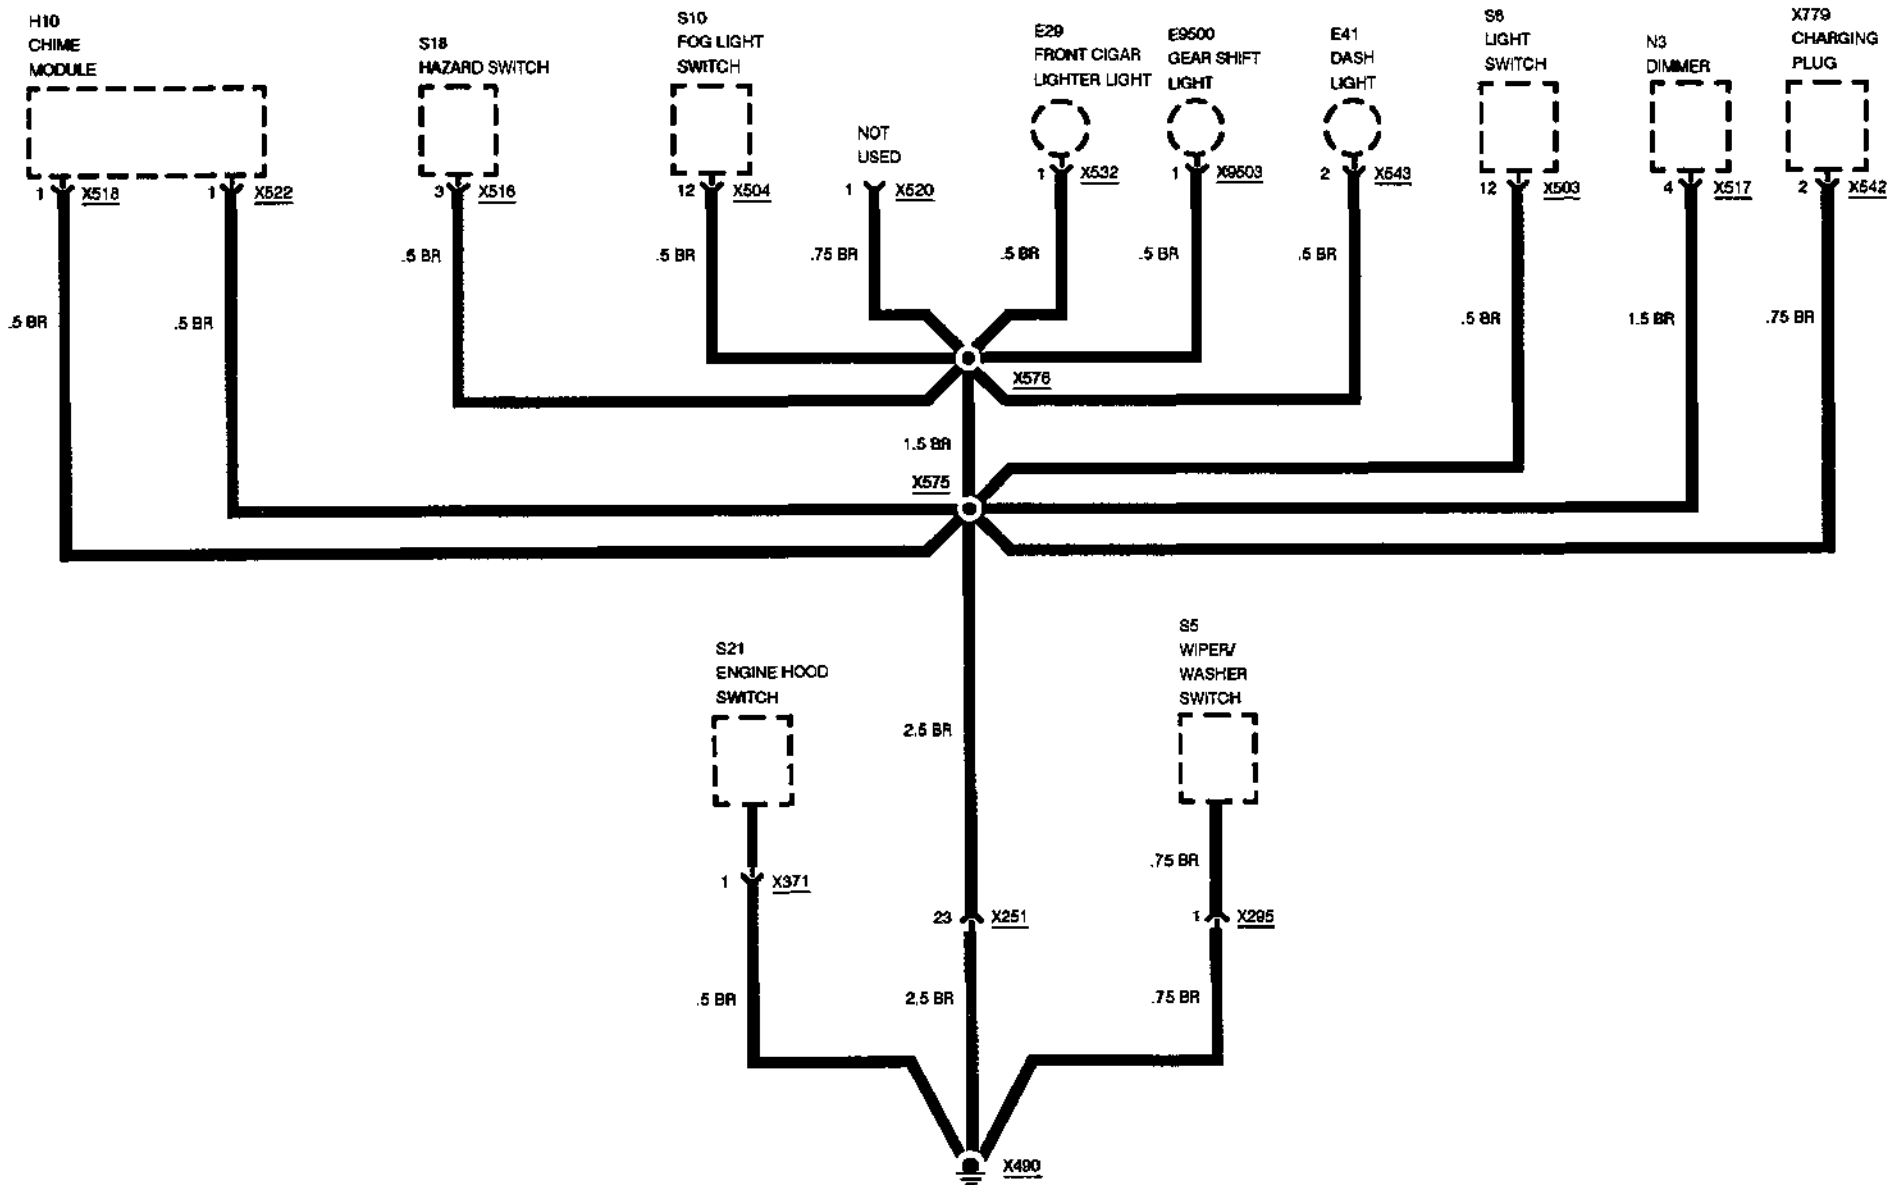



GROUND DISTRIBUTION


GROUND X491

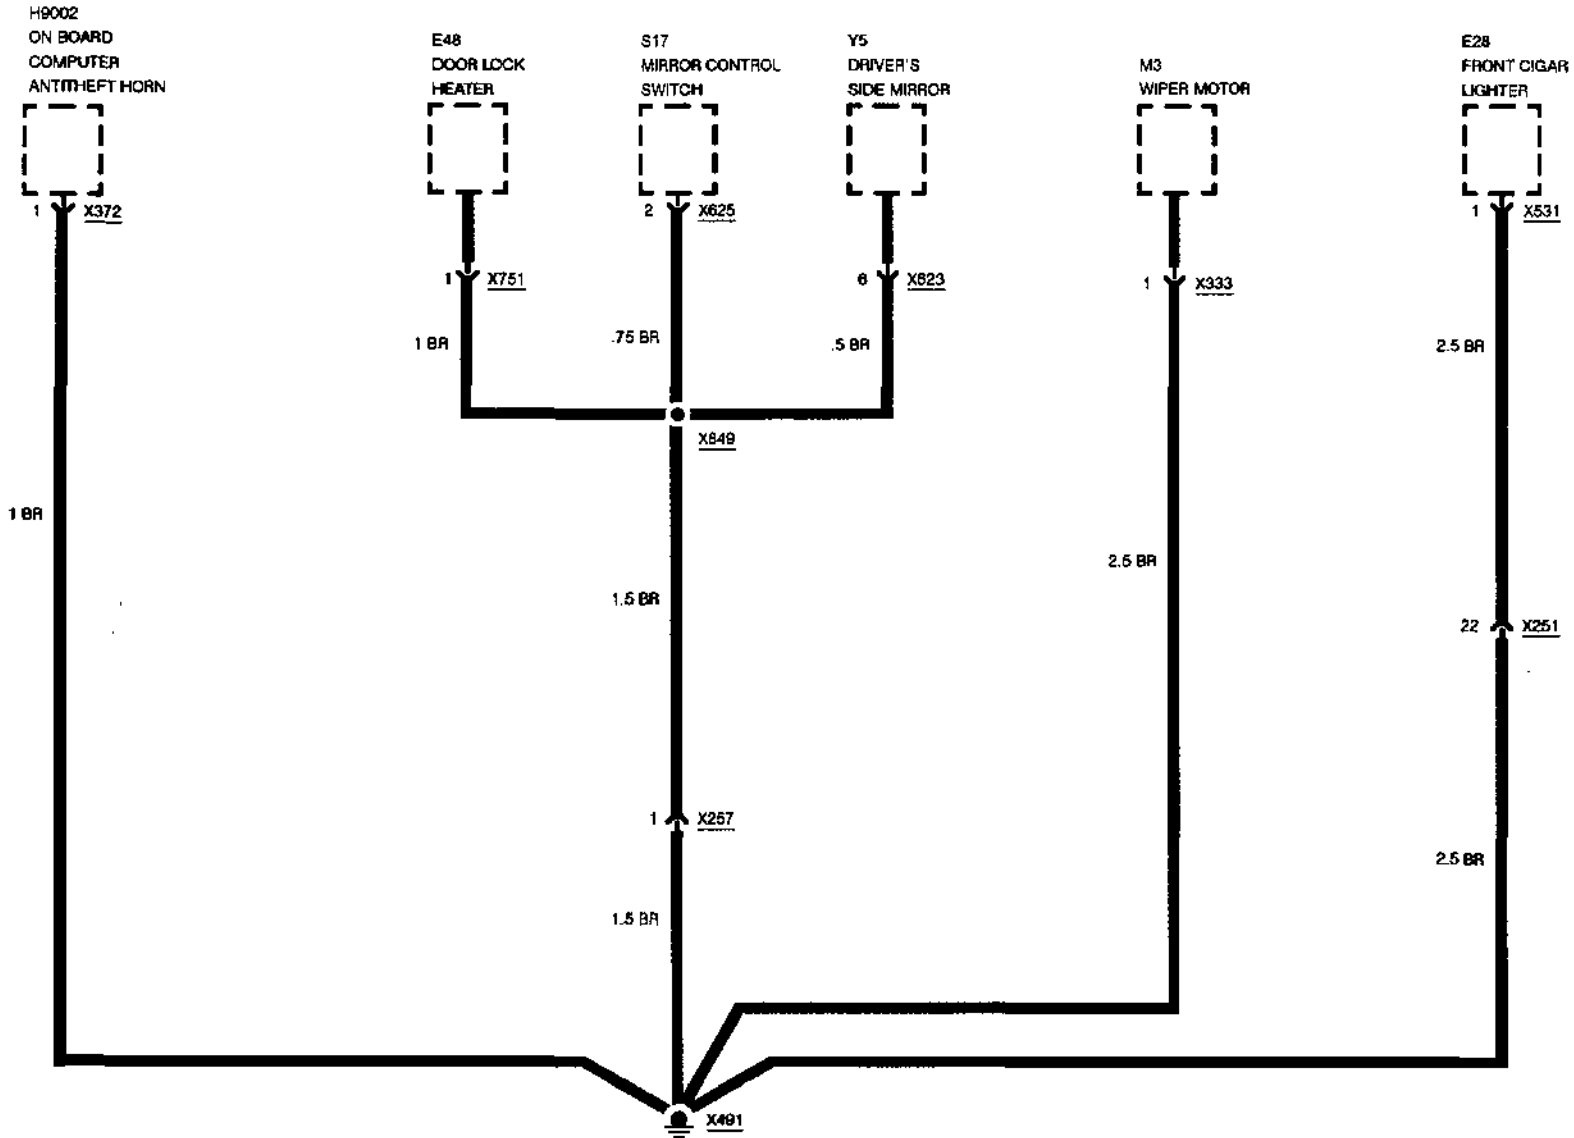



GROUND DISTRIBUTION


GROUND X492

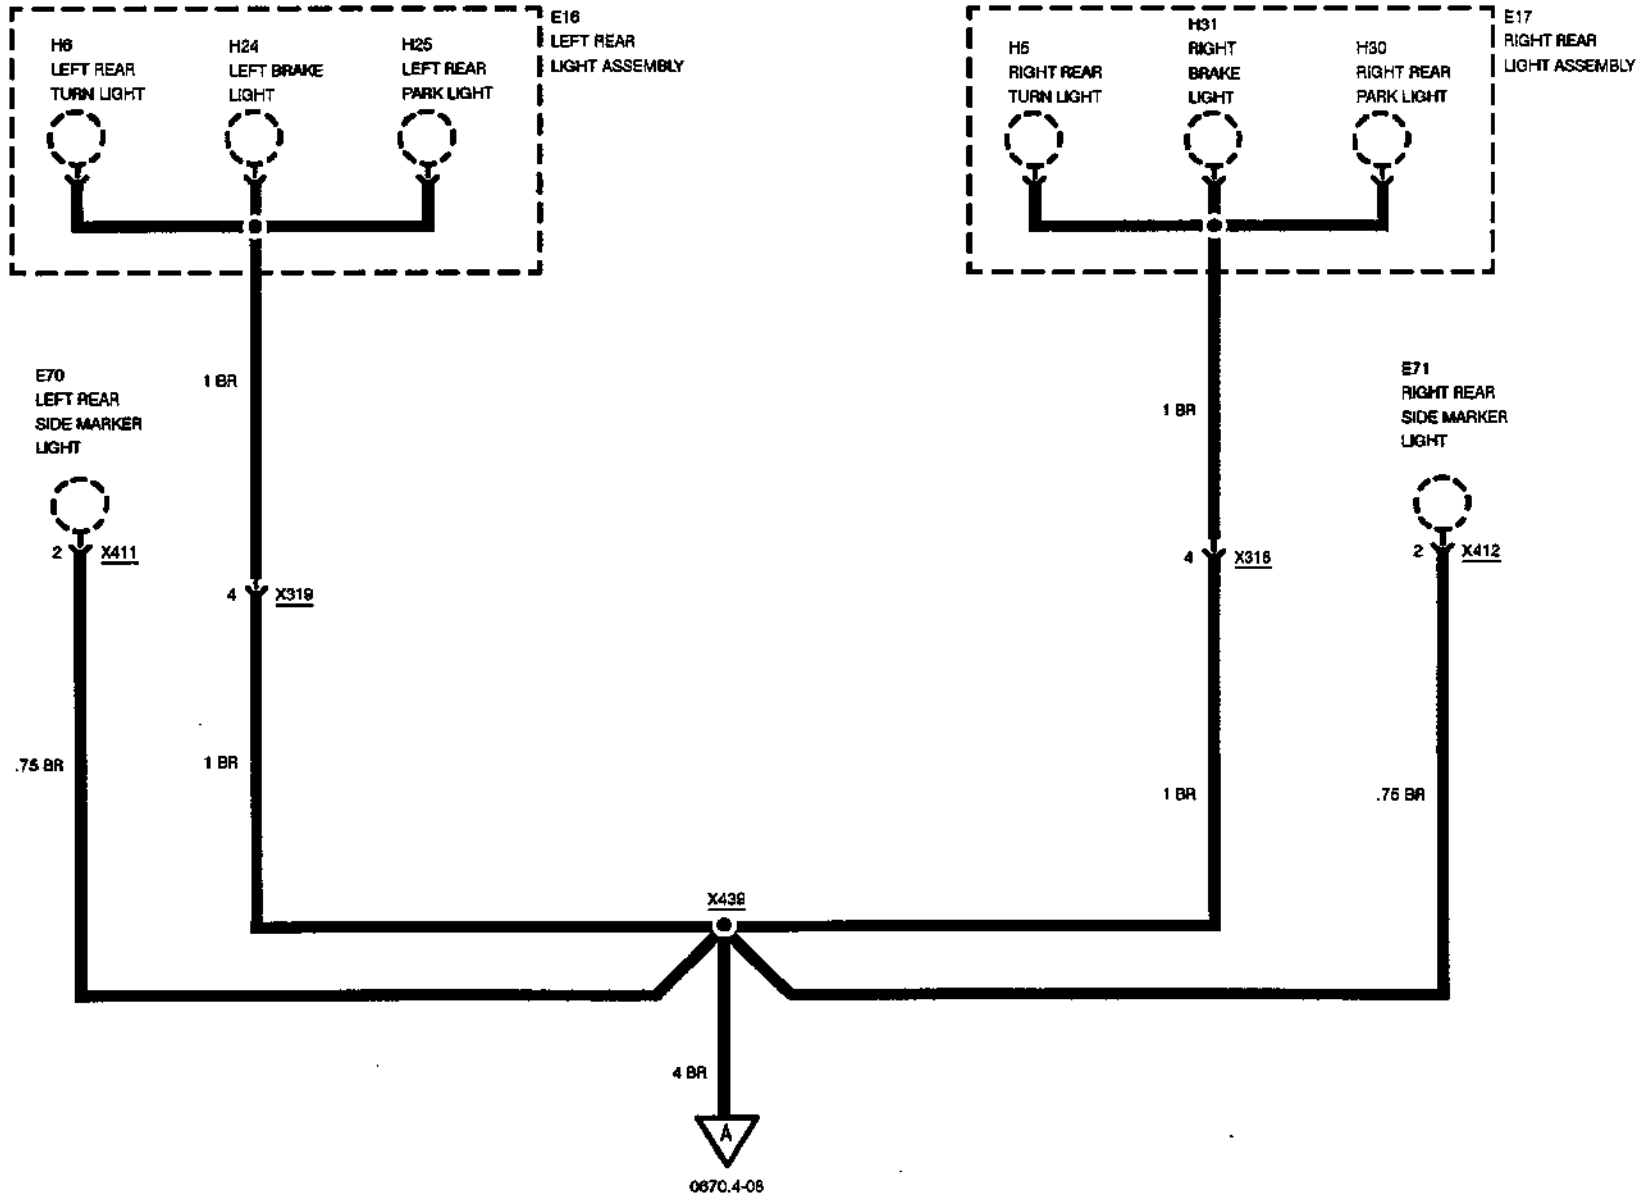



GROUND DISTRIBUTION


GROUND X492

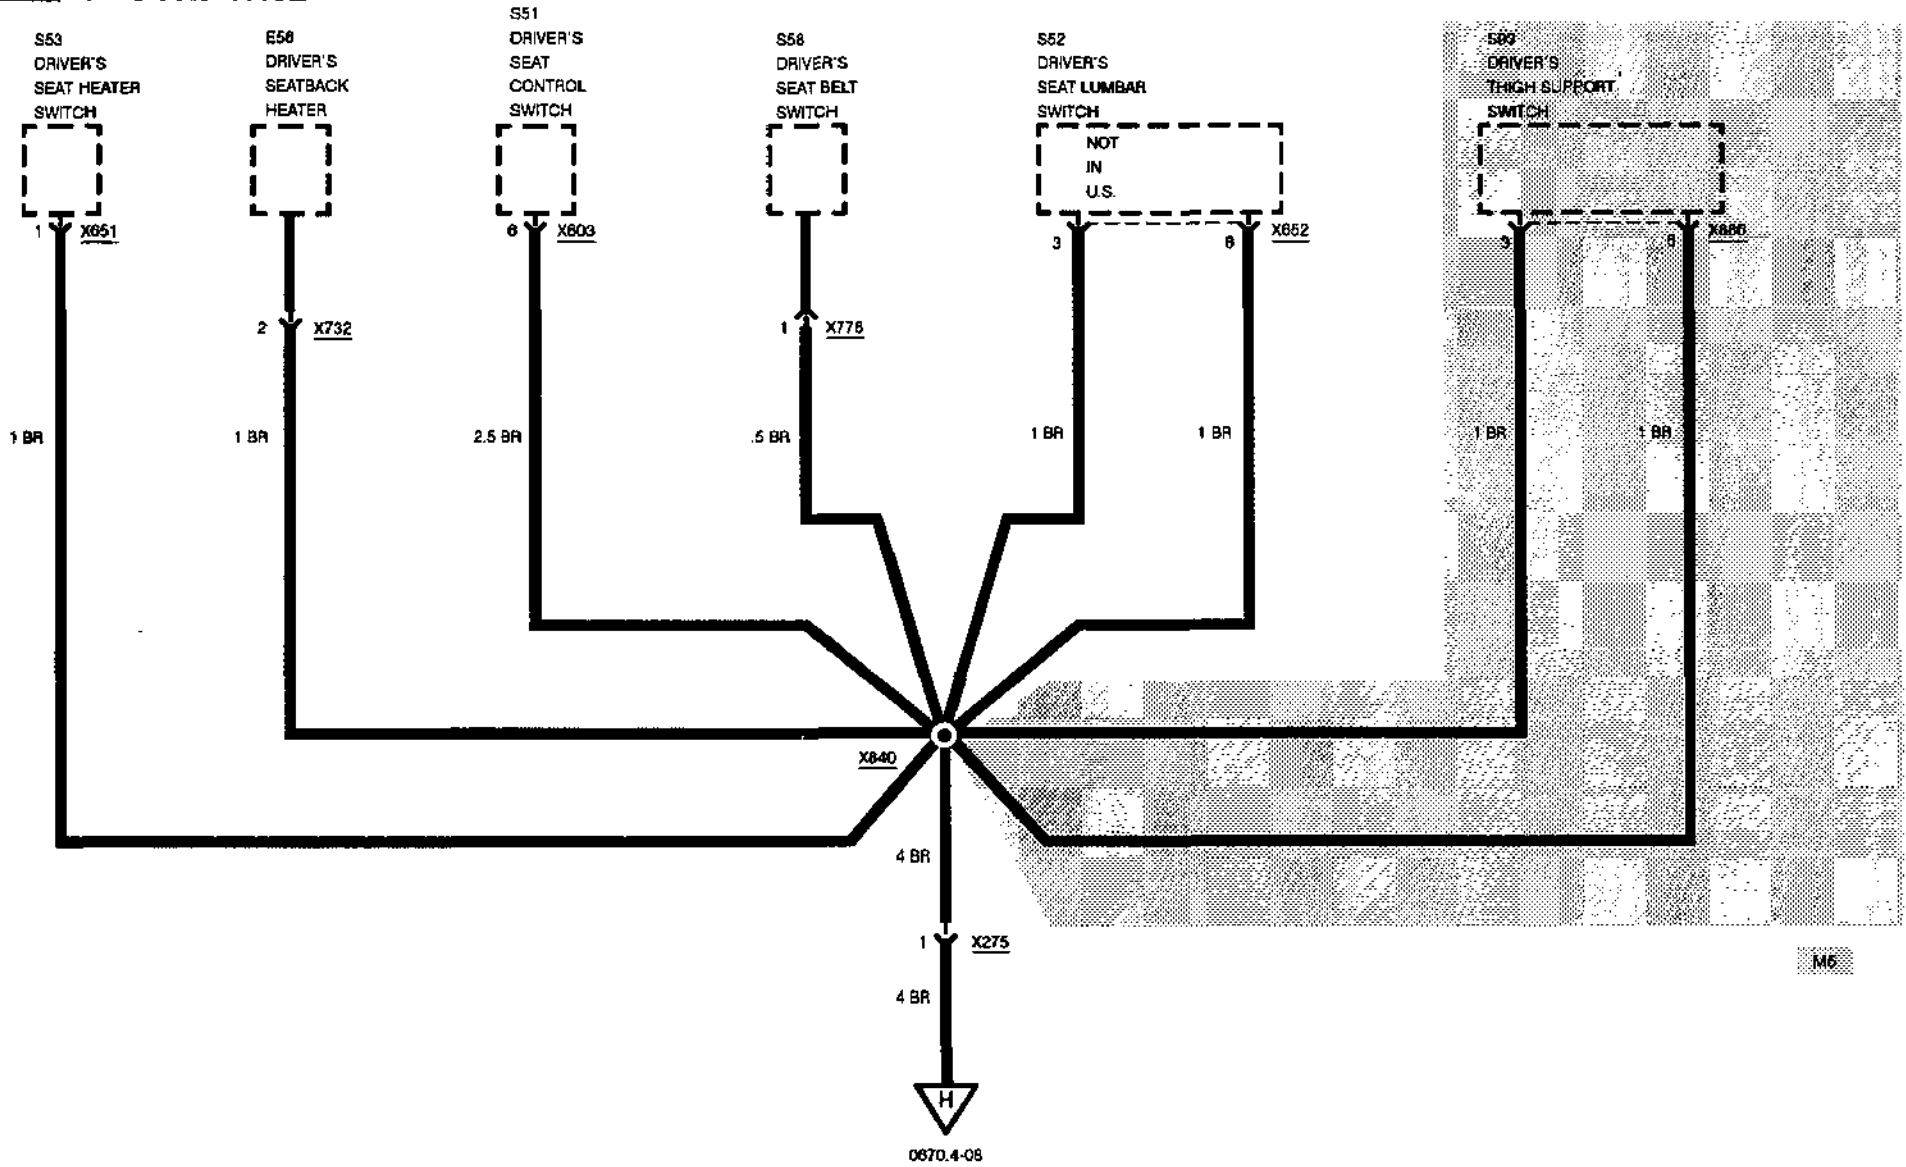



GROUND DISTRIBUTION


GROUND X492

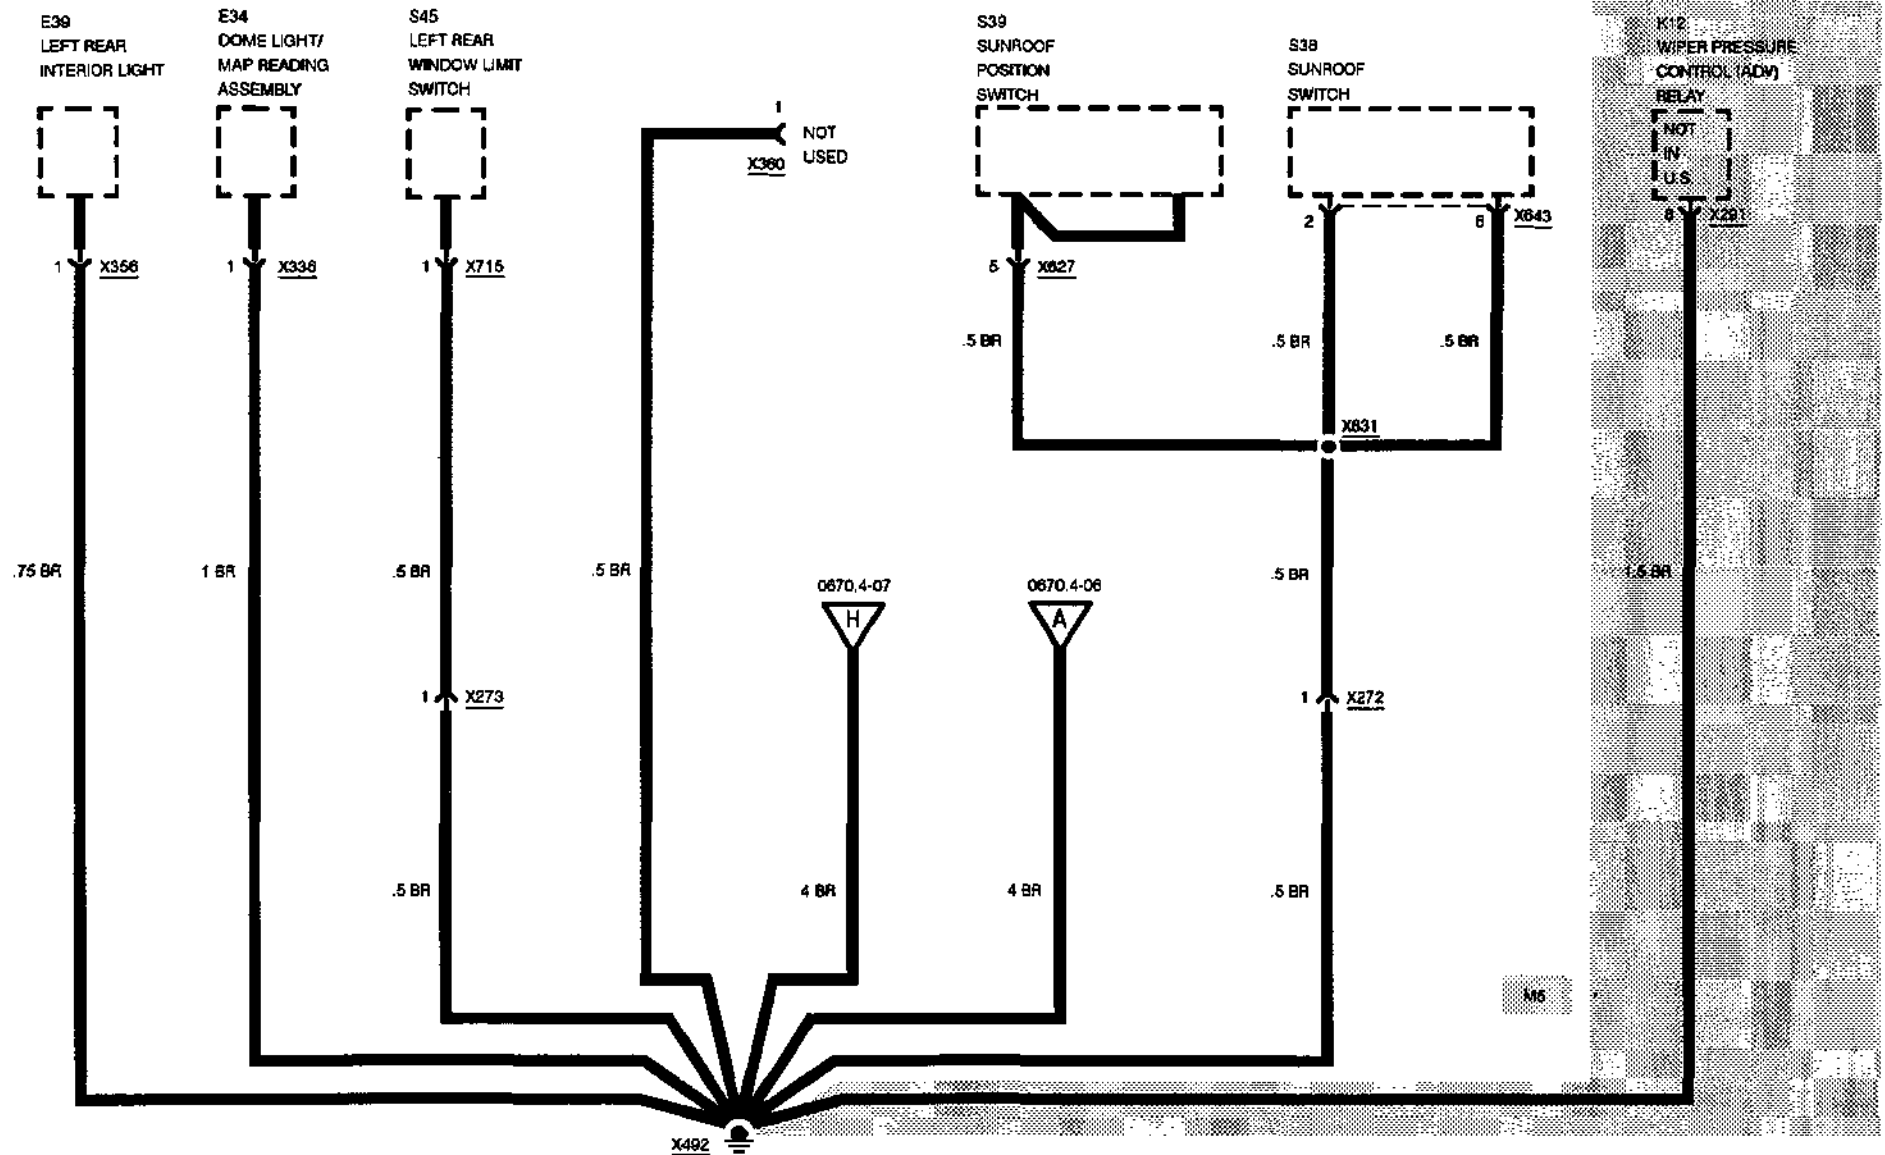



GROUND DISTRIBUTION


GROUND X493

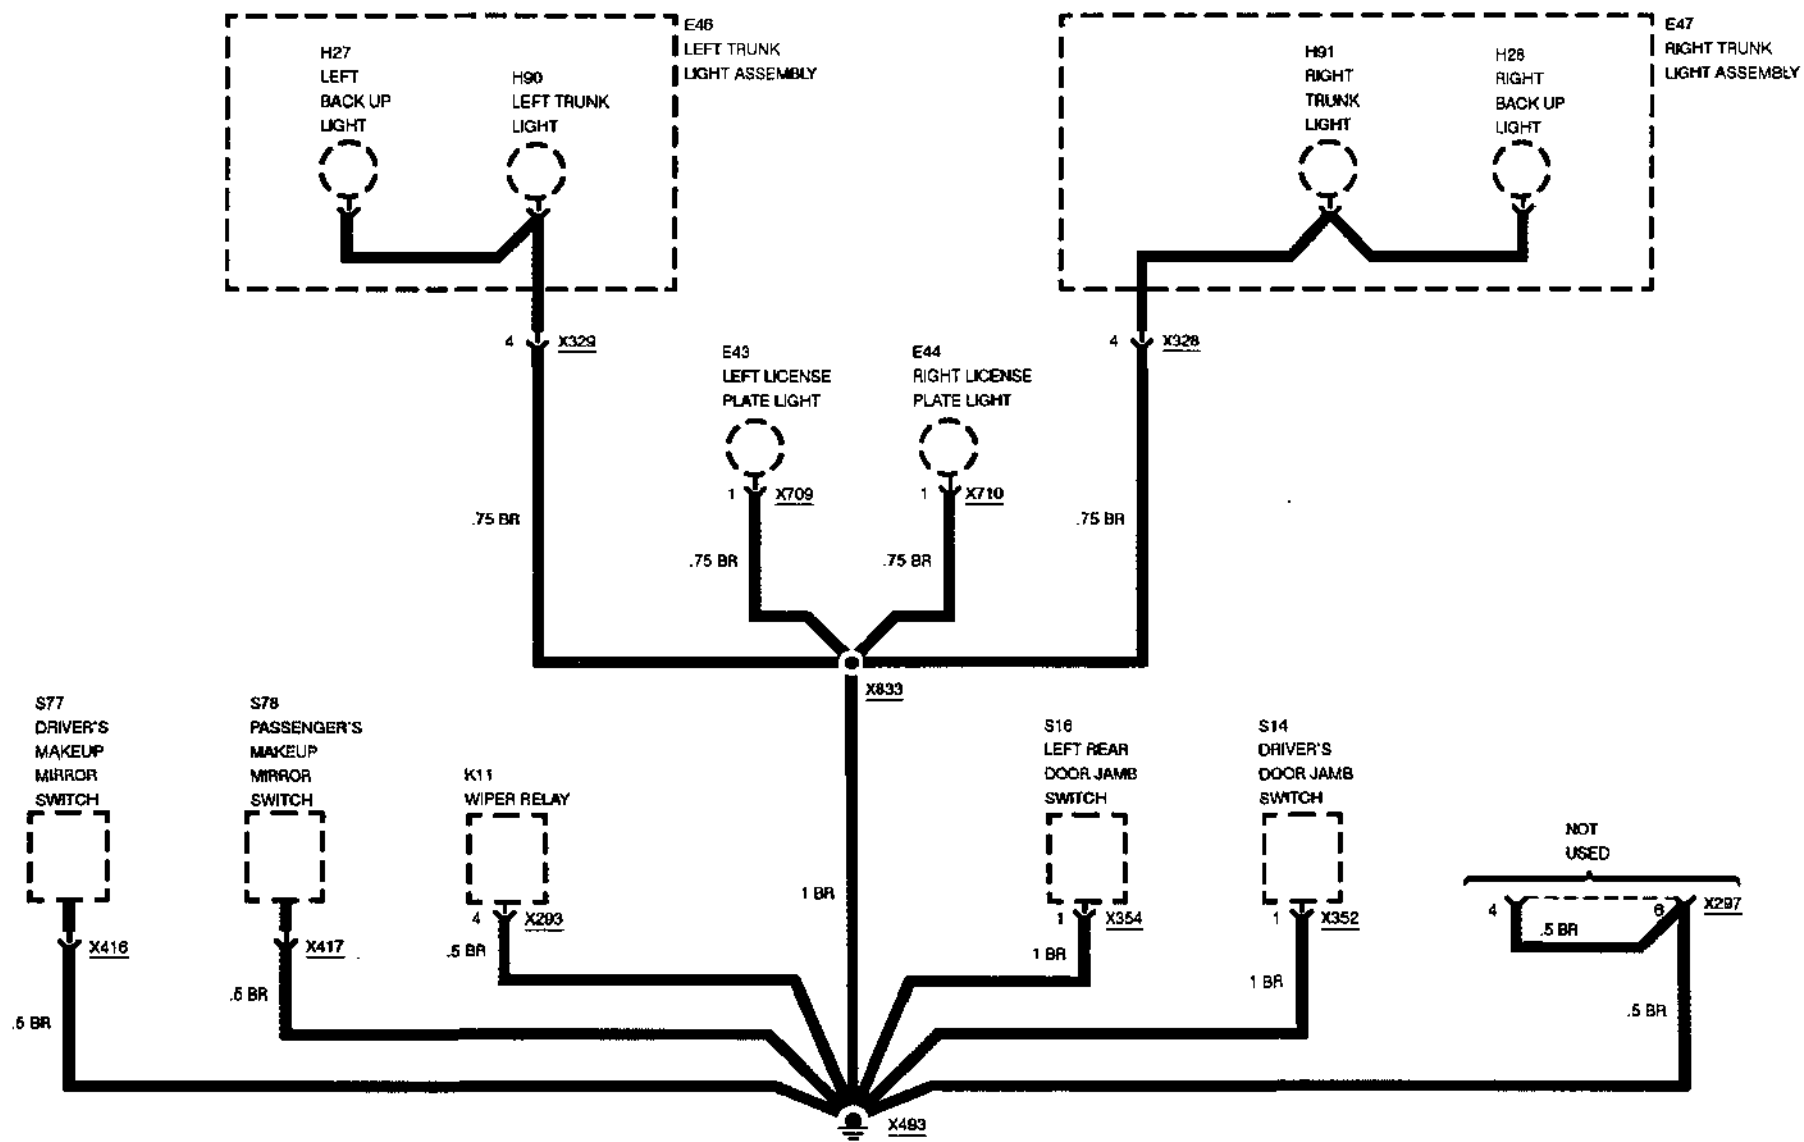




GROUND DISTRIBUTION

GROUND X495

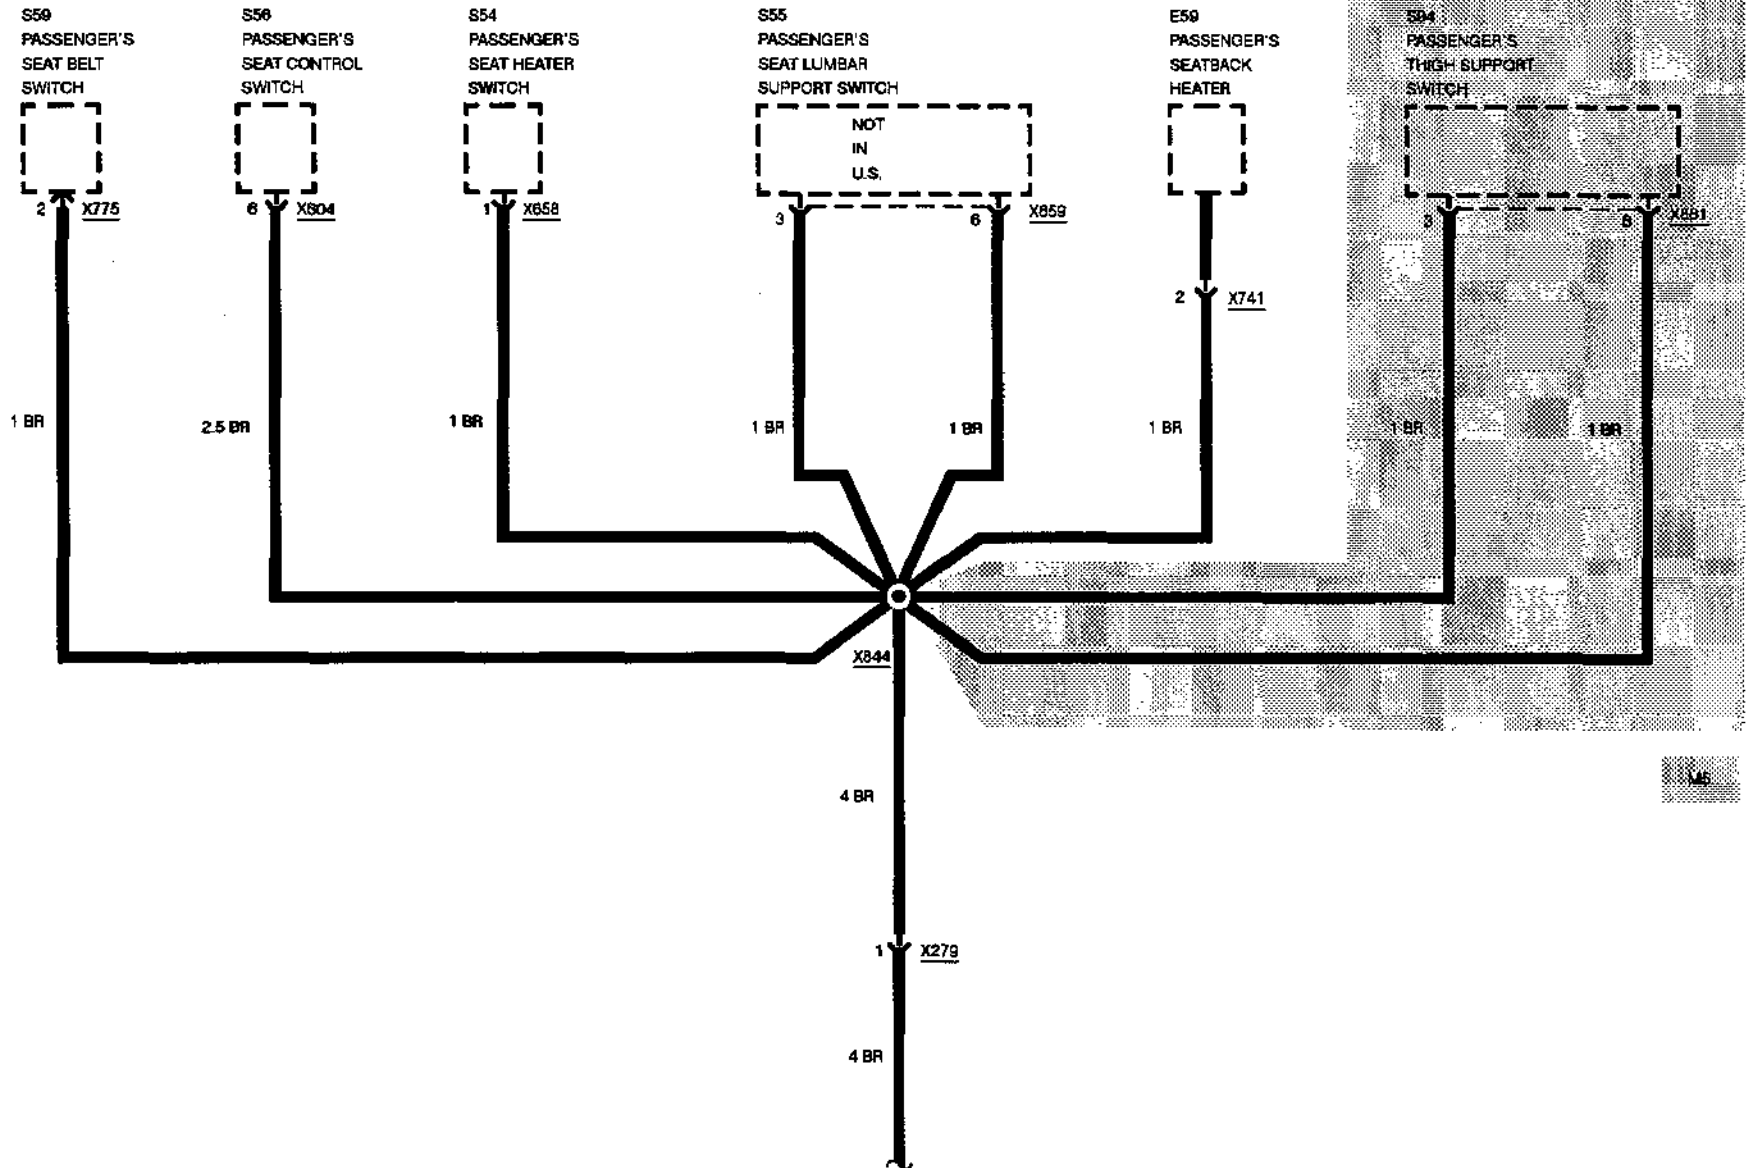


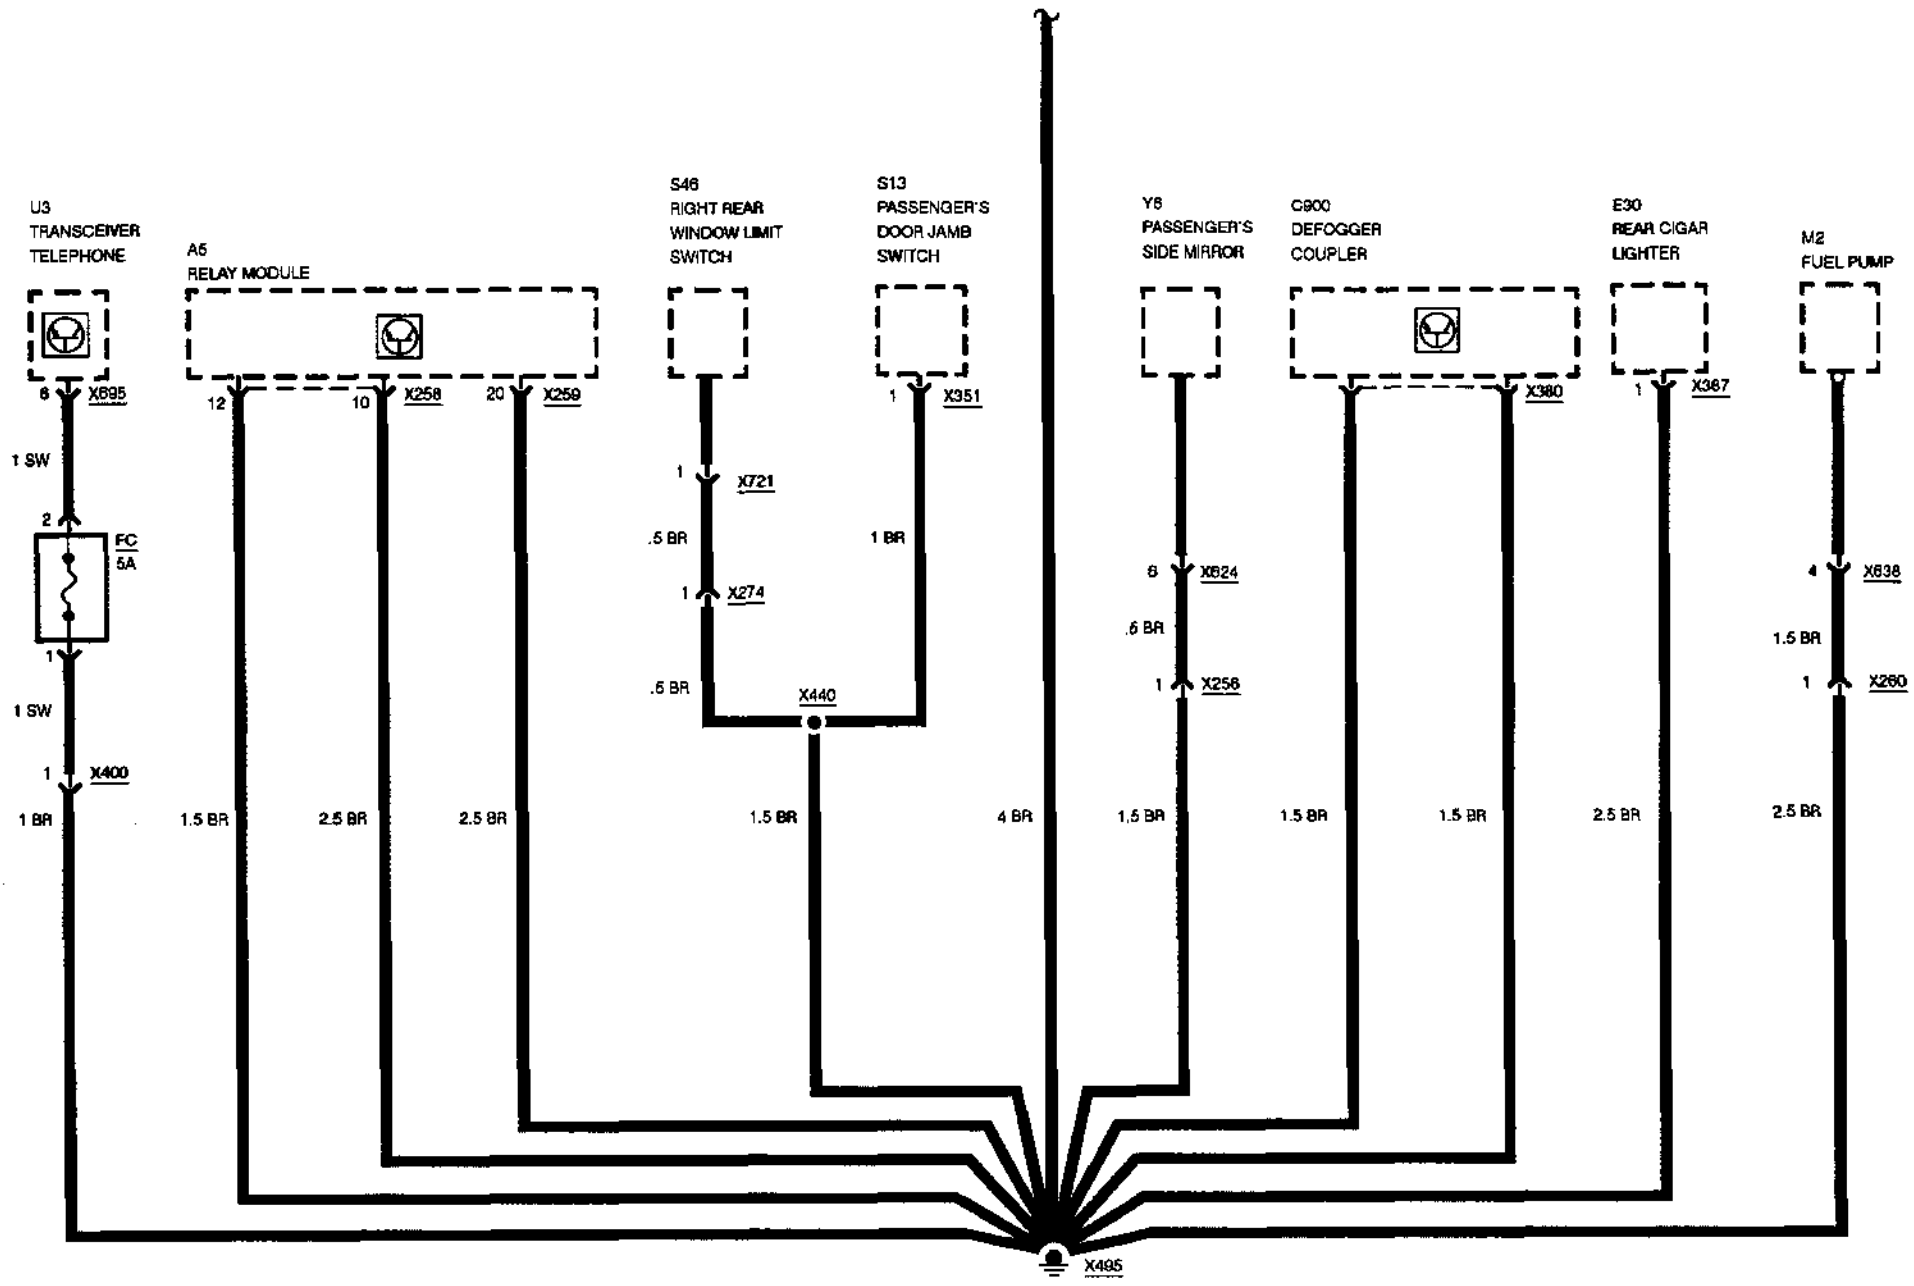



GROUND DISTRIBUTION


GROUND X496

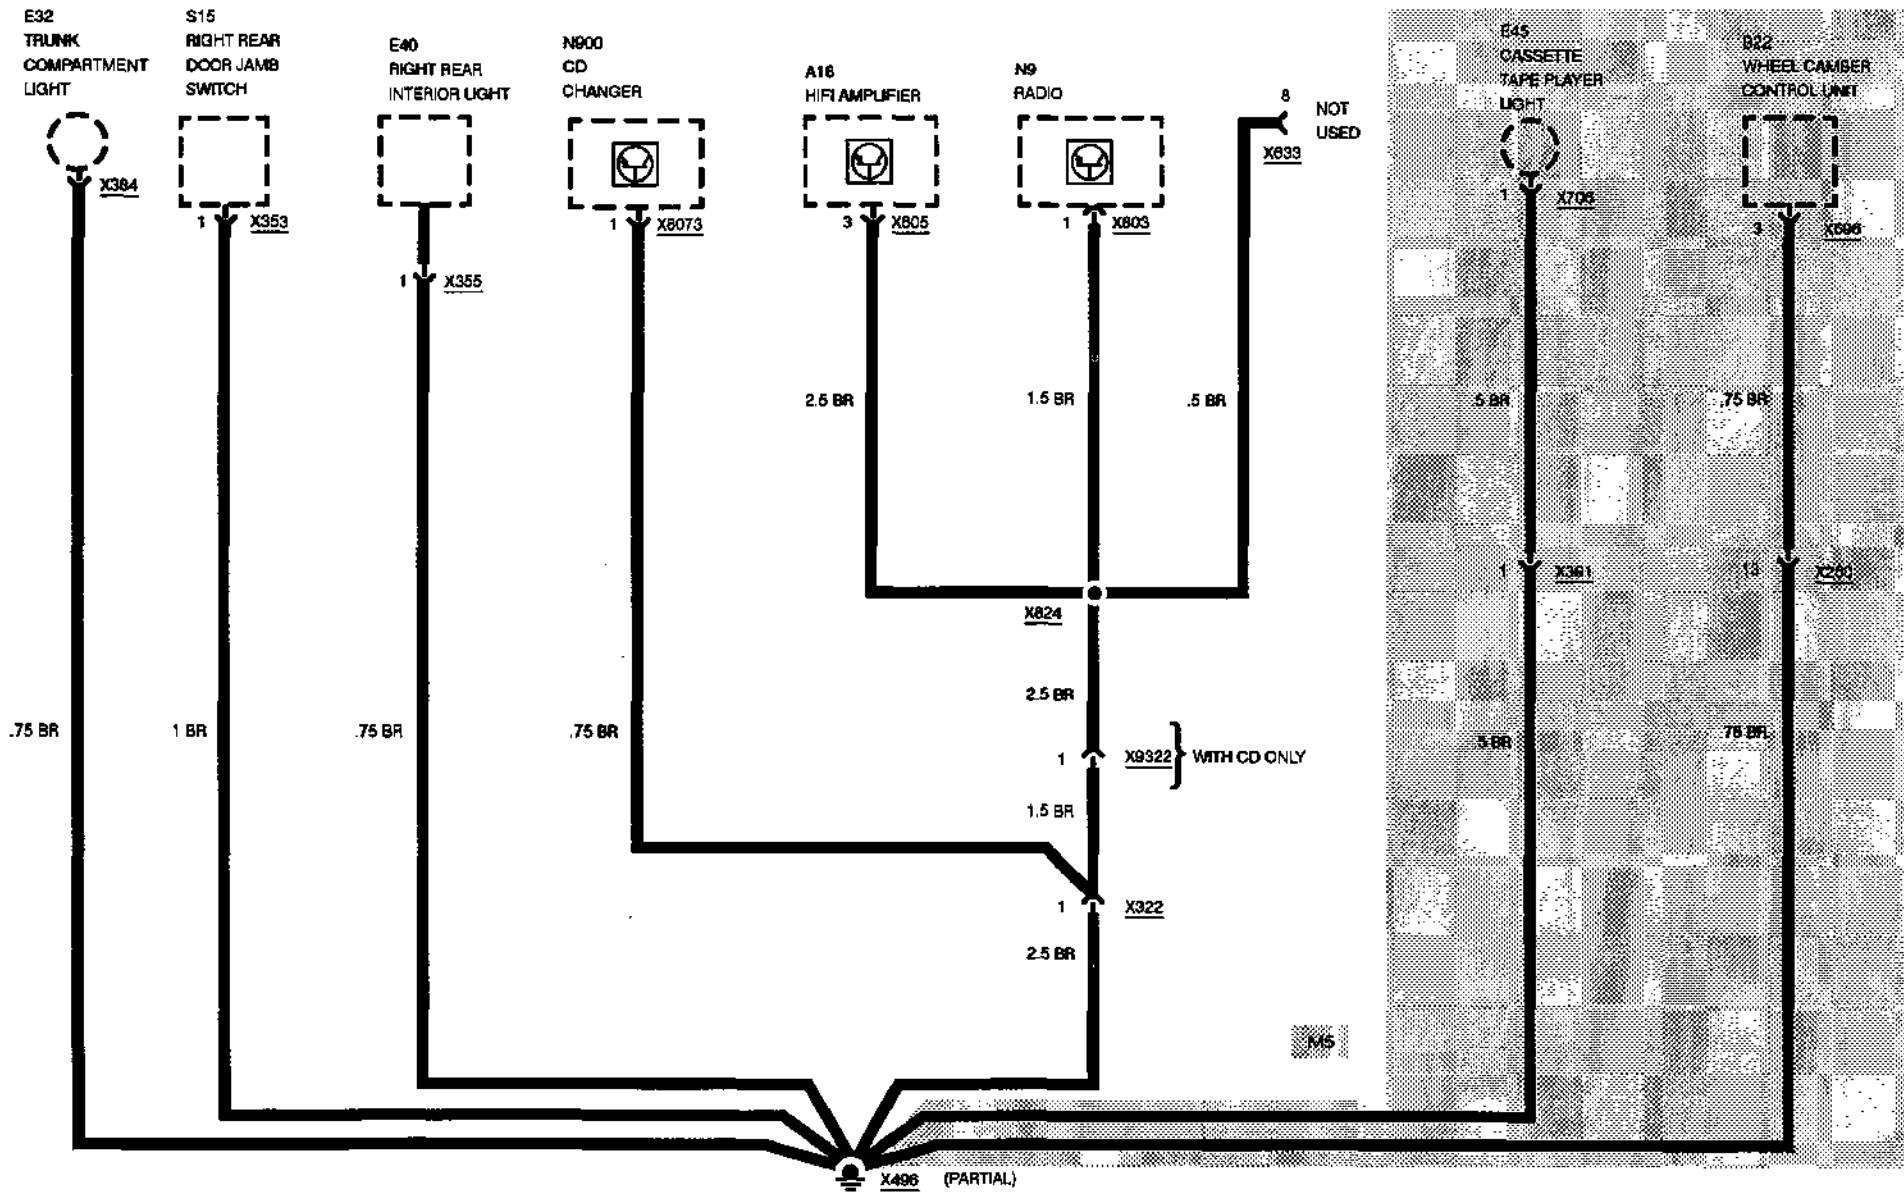




GROUND DISTRIBUTION

GROUND X496

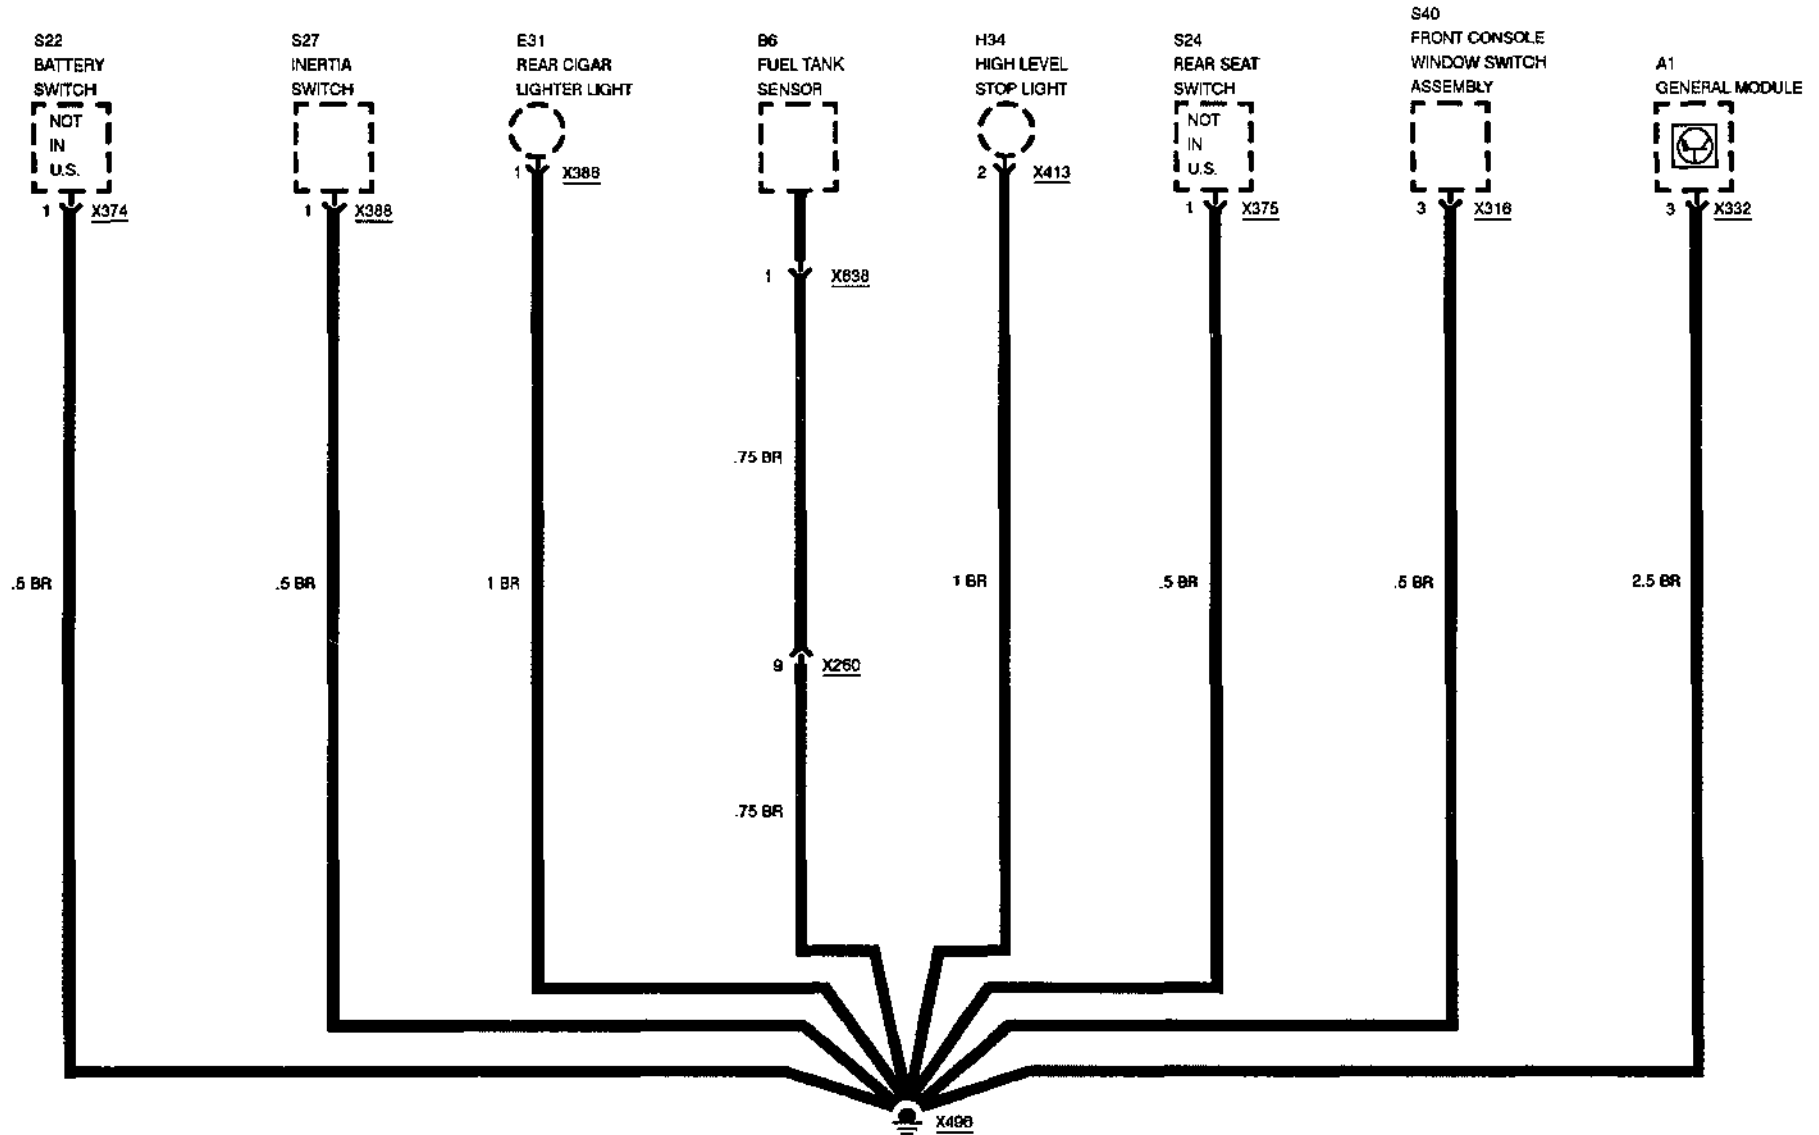



GROUND DISTRIBUTION GROUND X497

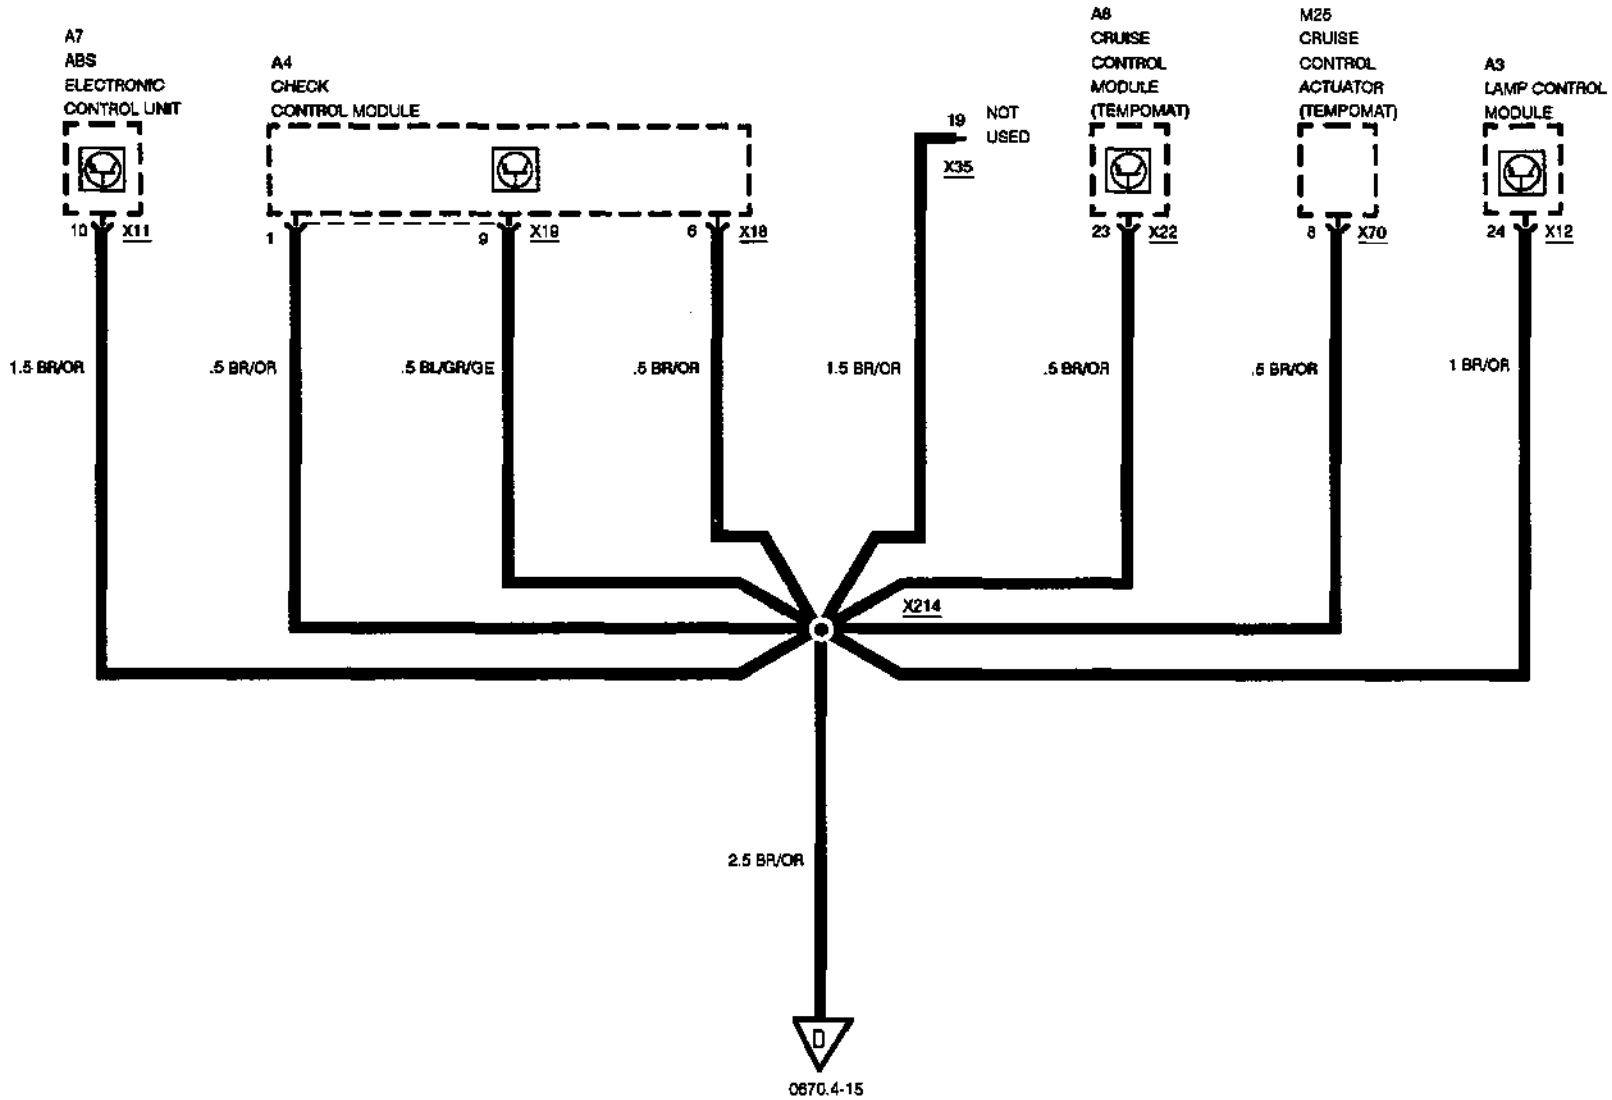


0870.4-15



GROUND DISTRIBUTION


GROUND X497

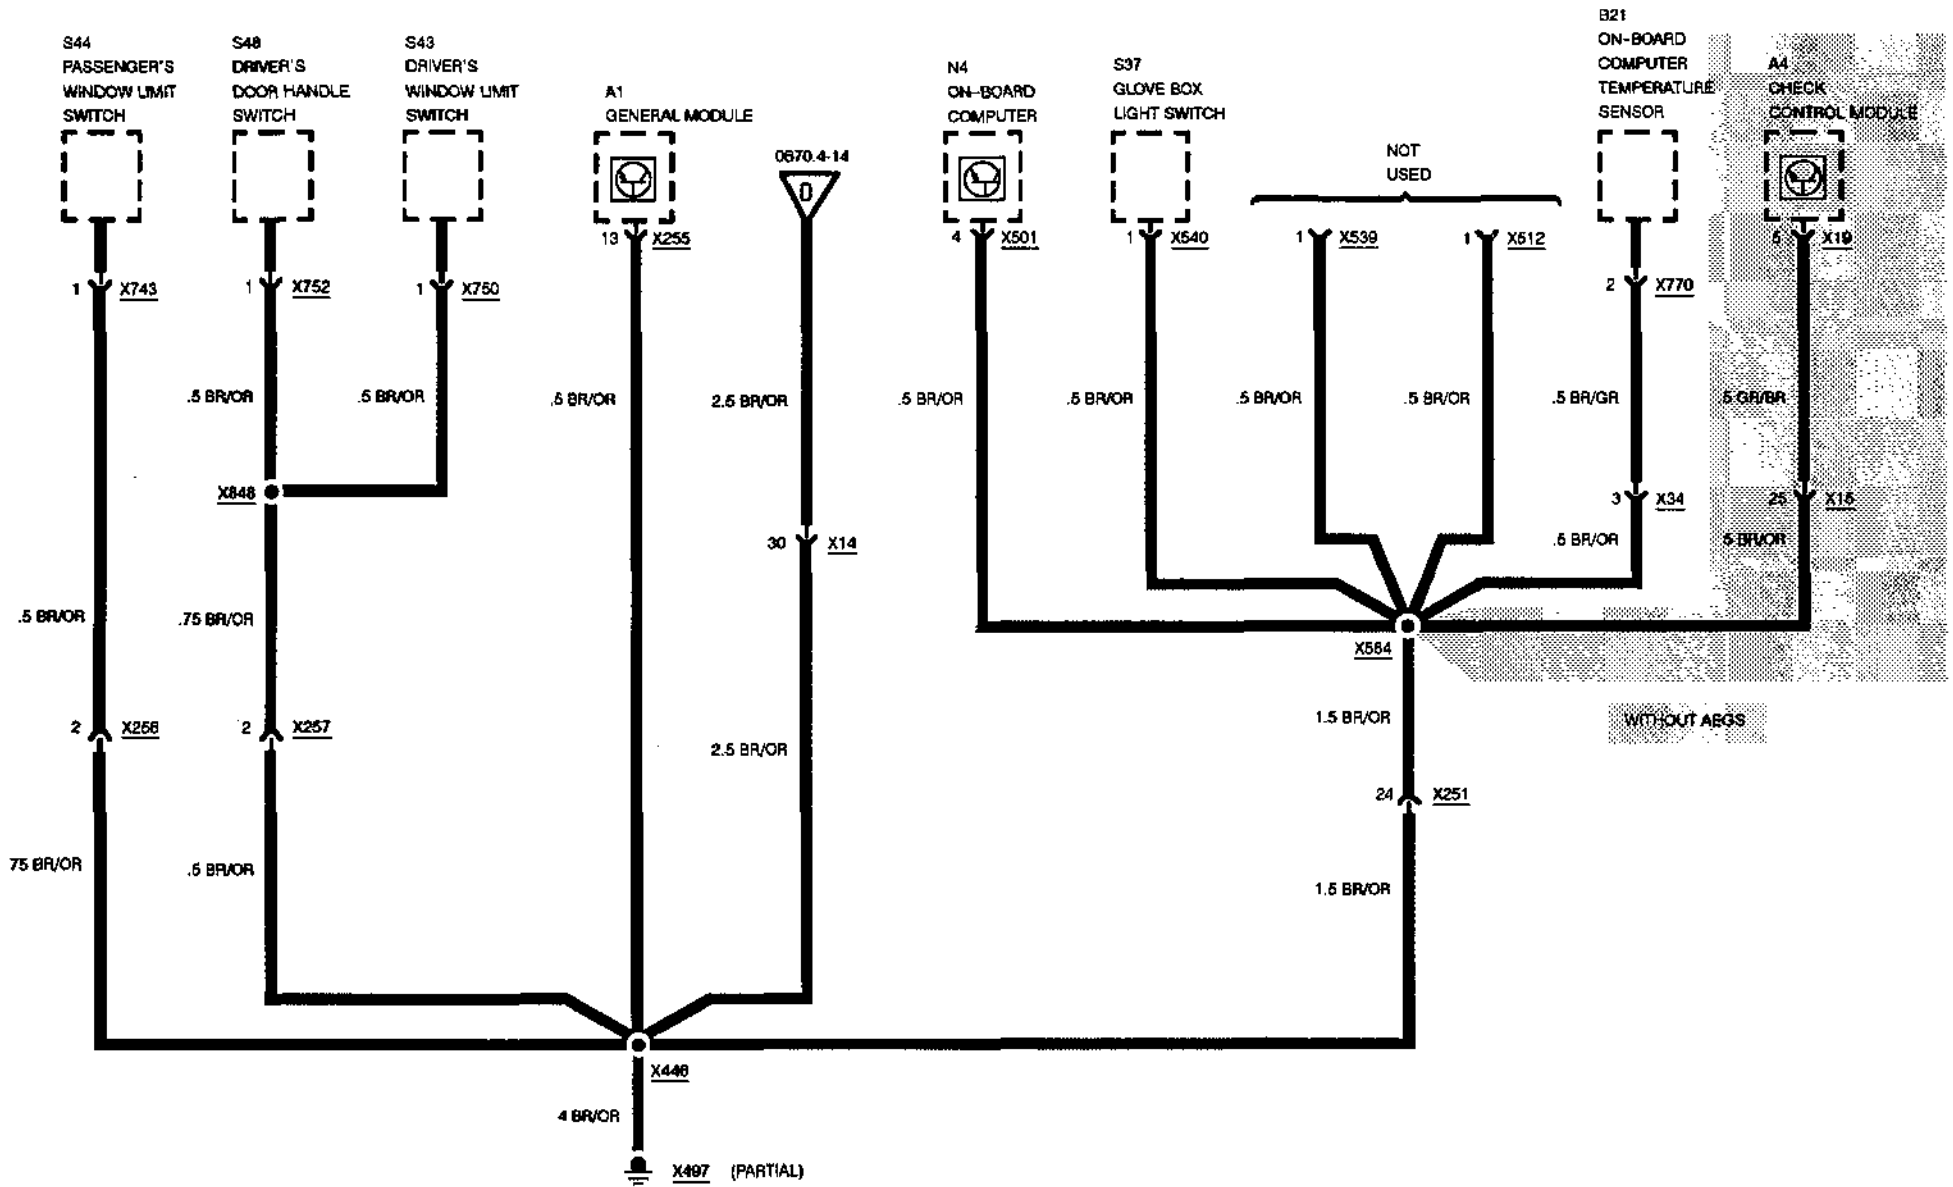



GROUND DISTRIBUTION

GROUND X497

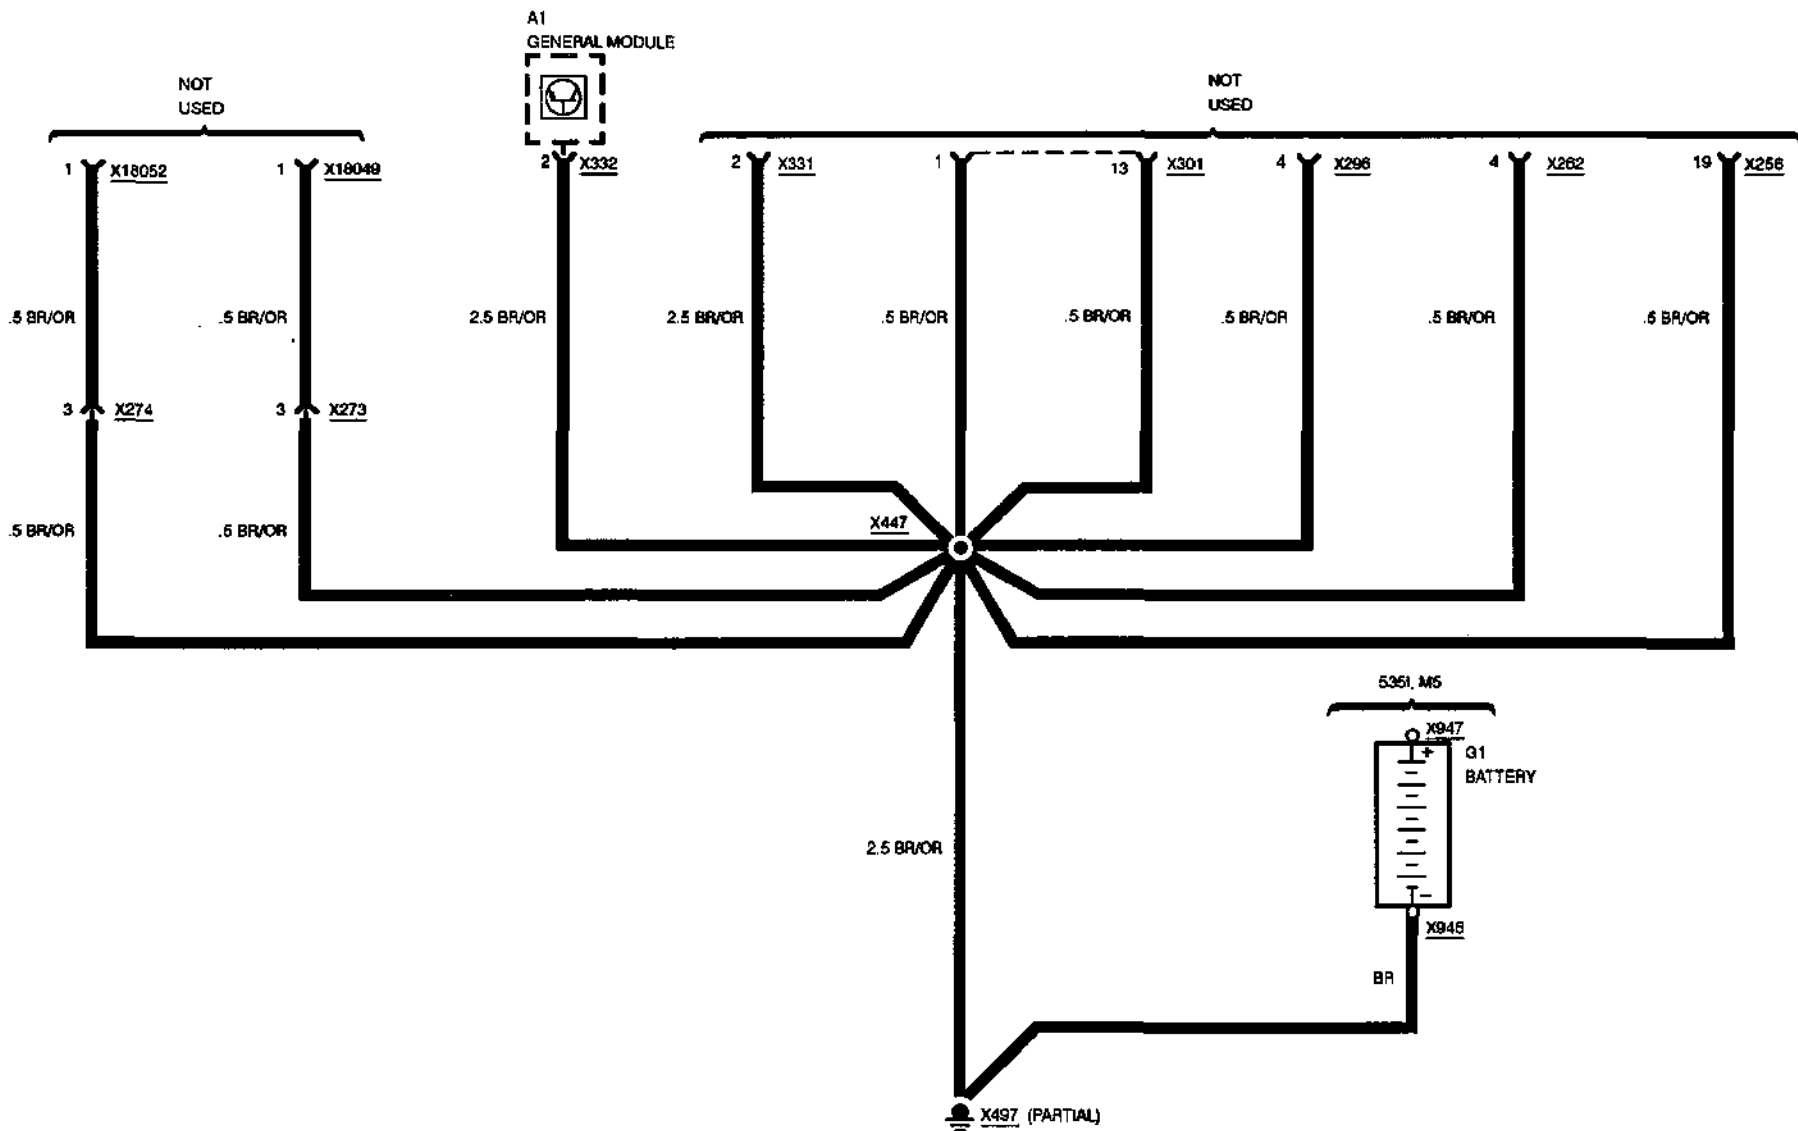


02/90

0670.4-16

1989



GROUND DISTRIBUTION

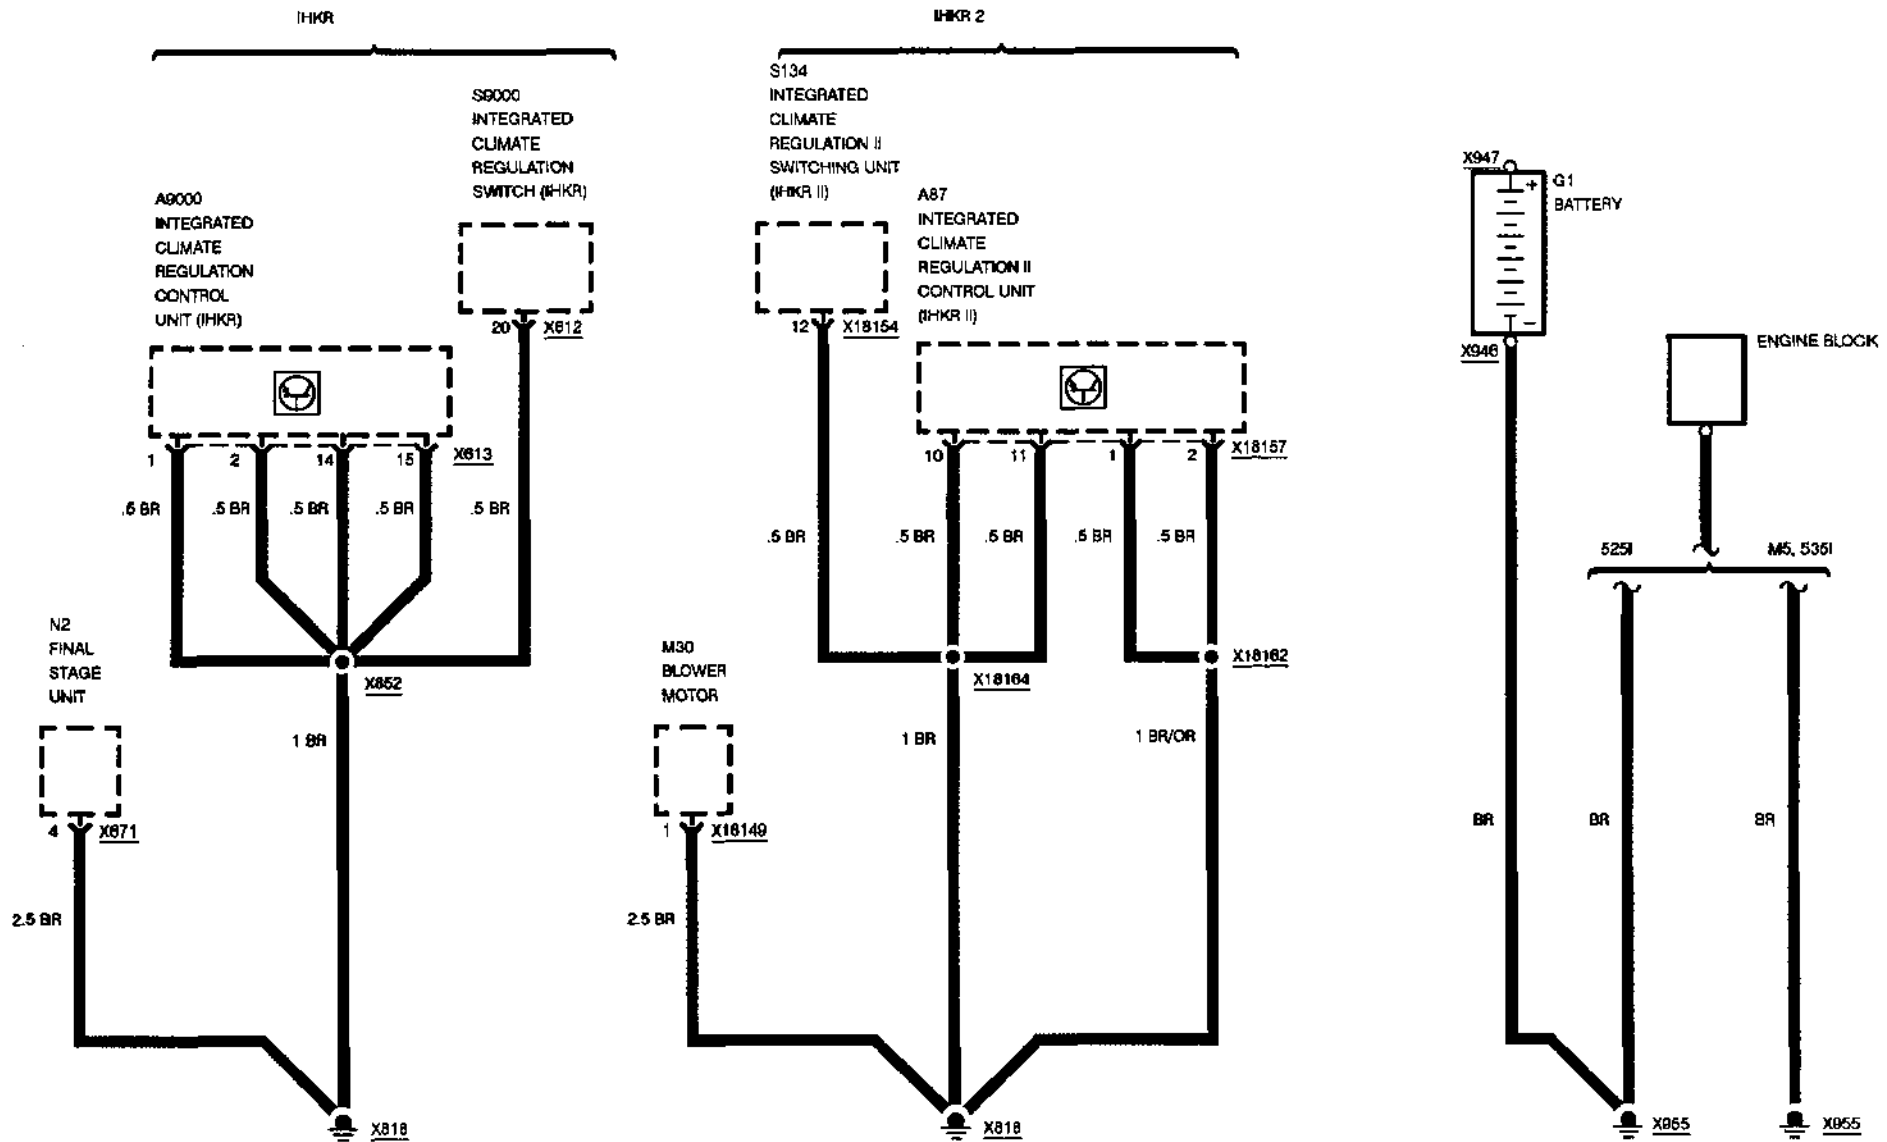




GROUND DISTRIBUTION

GROUND X1541

525i

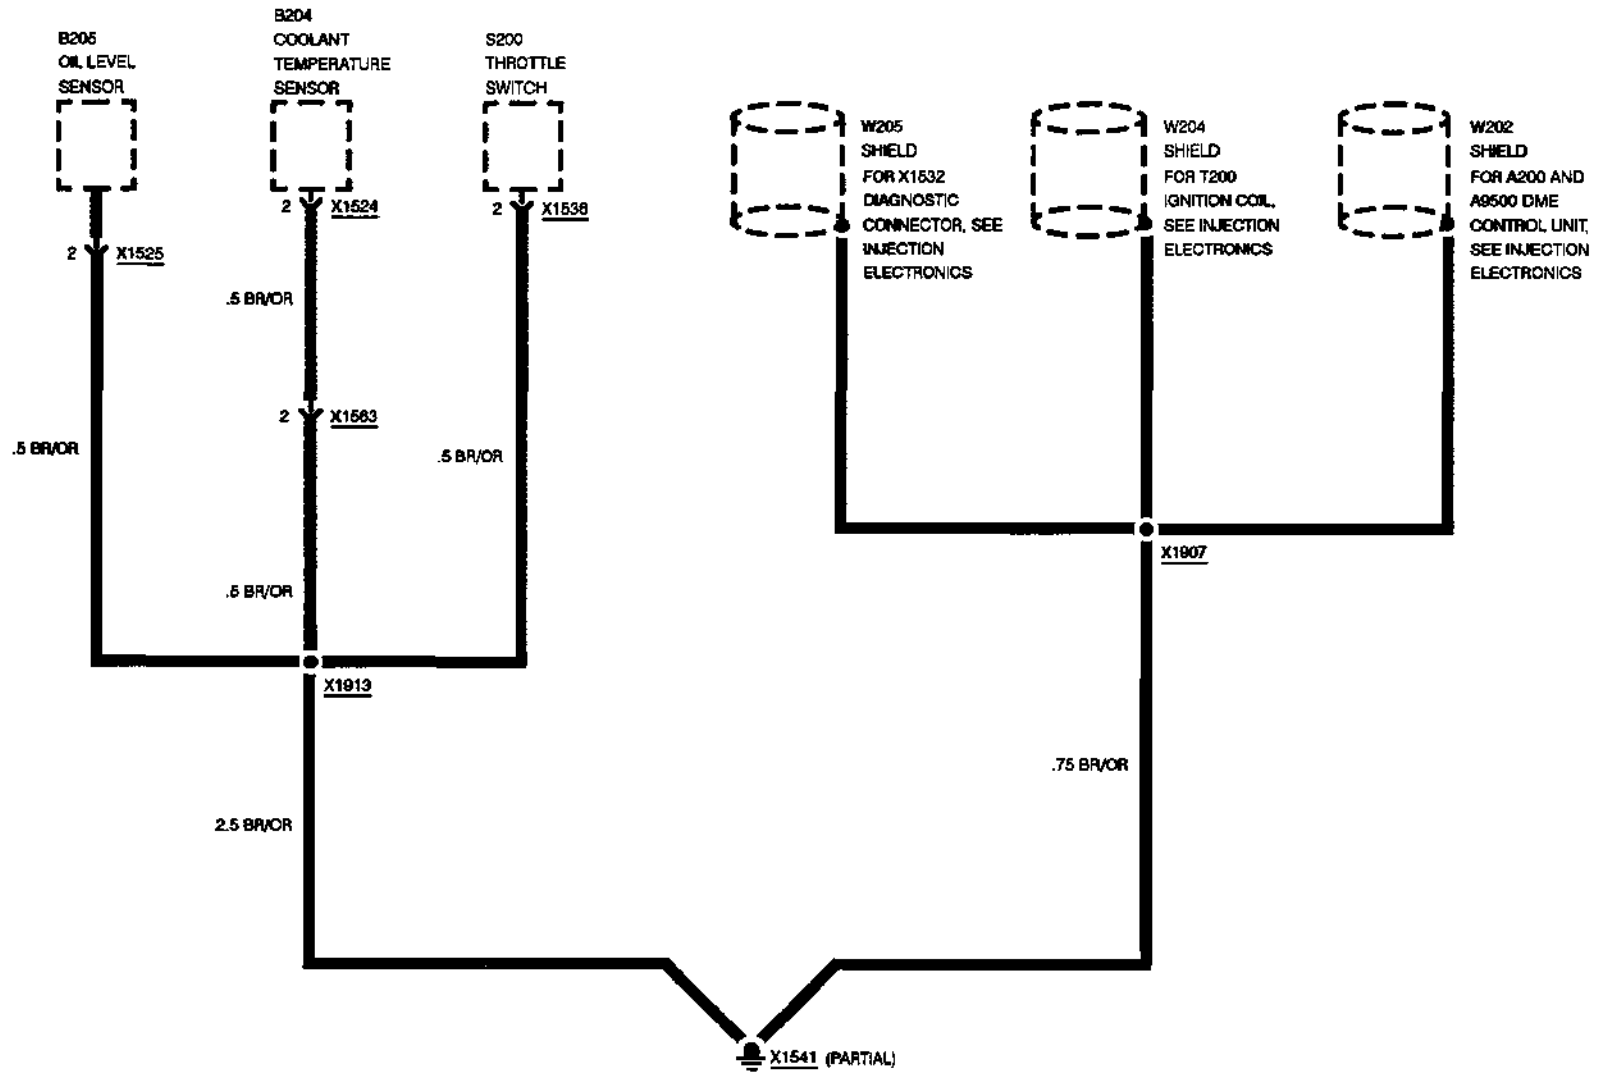

06/89

0670.4-18


1989



GROUND DISTRIBUTION

525i

GROUND X1541

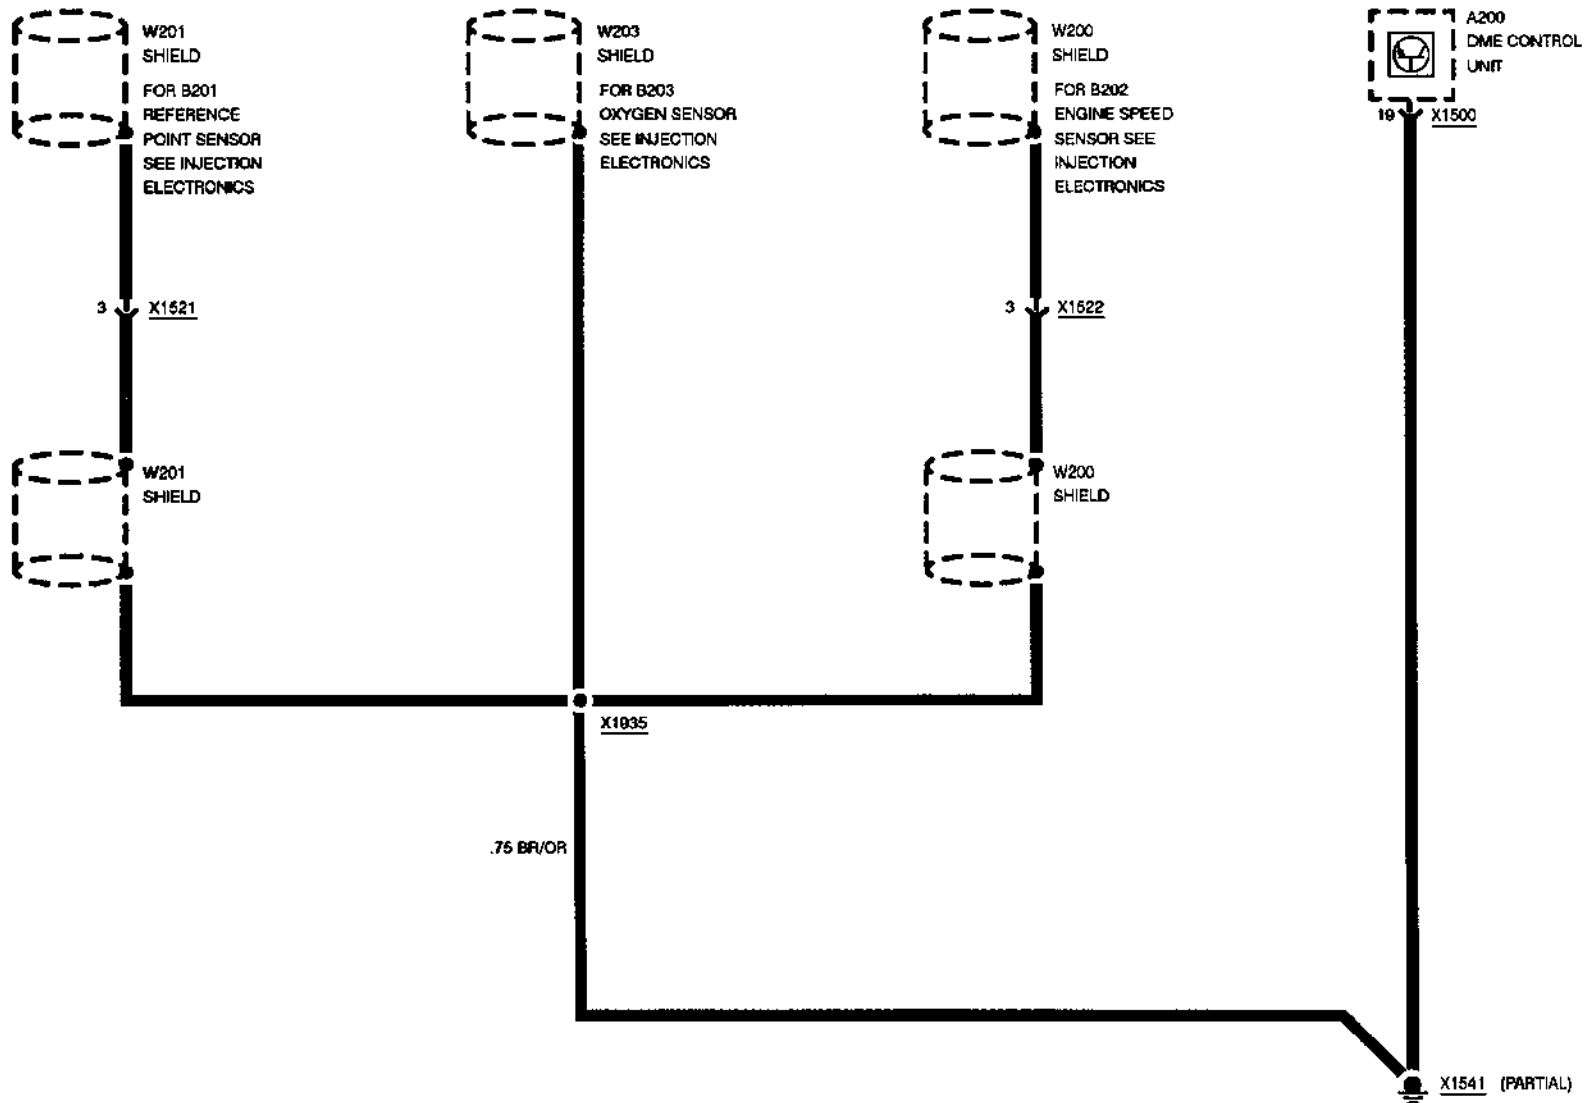

06/89

0670.4-19


1989



GROUND DISTRIBUTION

535i, M5

GROUND X1541

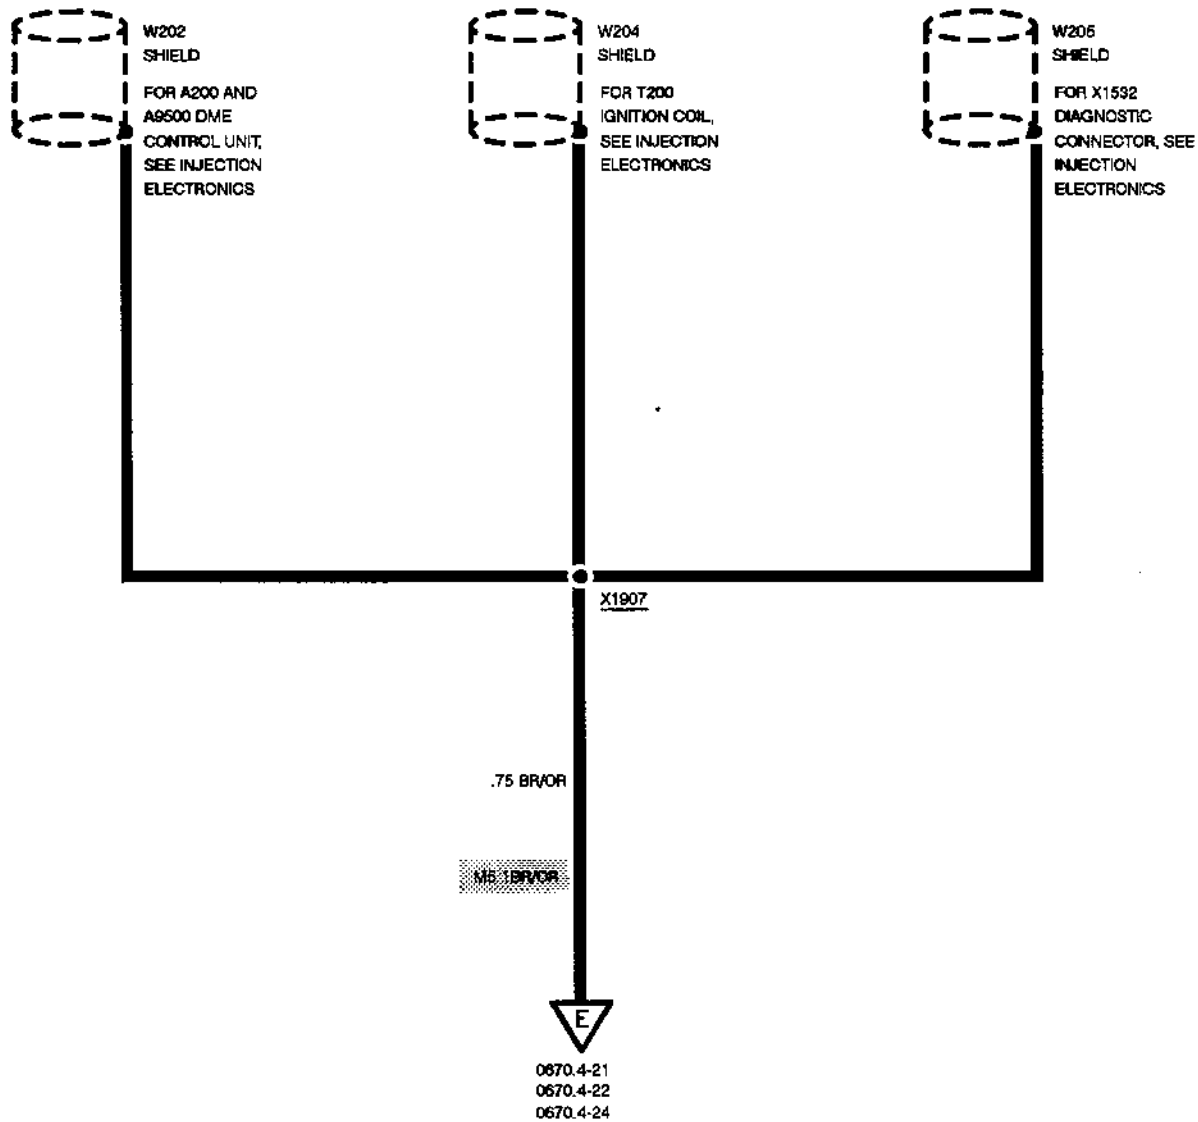




GROUND DISTRIBUTION

535i

GROUND X1541

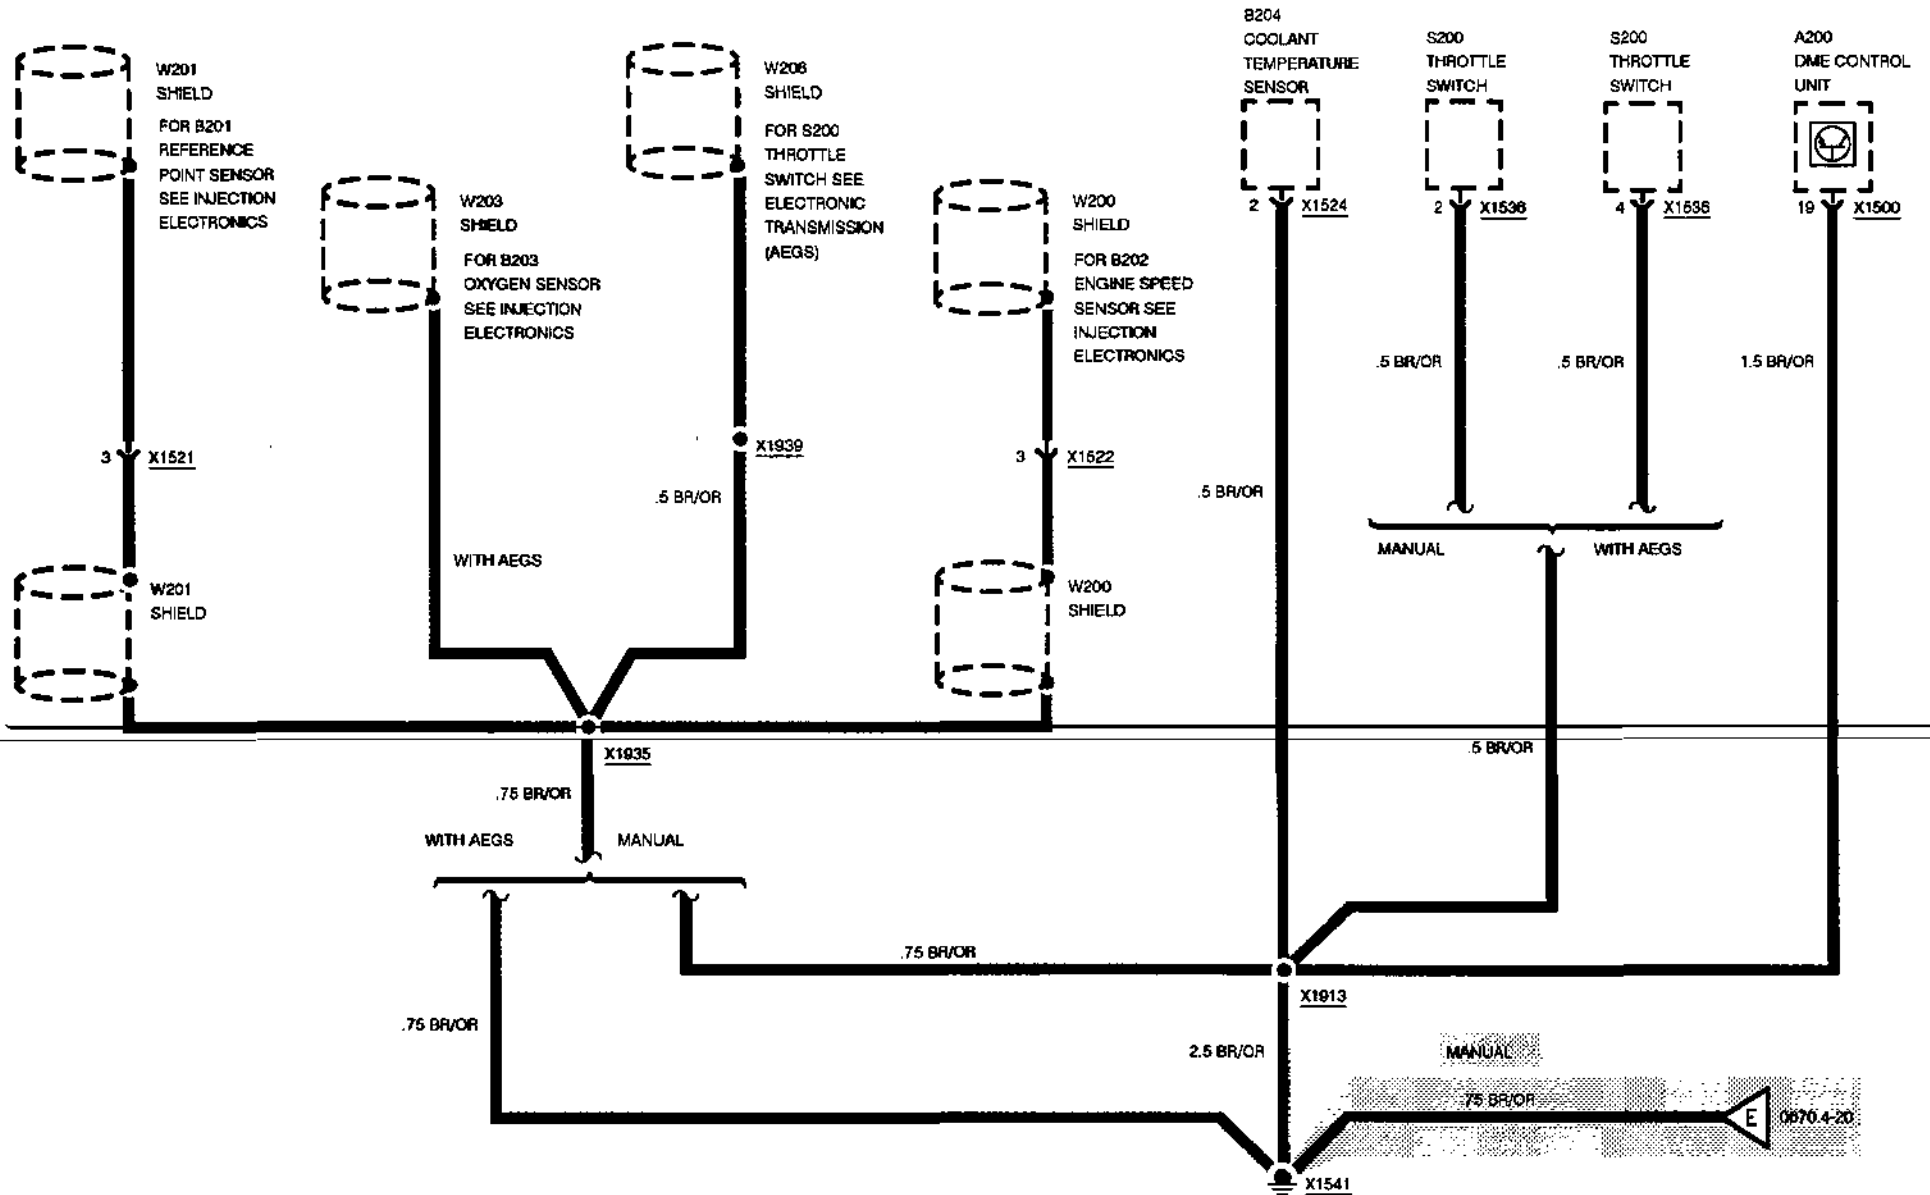

06/89


0670.4-21

1989



GROUND DISTRIBUTION GROUNDS X1542 AND X2008

535i

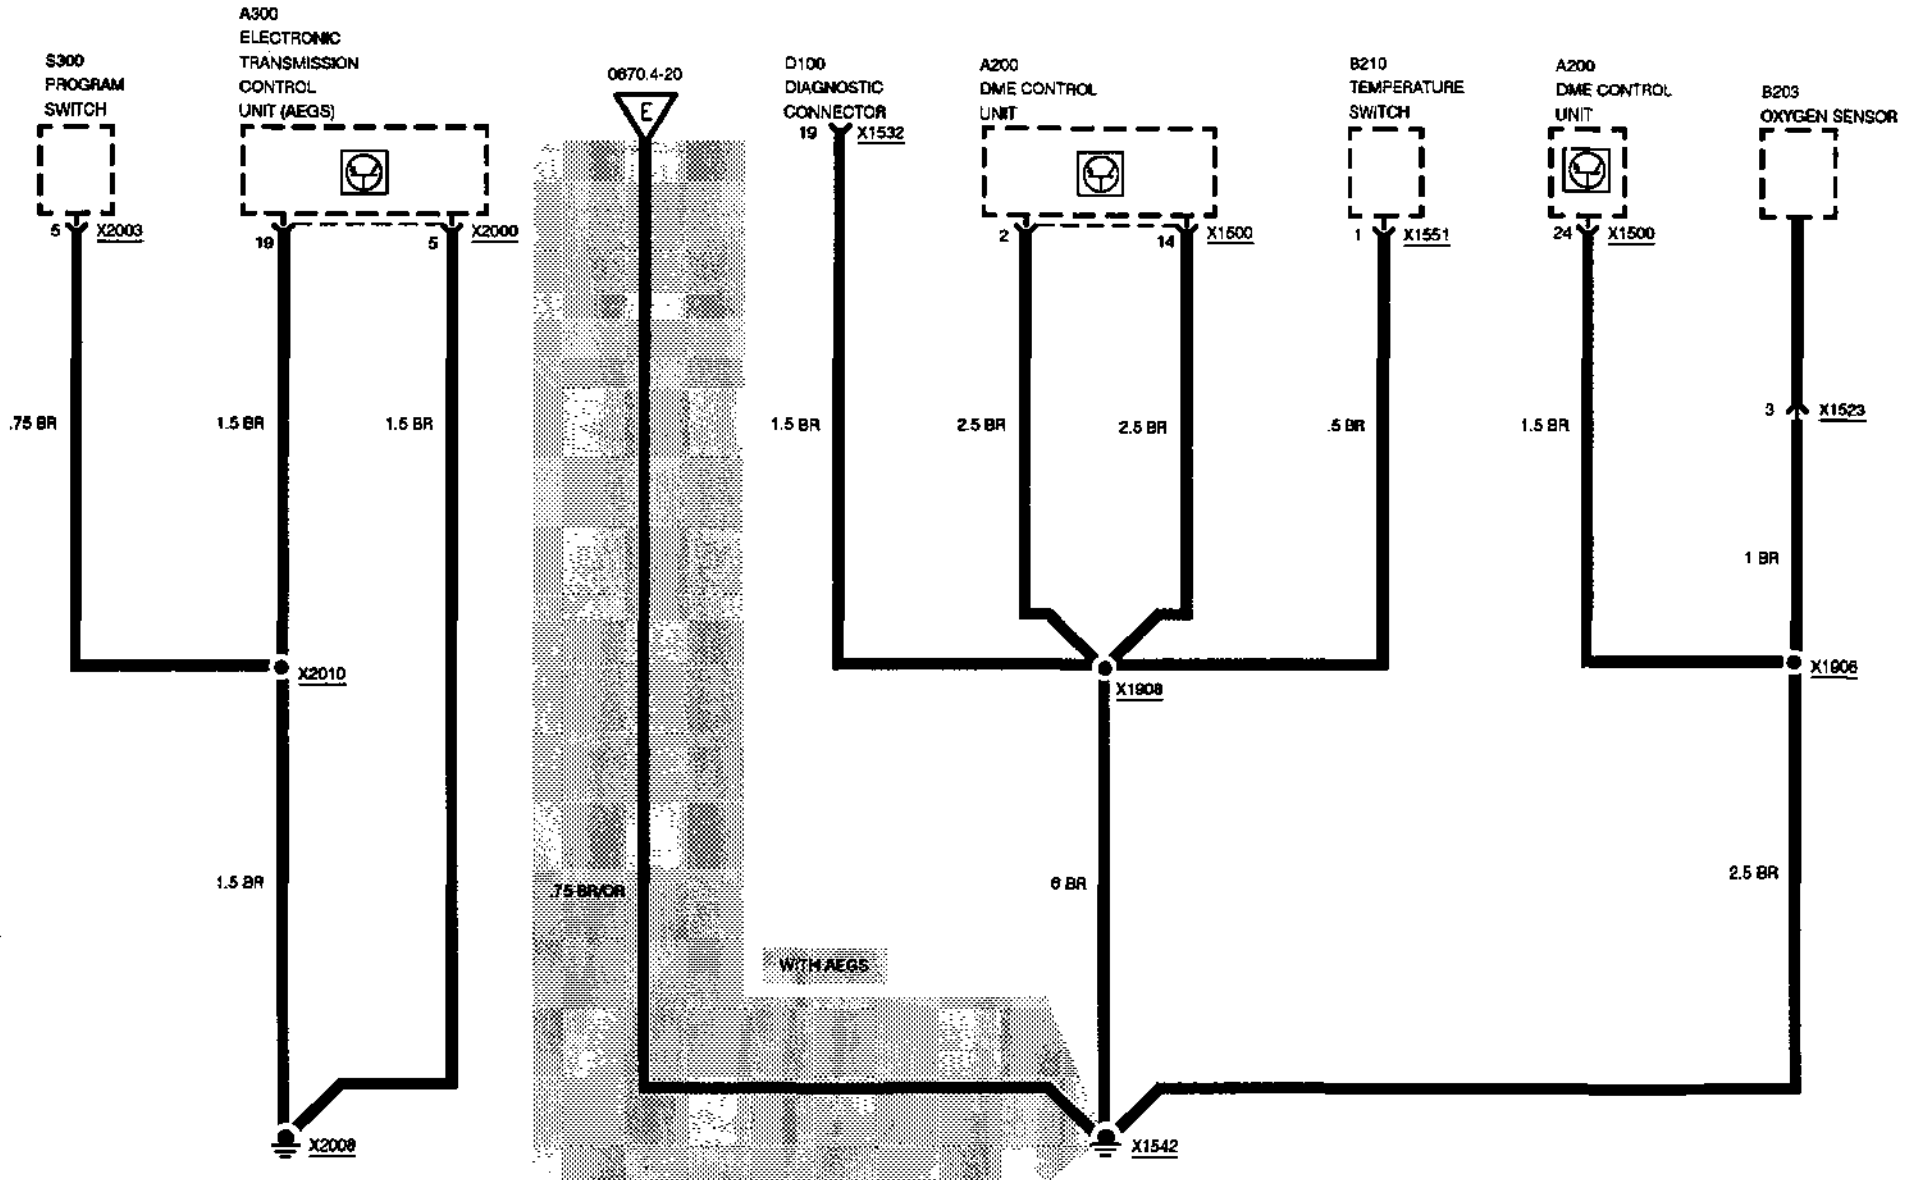

06/89

0670.4-22


1989



GROUND DISTRIBUTION

GROUND X1542

525i

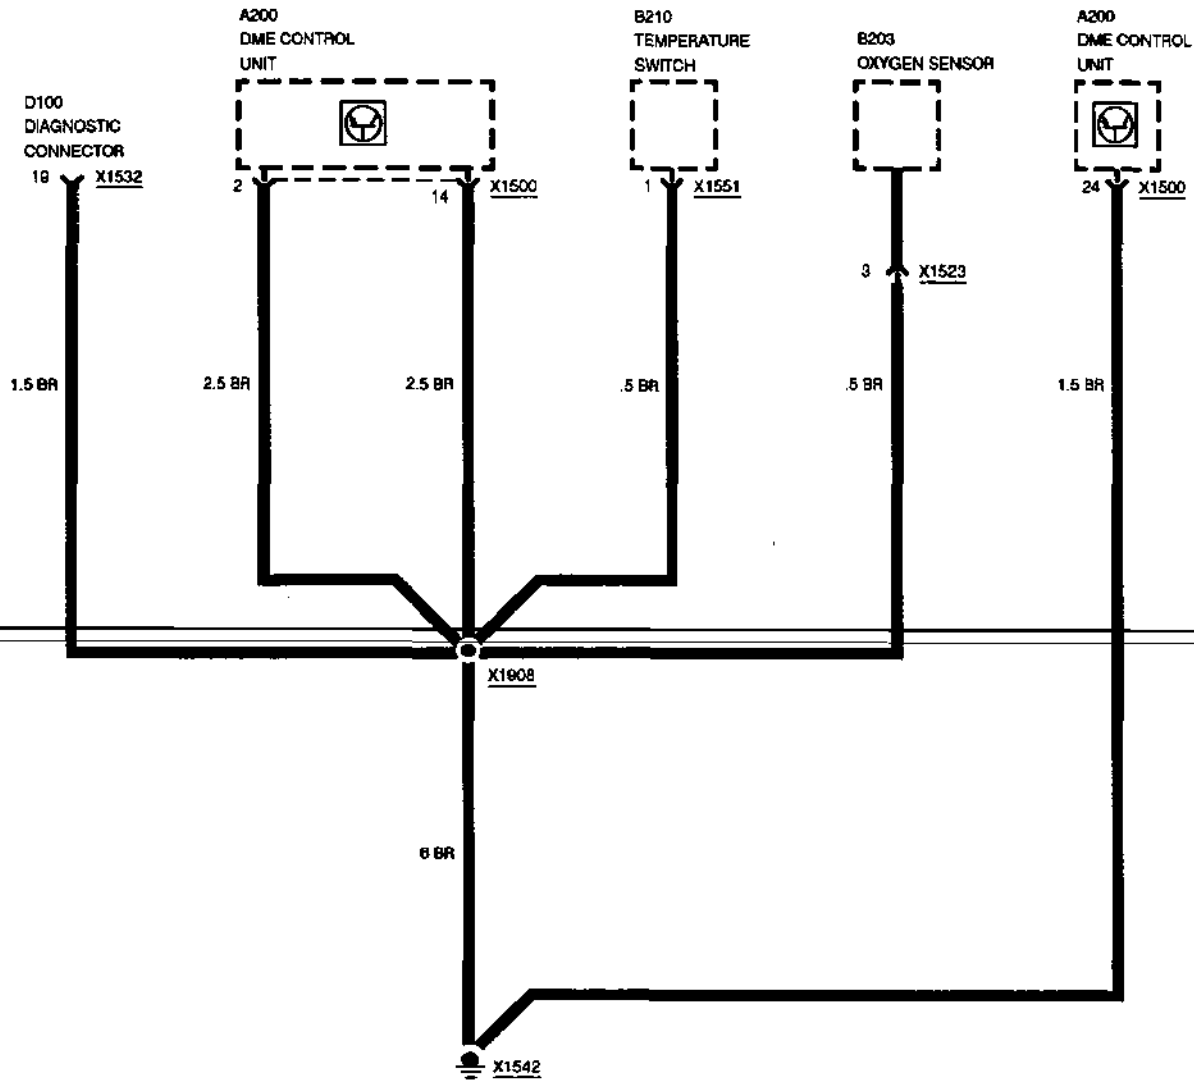

06/89

0670.4-23


1989



GROUND DISTRIBUTION

GROUND X1541

M5

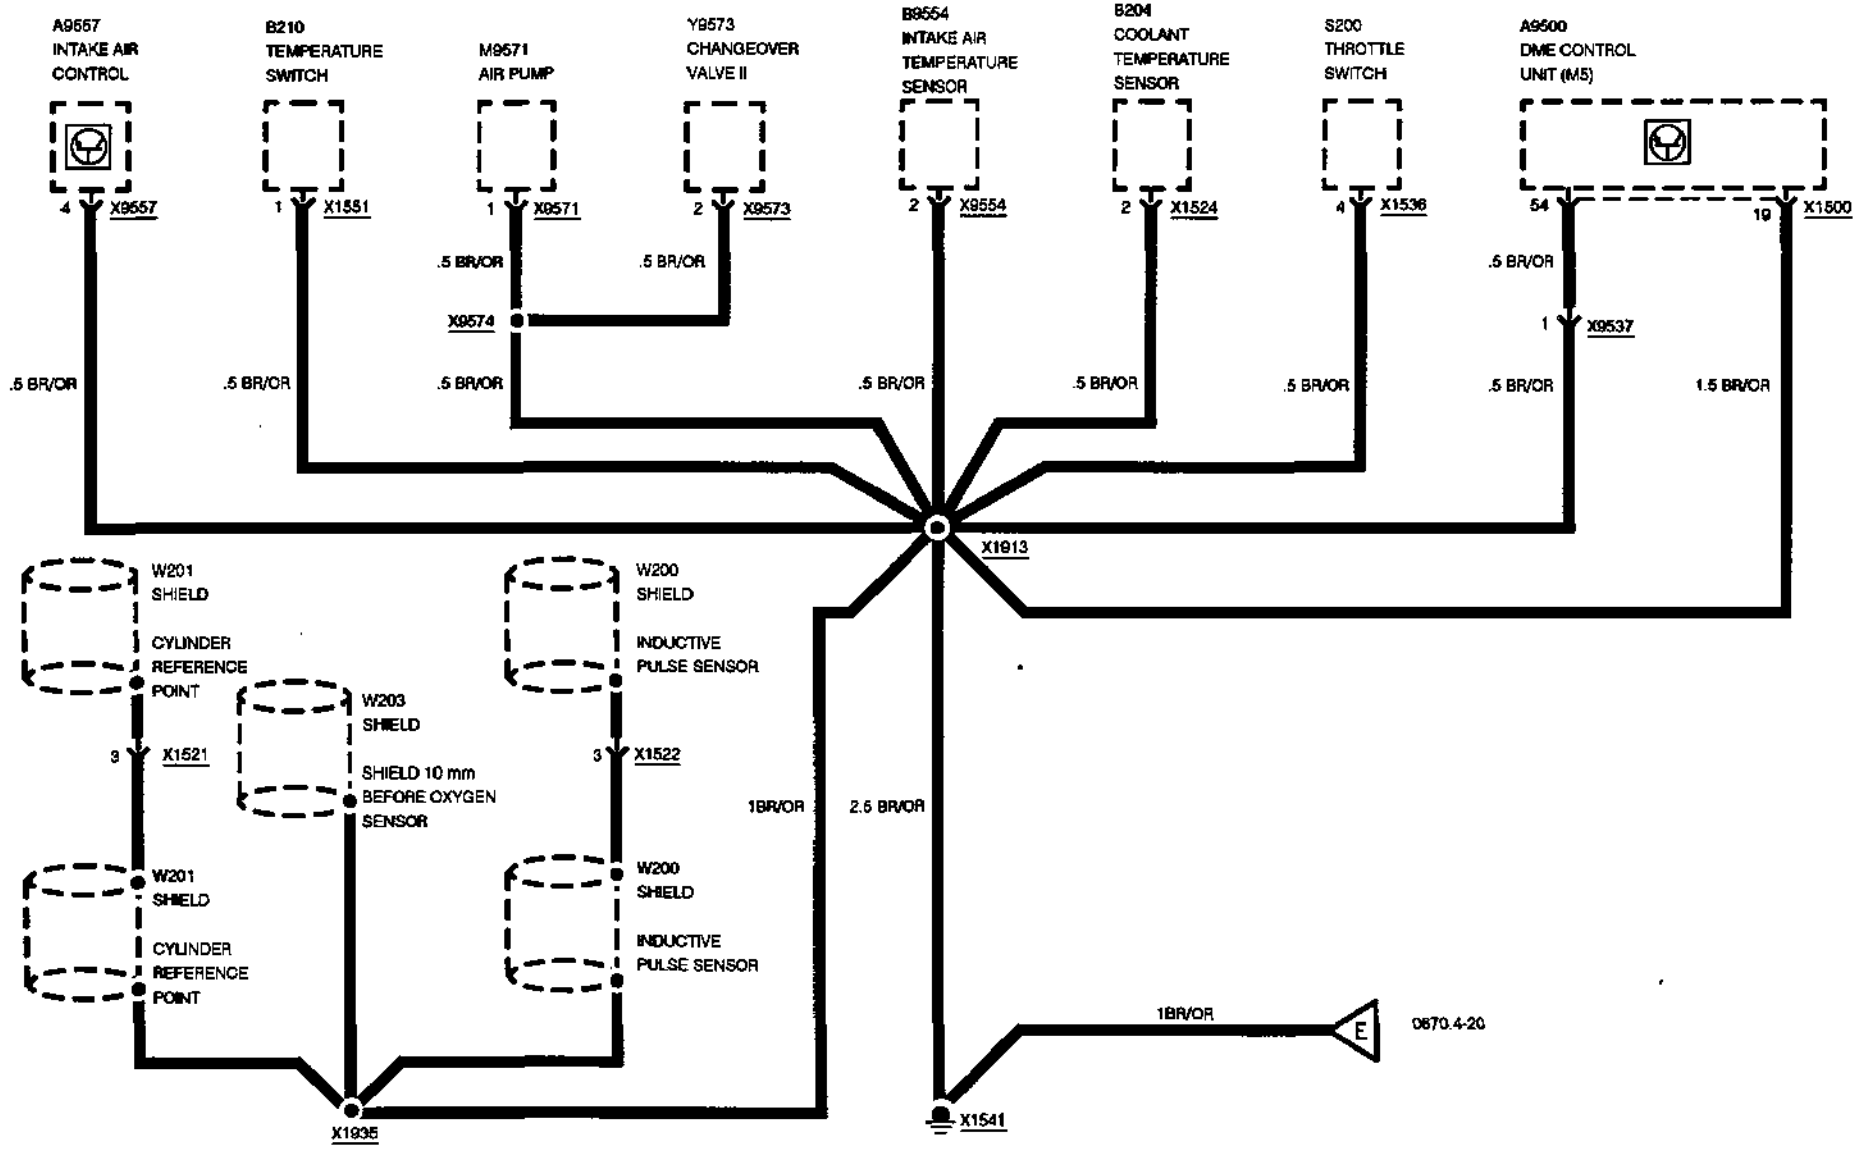

02/90

0670.4-24

1990



GROUND DISTRIBUTION


GROUND X1542

M5

07/90


0670.4-25

1990

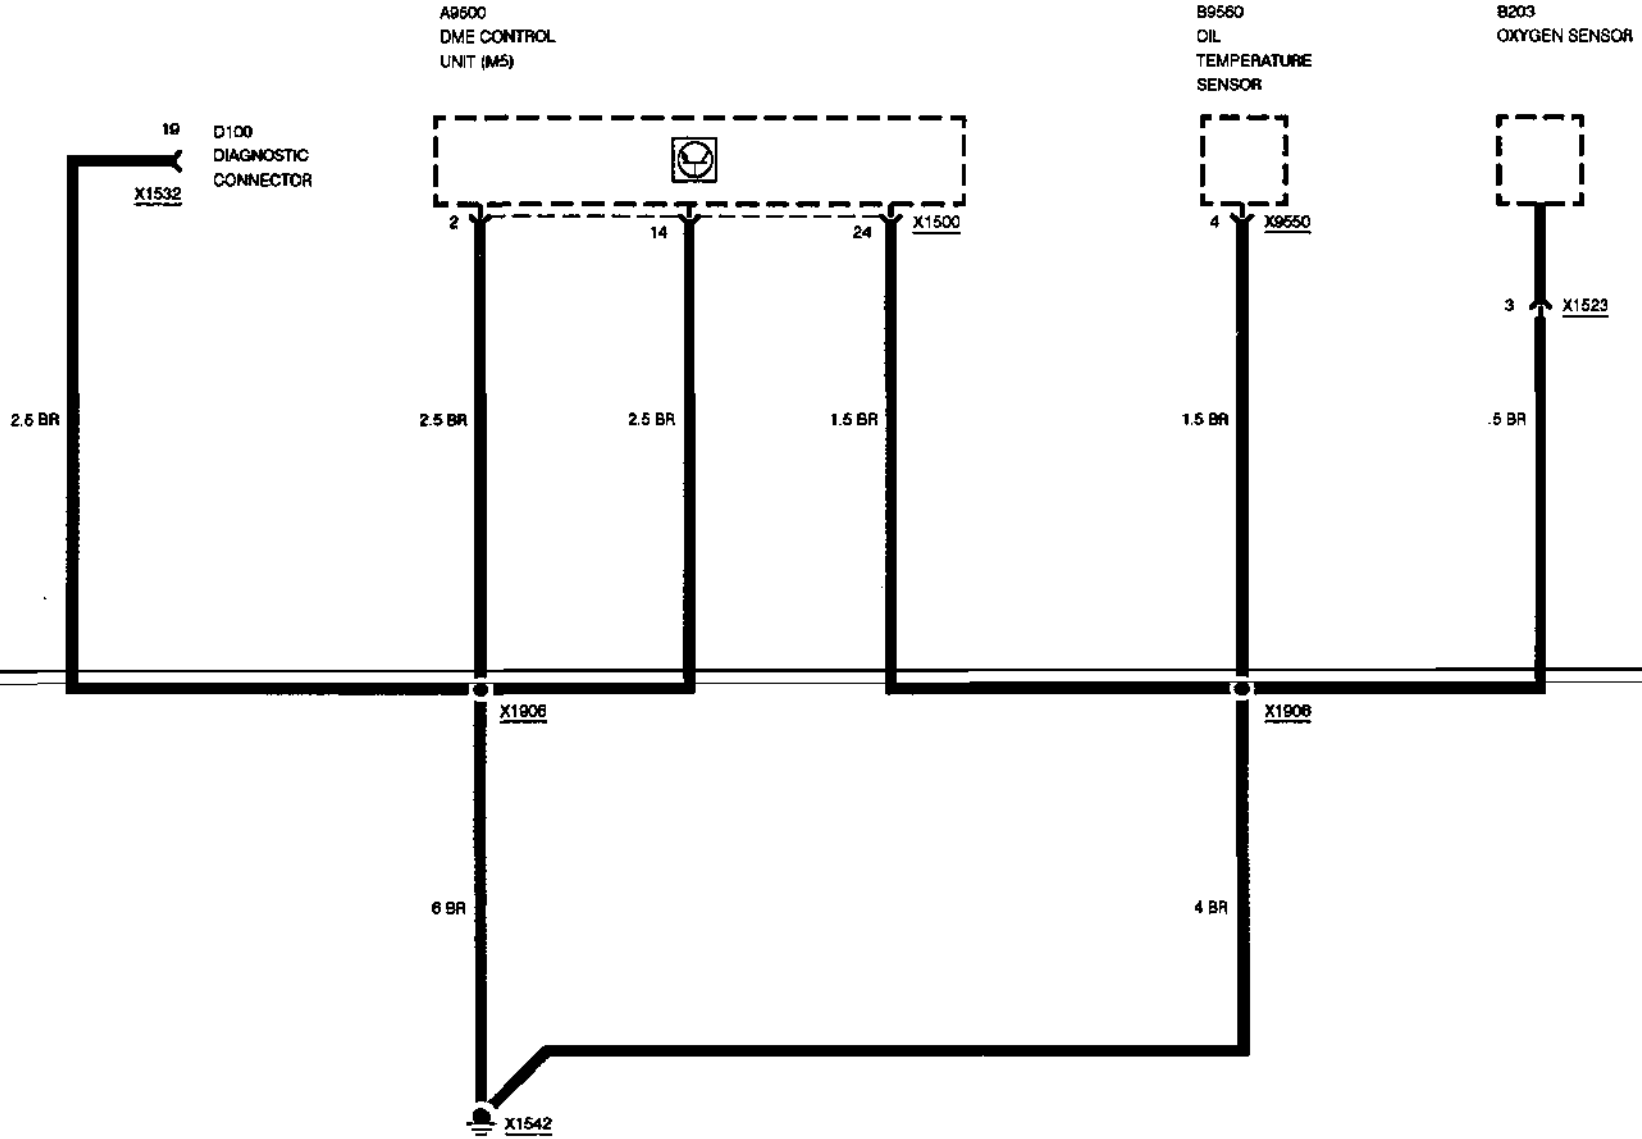




DIAGNOSTIC LINK BLOCK DIAGRAM

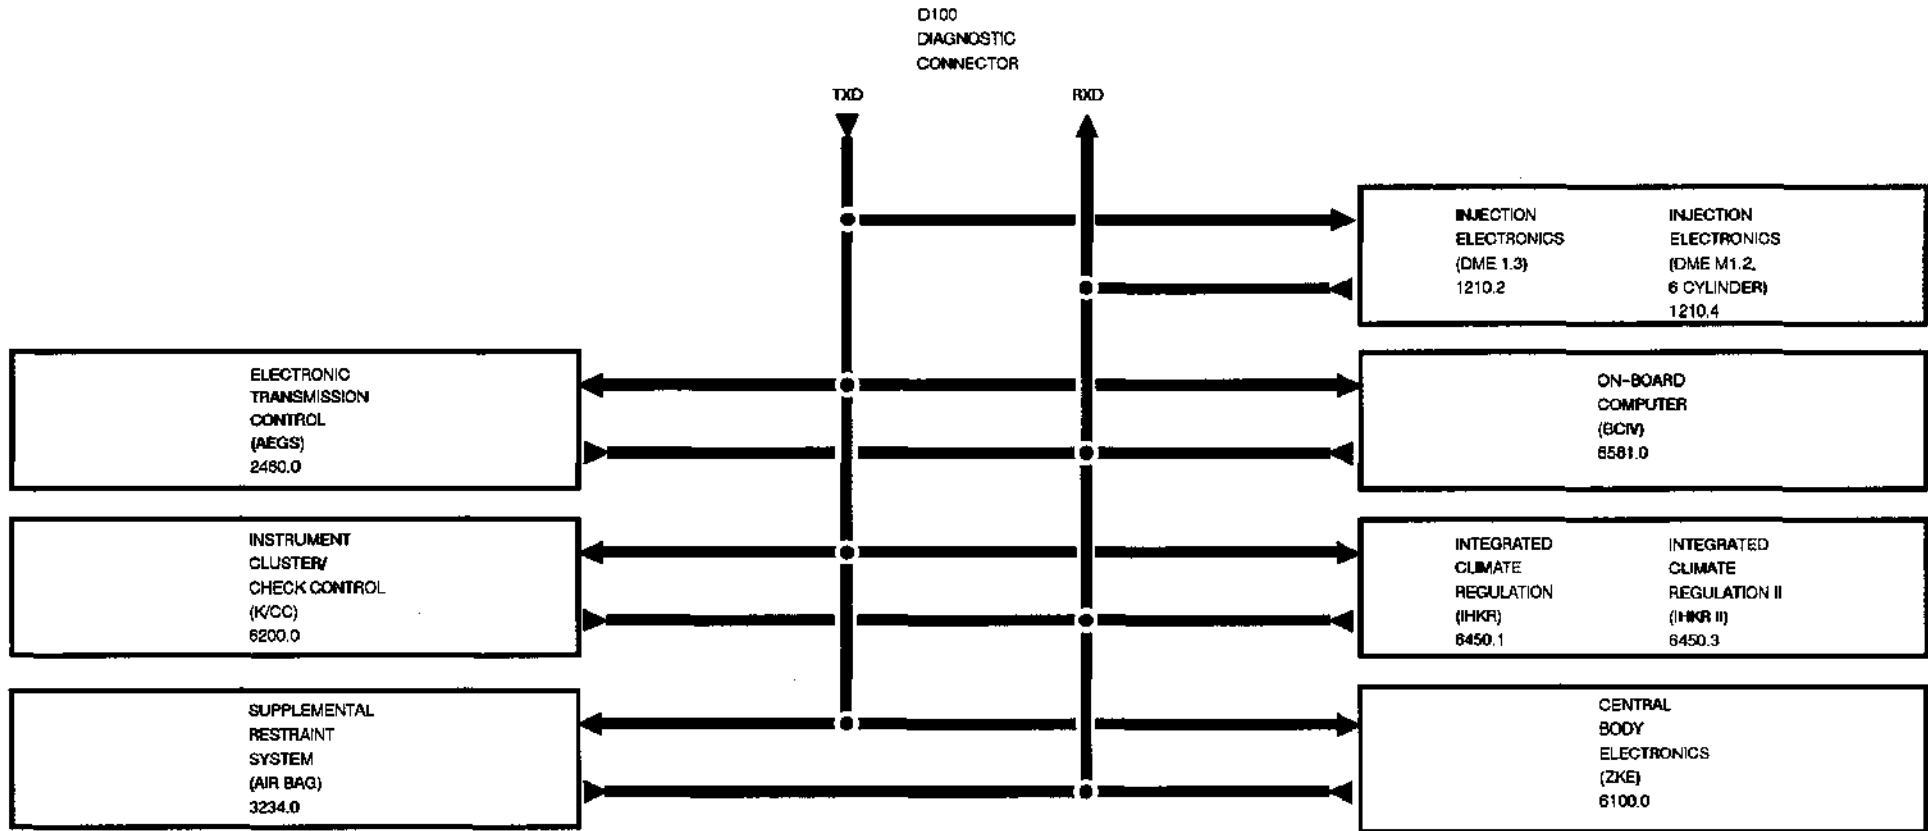




DIAGNOSTIC LINK

TXD

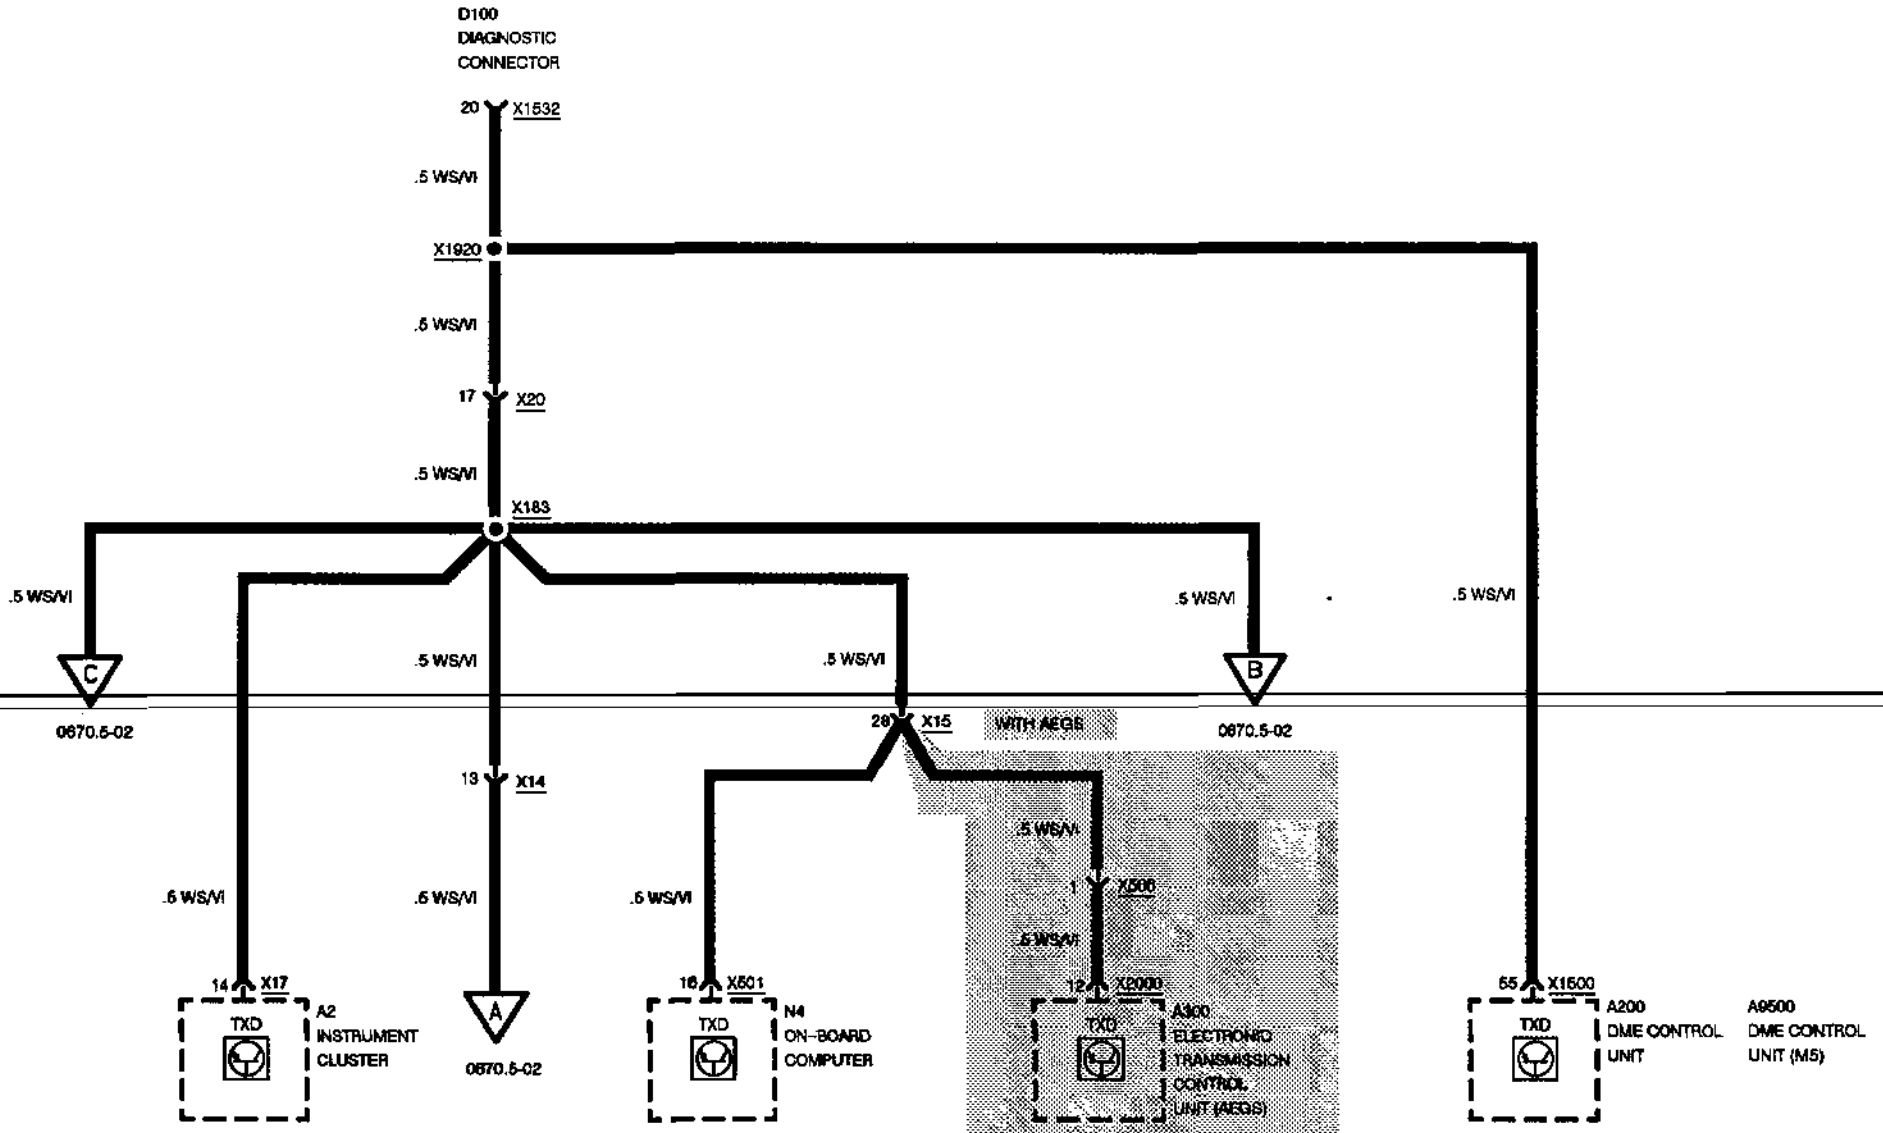

BMW 5 **DIAGNOSTIC LINK**
TXD

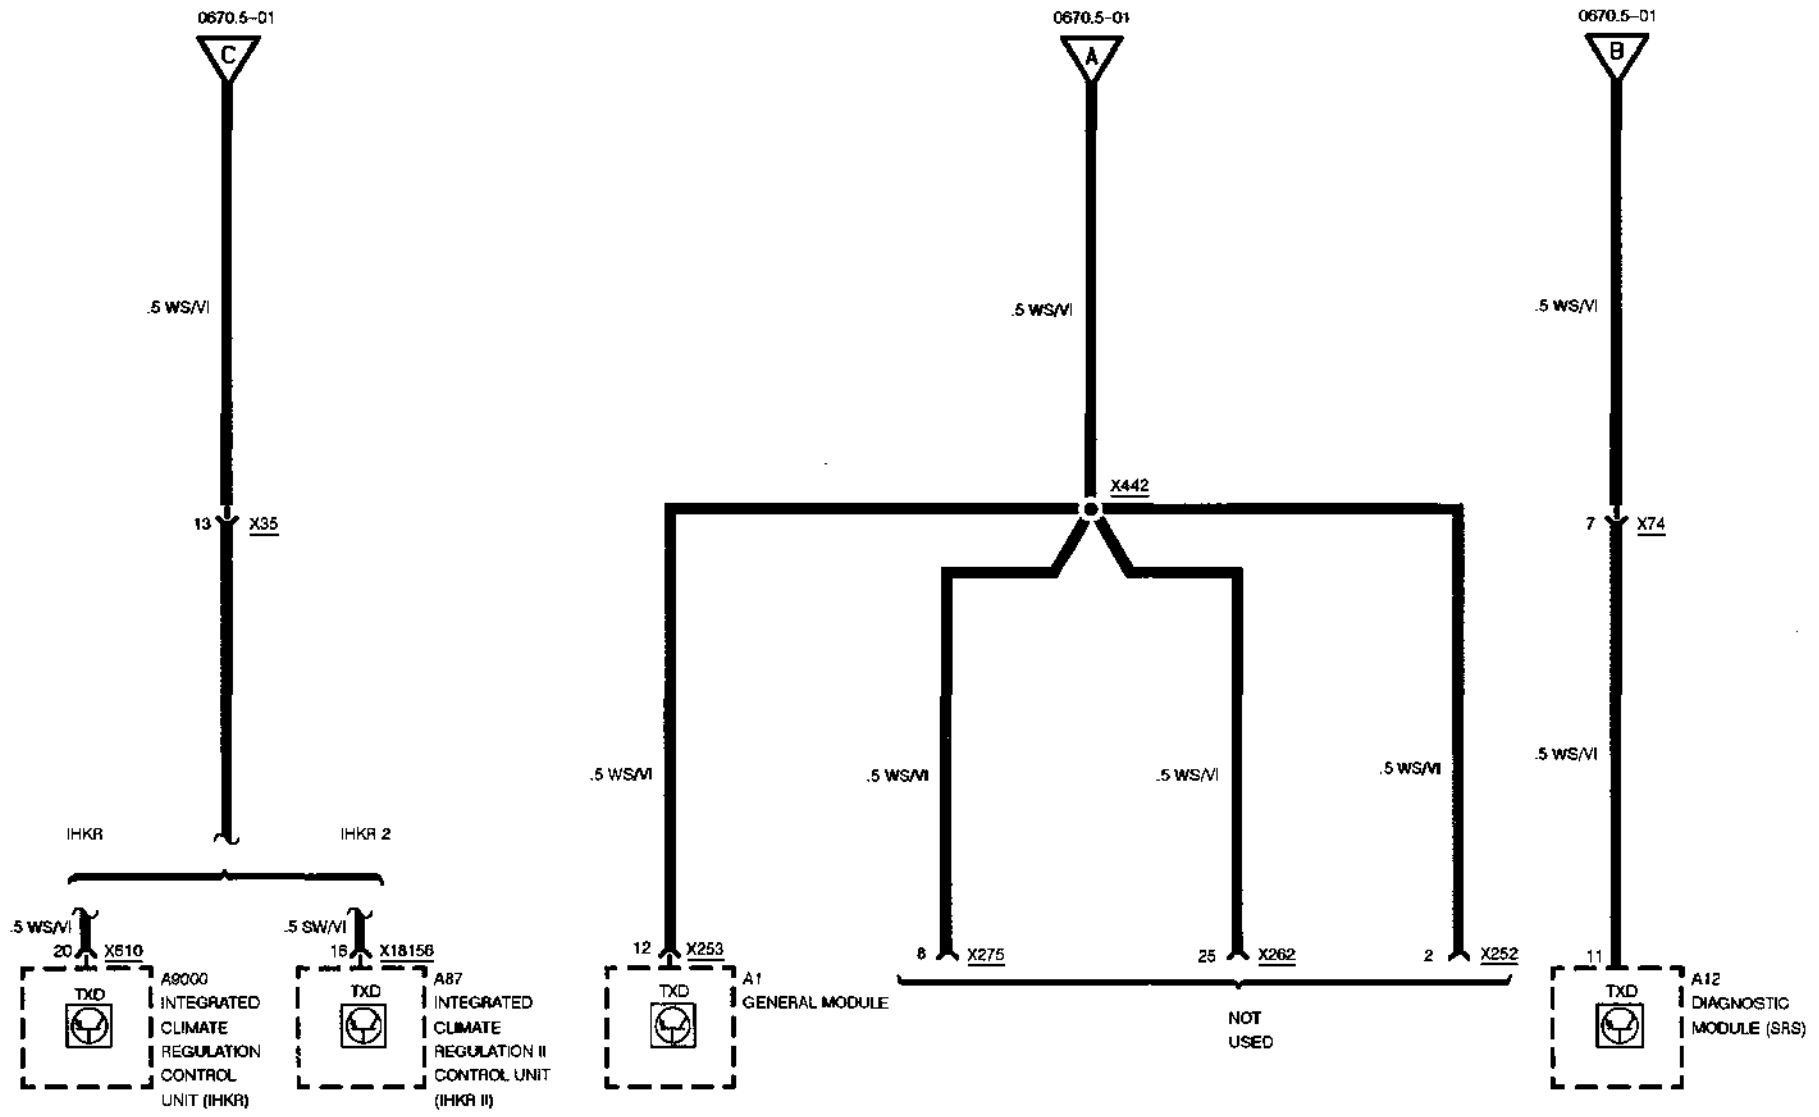

07/90


0670.5-02

1990



DIAGNOSTIC LINK

RXD

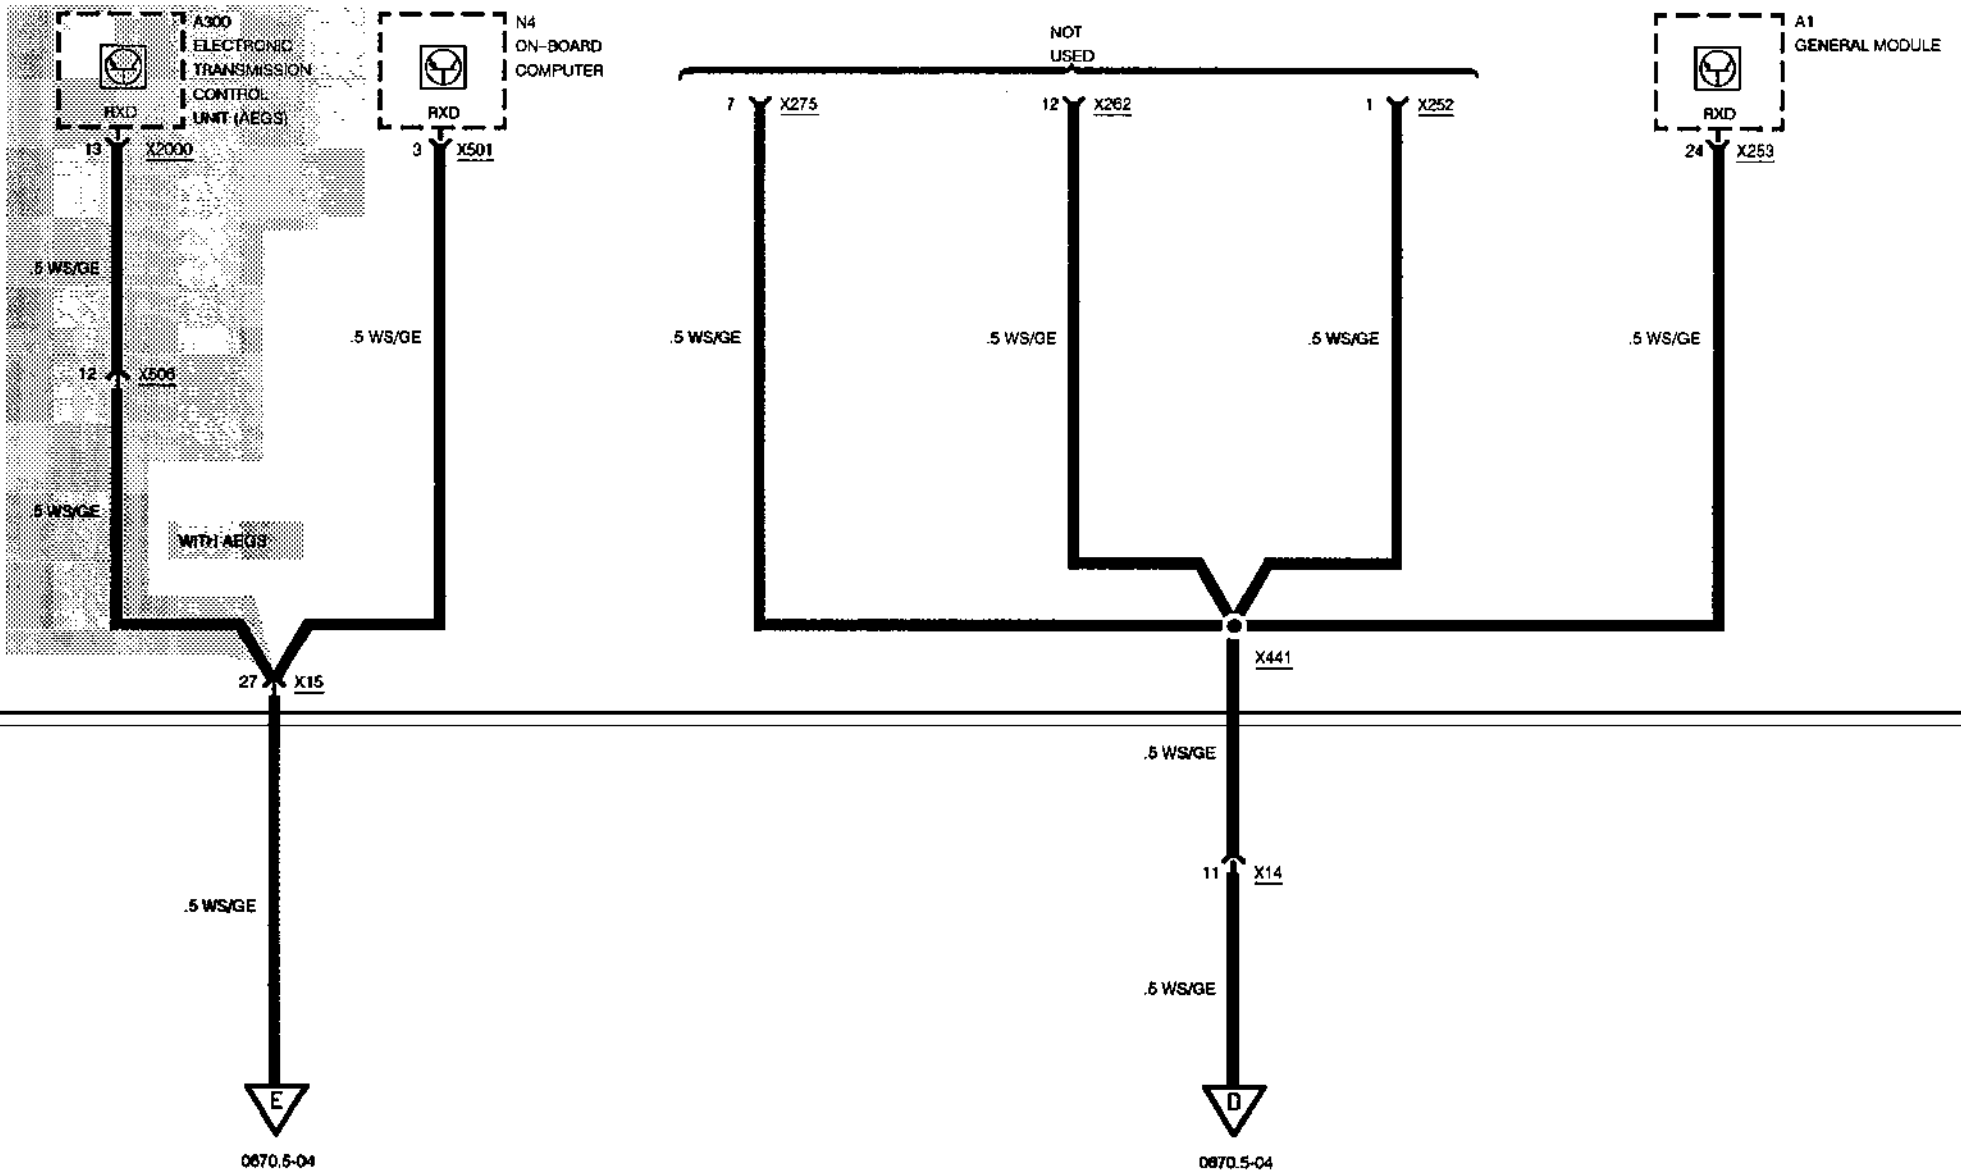

06/89


0670.5-03

1989



DIAGNOSTIC LINK


RXD

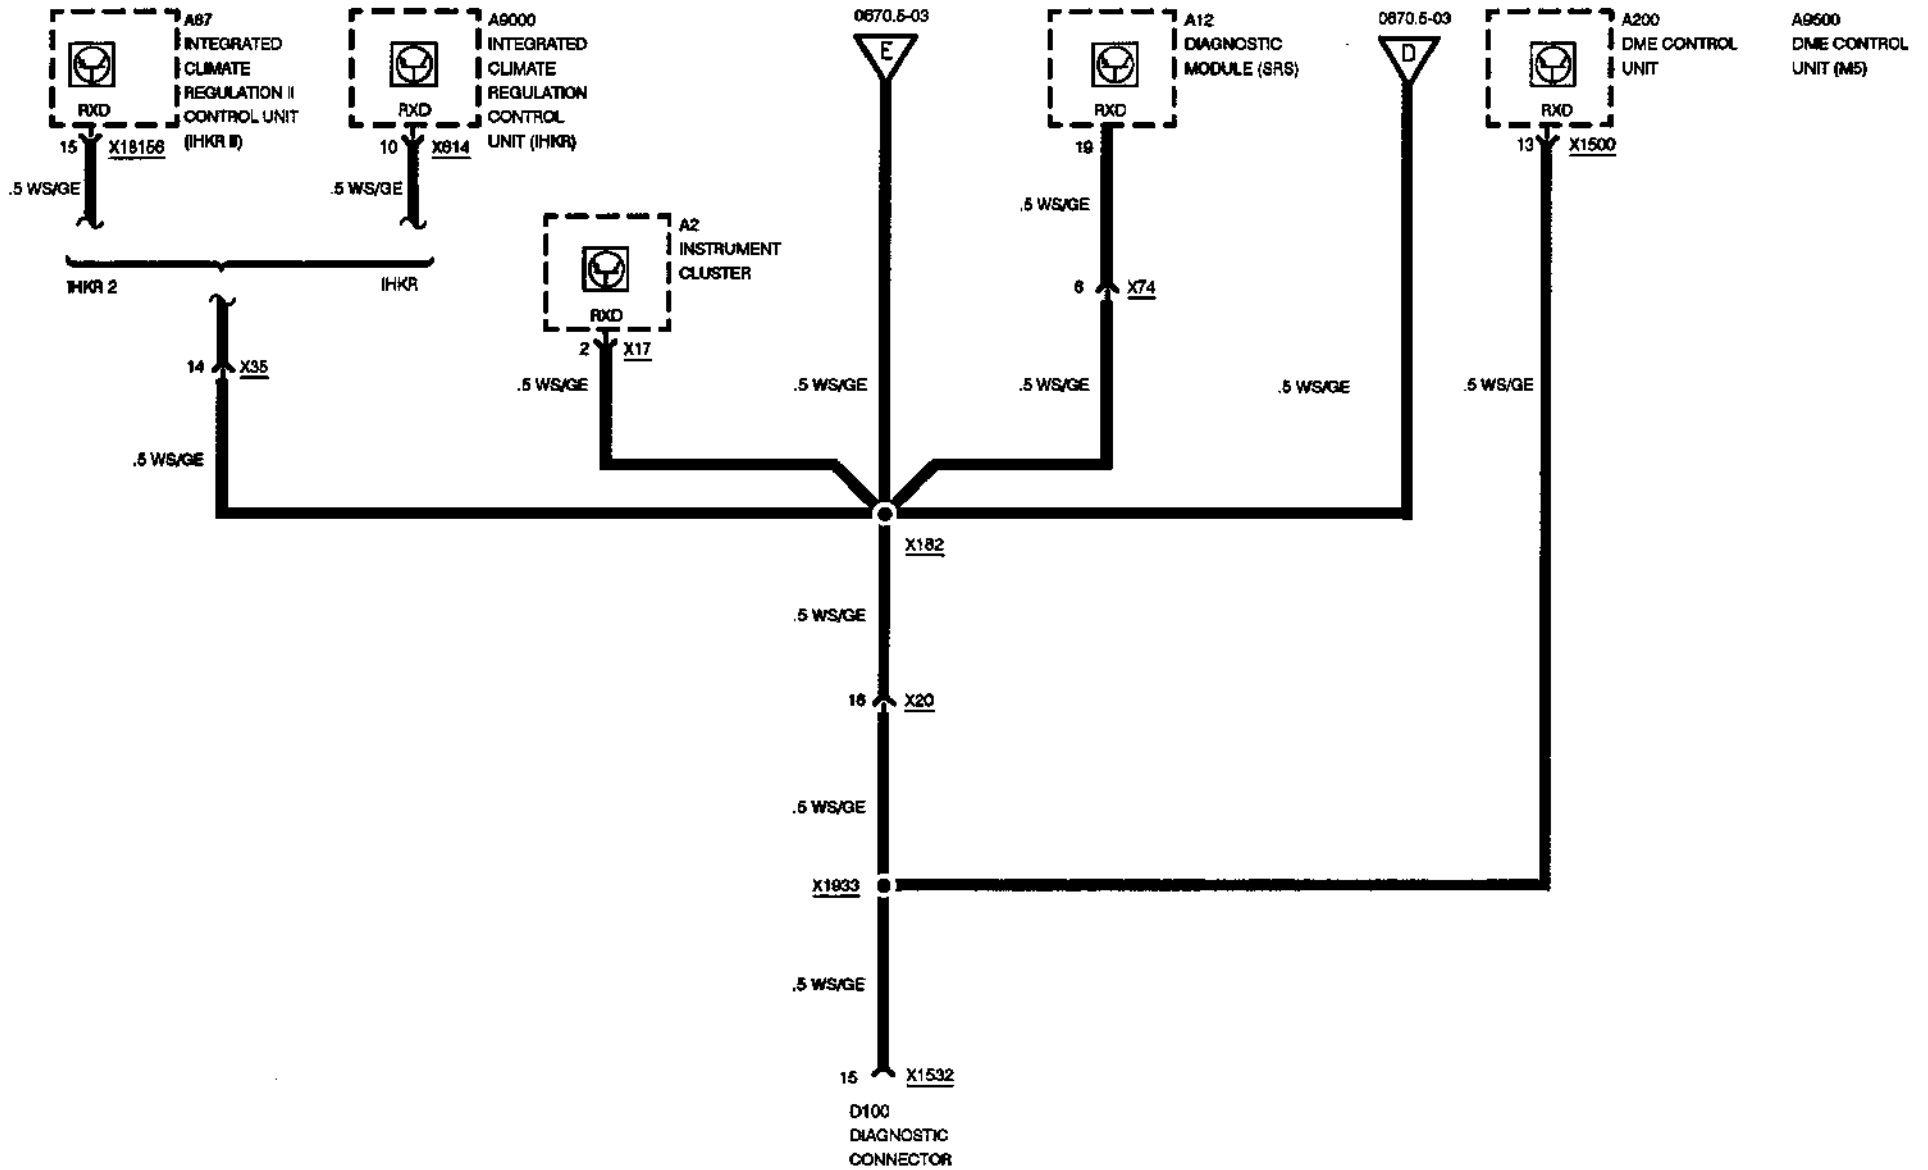



DIAGNOSTIC LINK


DIAGNOSTIC CONNECTOR PINS 1, 18 AND 19

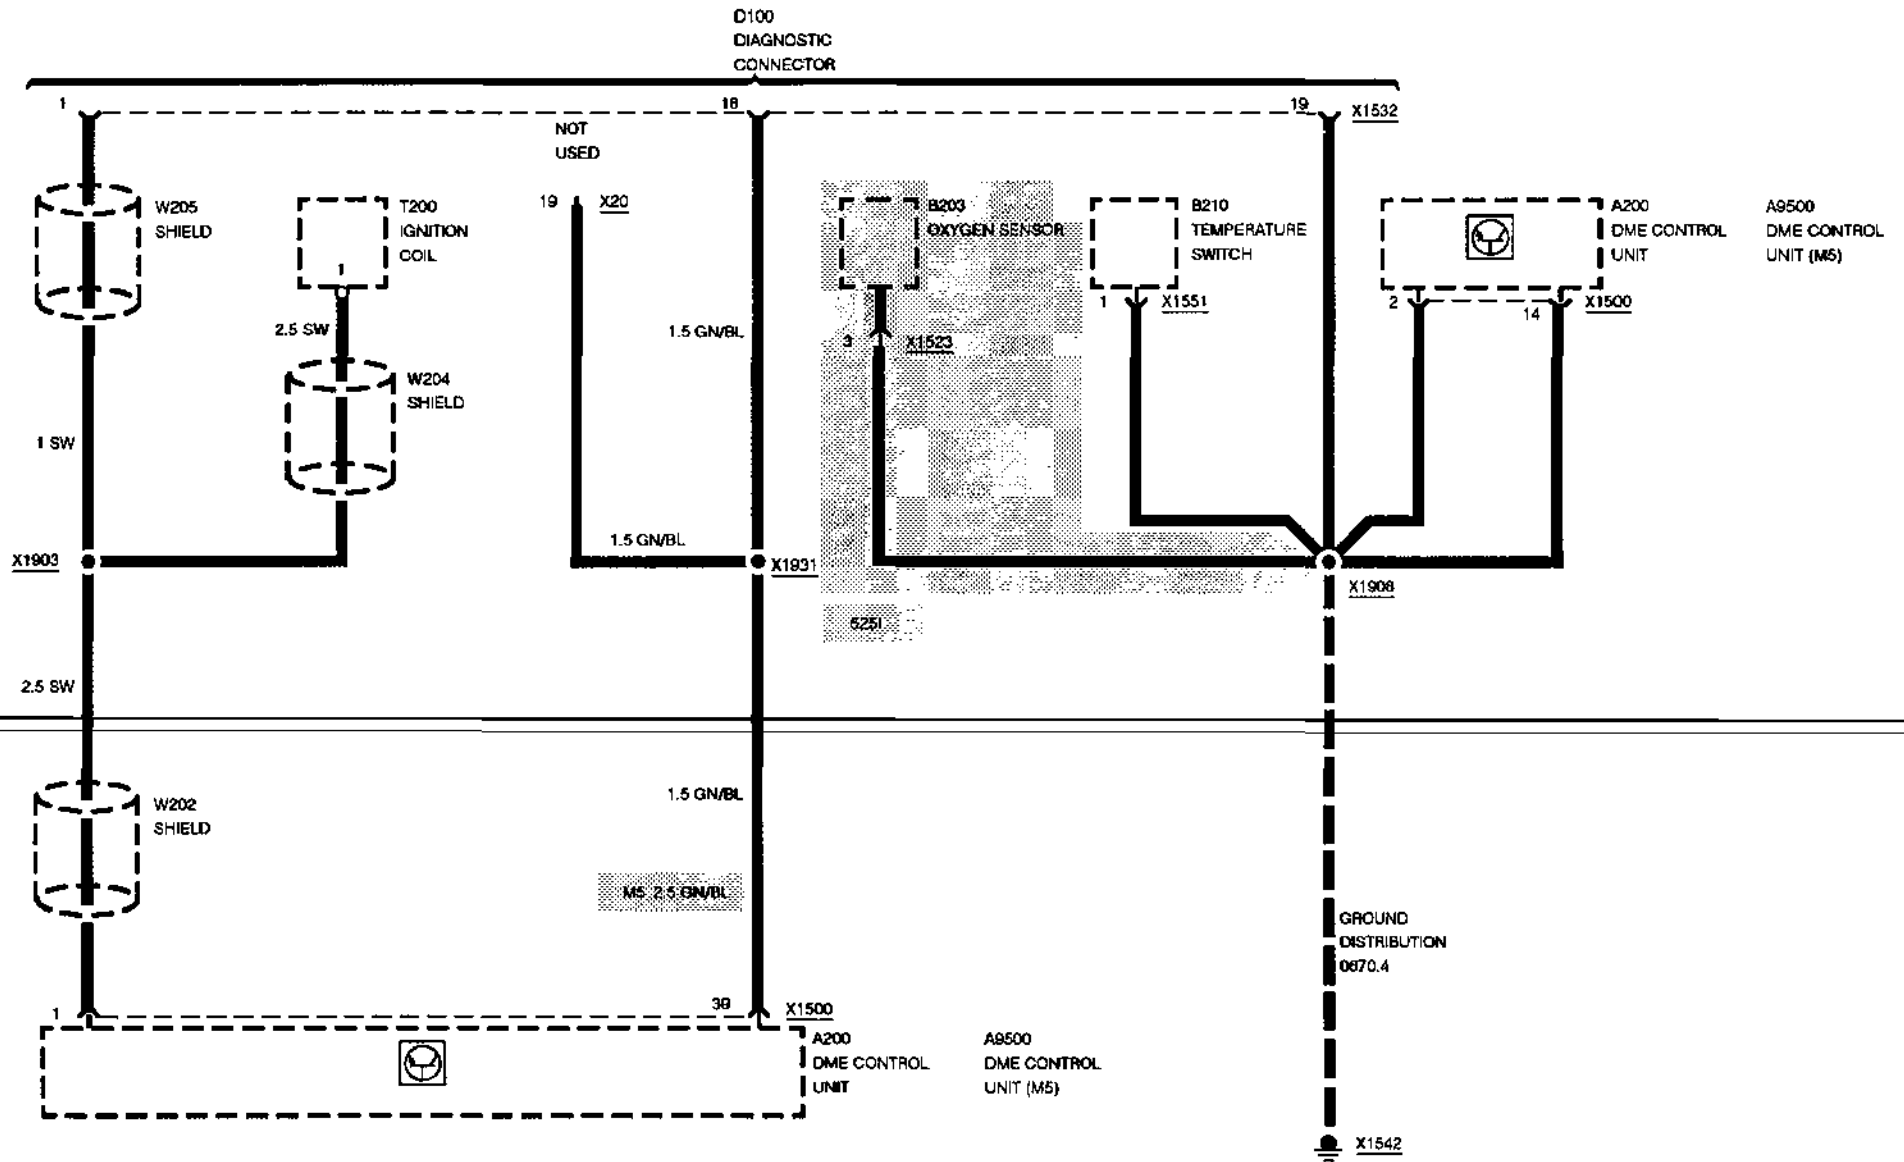



DIAGNOSTIC LINK



DIAGNOSTIC CONNECTOR PINS 7, 11, 14 AND 16

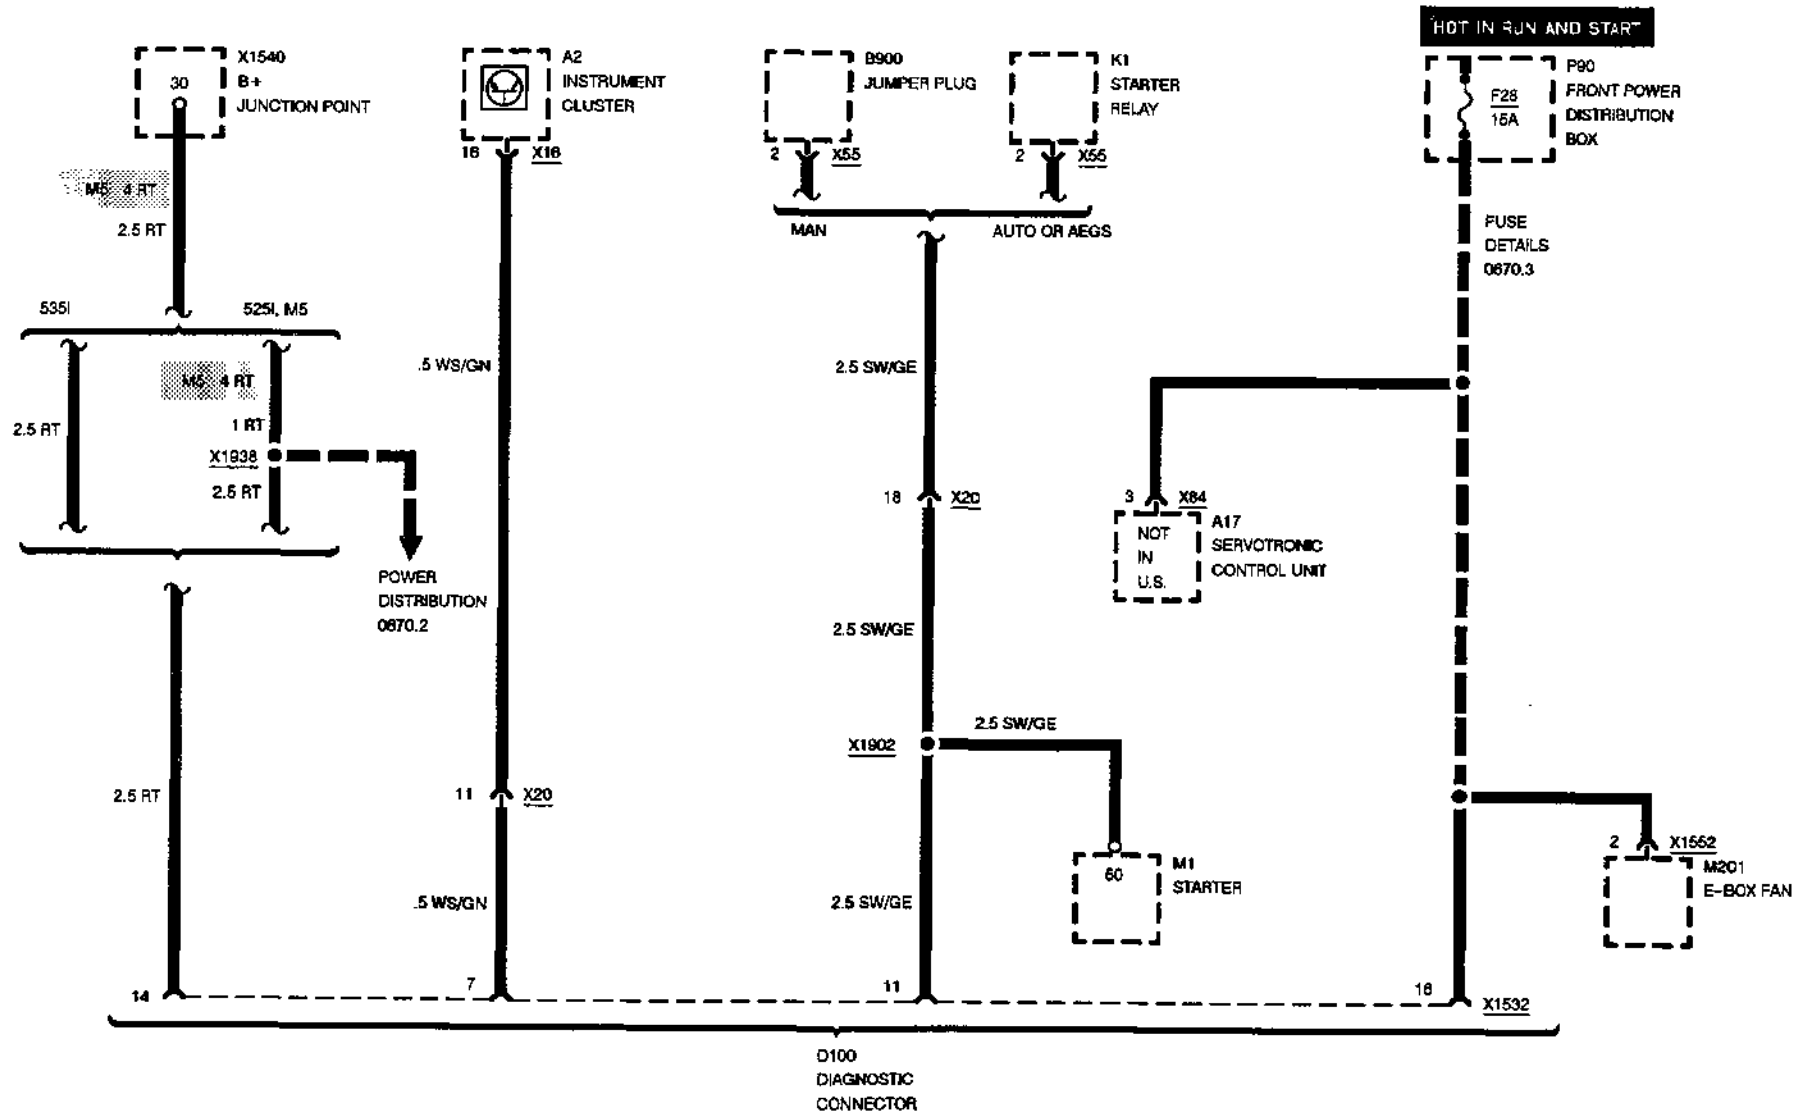




DIAGNOSTIC LINK

DIAGNOSTIC CONNECTOR PINS 4 AND 12

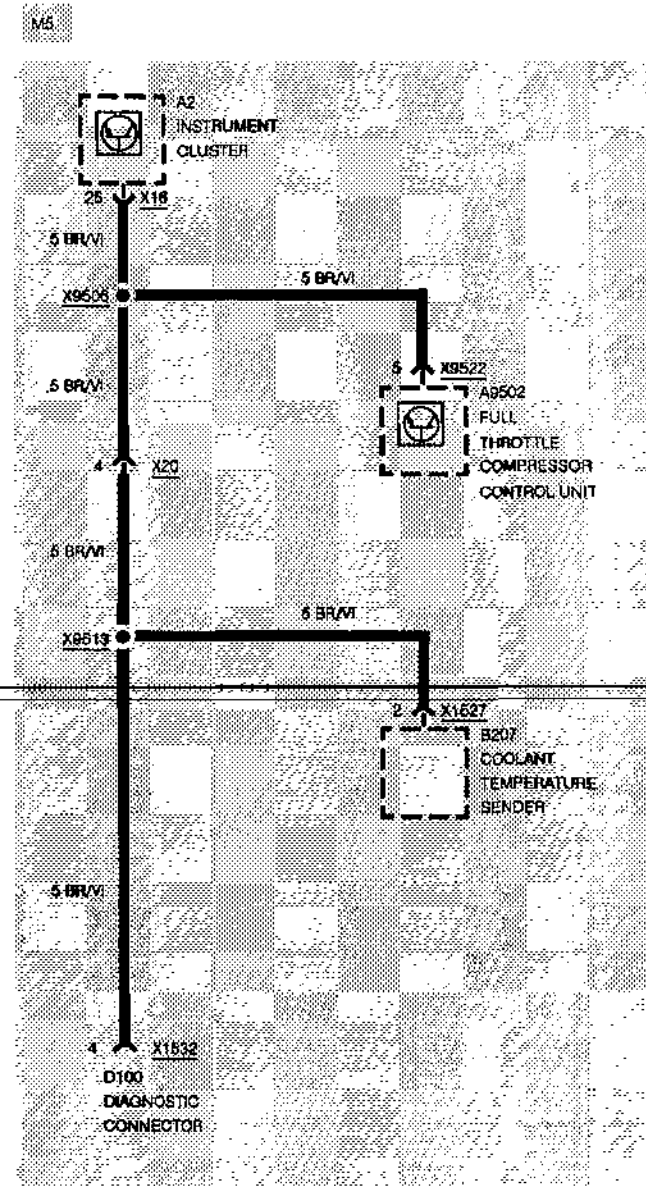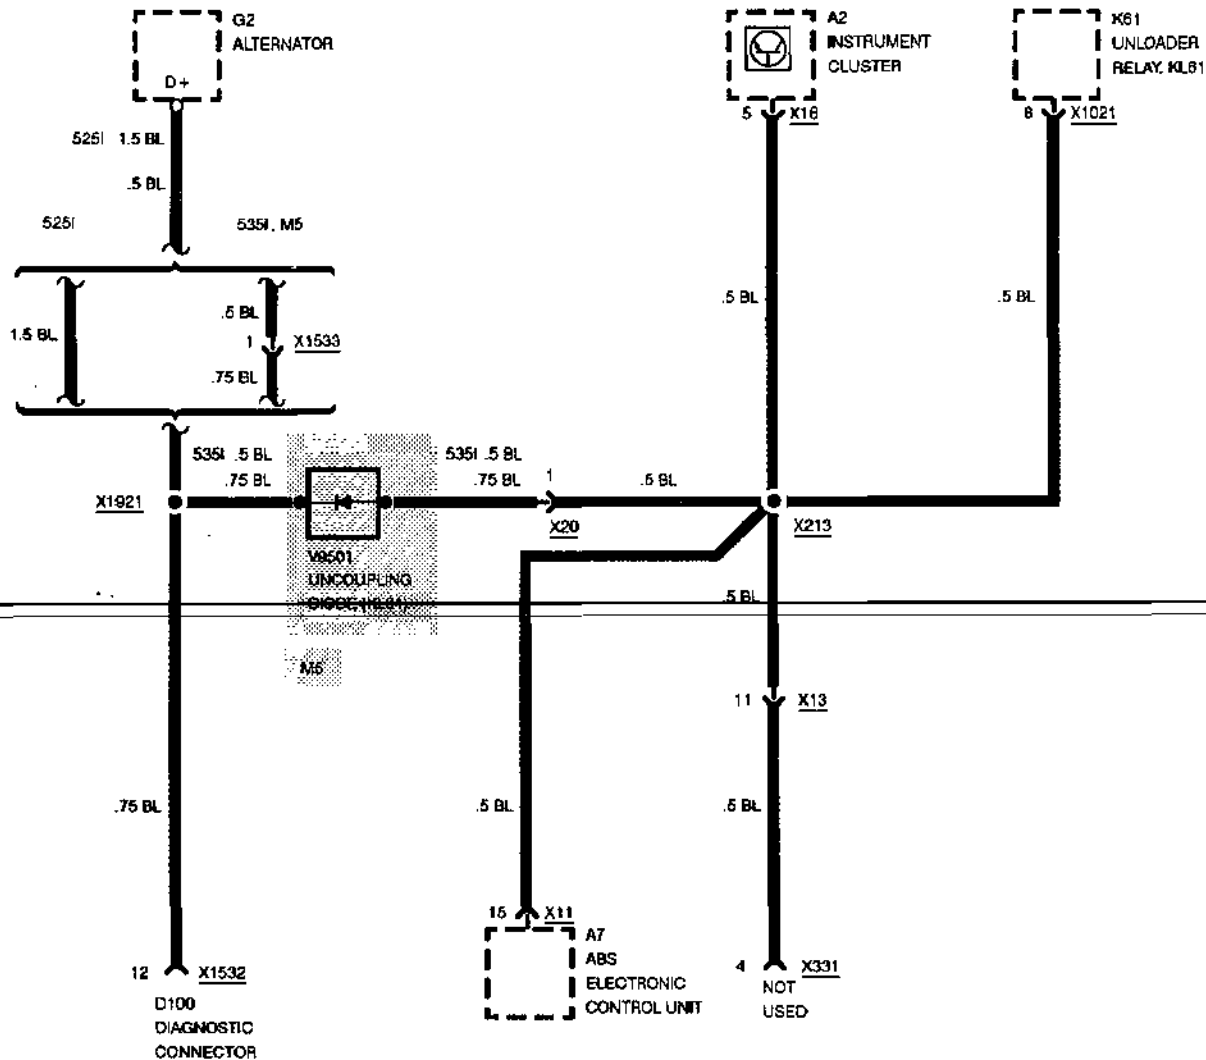




DIAGNOSTIC LINK

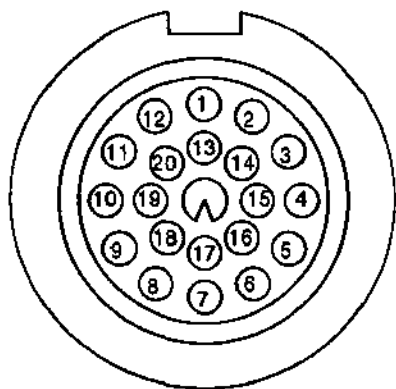


Pin number	Terminal number	Terminal description	Wire color
1	1	Ignition coil	SW
2	-	Not used	
3	-	Not used	
4	FT	Voltage: Temperature sensor	BR/VI
5	-	Not used	
6	-	Not used	
7	SI	Service interval reset	WS/GN
8	-	Not used	
10	-	Not used	
11	50	Voltage: Ignition switch in start	SW/GE
12	61 (D +)	Alternator charge indicator	BL
13	-	Not used	
14	30	Voltage: Hot at all times	RT
15	RXD	Receive	WS/GE
16	15S	Voltage: Ignition switch in run	GN/WS
17	-	Not used	GN/BL
18	-	Program select for DME control unit	BR
19	31	Ground	BR
20	TXD	Transmit	WS/VI

BMW 5 INJECTION ELECTRONICS (DME 1.3)

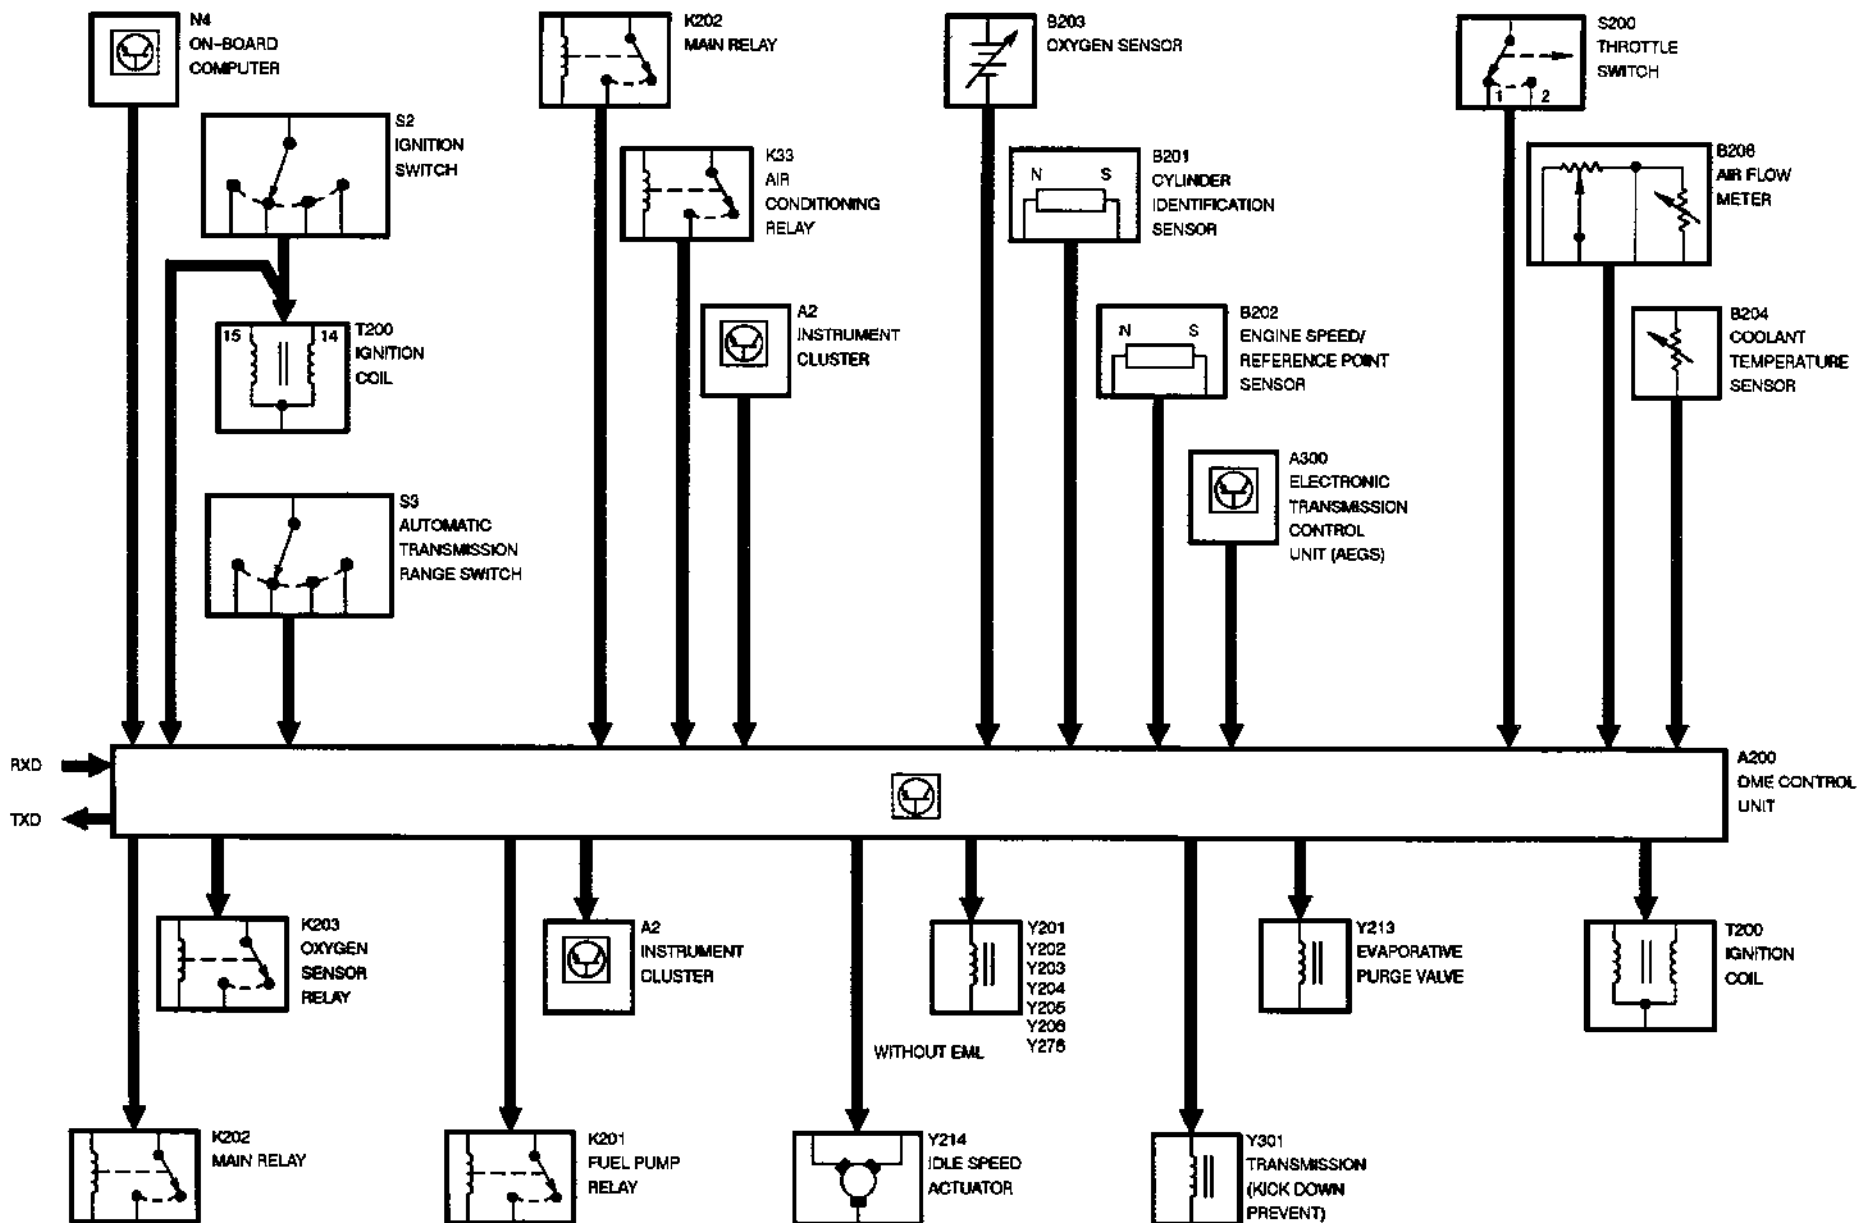



1210.2

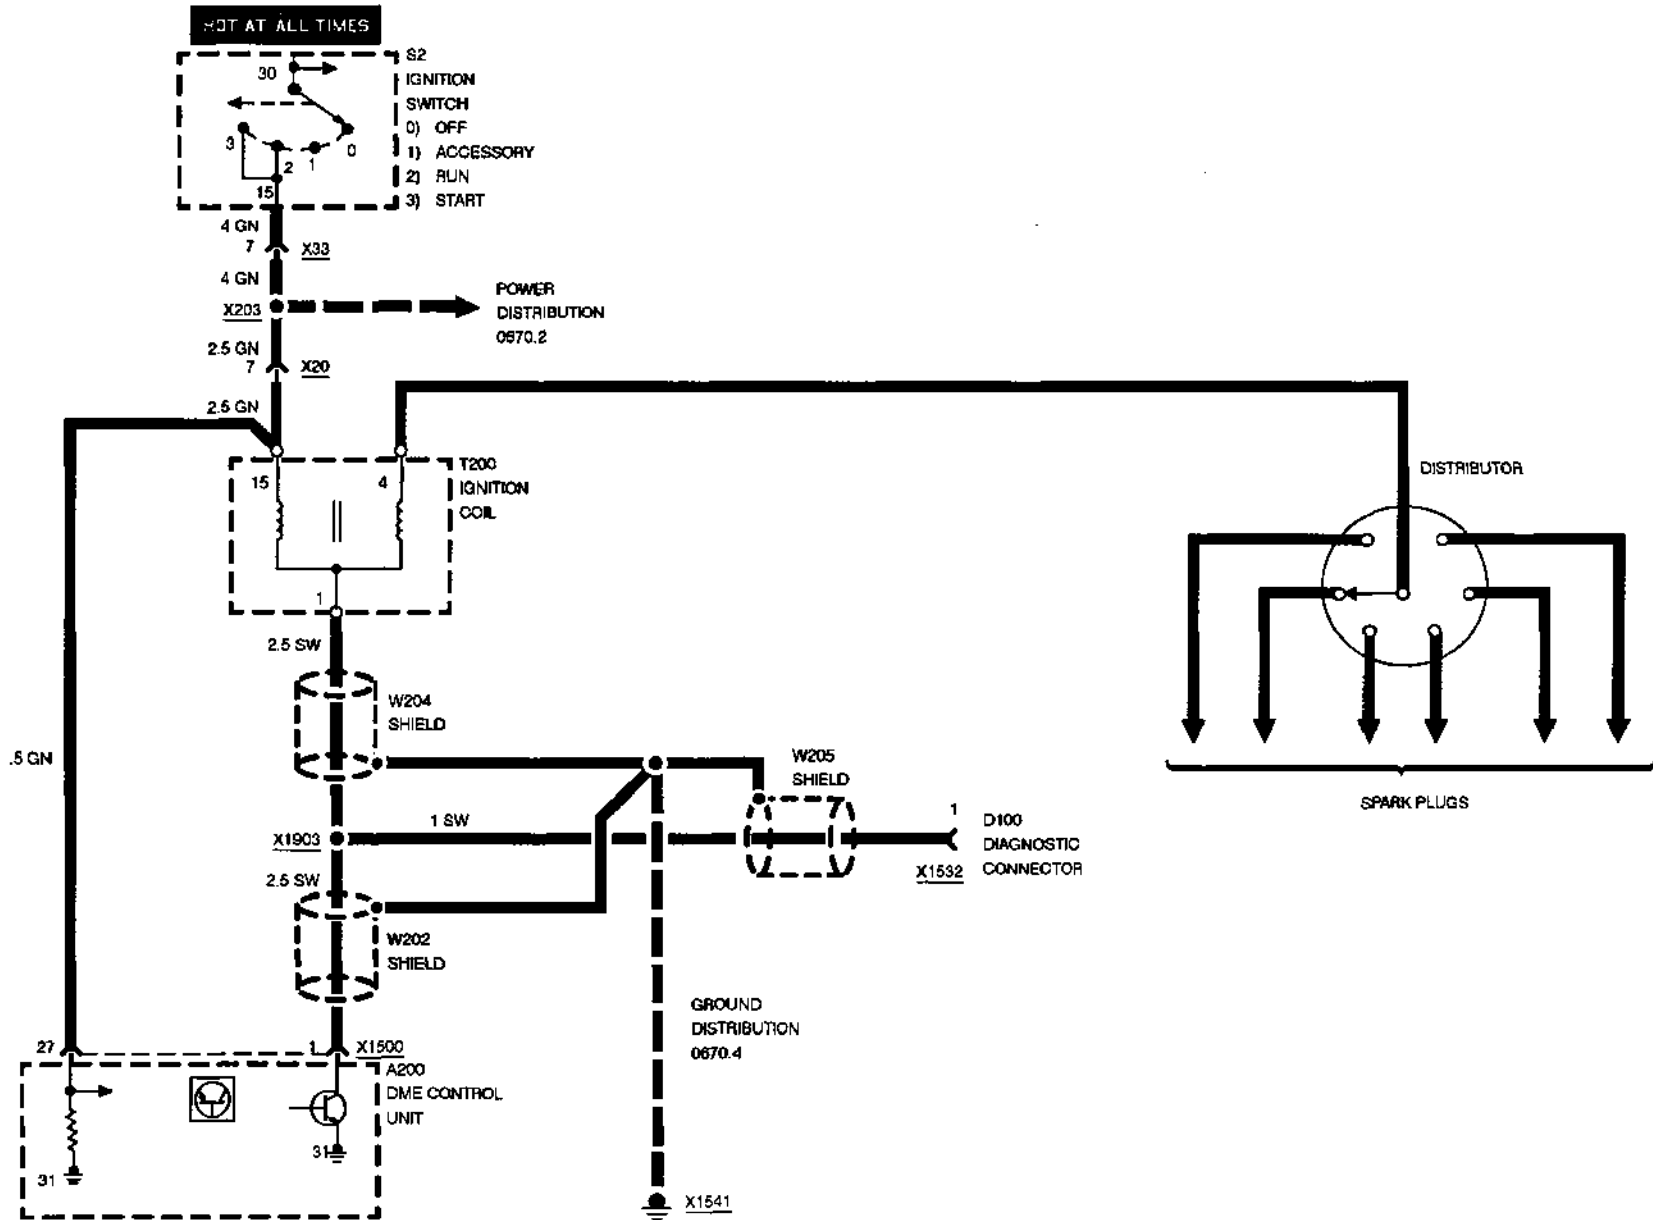




INJECTION ELECTRONICS (DME 1.3)

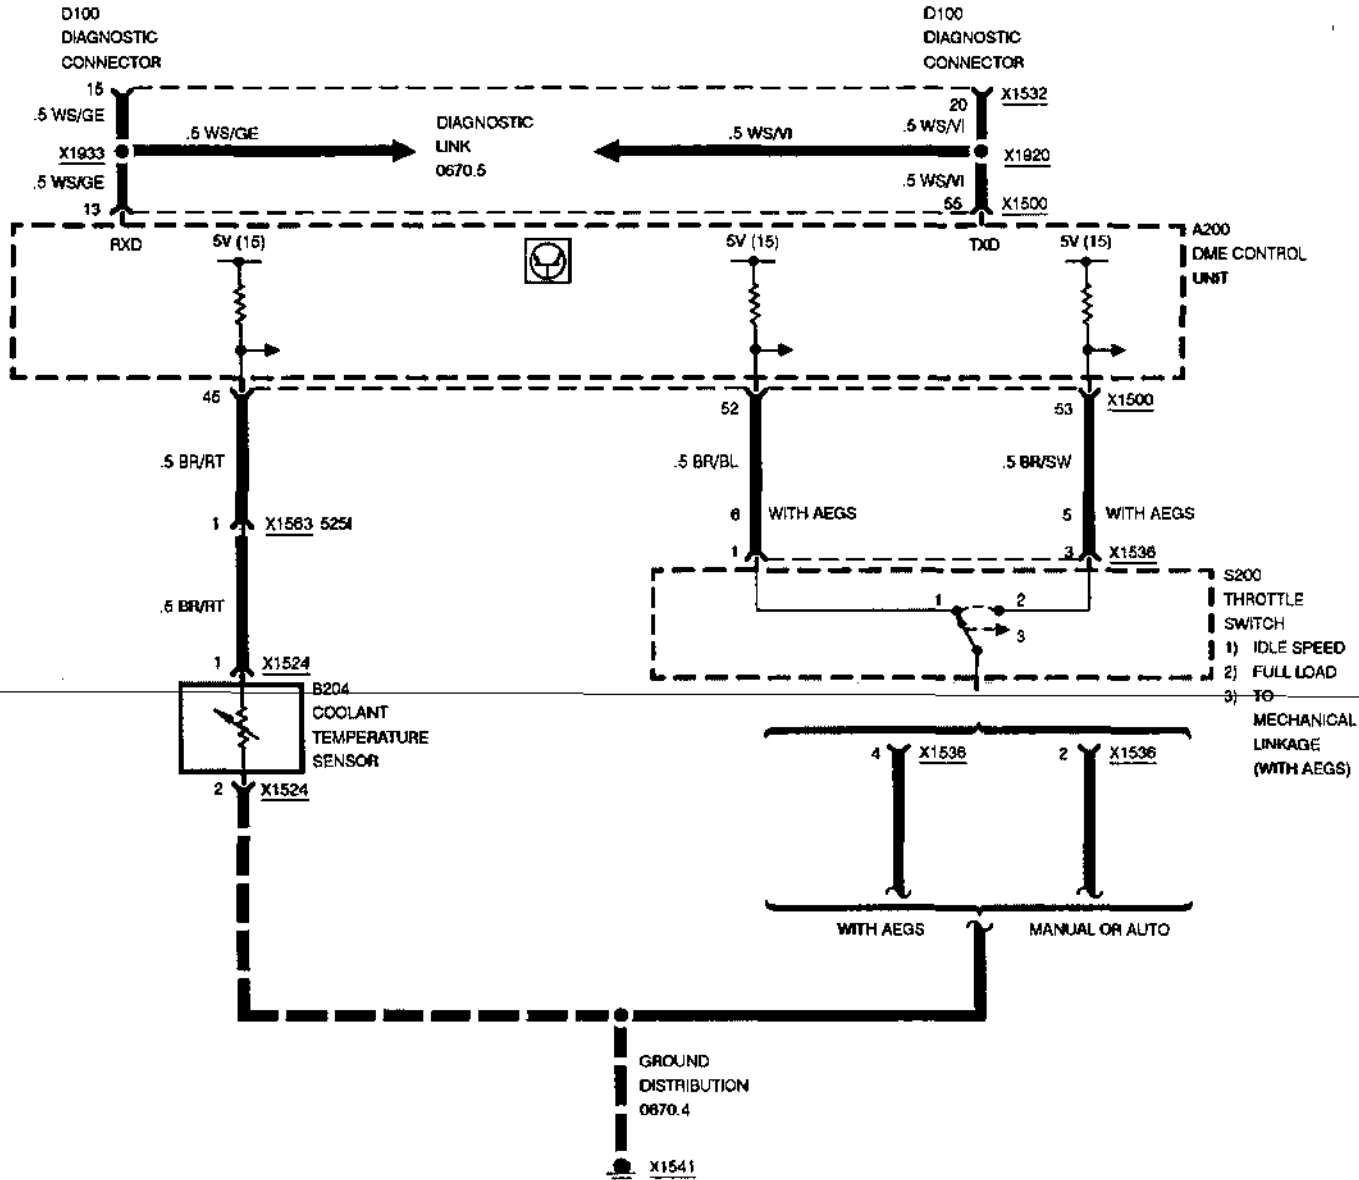

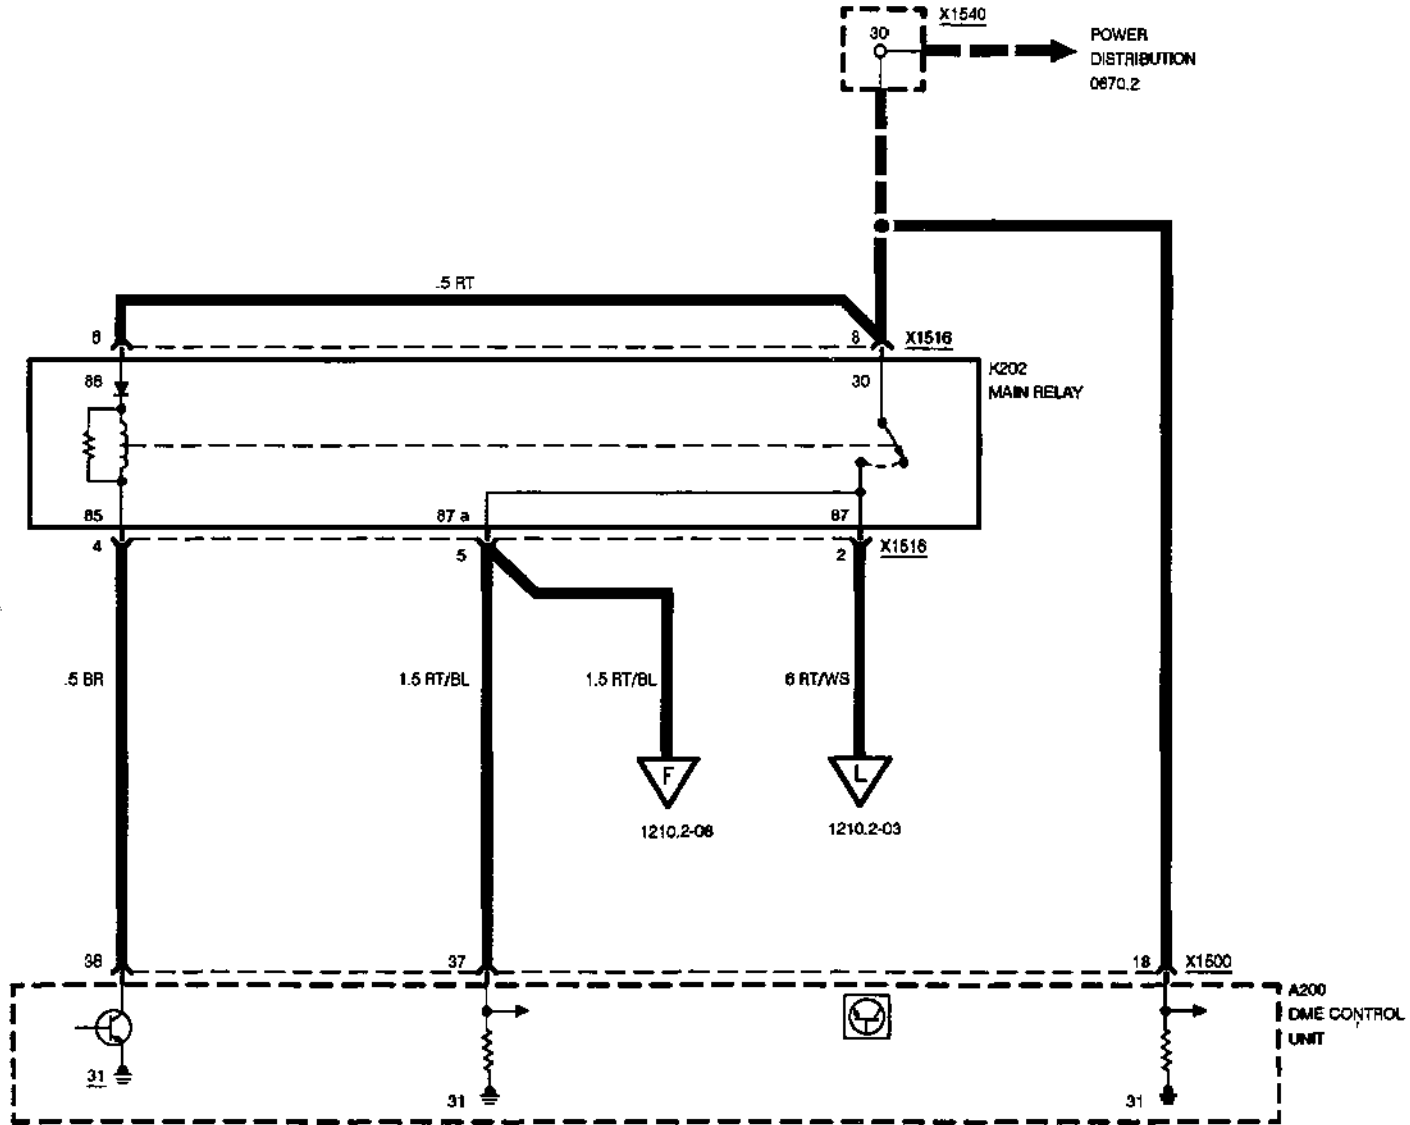


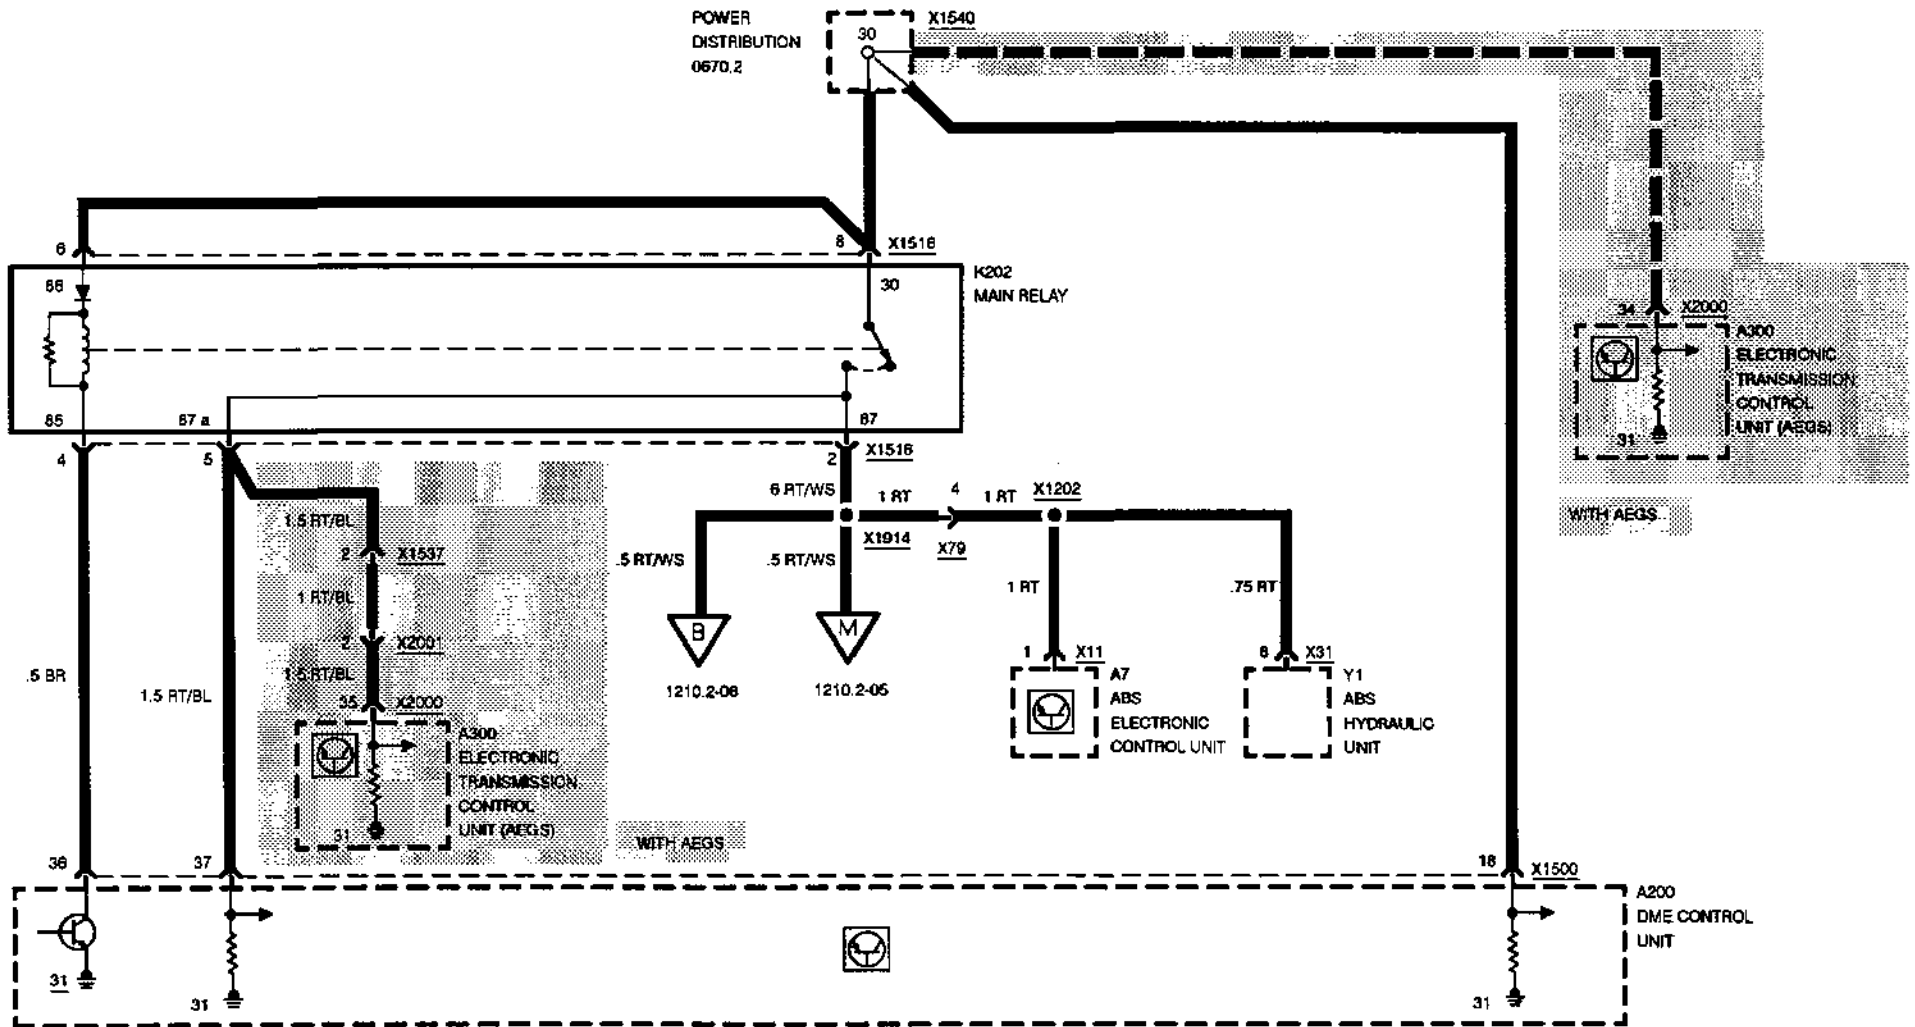



INJECTION ELECTRONICS (DME 1.3) FUEL INJECTORS

535i

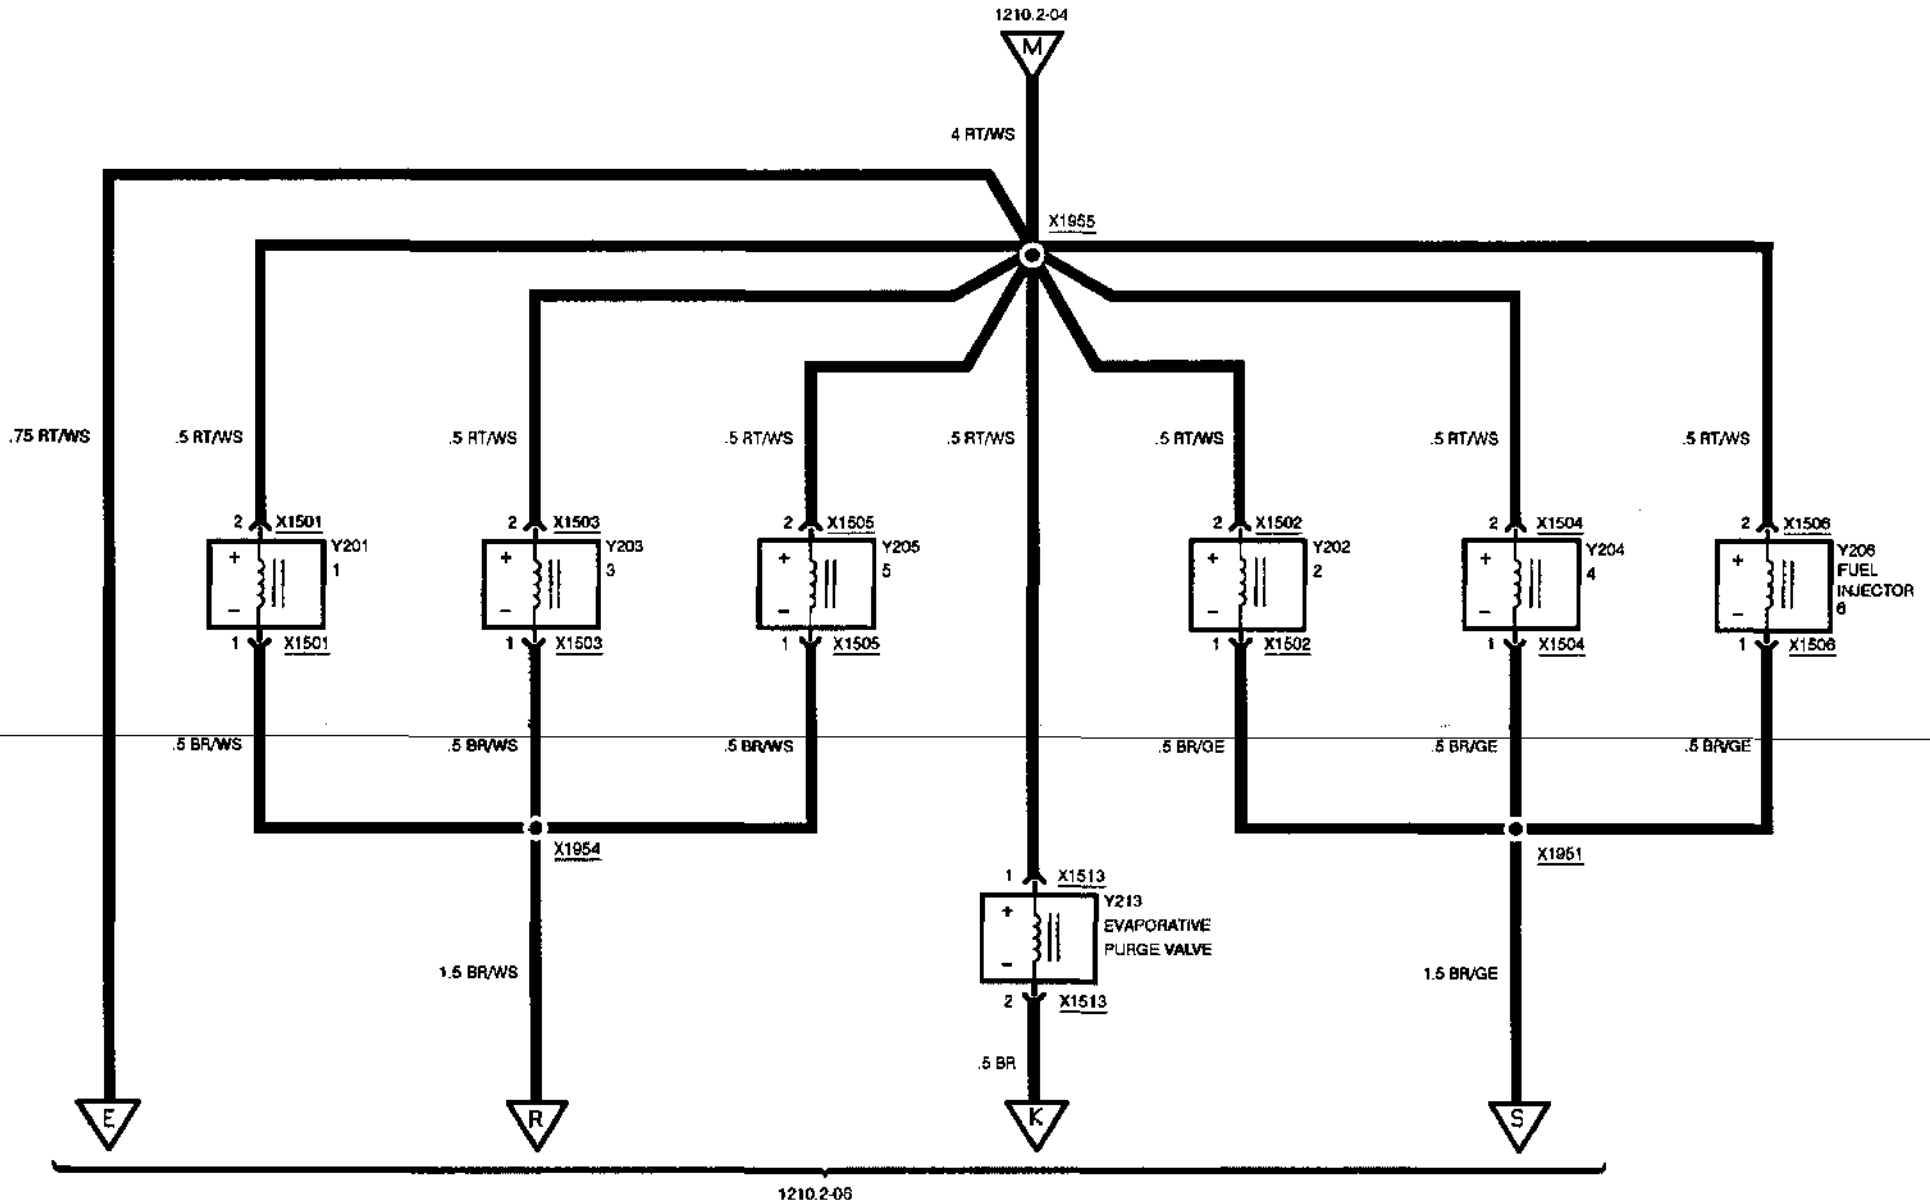

1210.2-06

06/89


1210.2-05

1989




INJECTION ELECTRONICS (DME 1.3)

1210.2-03
1210.2-05

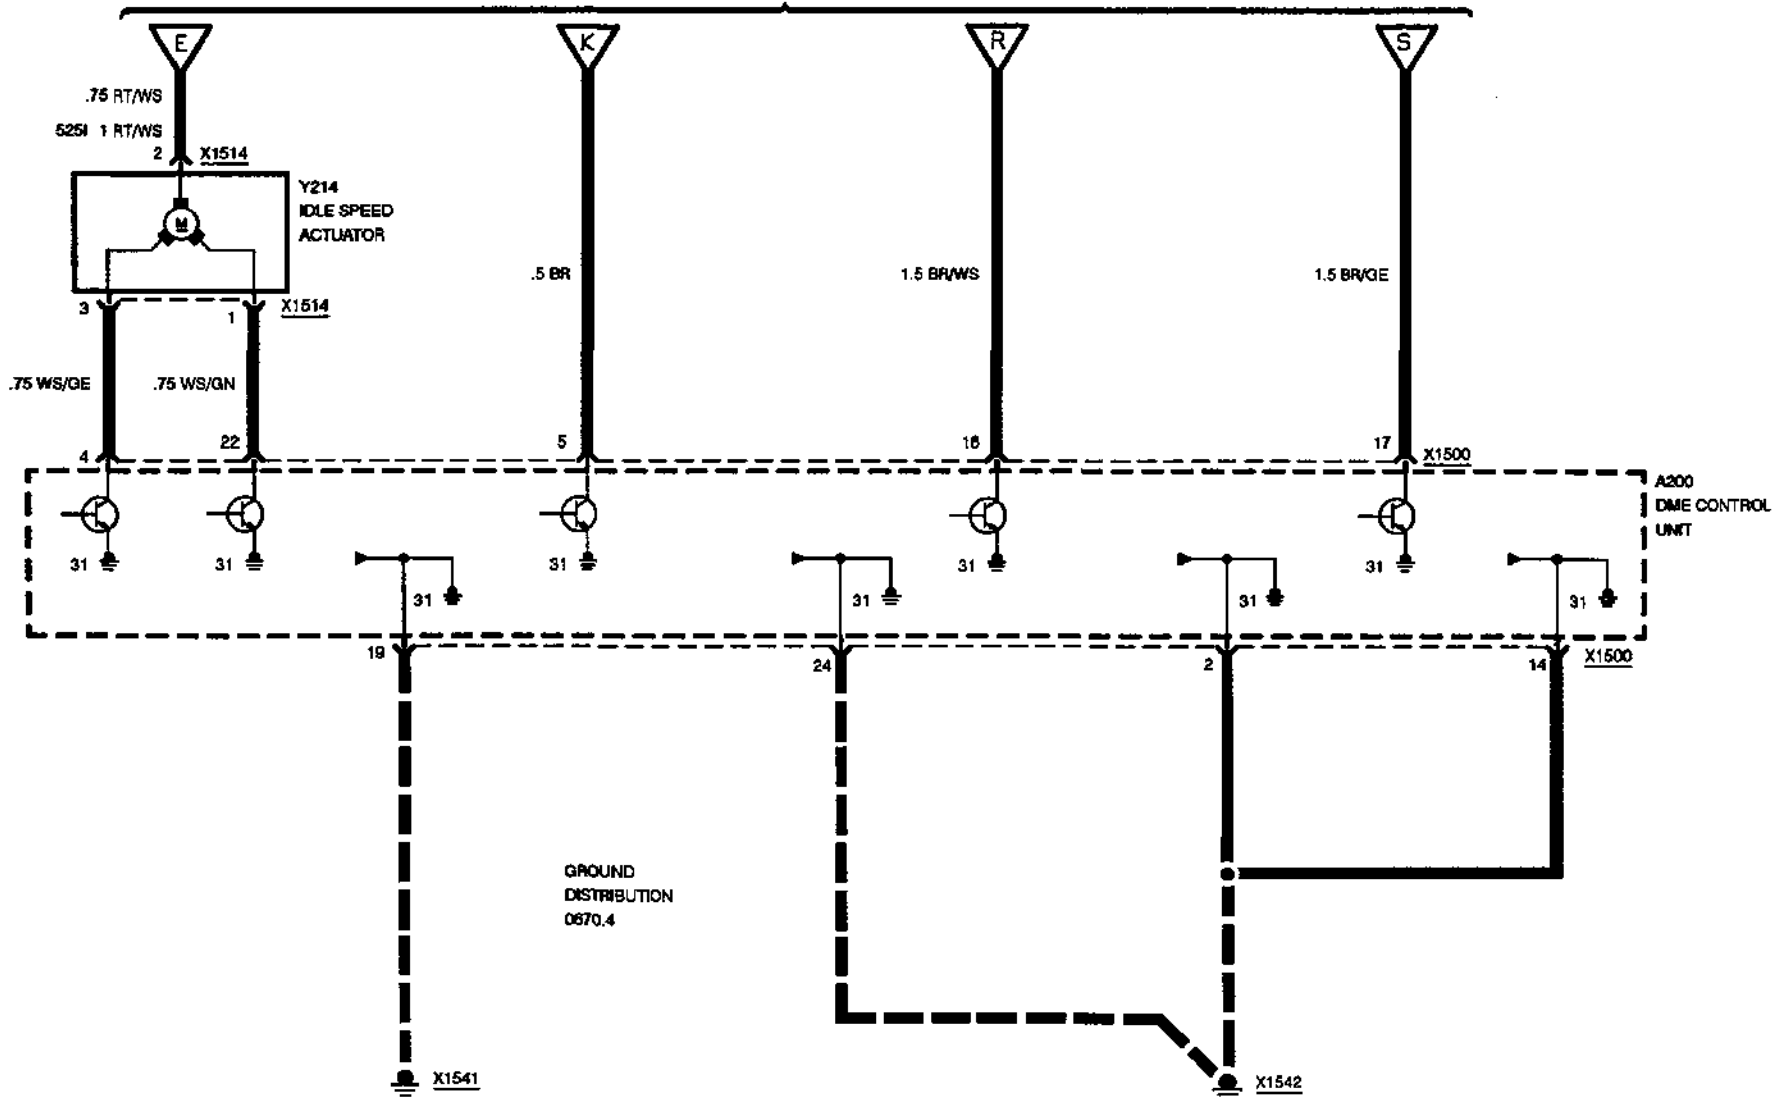





INJECTION ELECTRONICS (DME 1.3)

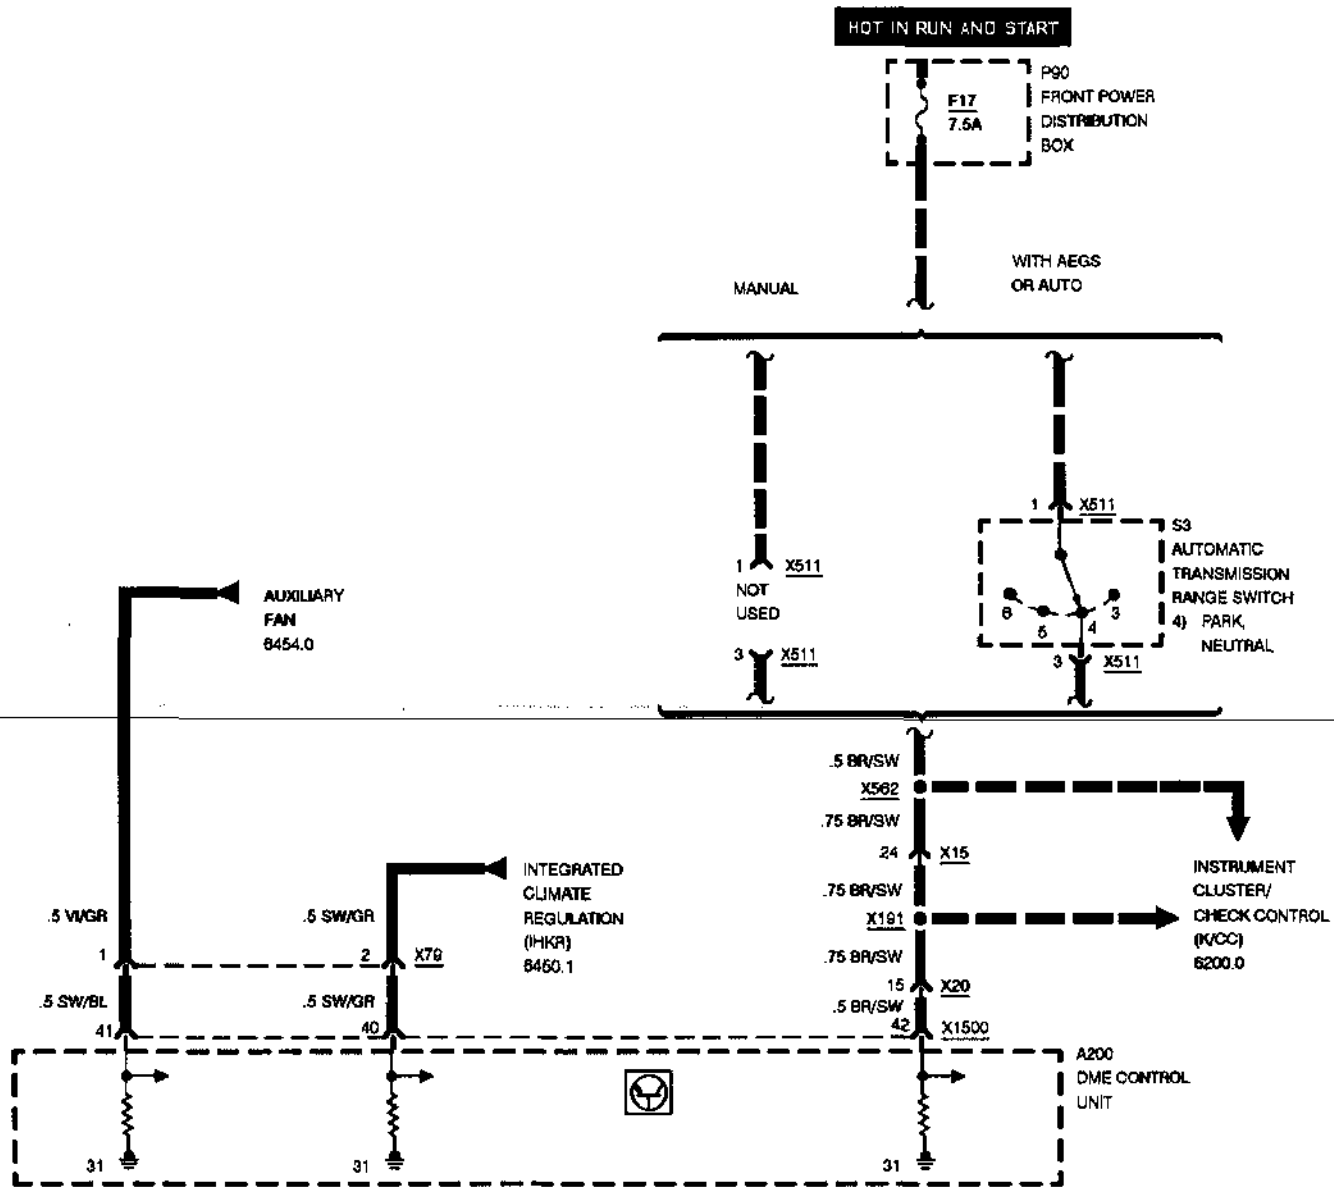




INJECTION ELECTRONICS (DME 1.3)

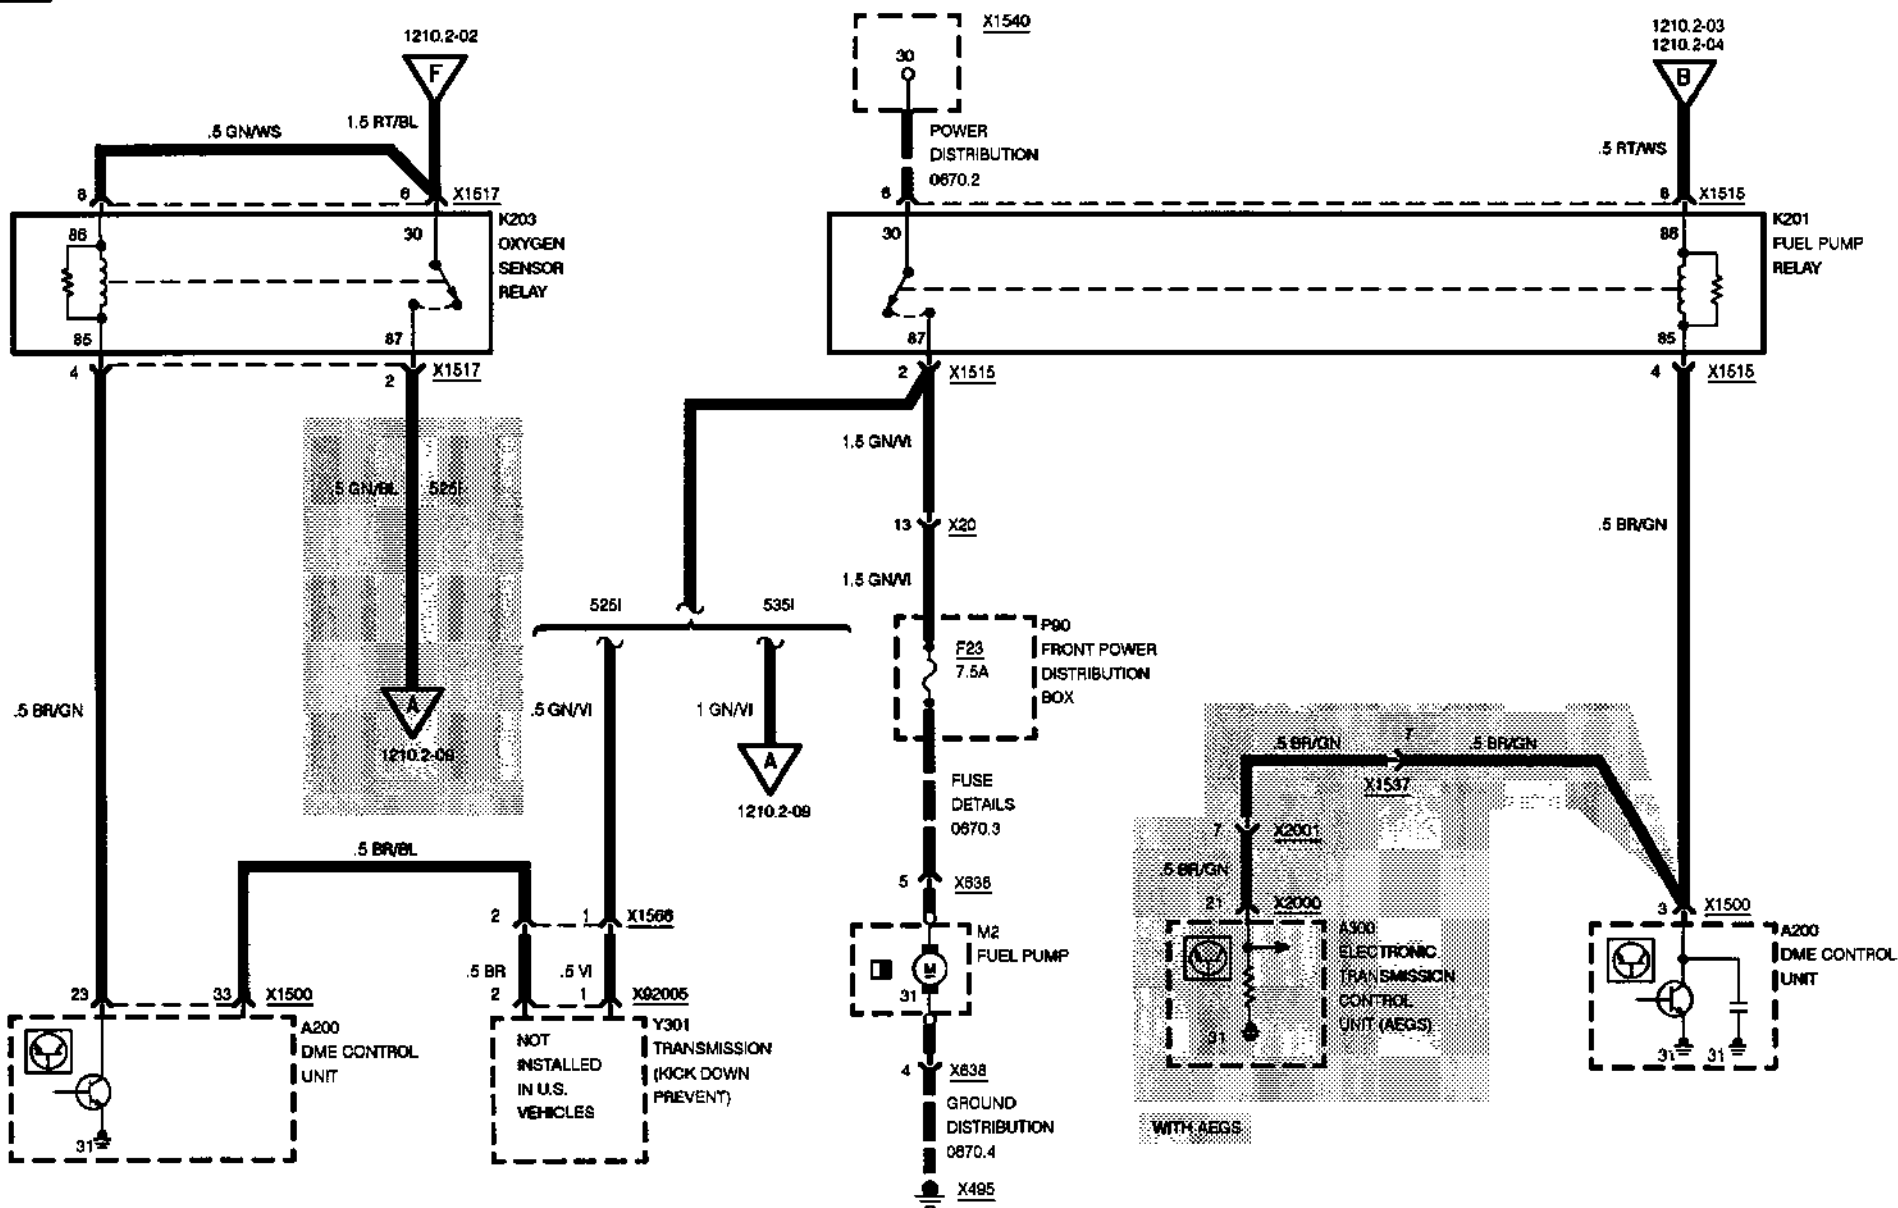

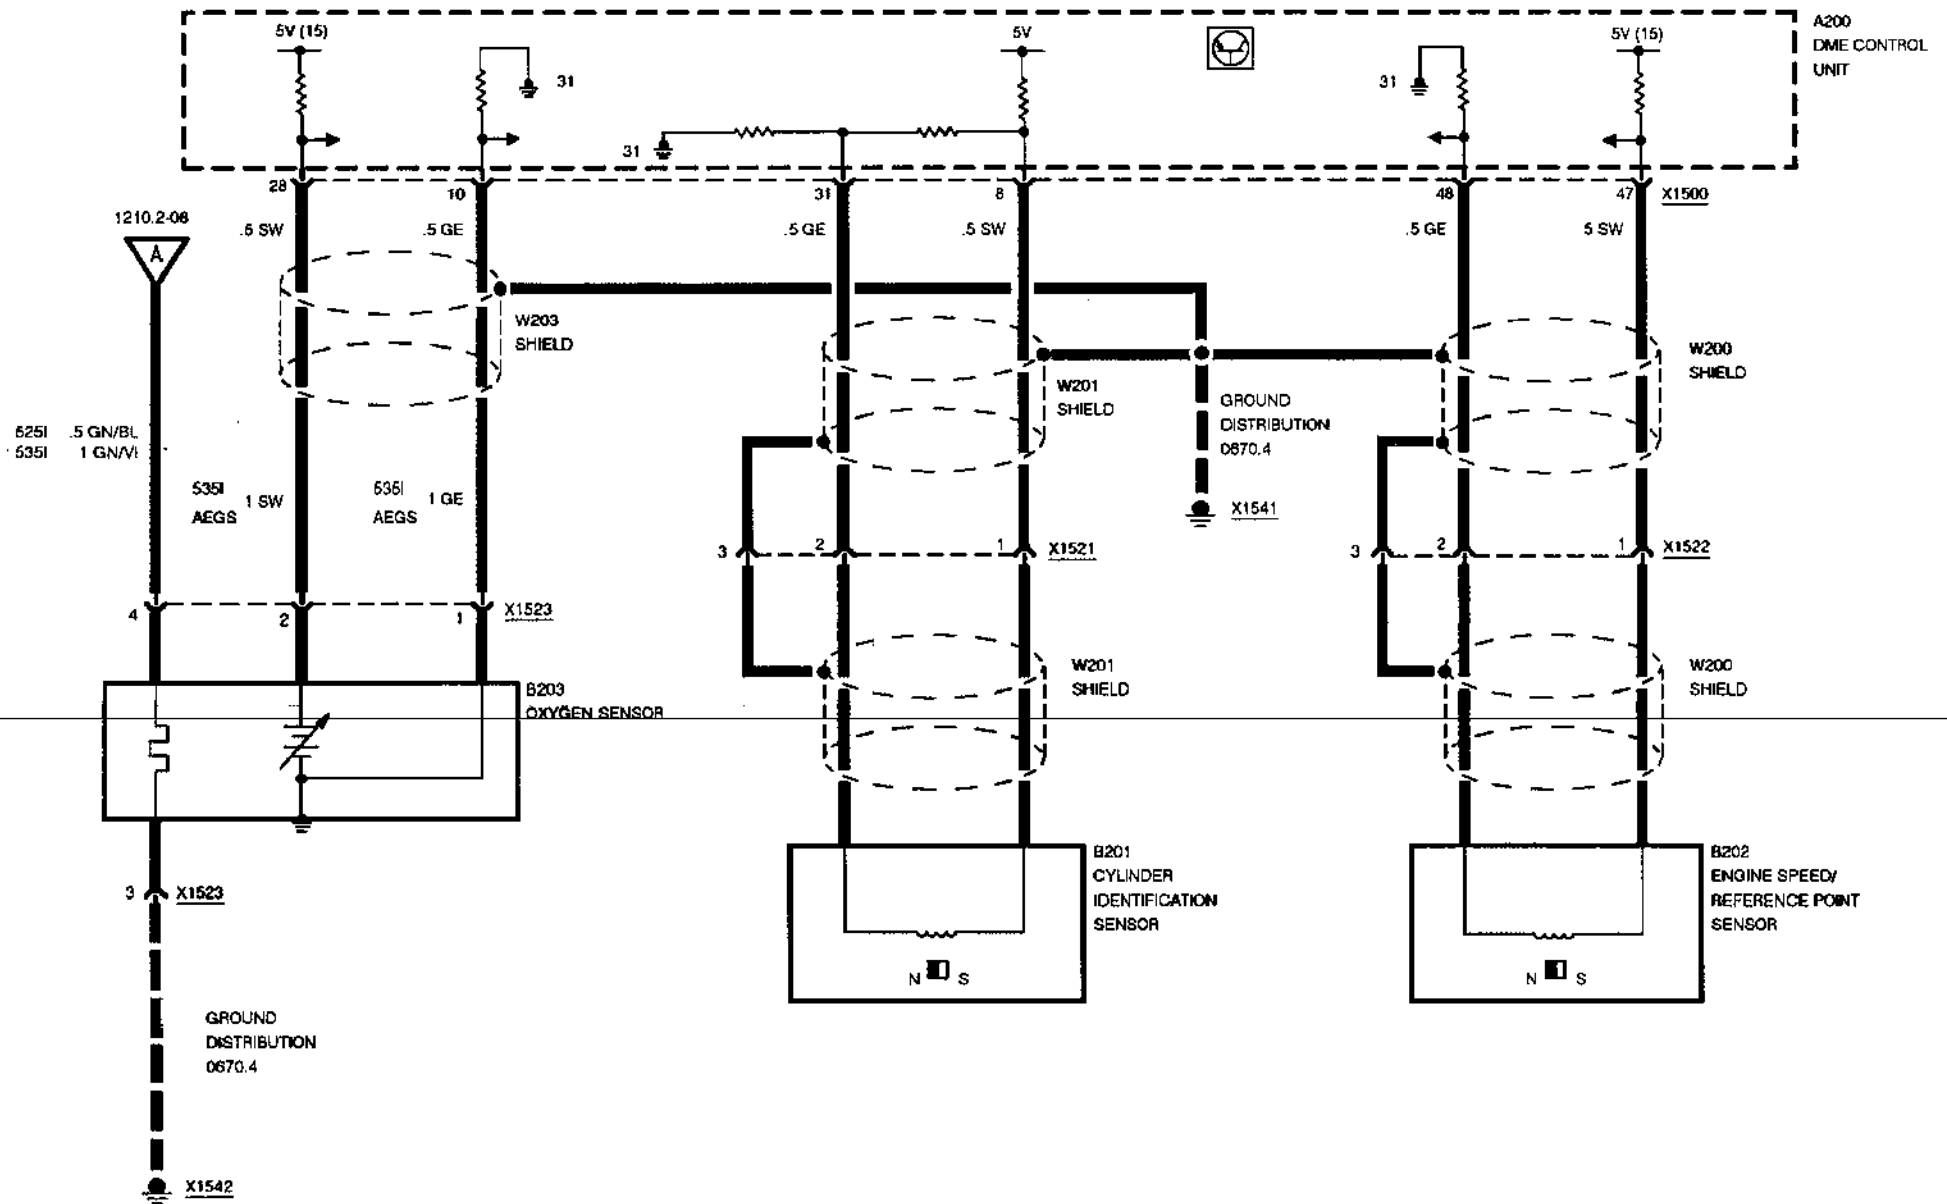




INJECTION ELECTRONICS (DME 1.3)

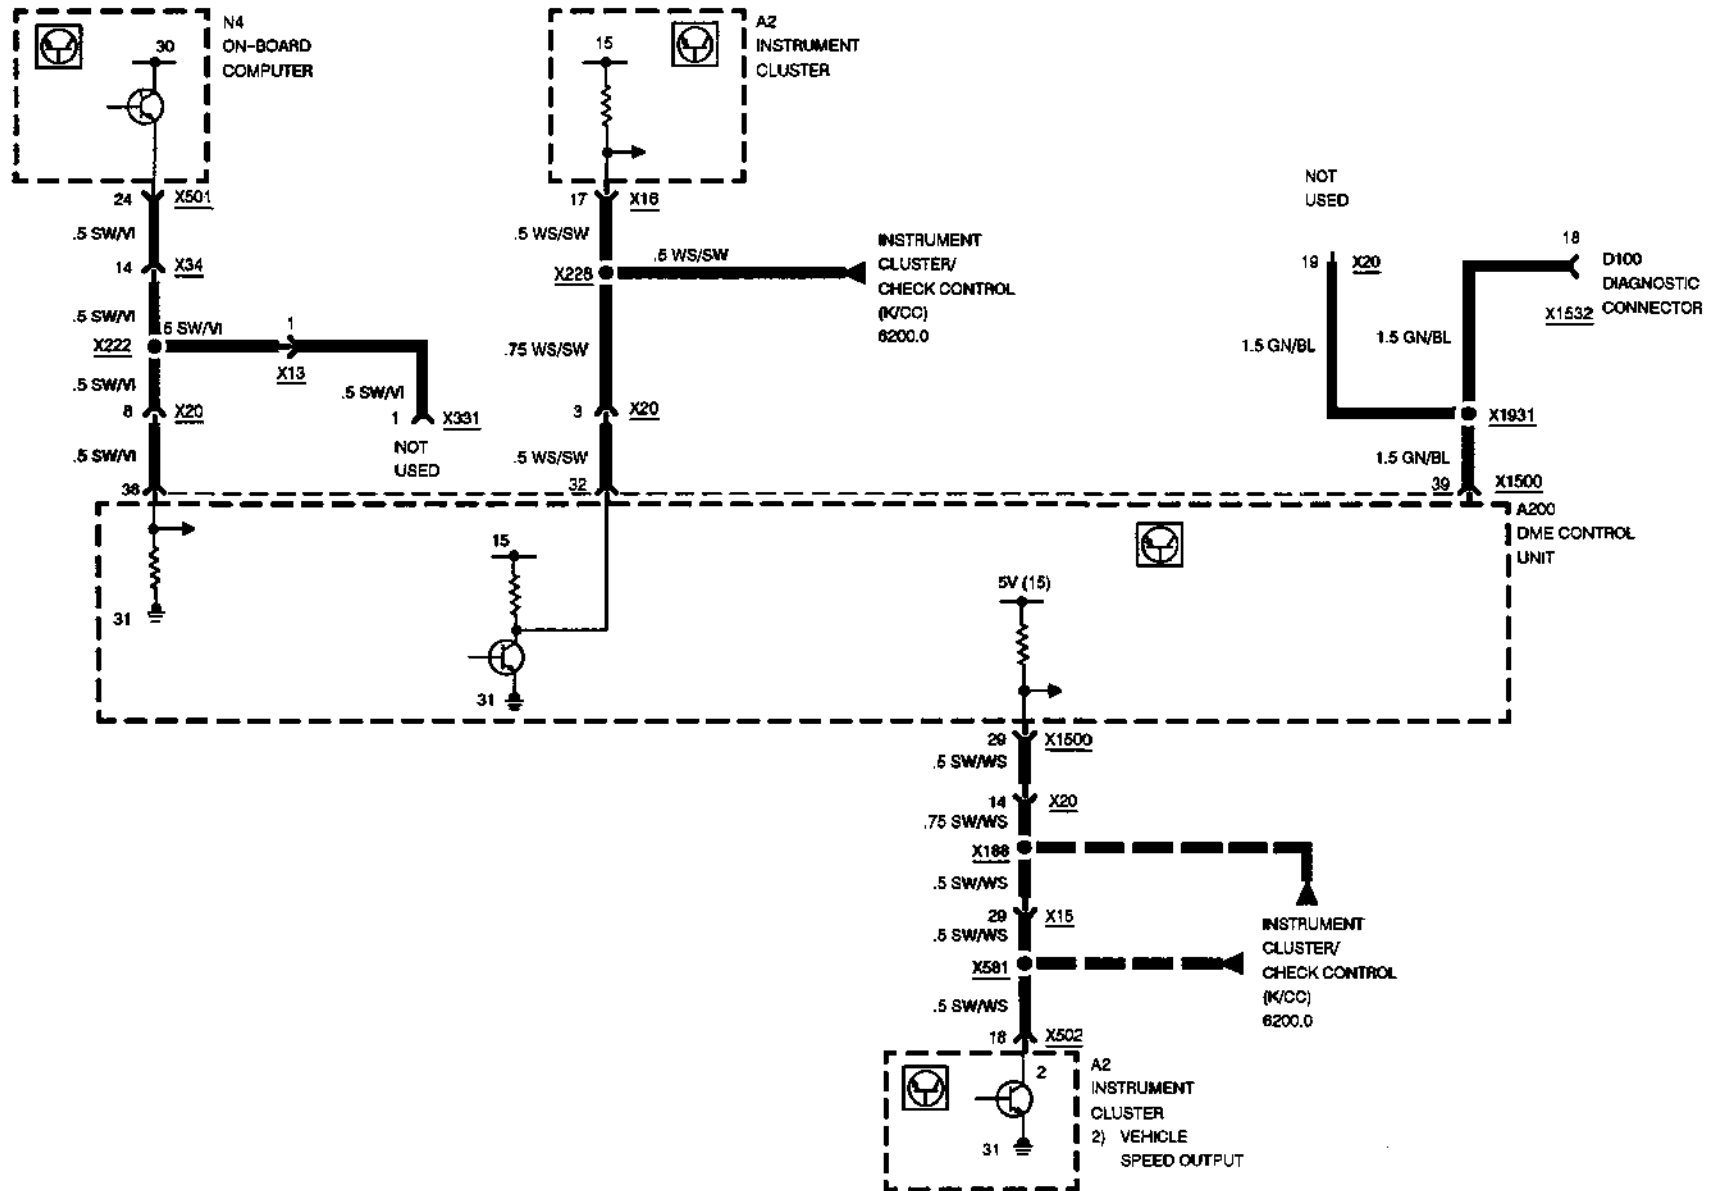


BMW 5 INJECTION ELECTRONICS (DME 1.3)

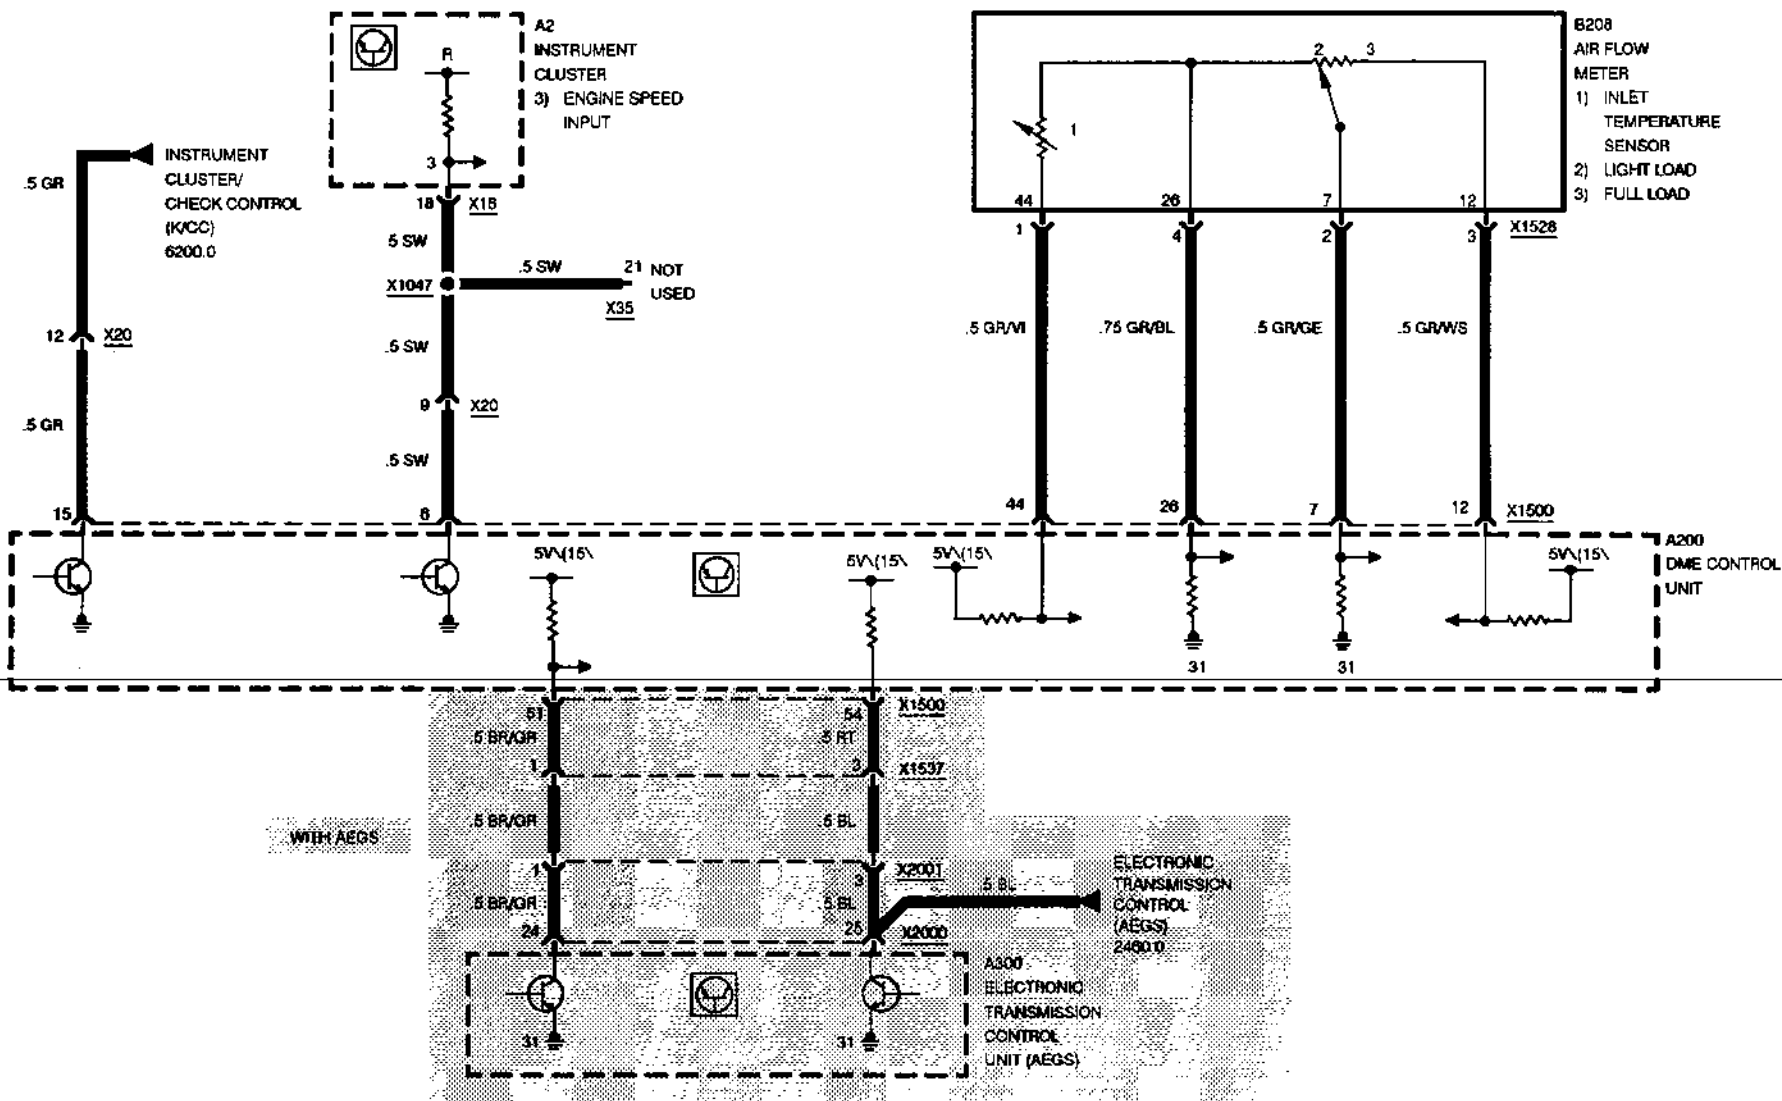



02/90


1210.2-11


1989

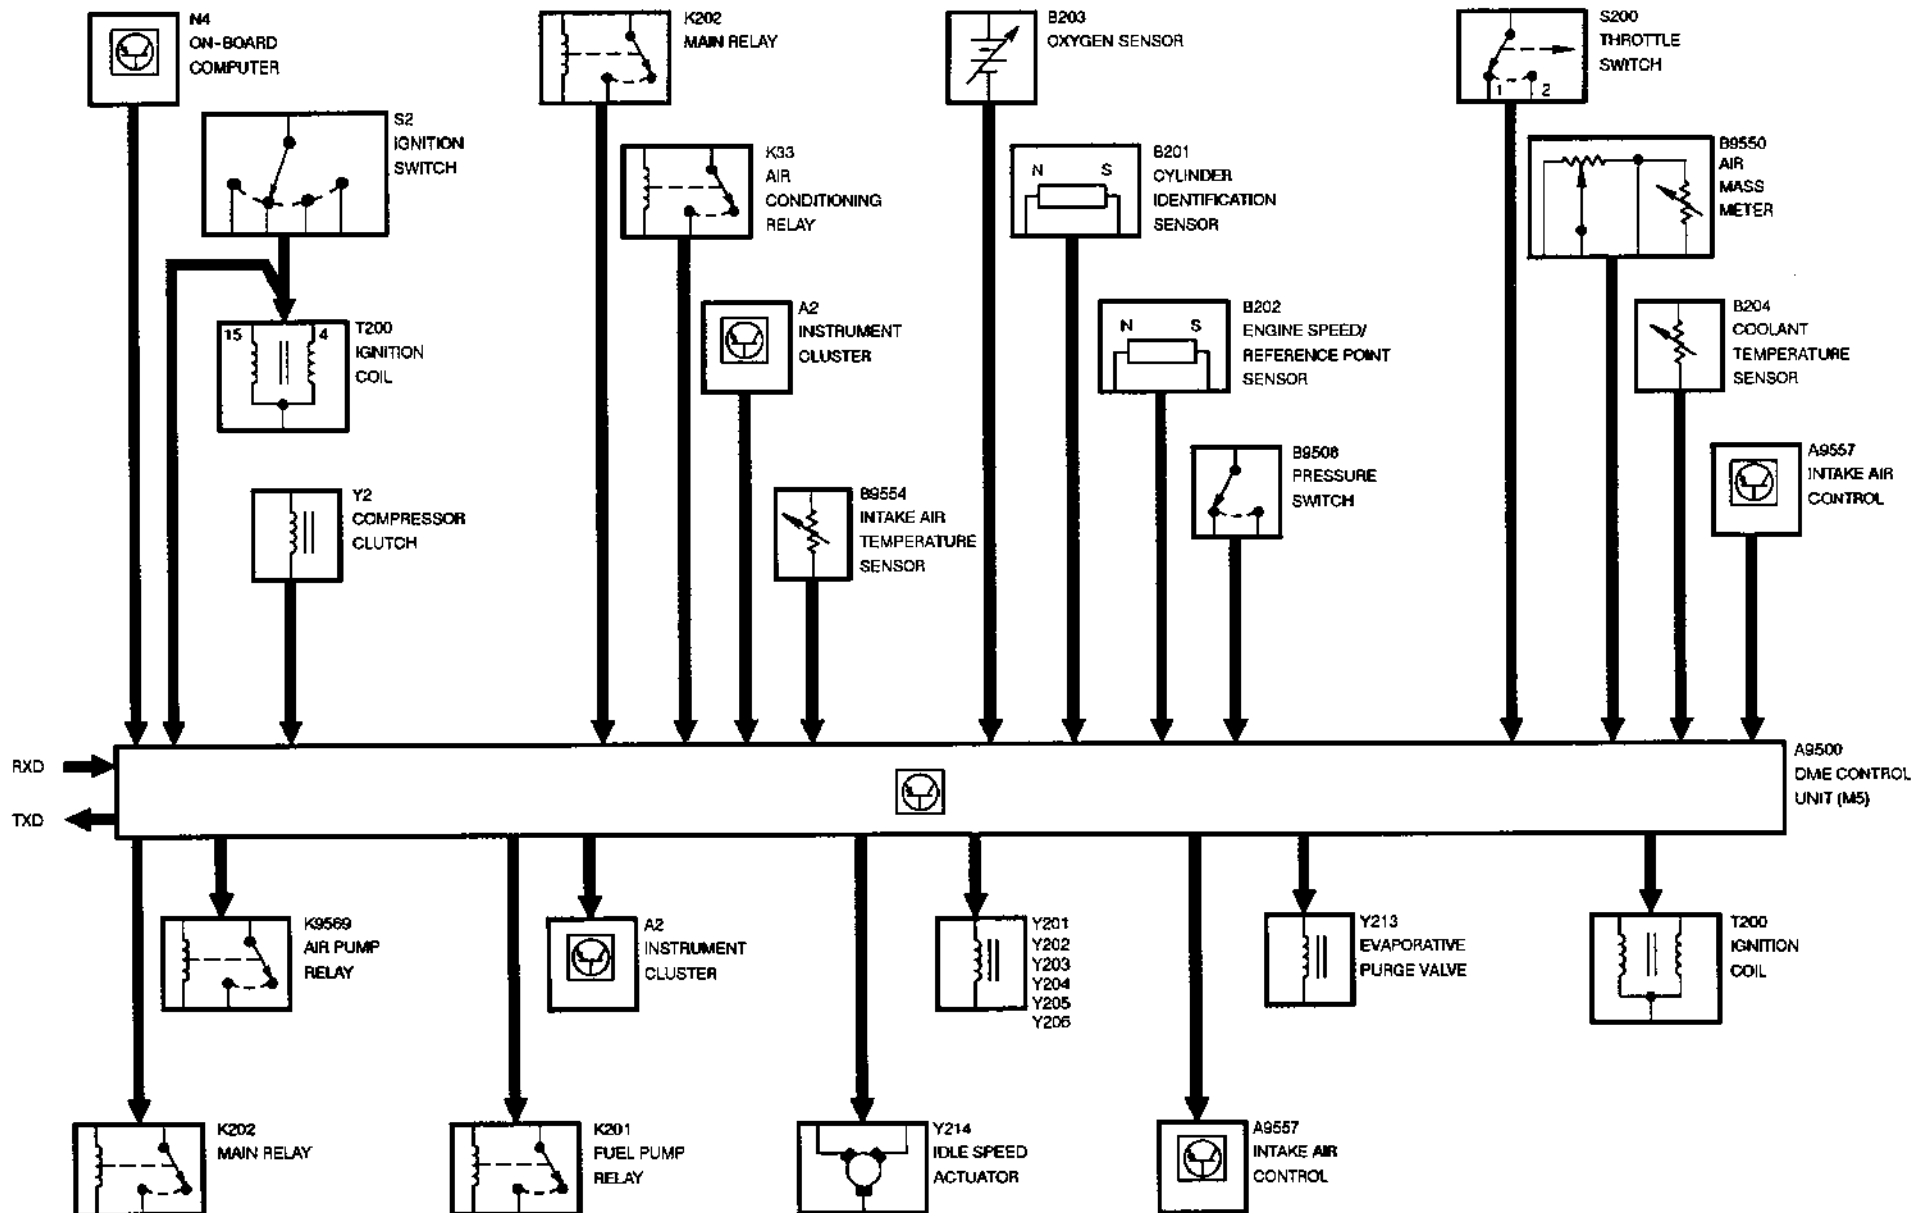


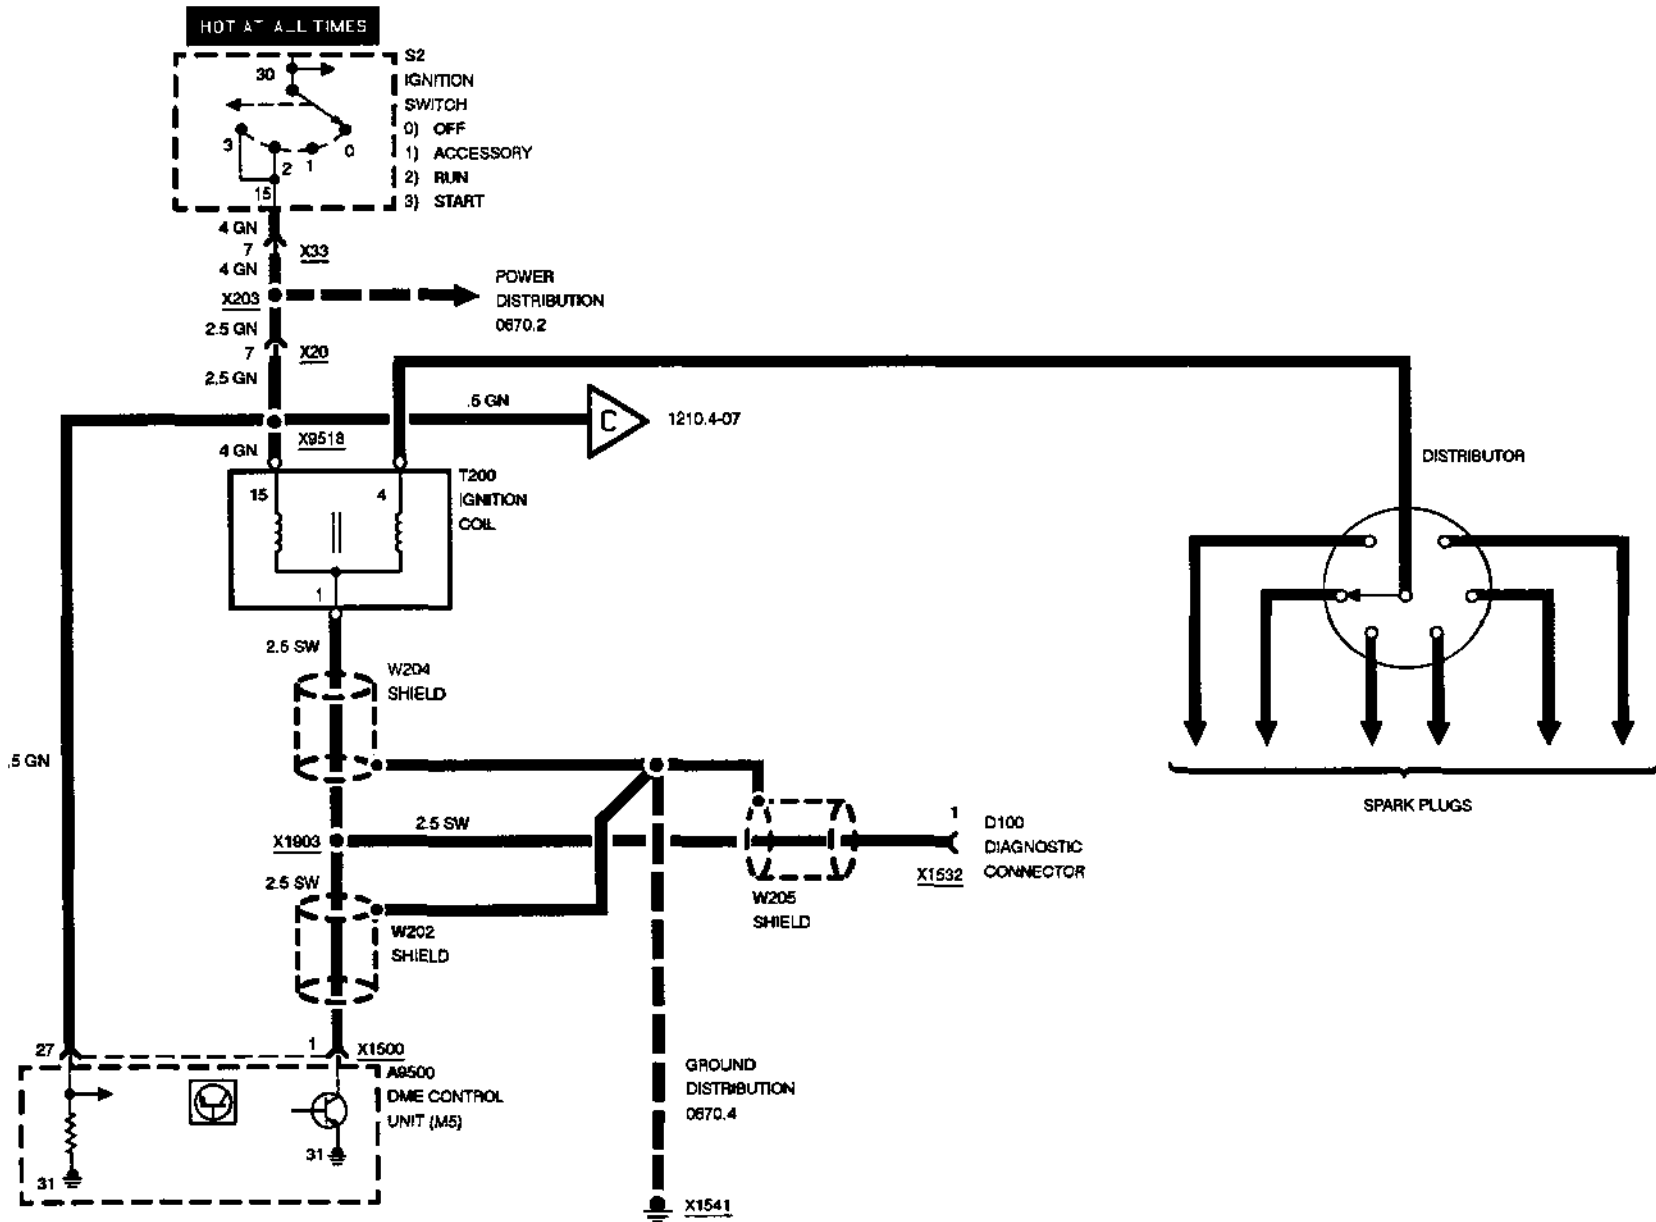


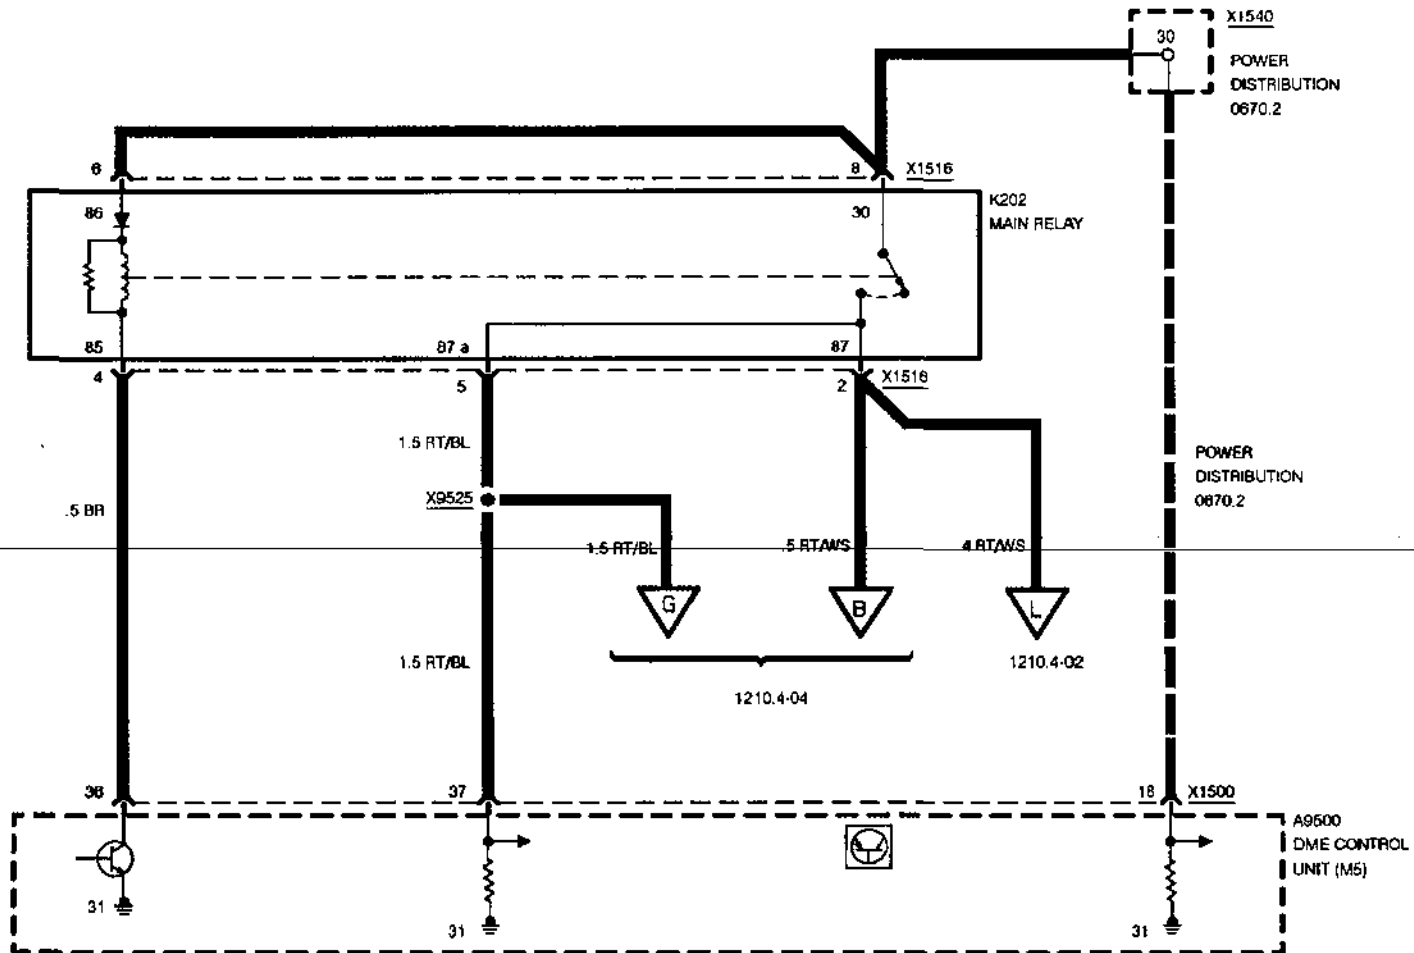

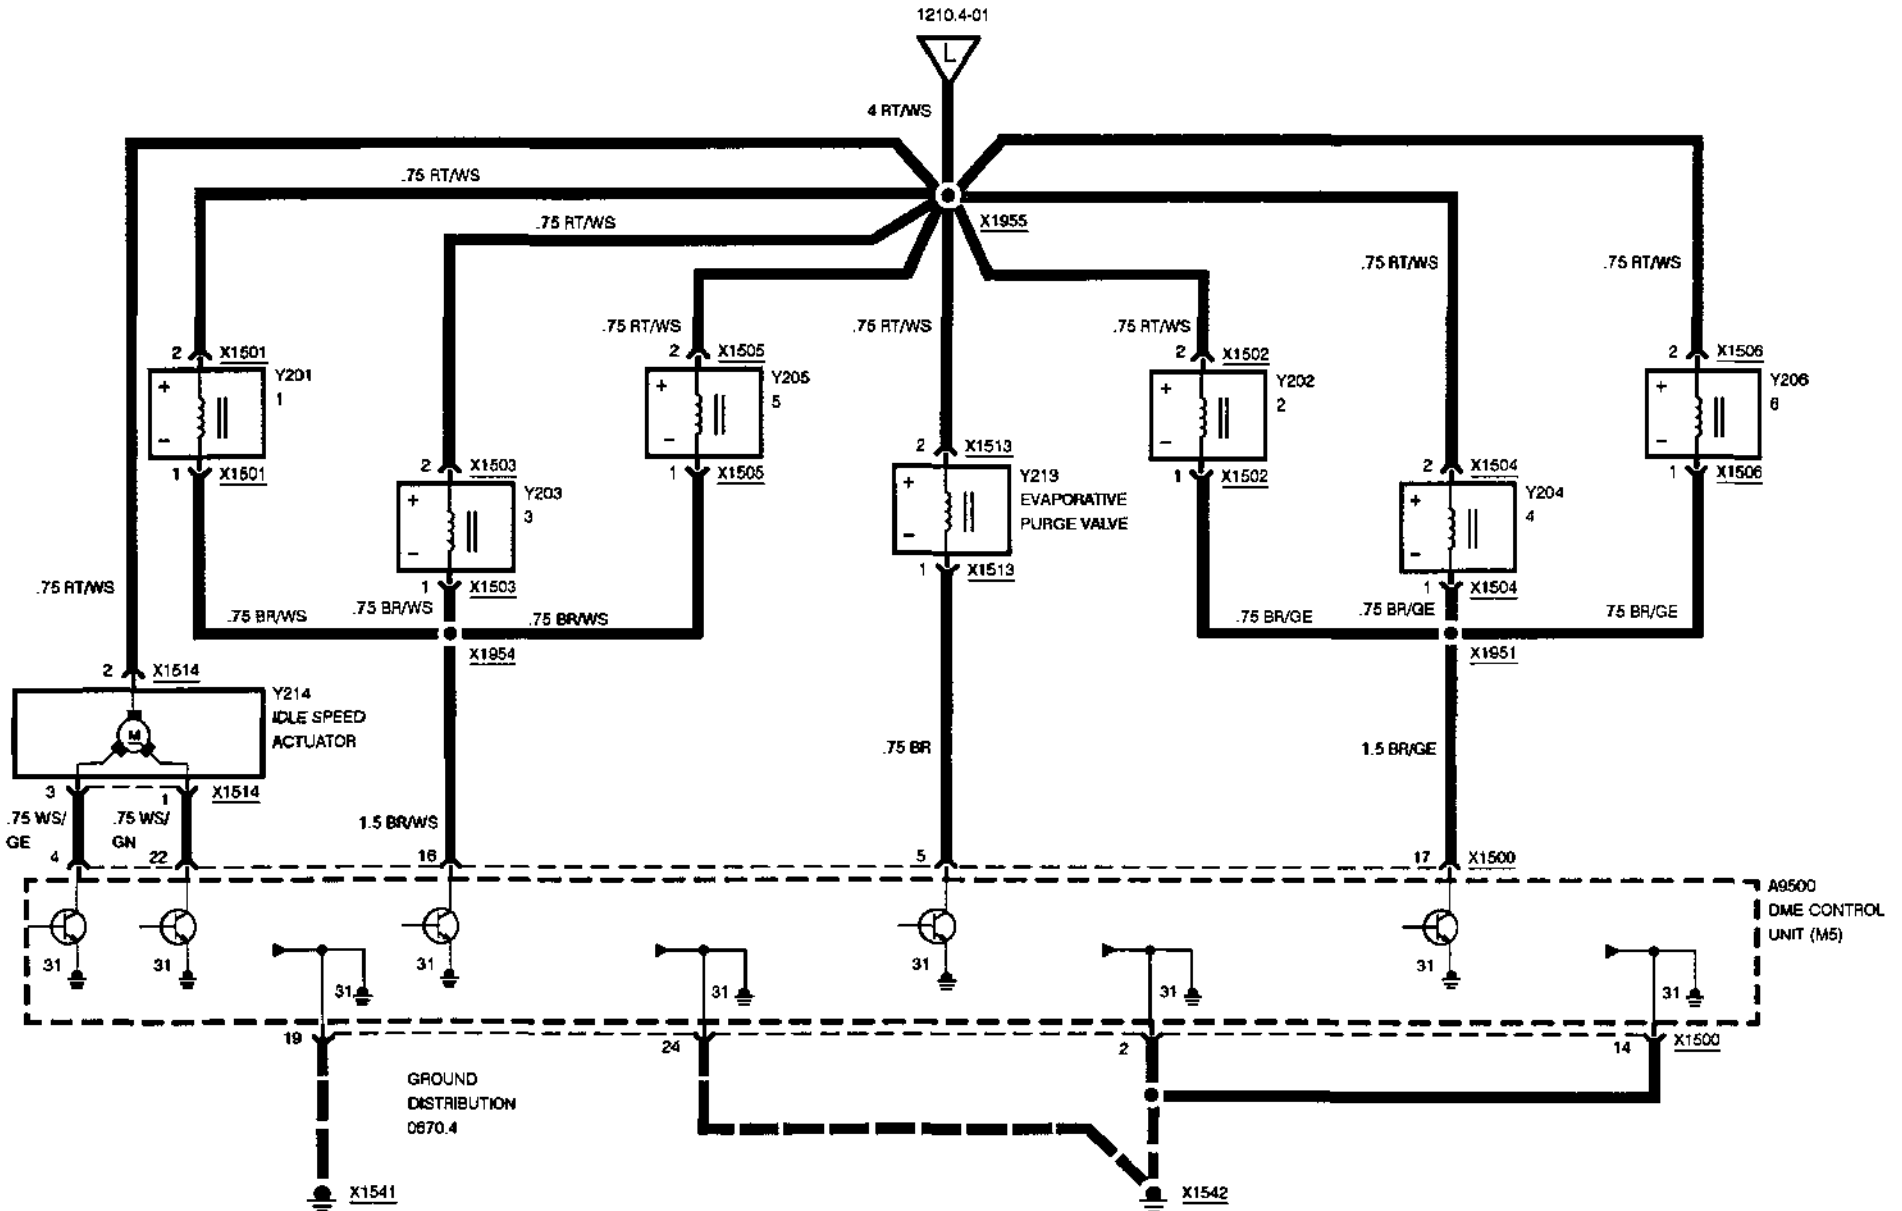

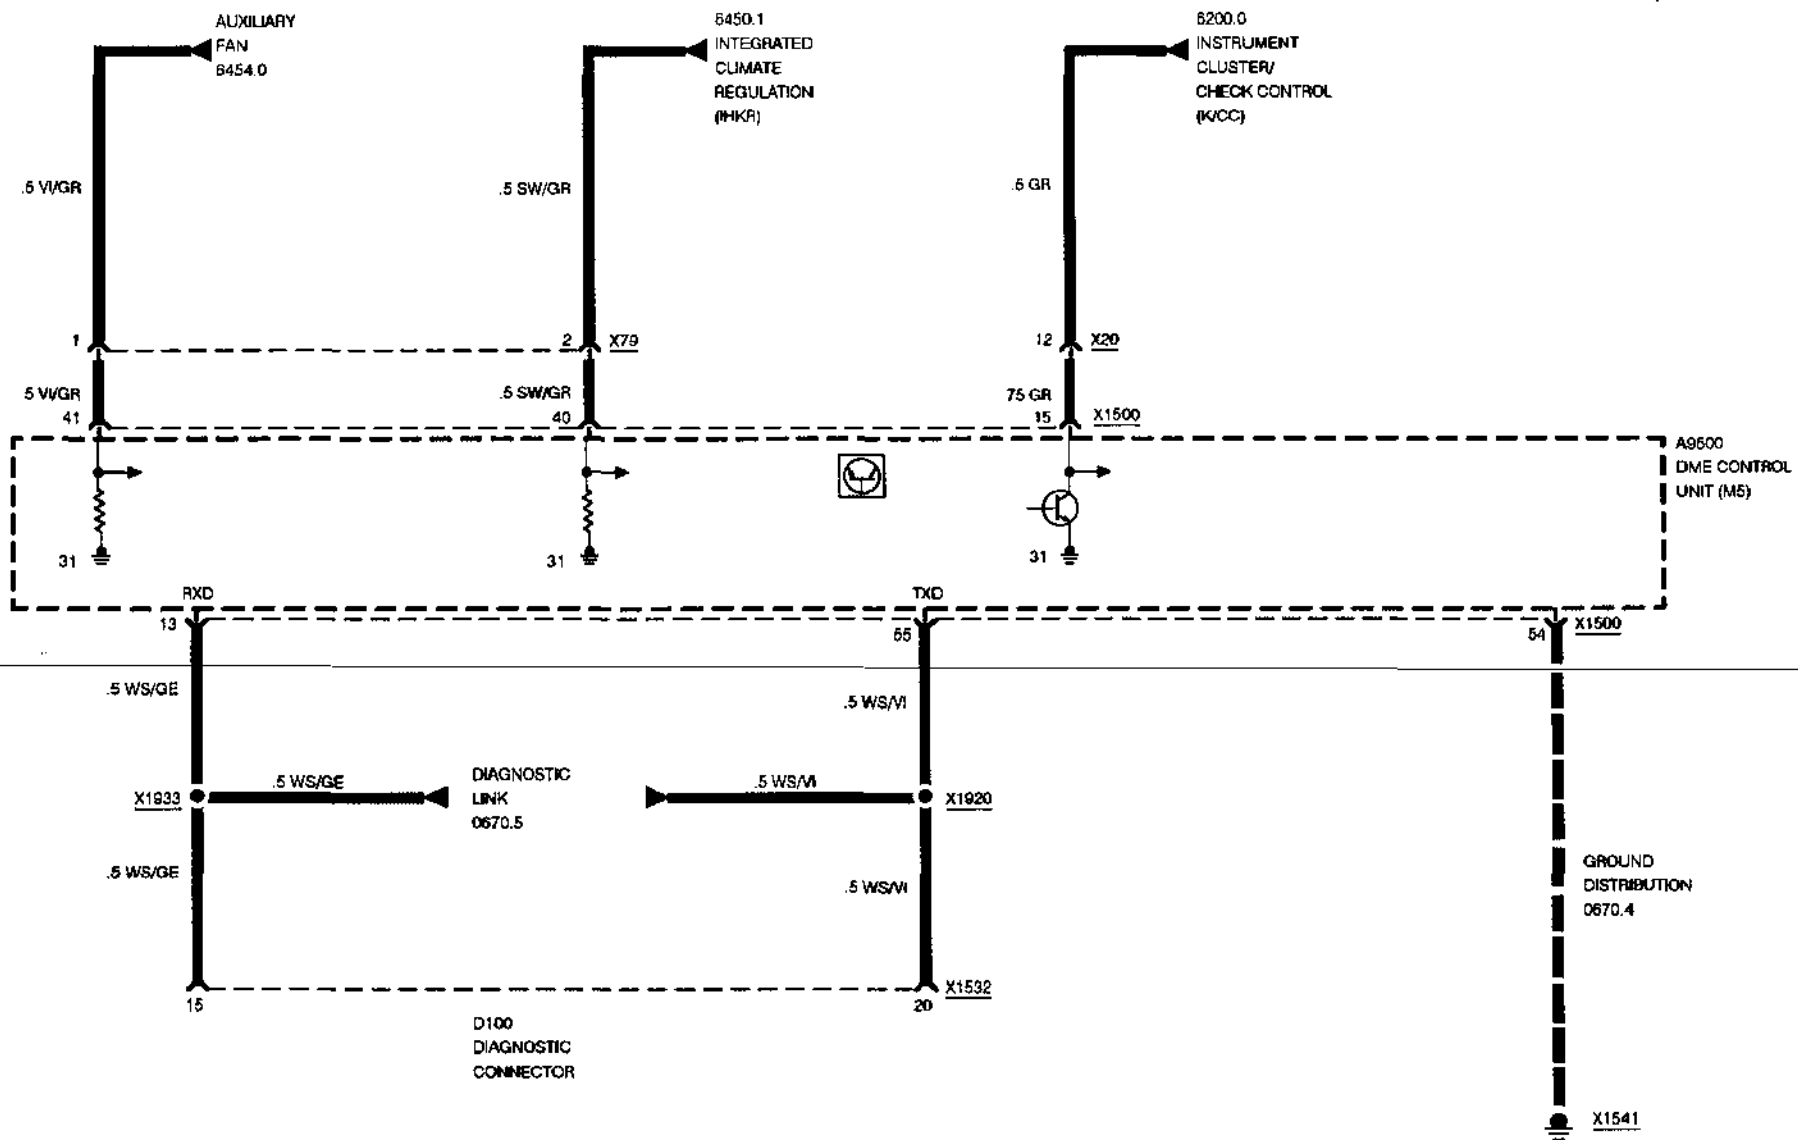

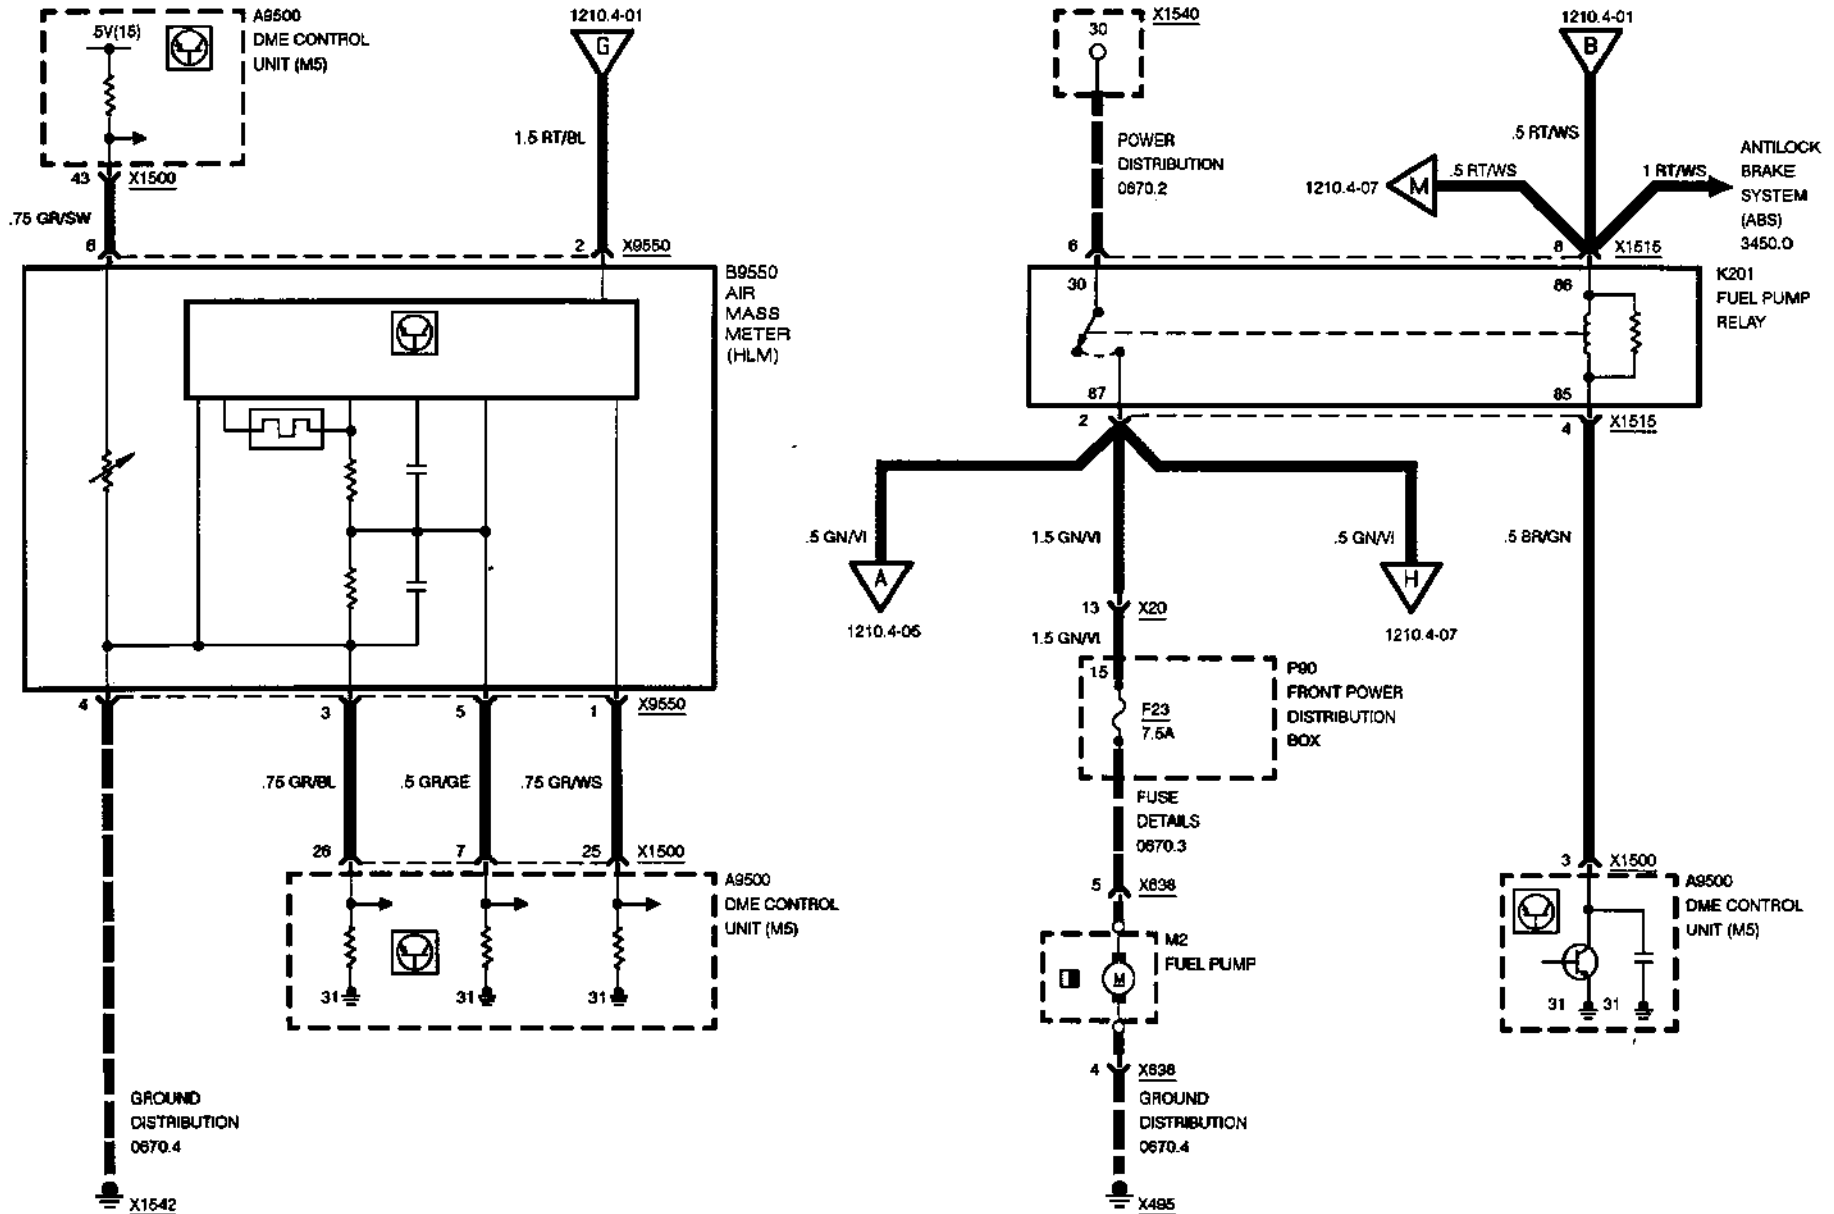


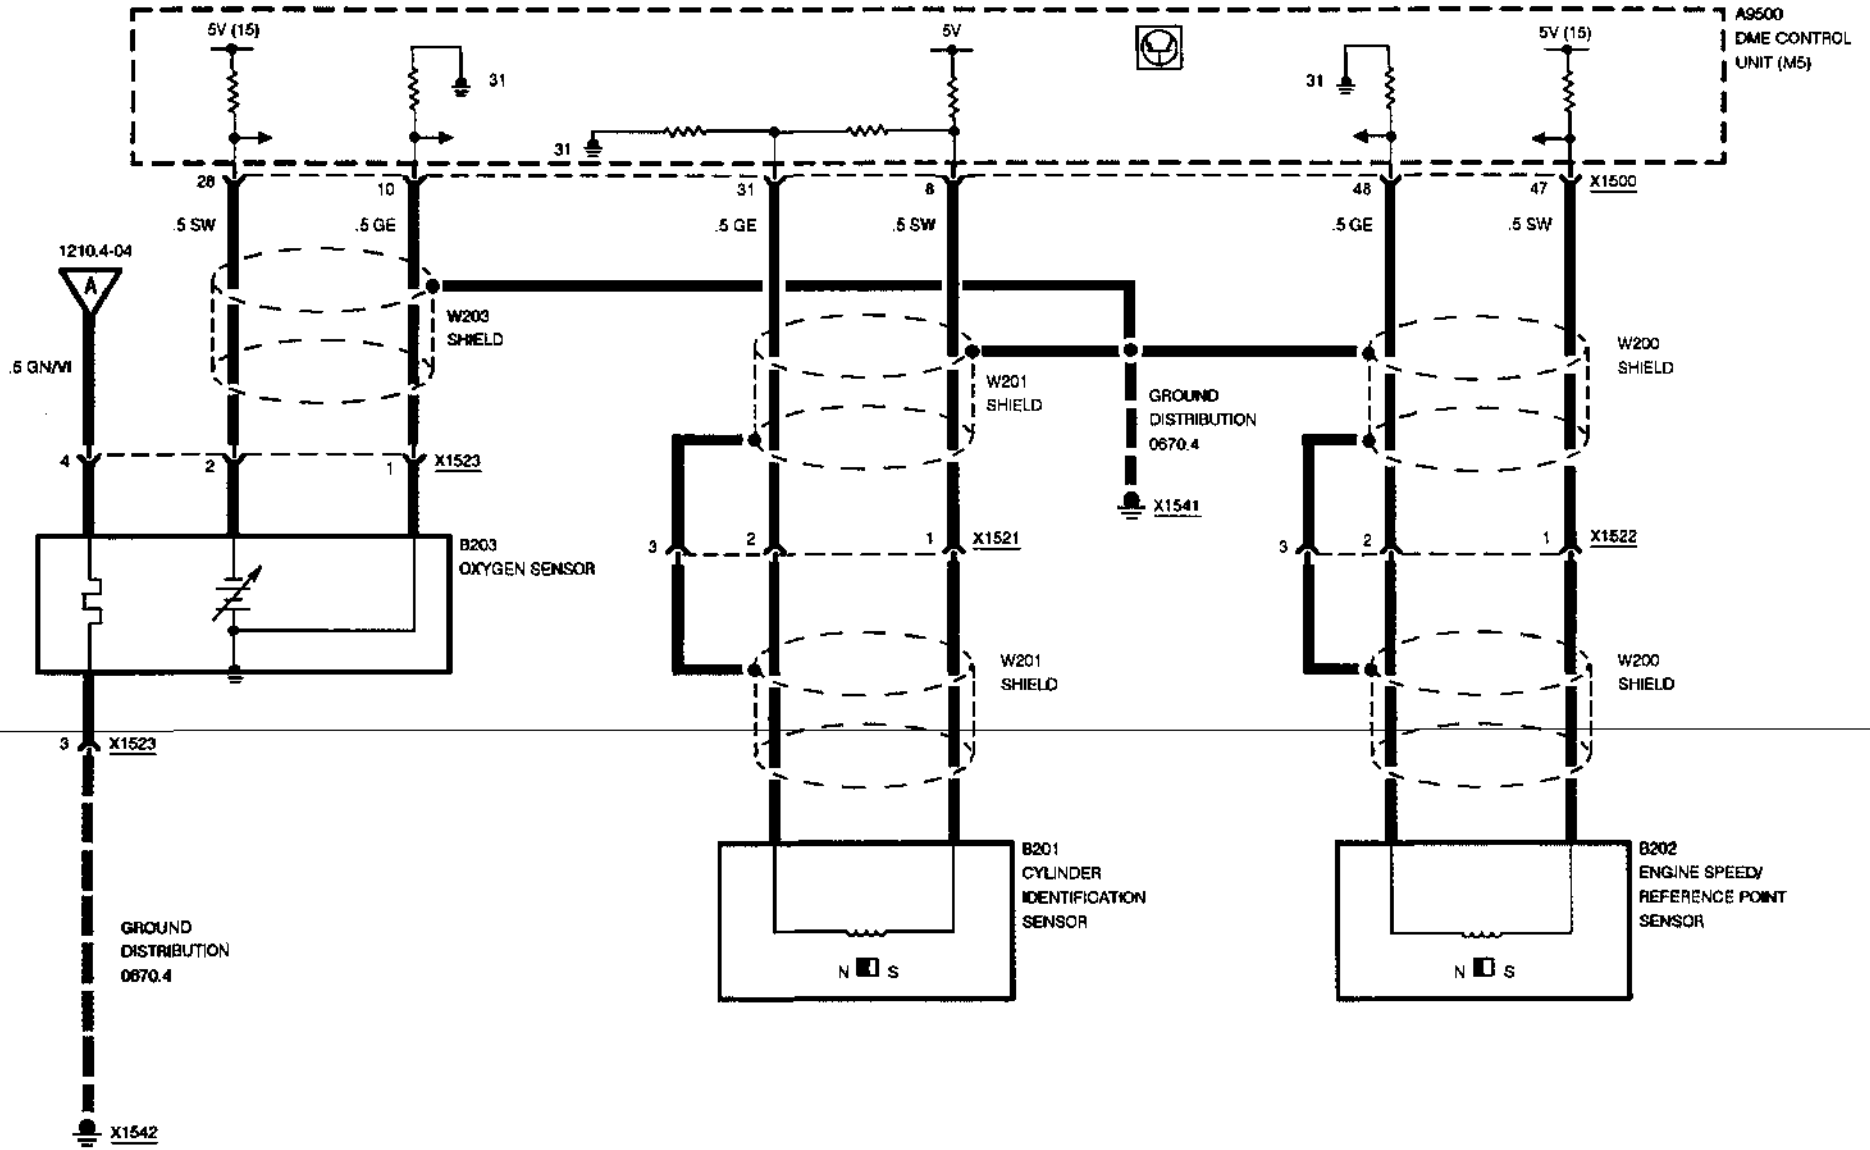





INJECTION ELECTRONICS (DME M1.2, 6 CYLINDER)

M5

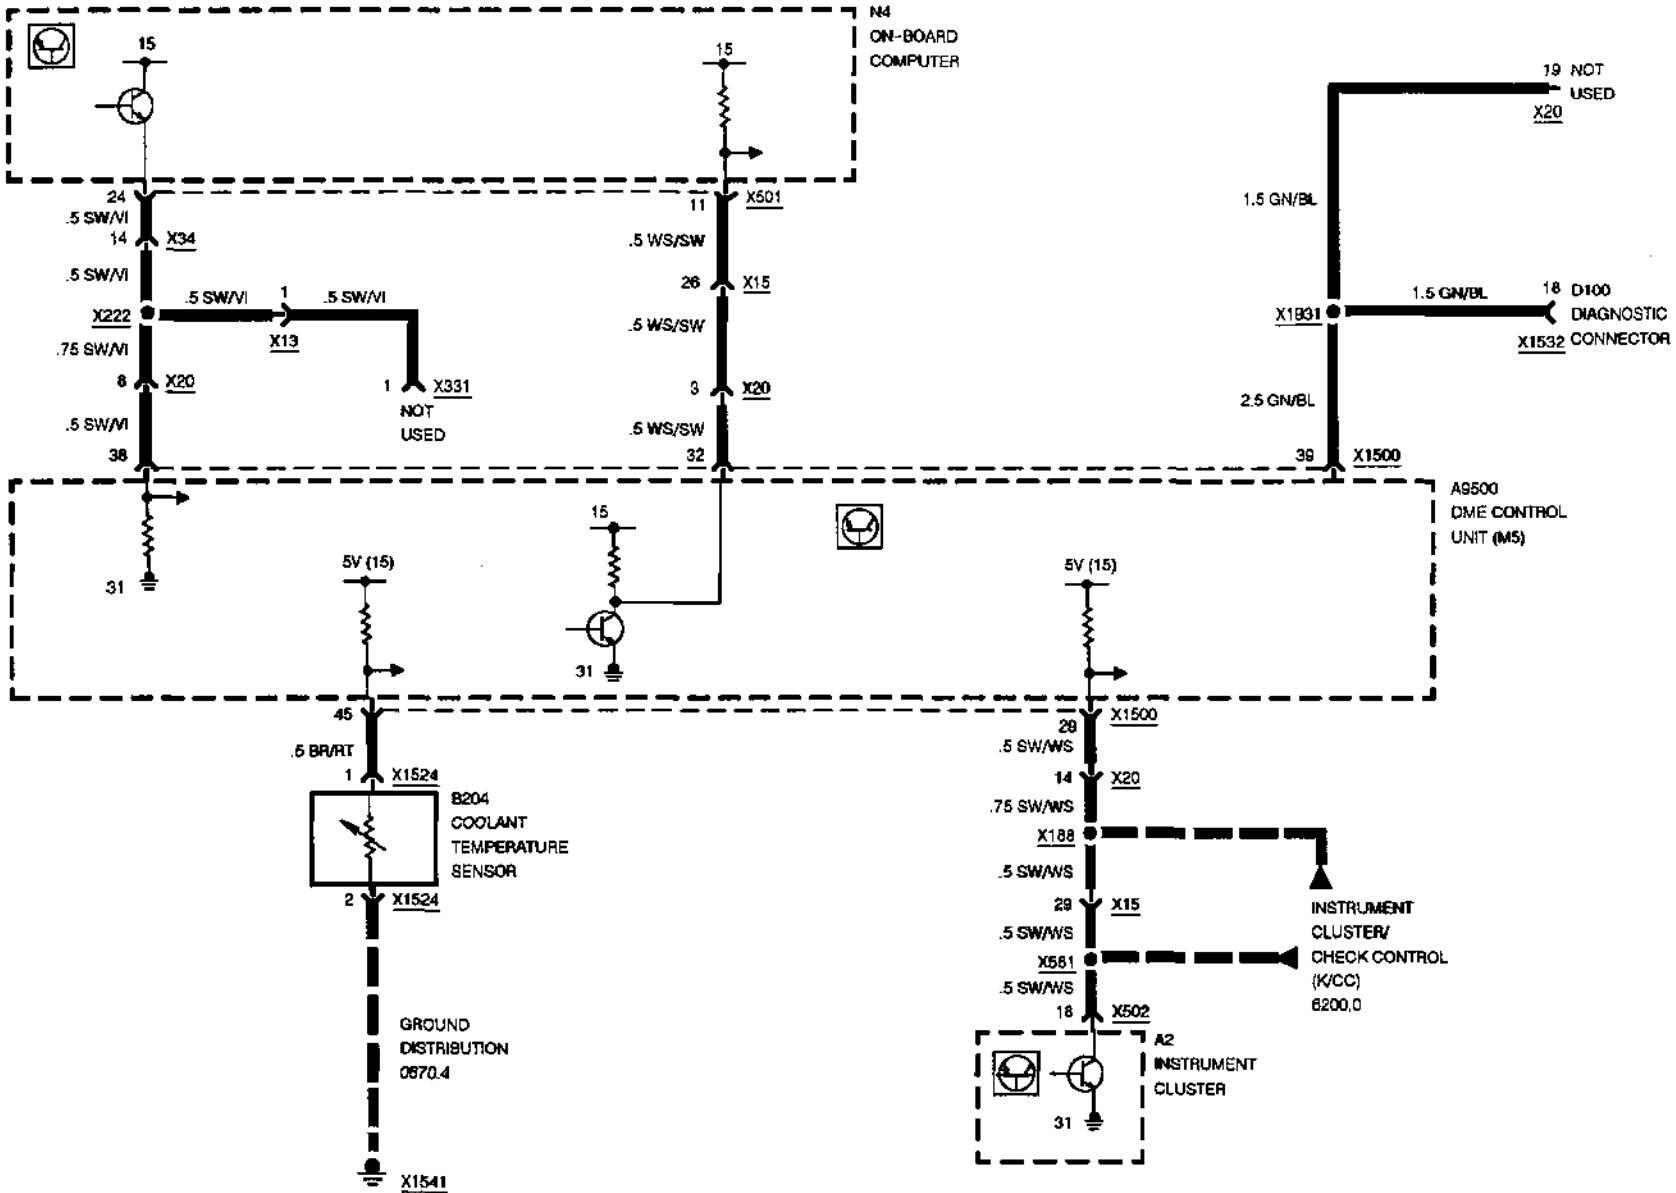

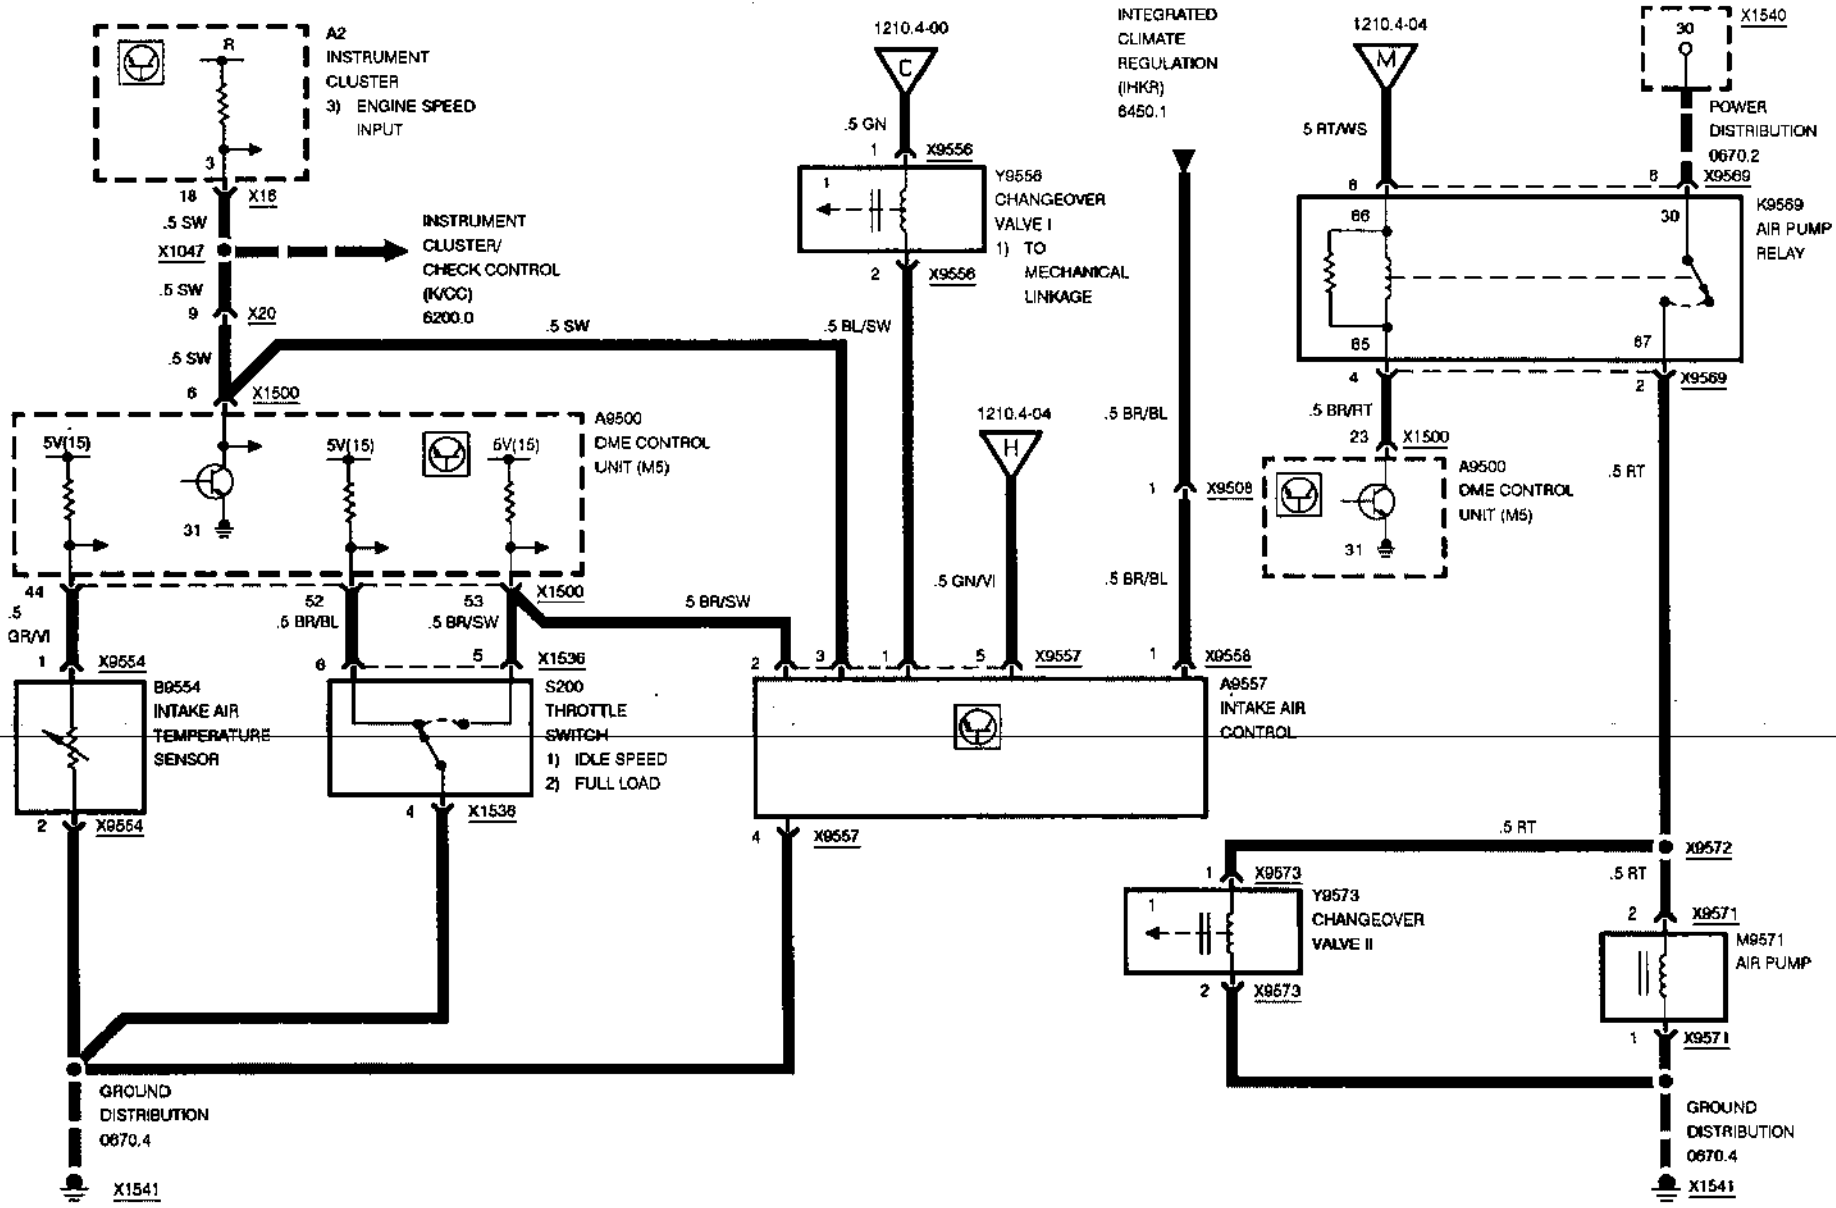


BMW 5 CHARGING SYSTEM

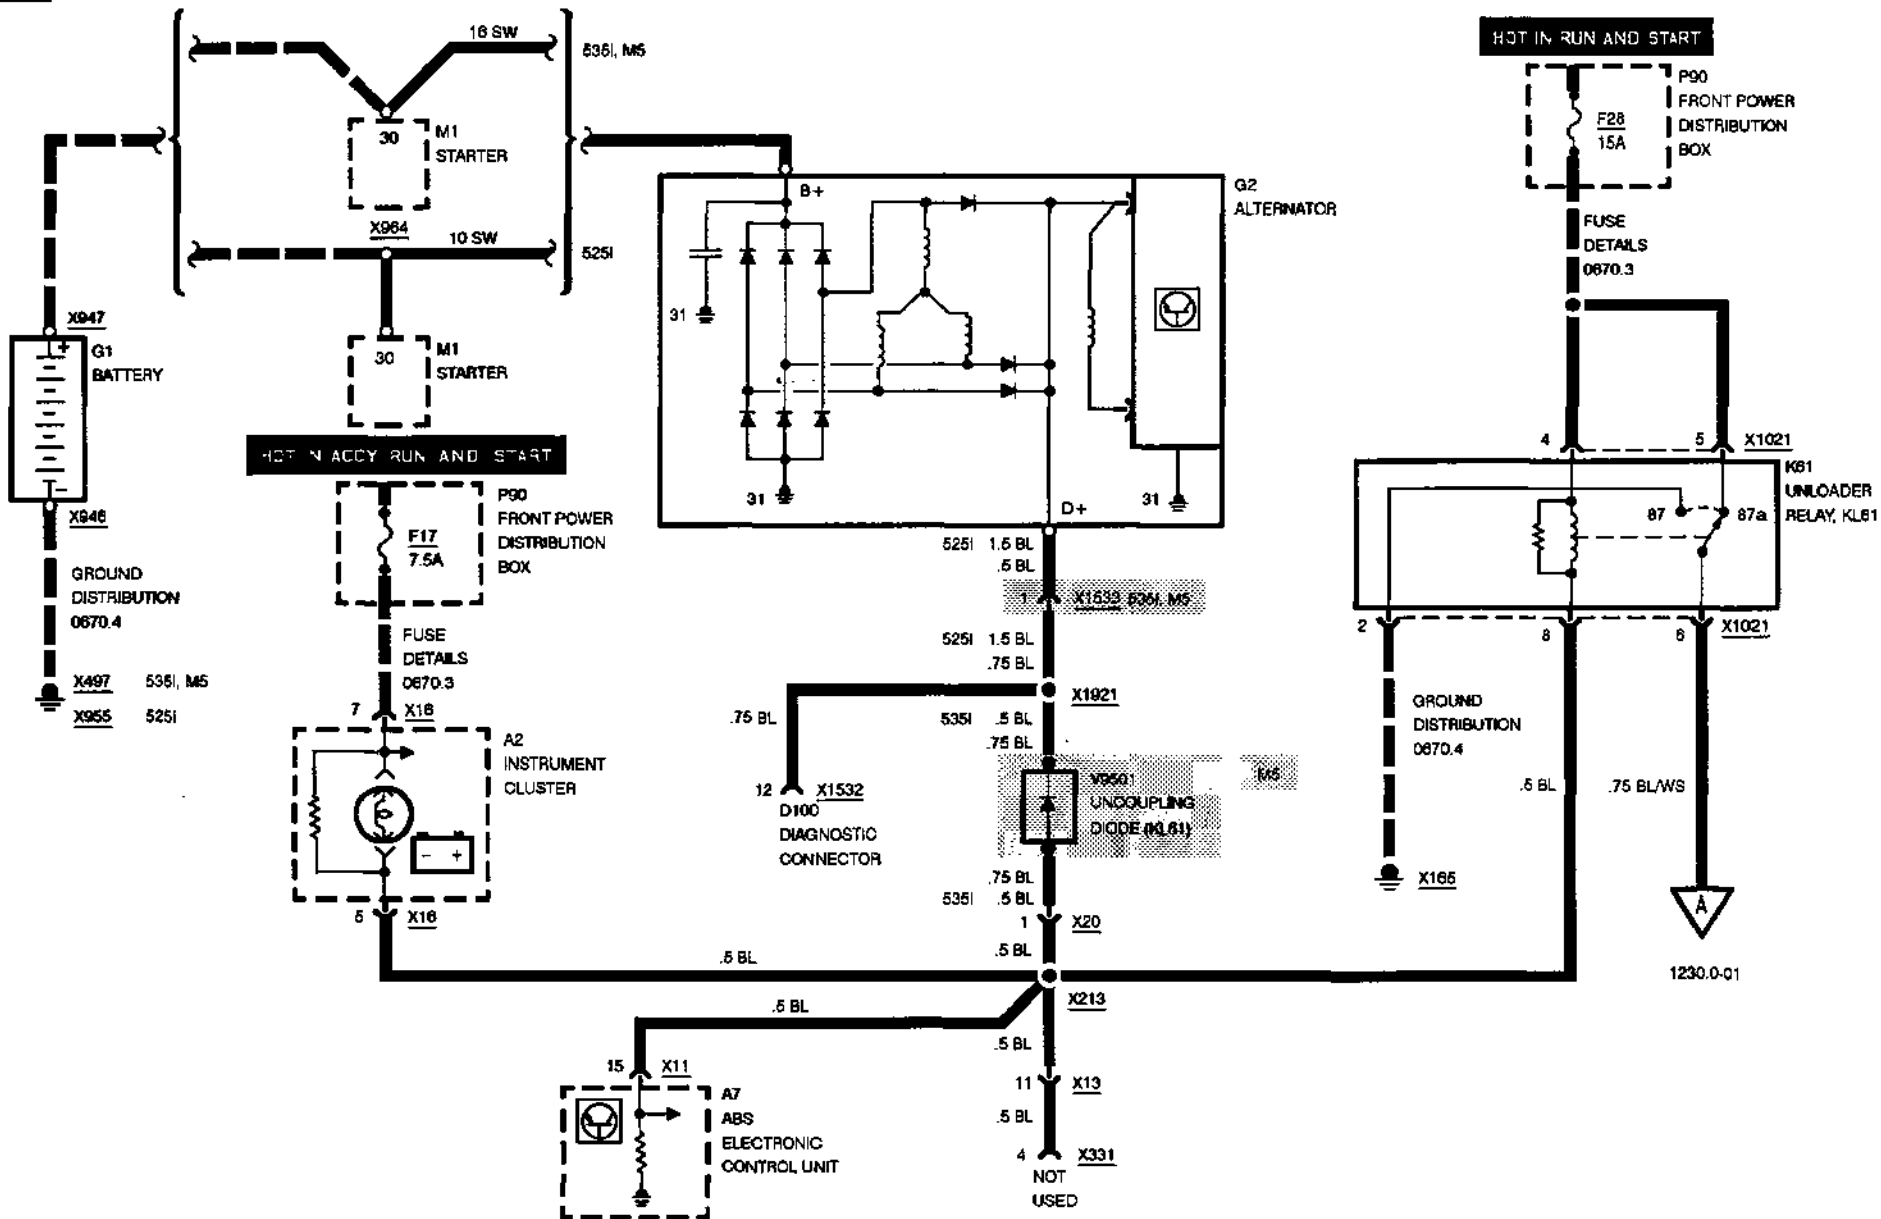




CHARGING SYSTEM

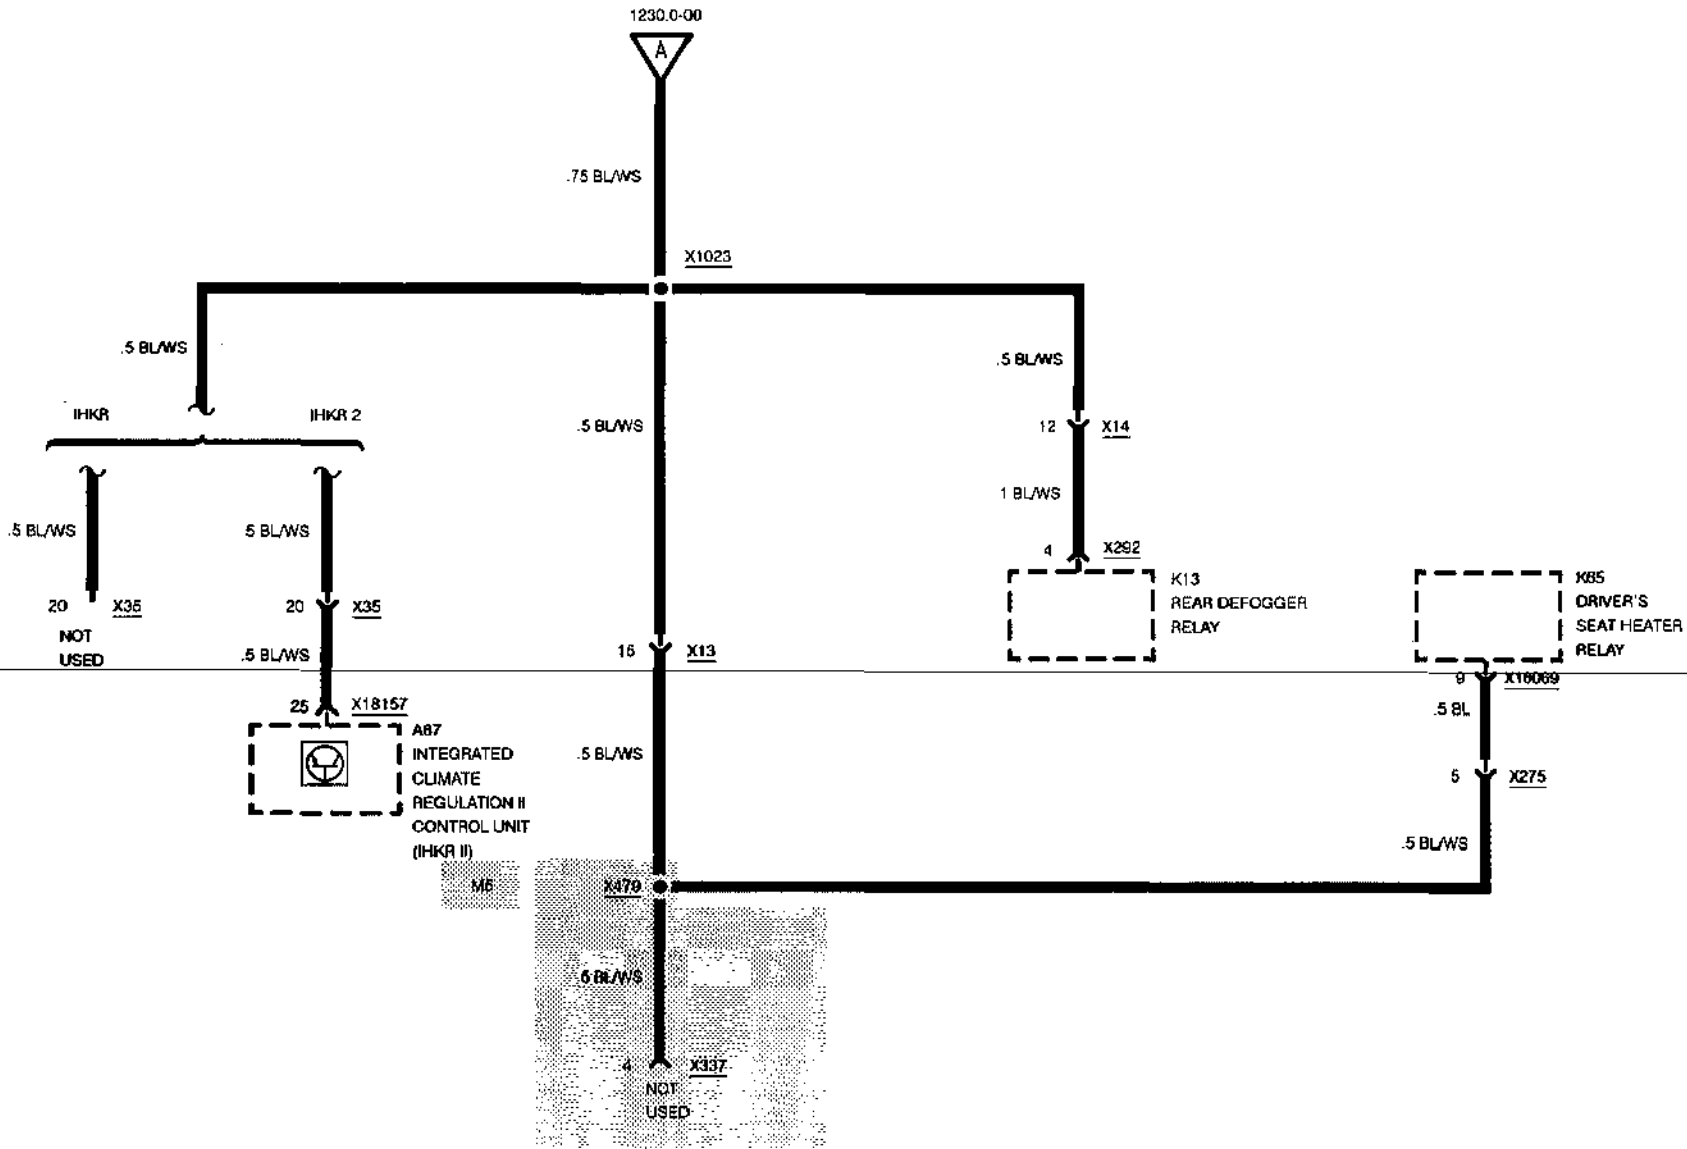



START

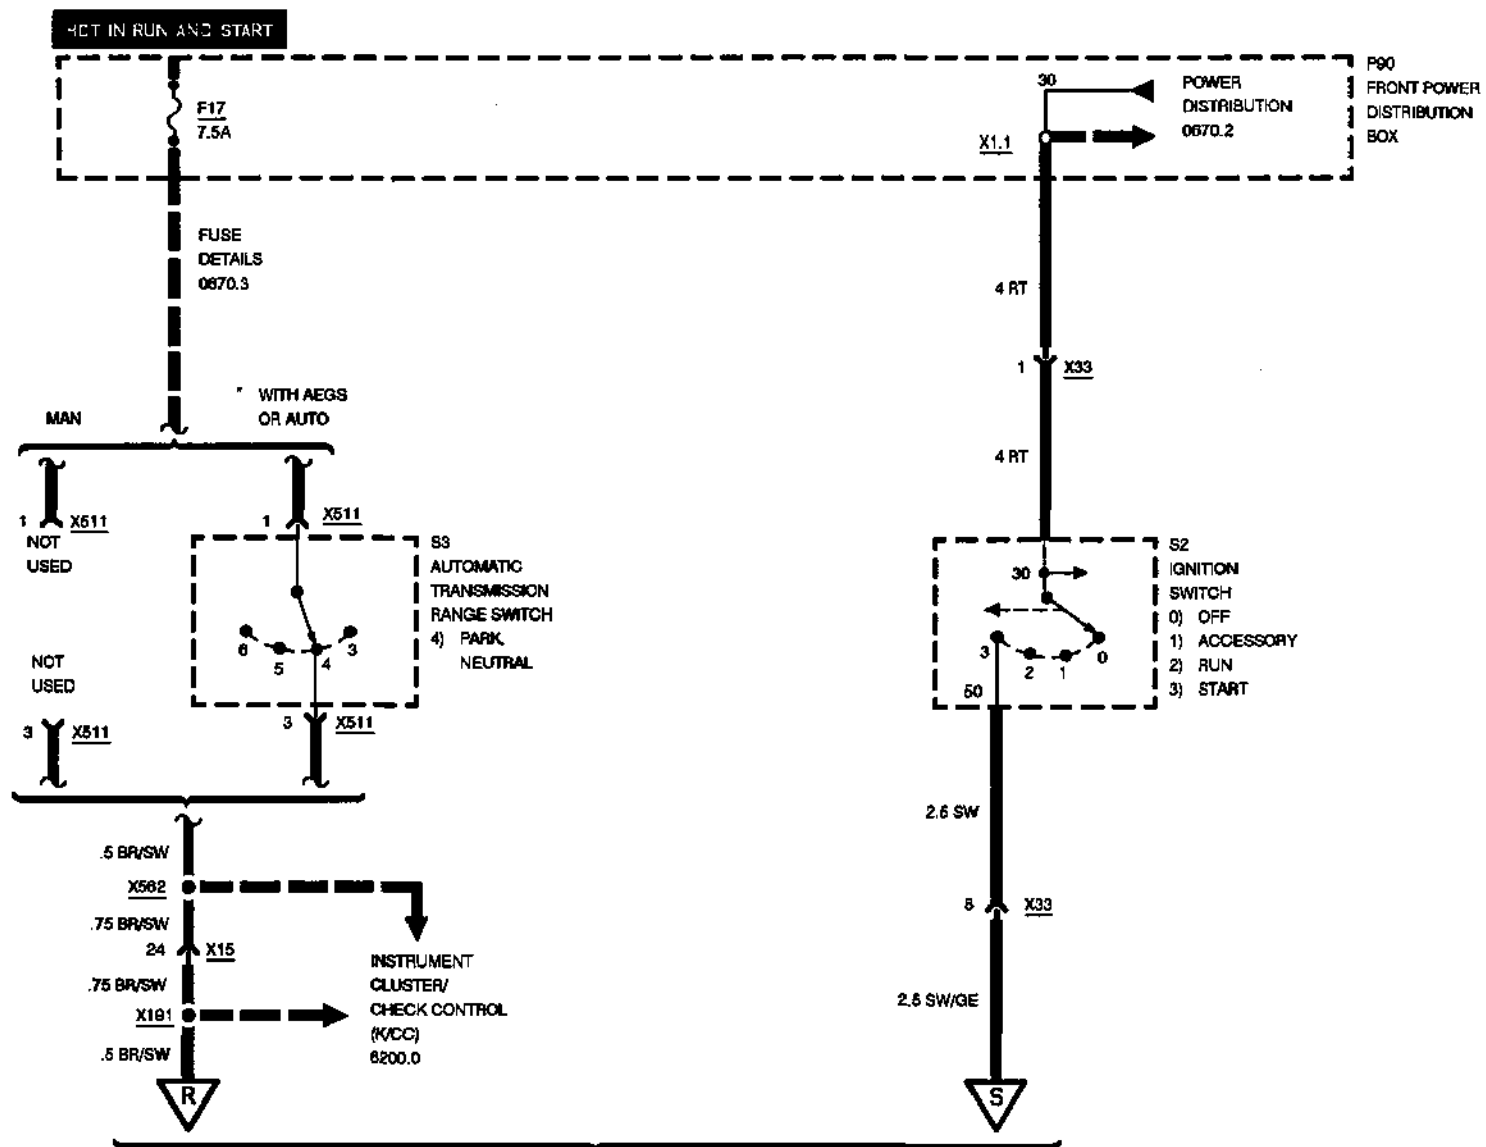


1240.0-01 535, MS1
1240.0-02 525



START


535i, M5

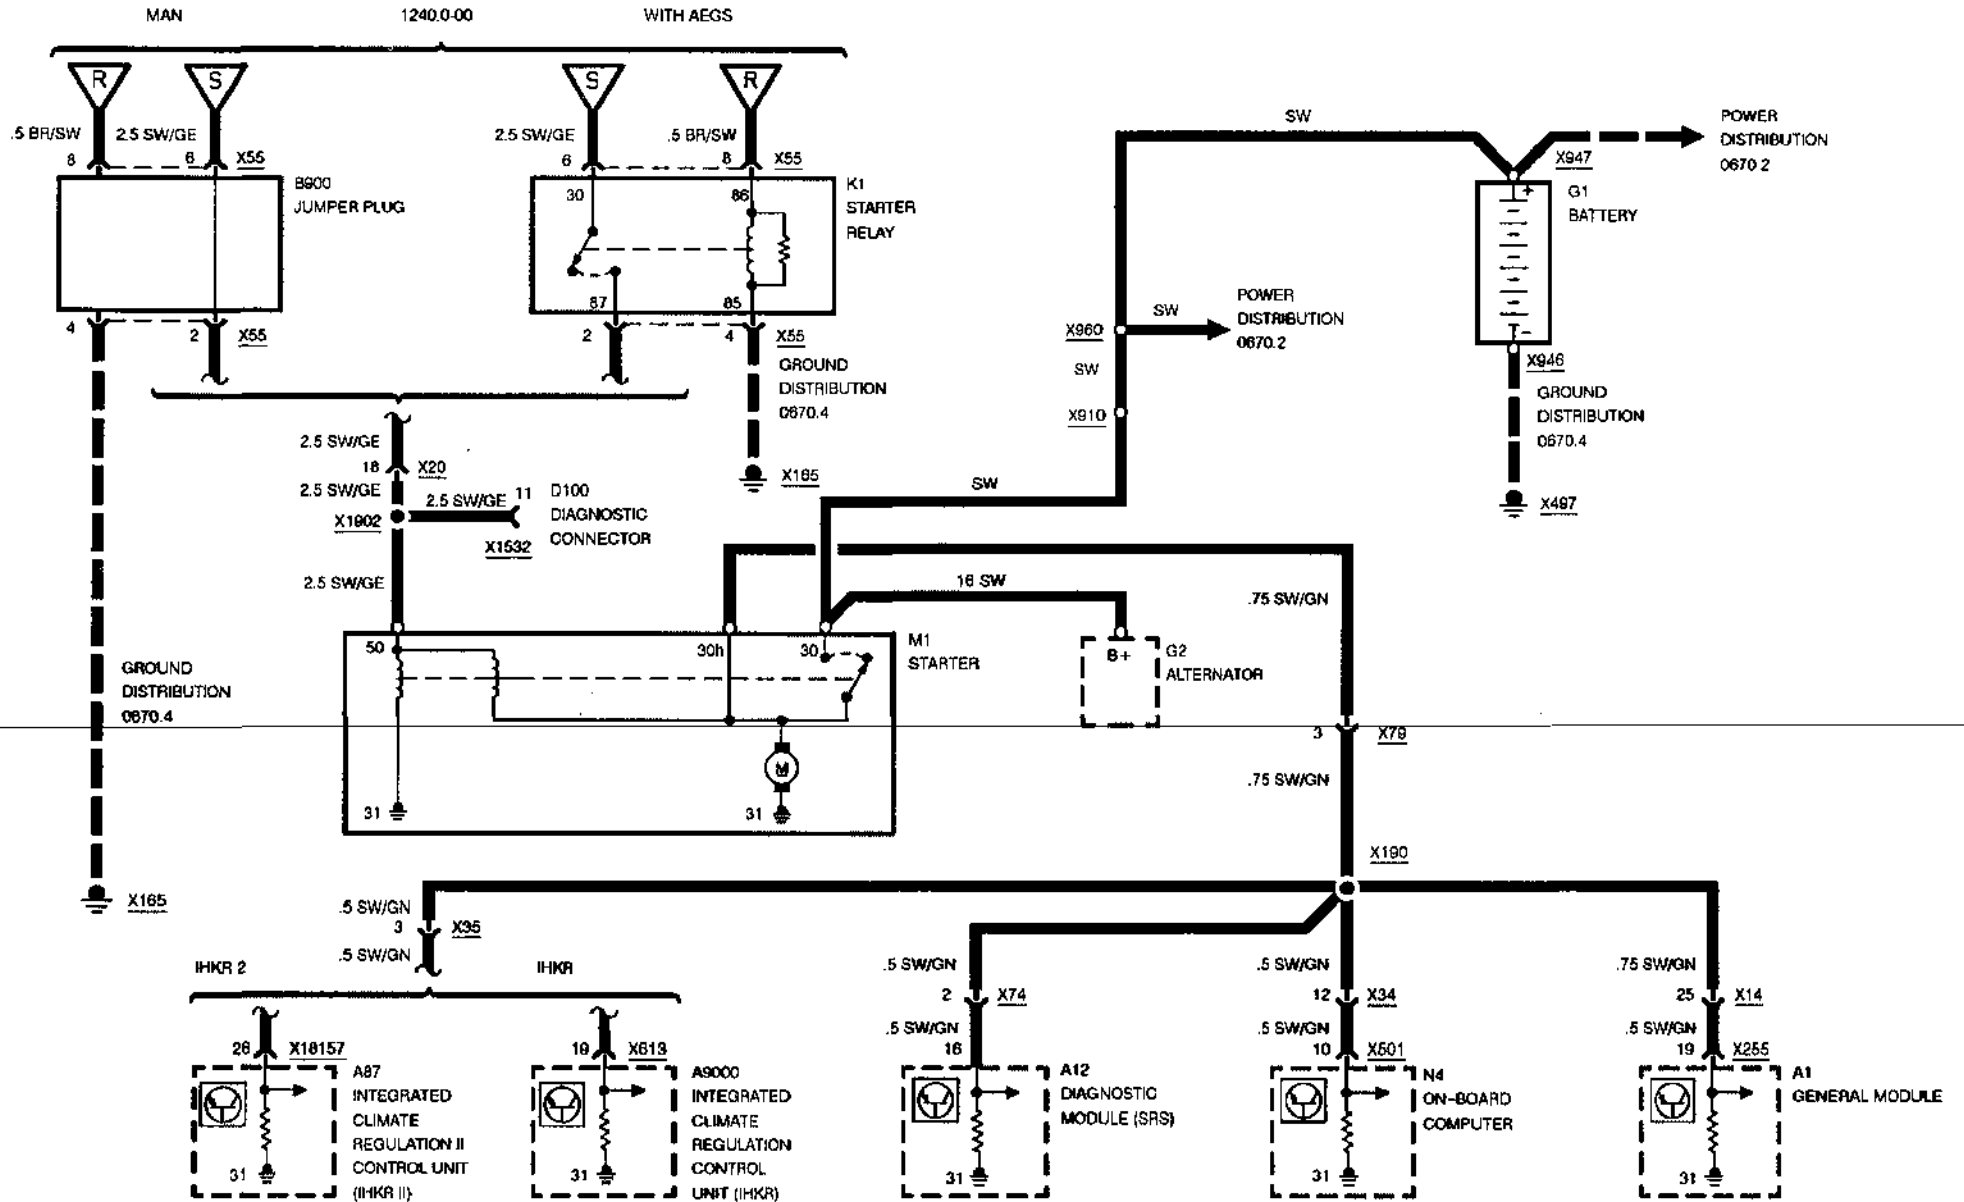


07/90


1240.0-01

1990

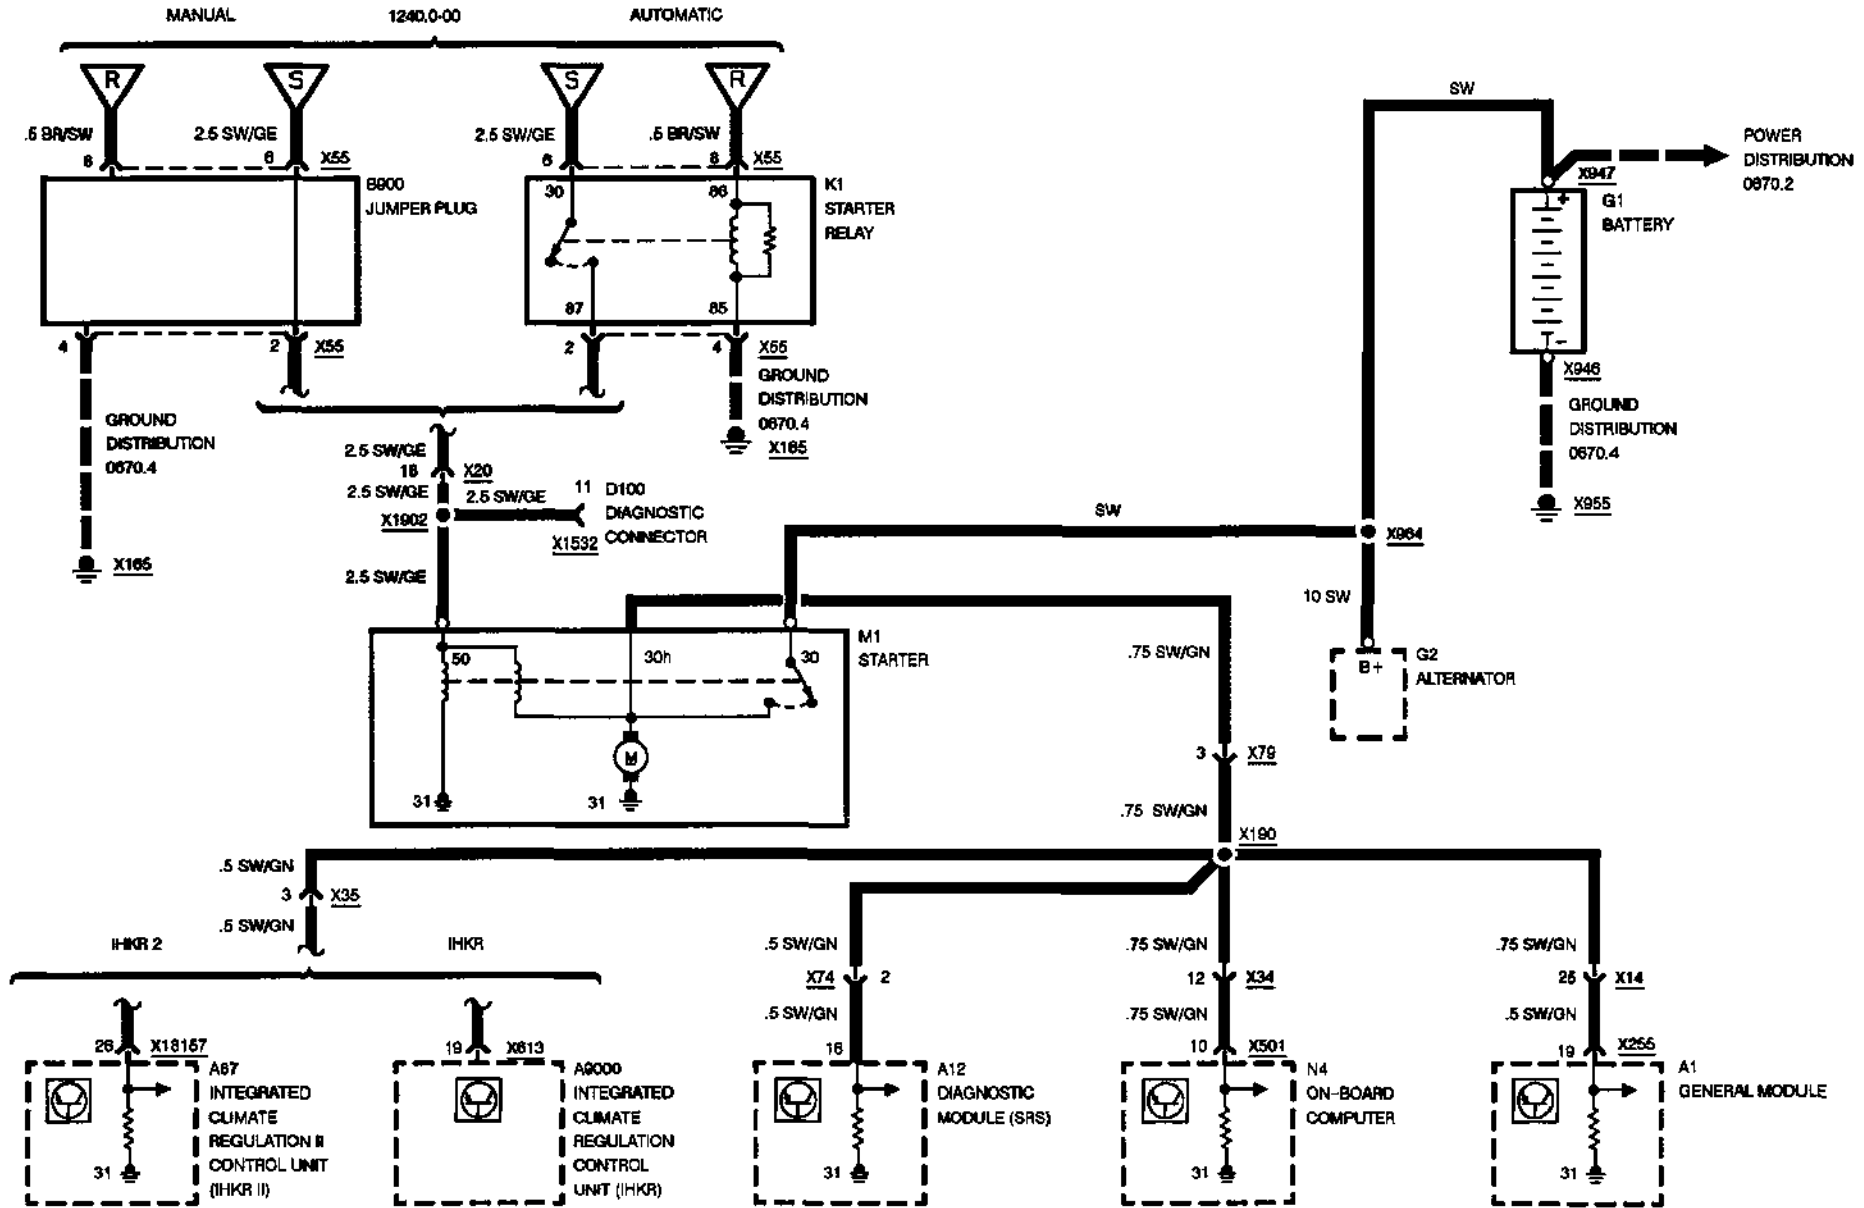

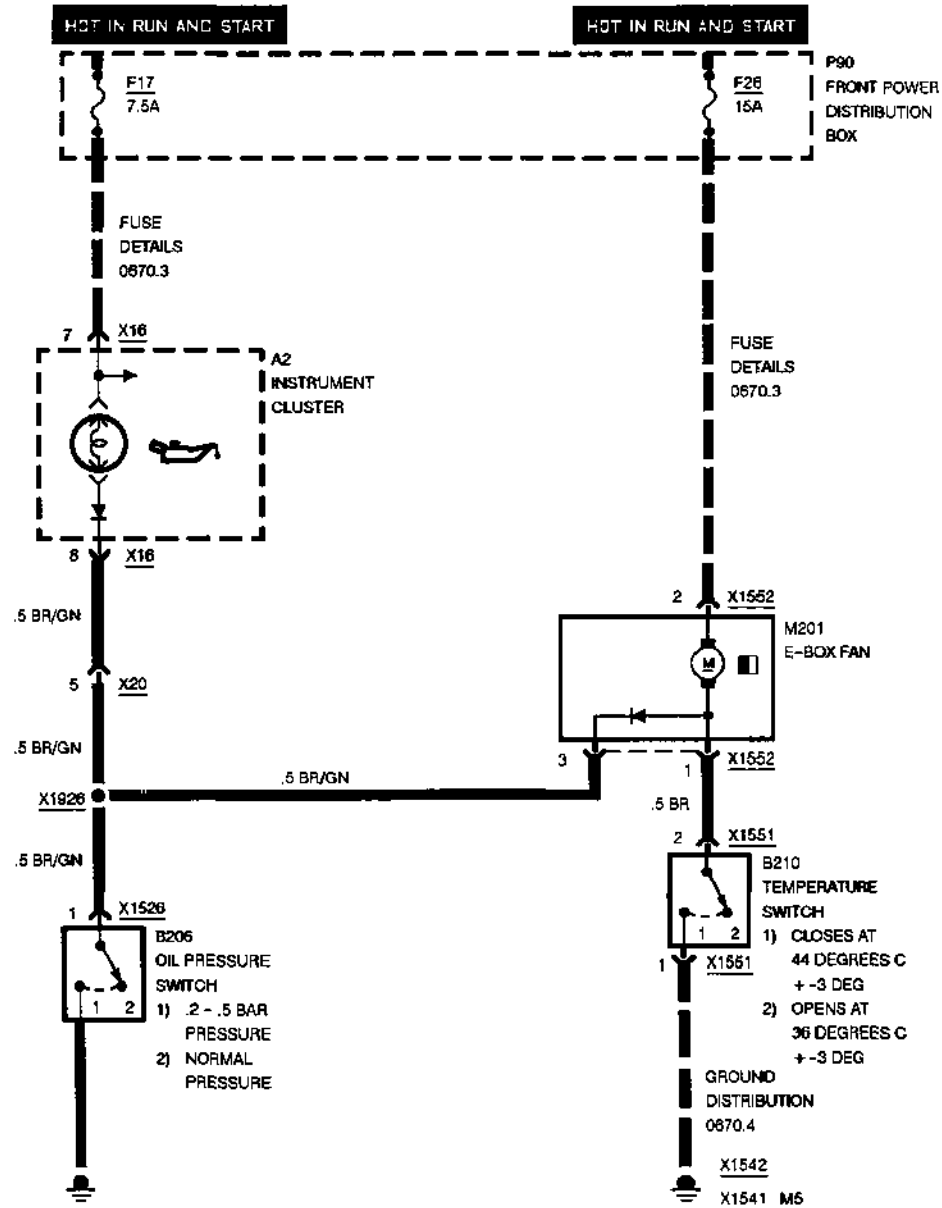


ELECTRONIC TRANSMISSION CONTROL (AEGS)

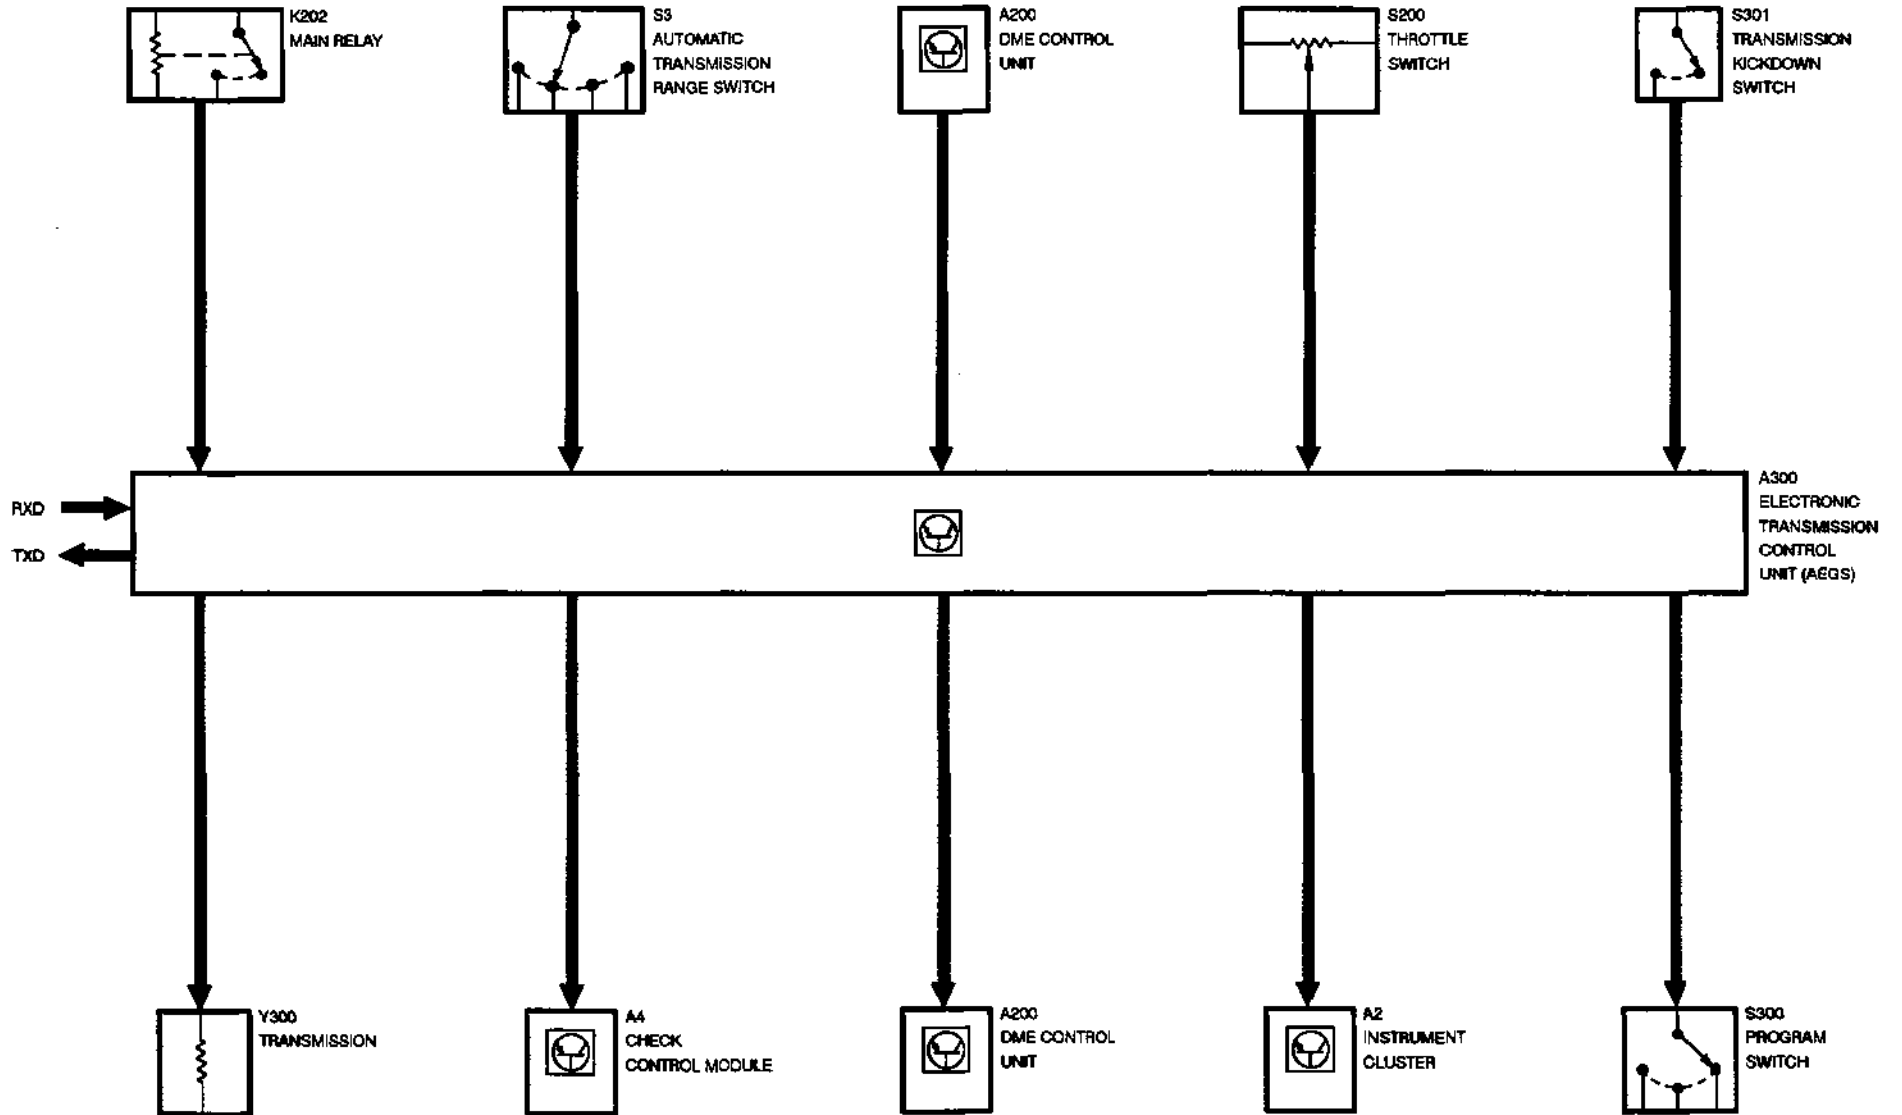




ELECTRONIC TRANSMISSION CONTROL (AEGS)

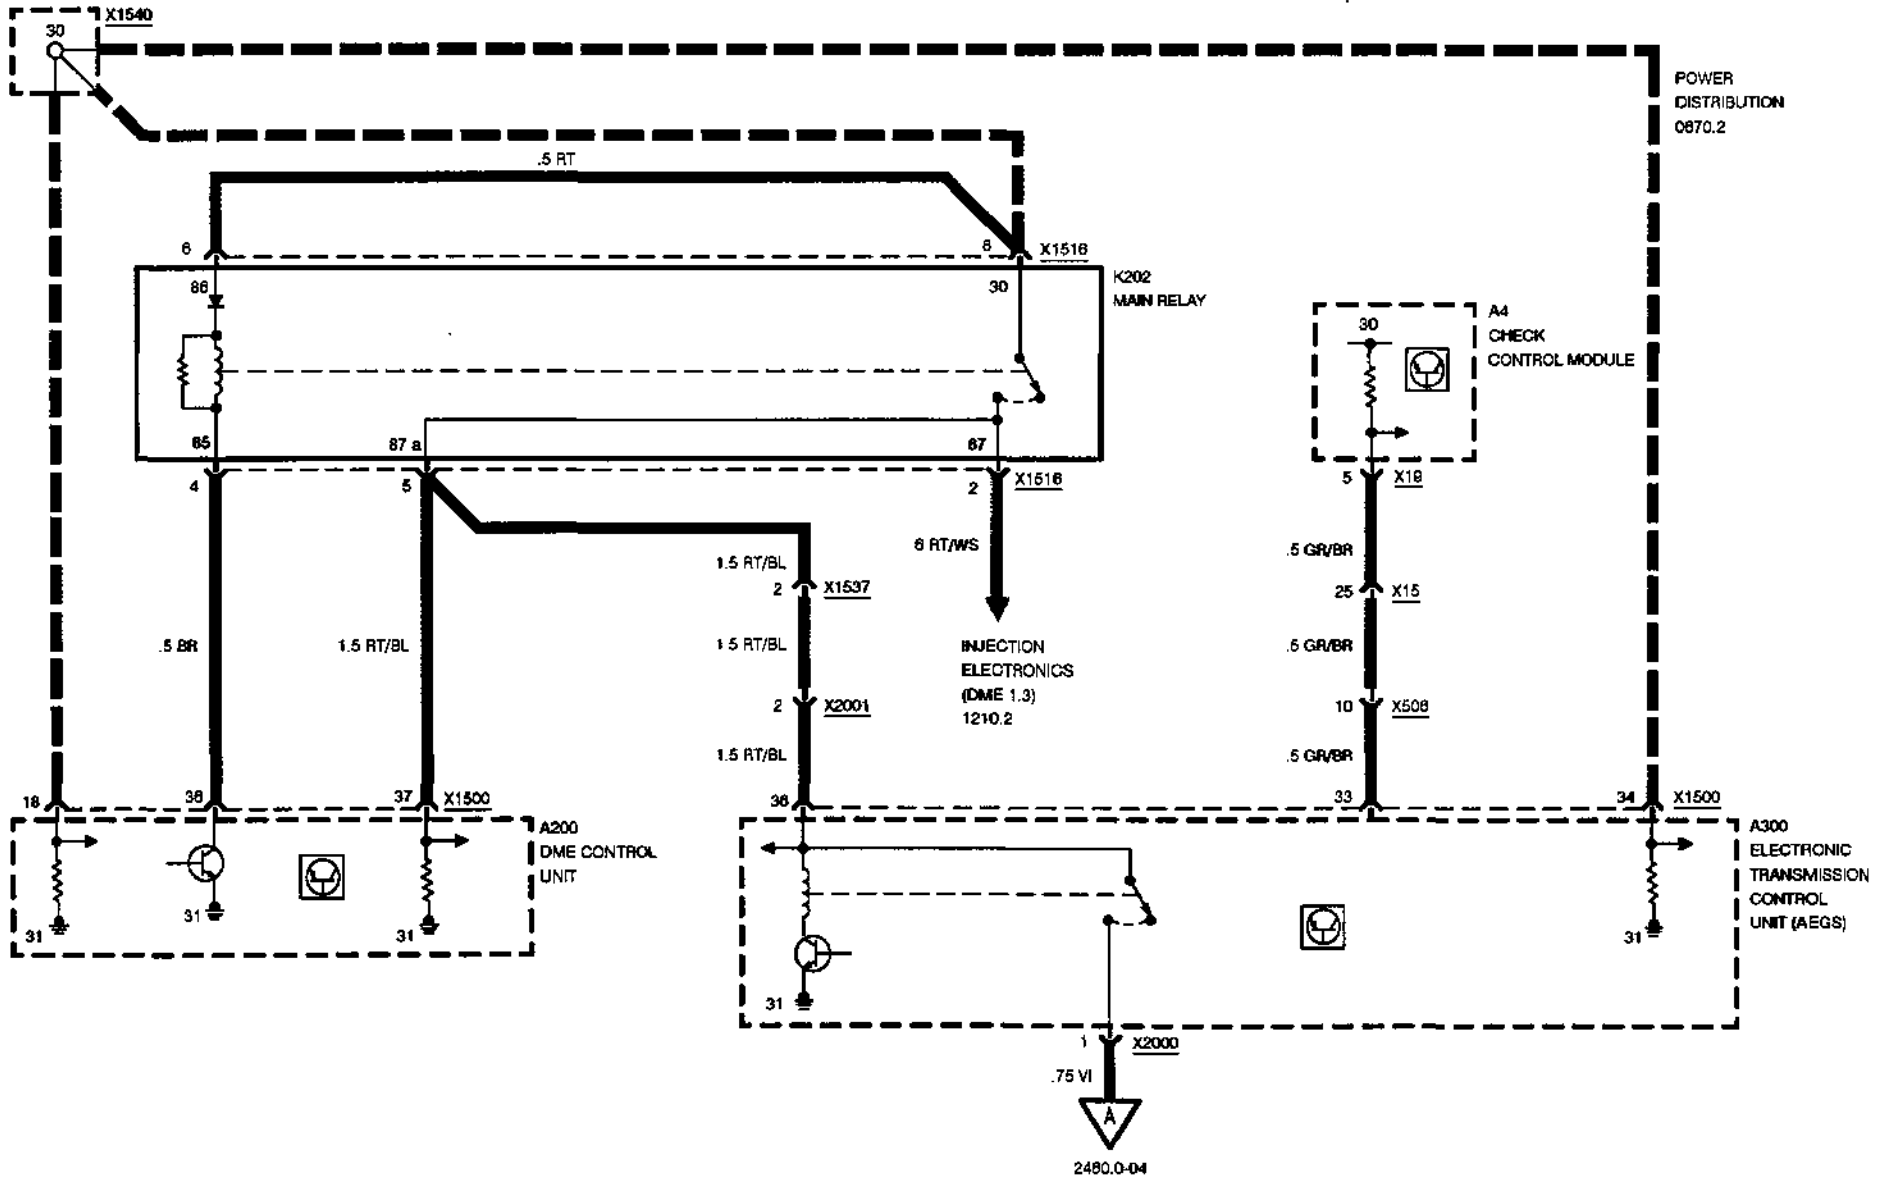




ELECTRONIC TRANSMISSION CONTROL (AEGS)

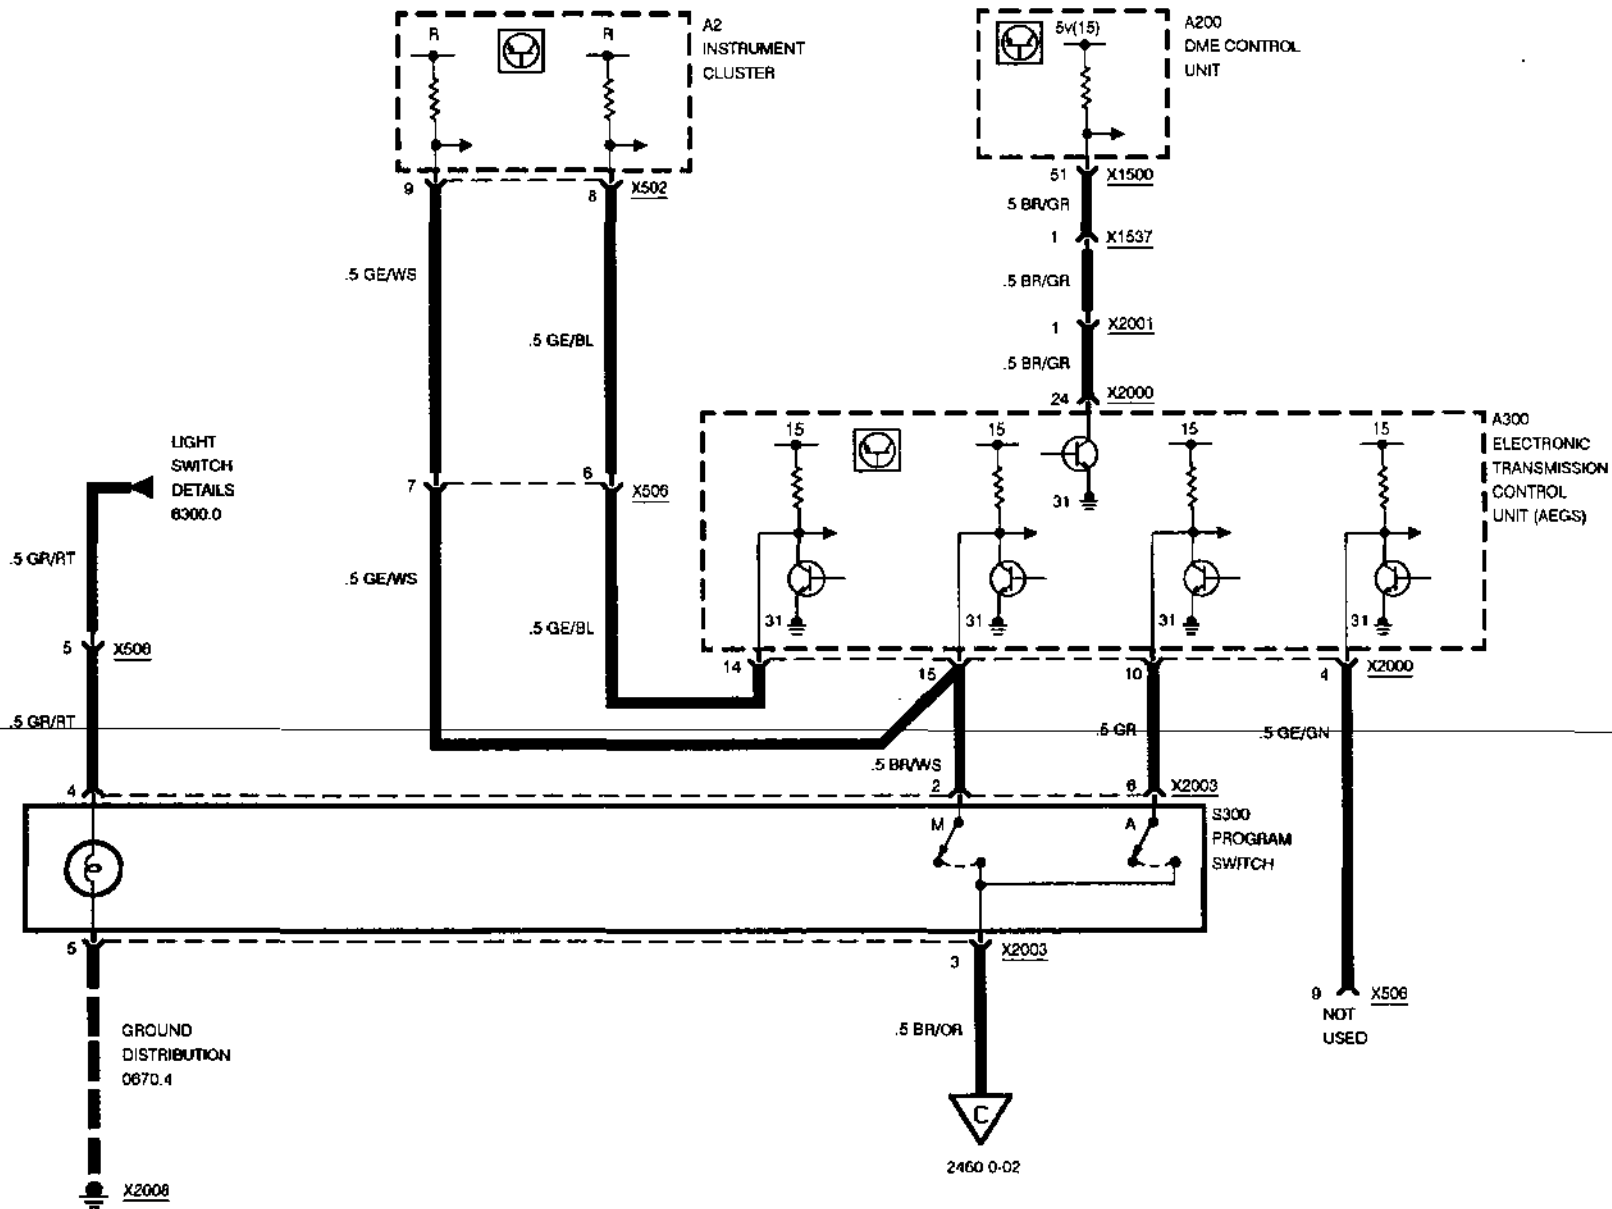


ELECTRONIC TRANSMISSION CONTROL (AEGS)

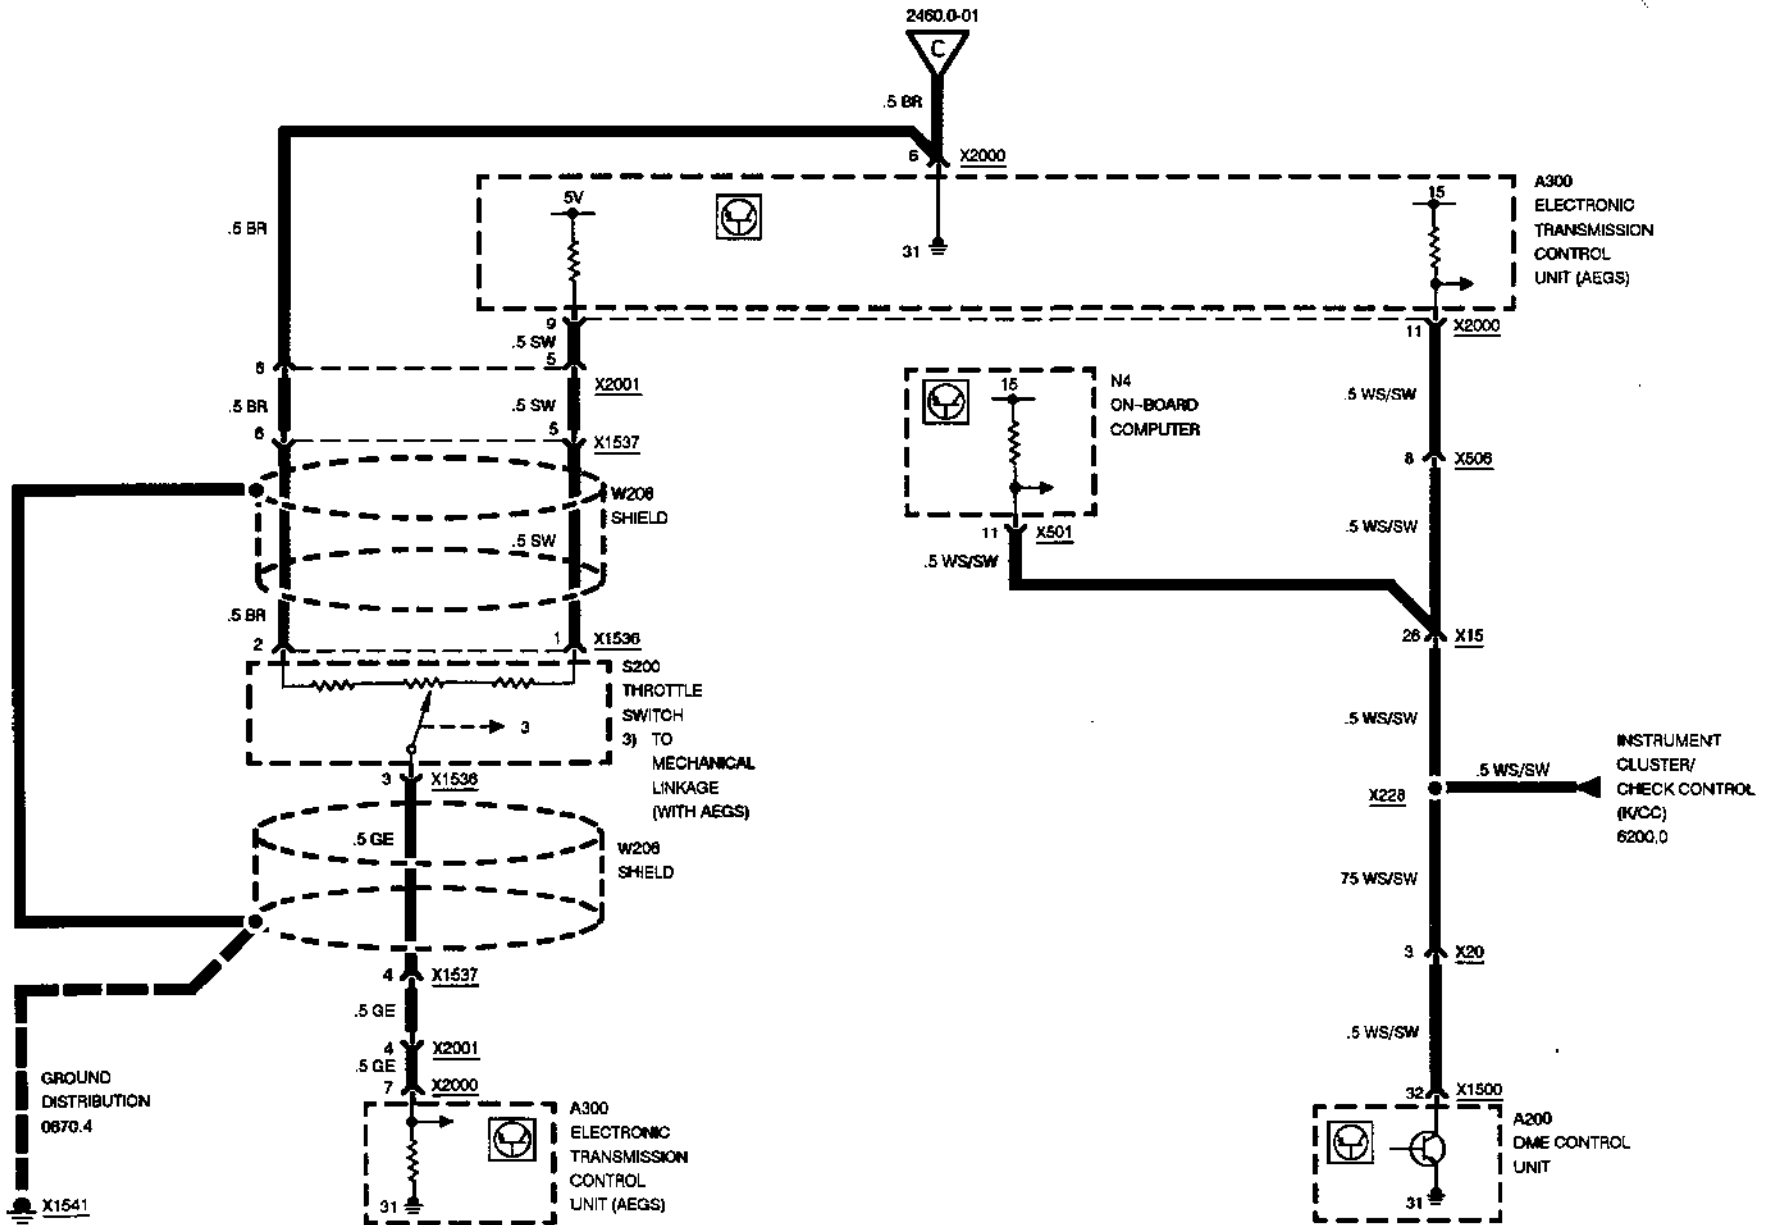




ELECTRONIC TRANSMISSION CONTROL (AEGS)

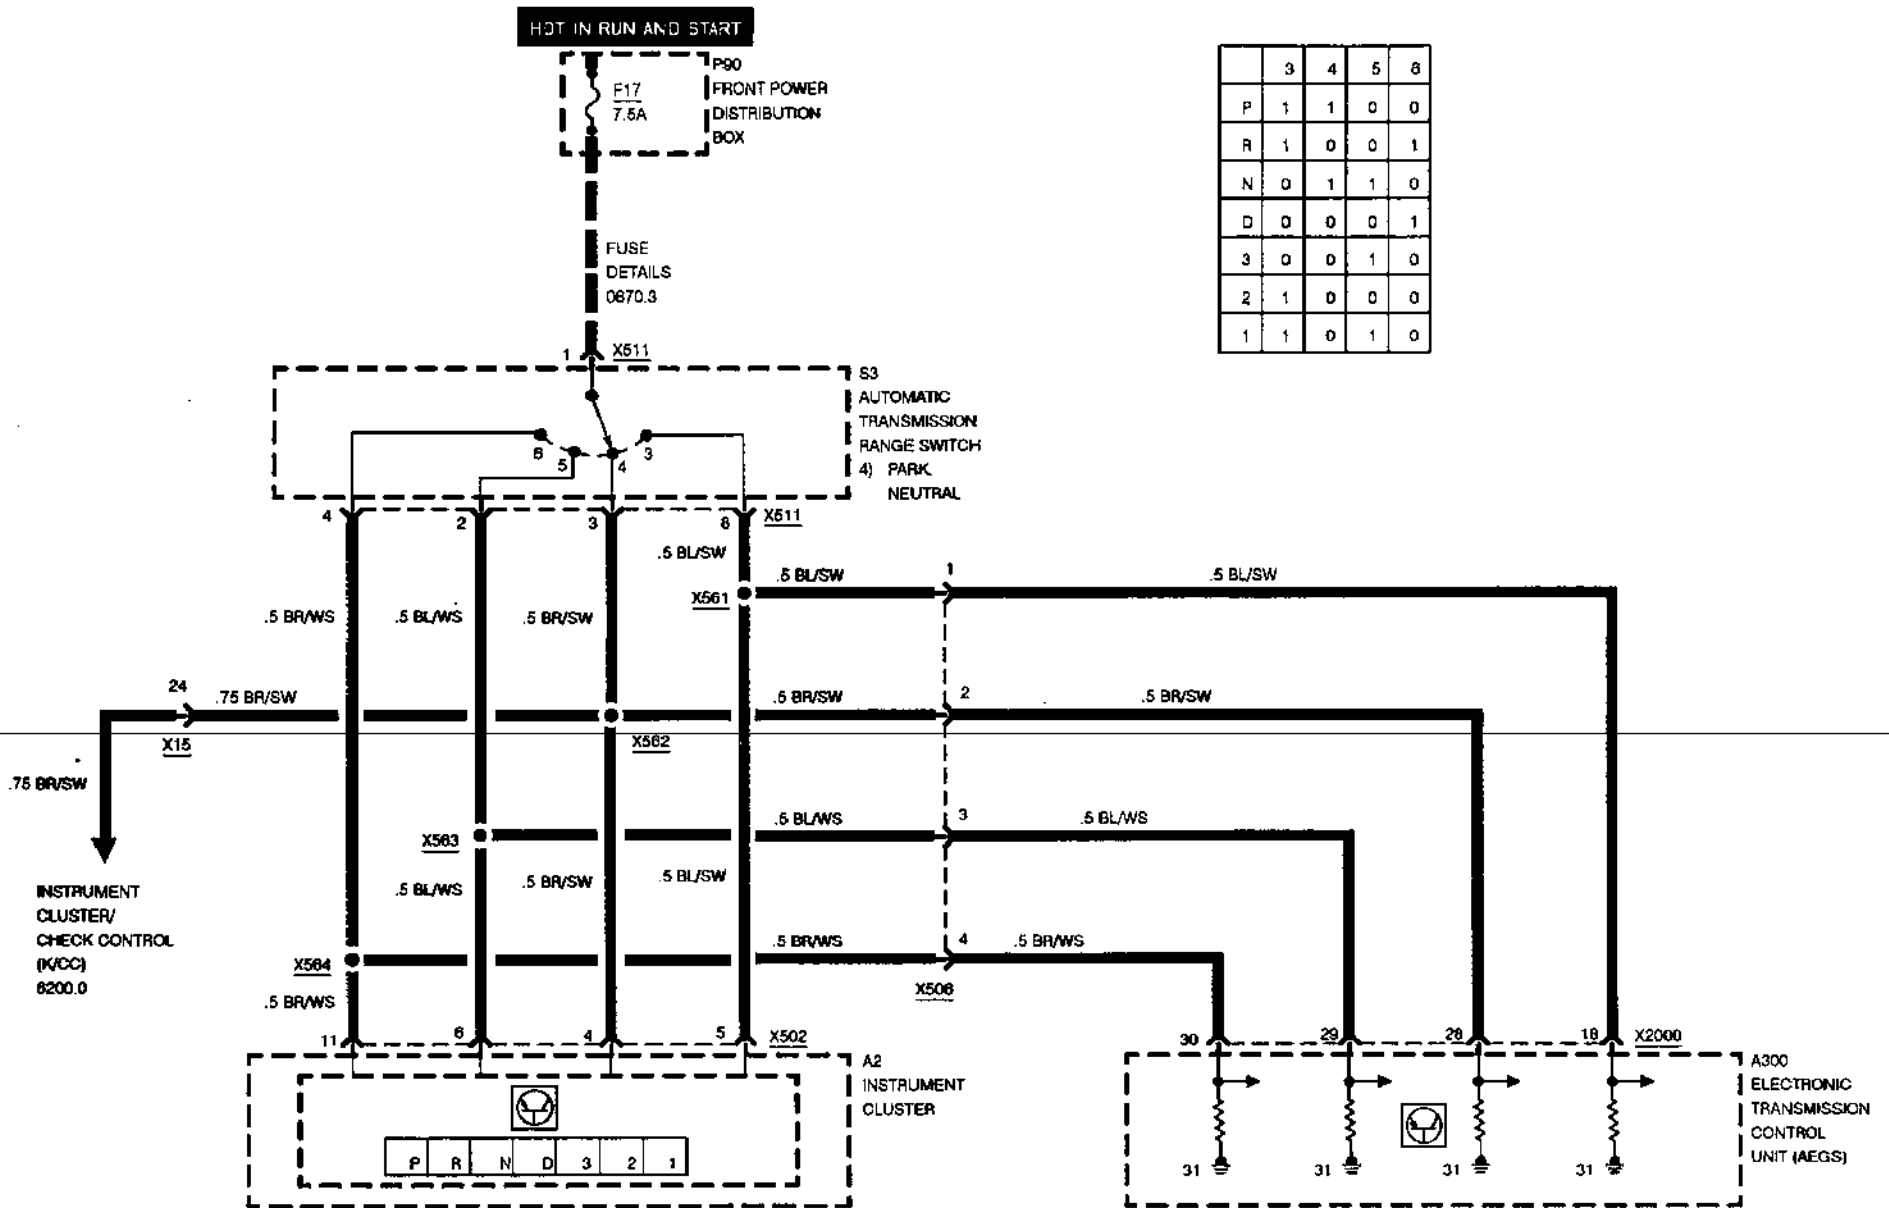




ELECTRONIC TRANSMISSION CONTROL (AEGS)

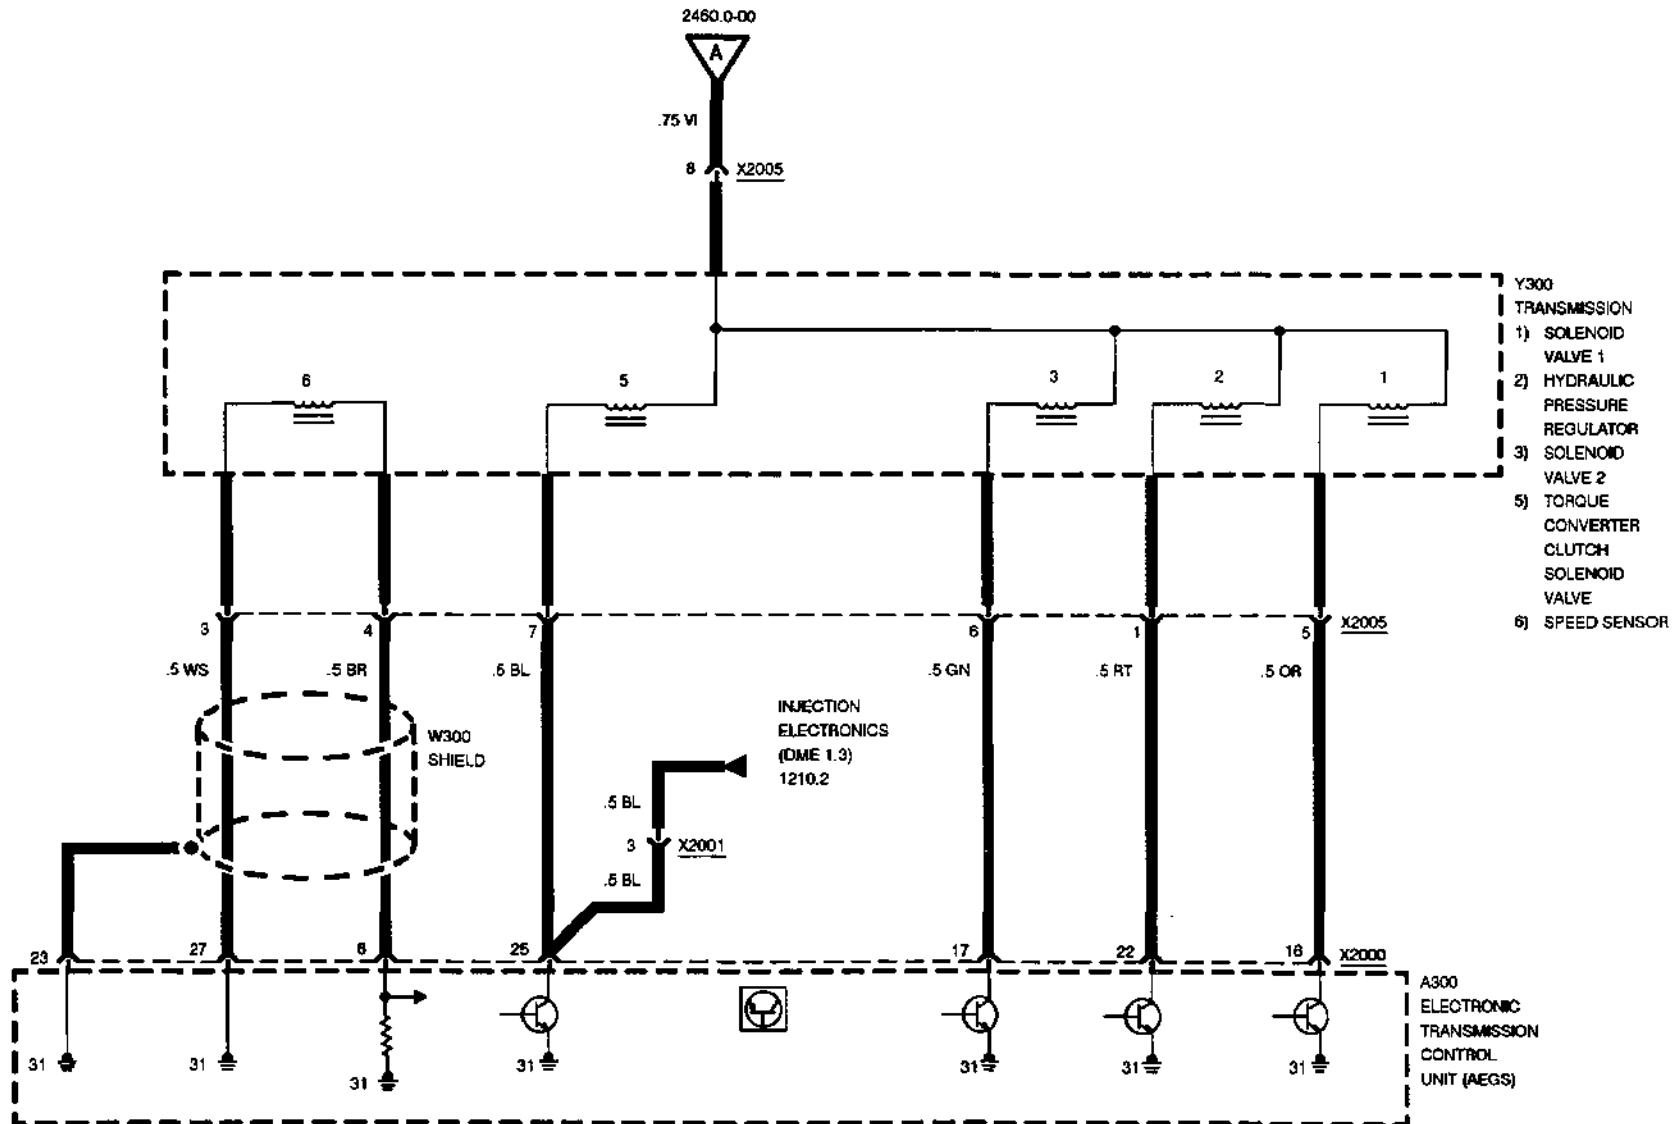




ELECTRONIC TRANSMISSION CONTROL (AEGS)

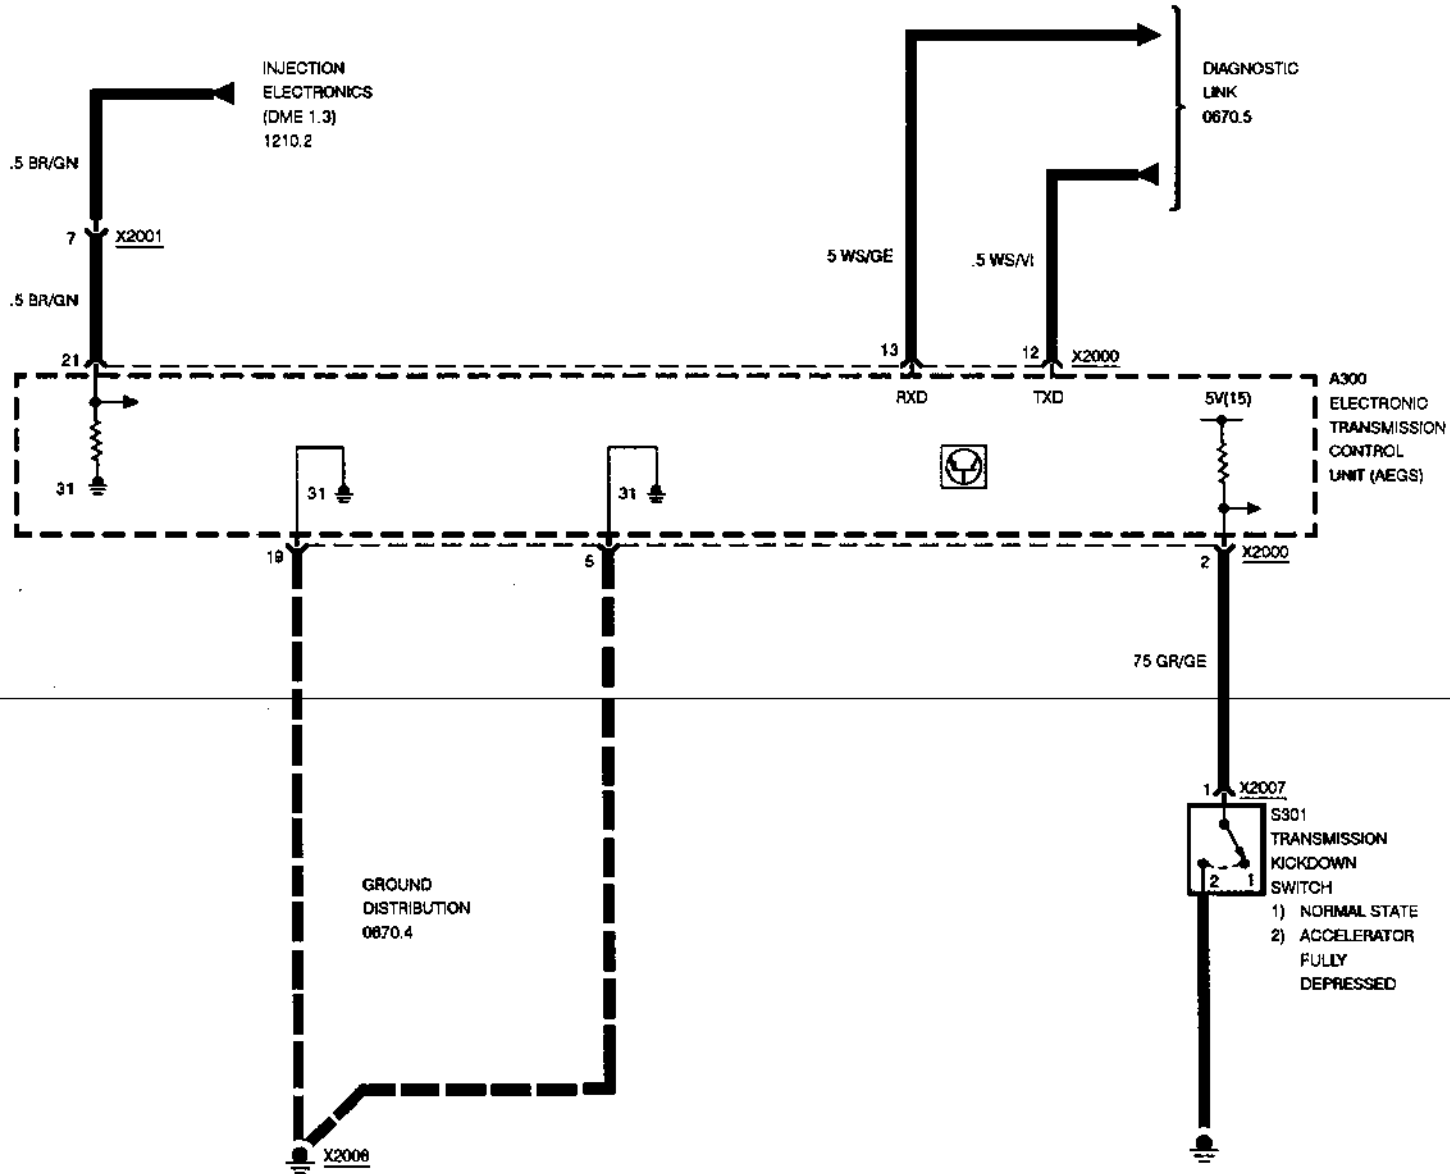




SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

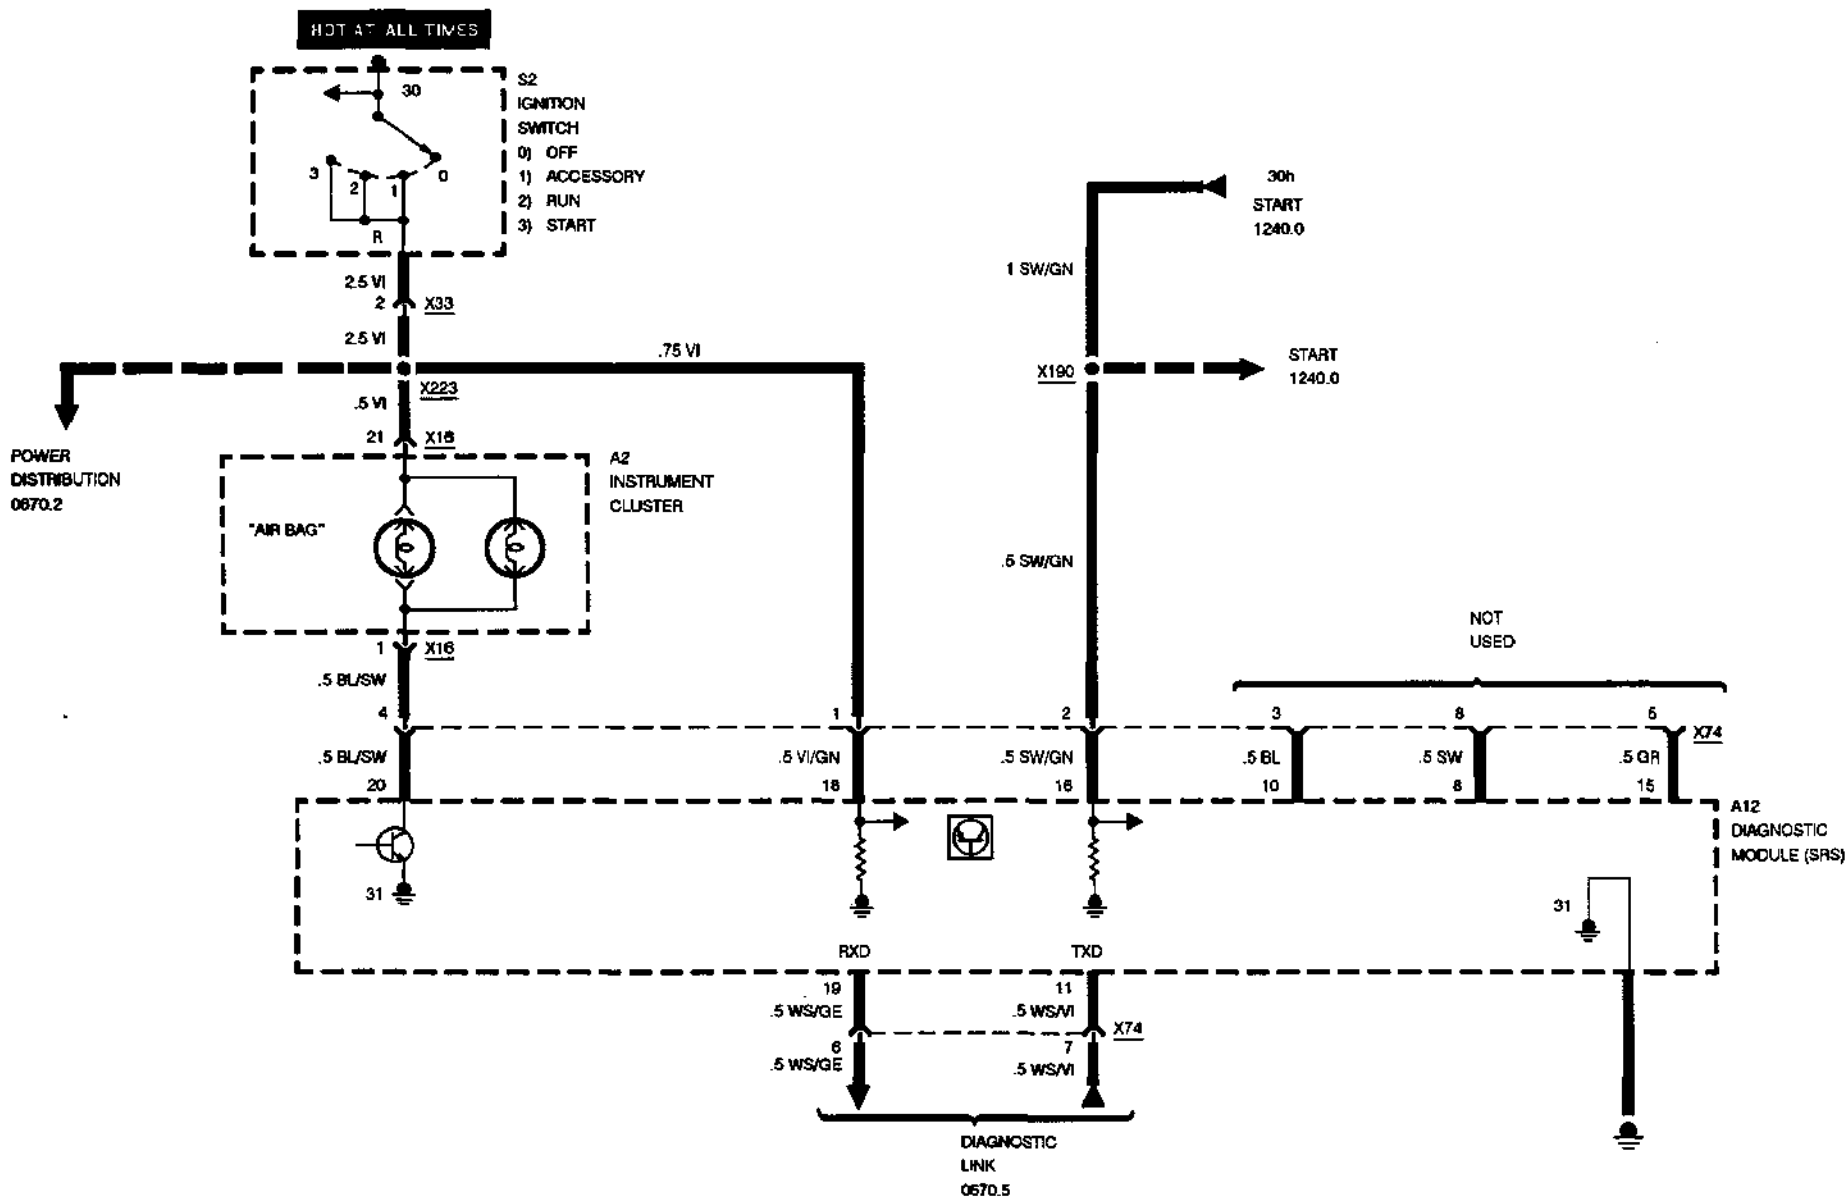

SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

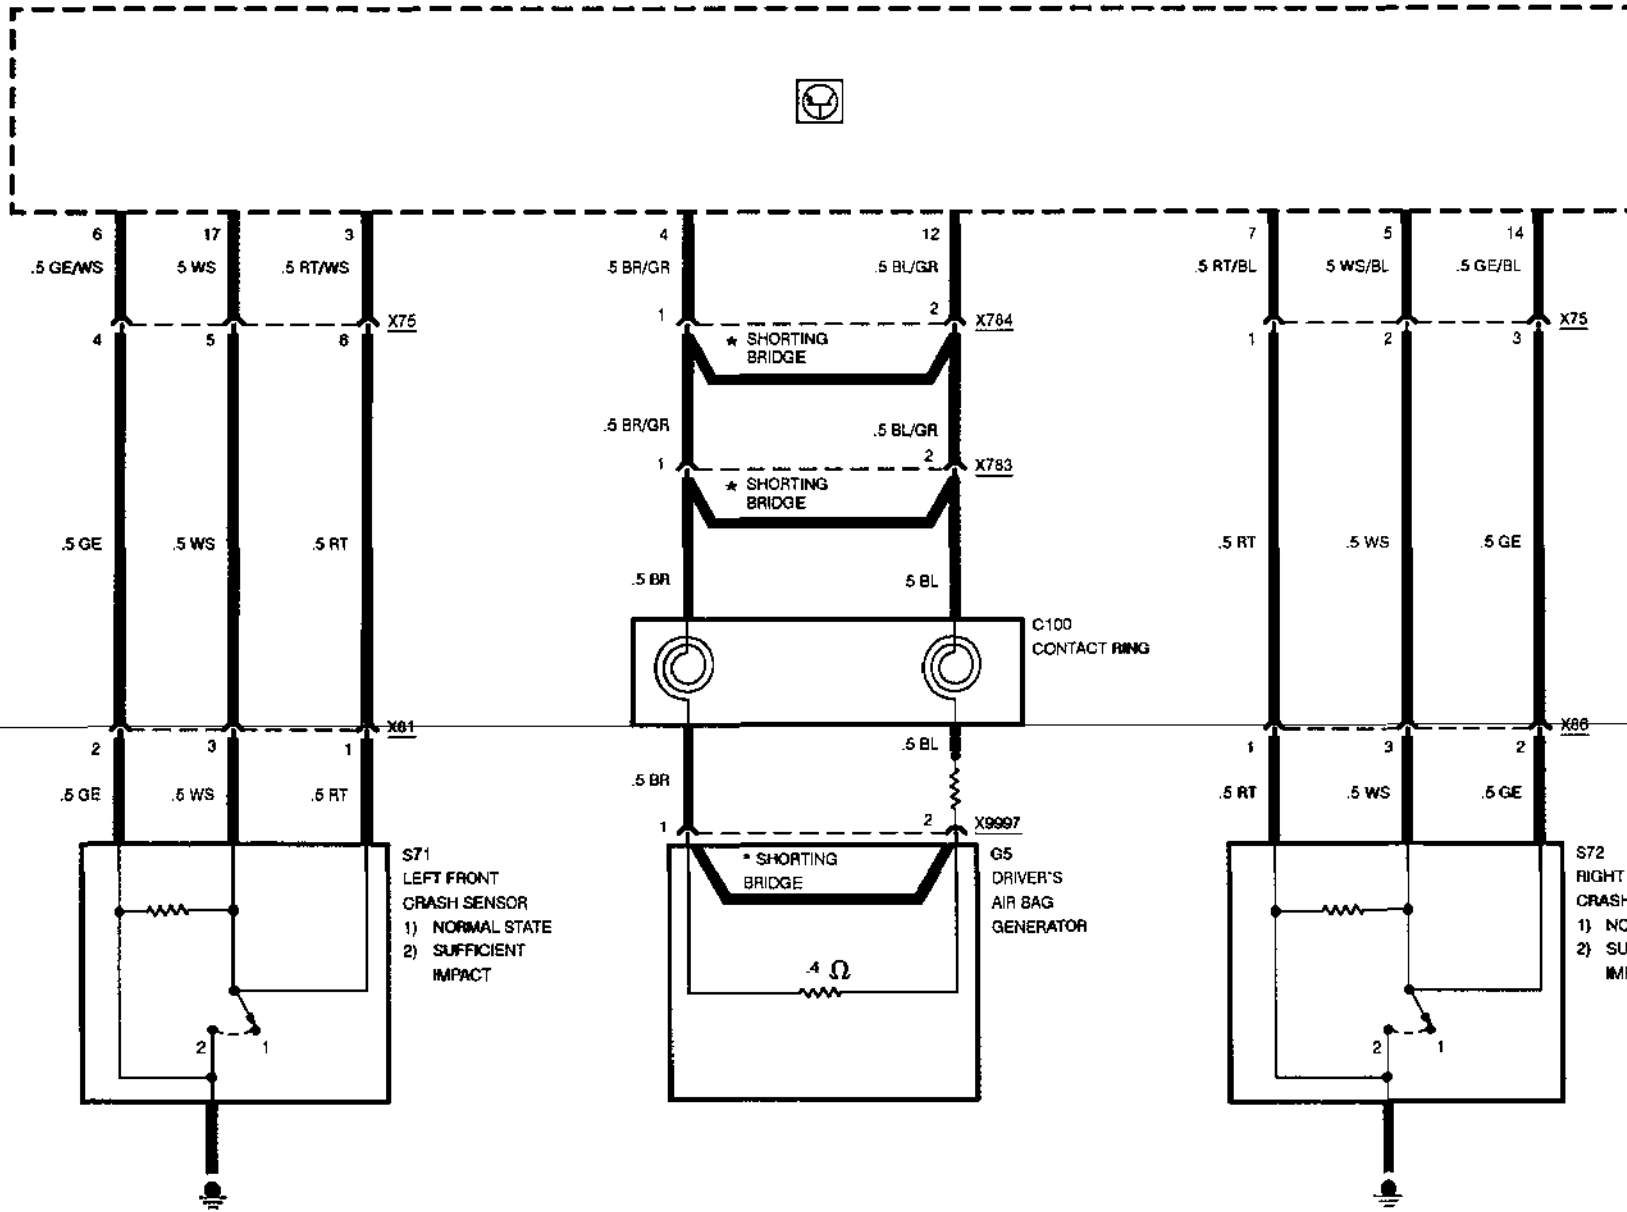

A12
DIAGNOSTIC
MODULE (SRS)

* THE DRIVER'S AIR BAG GENERATOR CONNECTOR IS FITTED WITH SHORTING BRIDGES

THE BRIDGES SHORT THE GENERATOR LEADS TOGETHER TO PREVENT UNINTENTIONAL TRIGGERING OF THE IGNITER WHEN WORKING ON THE AIR BAG SYSTEM.

ONLY SPECIAL TOOLS 62 1260 AND 62 1280 (TEST LEADS) MAY BE USED TO CHECK THE WIRE LOOP AND IGNITER RESISTANCE.


S71
LEFT FRONT
CRASH SENSOR
1) NORMAL STATE
2) SUFFICIENT
IMPACT

G5
DRIVER'S
AIR BAG
GENERATOR

S72
RIGHT FRONT
CRASH SENSOR
1) NORMAL STATE
2) SUFFICIENT
IMPACT




POWER ASSIST STEERING (SERVOTRONIC)

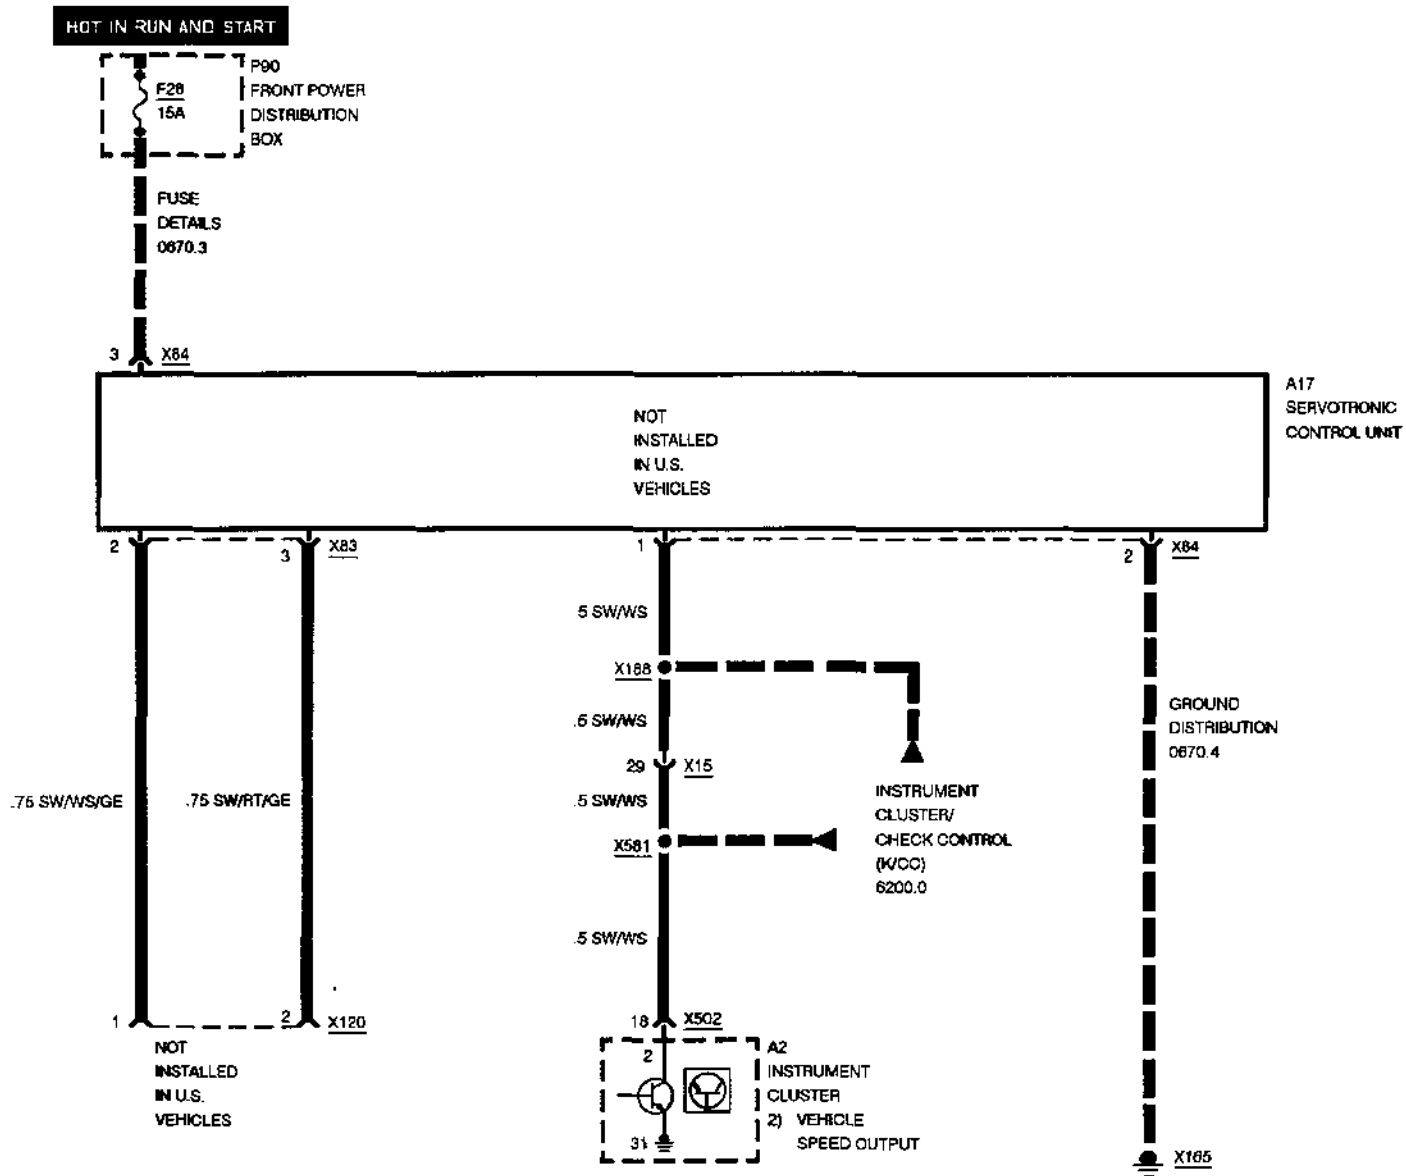




ANTILOCK BRAKE SYSTEM (ABS)

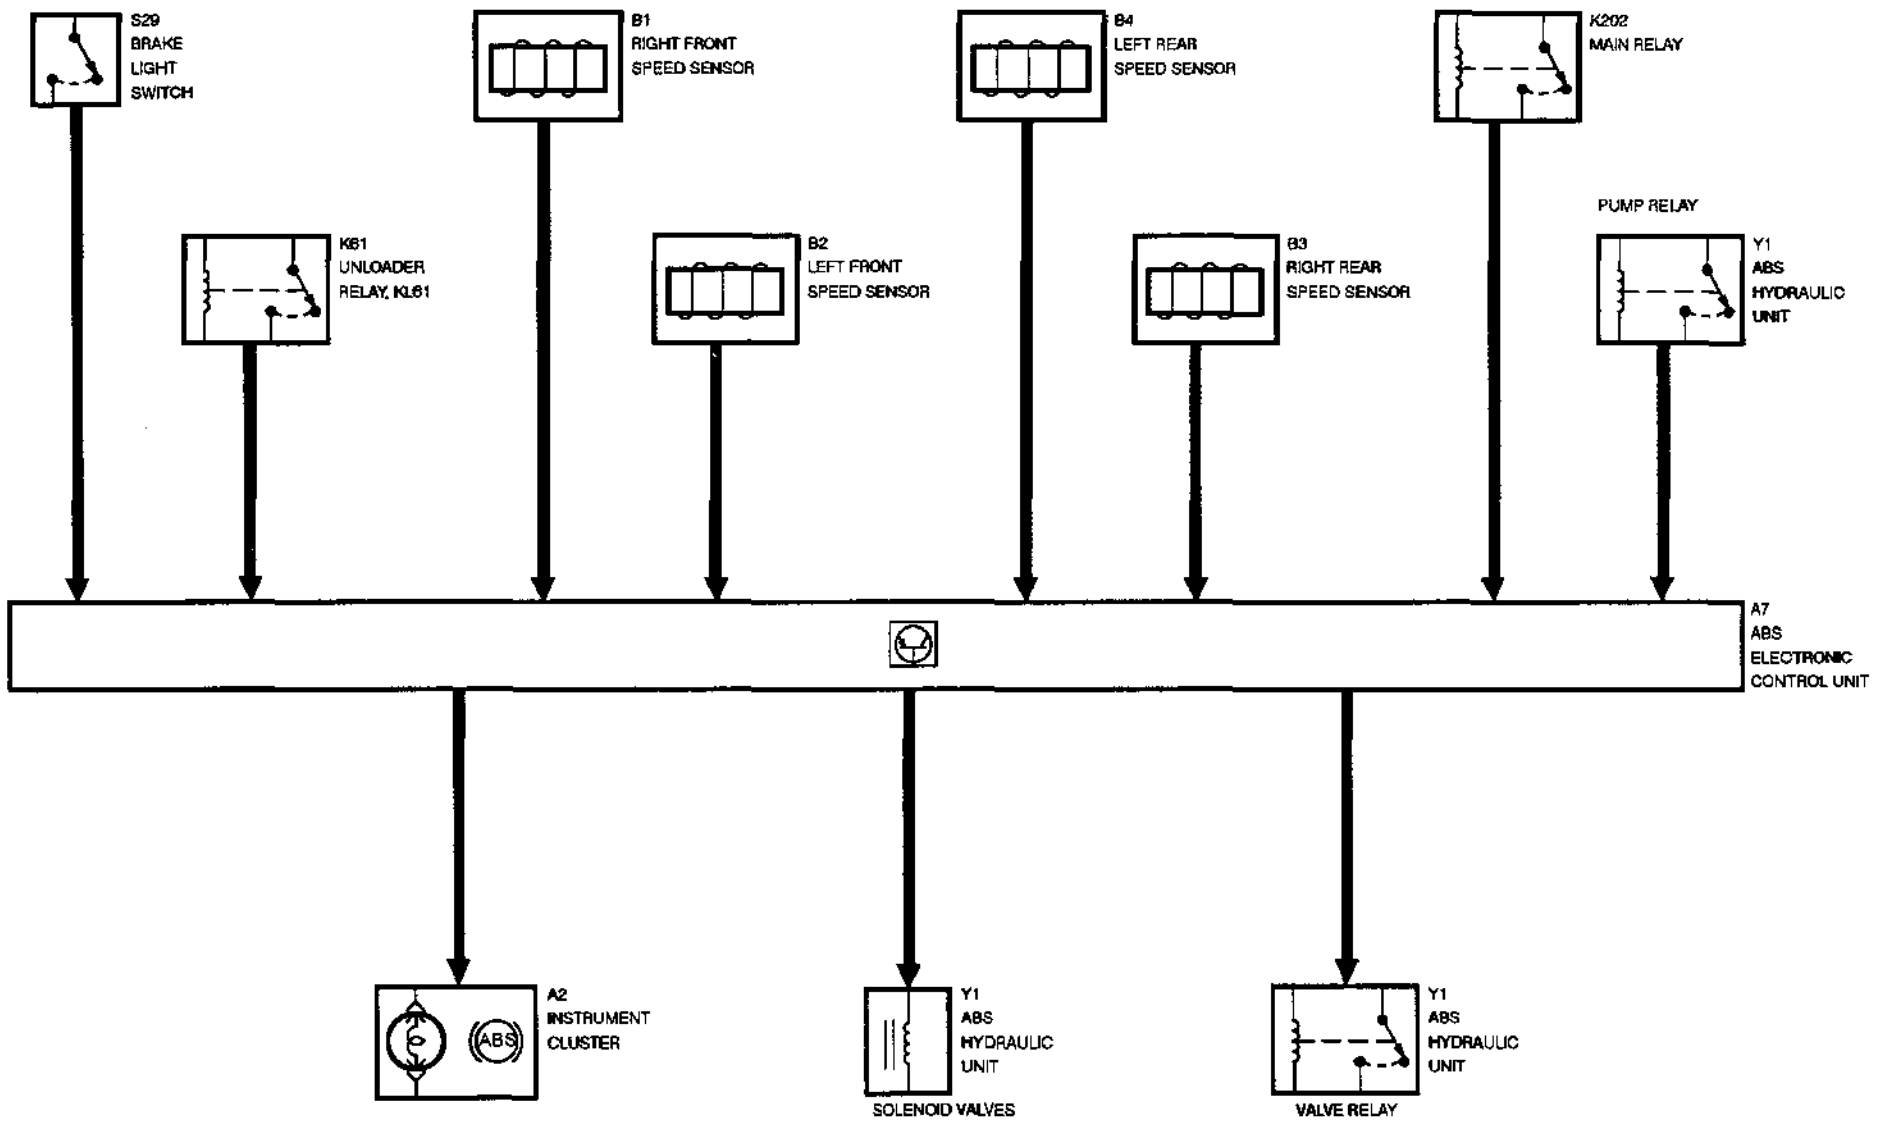


3450.0




ANTILOCK BRAKE SYSTEM (ABS)

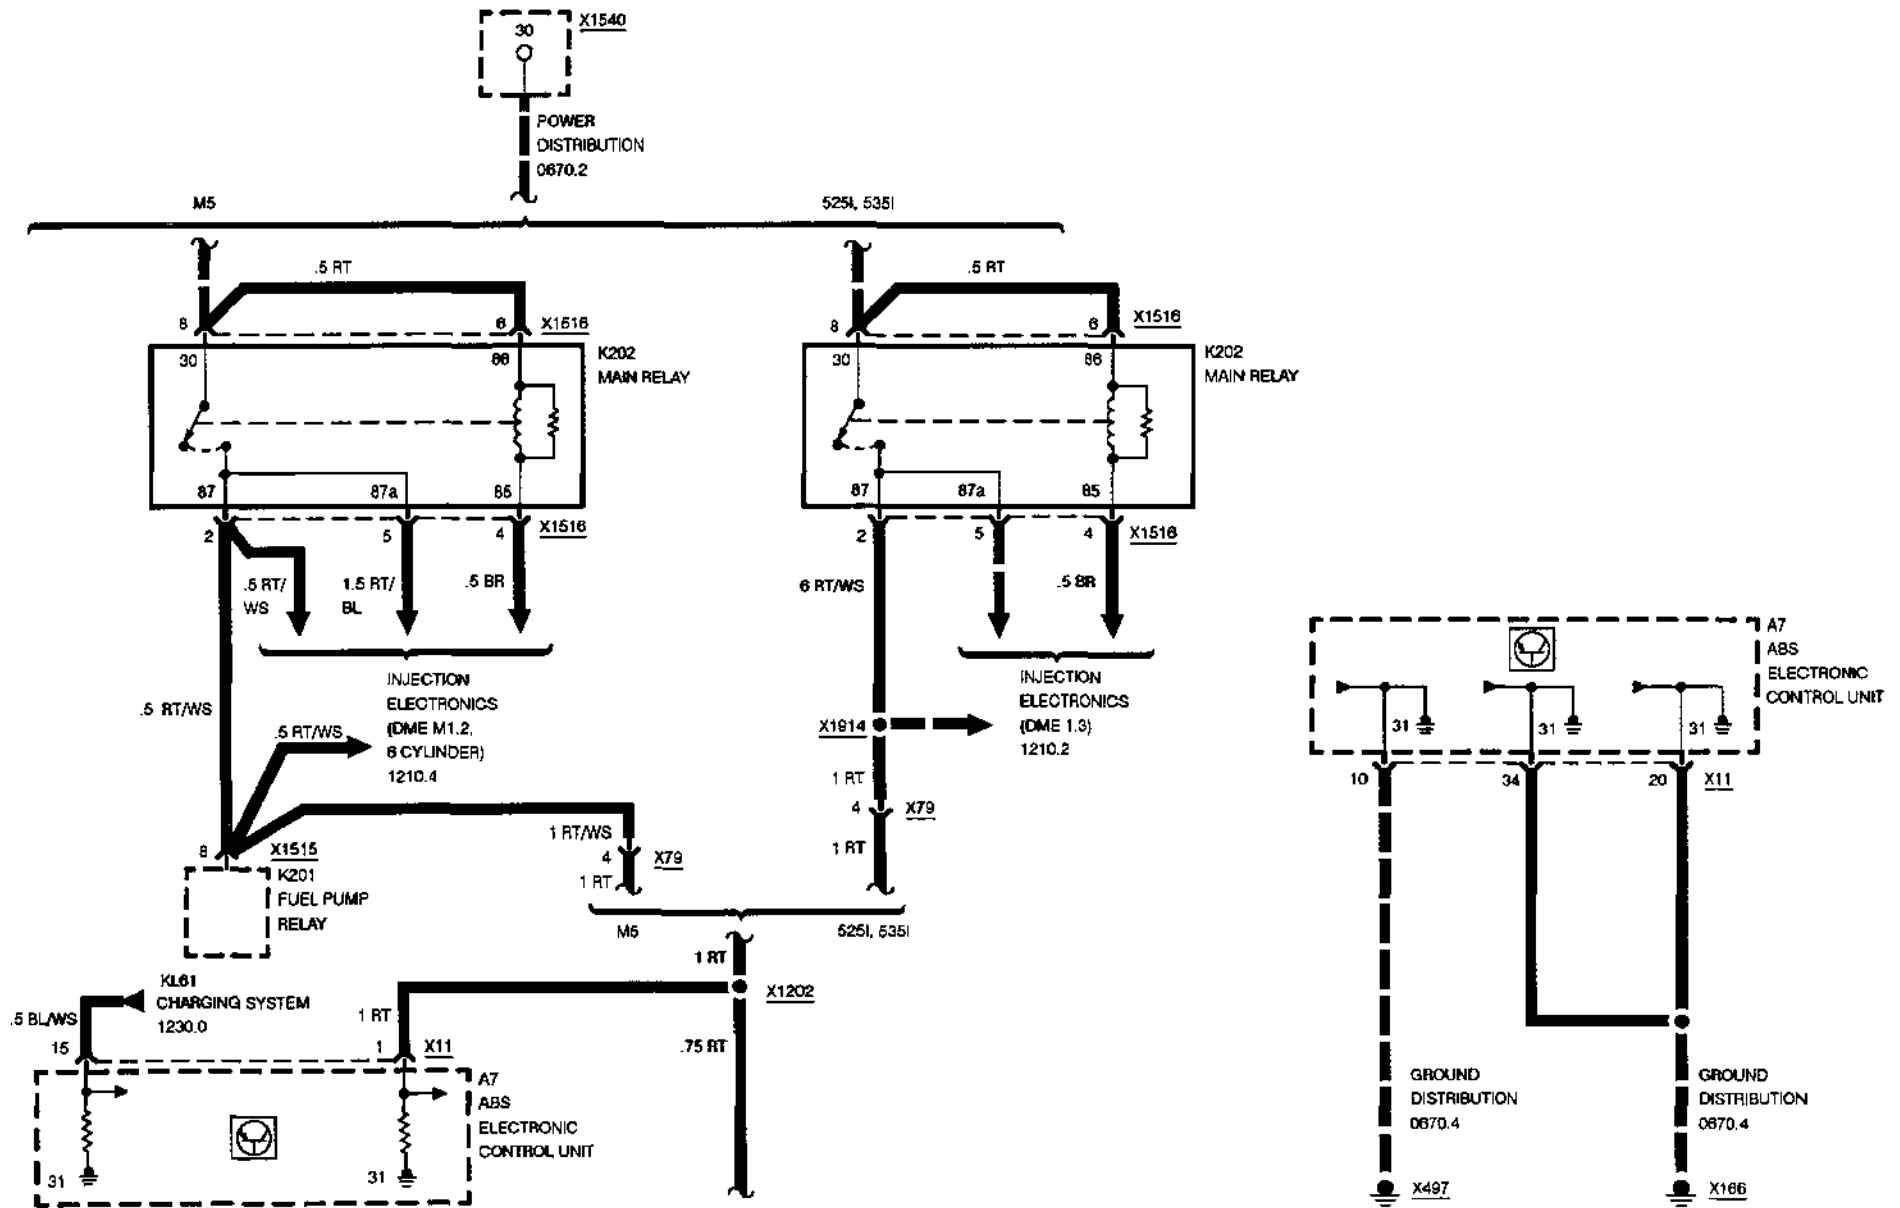

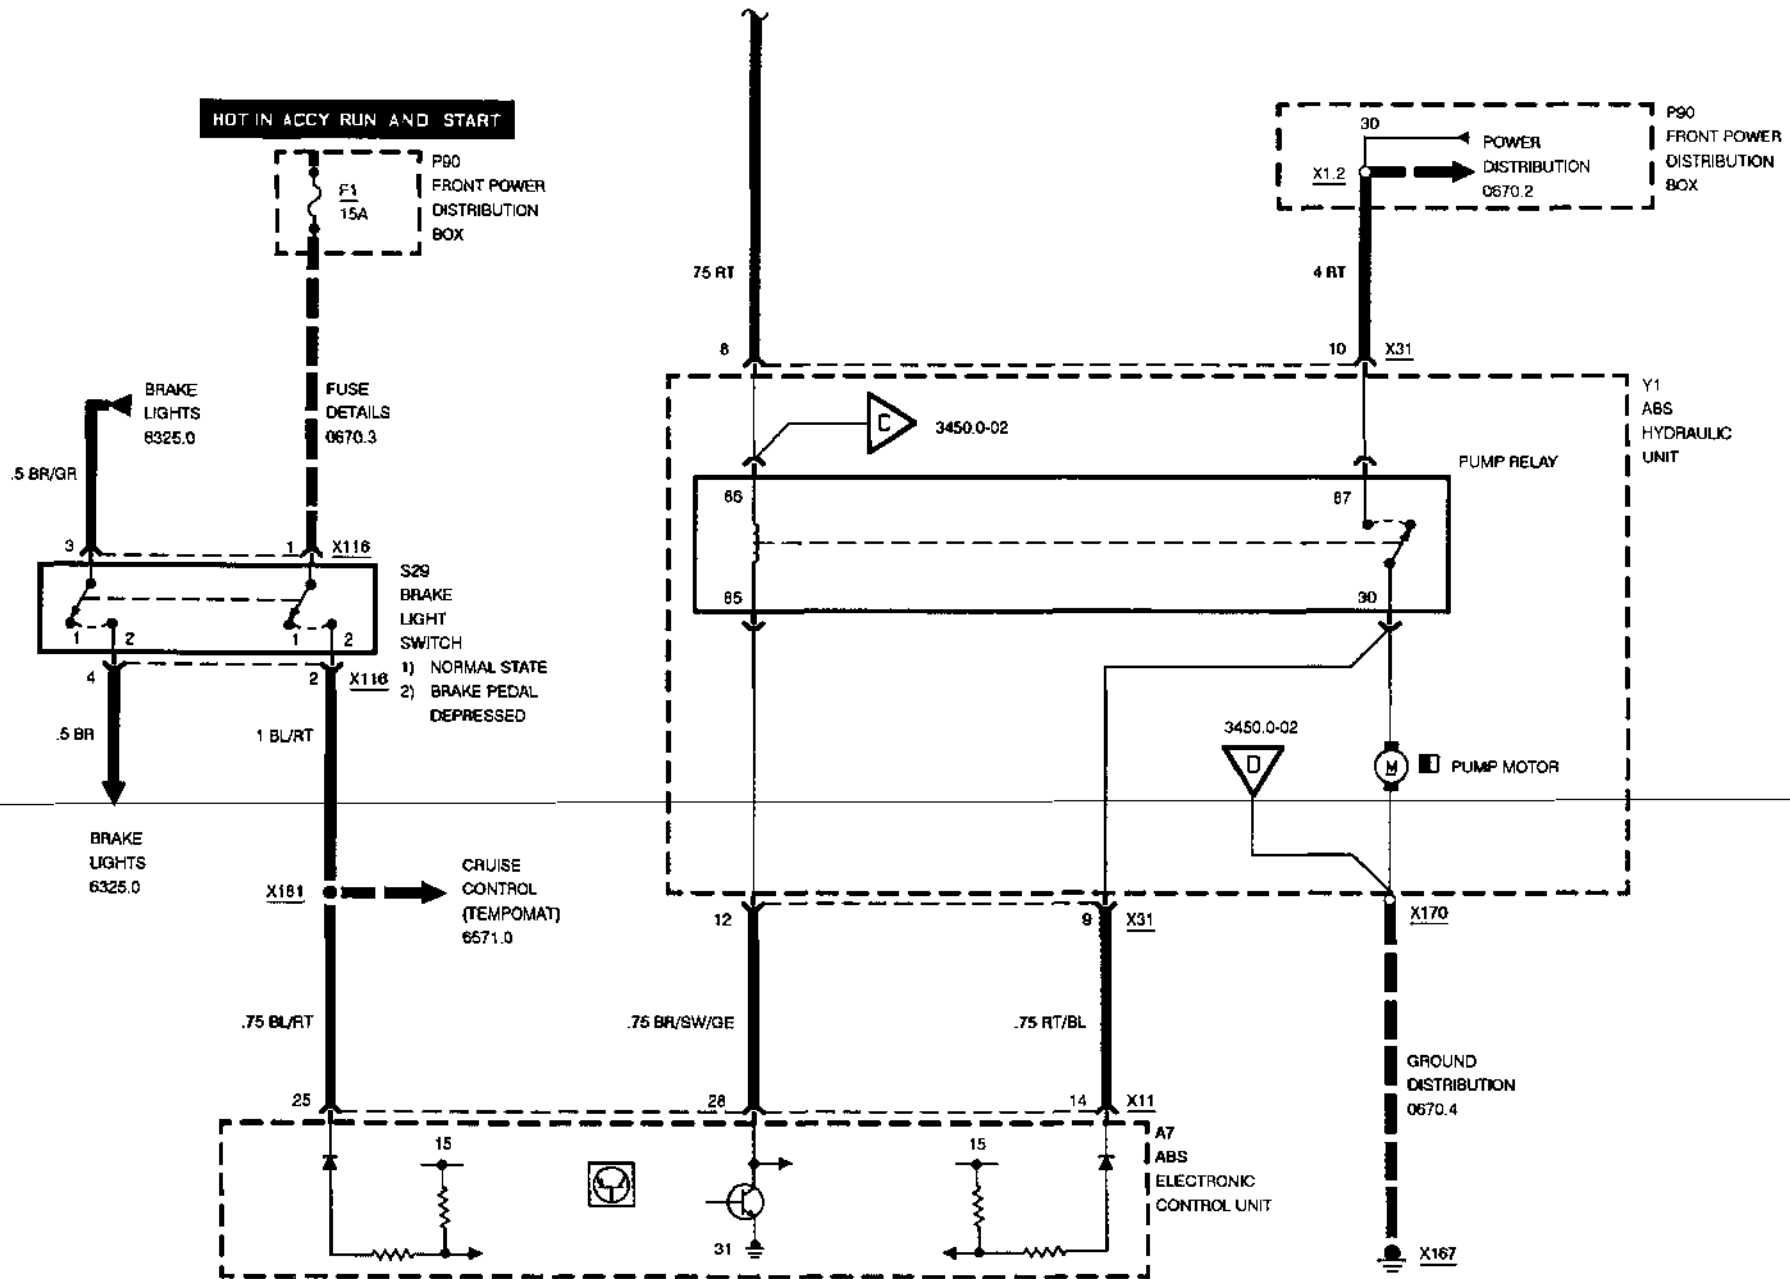




ANTILOCK BRAKE SYSTEM (ABS)

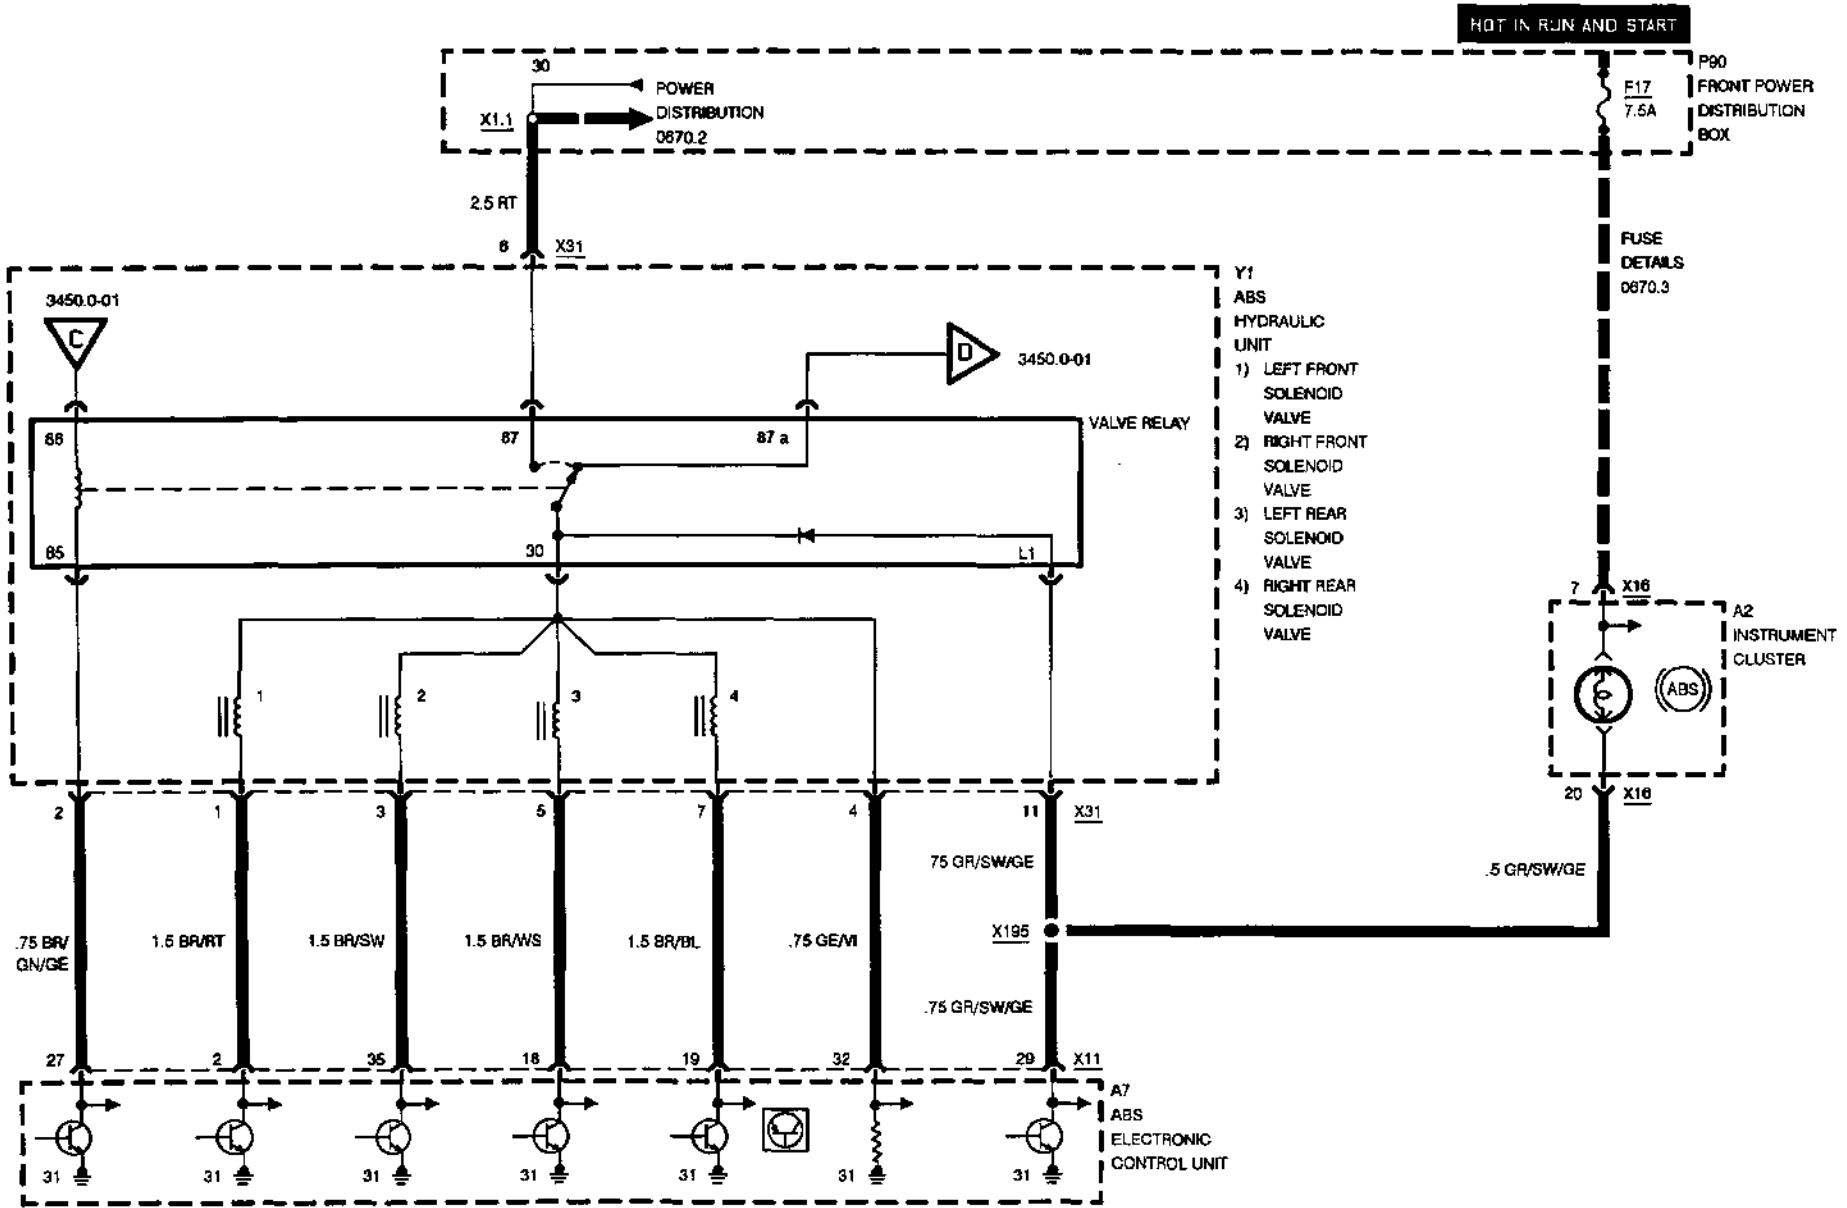



ANTILOCK BRAKE SYSTEM (ABS)

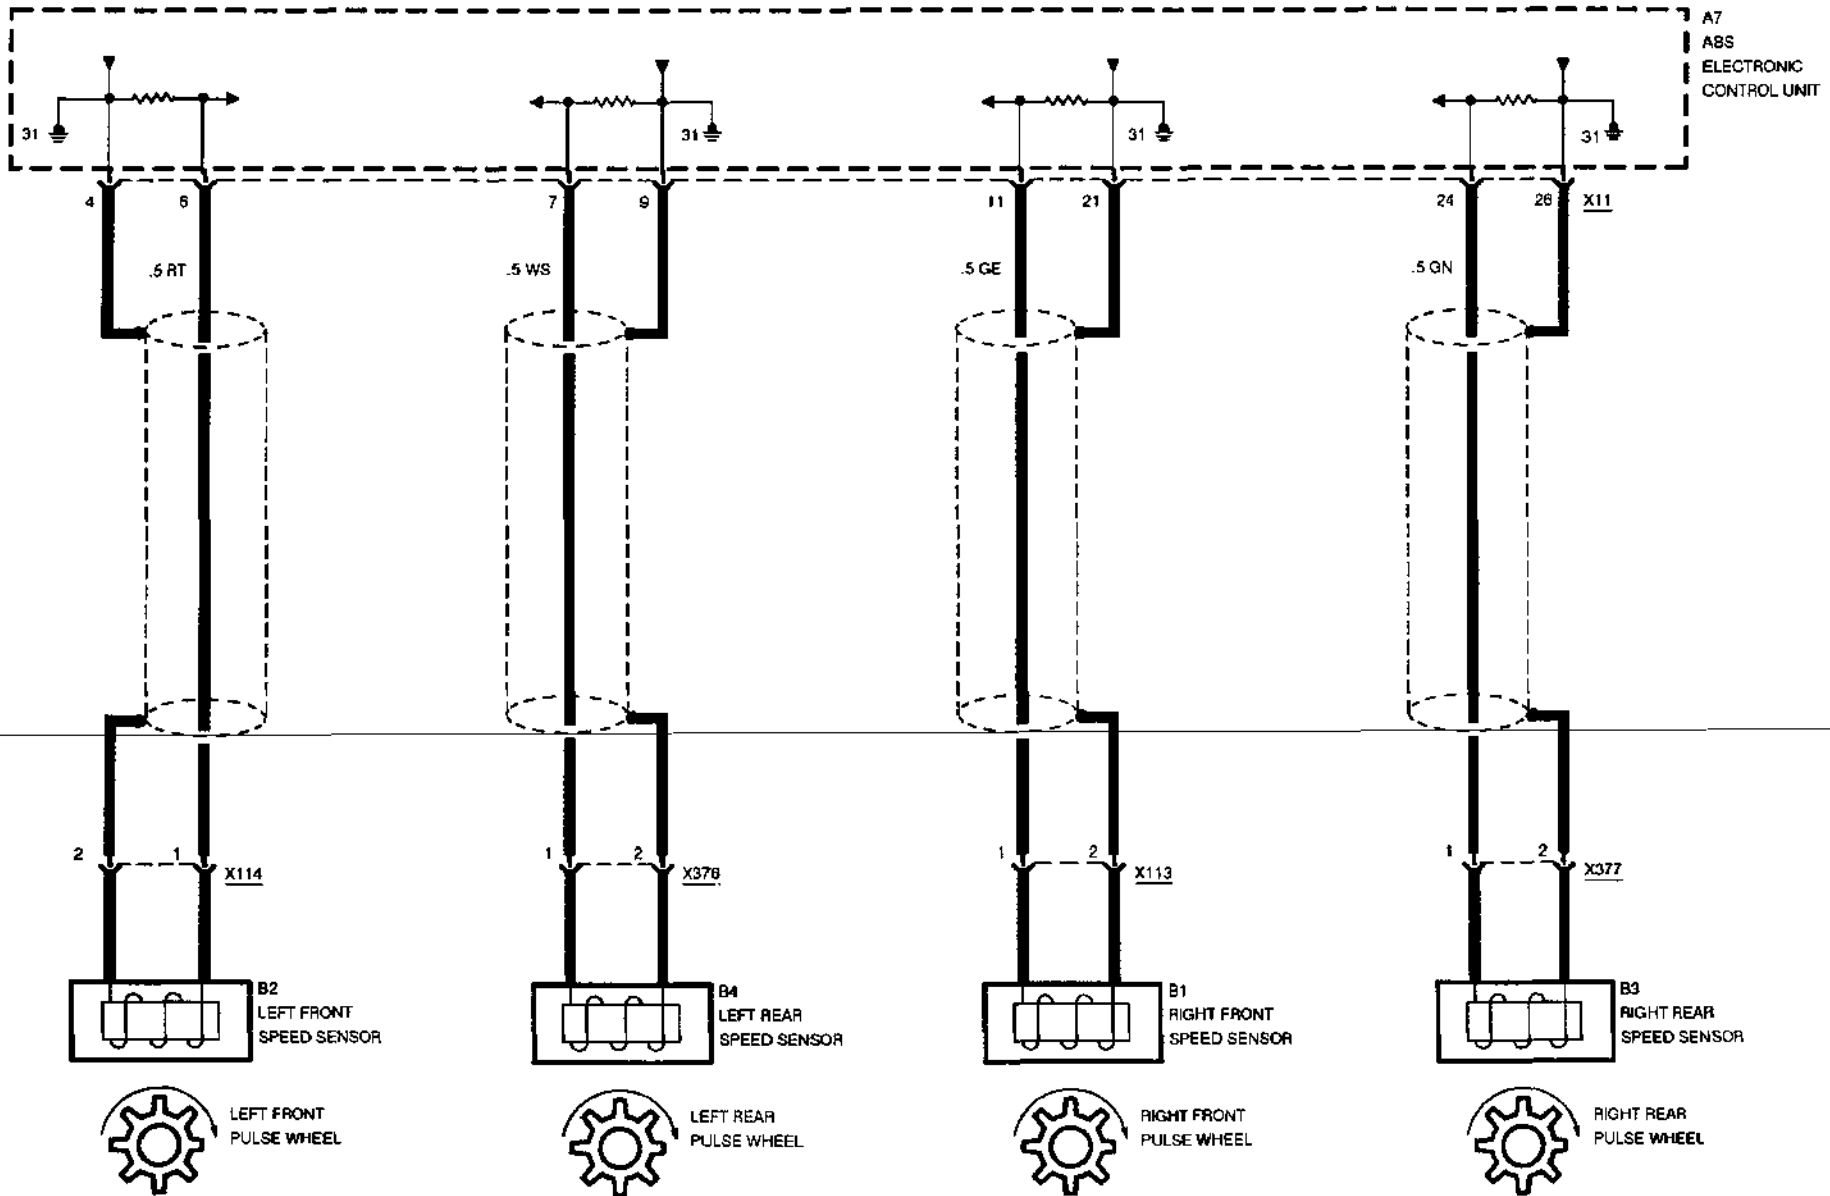



POWER MIRRORS

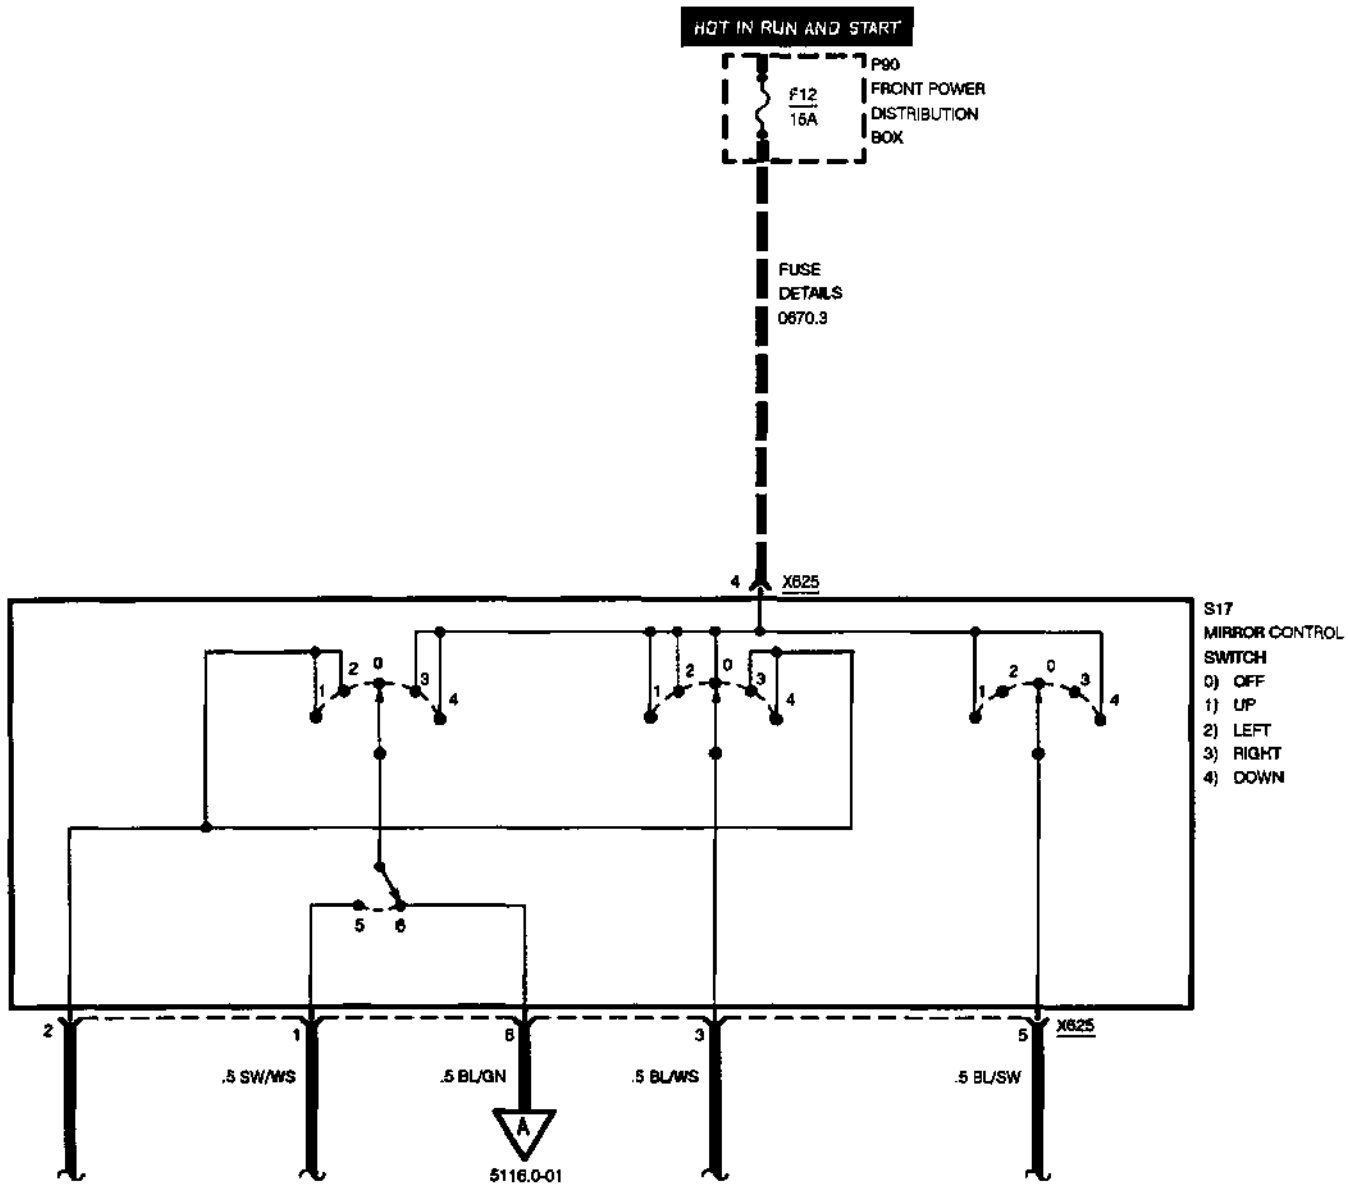


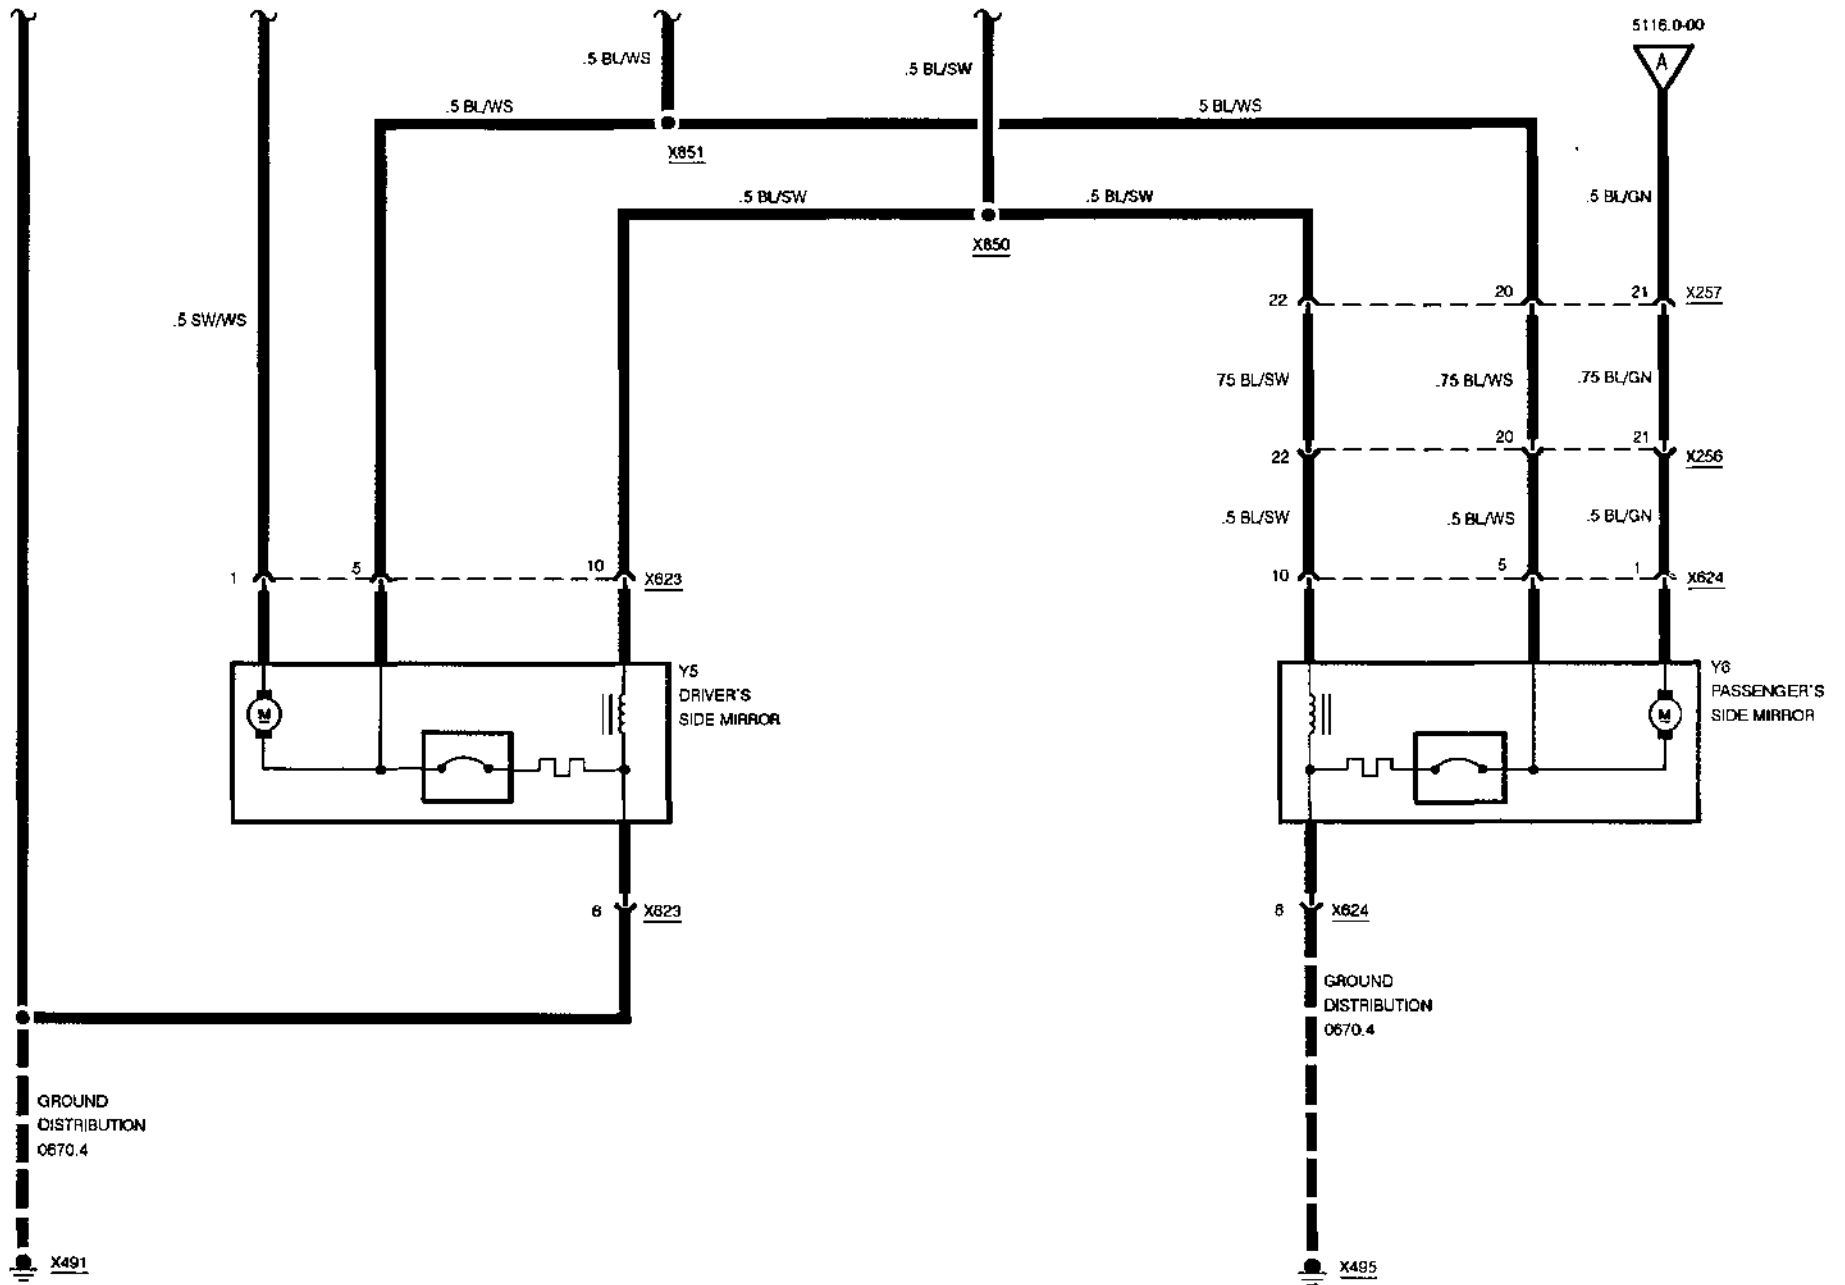



ZKE DOOR LOCK HEATING (TSH)


INPUT DETAILS

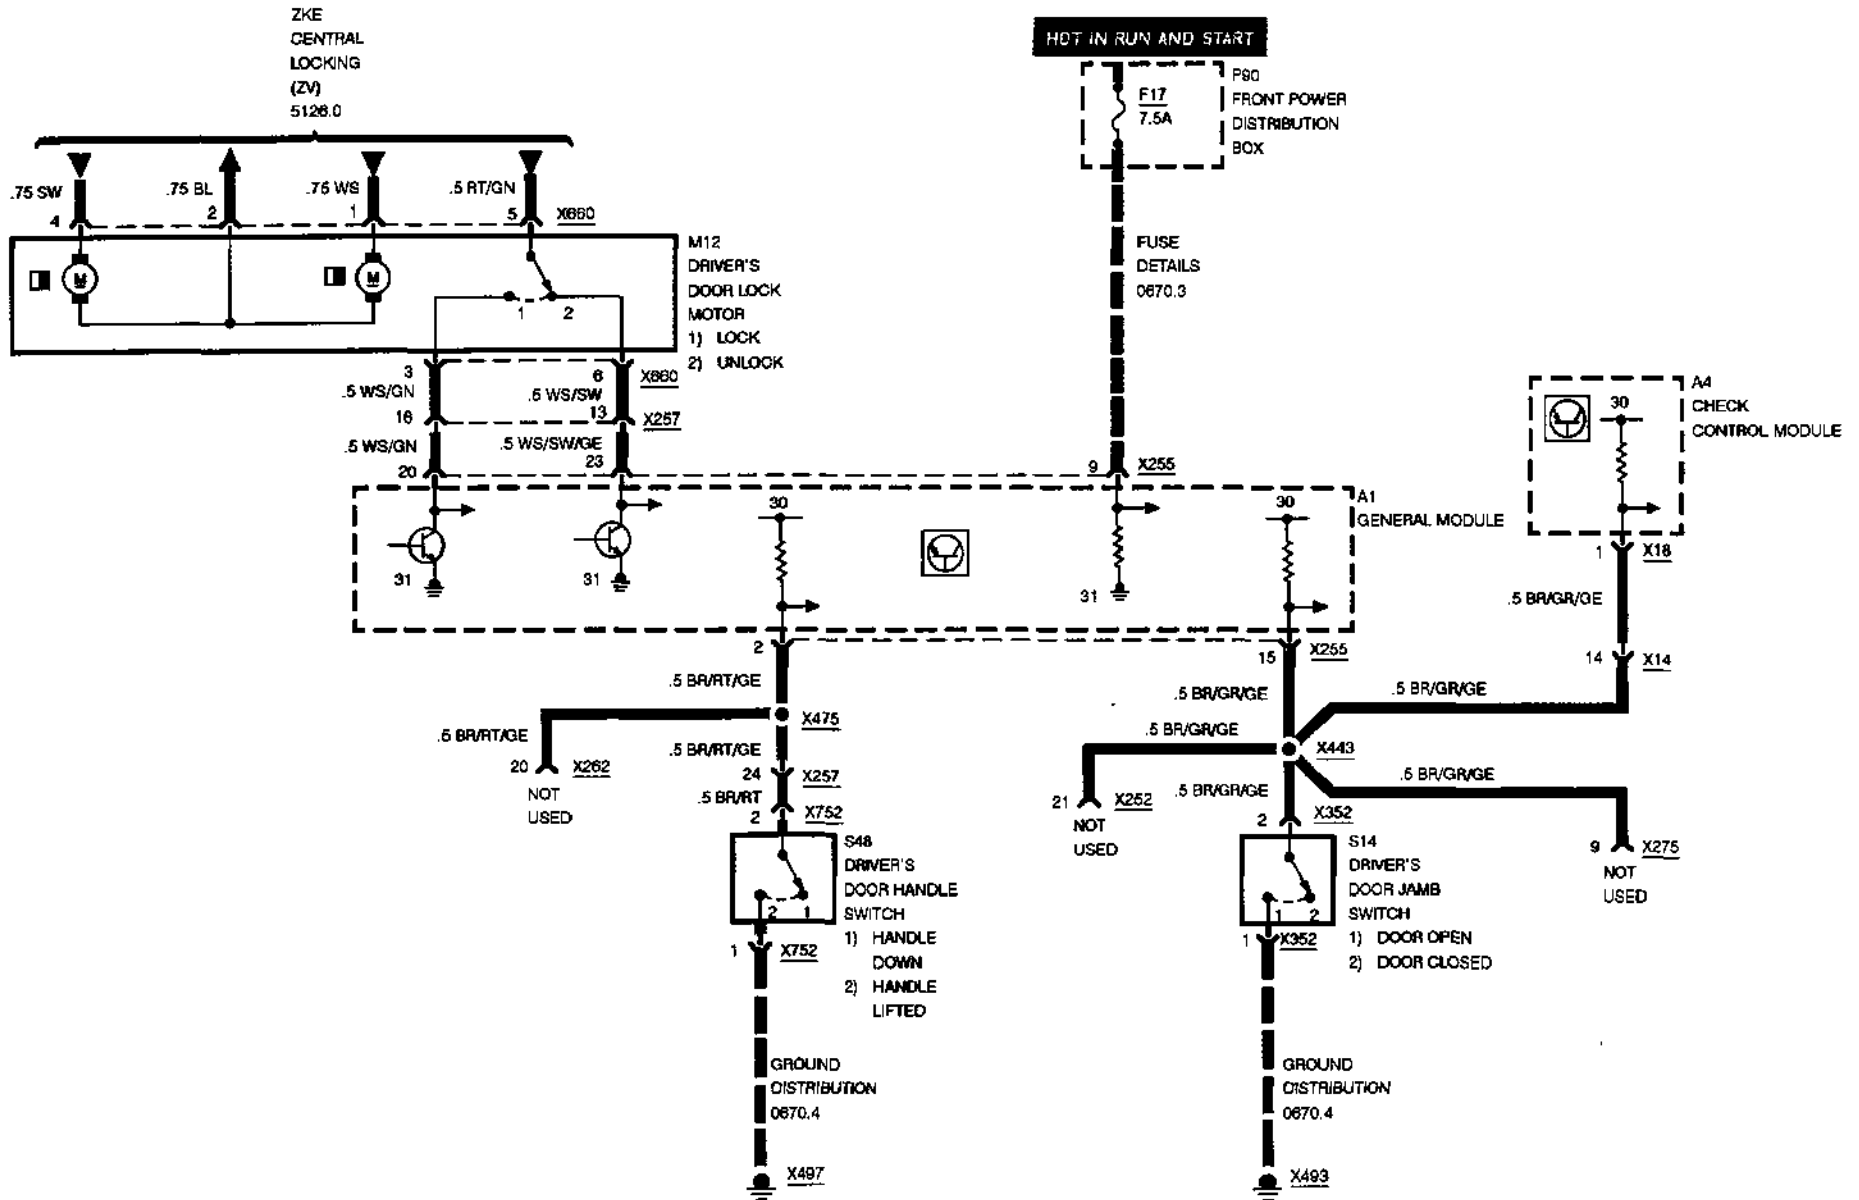



ZKE DOOR LOCK HEATING (TSH)


OUTPUT DETAILS

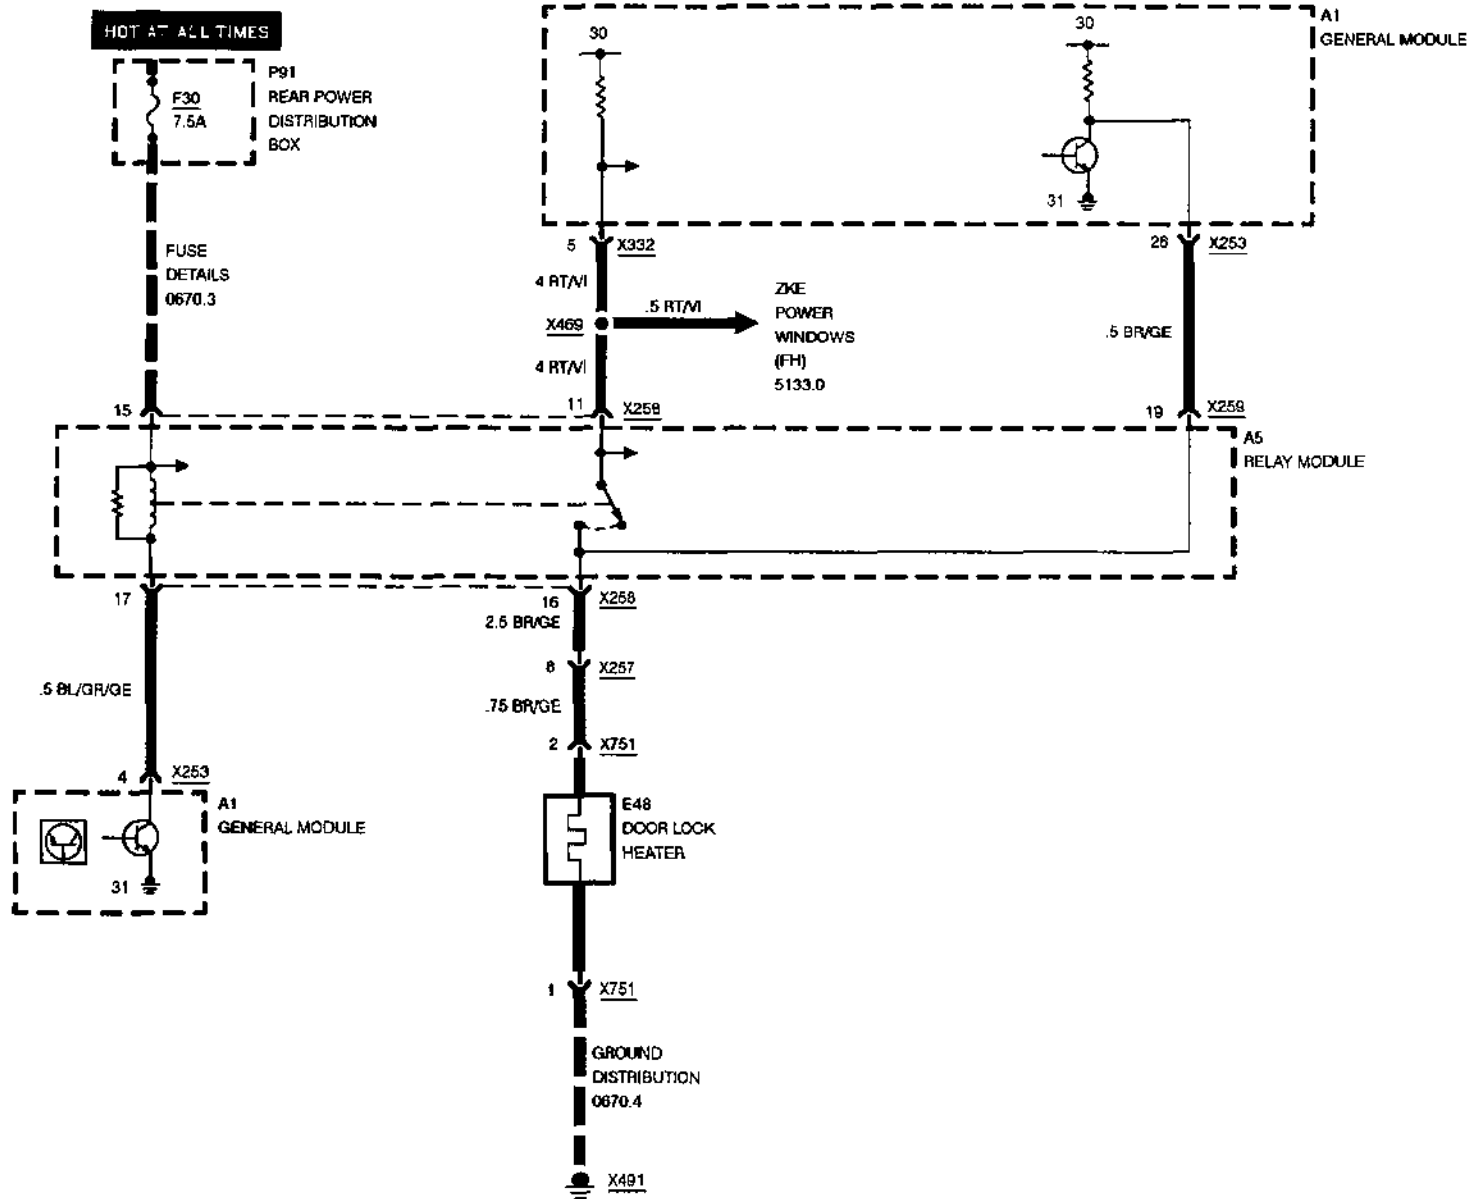




ZKE CENTRAL LOCKING (ZV)


INPUT DETAILS

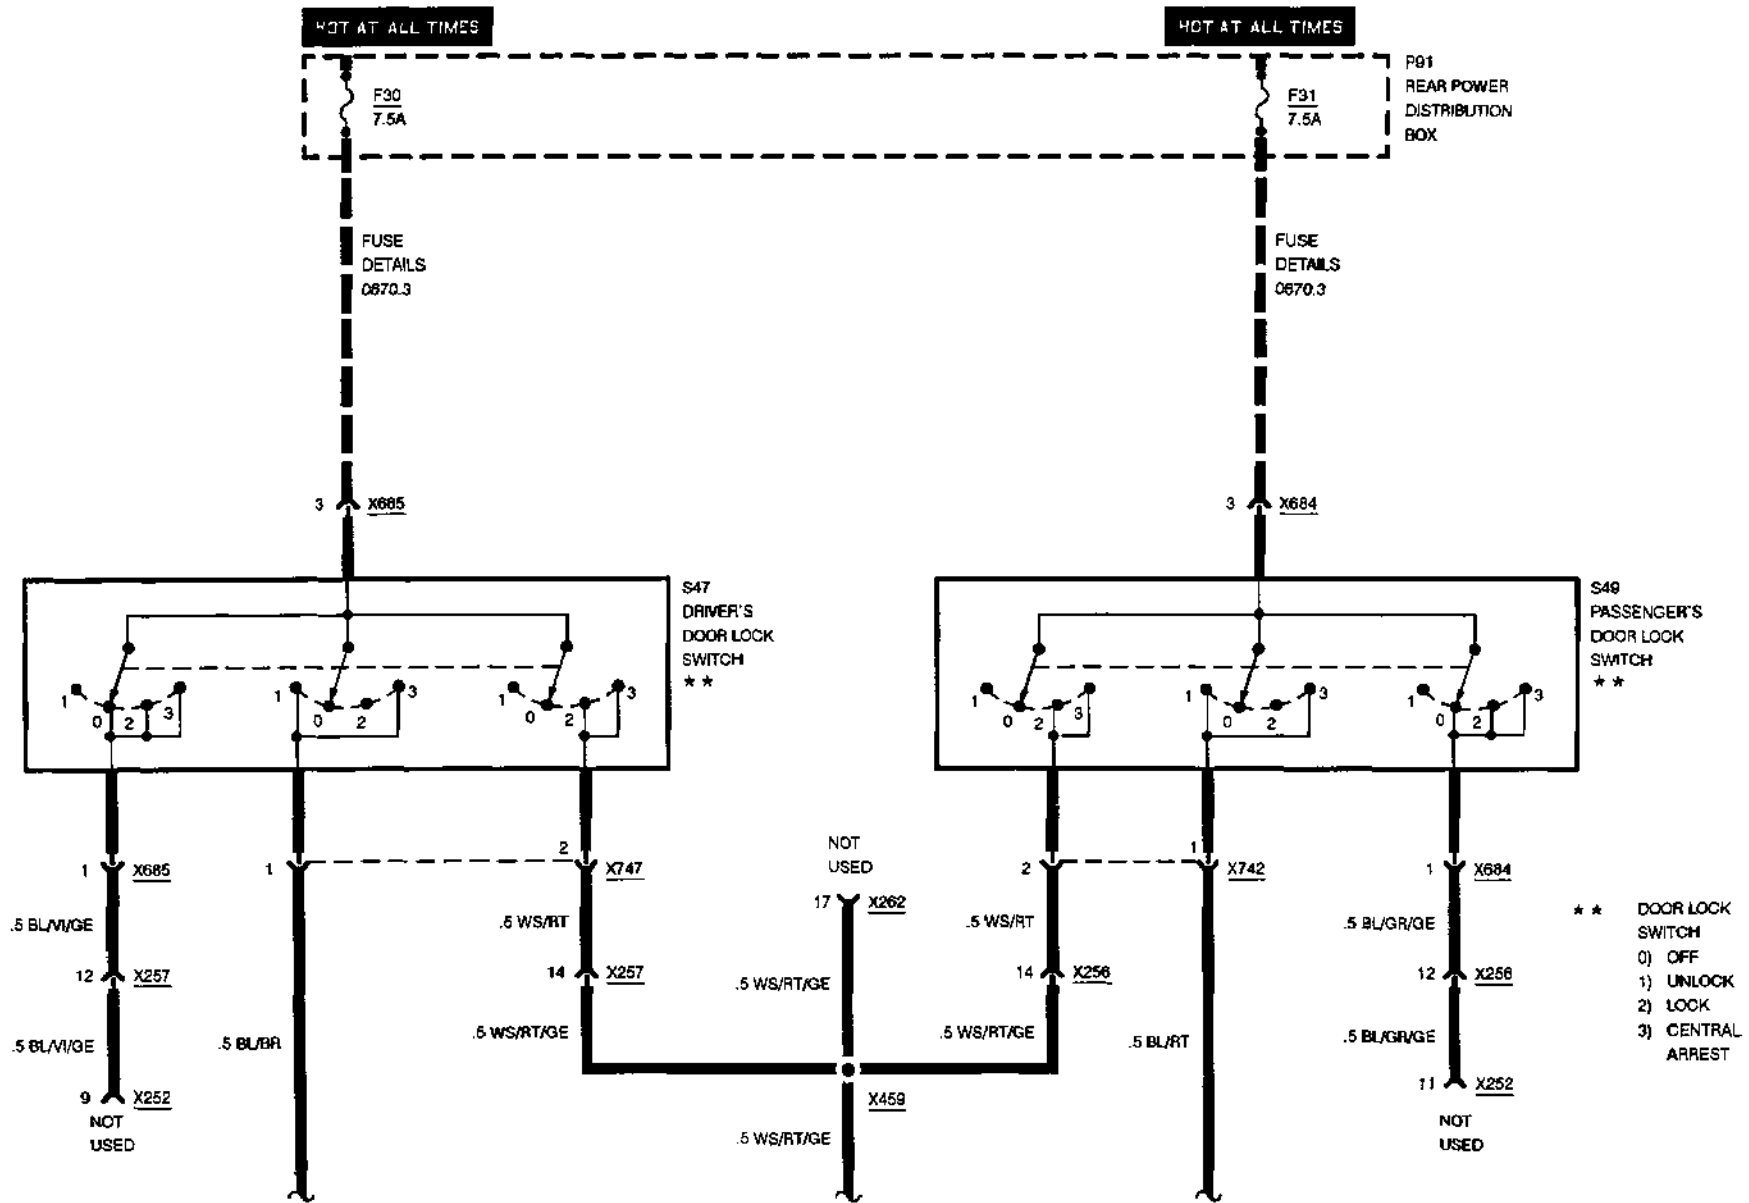

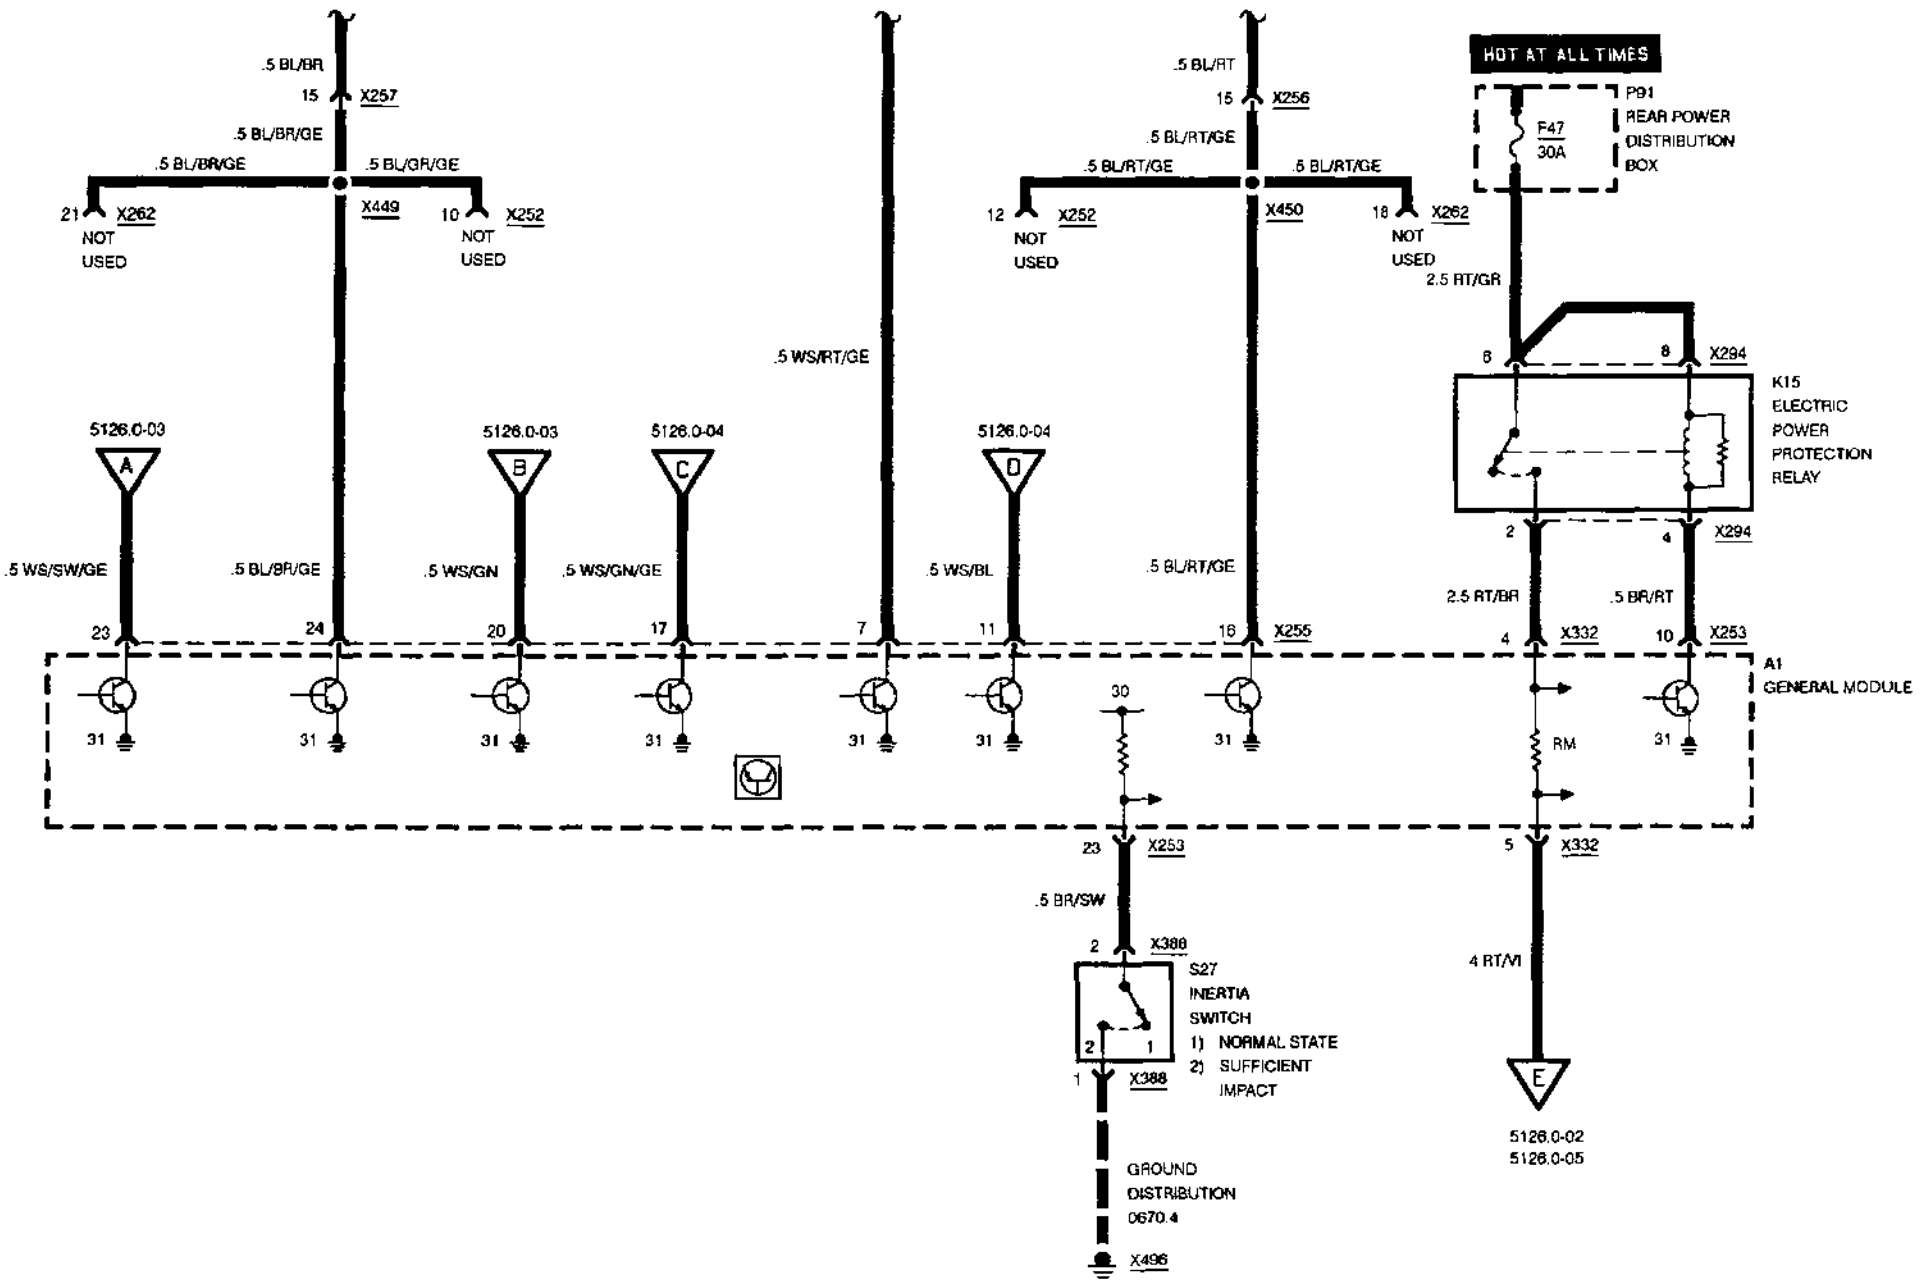



ZKE CENTRAL LOCKING (ZV) OUTPUT DETAILS

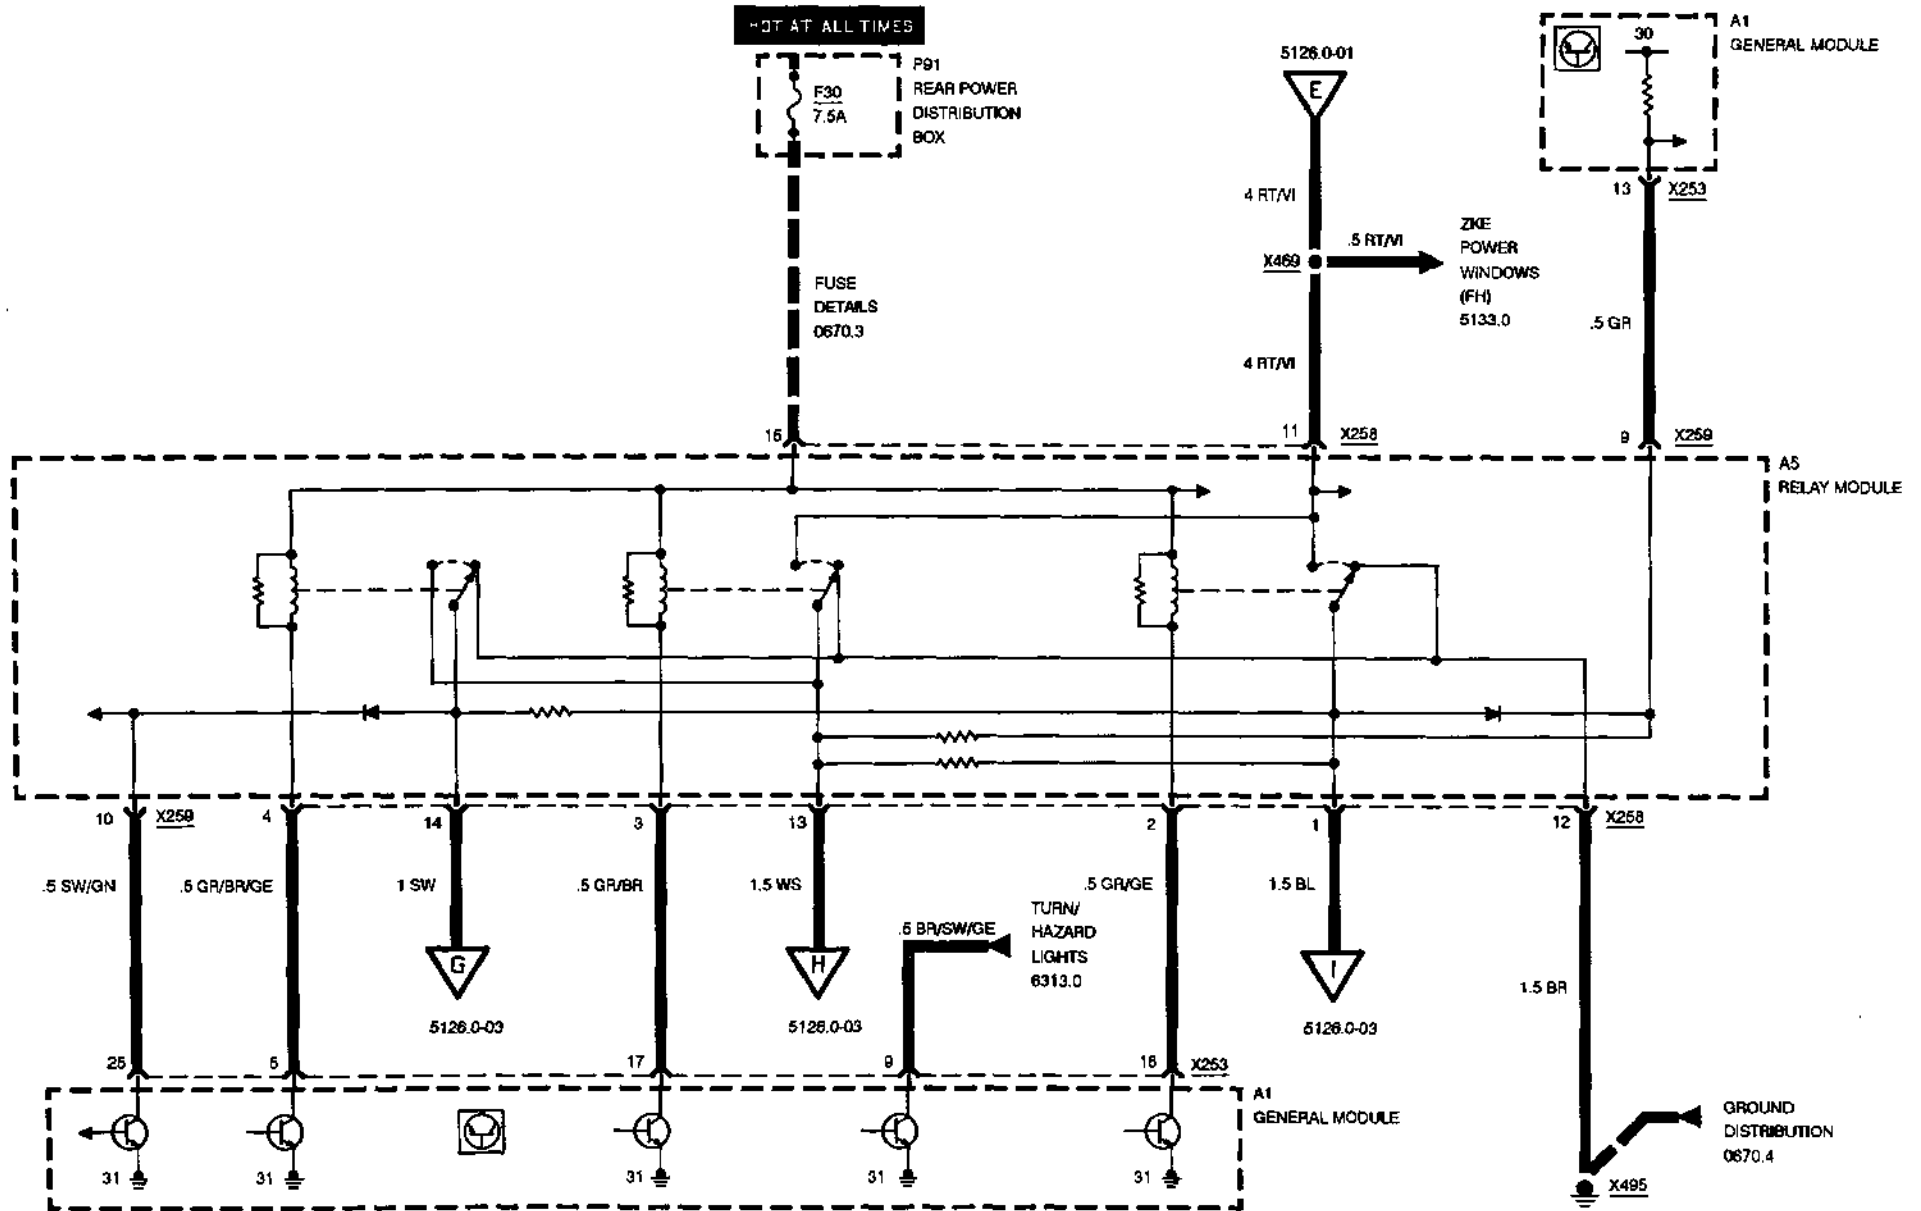


06/89

5126.0-02

1989




ZKE CENTRAL LOCKING (ZV) OUTPUT DETAILS

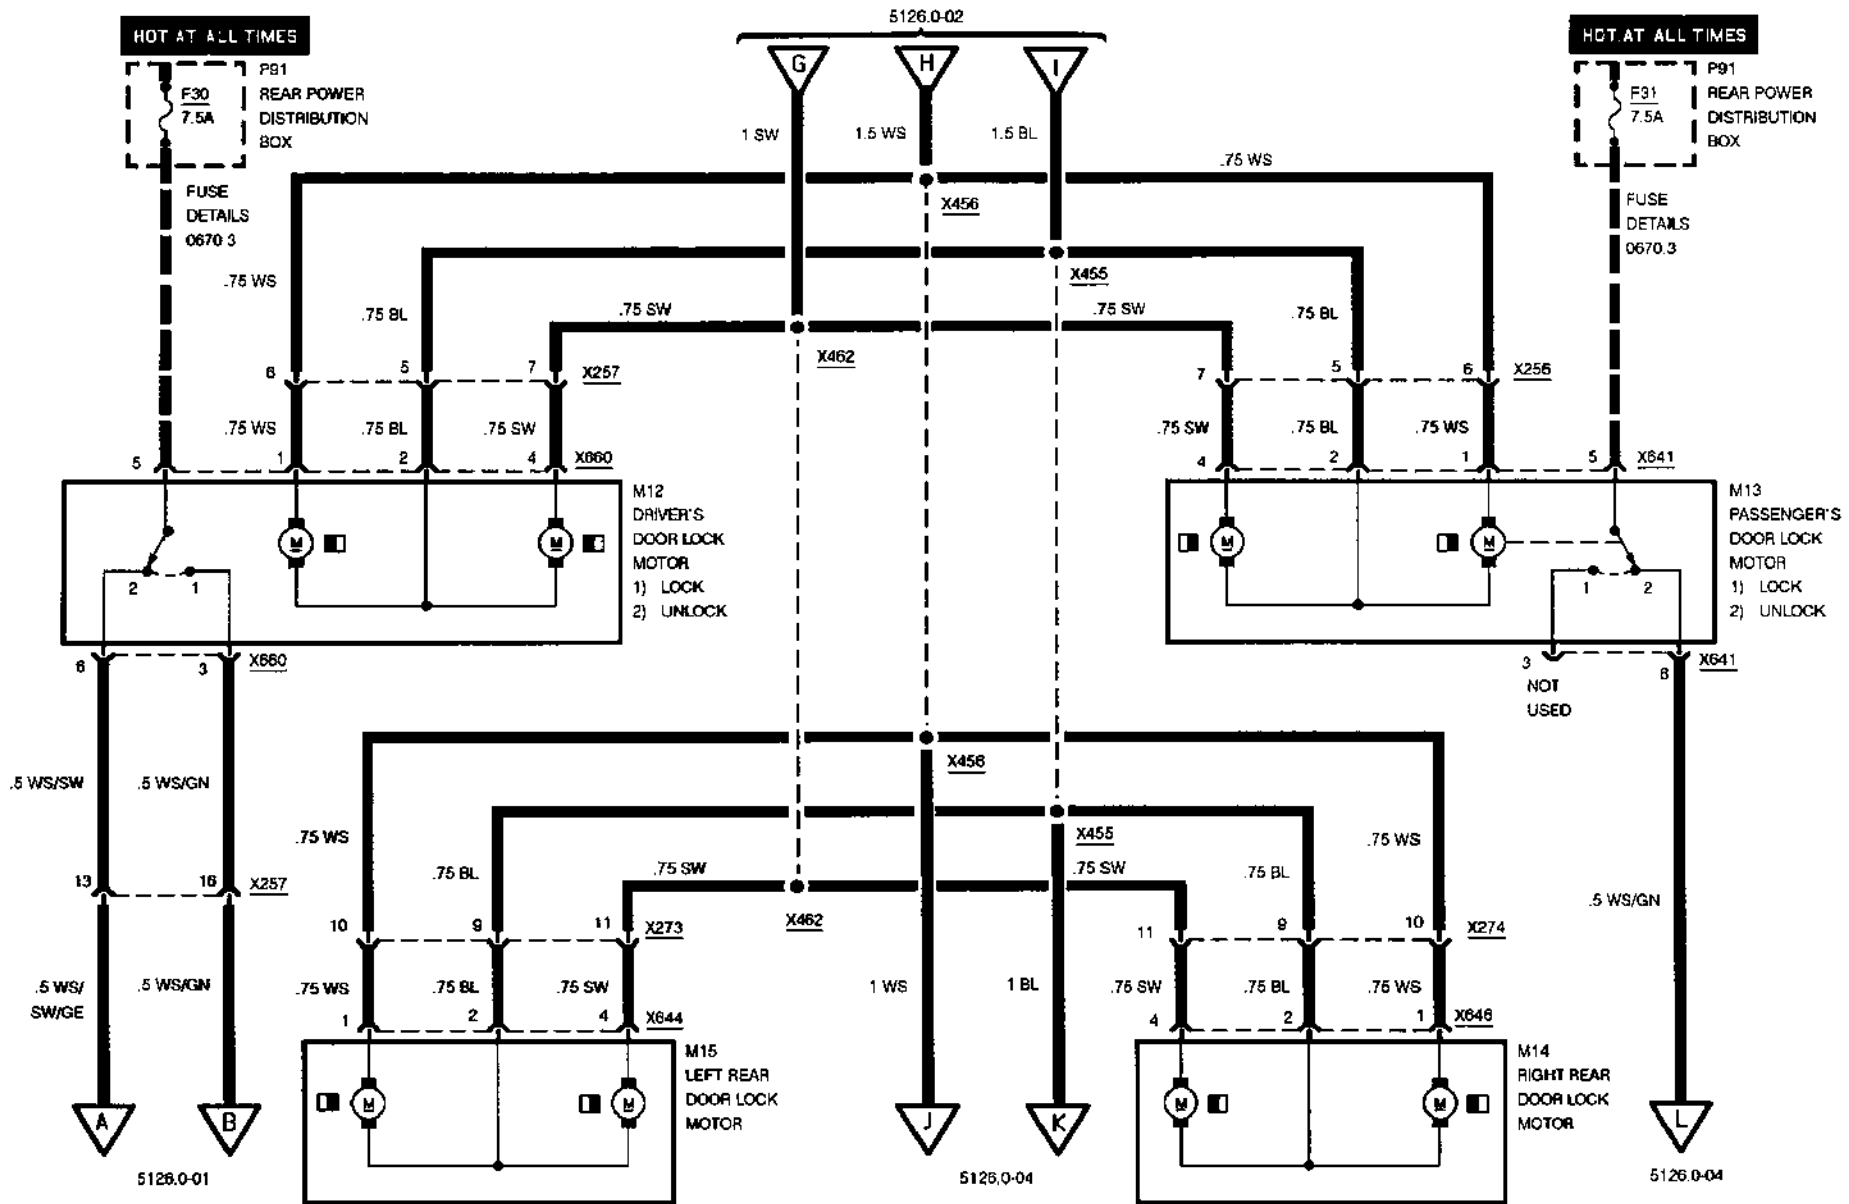




ZKE CENTRAL LOCKING (ZV) OUTPUT DETAILS

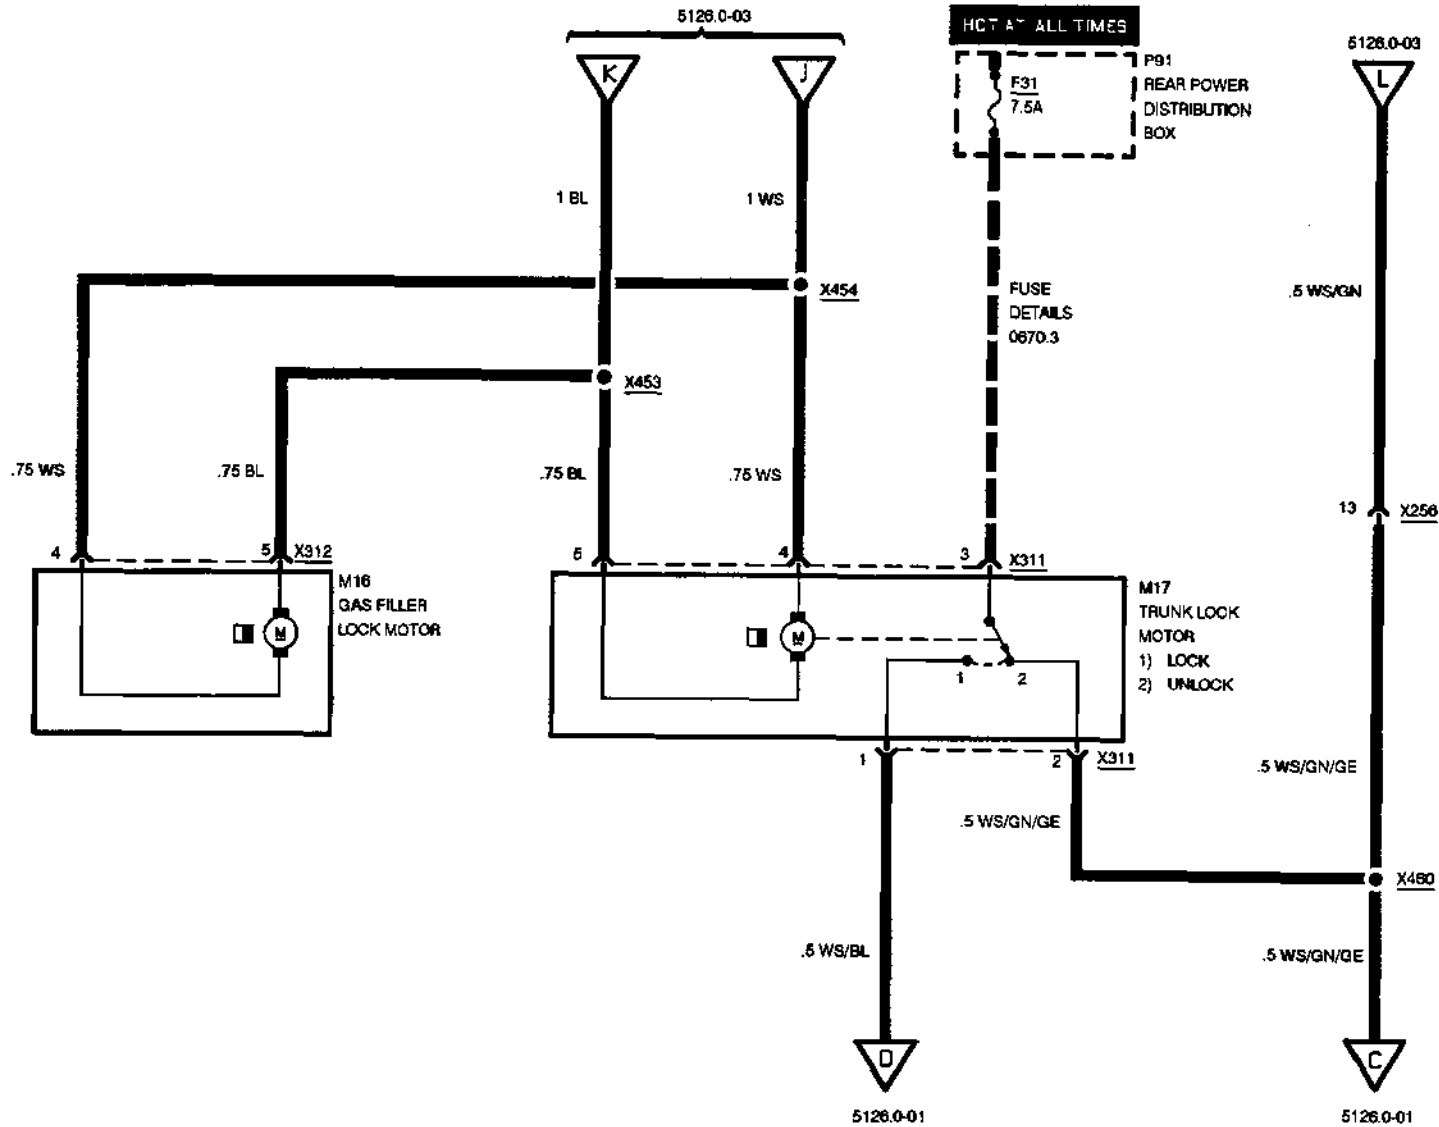




ZKE CENTRAL LOCKING (ZV) OUTPUT DETAILS

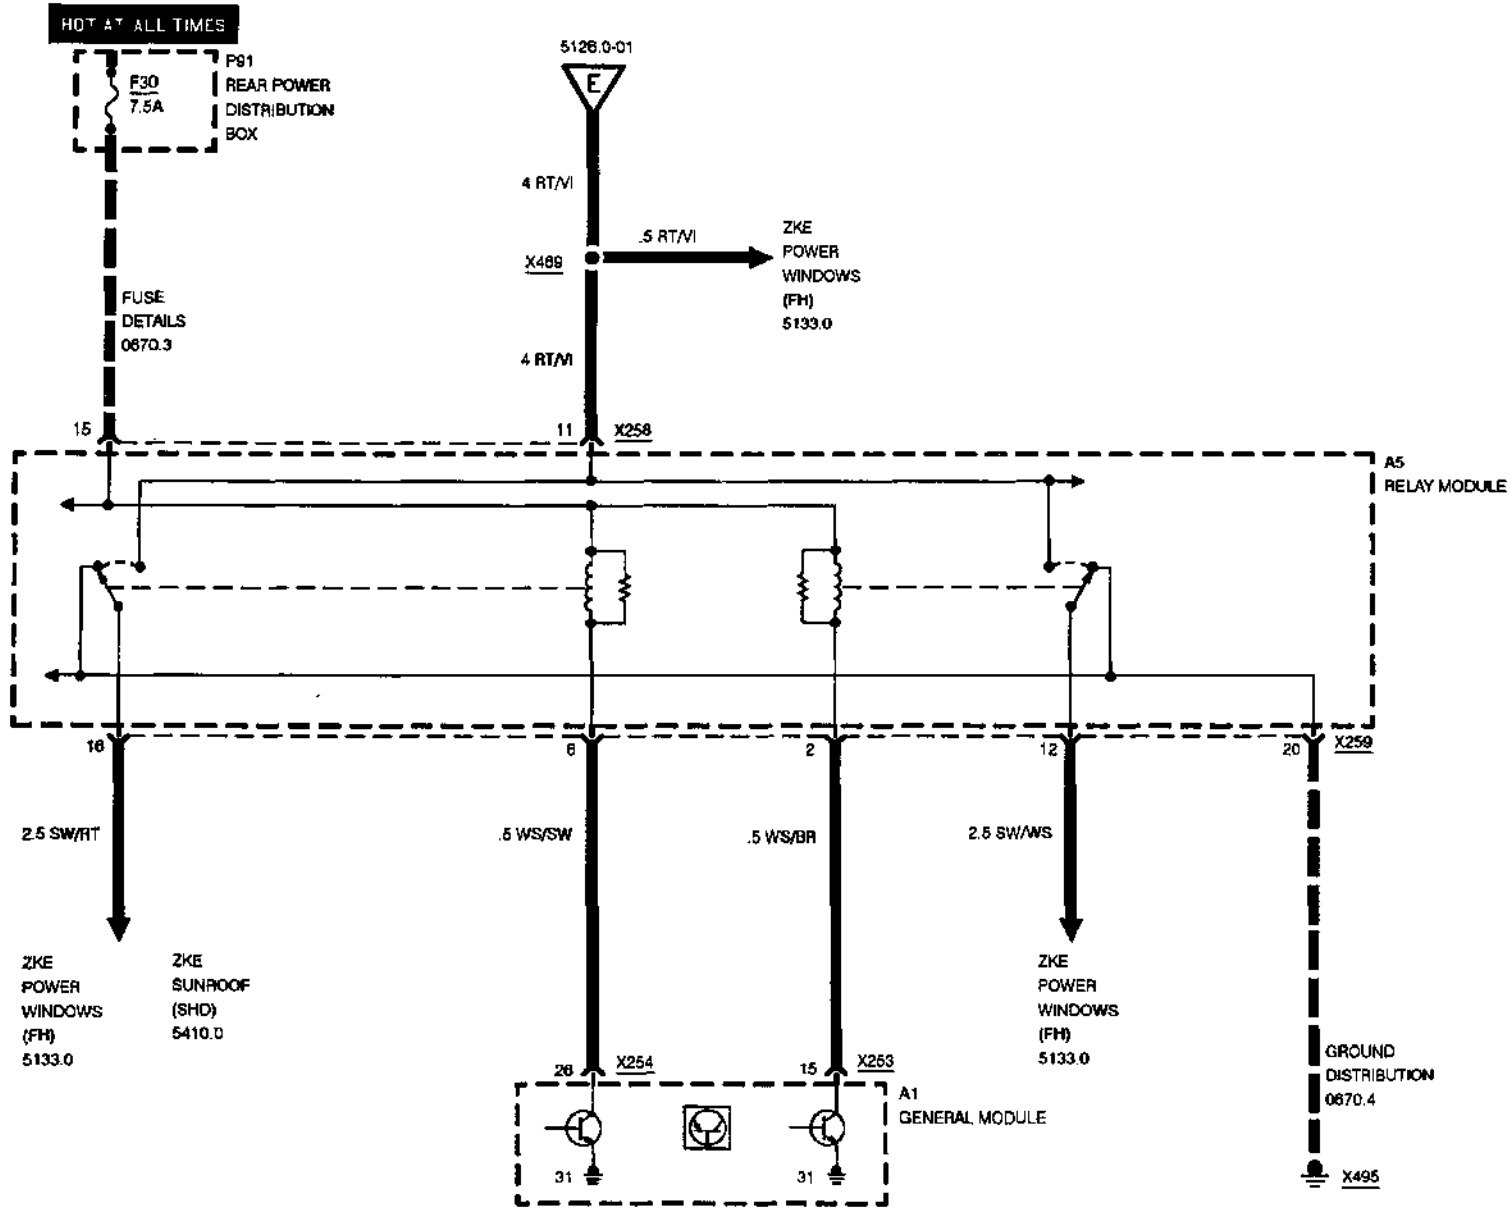



ZKE POWER WINDOWS (FH)


INPUT DETAILS

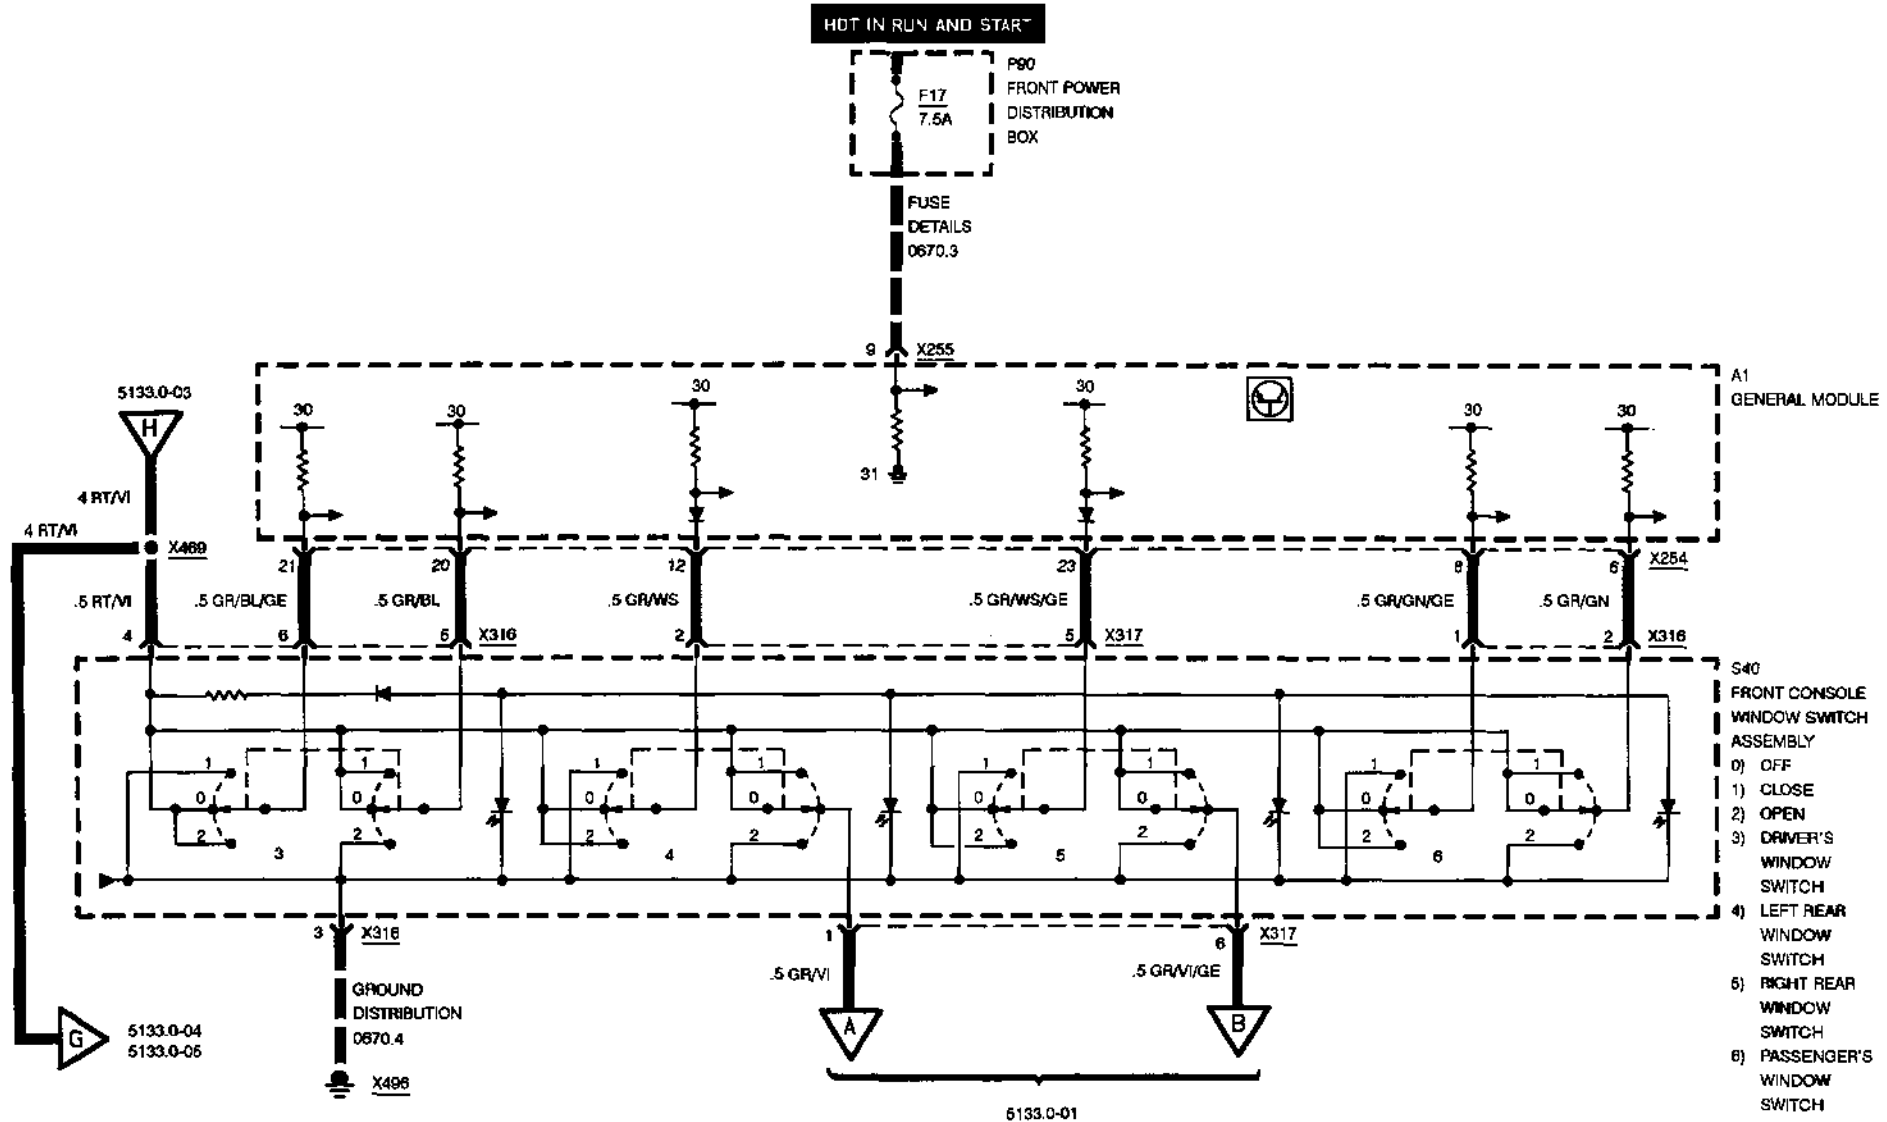



ZKE POWER WINDOWS (FH)


INPUT DETAILS

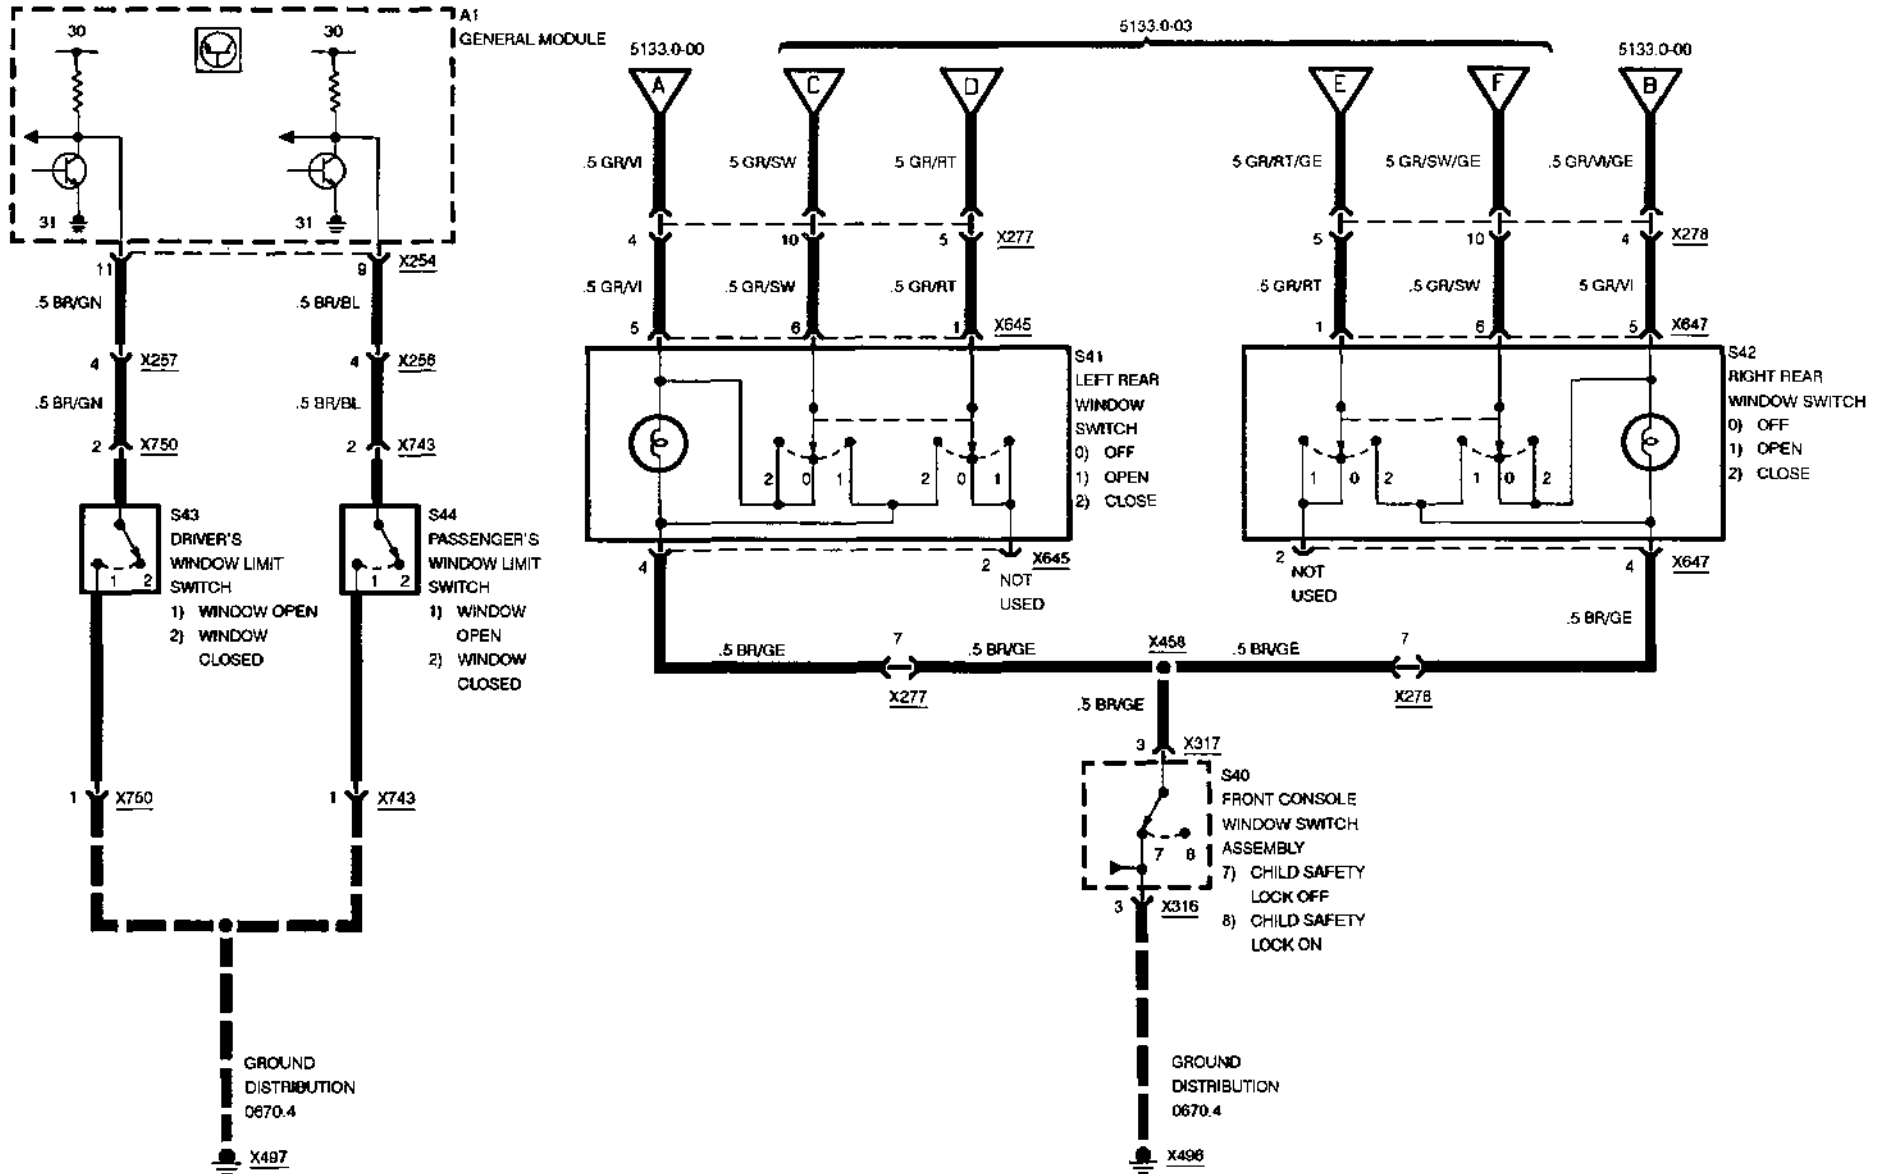




ZKE POWER WINDOWS (FH)

INPUT DETAILS

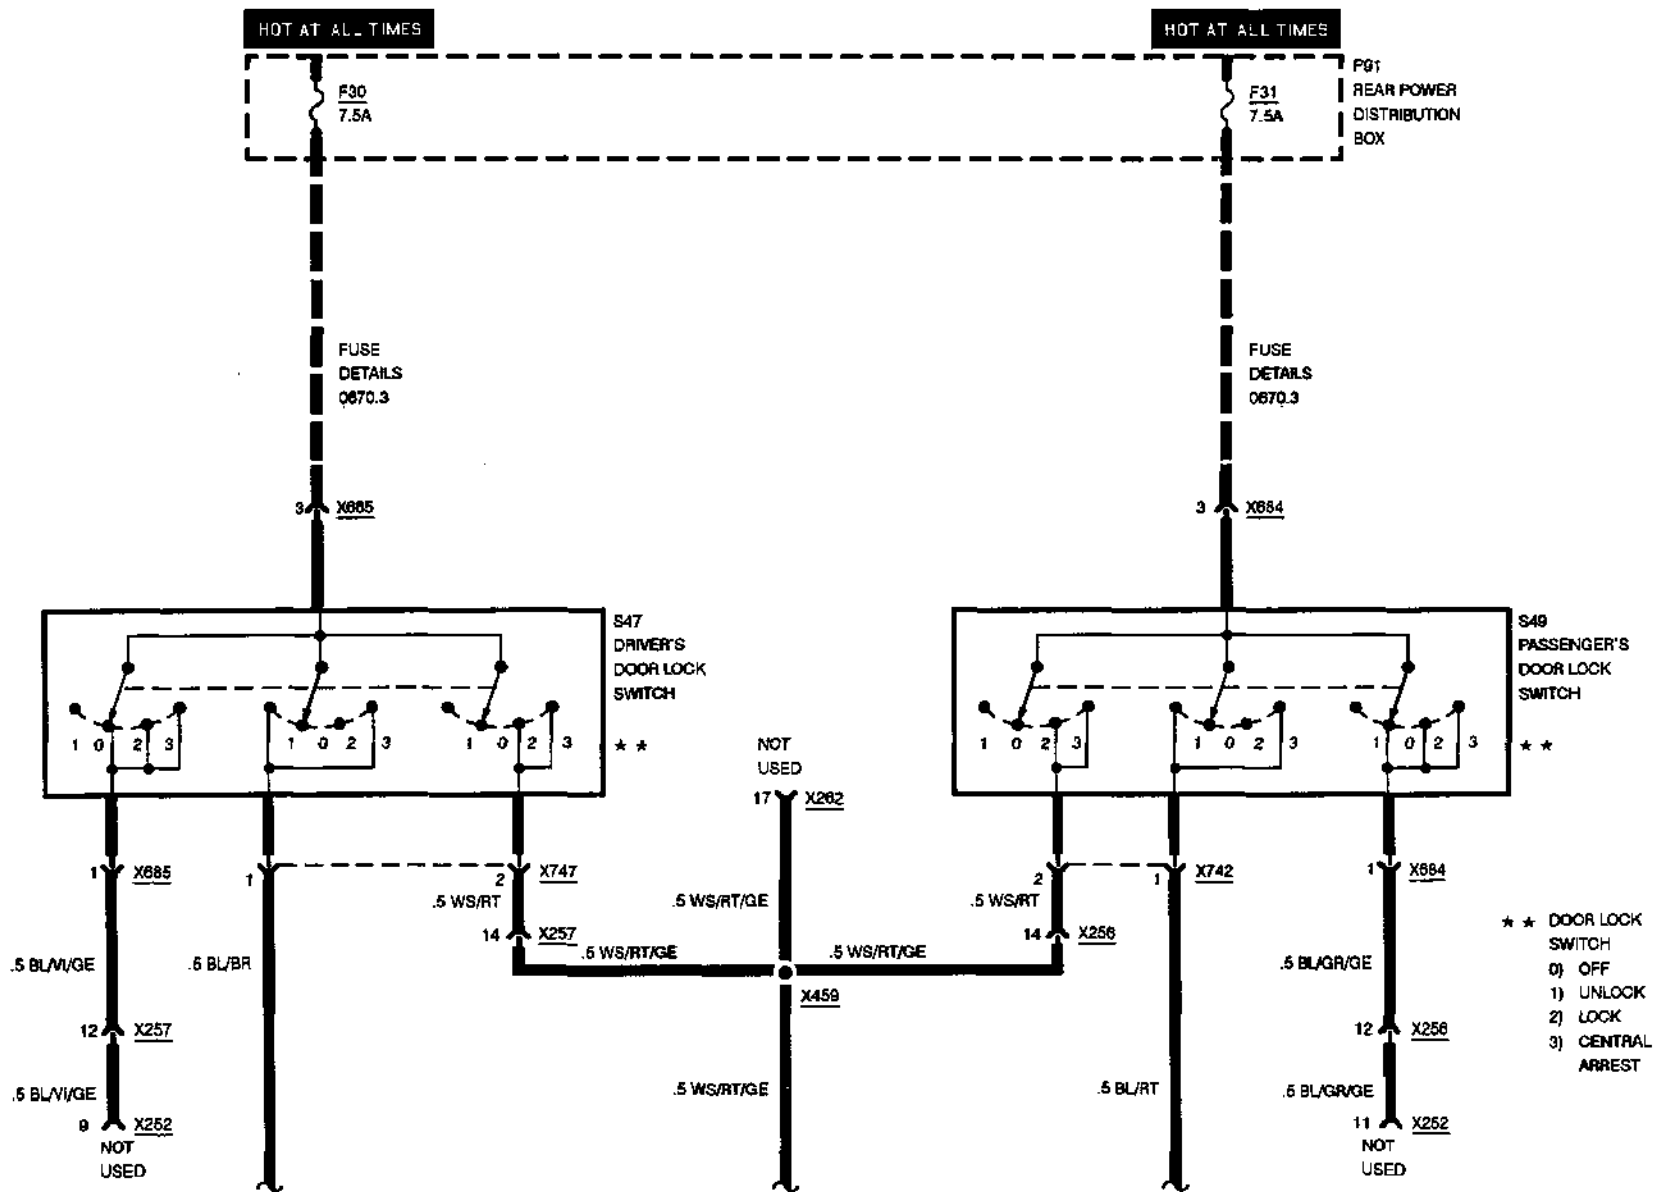

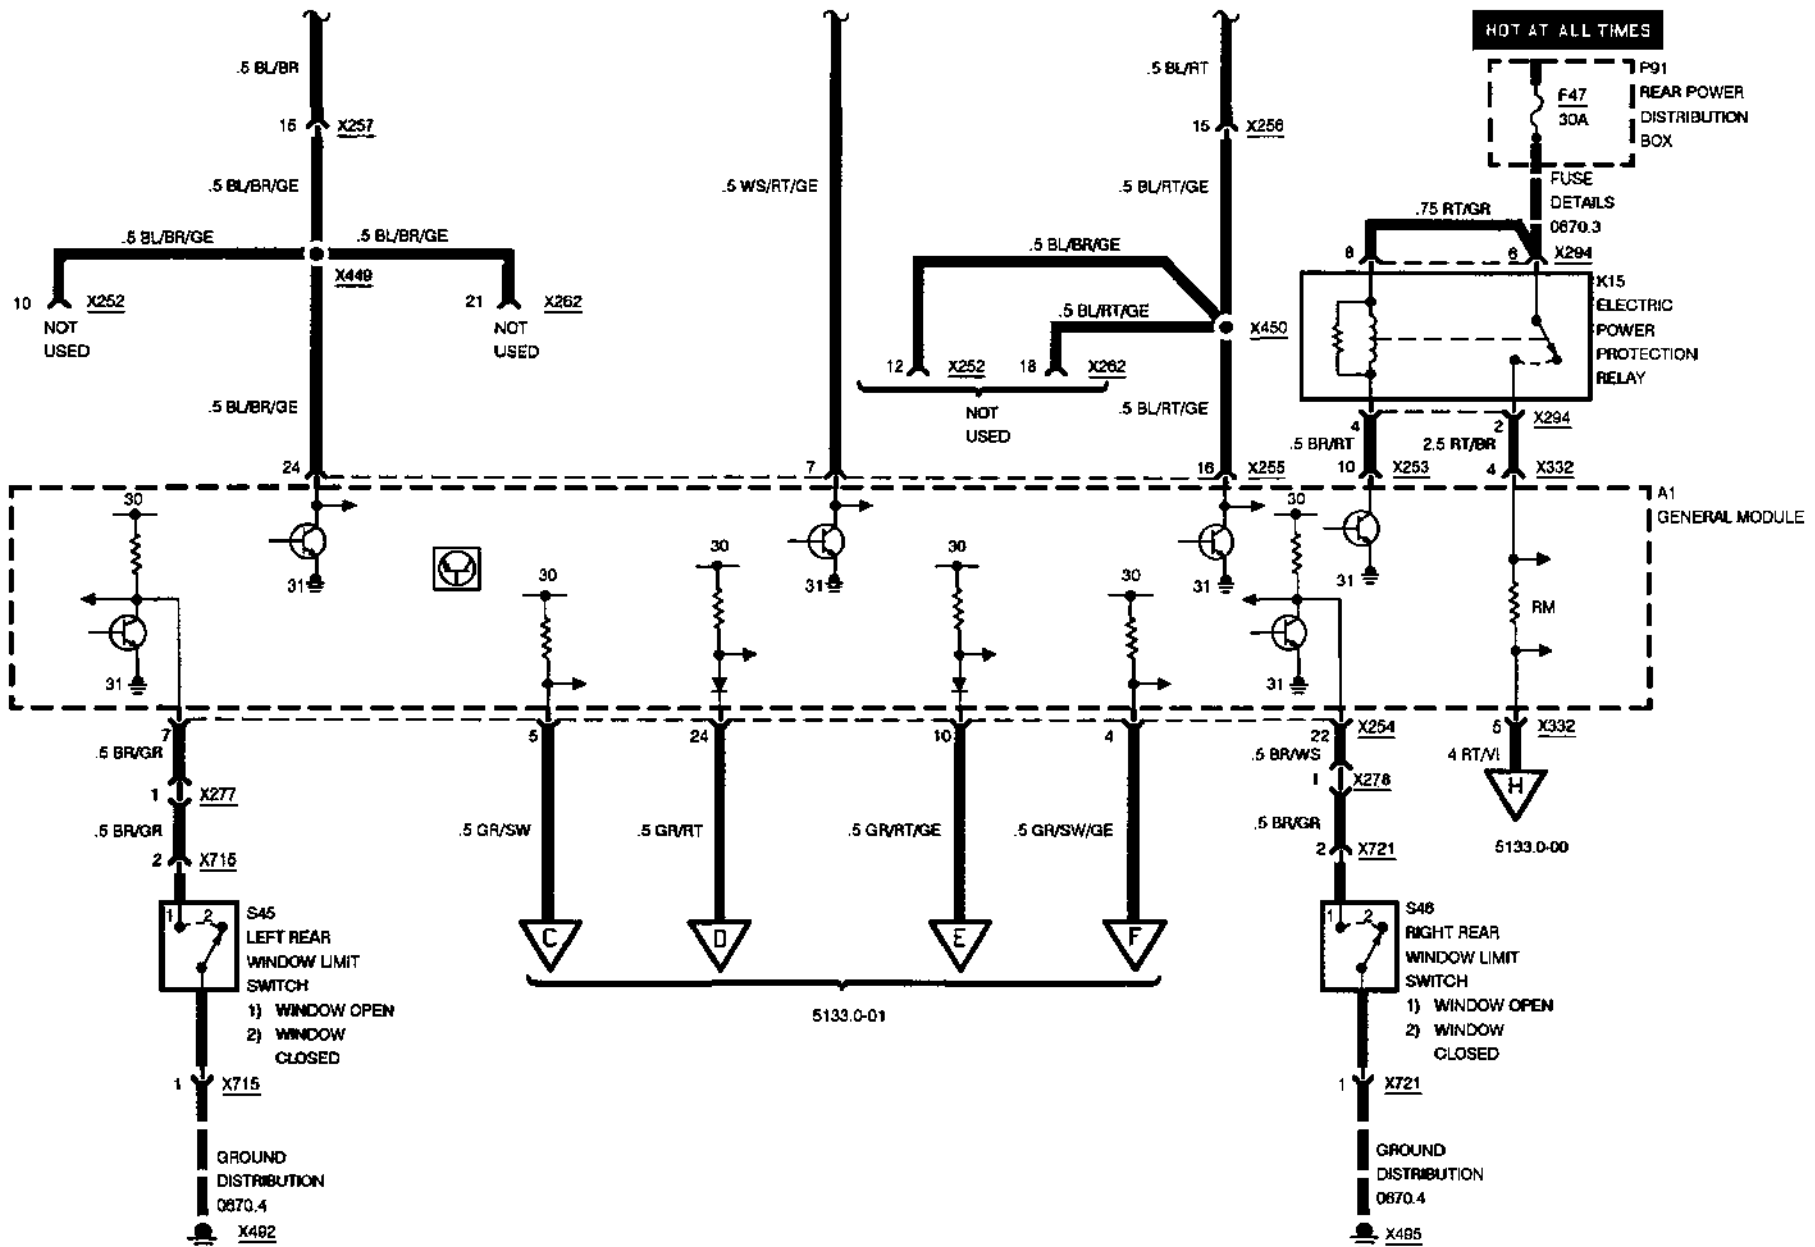




ZKE POWER WINDOWS (FH)


LEFT SIDE OUTPUT DETAILS

NOT AT ALL TIMES

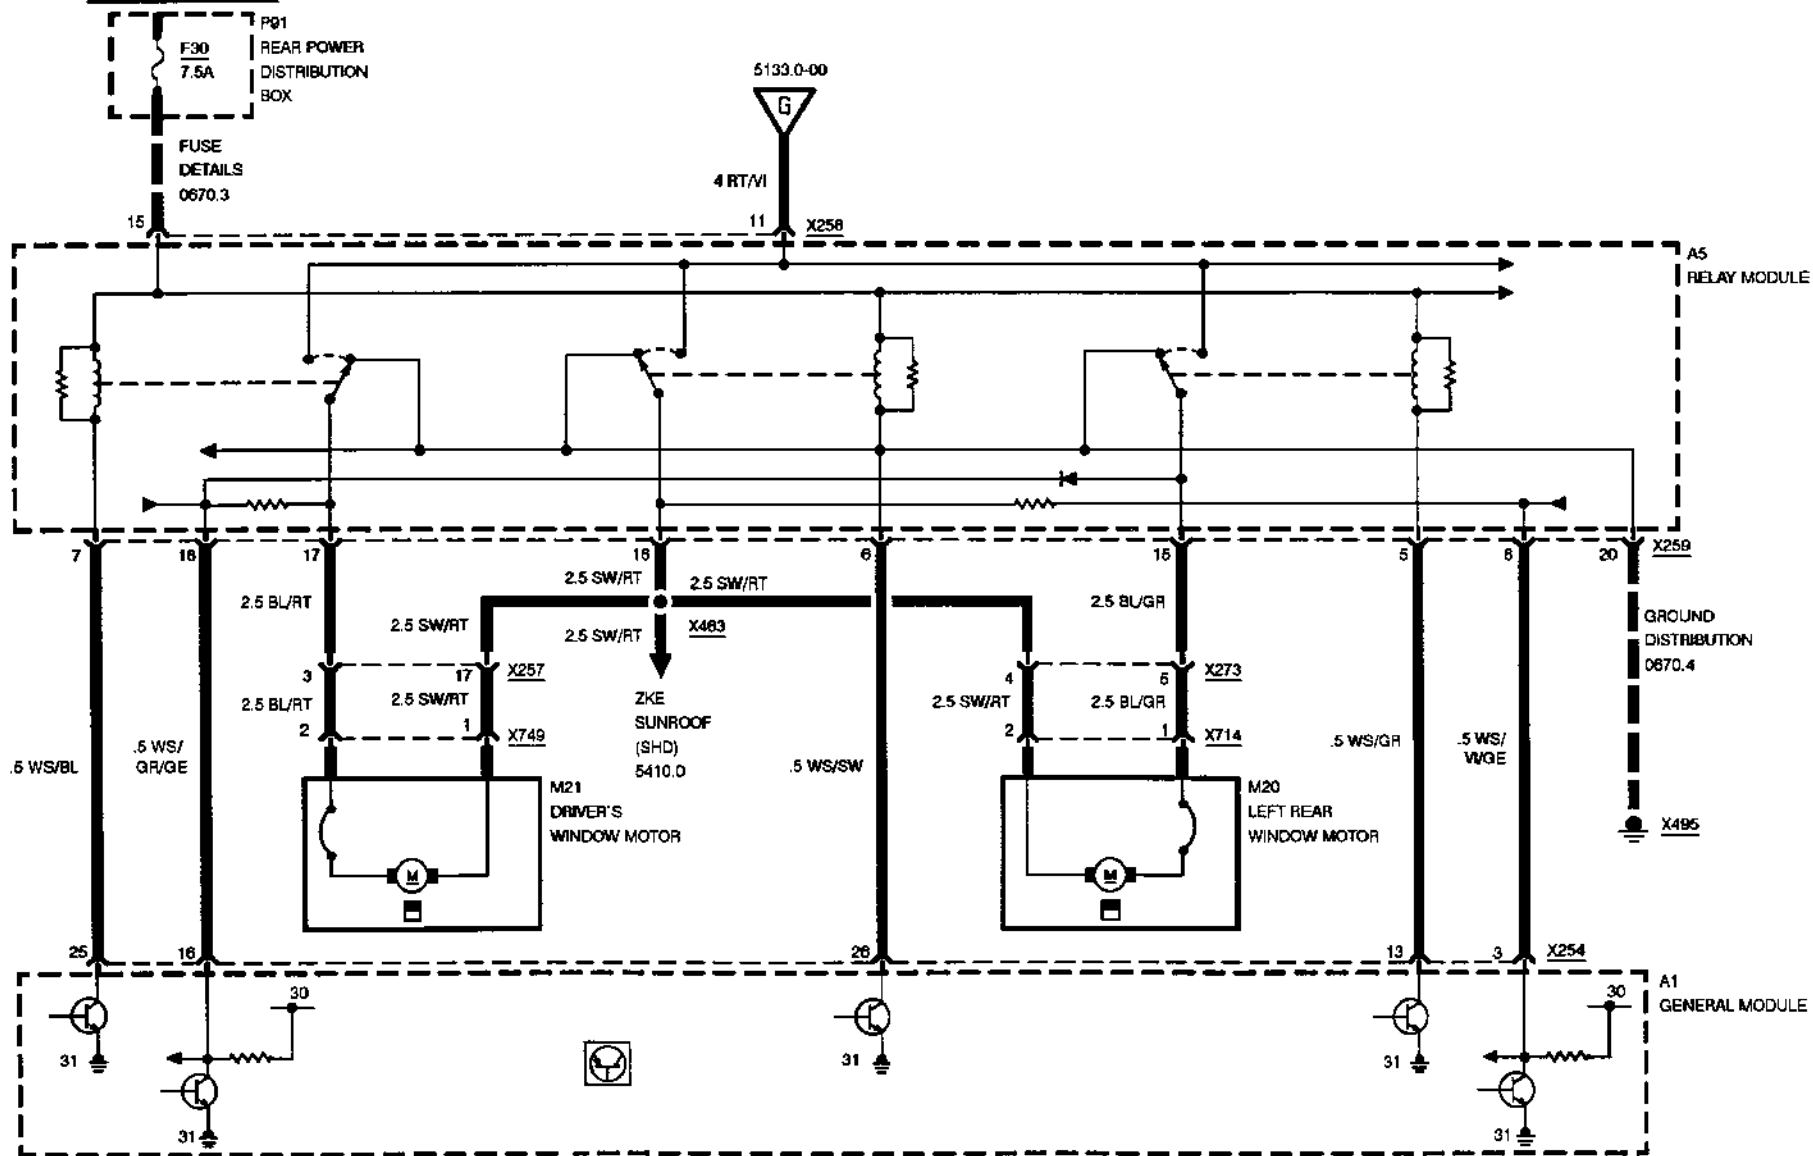





ZKE POWER WINDOWS (FH) RIGHT SIDE OUTPUT DETAILS

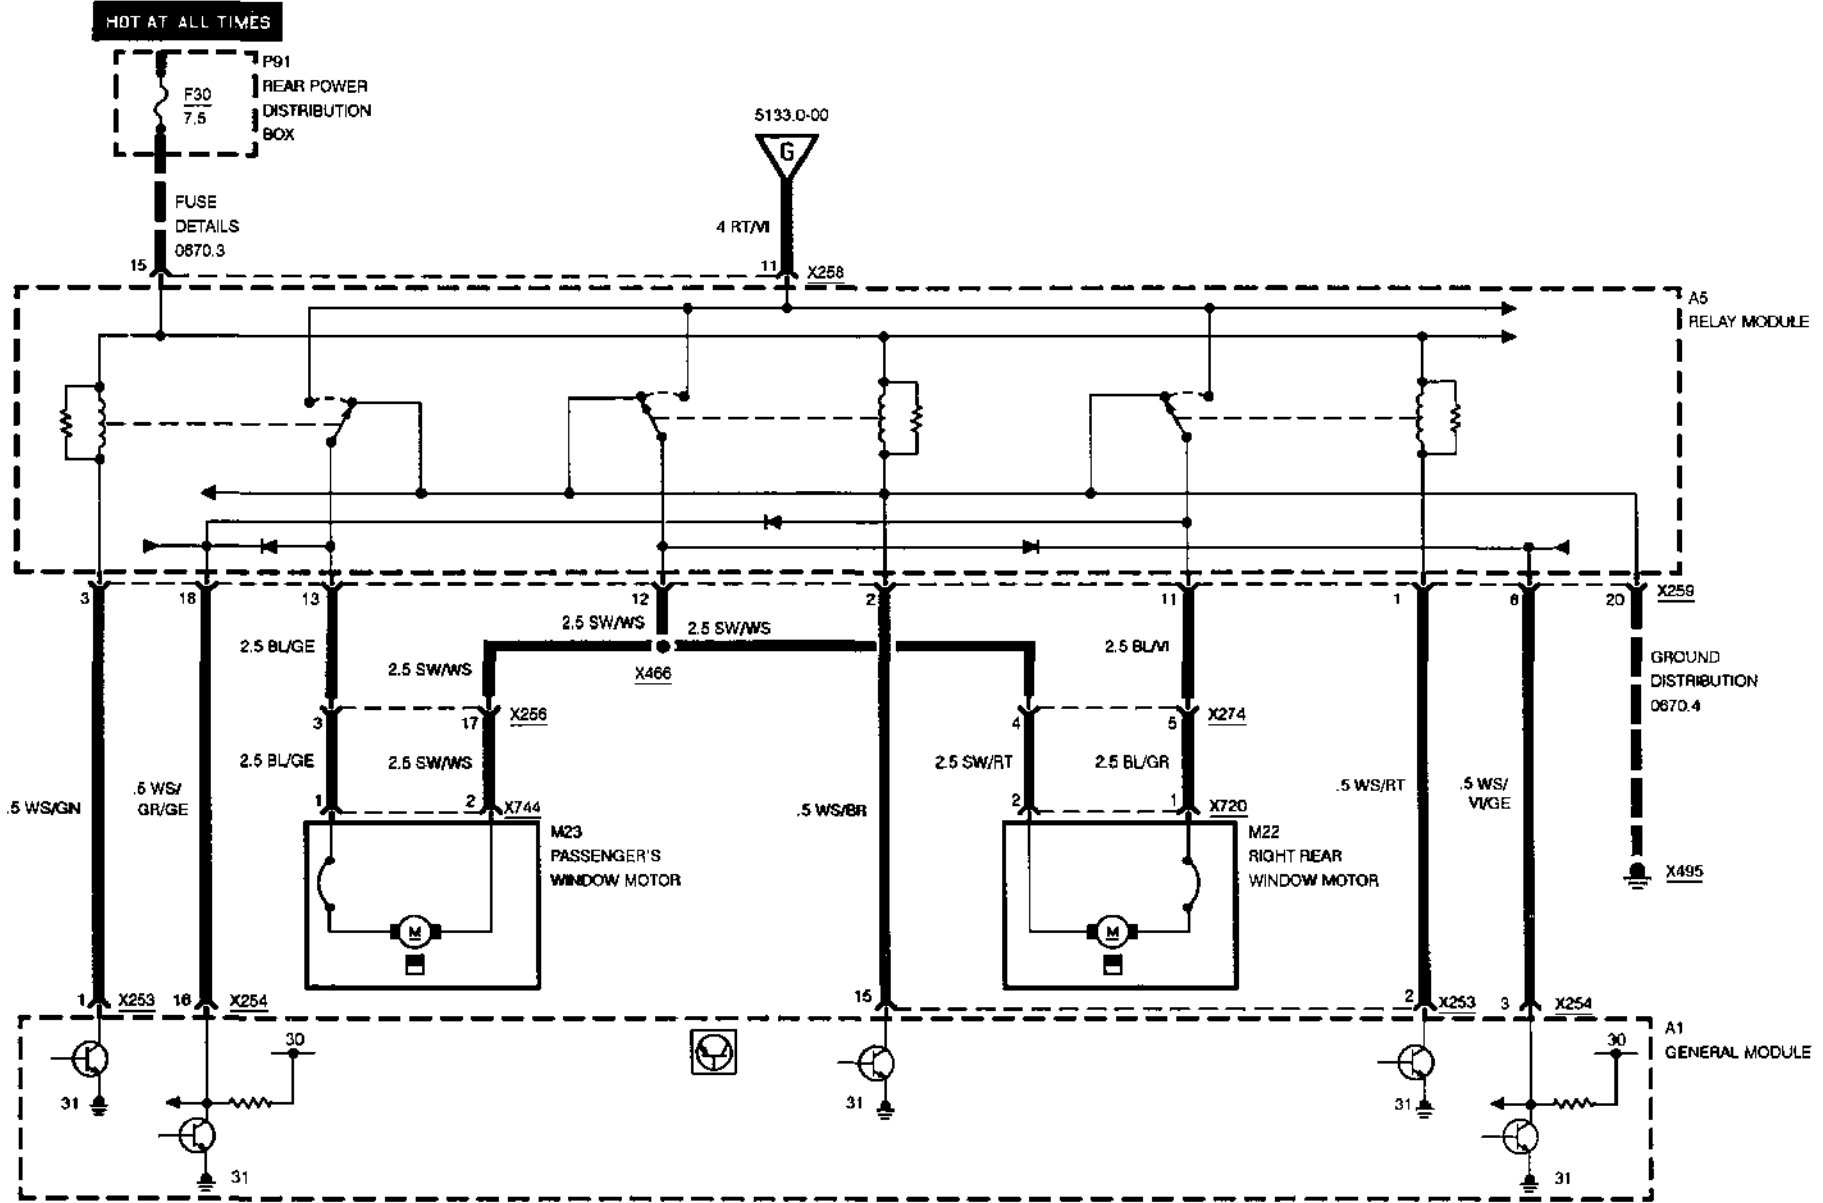

BMW 5 POWER SEATS DRIVER'S SEAT

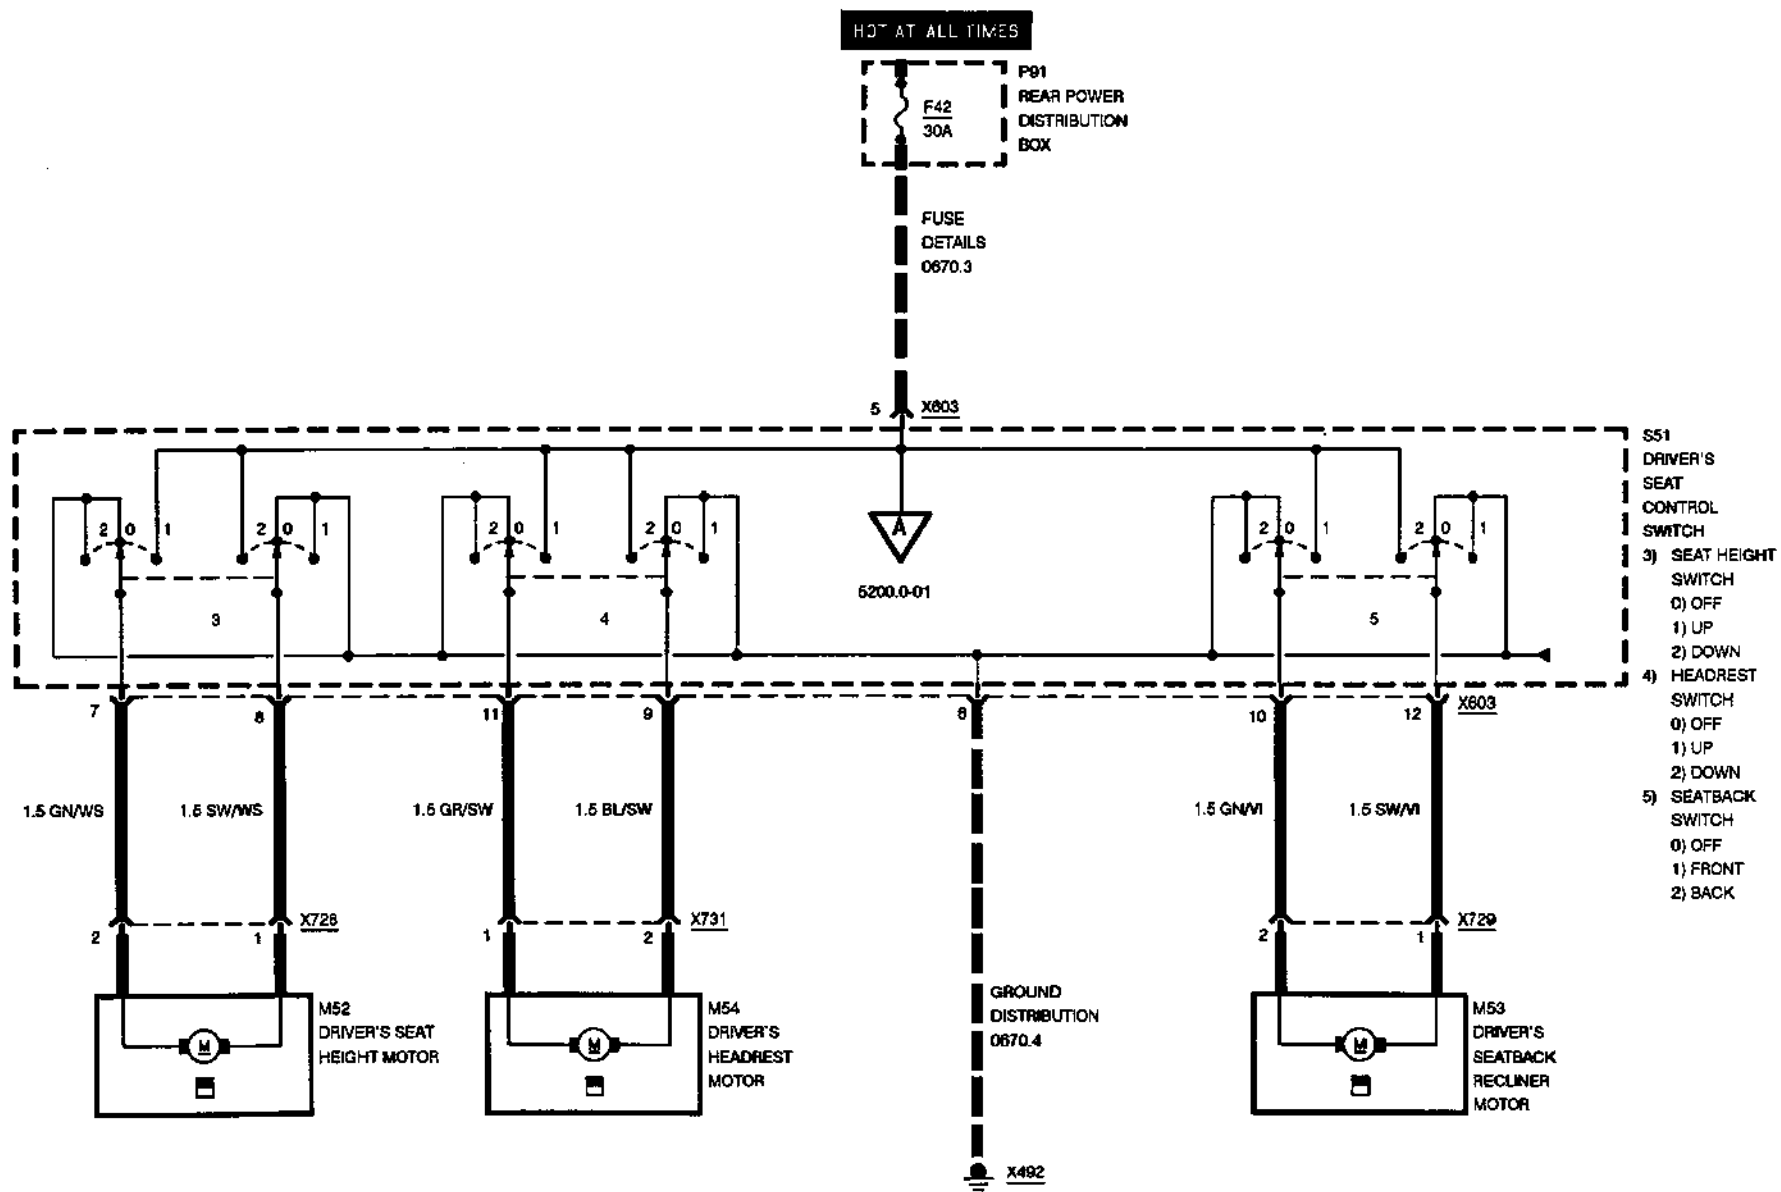


BMW 5 **POWER SEATS**
DRIVER'S SEAT

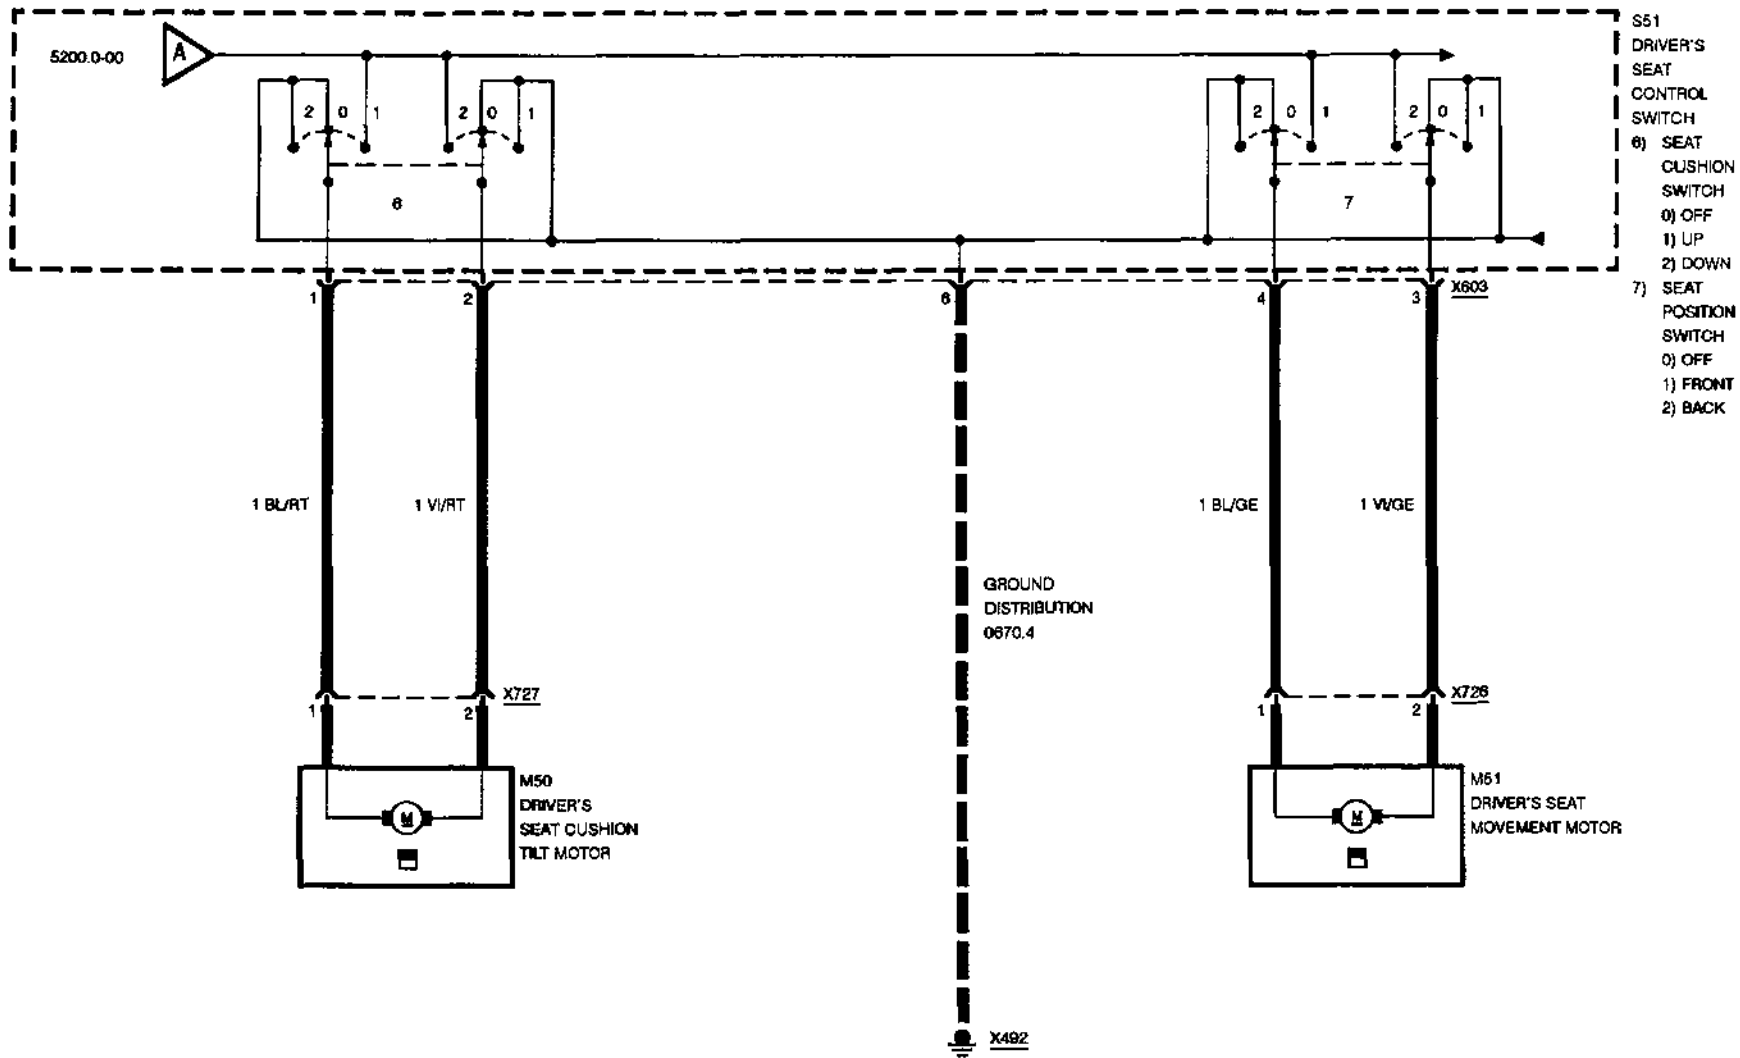




POWER SEATS

PASSENGER'S SEAT

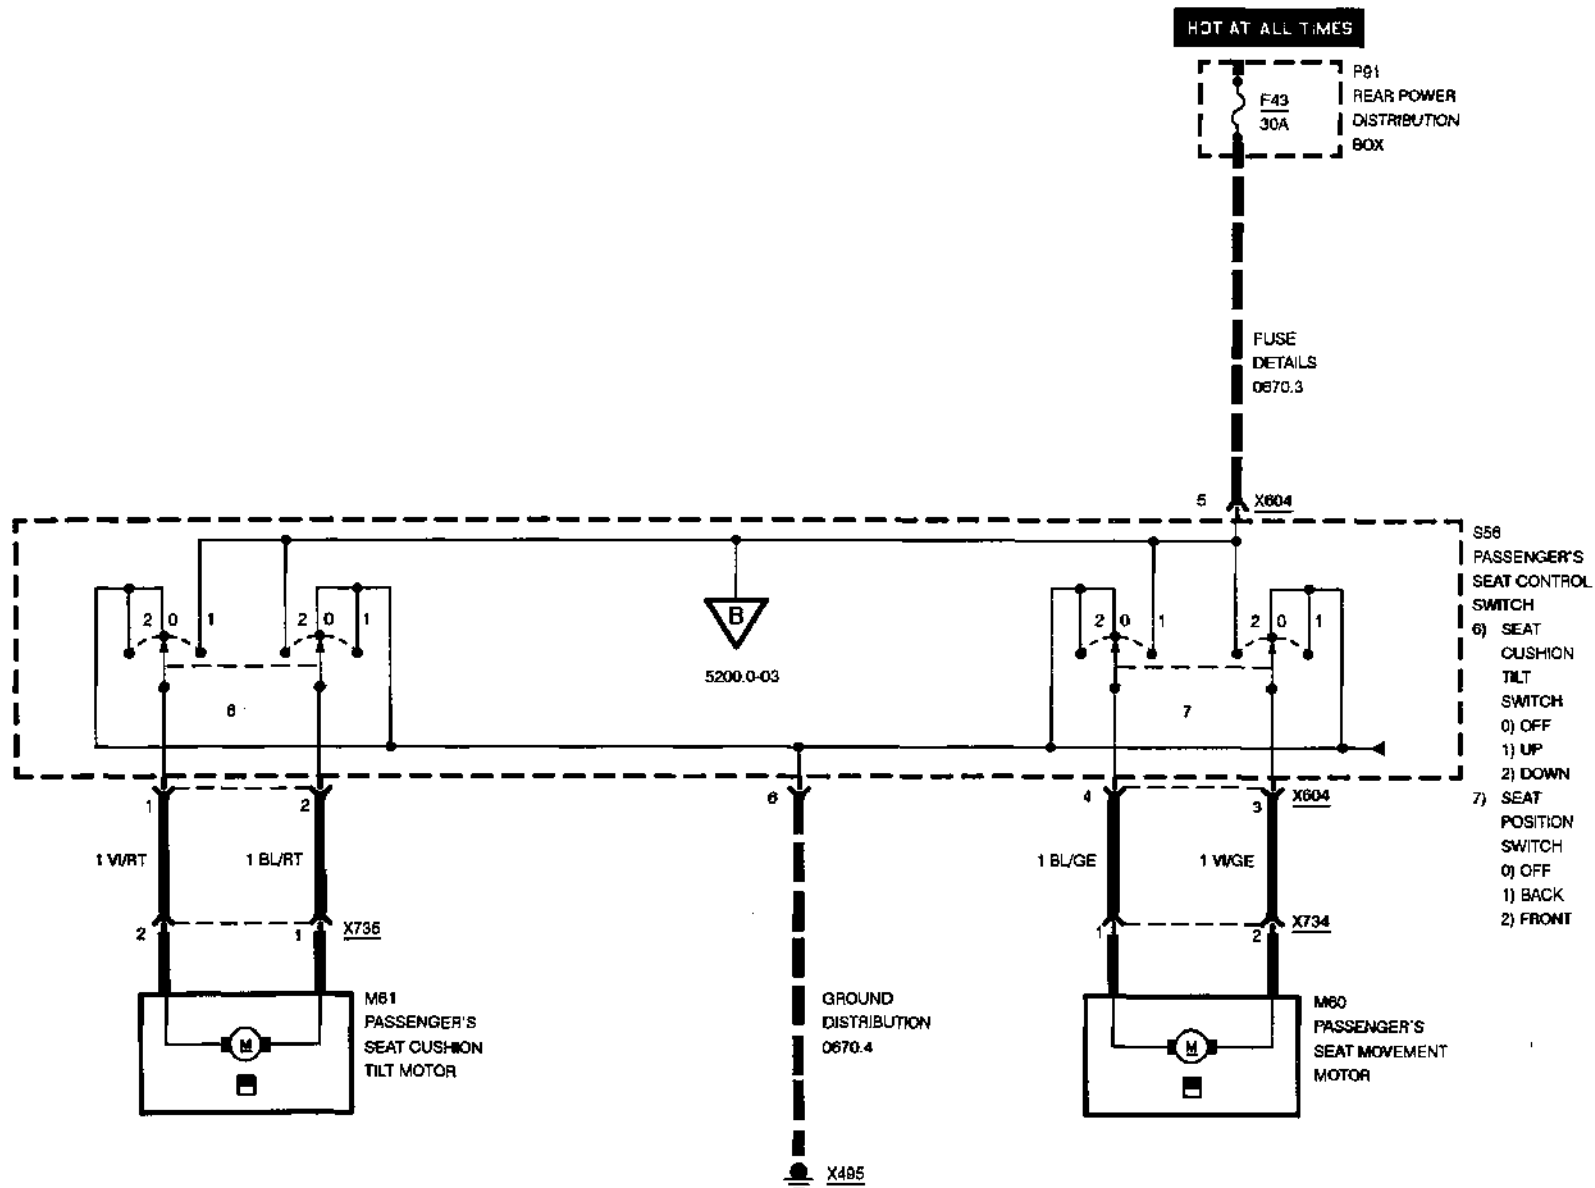



POWER SEATS PASSENGER'S SEAT

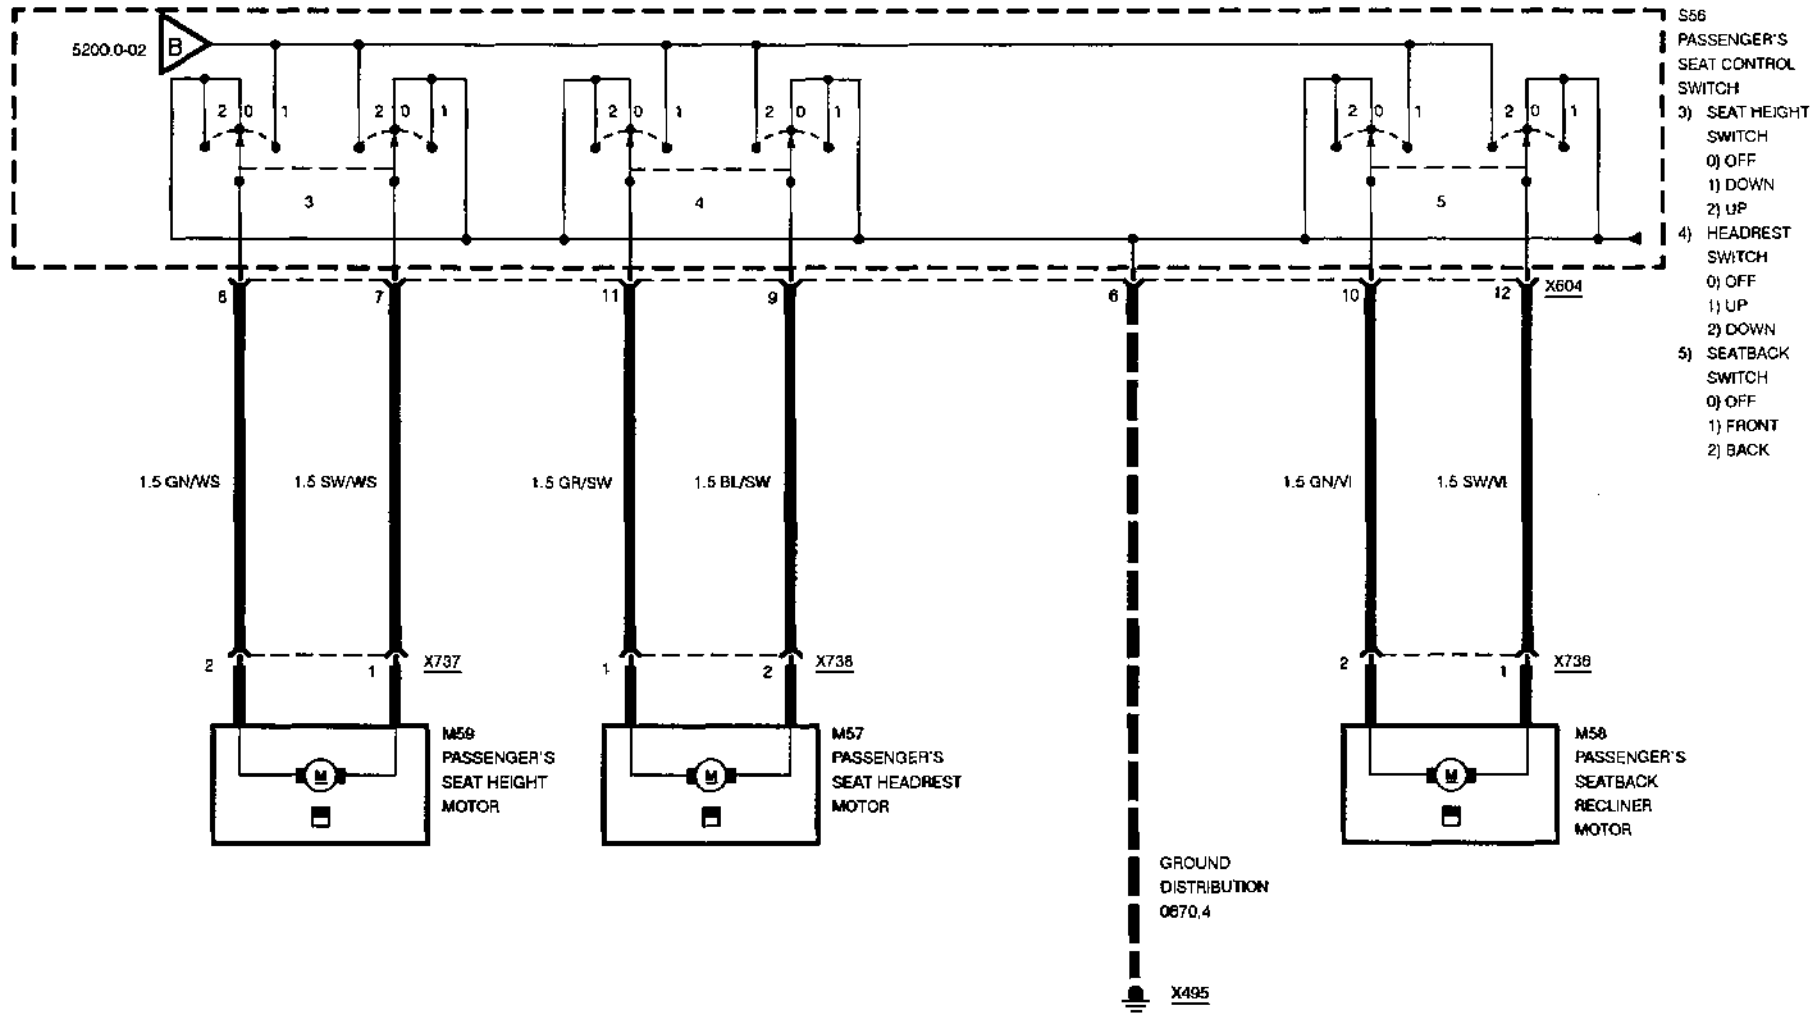




POWER SEATS

THIGH SUPPORT, WITH SPORT SEATS ONLY

M5

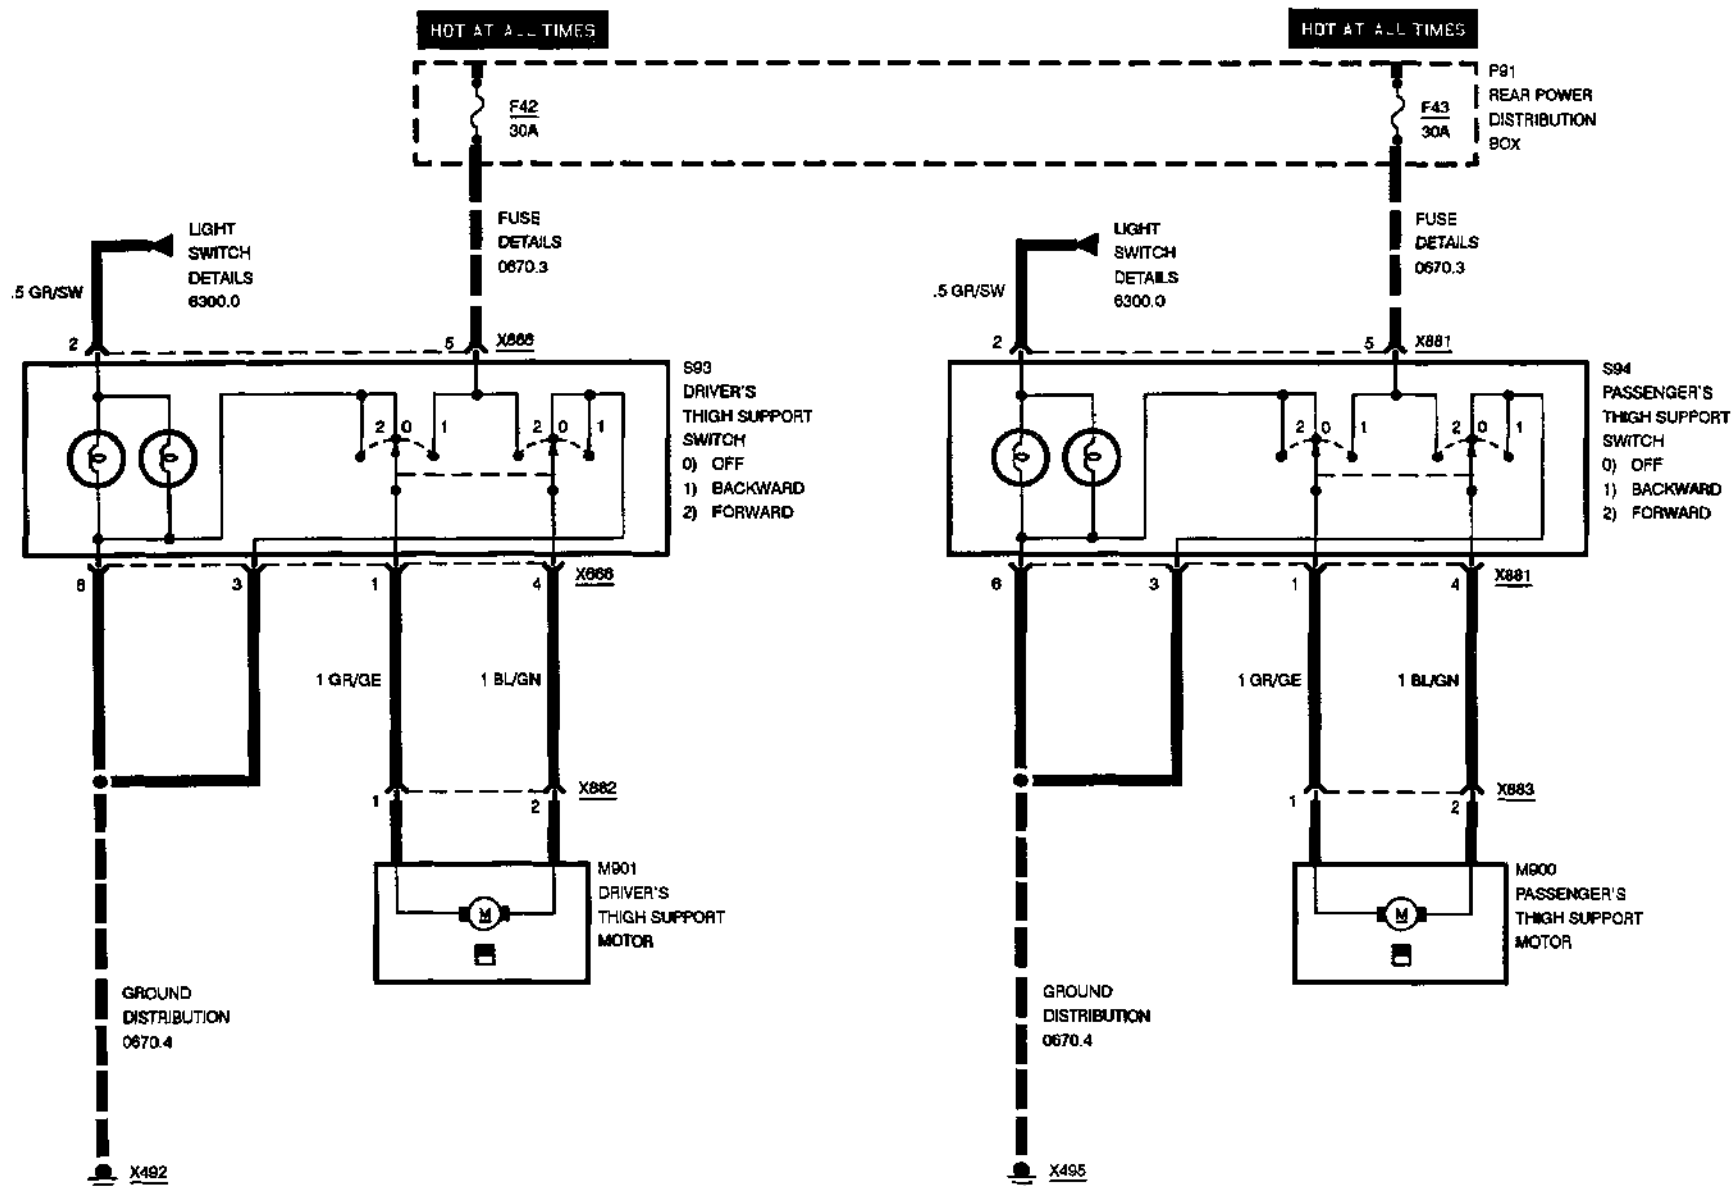




02/90

5200.0-04

1990

HEATED SEATS

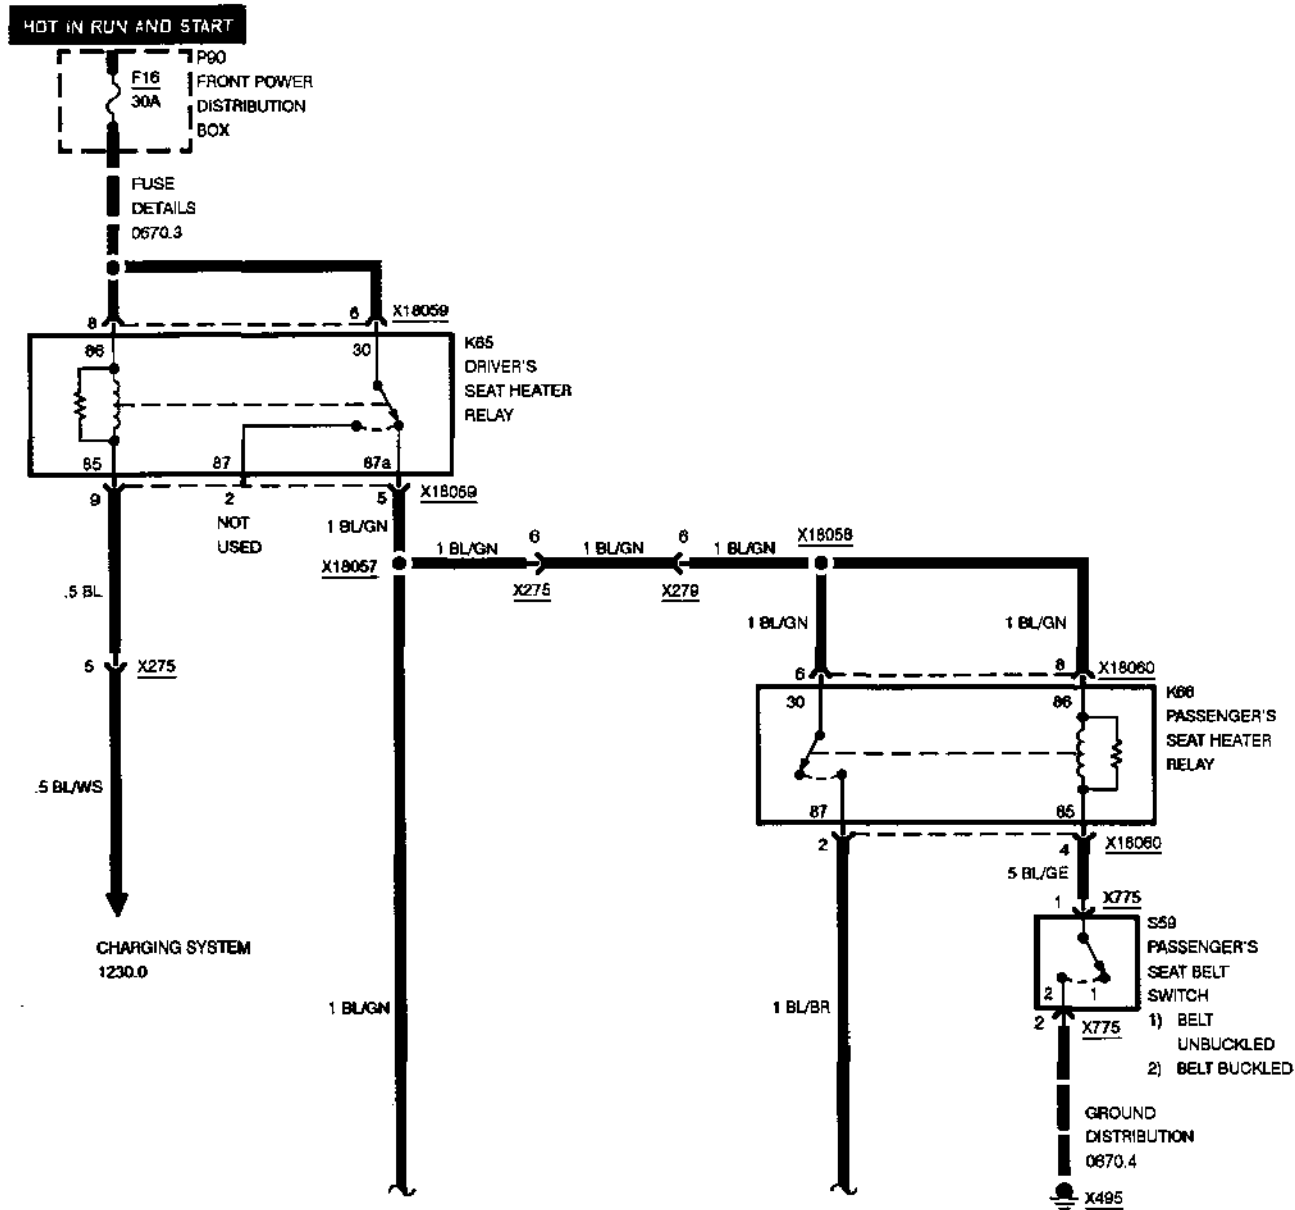


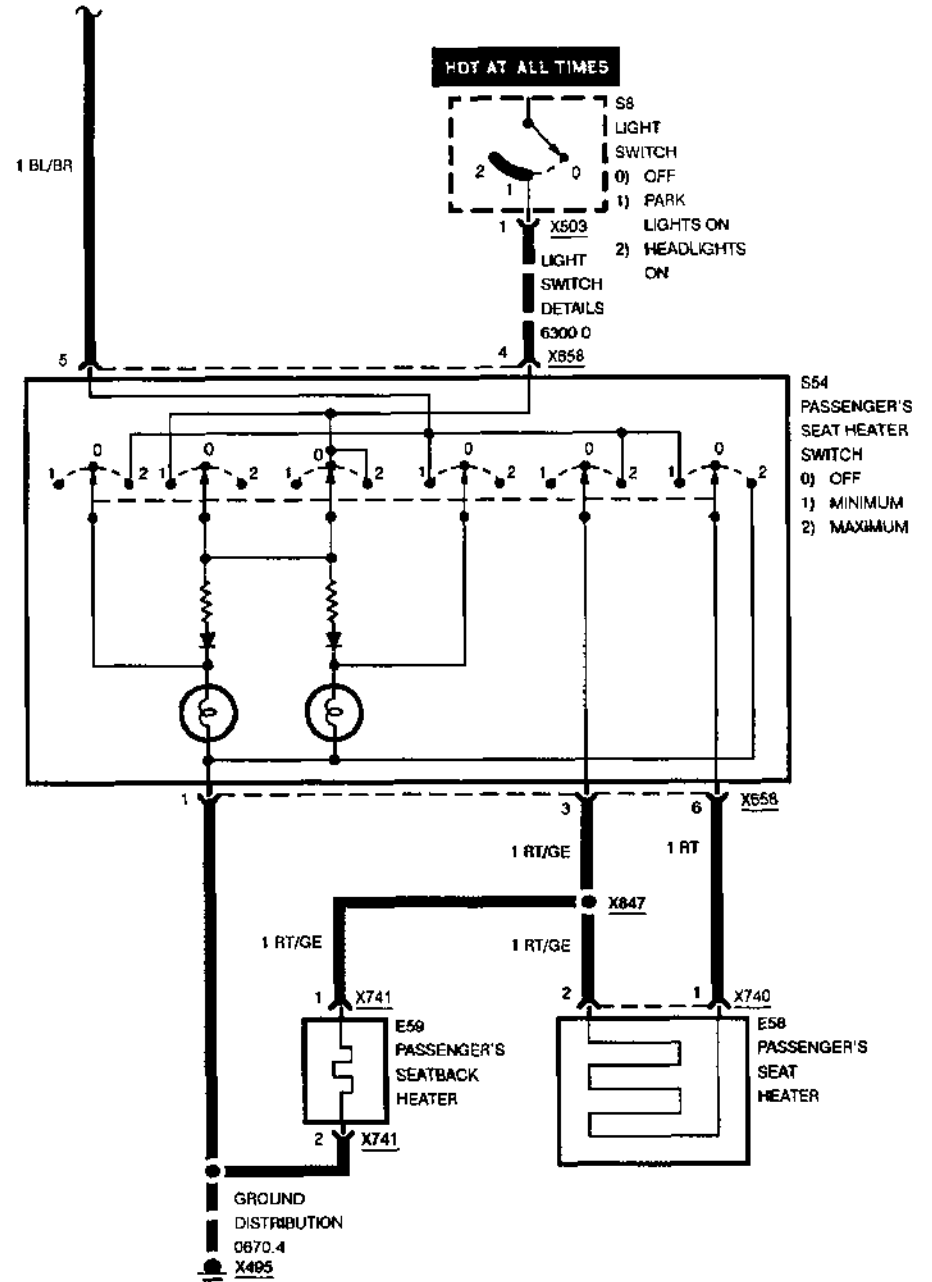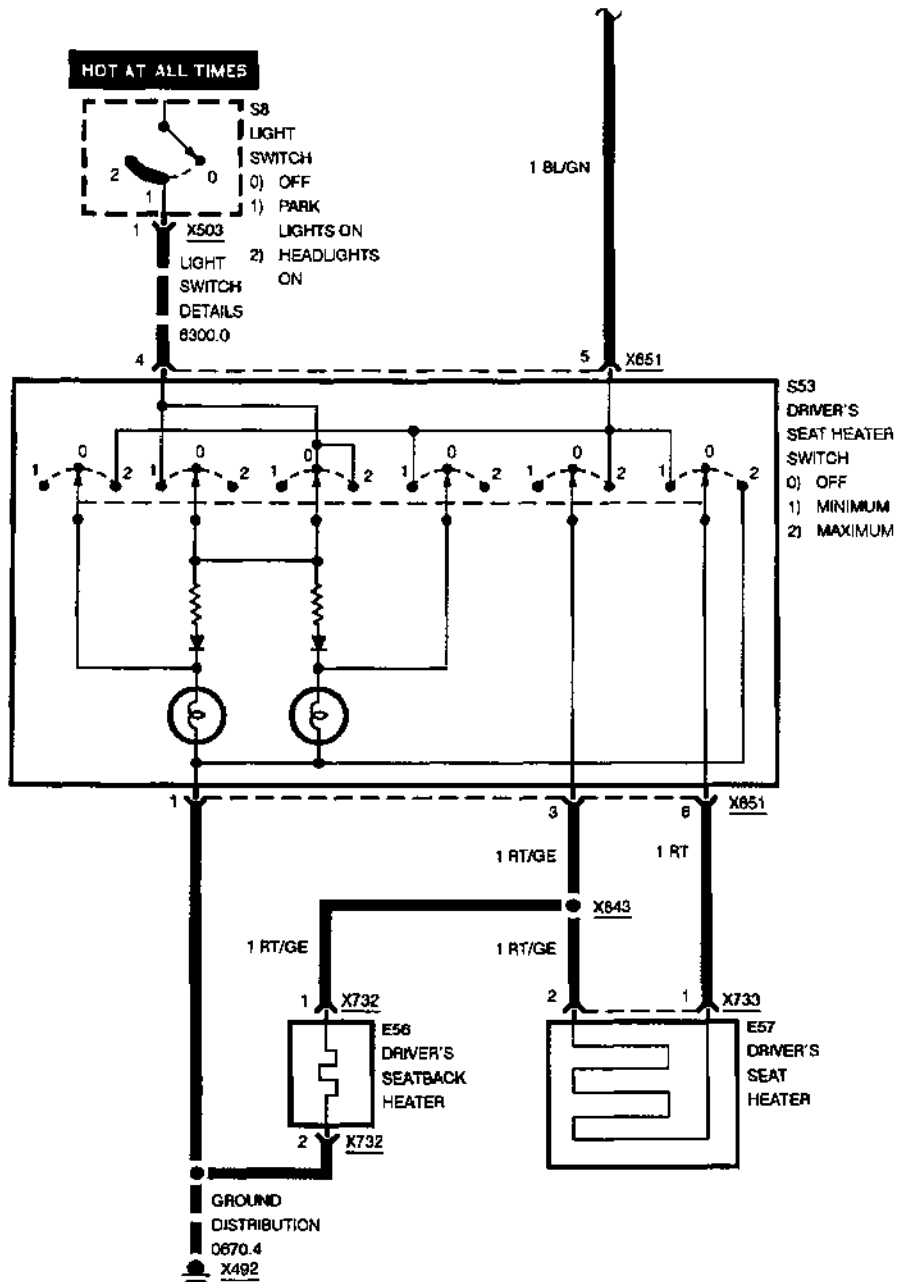




ZKE SUNROOF (SHD)

INPUT DETAILS

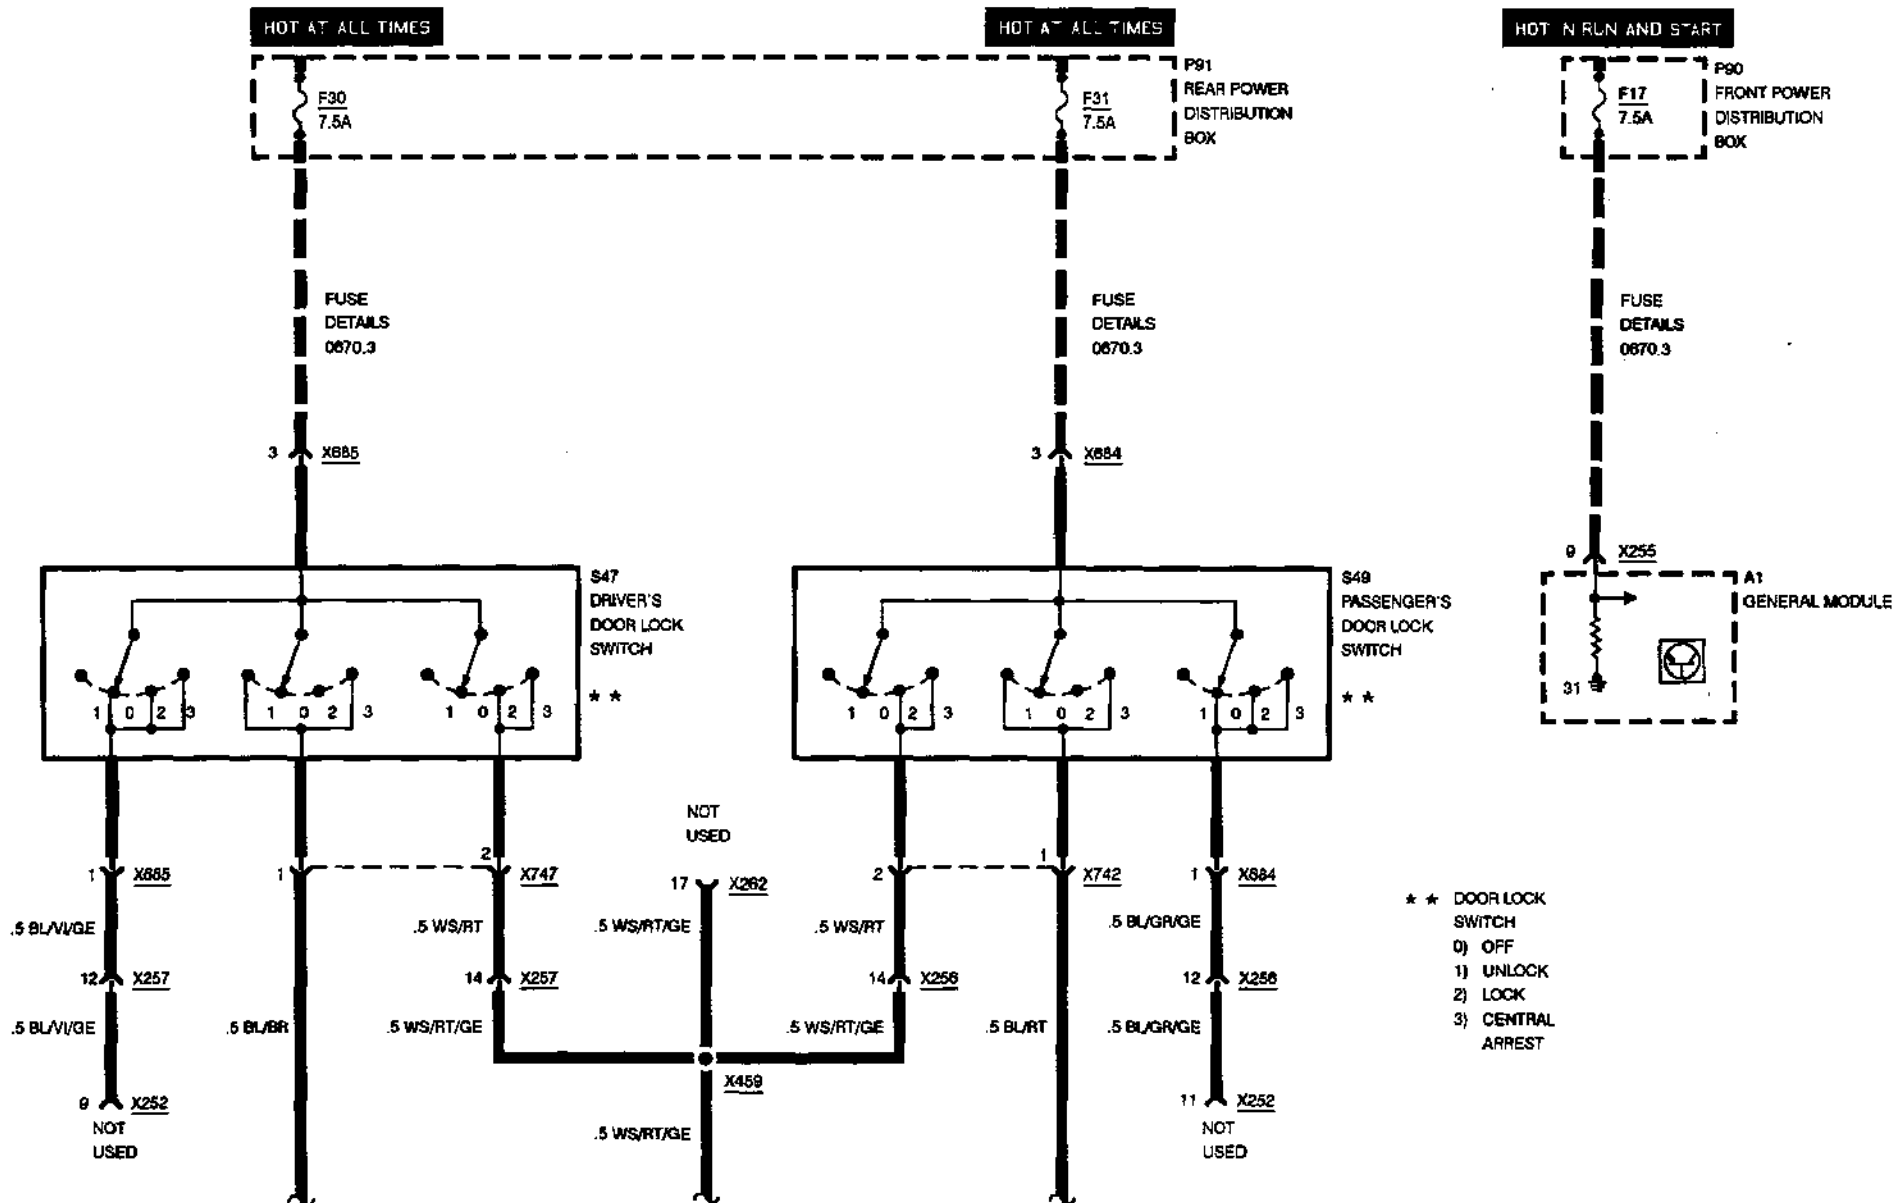

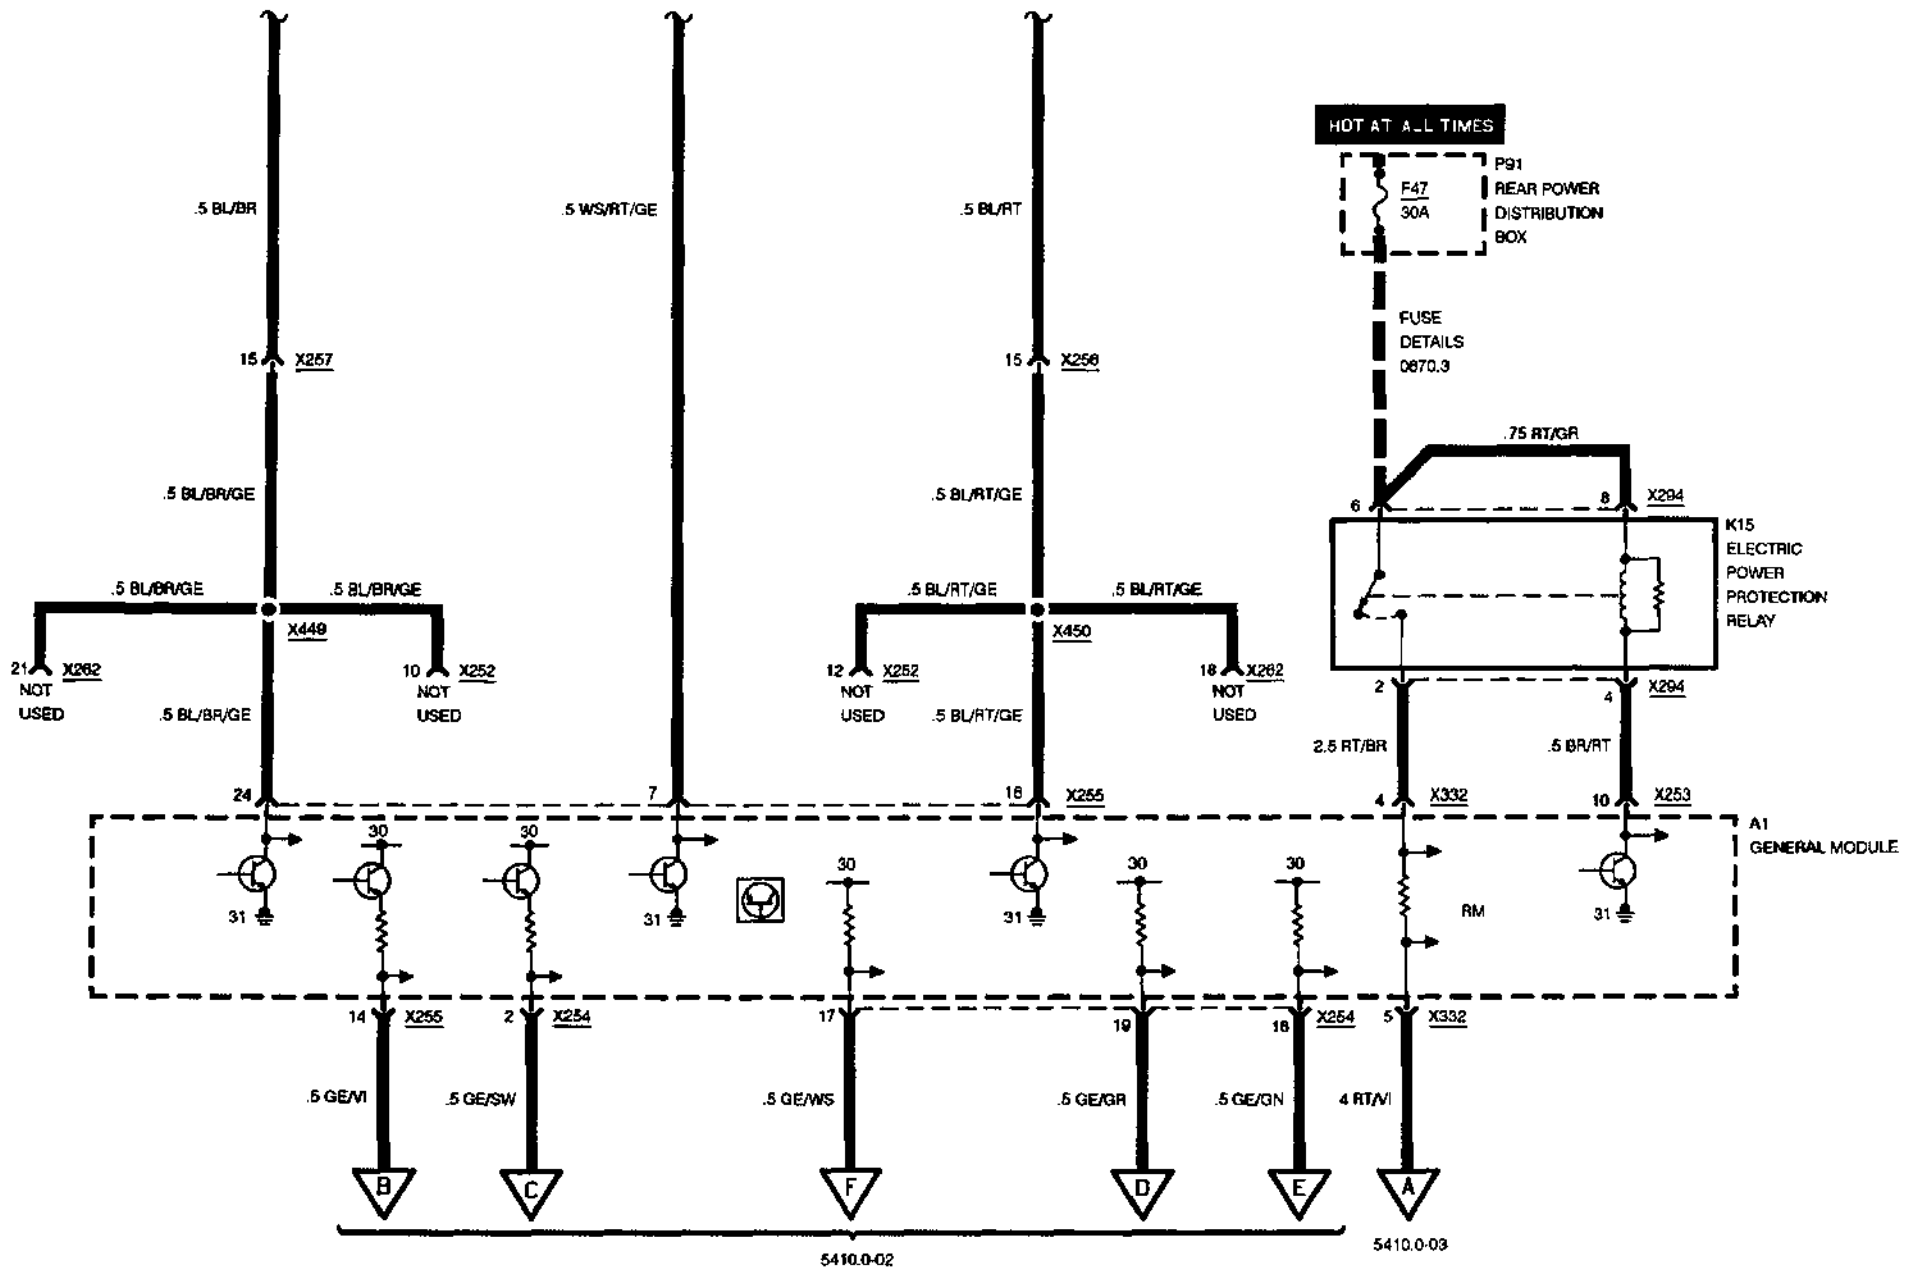




ZKE SUNROOF (SHD)


INPUT DETAILS

5410.0-01

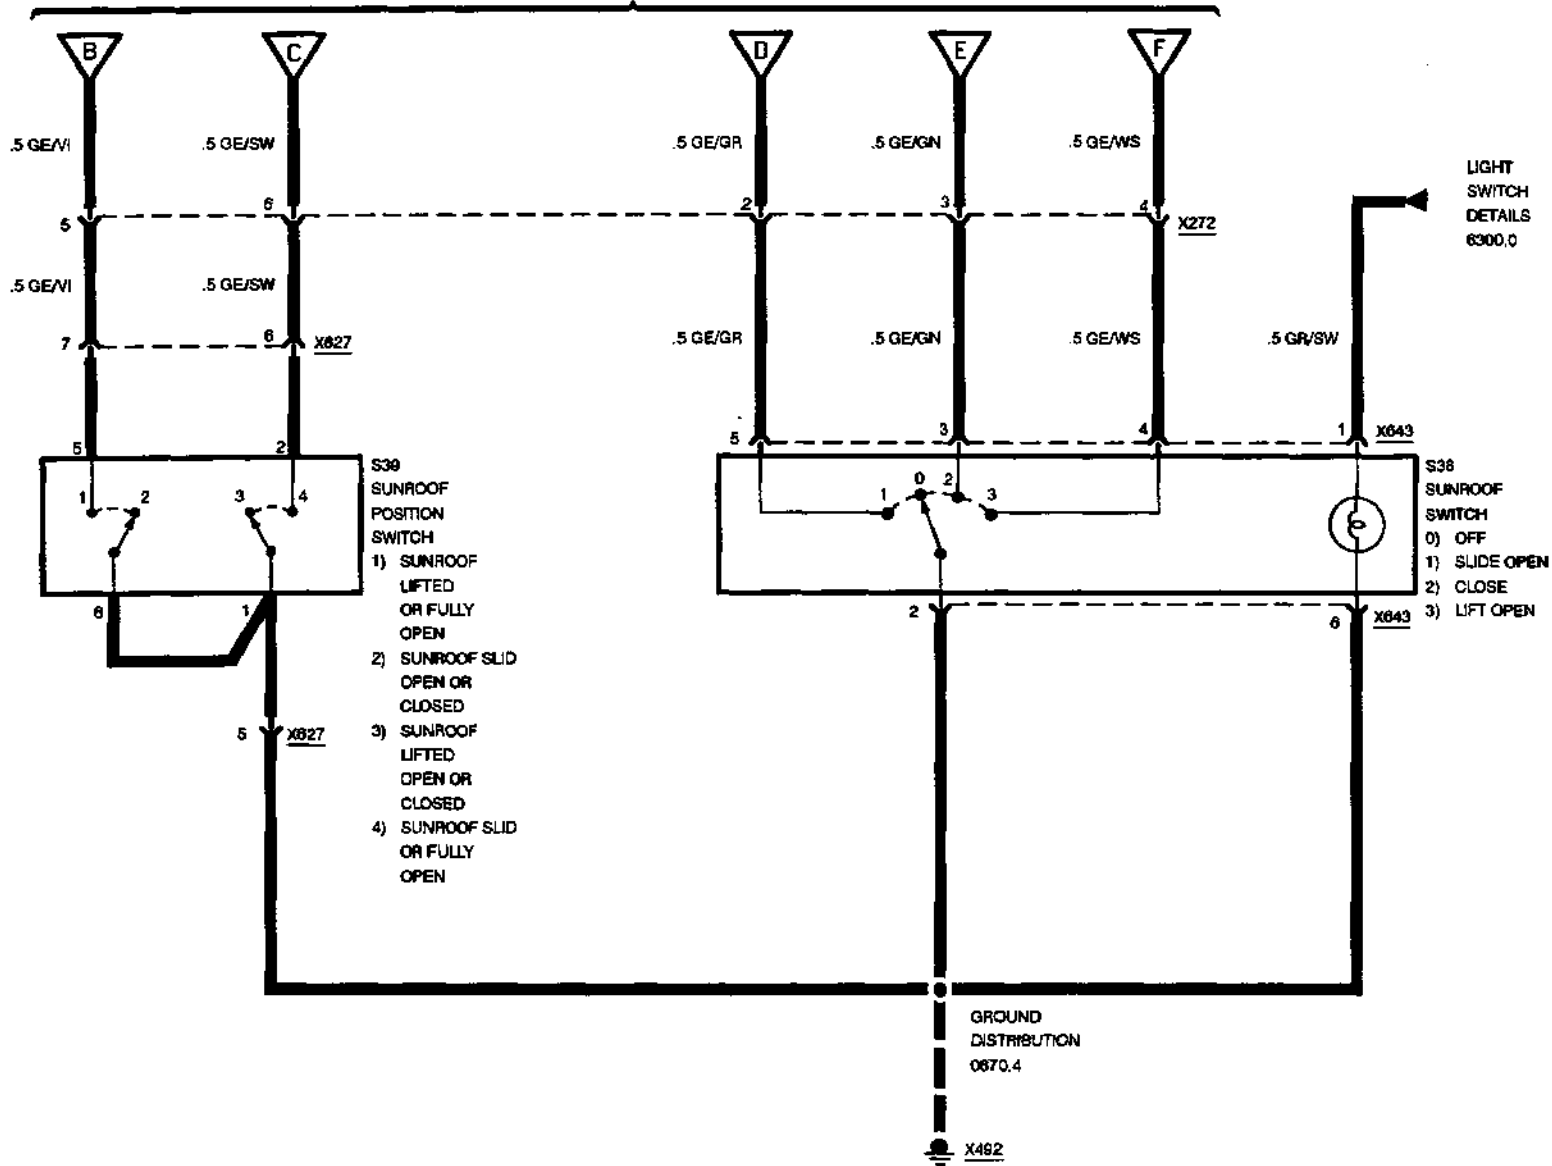




ZKE SUNROOF (SHD) OUTPUT DETAILS

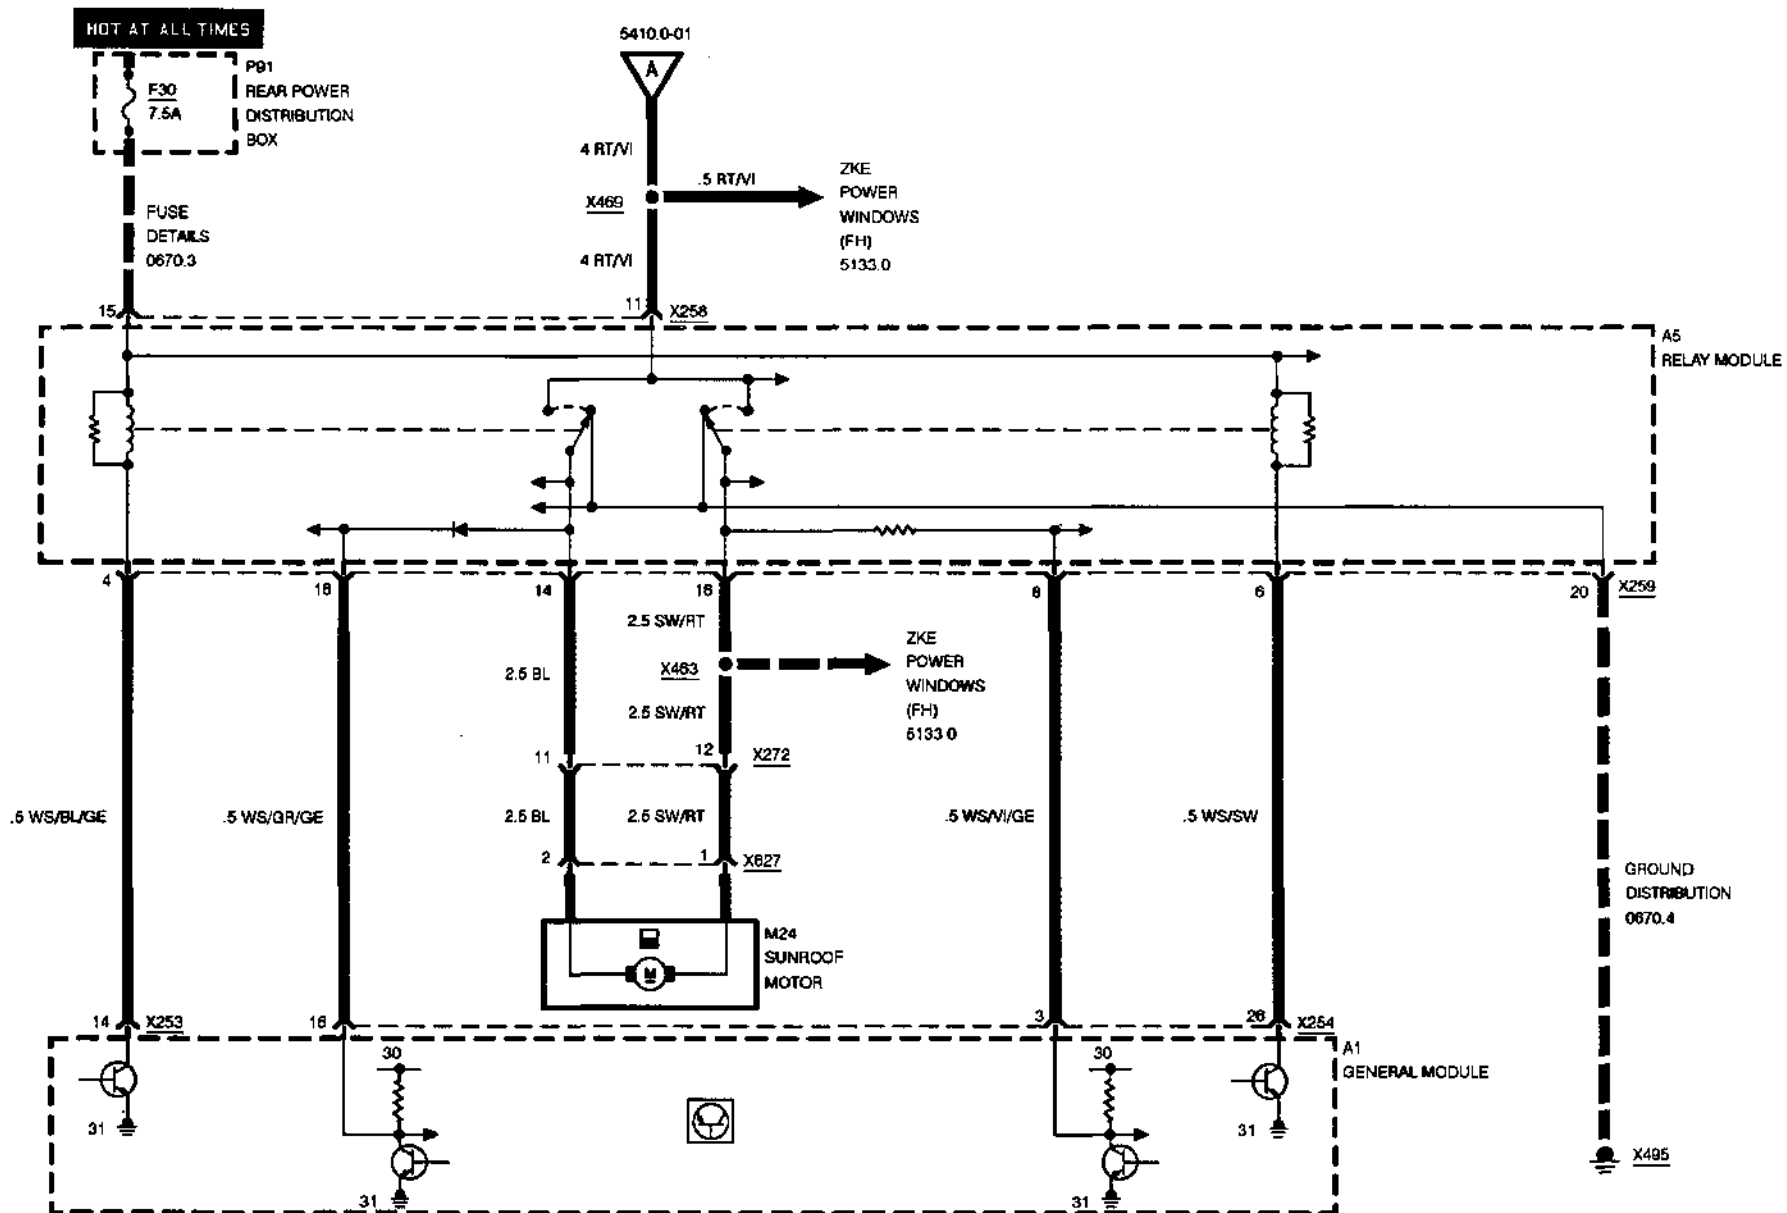



CENTRAL BODY ELECTRONICS (ZKE)


OUTPUT DETAILS

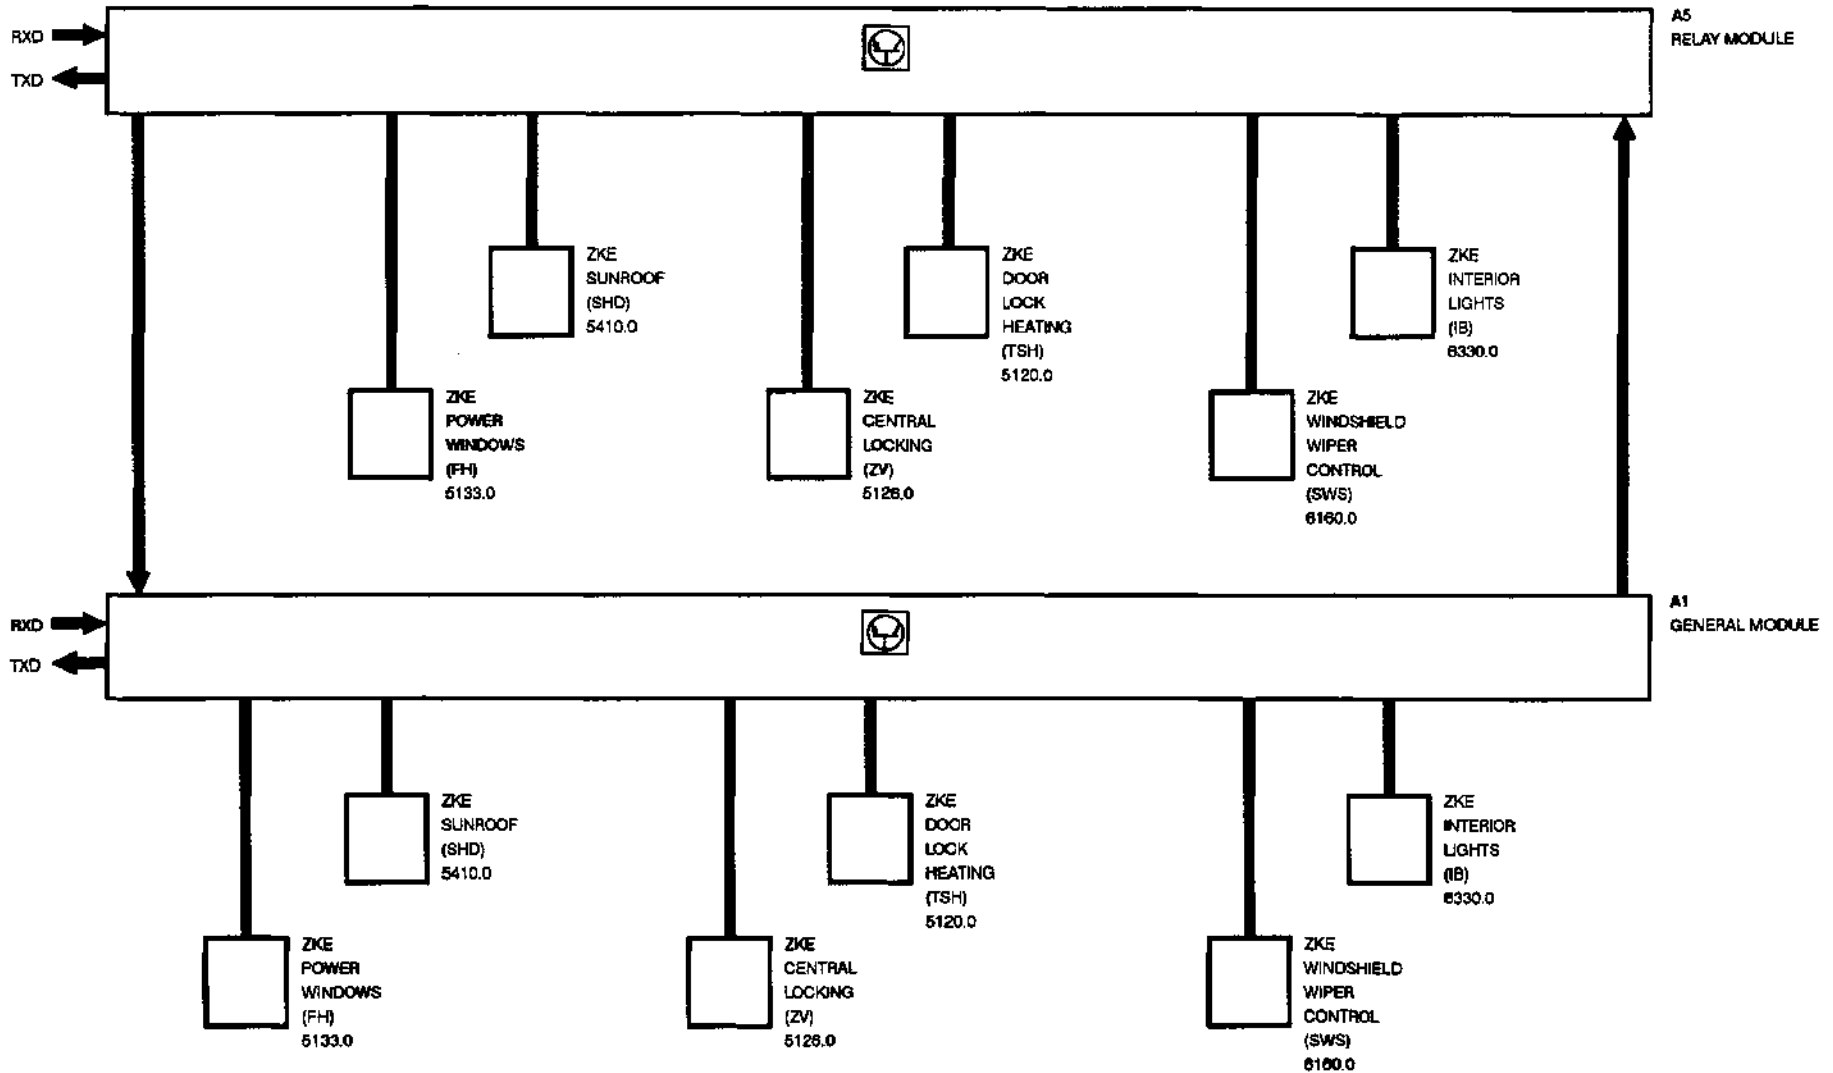

6100.0



CENTRAL BODY ELECTRONICS (ZKE) GENERAL MODULE

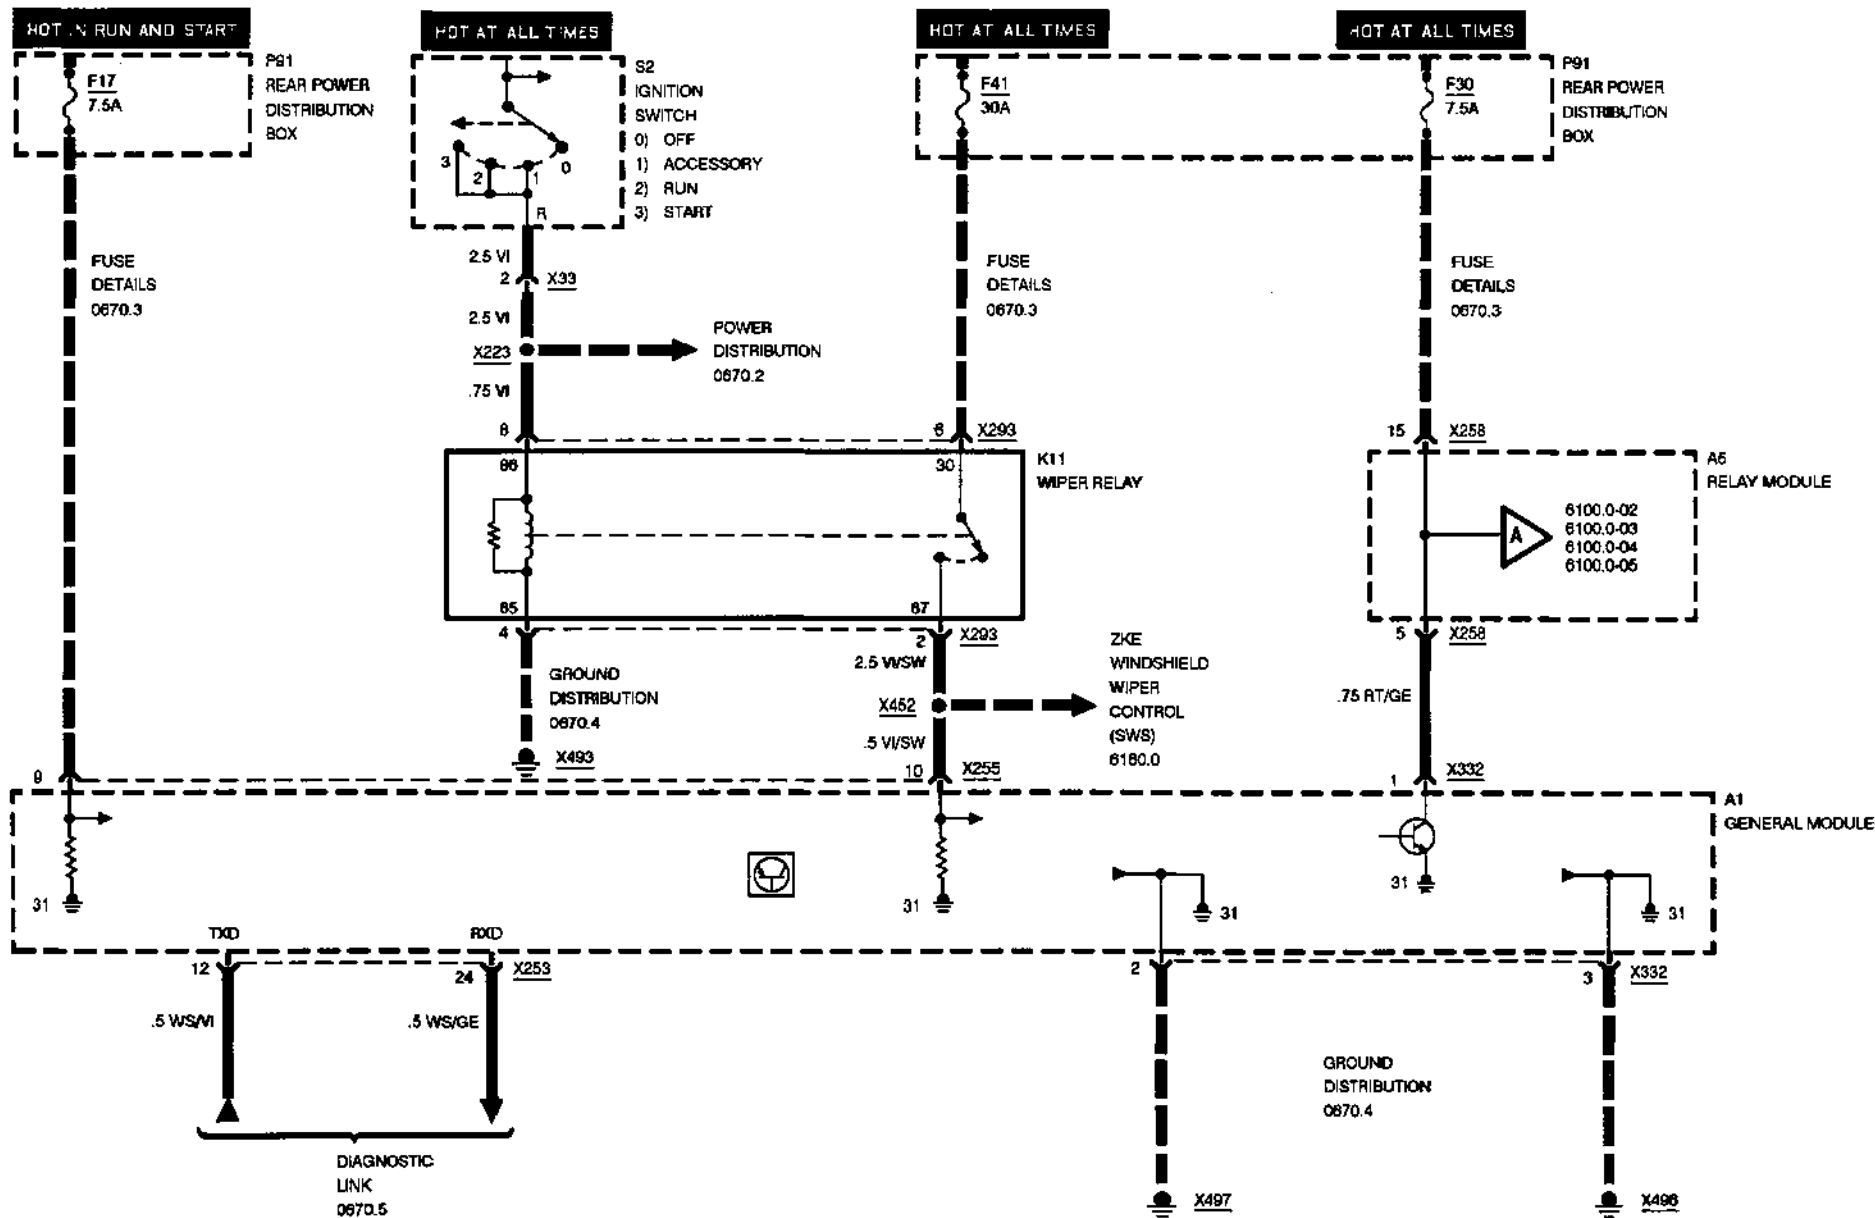

02/90


6100.0-00

1989




CENTRAL BODY ELECTRONICS (ZKE)

GENERAL MODULE

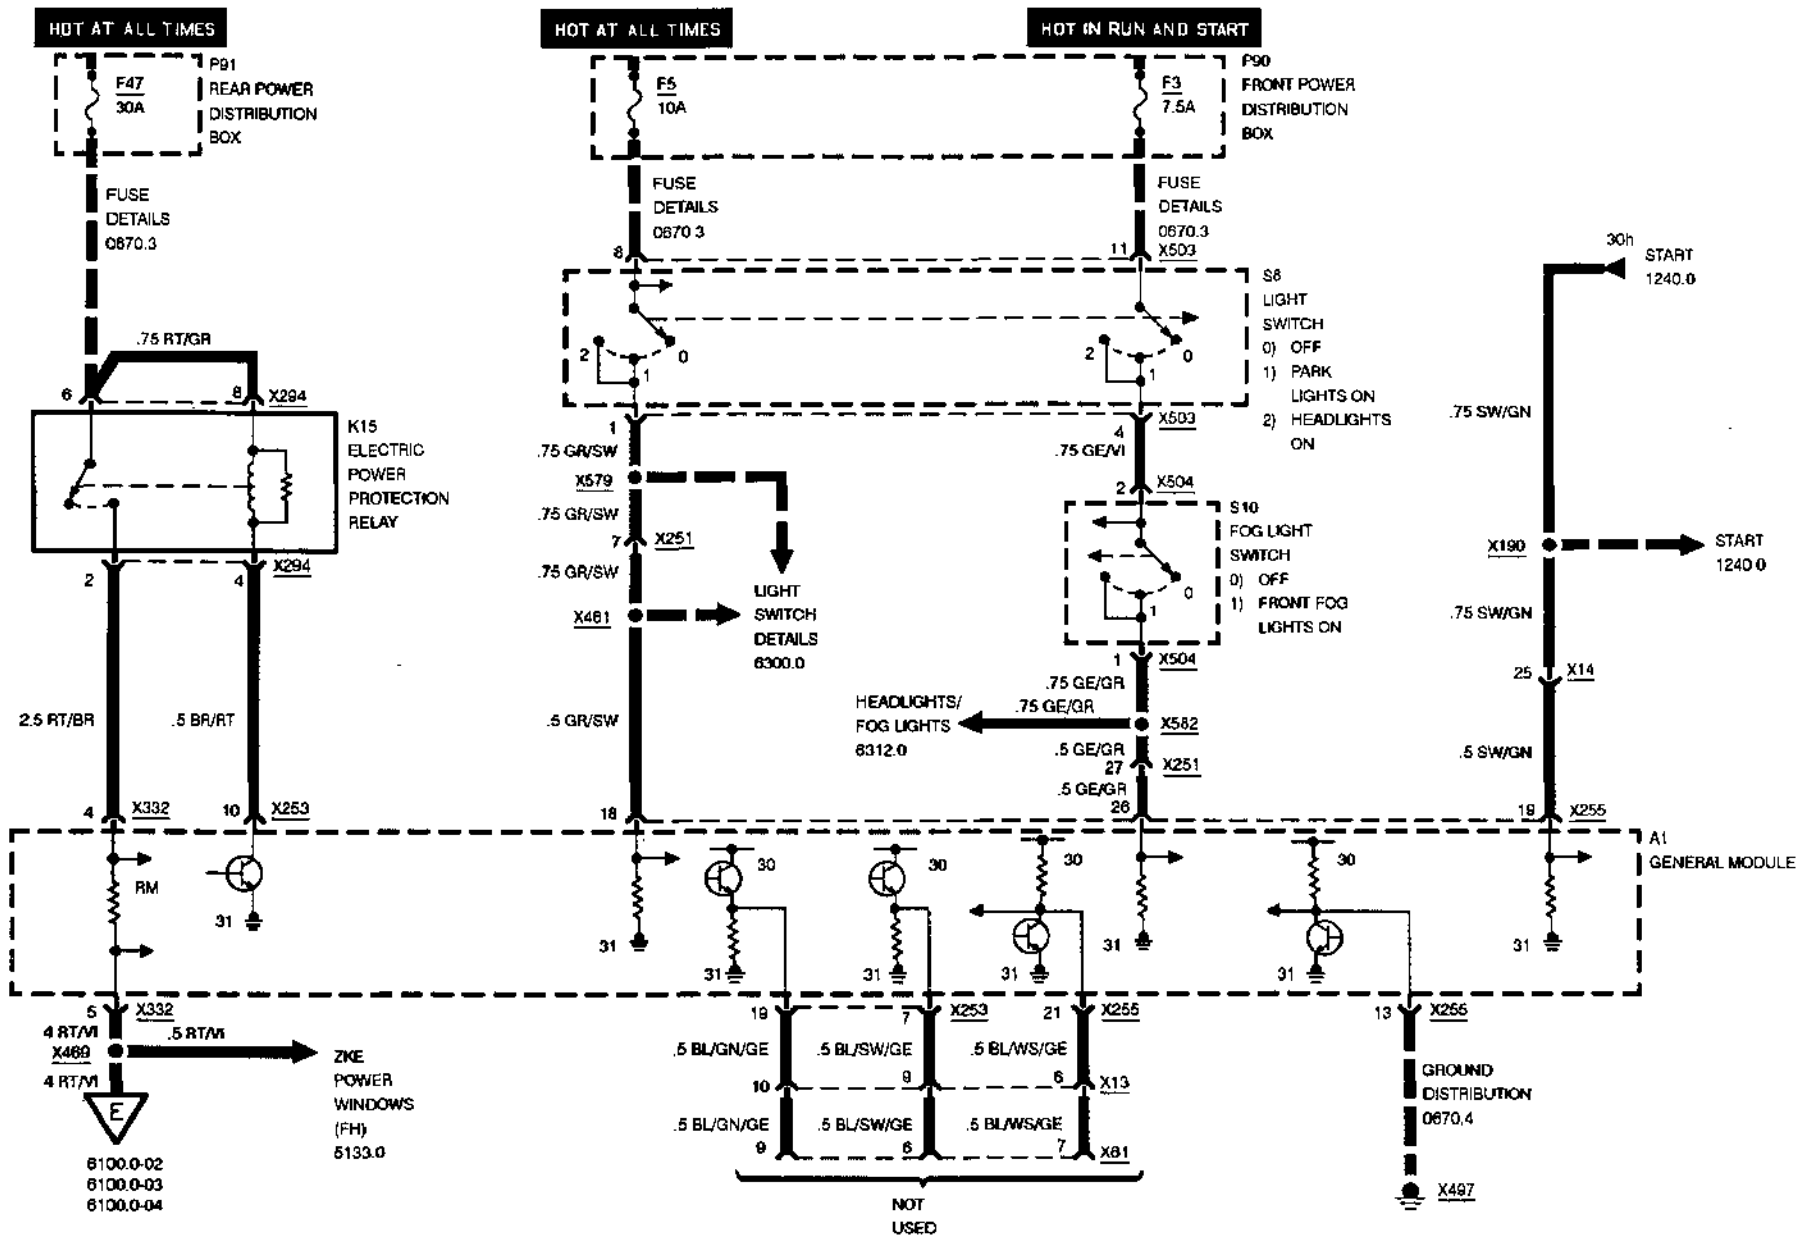




CENTRAL BODY ELECTRONICS (ZKE) RELAY MODULE

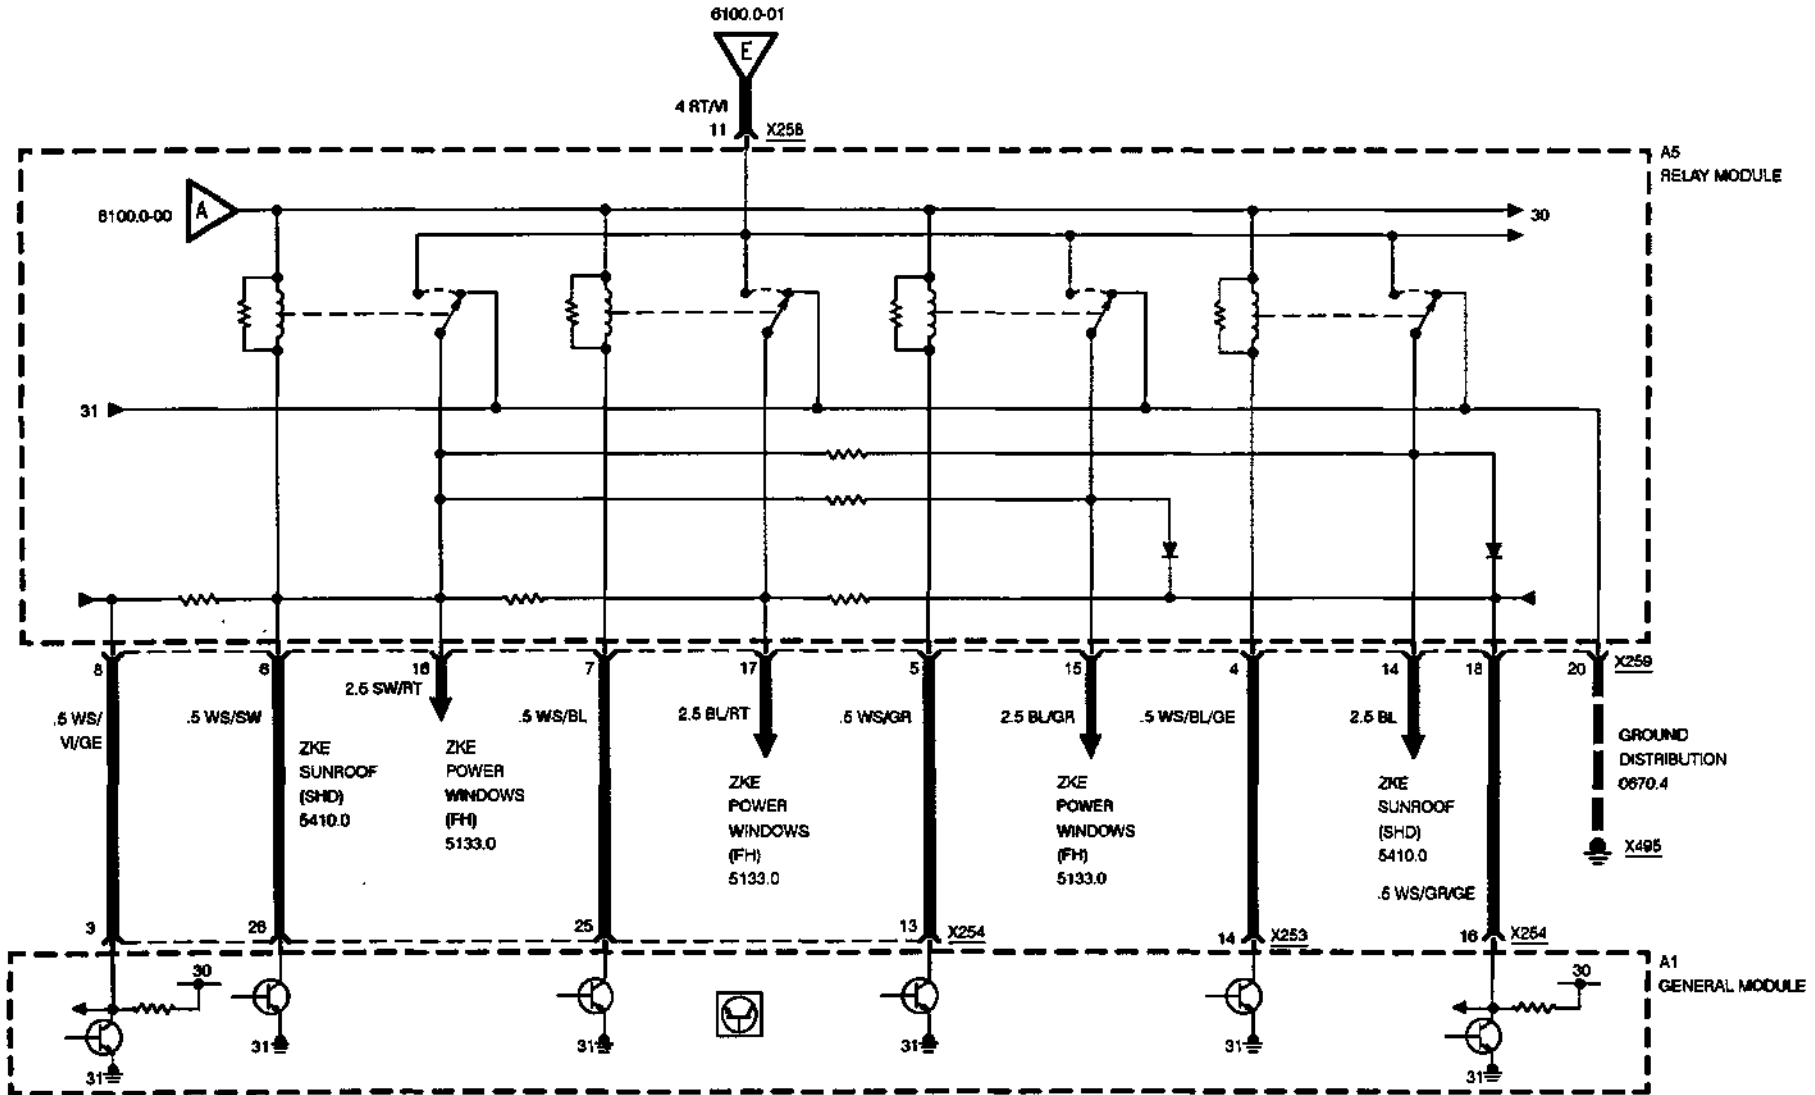




CENTRAL BODY ELECTRONICS (ZKE) RELAY MODULE

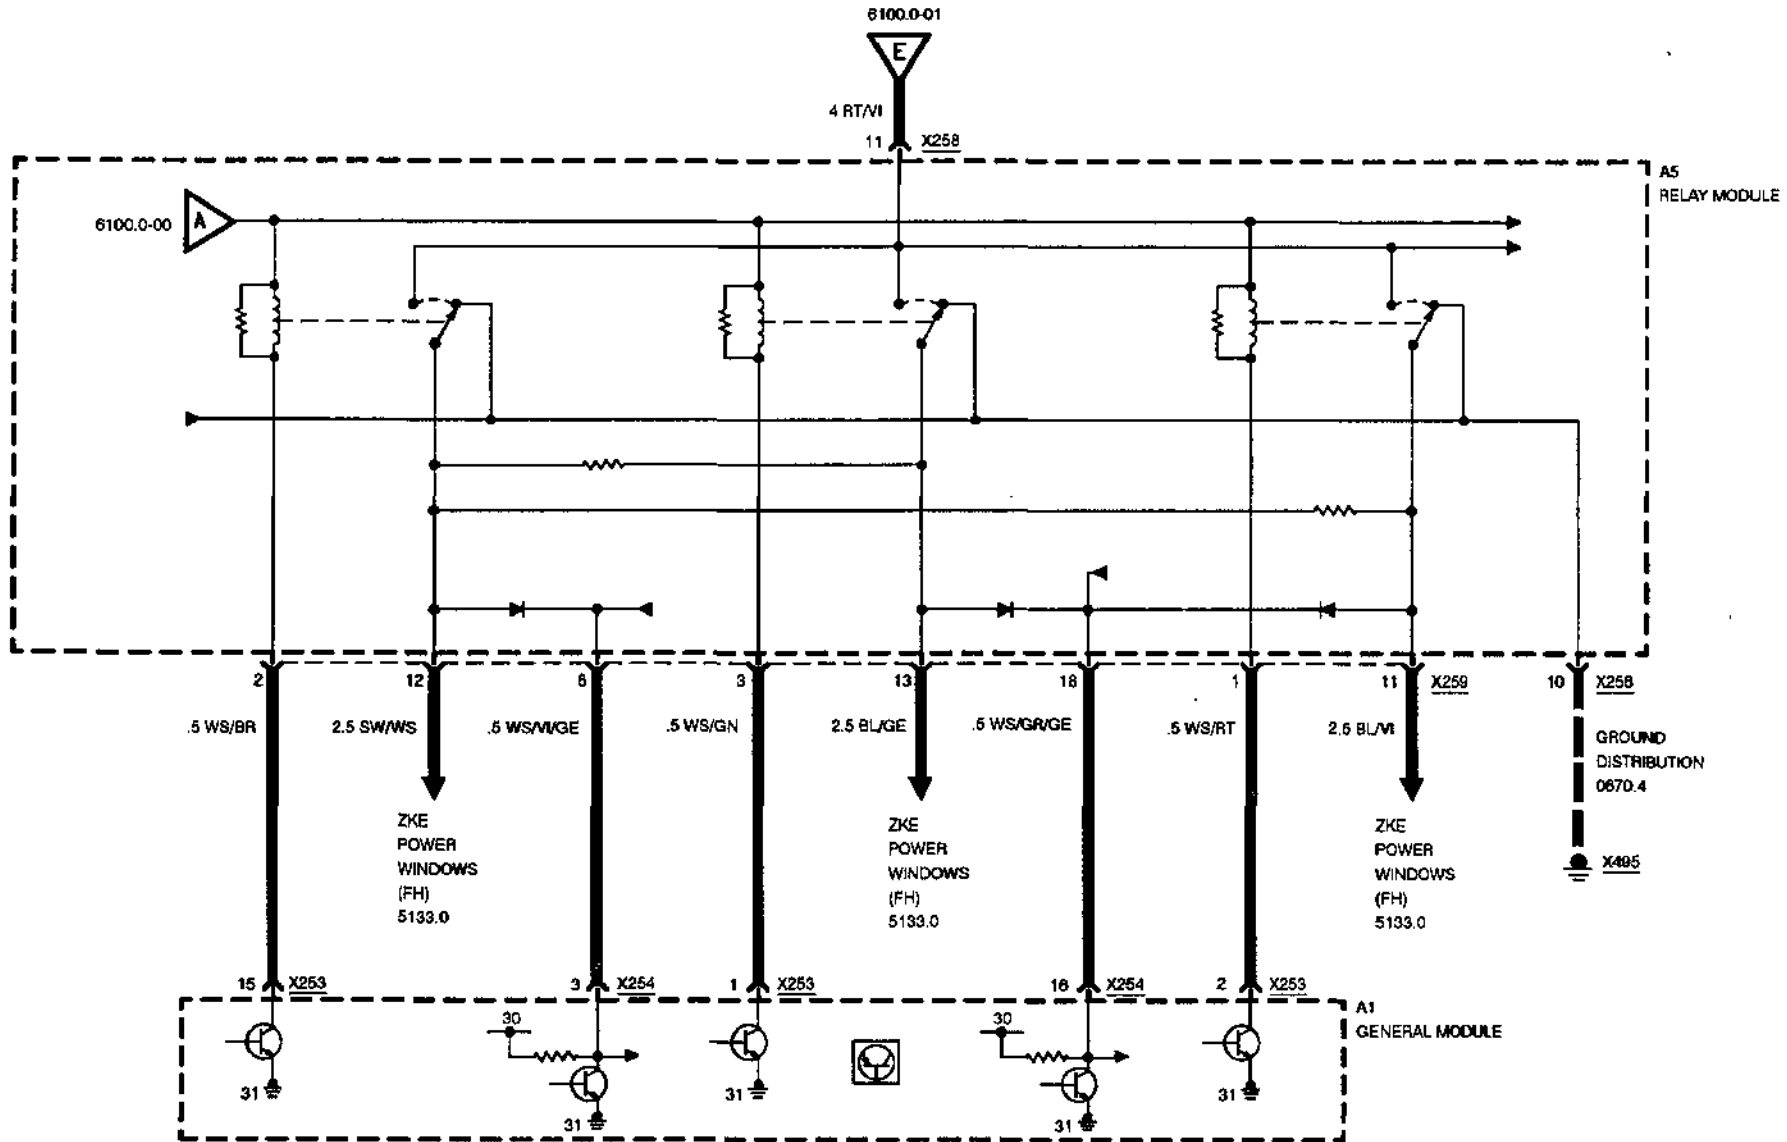




CENTRAL BODY ELECTRONICS (ZKE)

RELAY MODULE

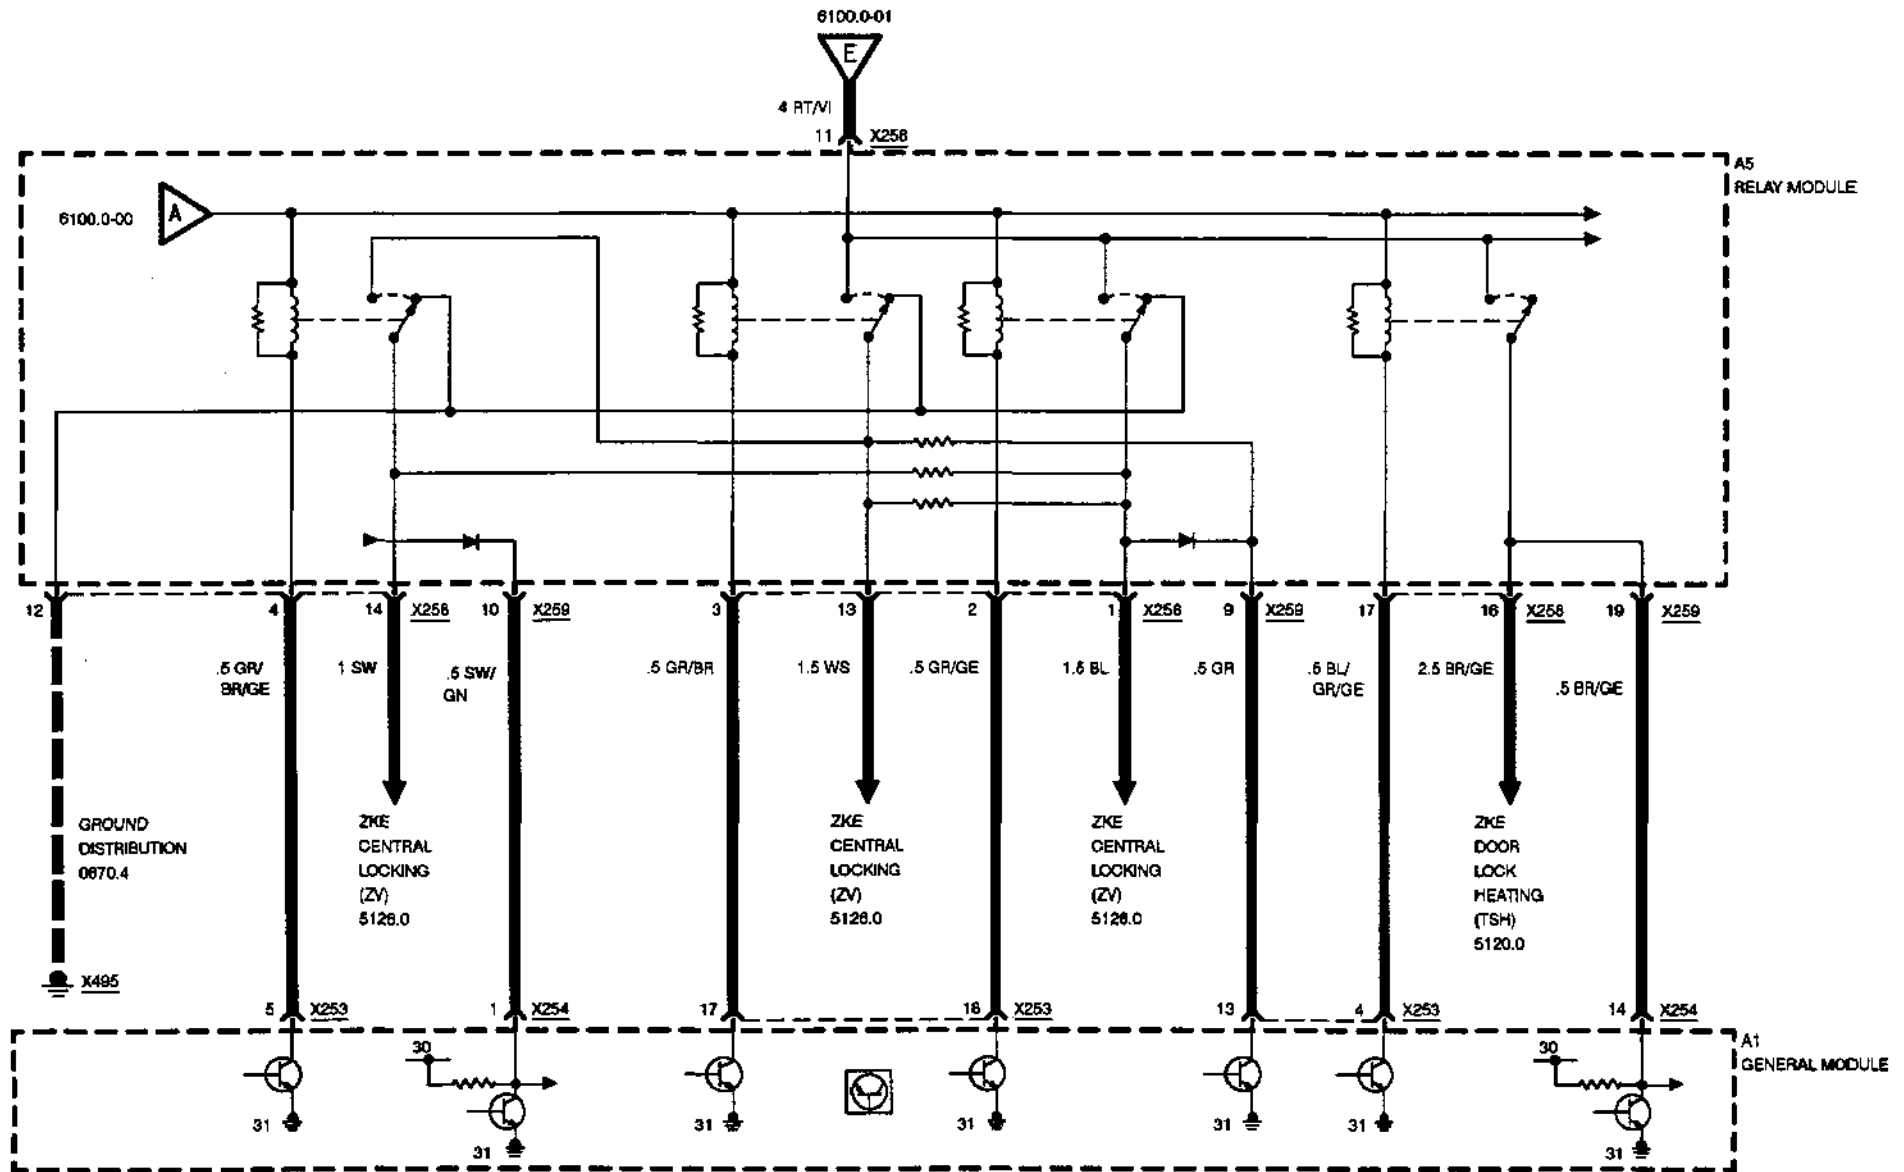




CENTRAL BODY ELECTRONICS (ZKE) RELAY MODULE

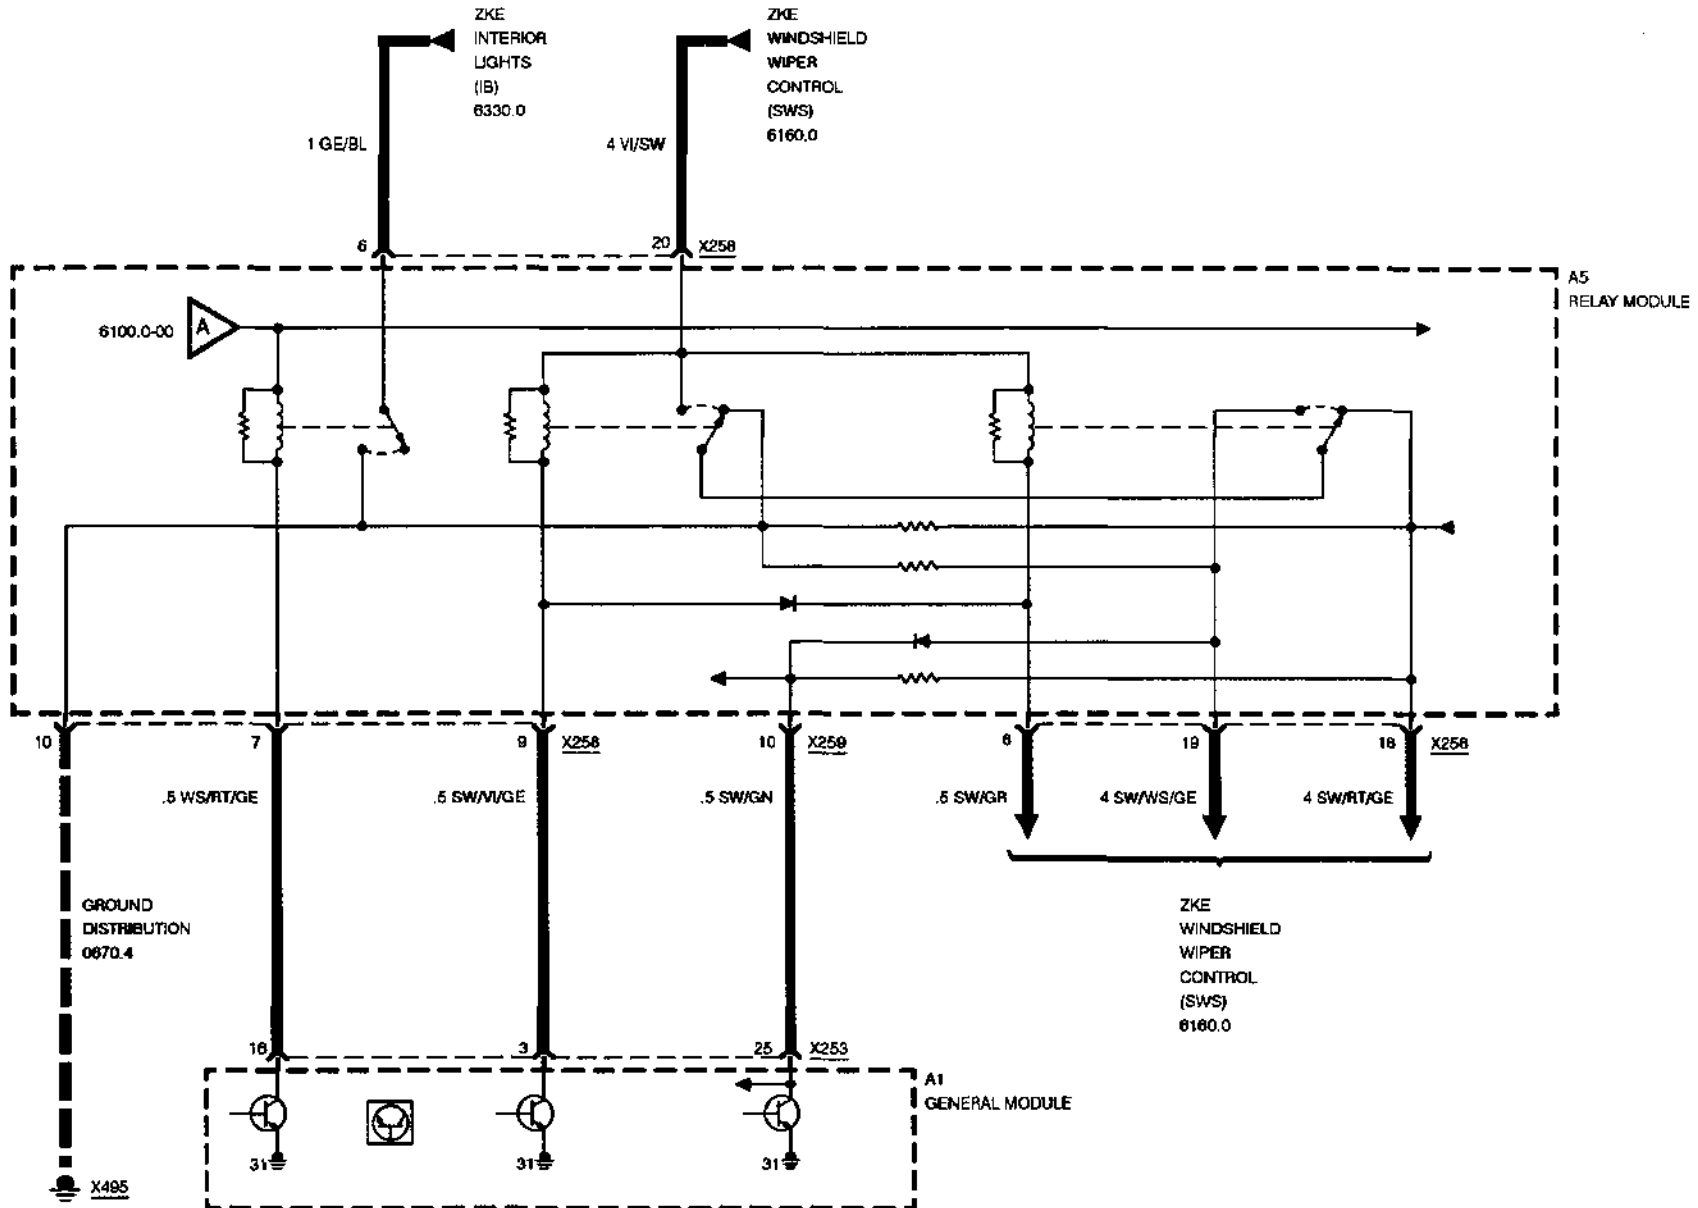



HORN

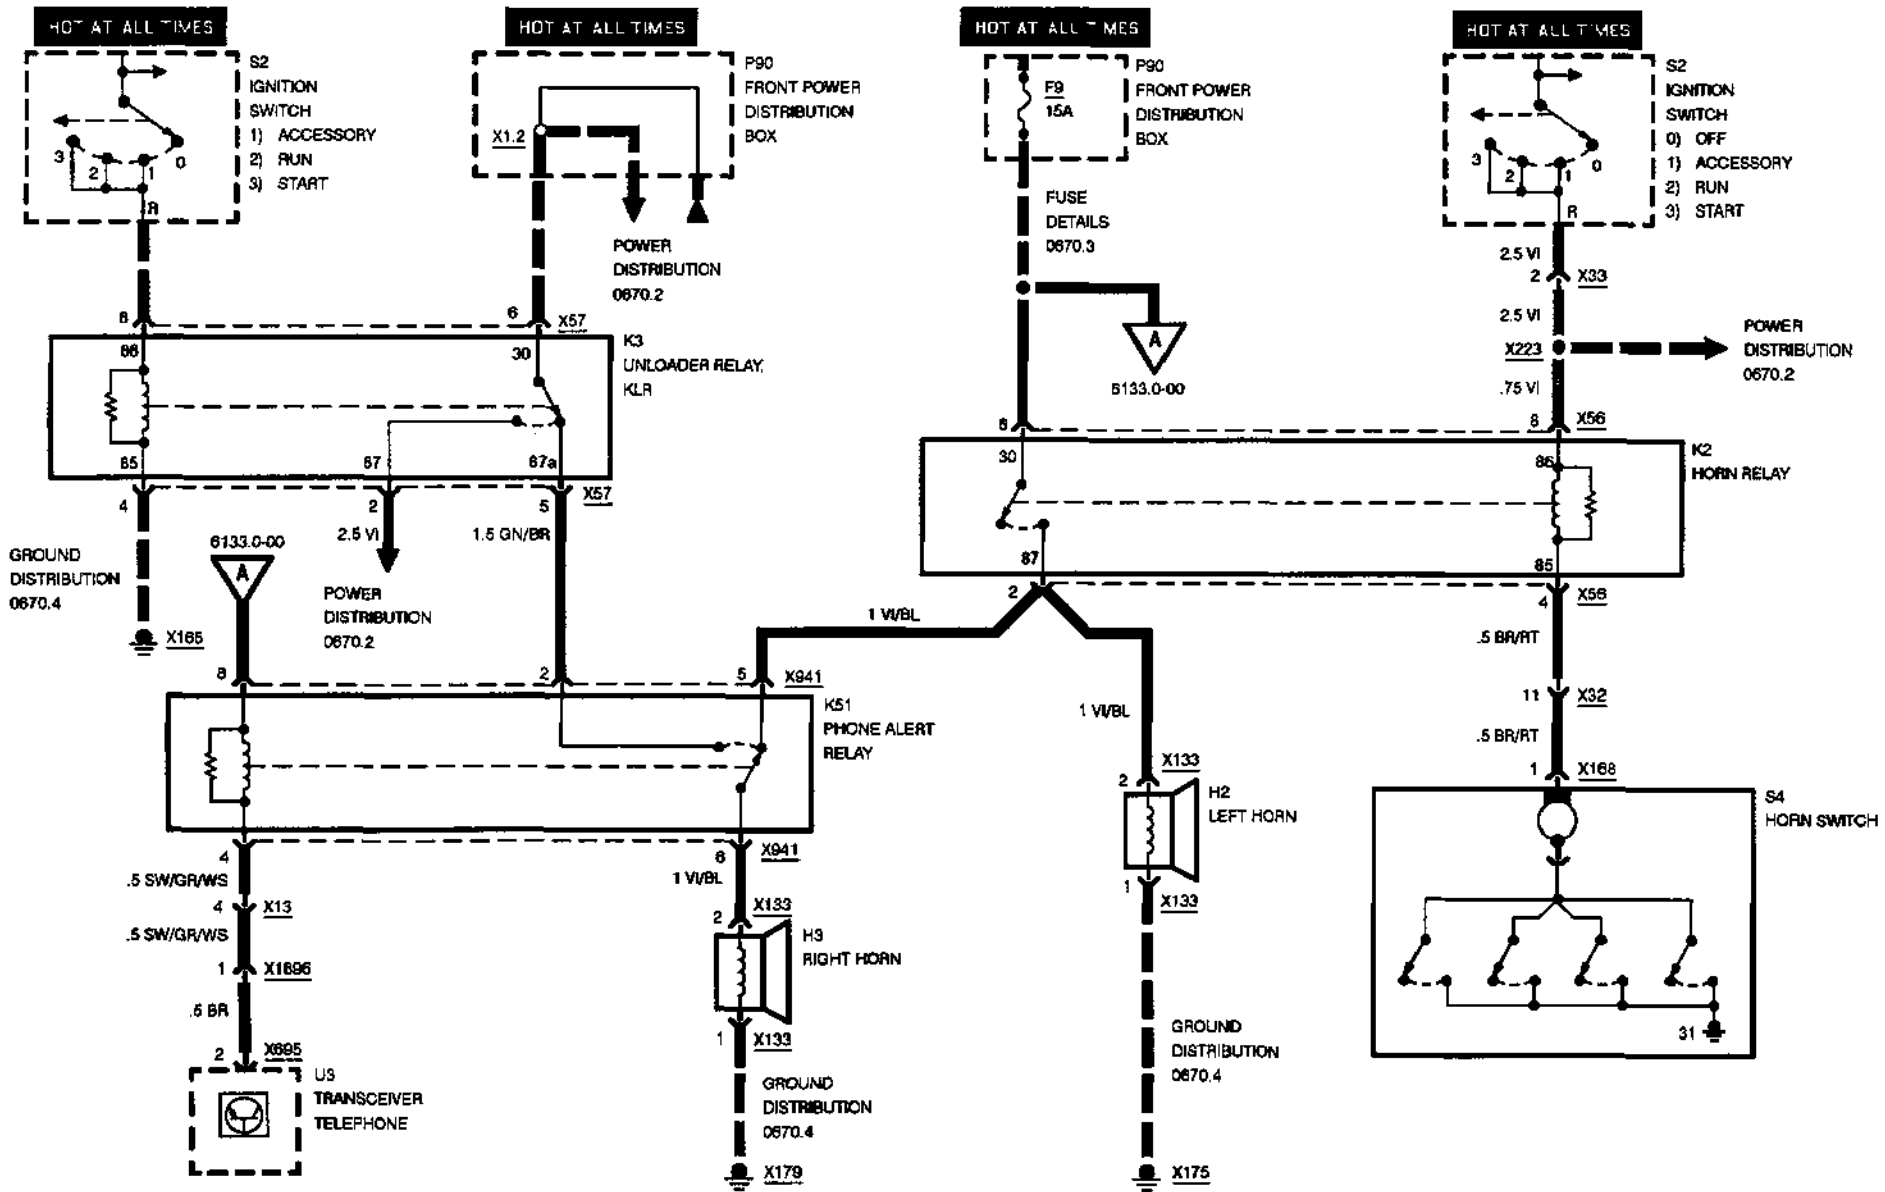

ZKE WINDSHIELD WIPER CONTROL (SWS)


INPUT DETAILS

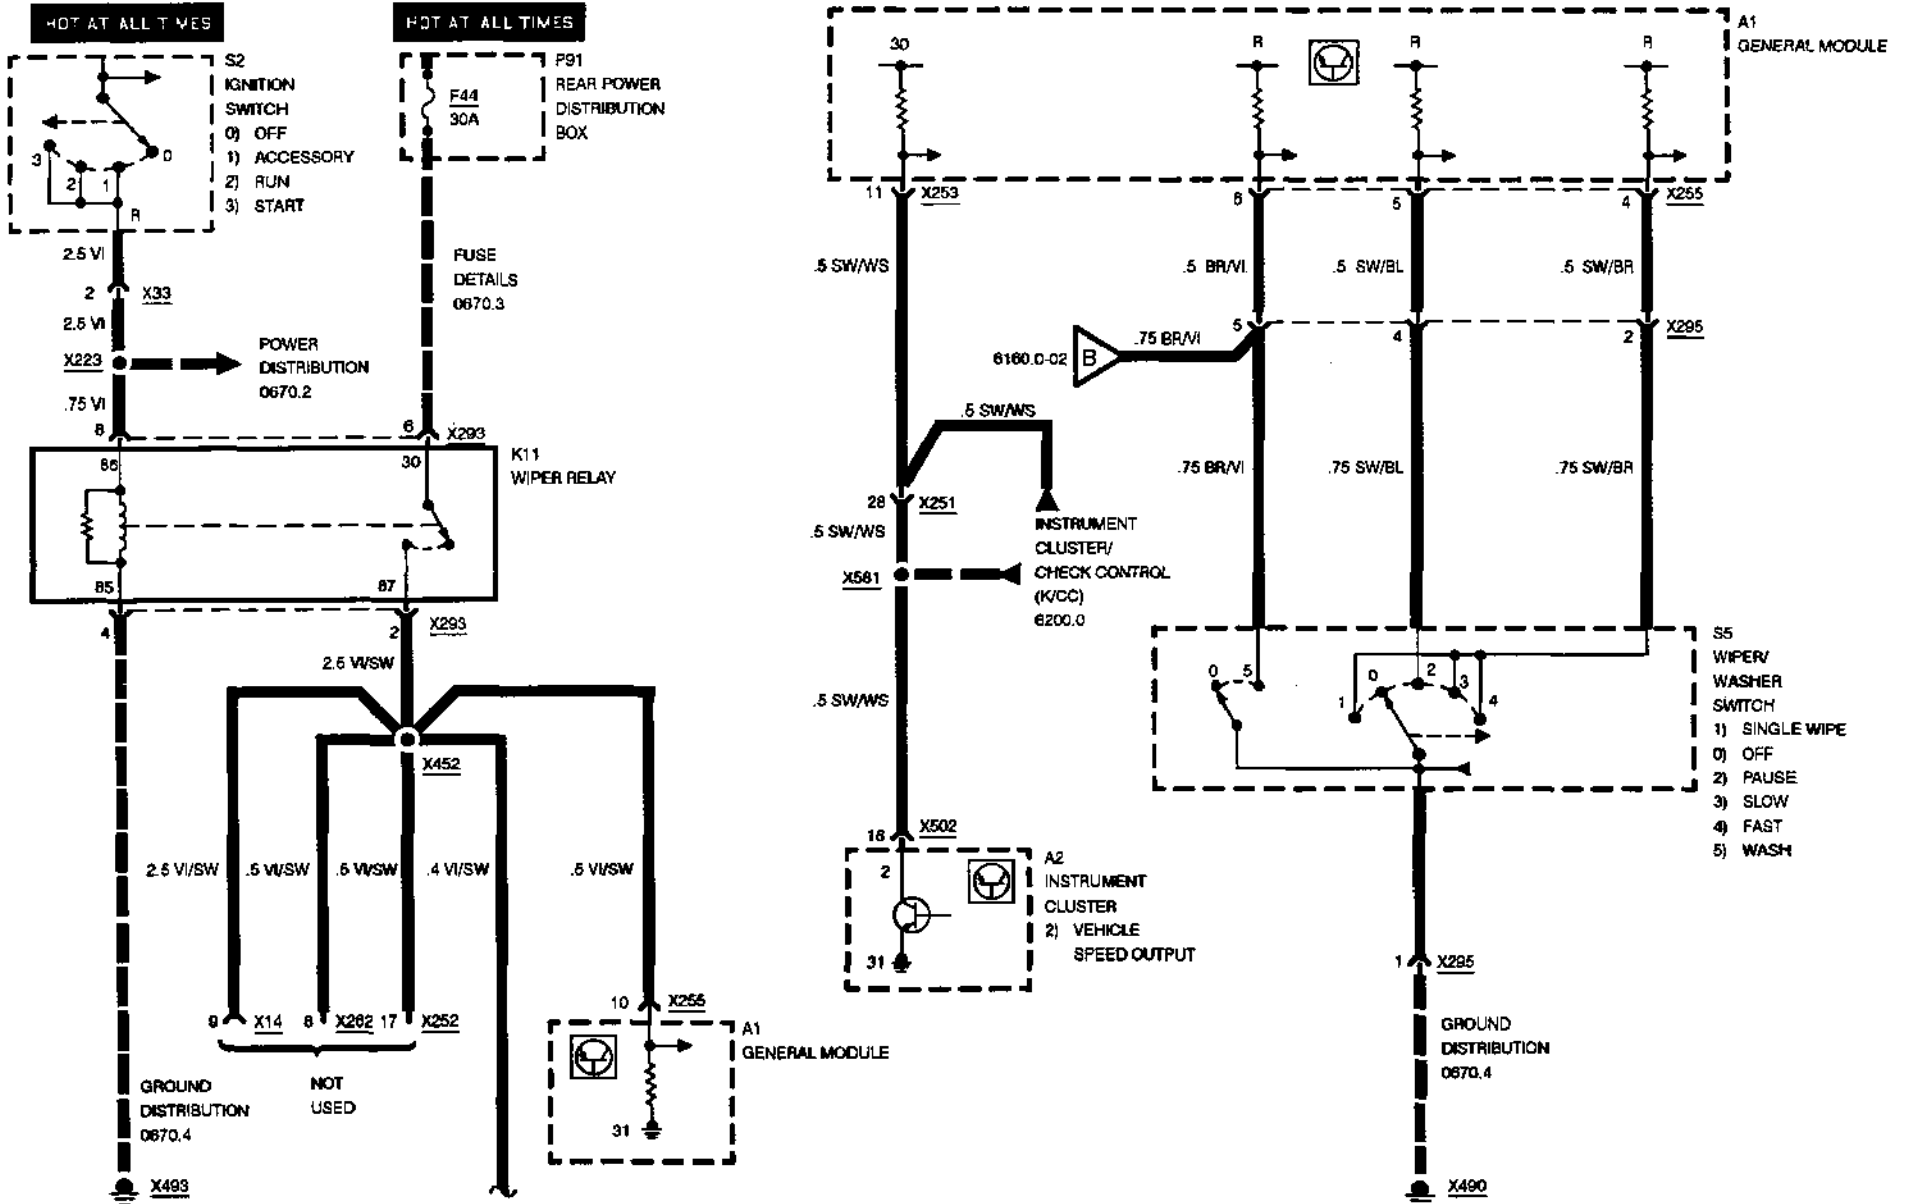

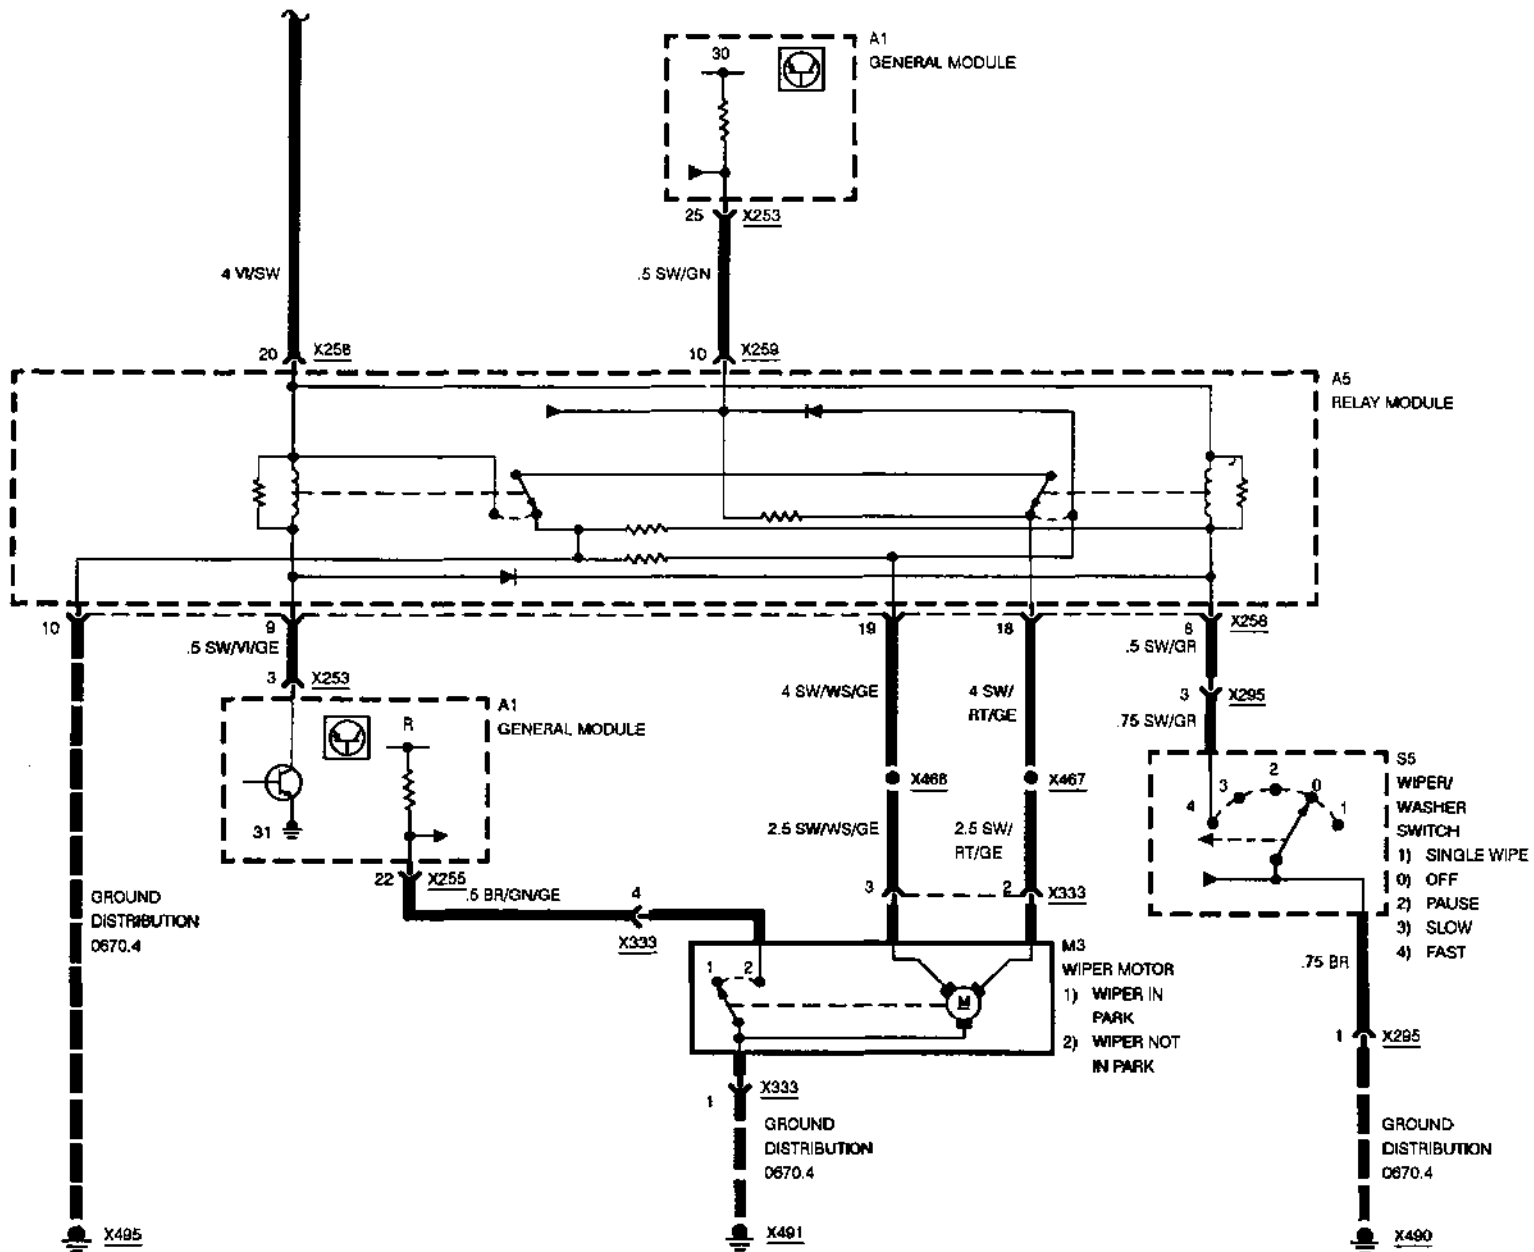




ZKE WINDSHIELD WIPER CONTROL (SWS) OUTPUT DETAILS

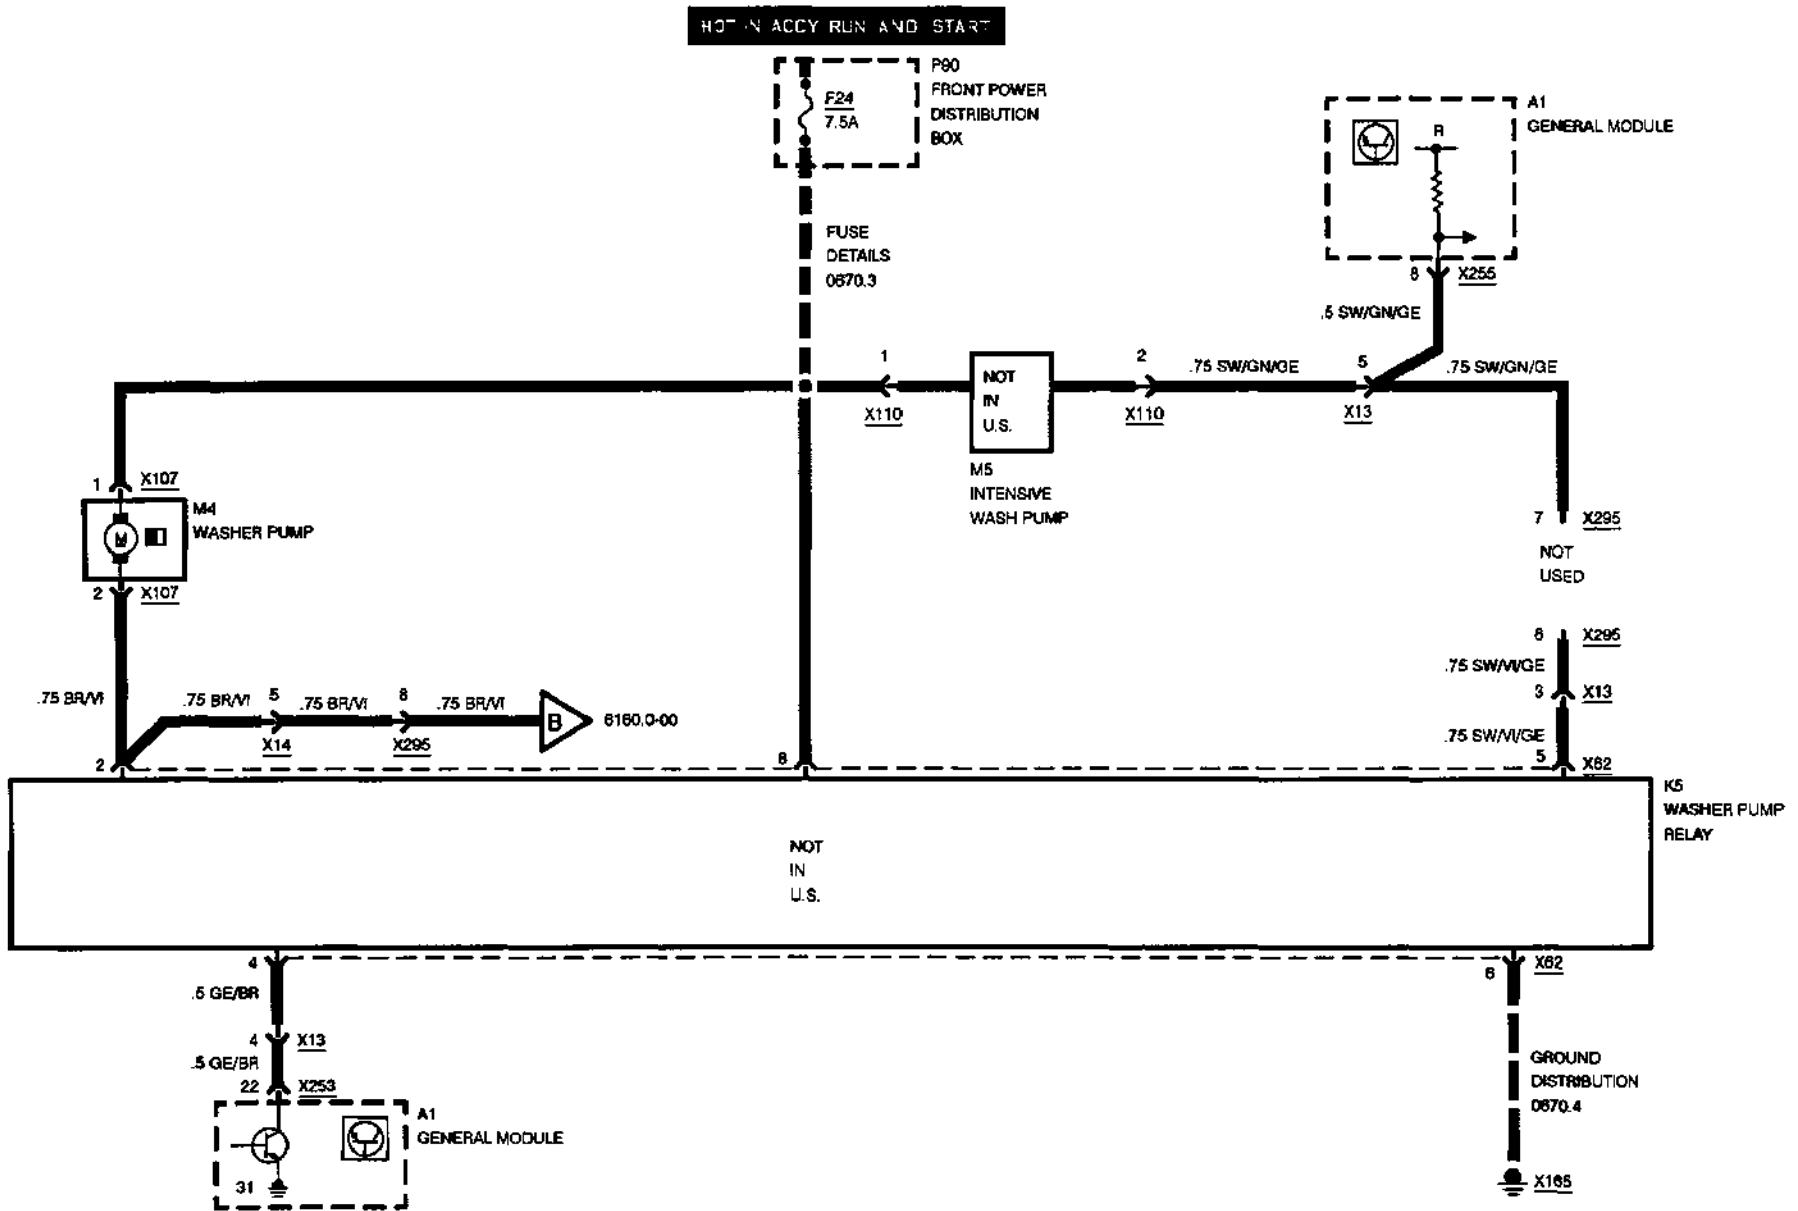




WINDSHIELD WASHER JET HEATERS

535i, M5

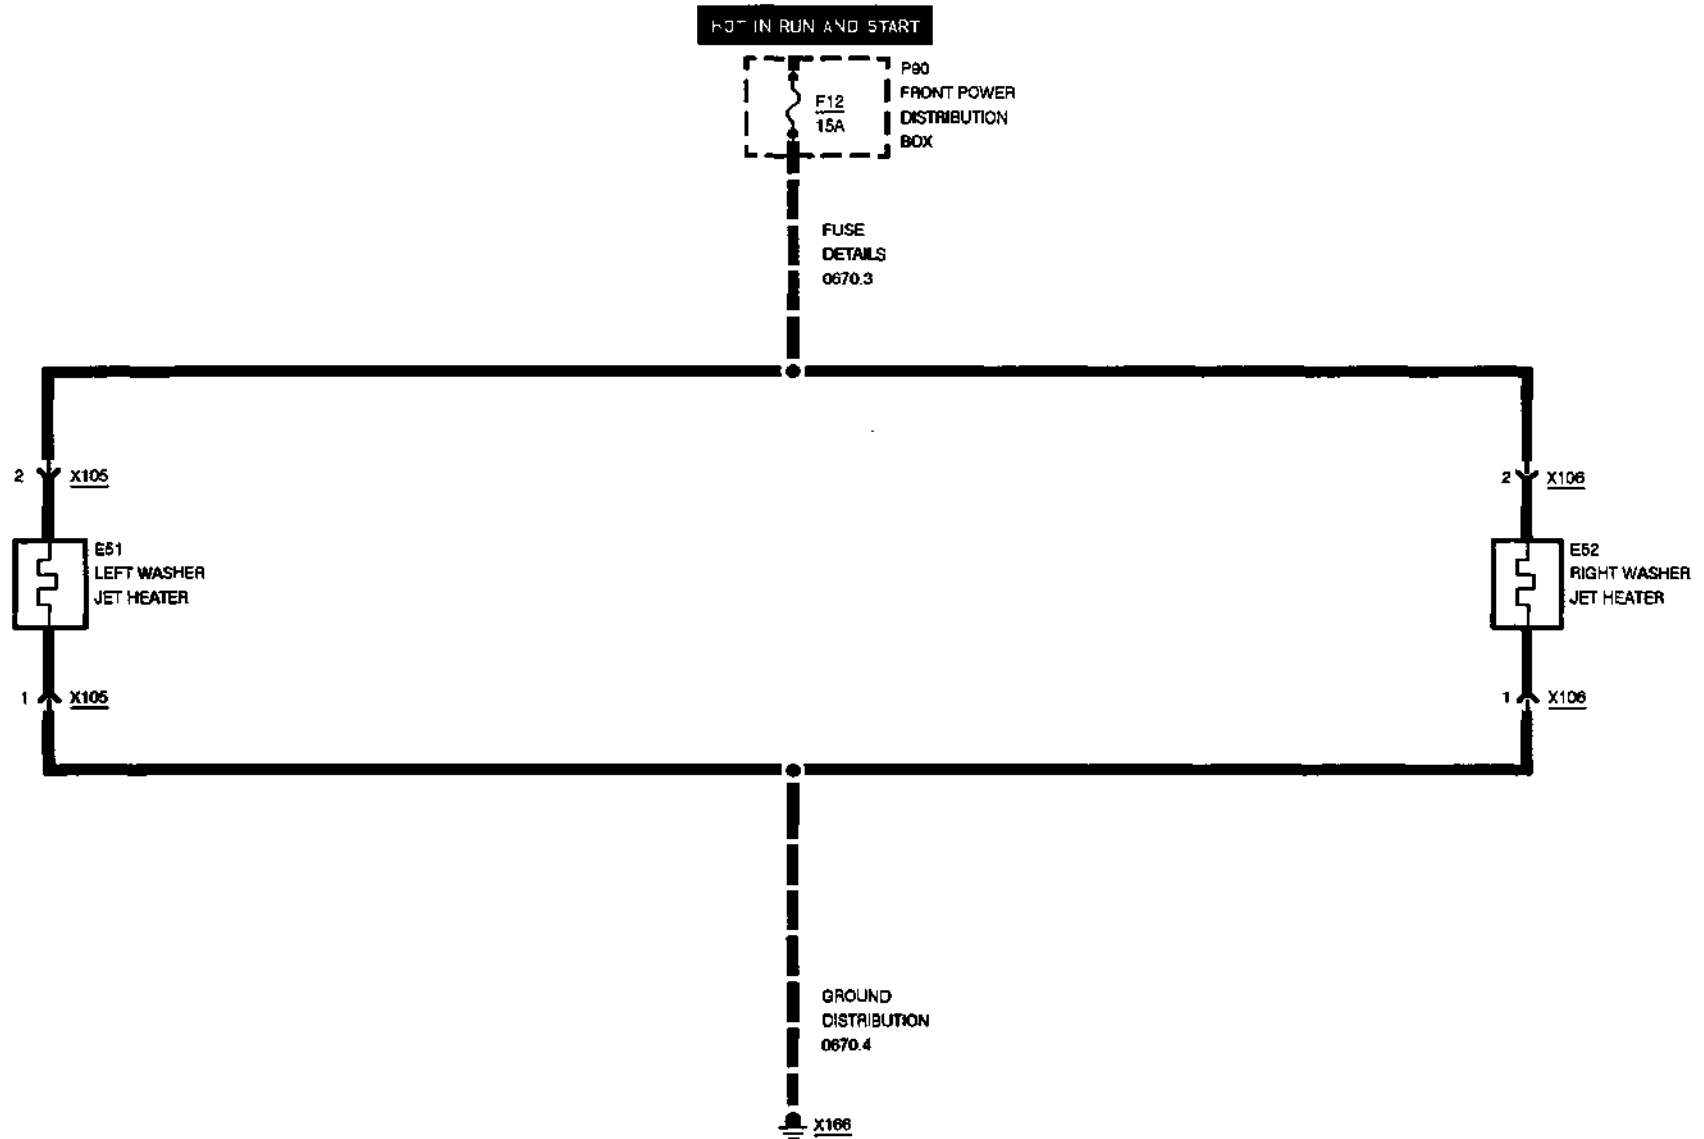



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)

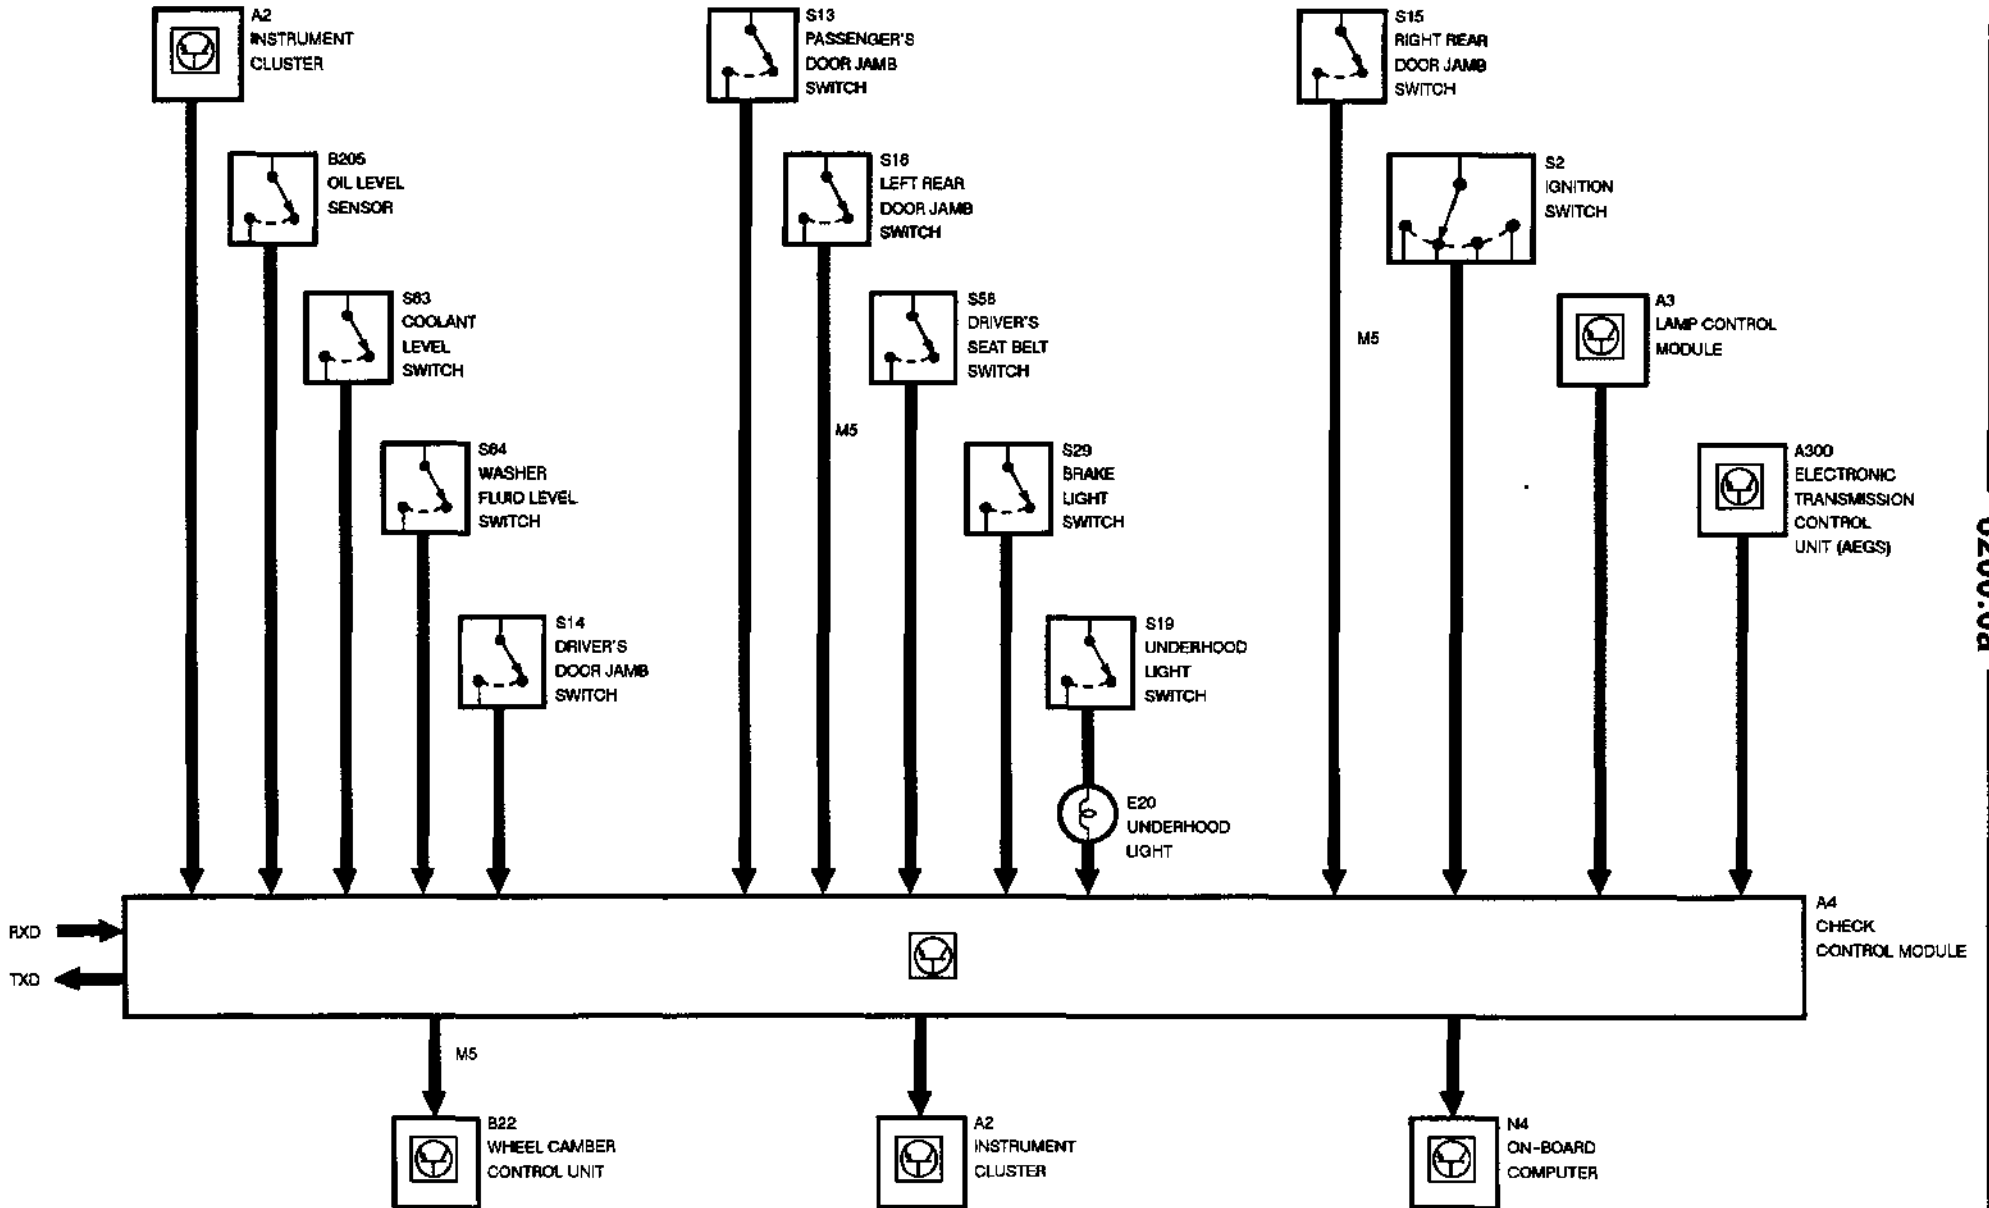


6200.0a



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)

INPUT DETAILS

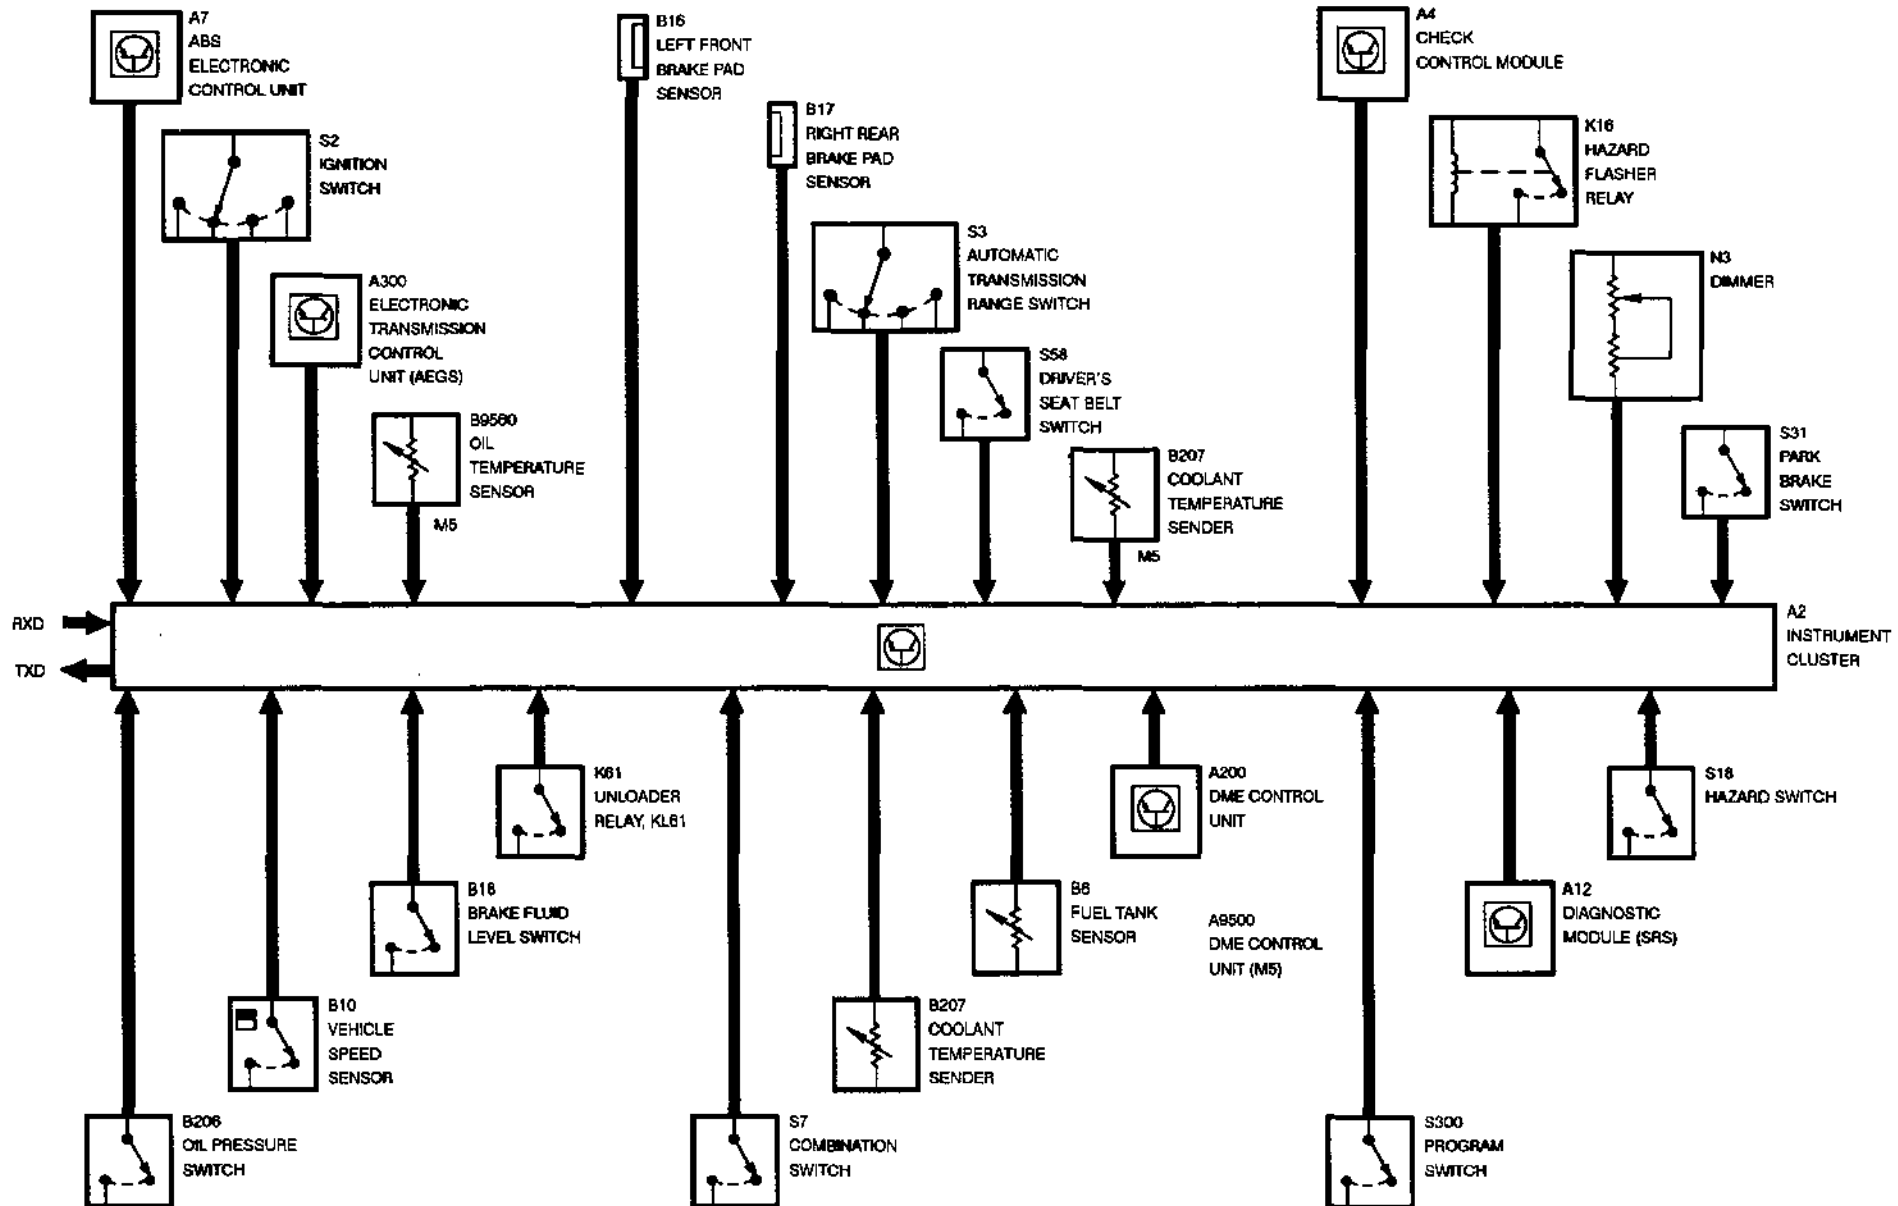


6200.0b



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)


OUTPUT DETAILS

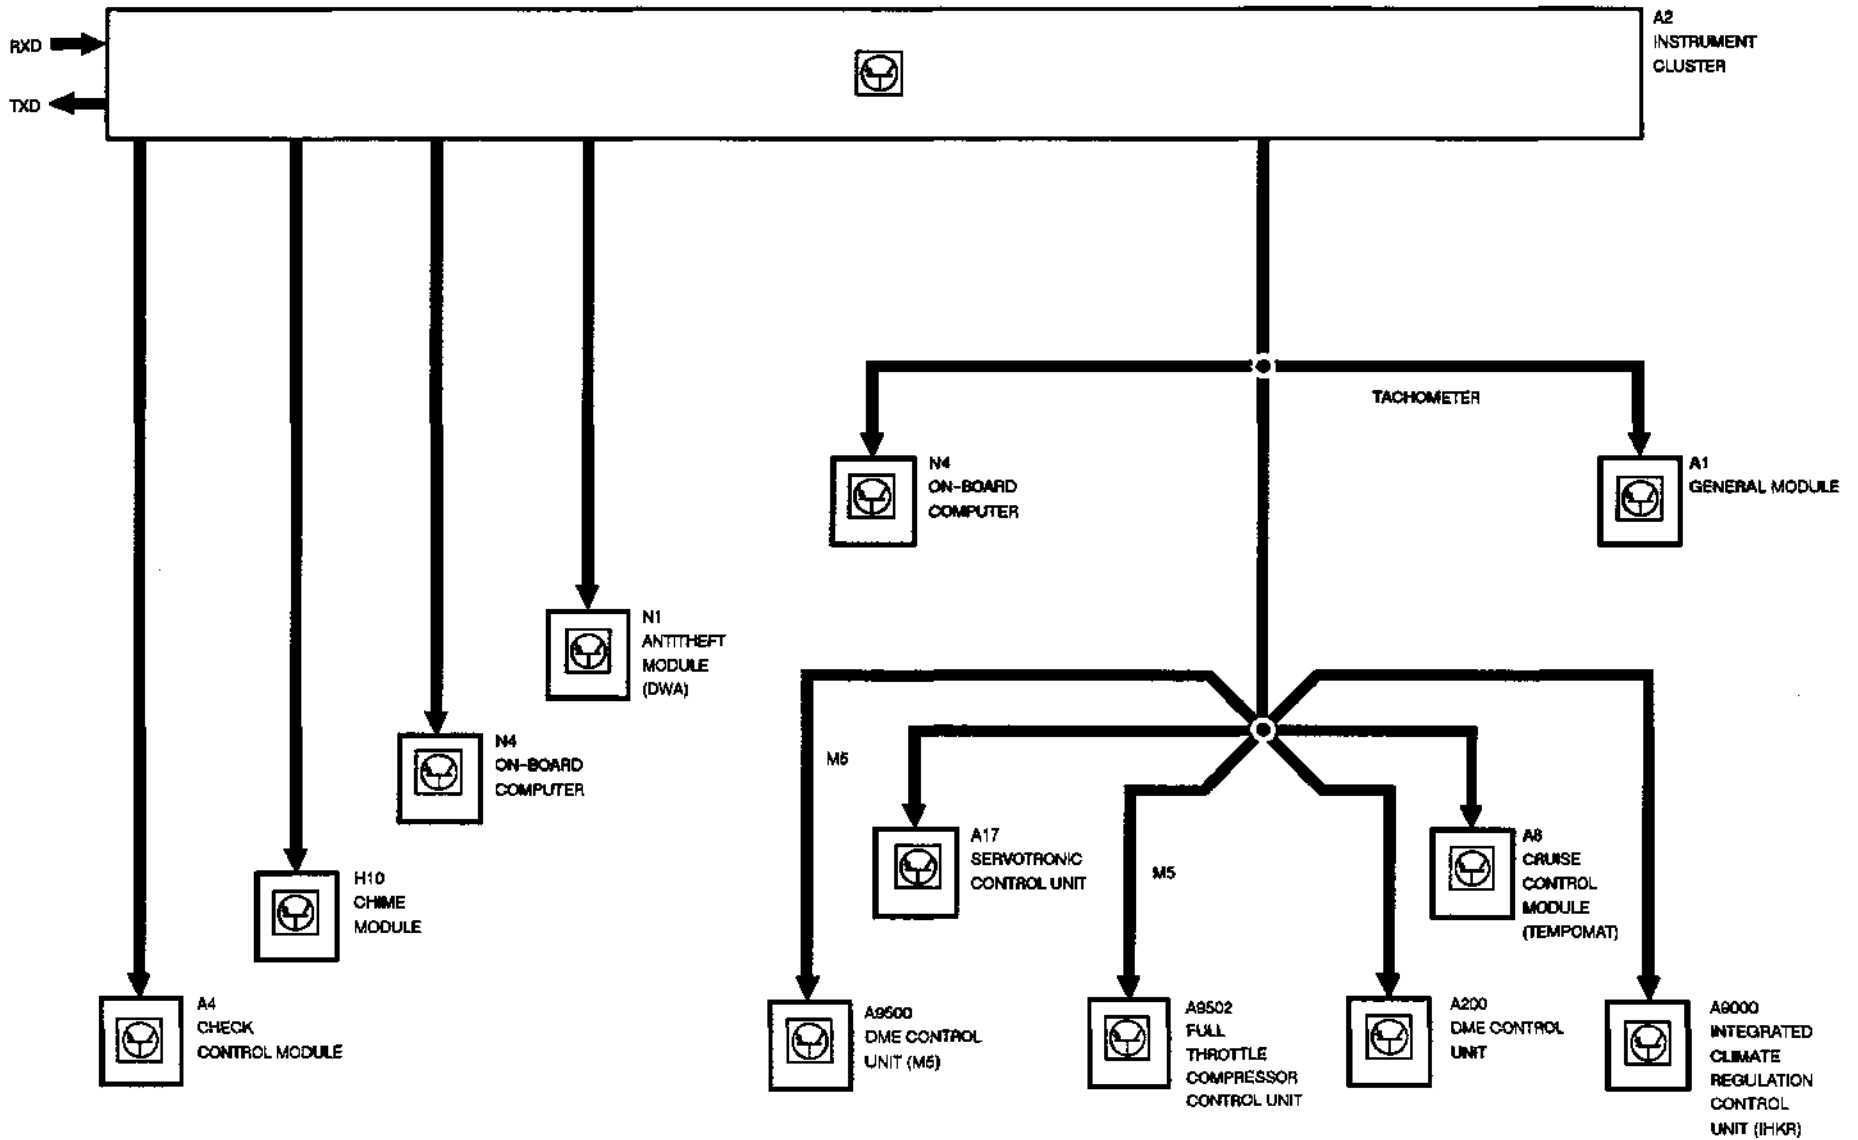

6200.0c




INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC) INDICATORS

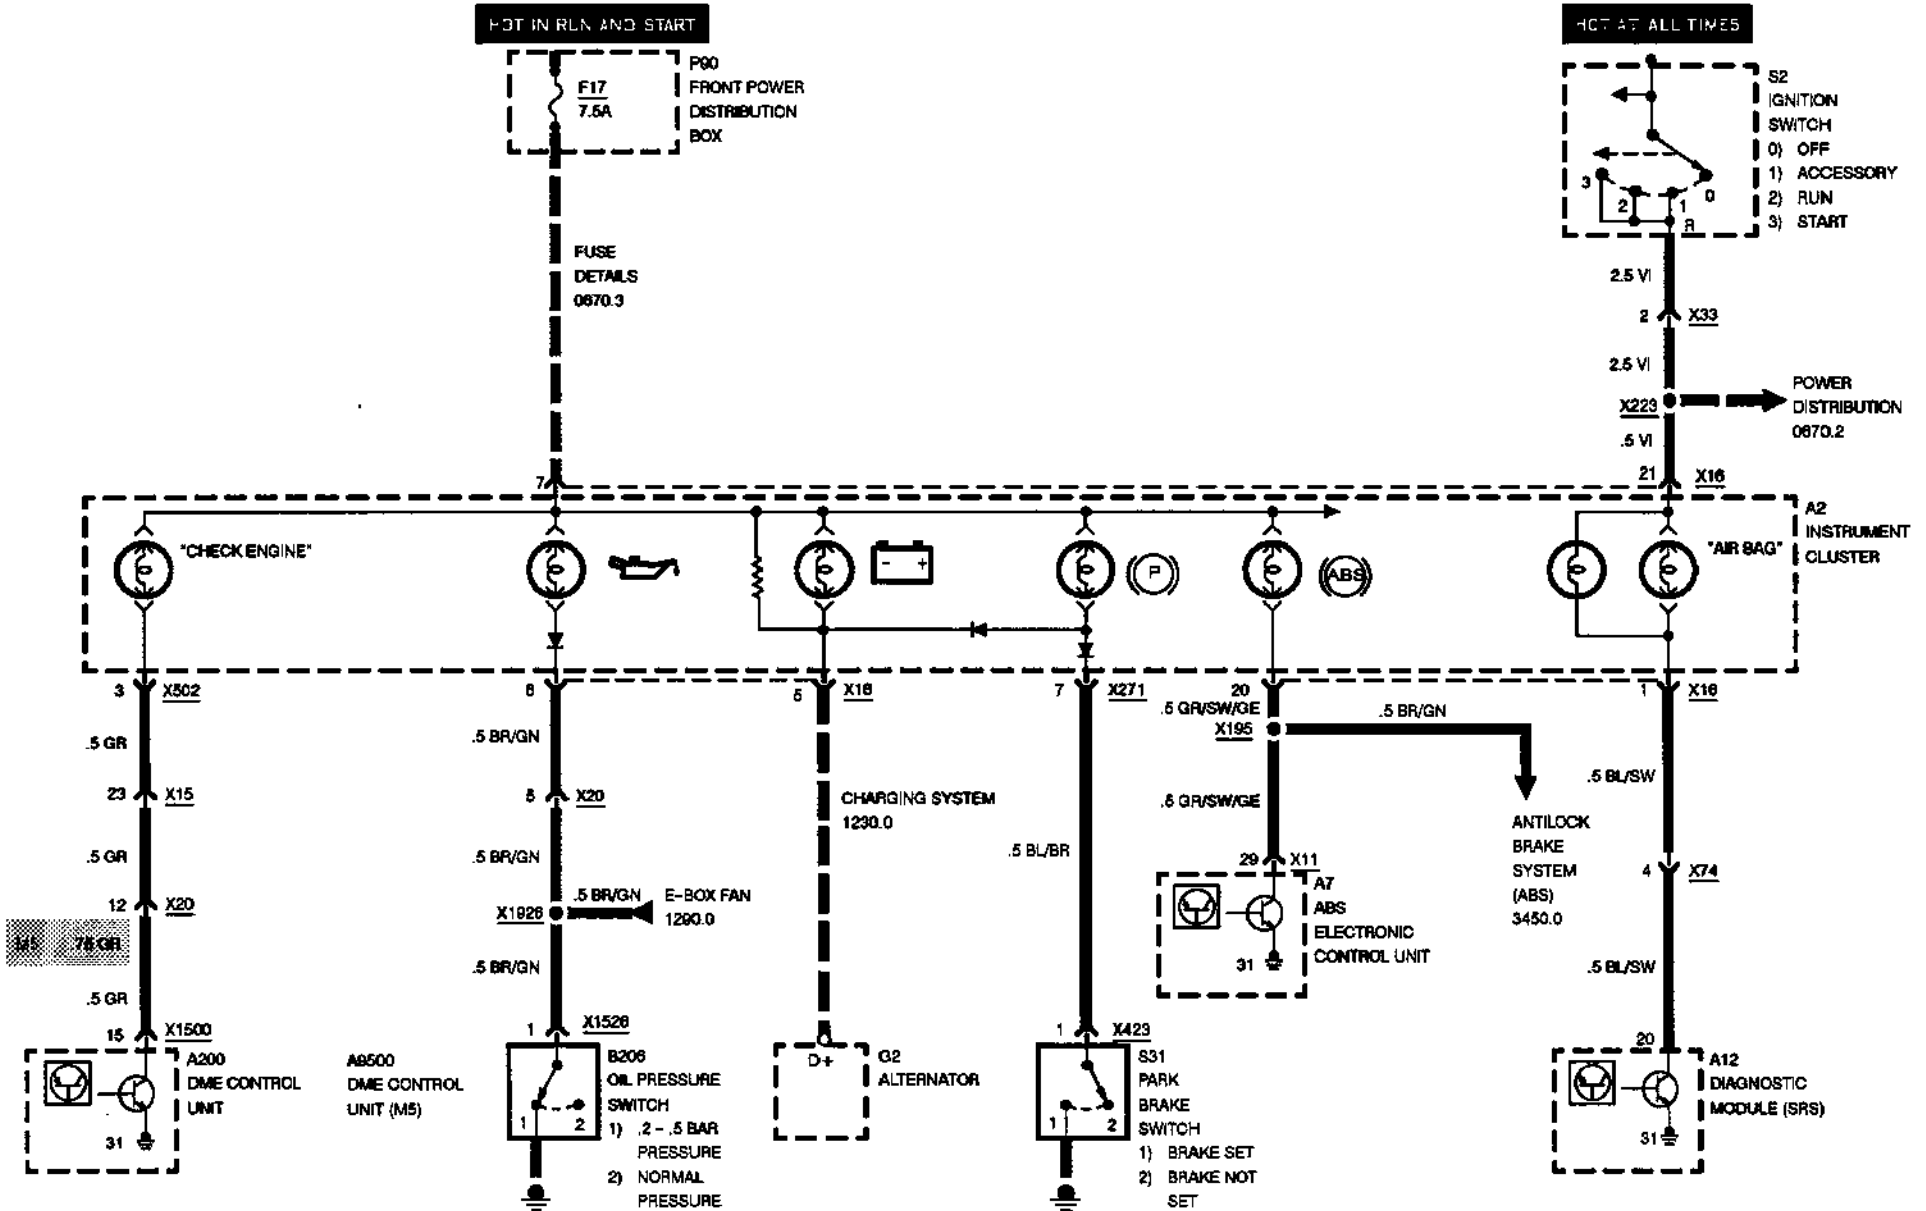




INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC) INDICATORS

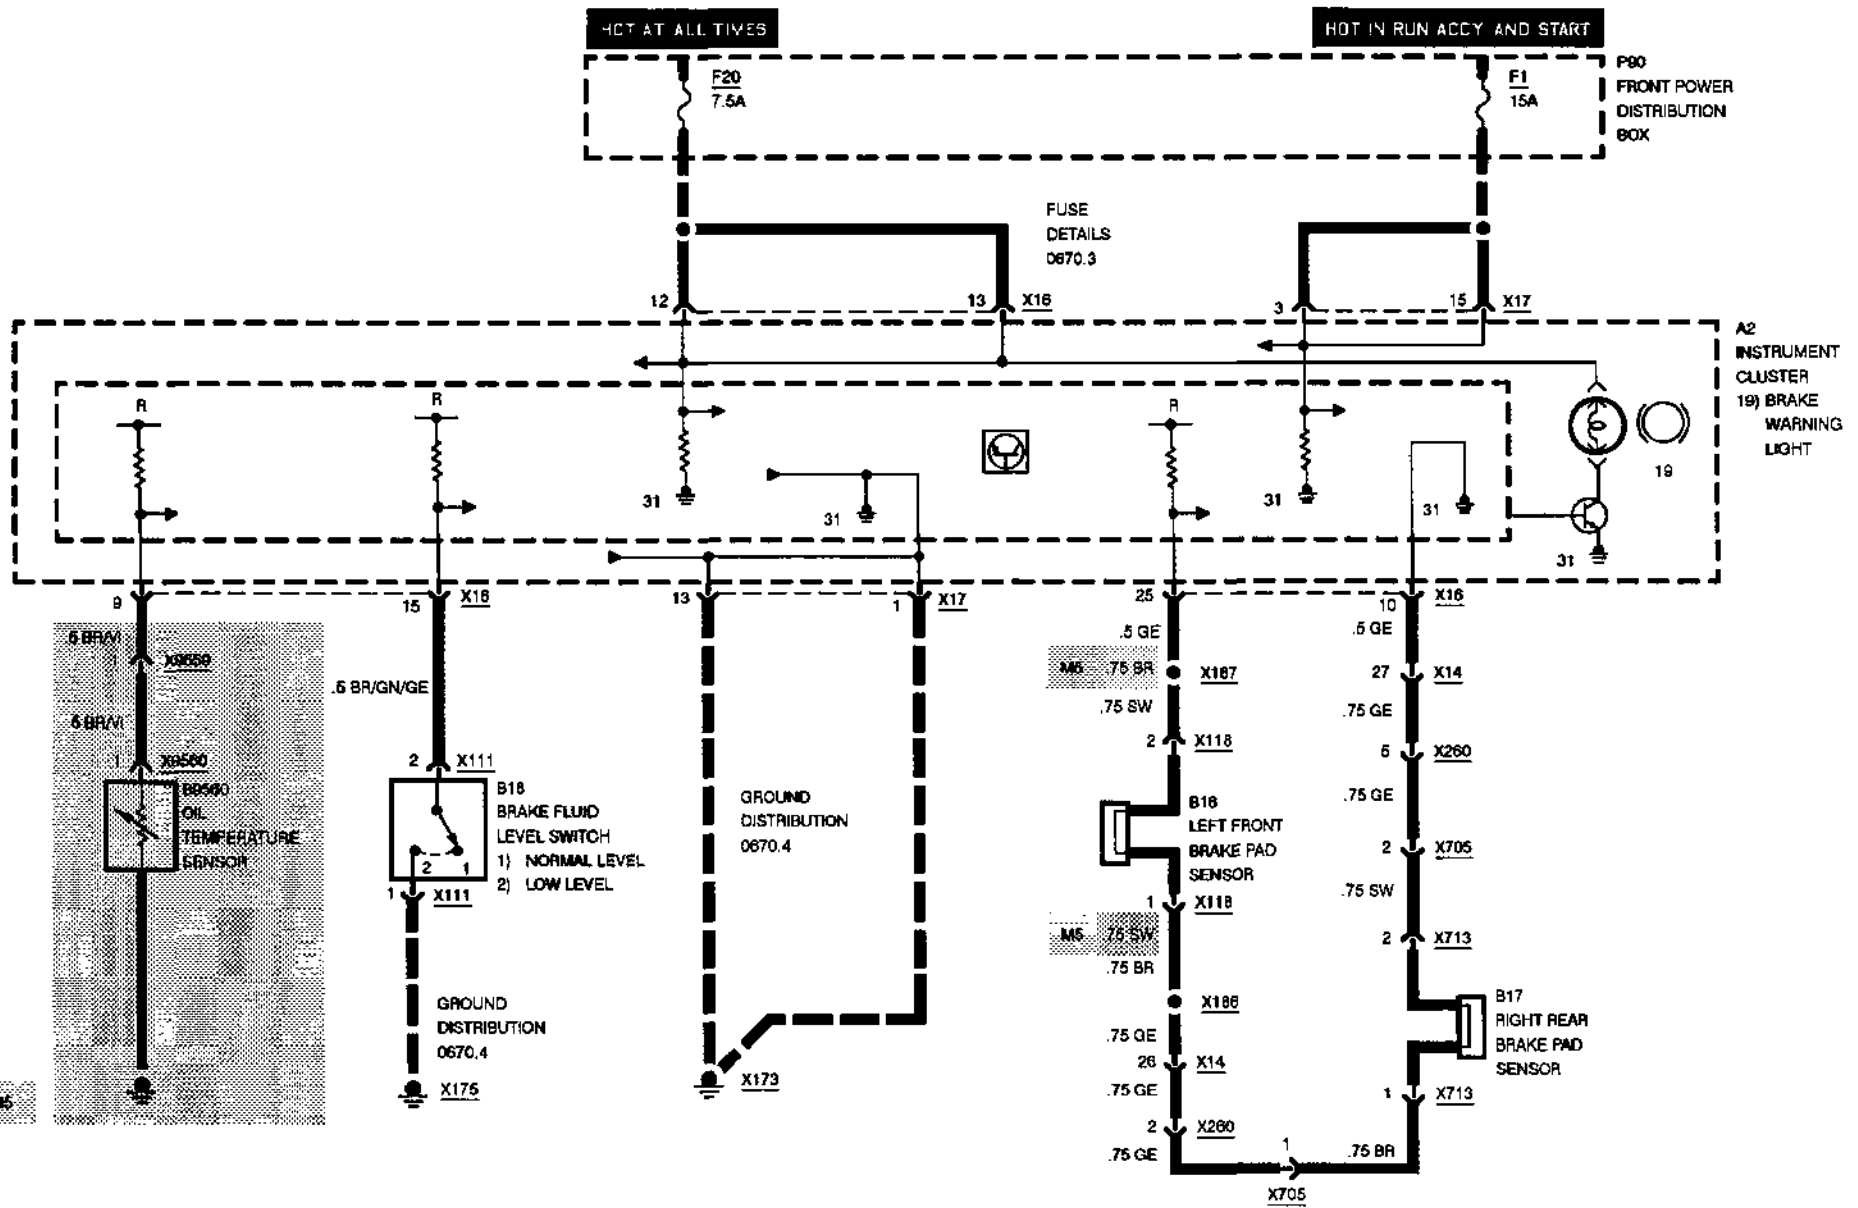




INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC) INDICATORS

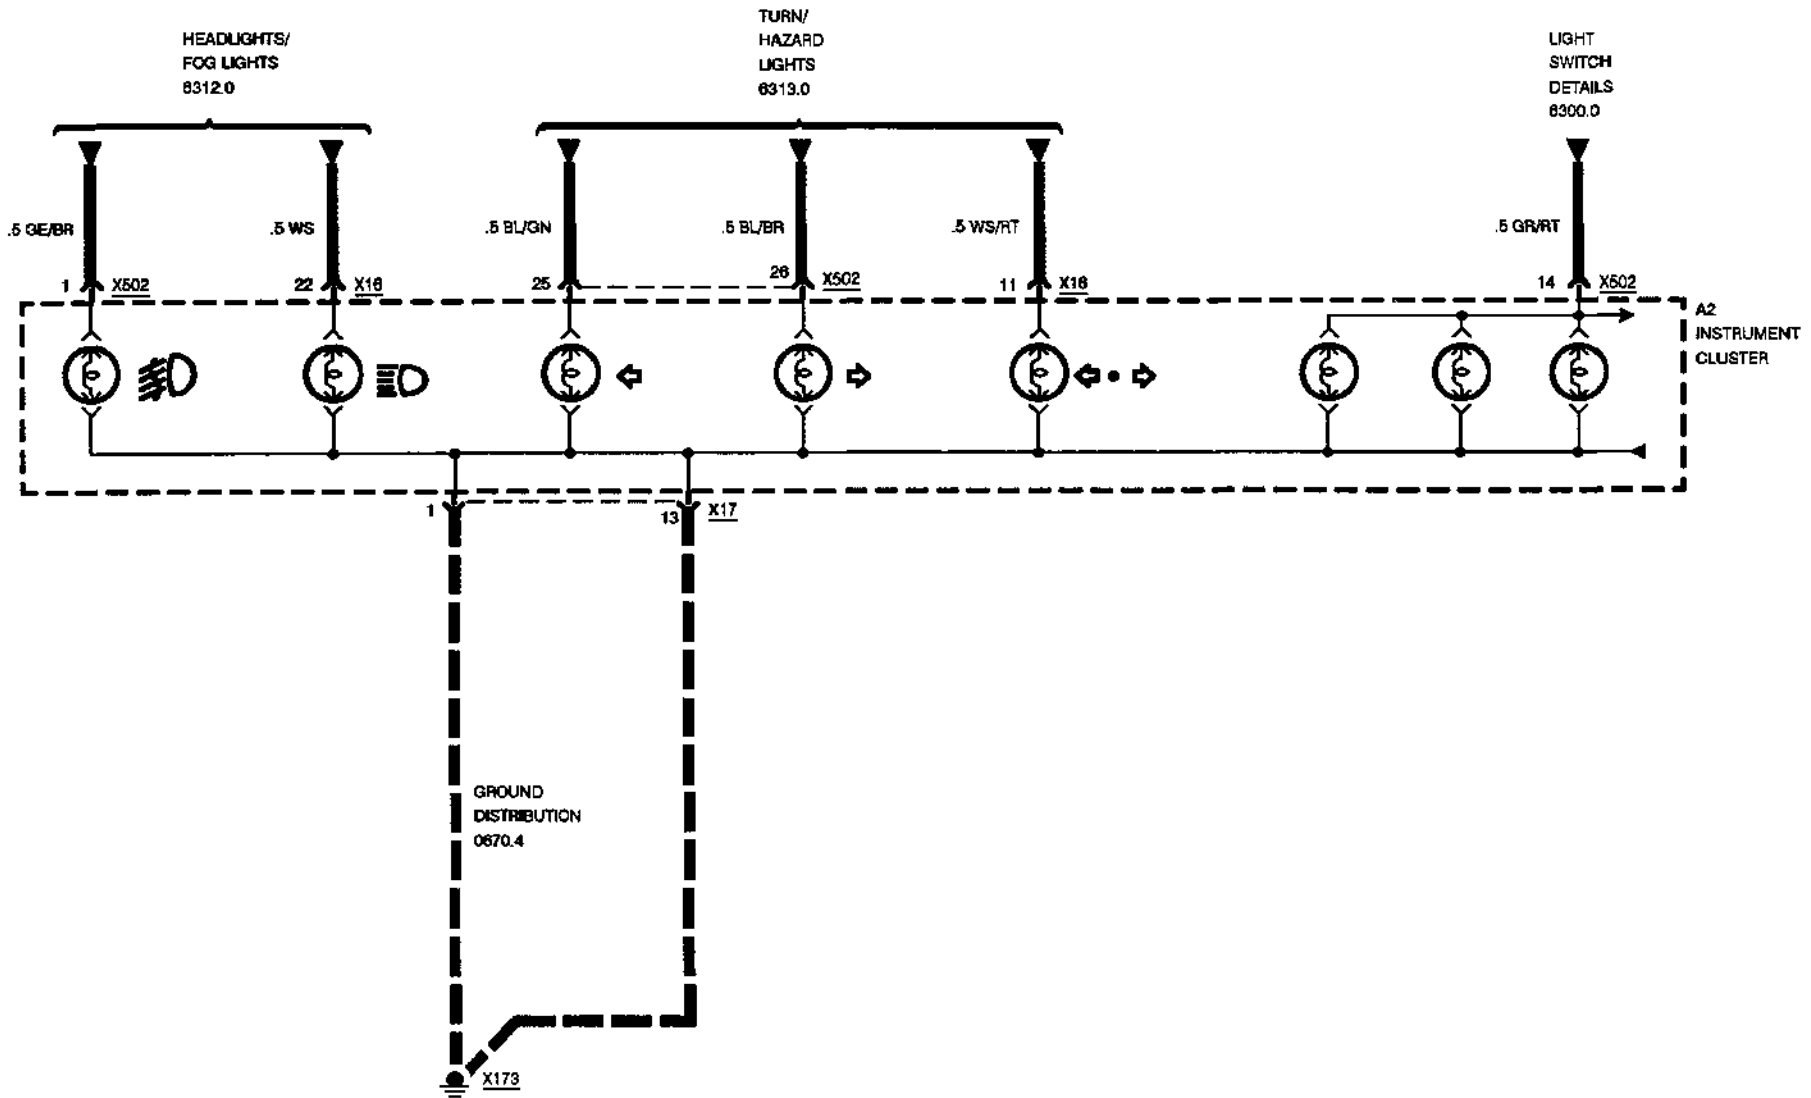



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC) GAUGES

525i, 535i

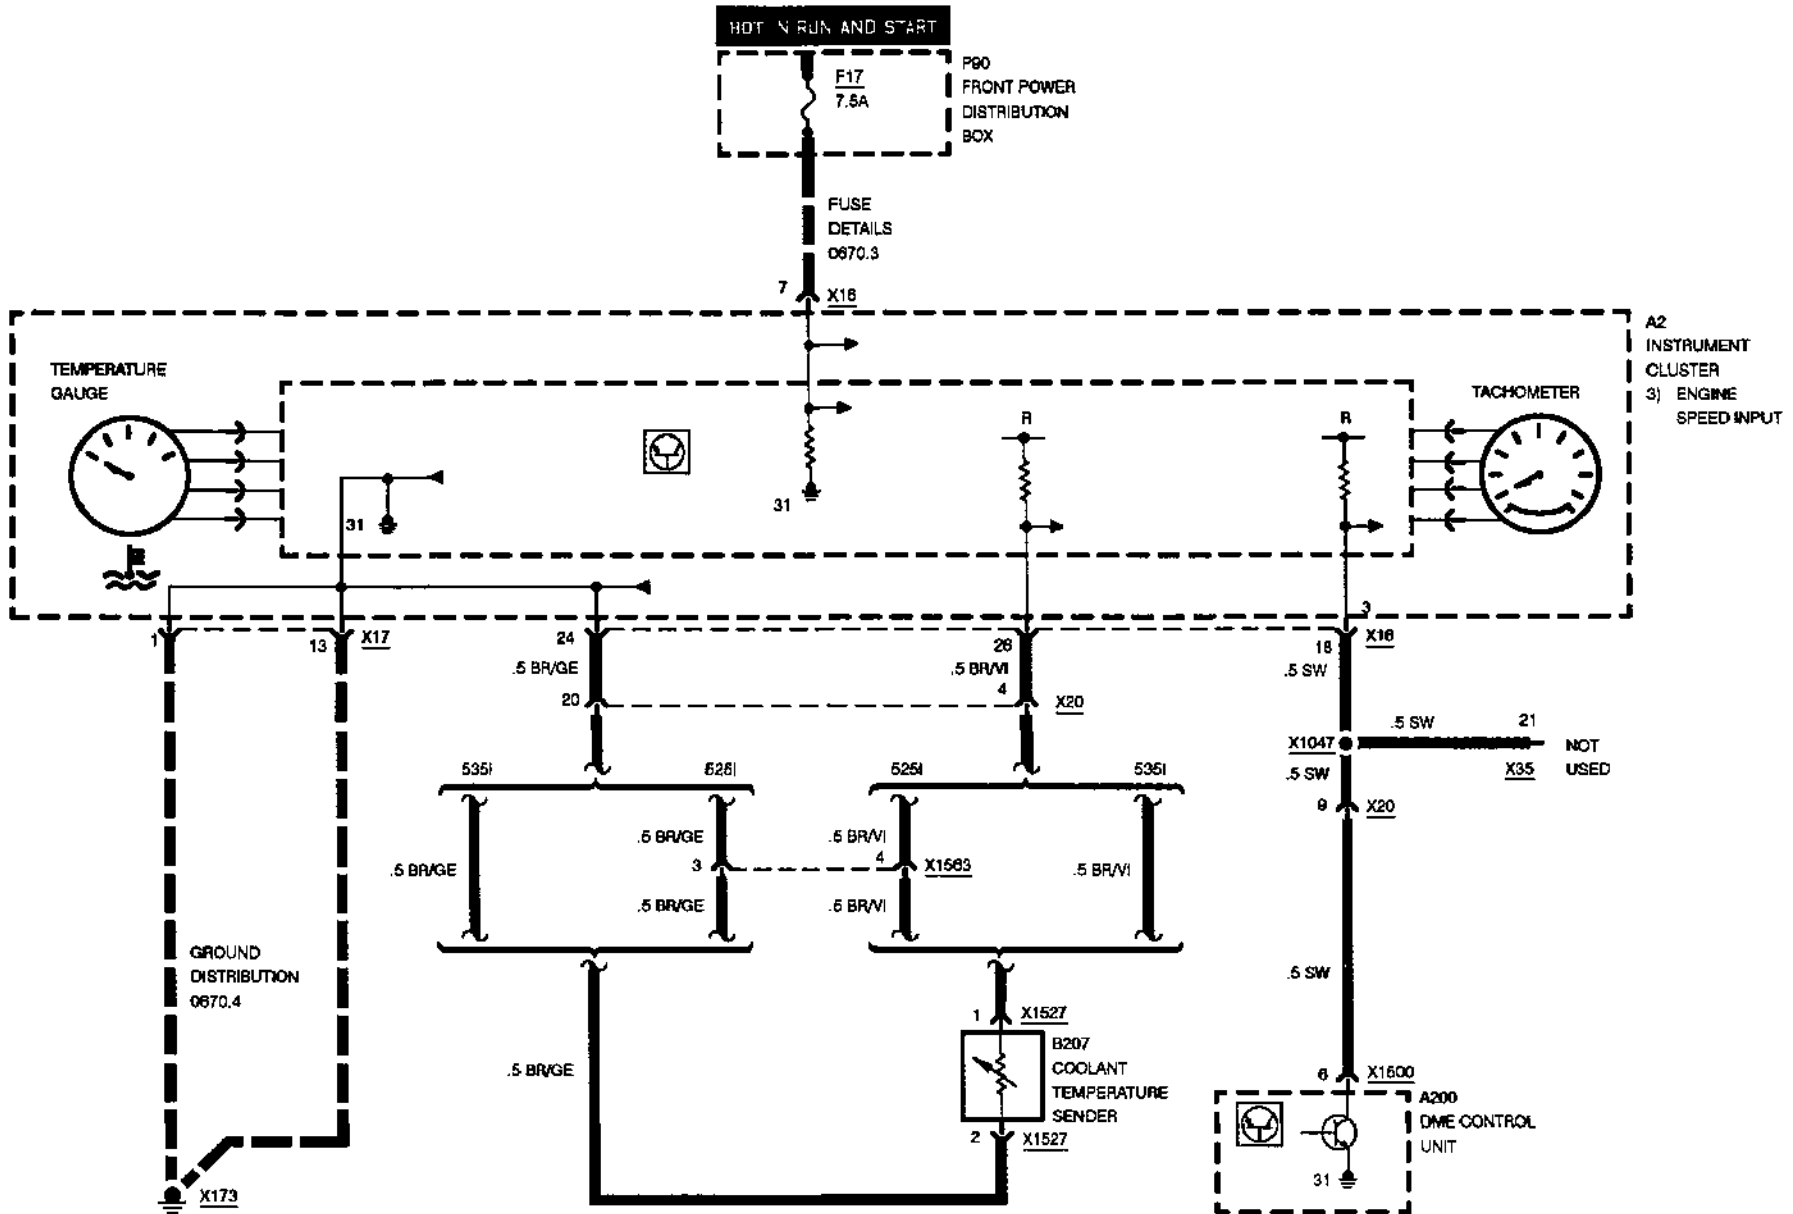

07/90

6200.0-03


1990



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)

GAUGES

M5

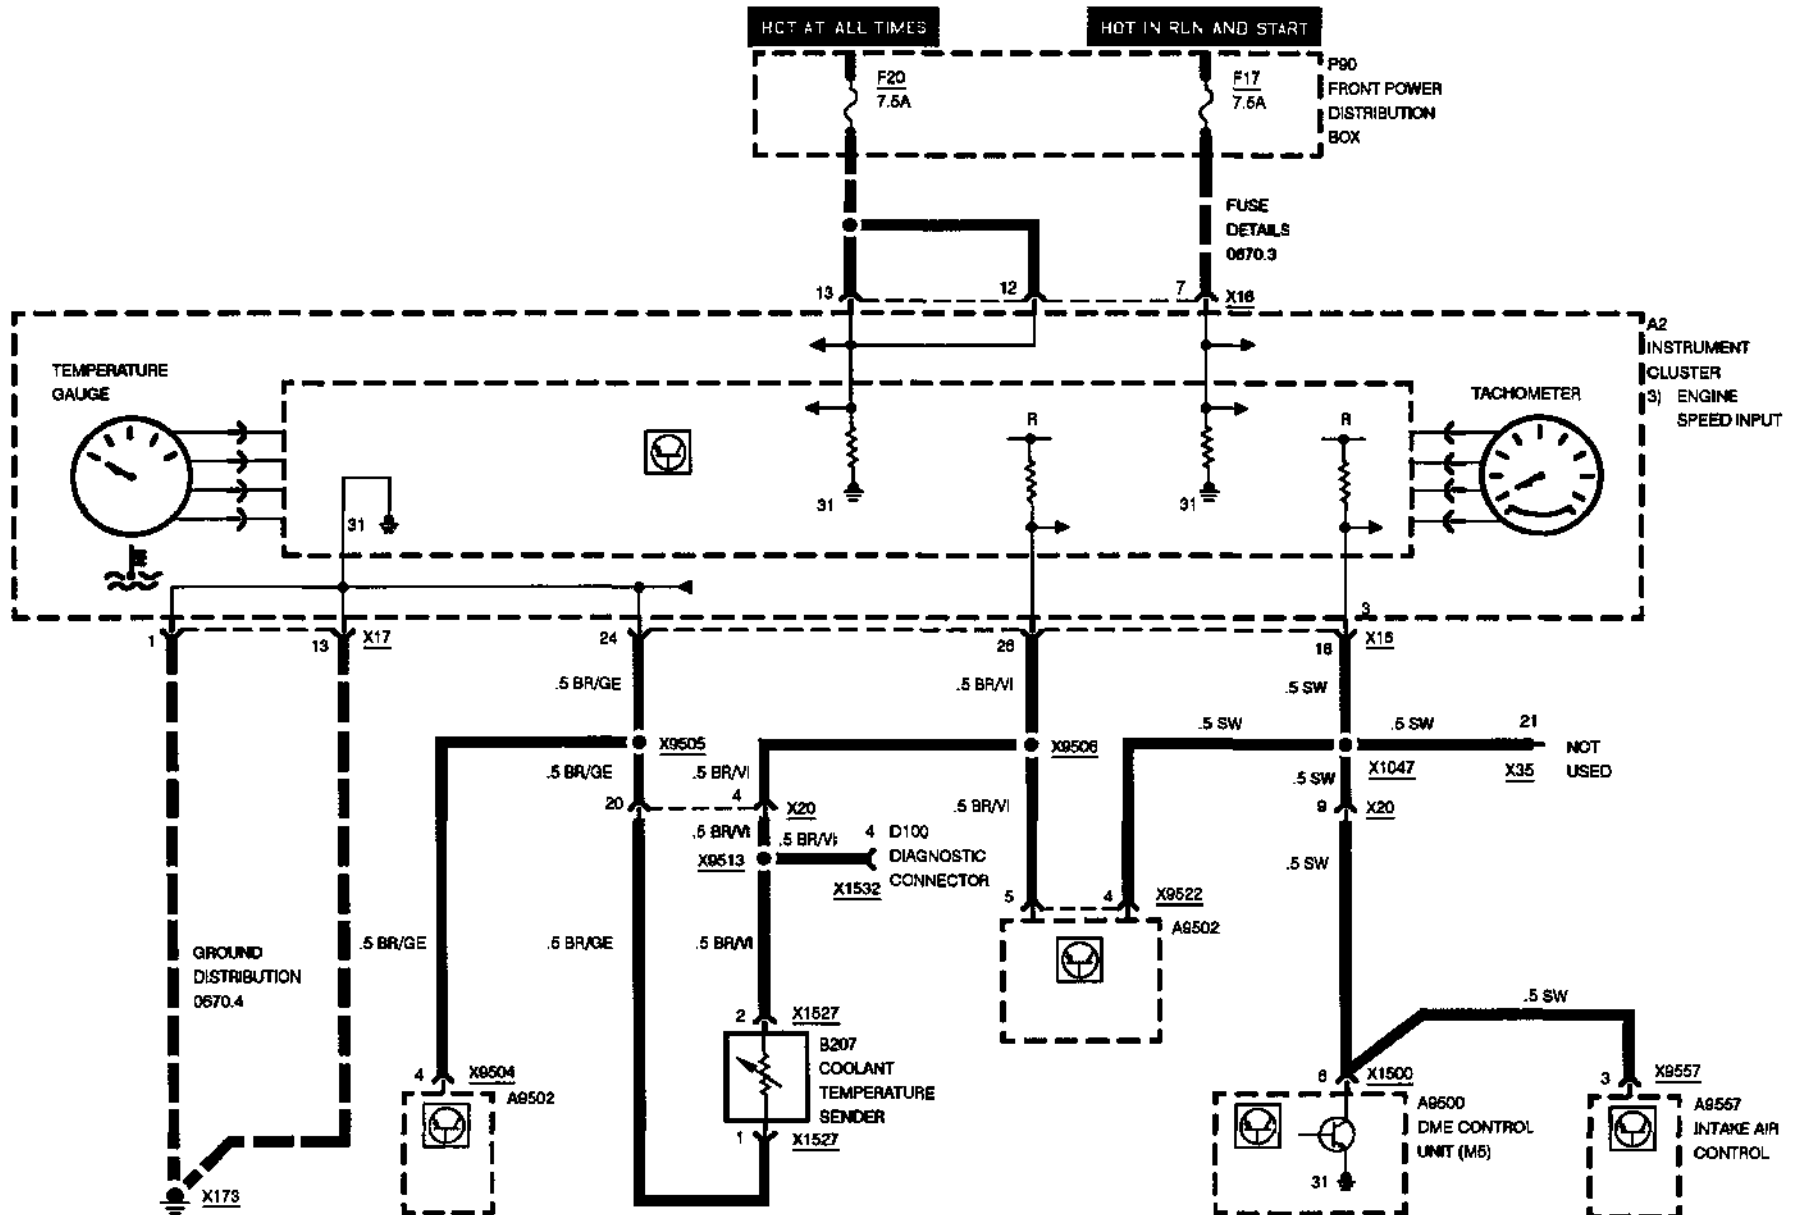


07/90

6200.0-04

1990




INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC) GAUGES

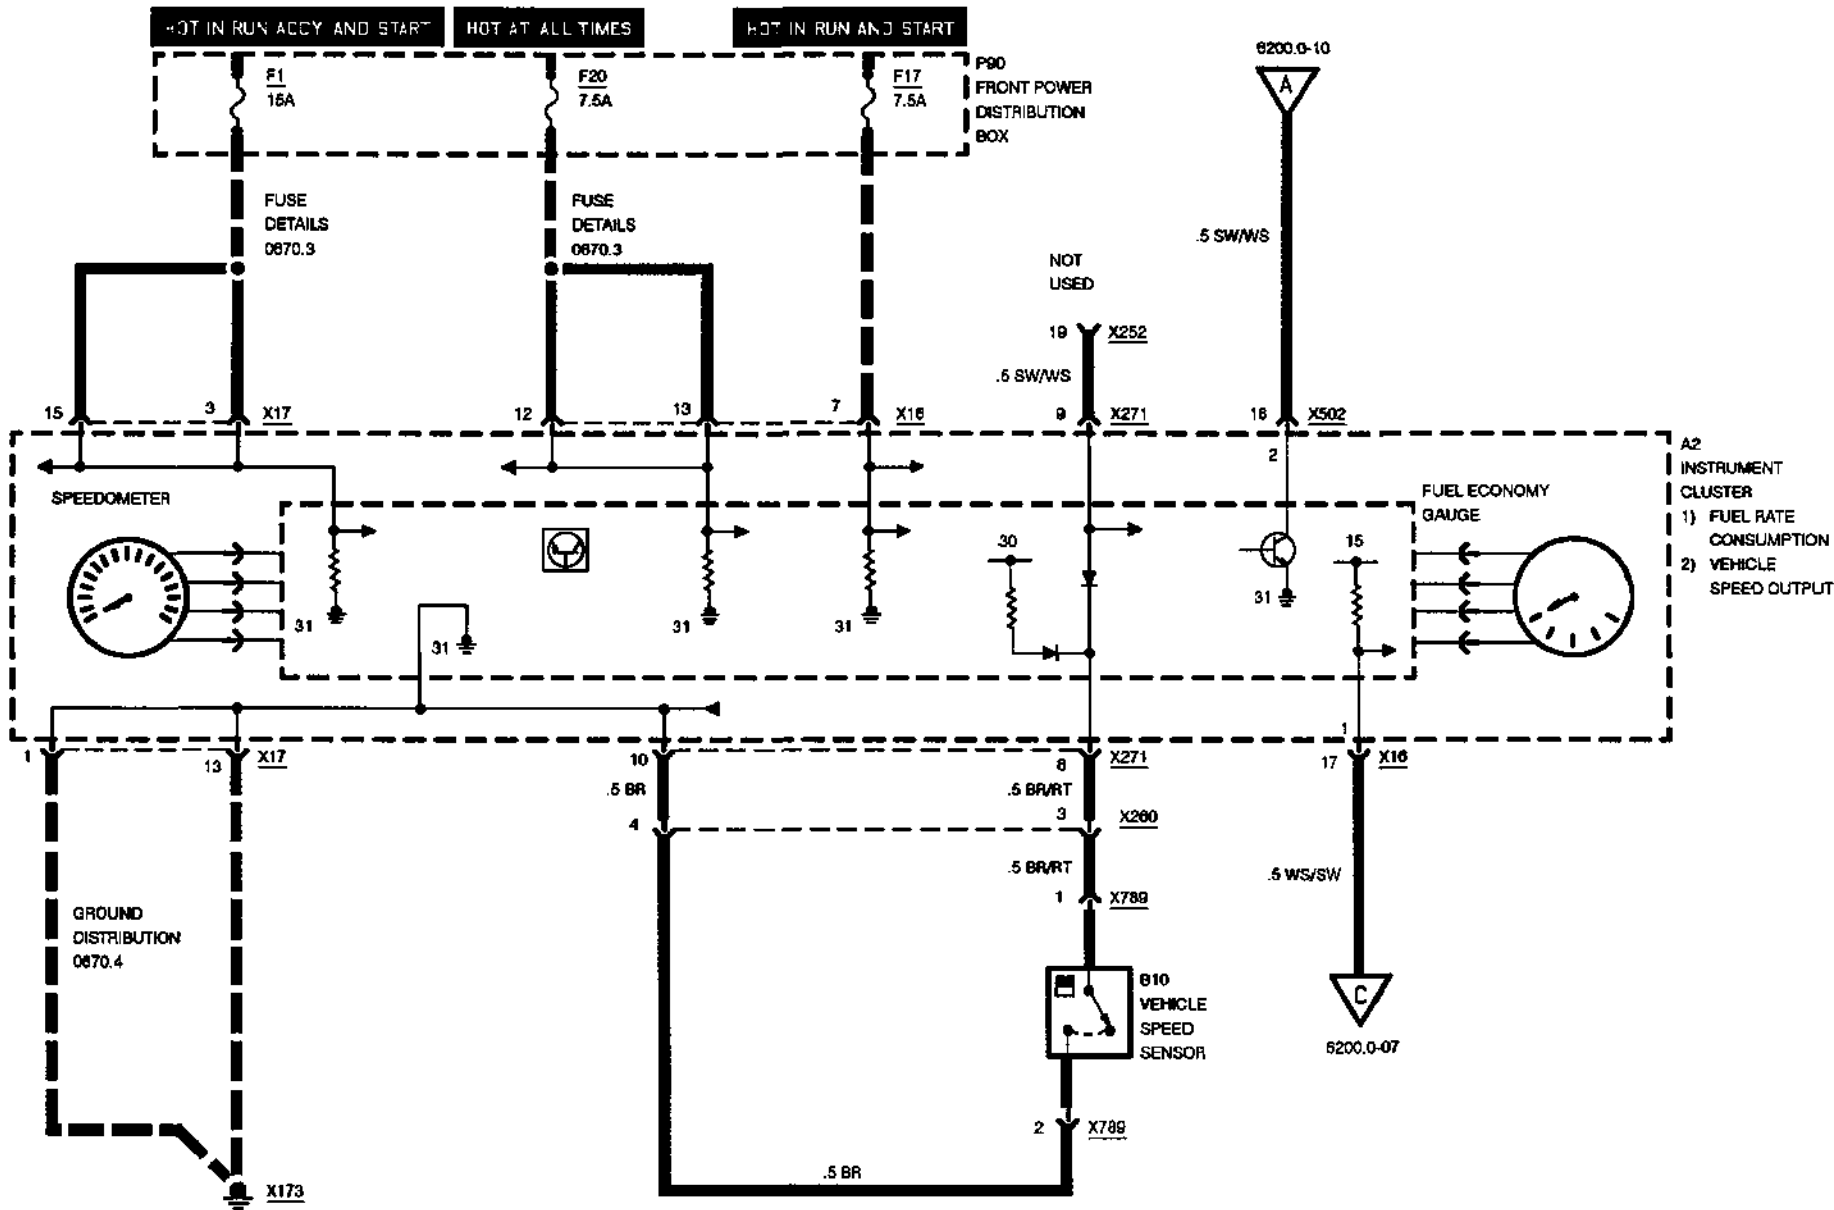




INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)


GAUGES

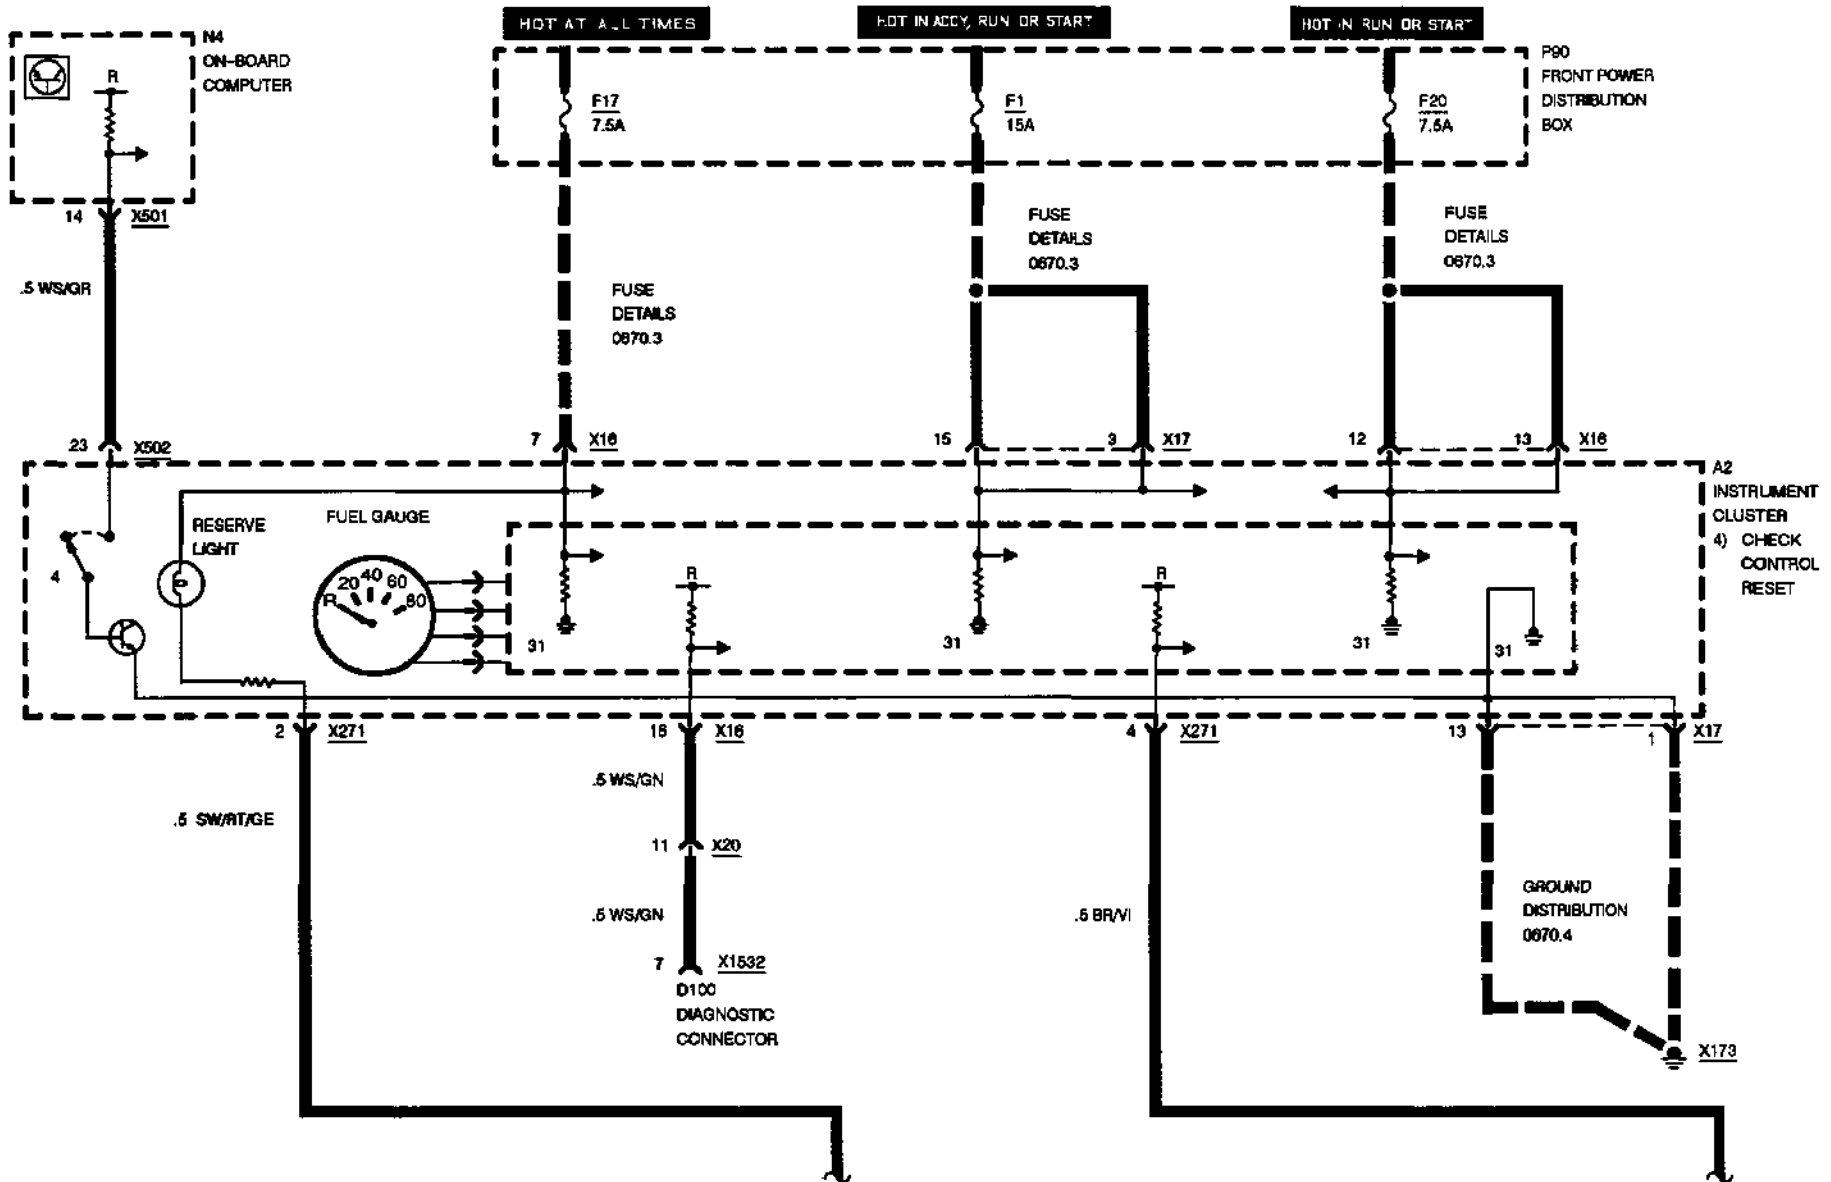

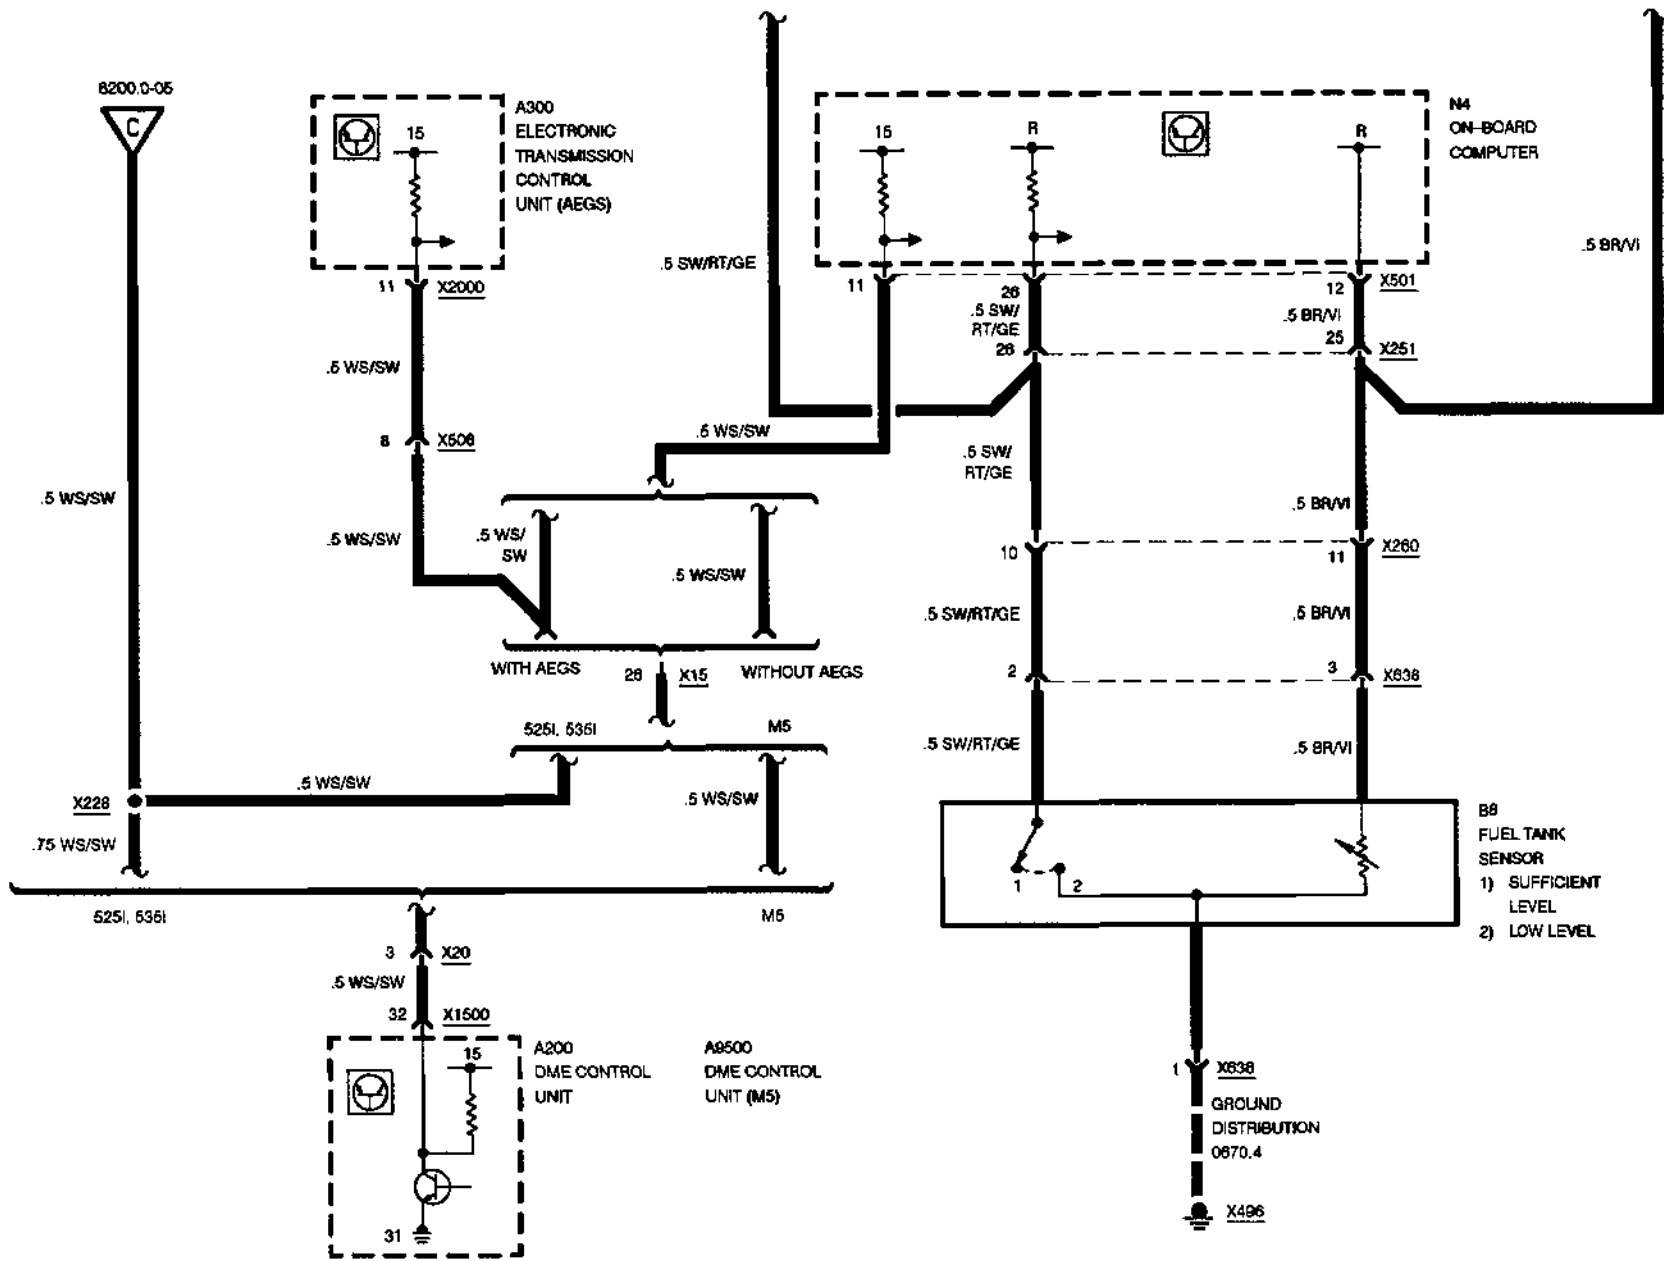




INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC) GEAR SELECTOR

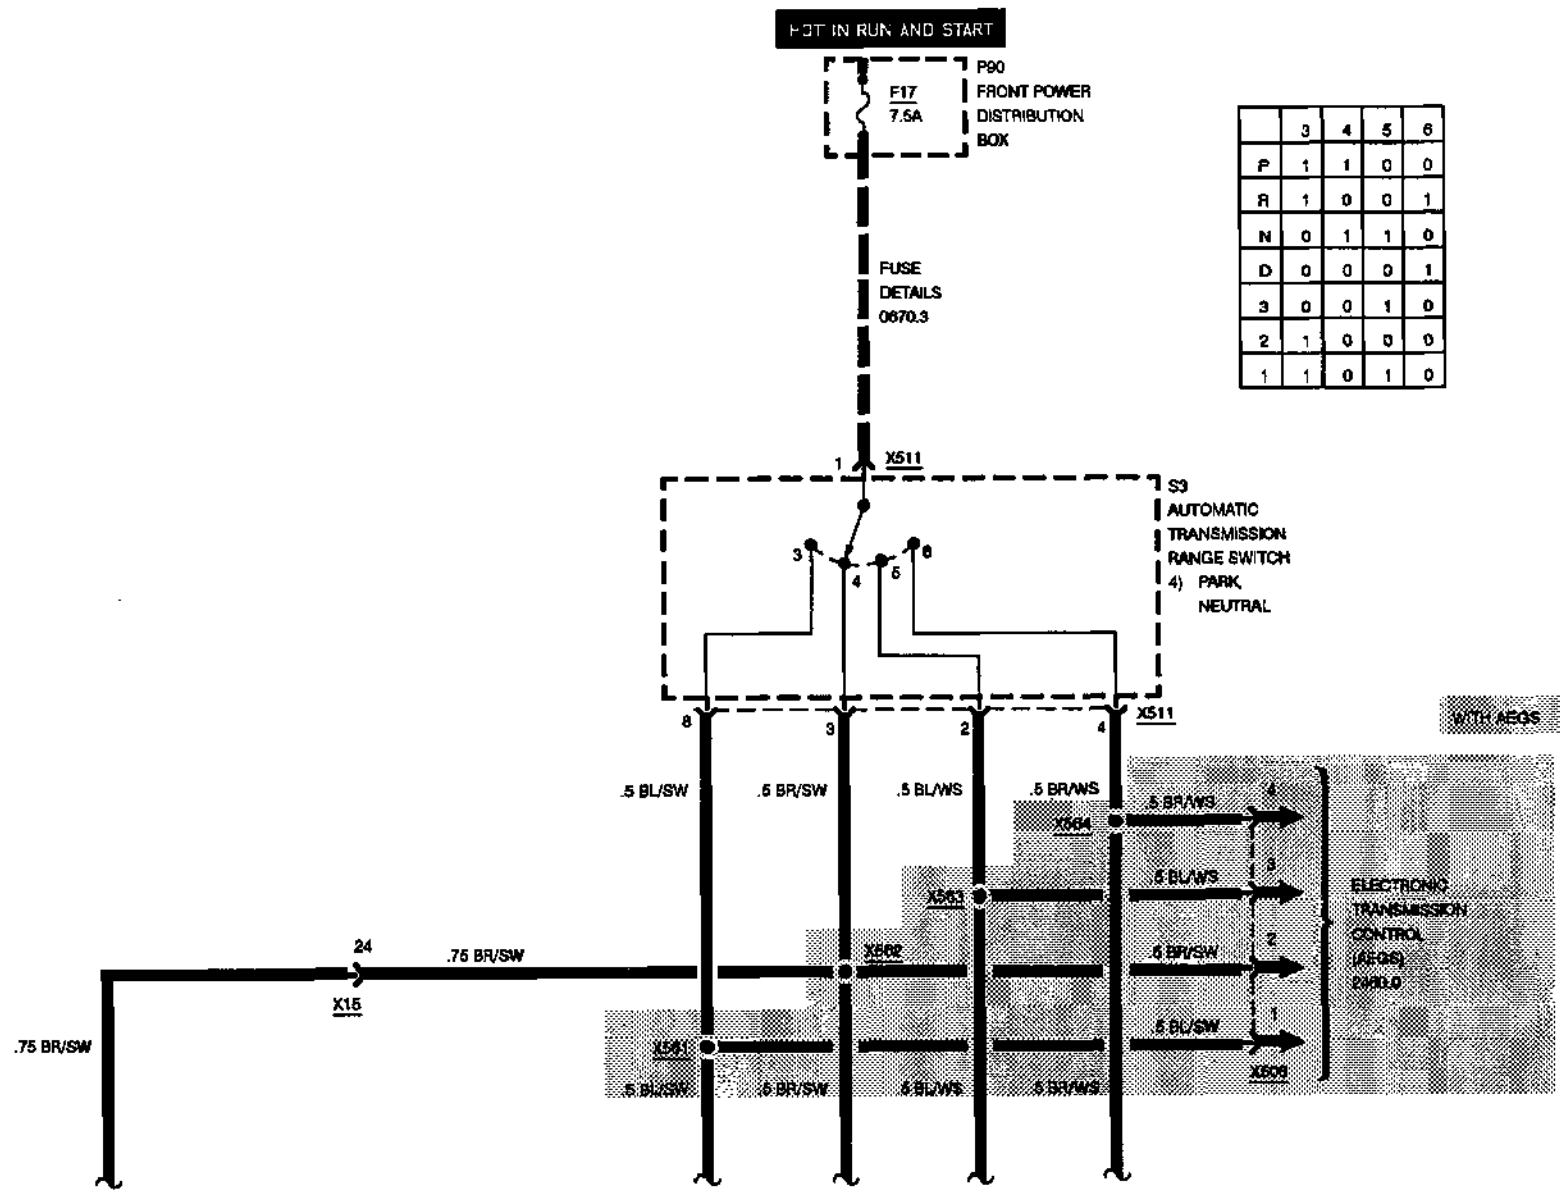

	3	4	5	6
P	1	1	0	0
R	1	0	0	1
N	0	1	1	0
D	0	0	0	1
3	0	0	1	0
2	1	0	0	0
1	1	0	1	0


07/90 6200.0-08 1990

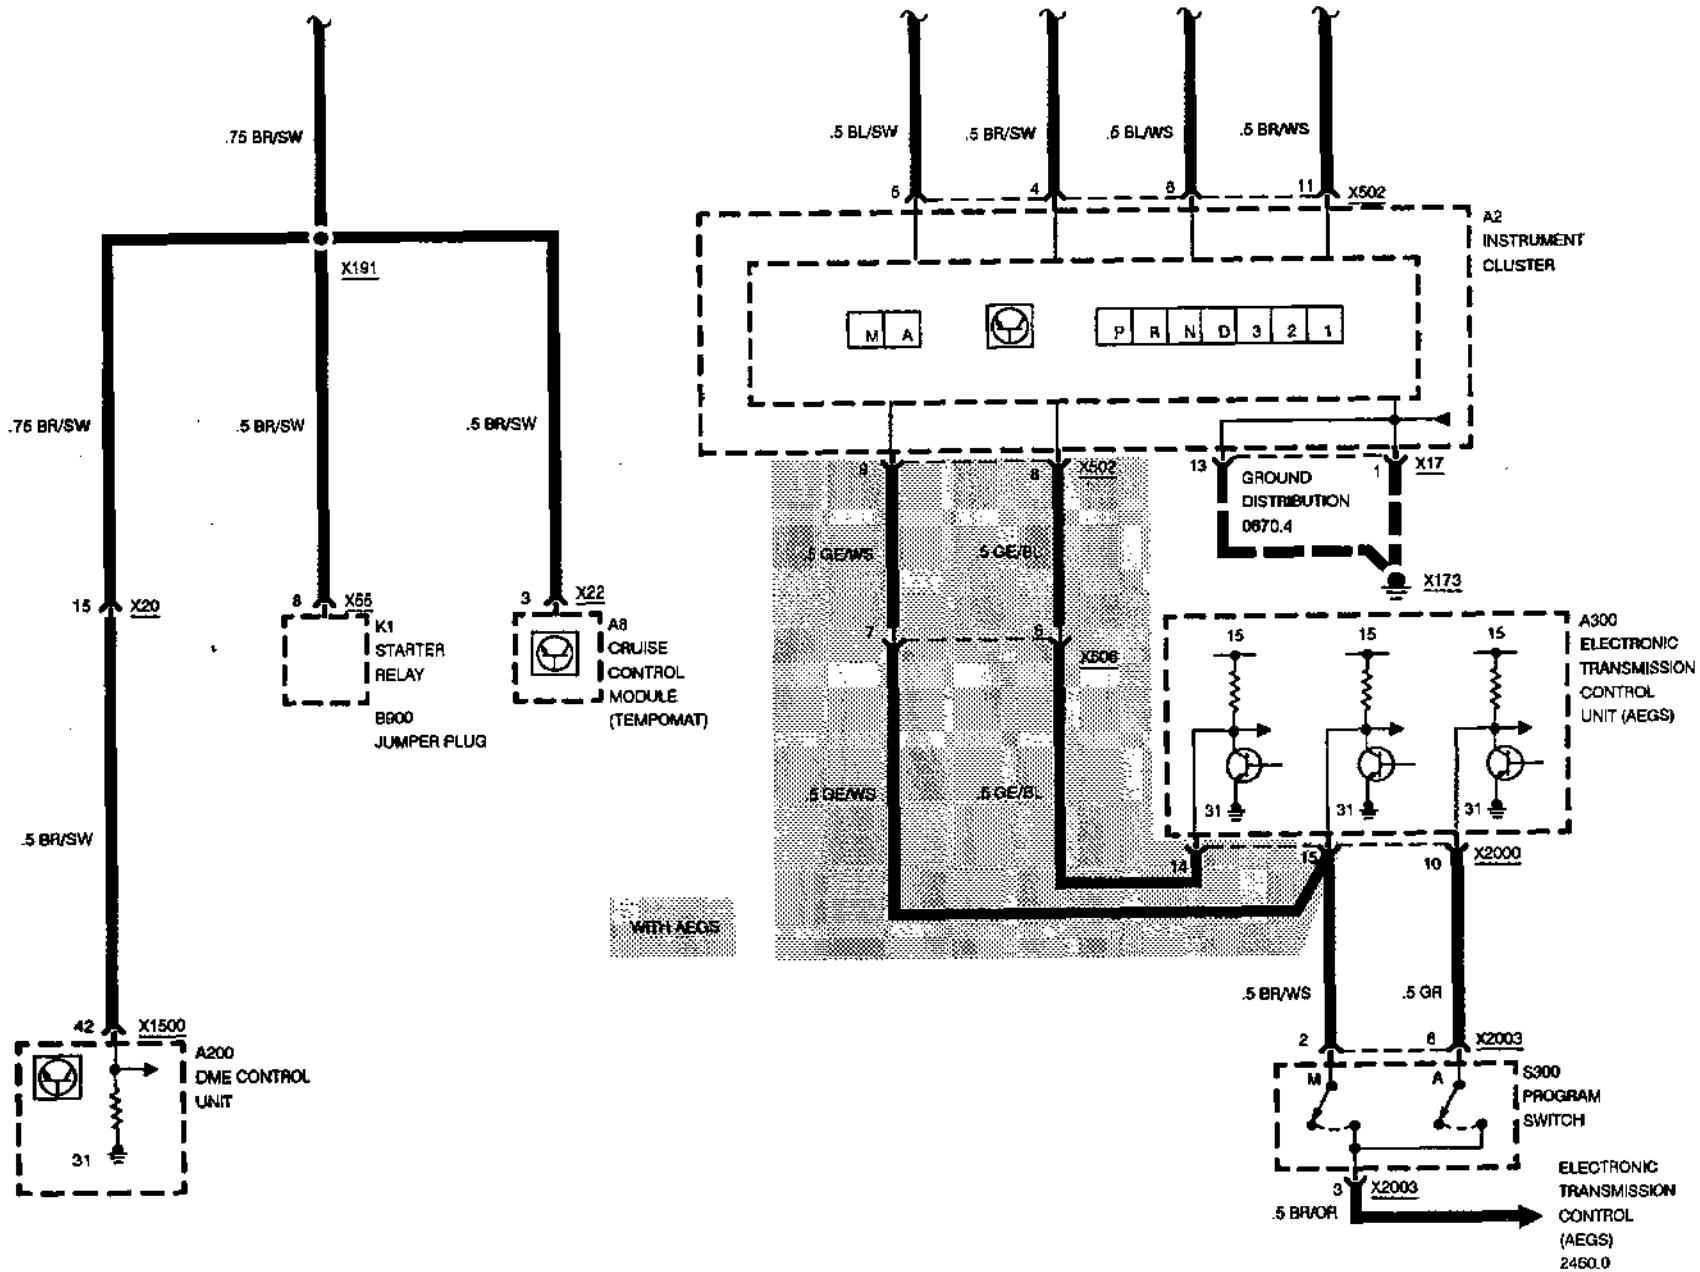



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)

SPEED SIGNAL

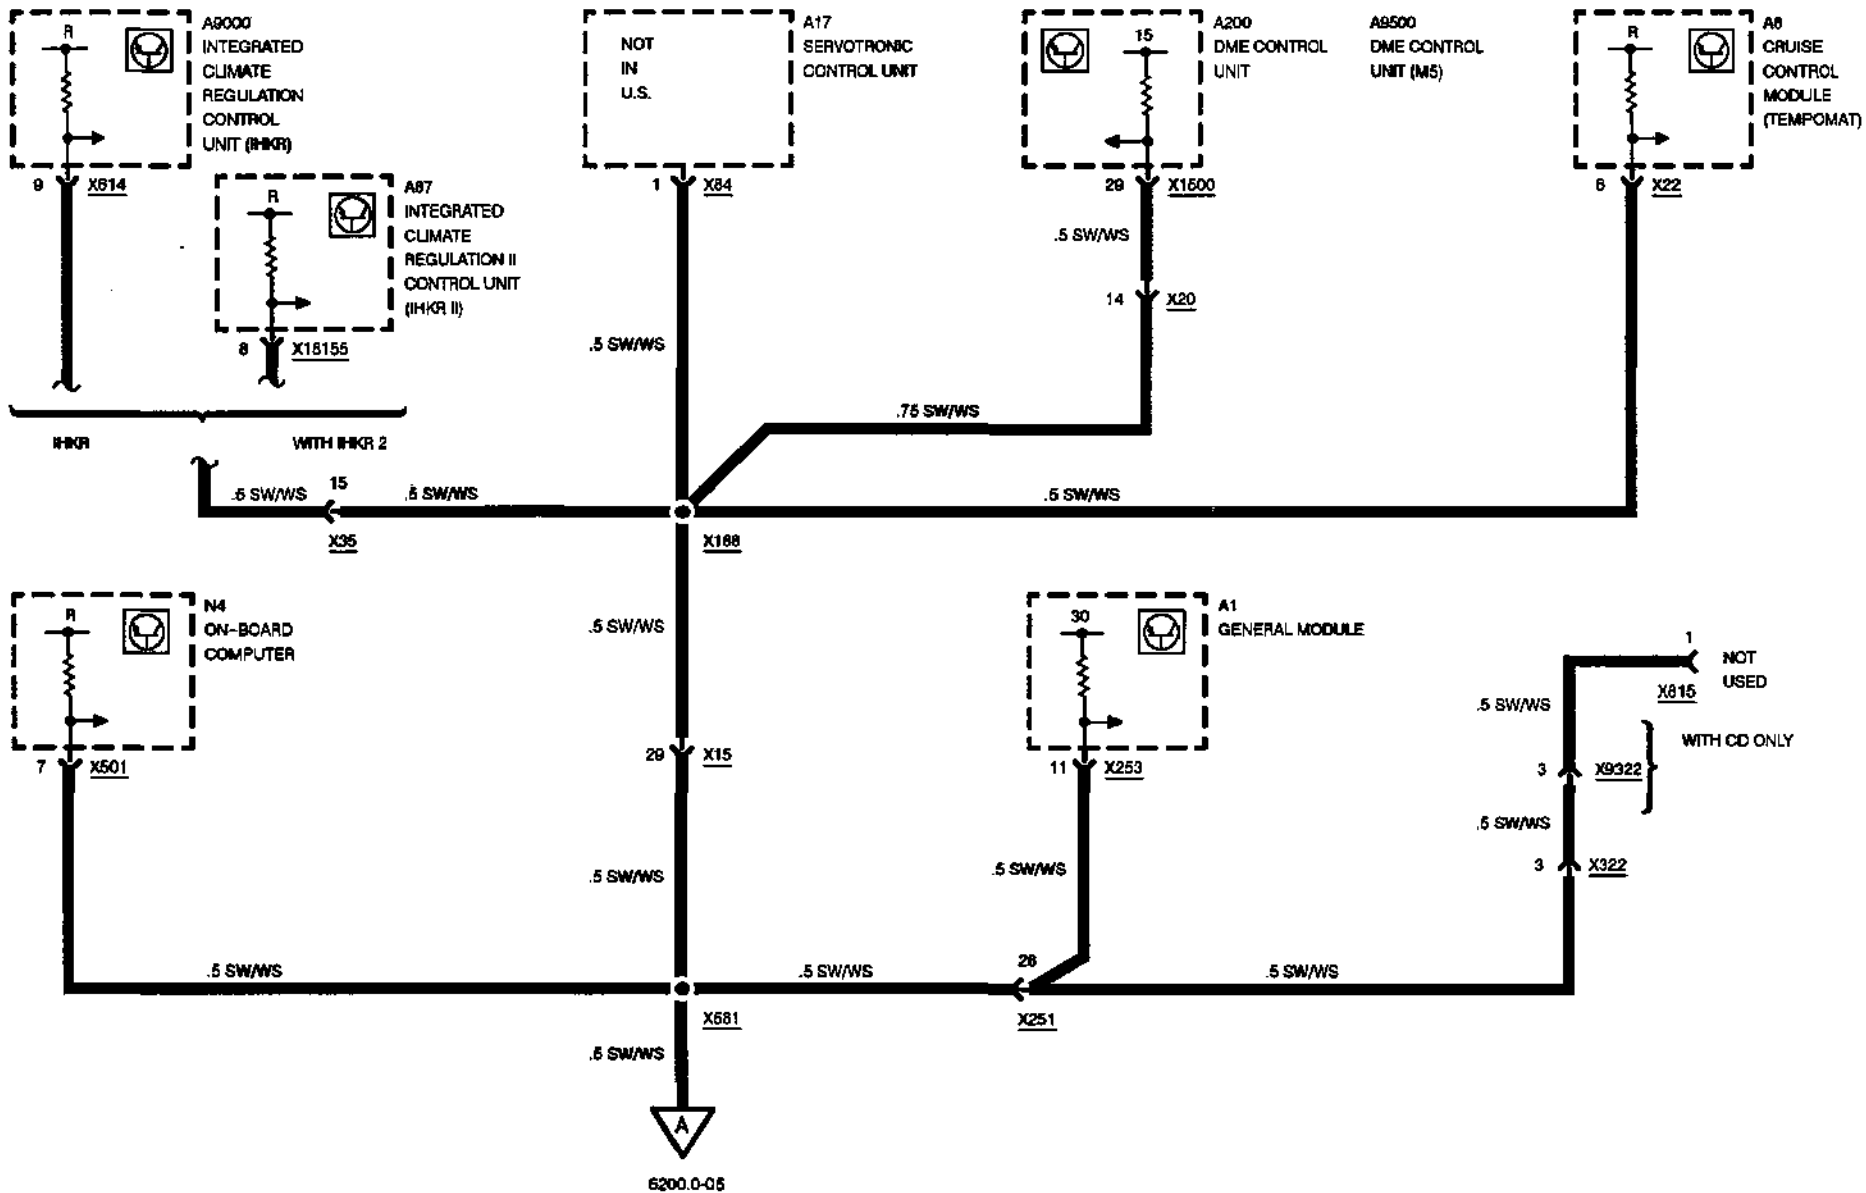




INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)

525i, 535i


CHECK CONTROL

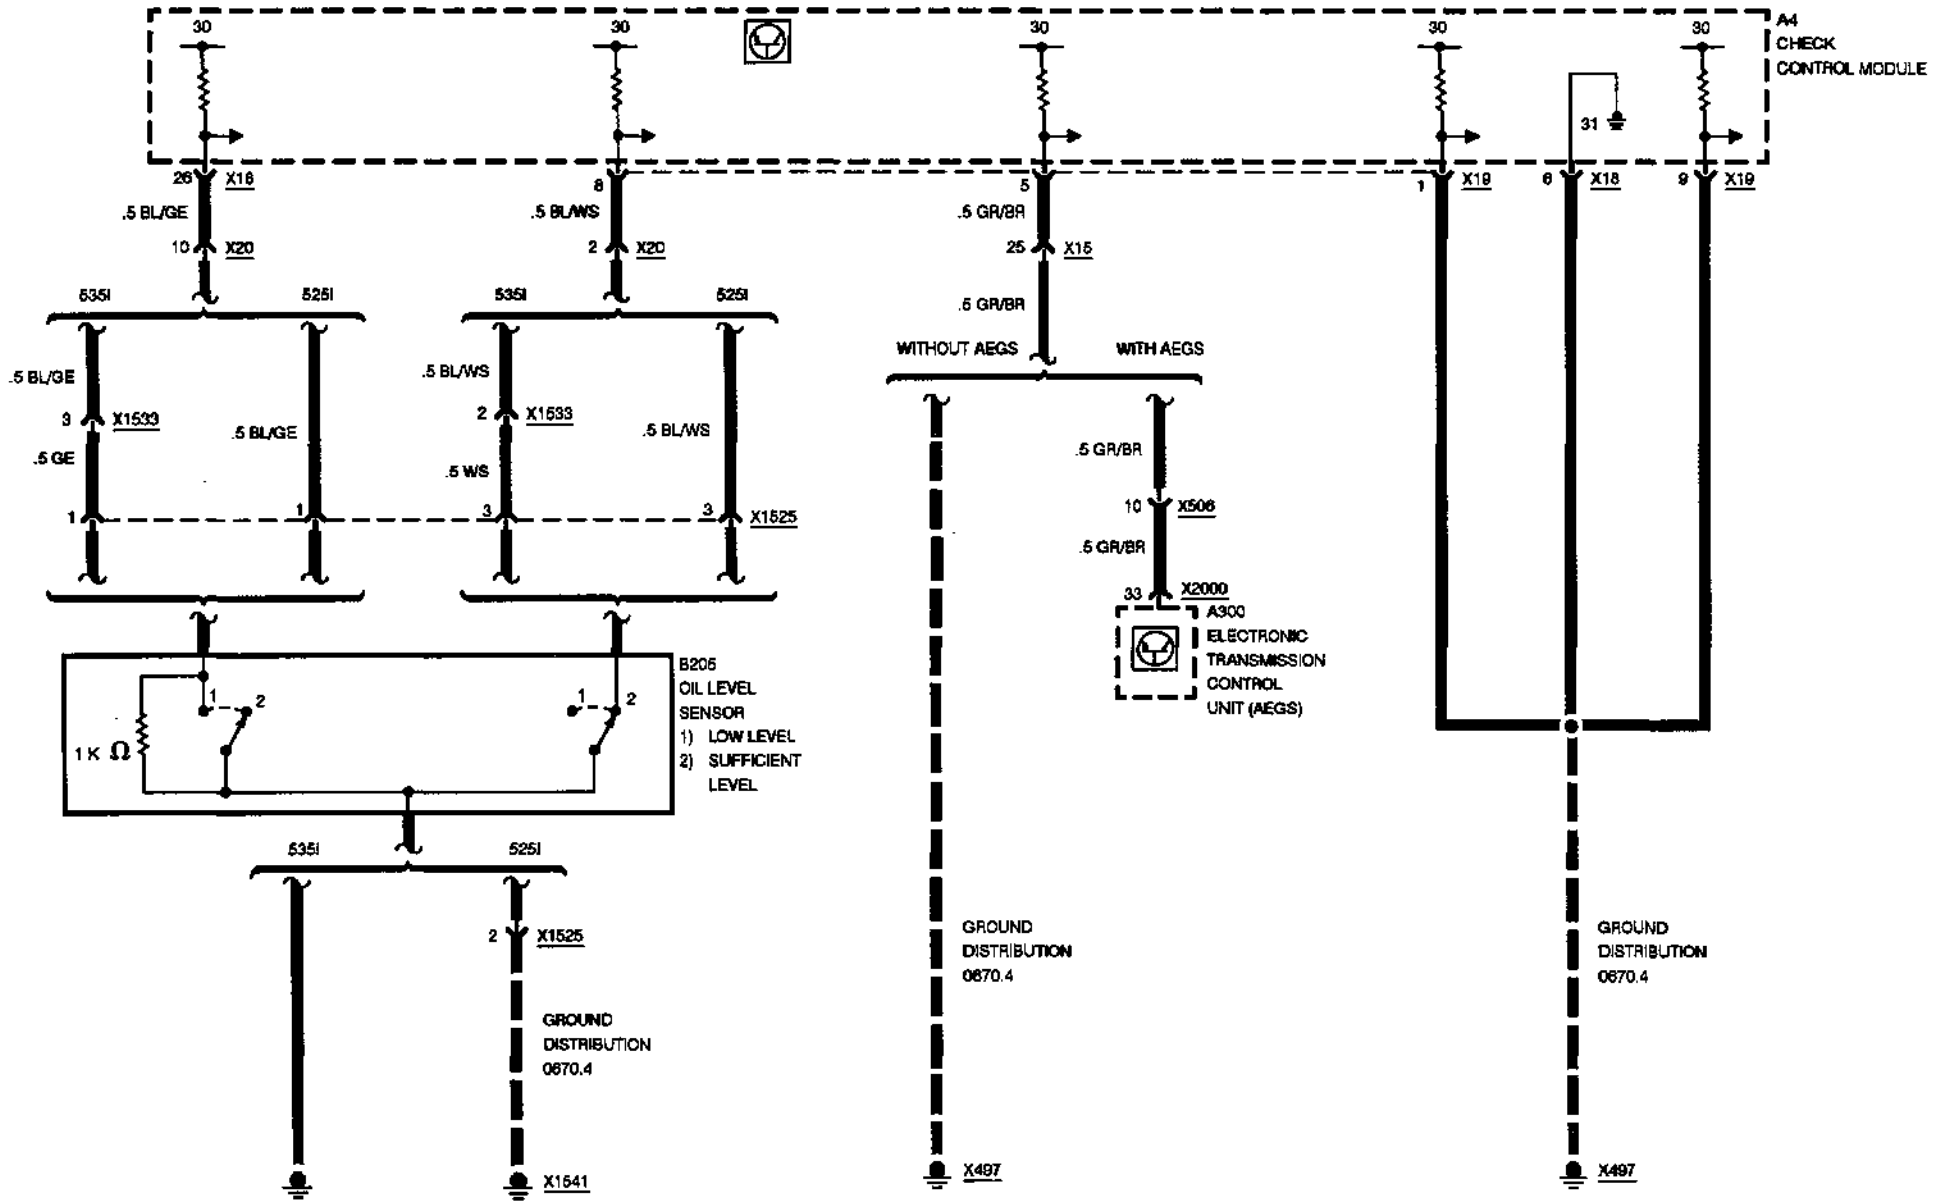



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)

CHECK CONTROL

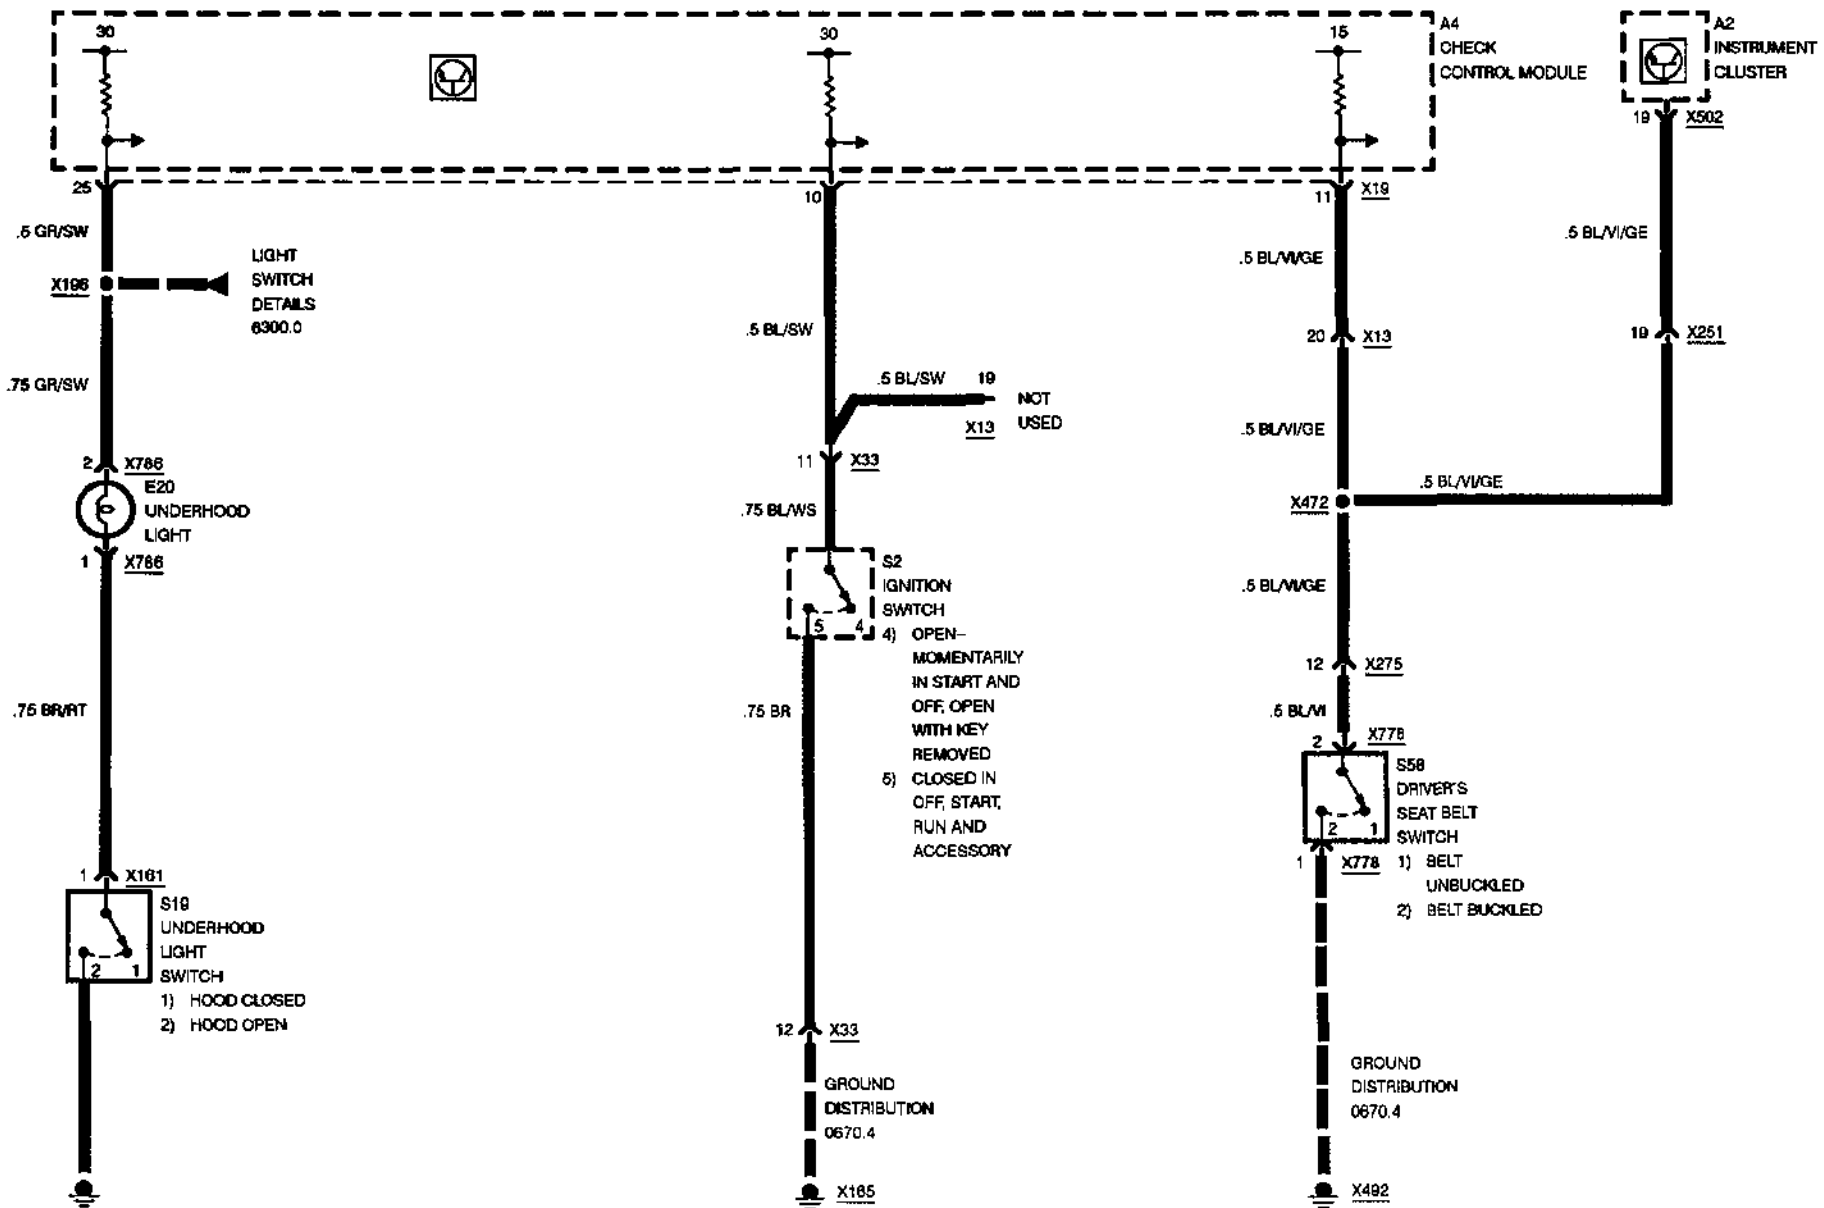




INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)

CHECK CONTROL

M5

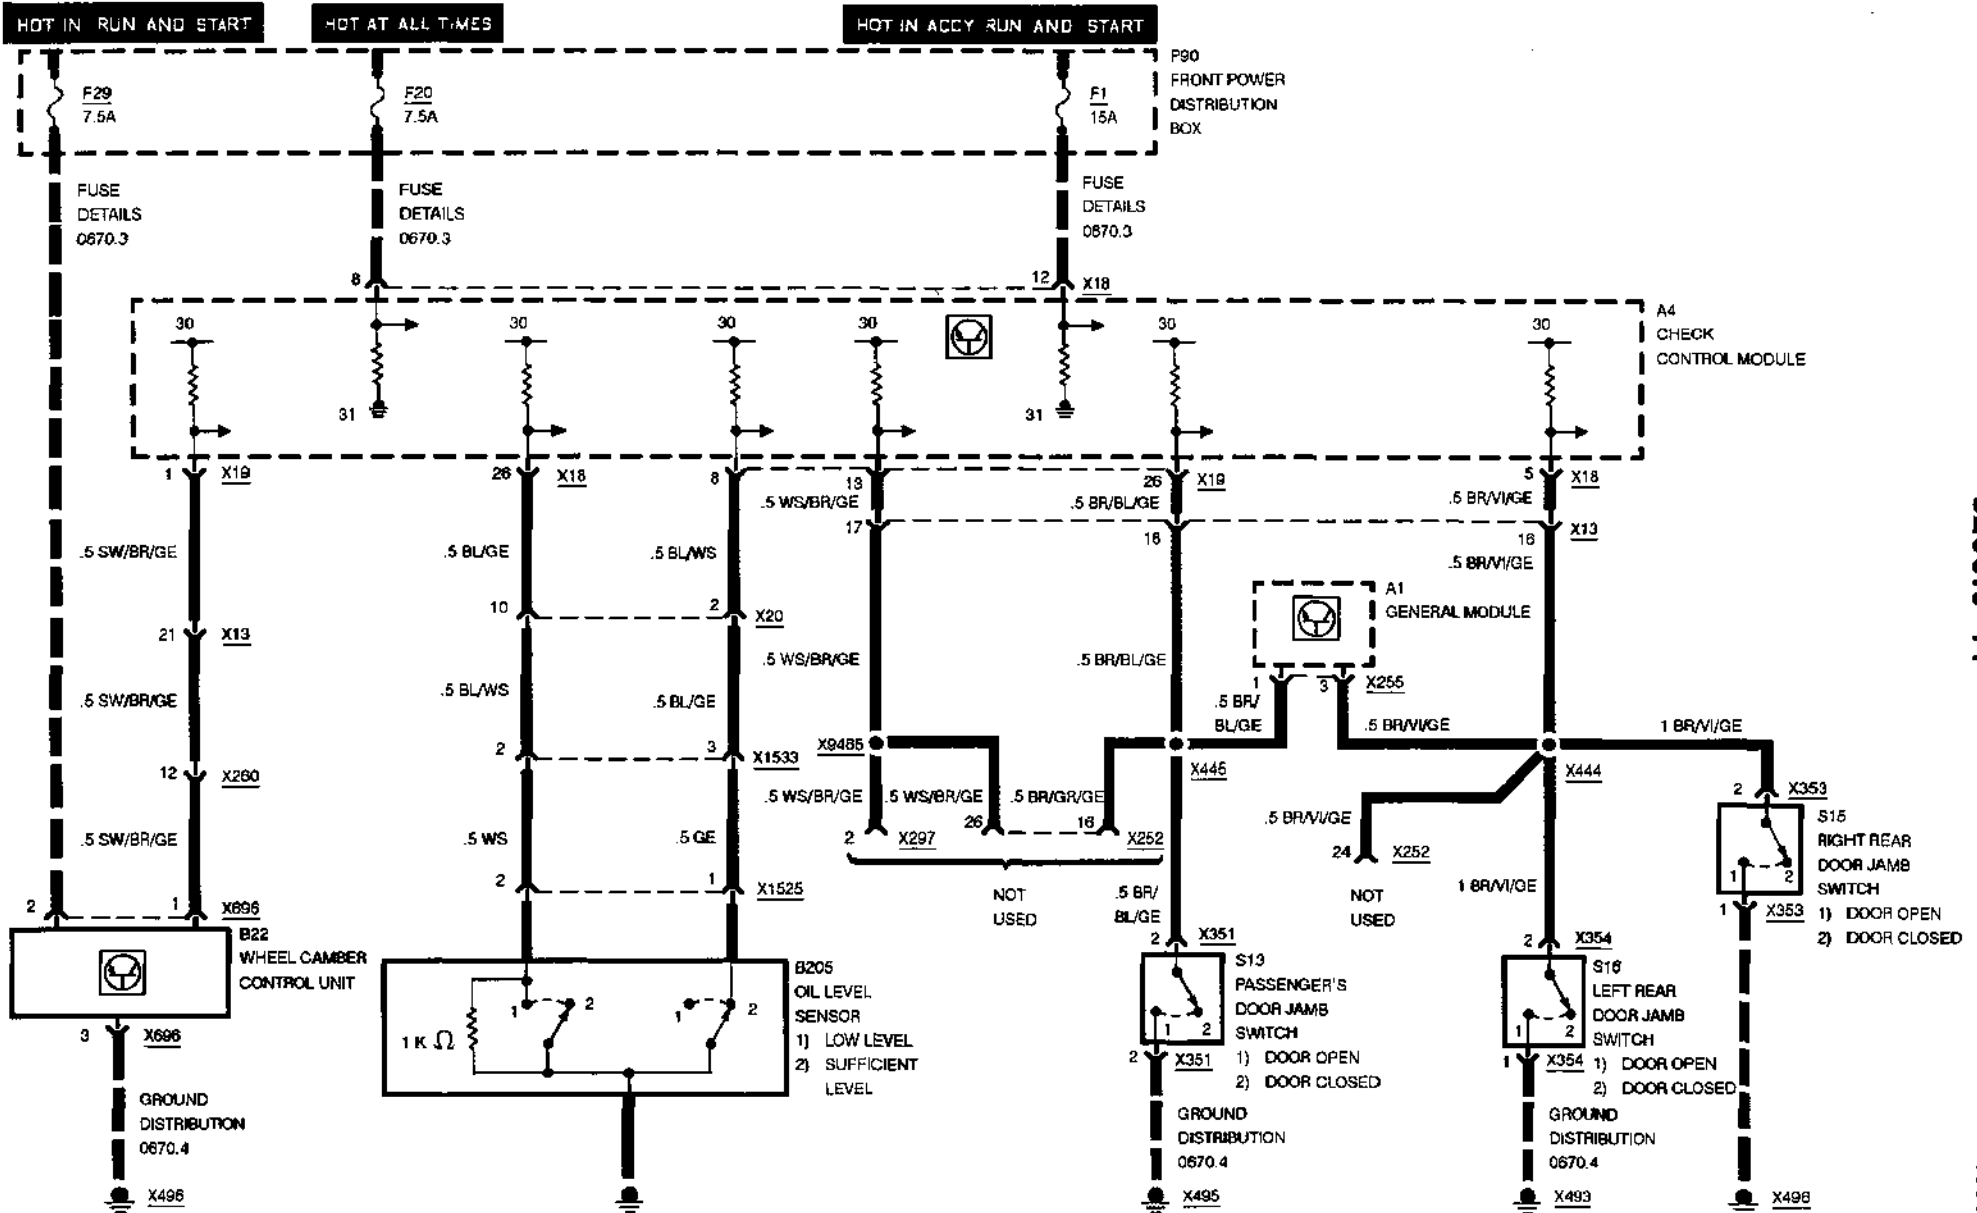

07/90


6200.0-14

1990



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)


DATA LINK

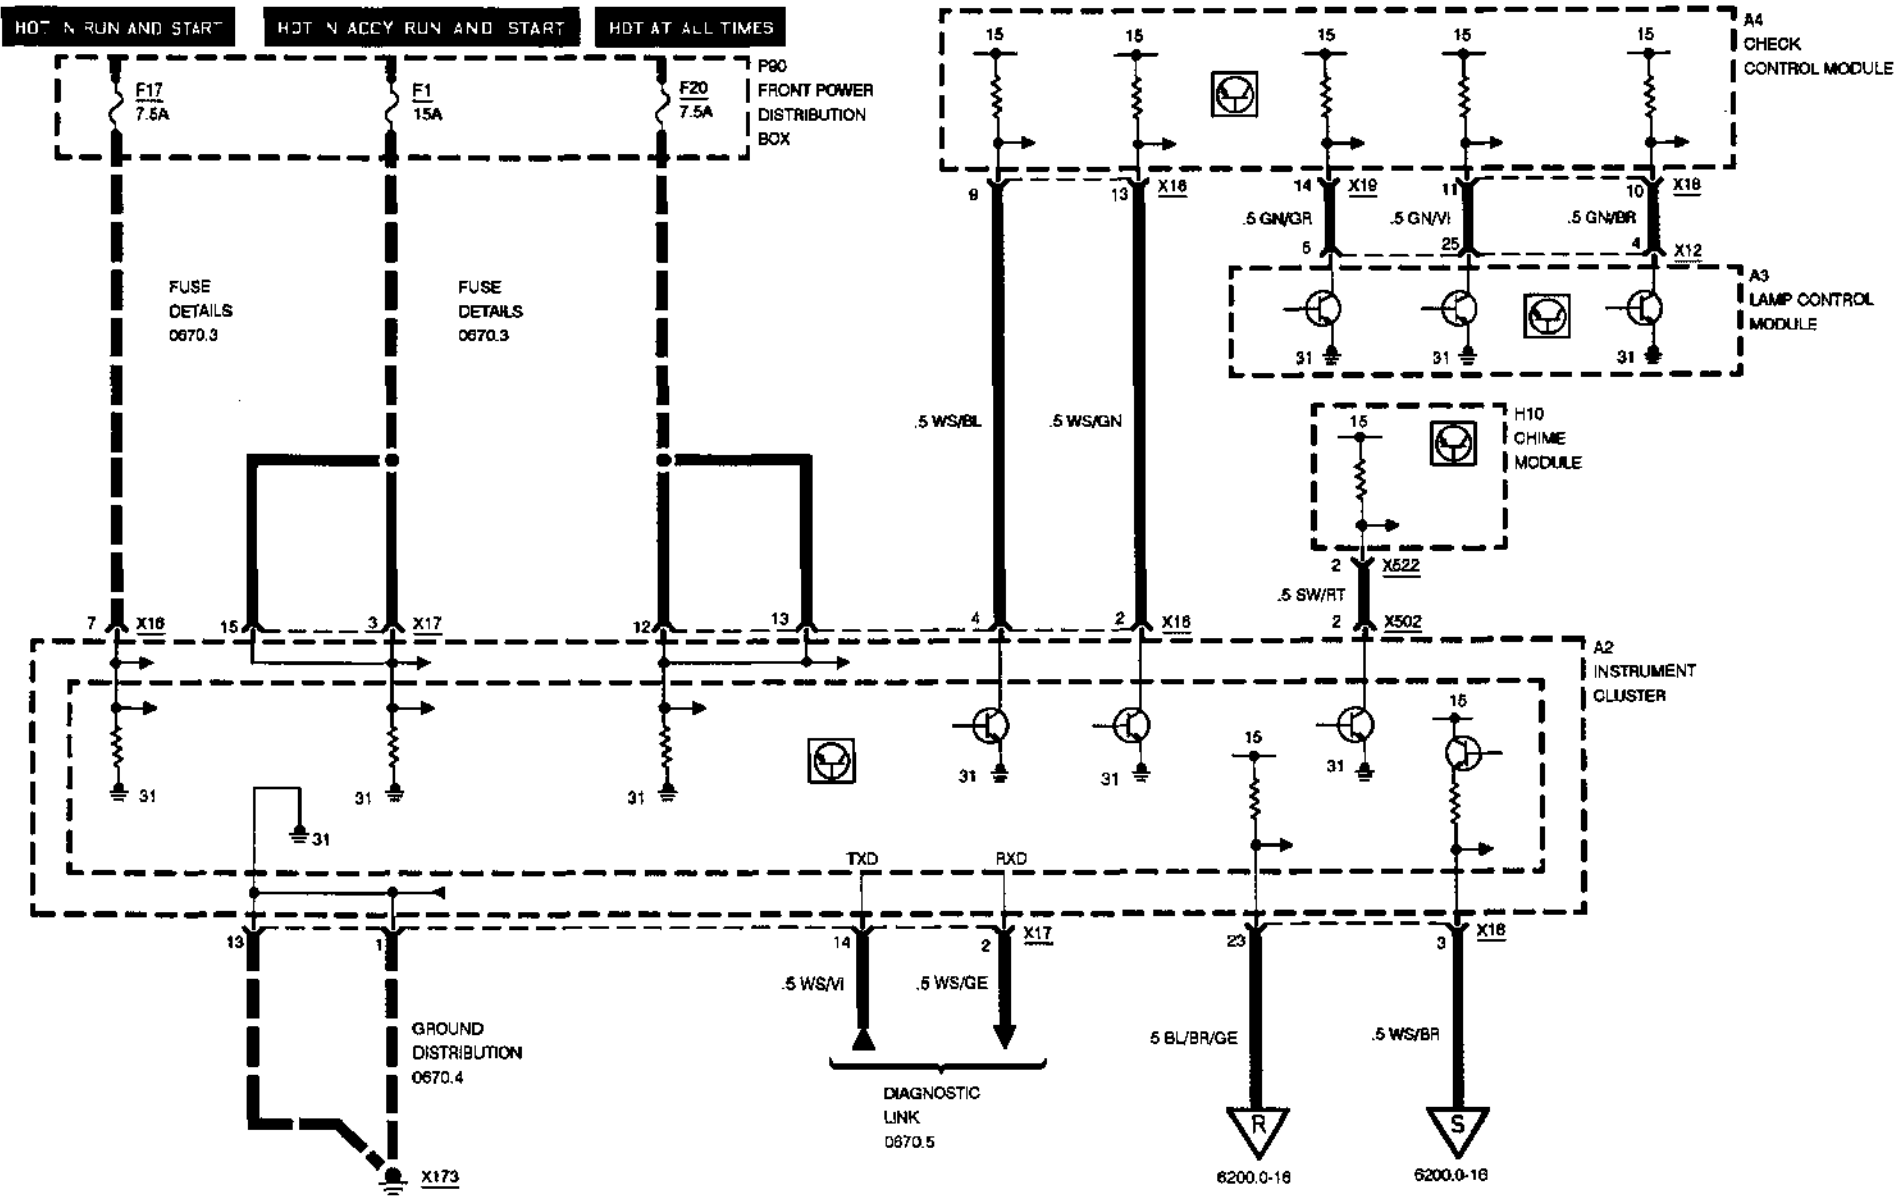



INSTRUMENT CLUSTER/ CHECK CONTROL (K/CC)

DATA LINK

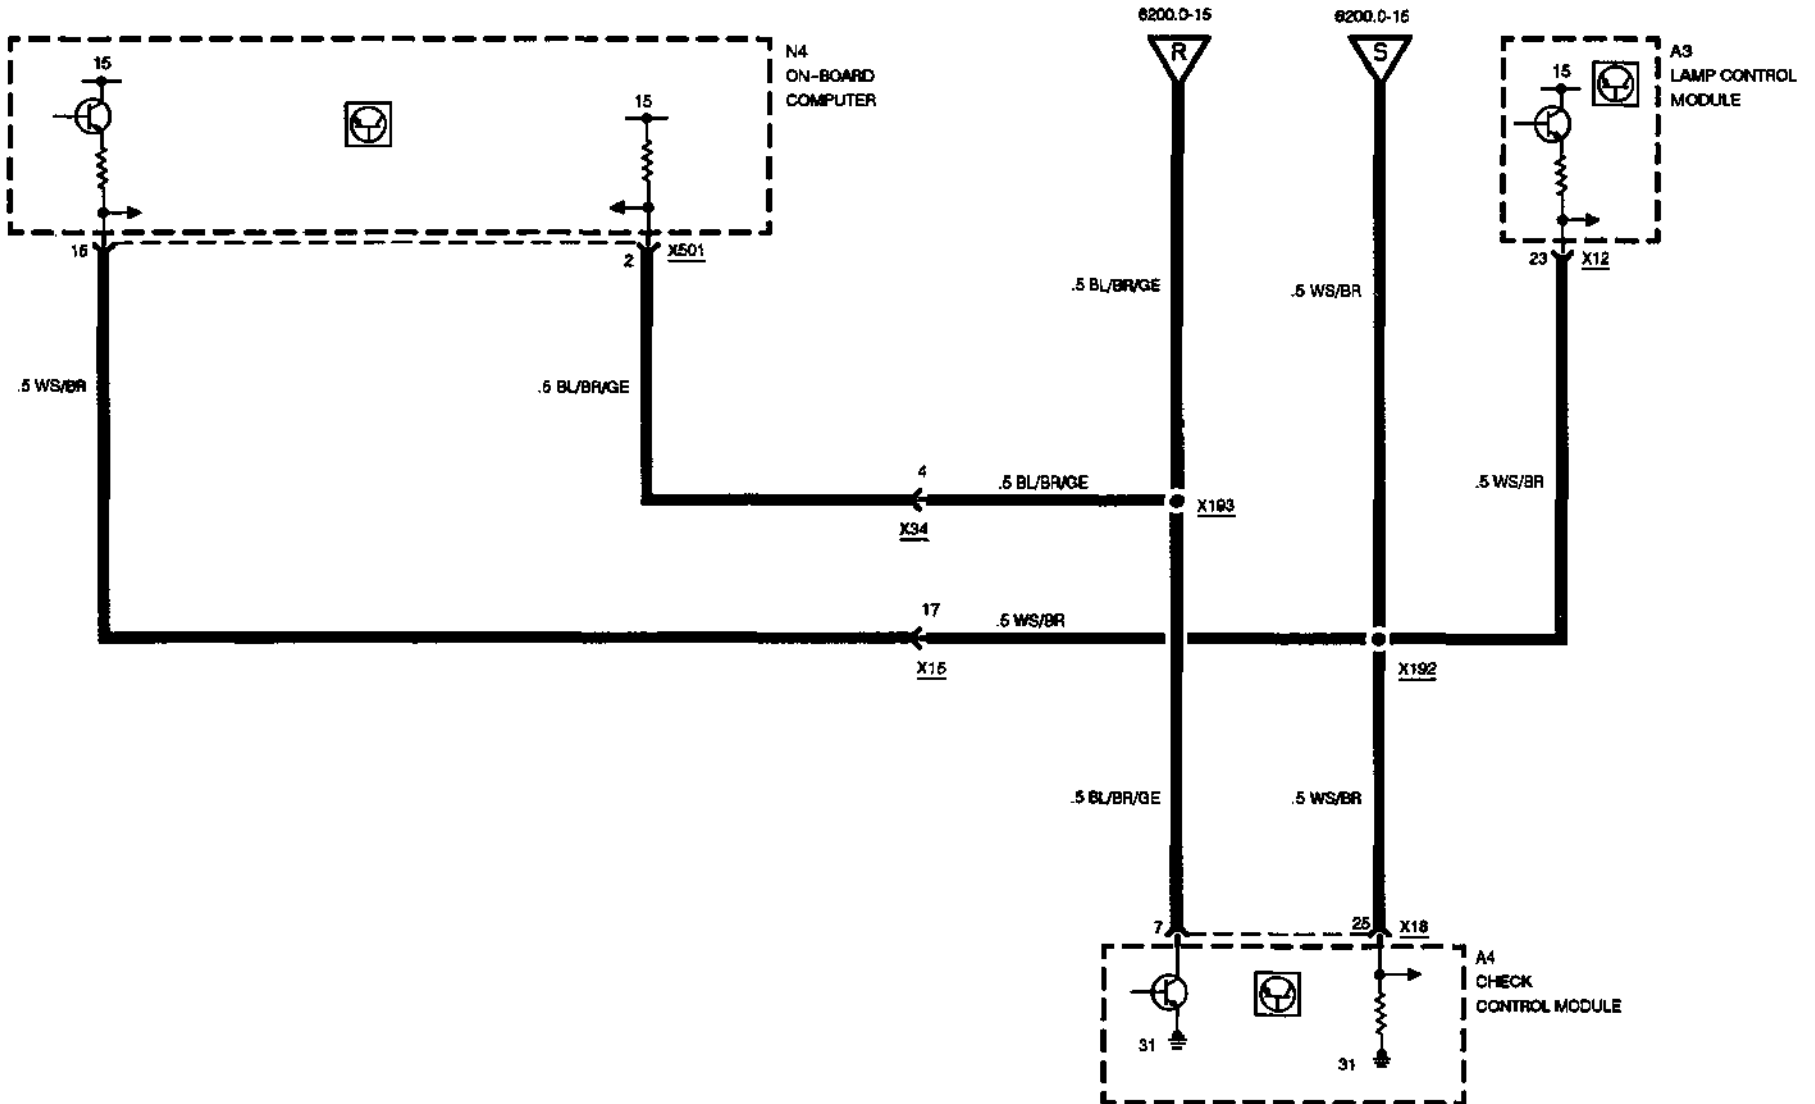


07/90


6200.0-16

1990




LIGHT SWITCH DETAILS

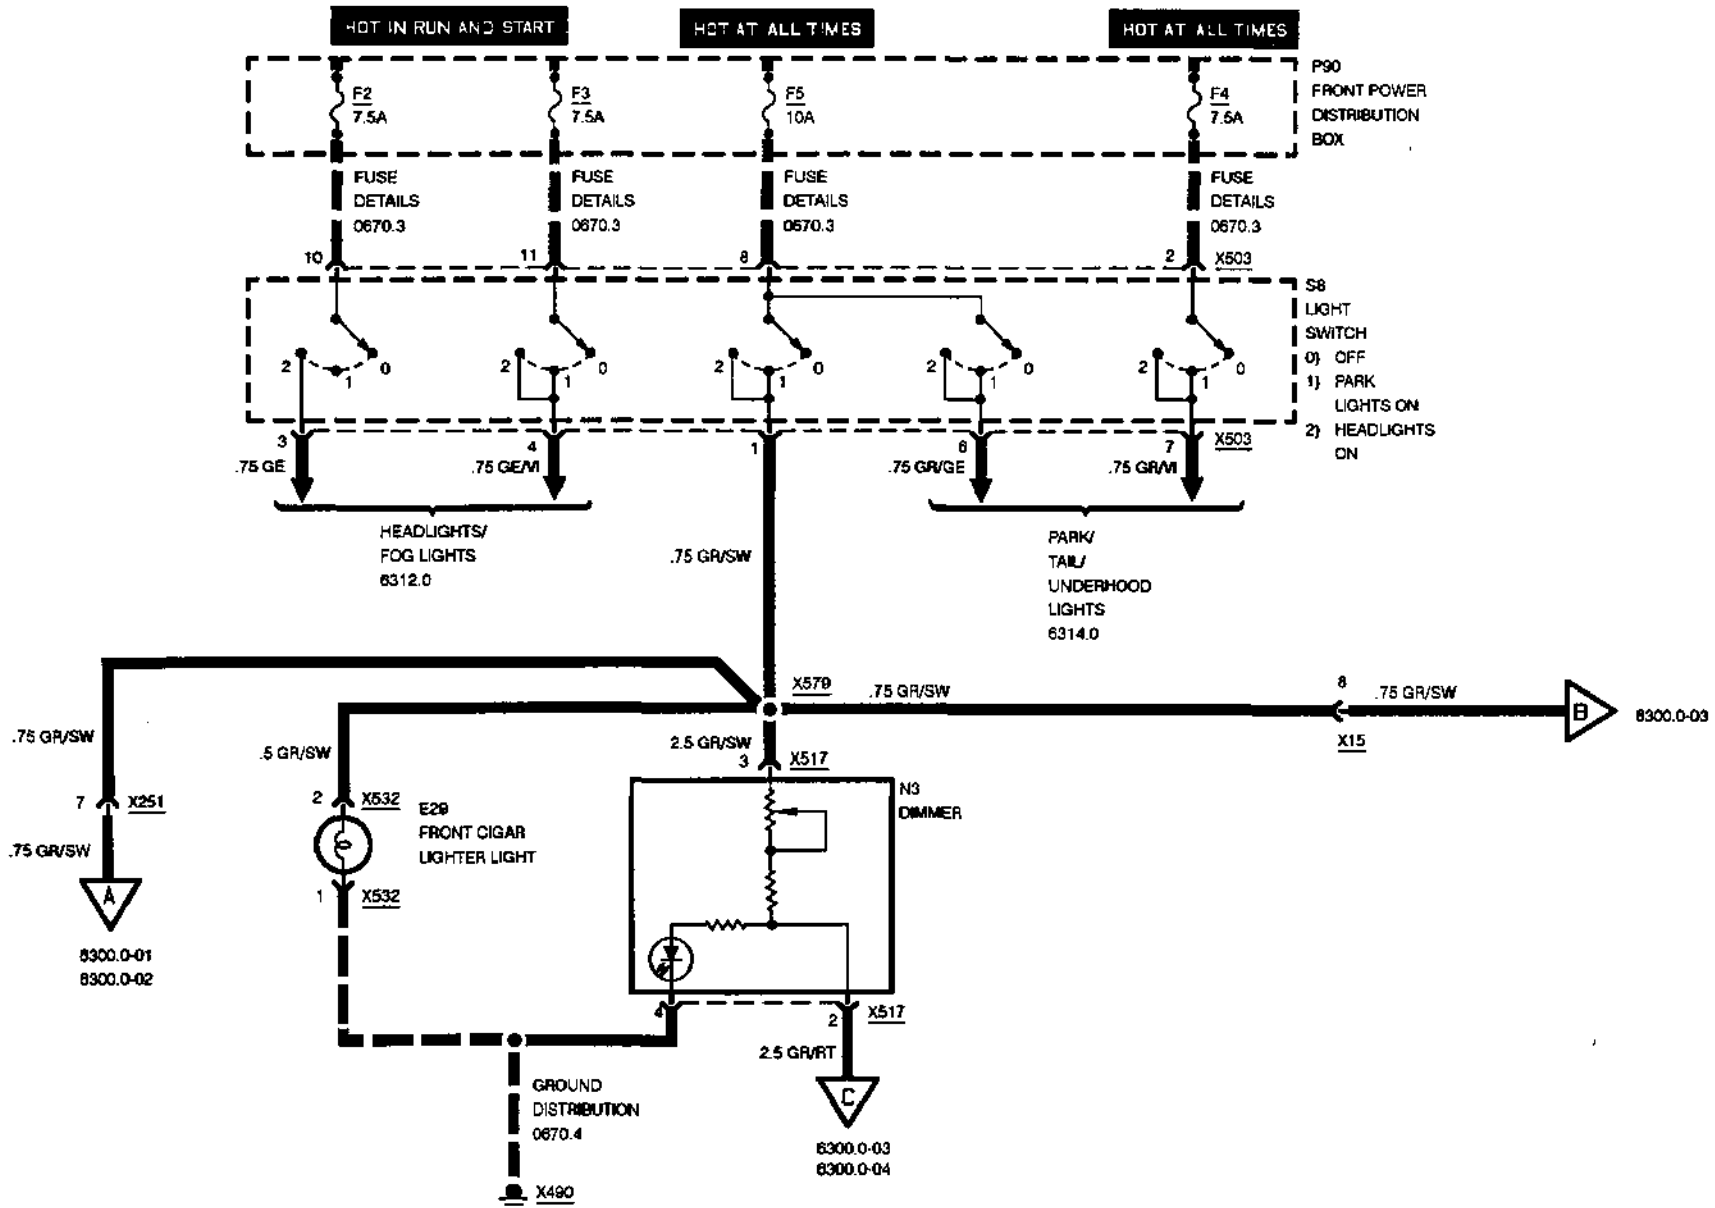

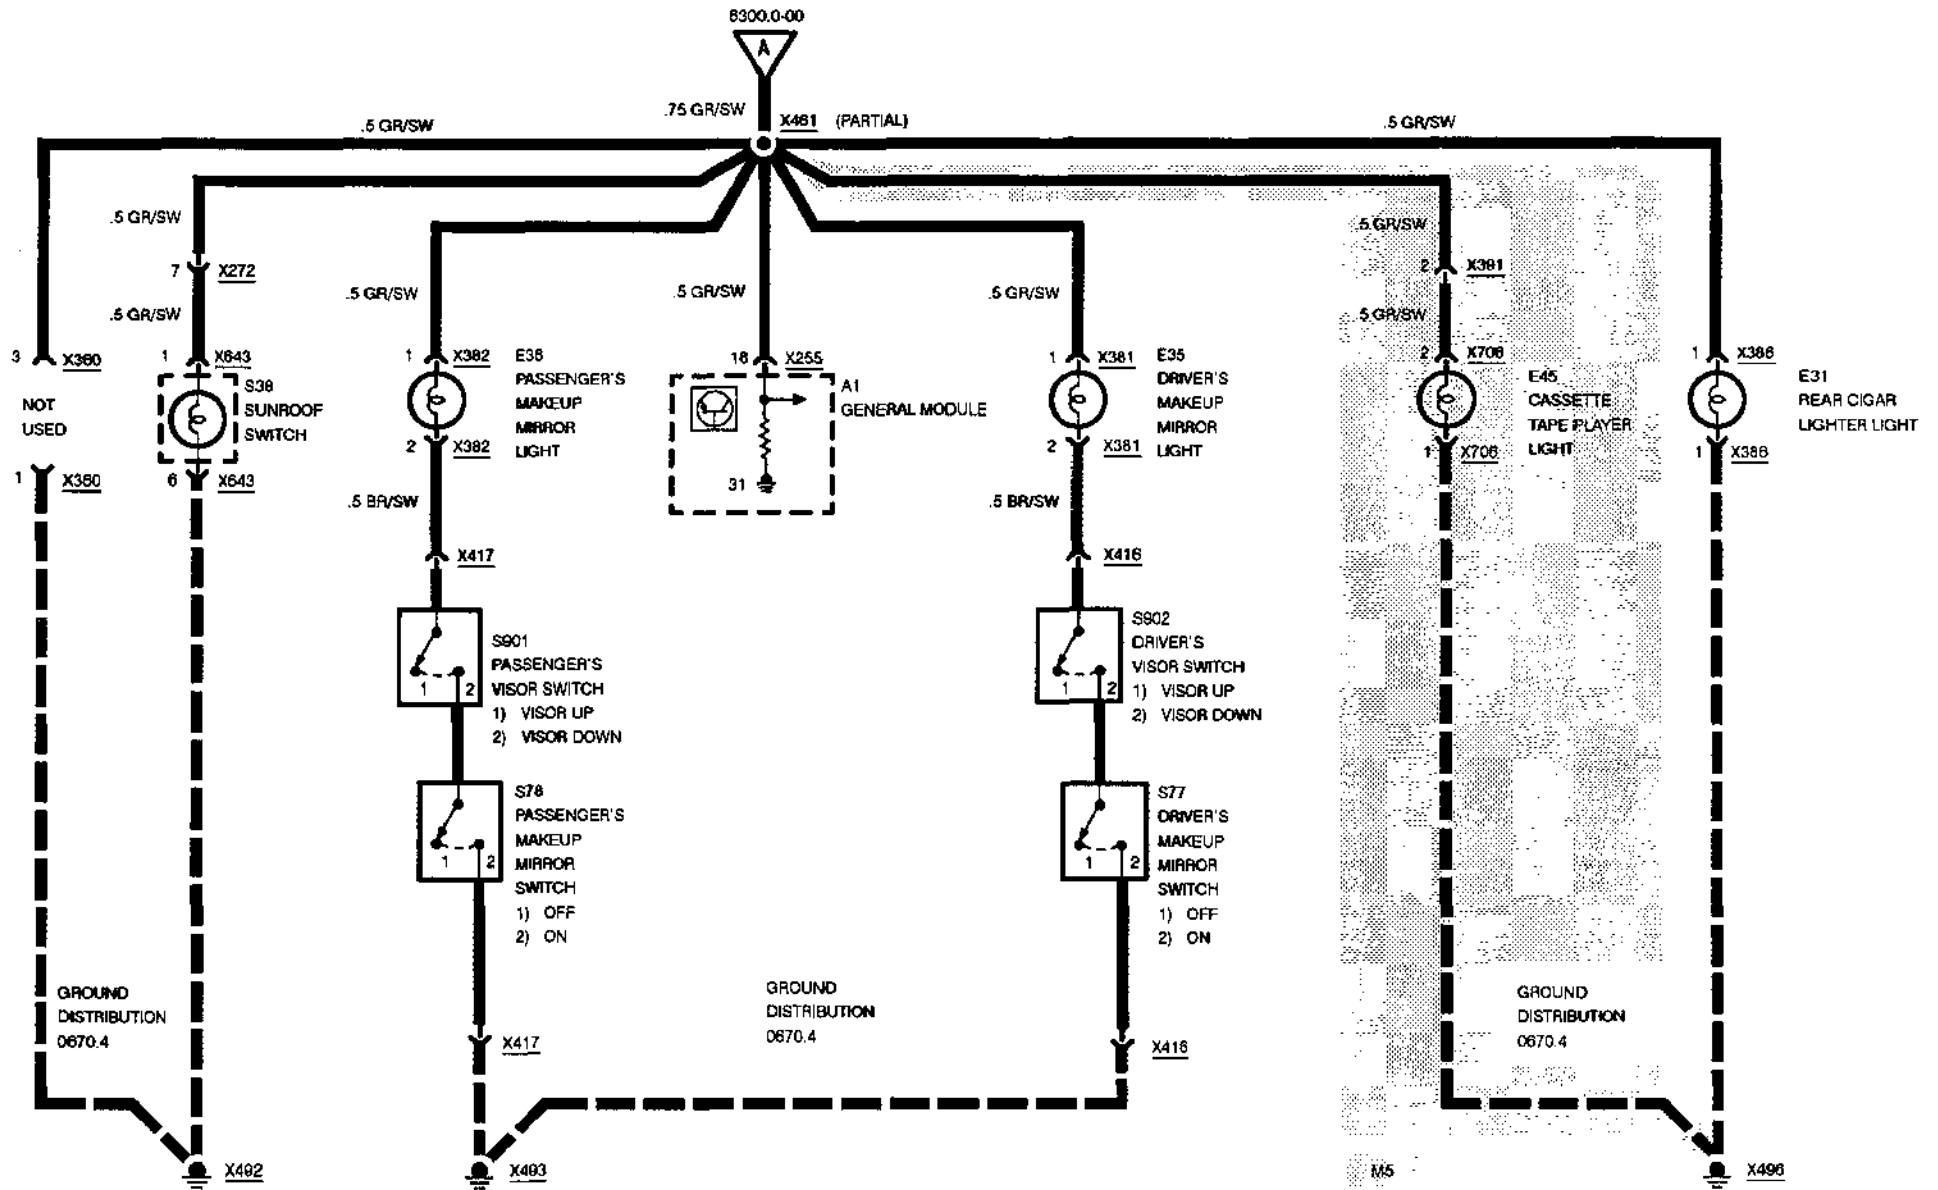


LIGHT SWITCH DETAILS

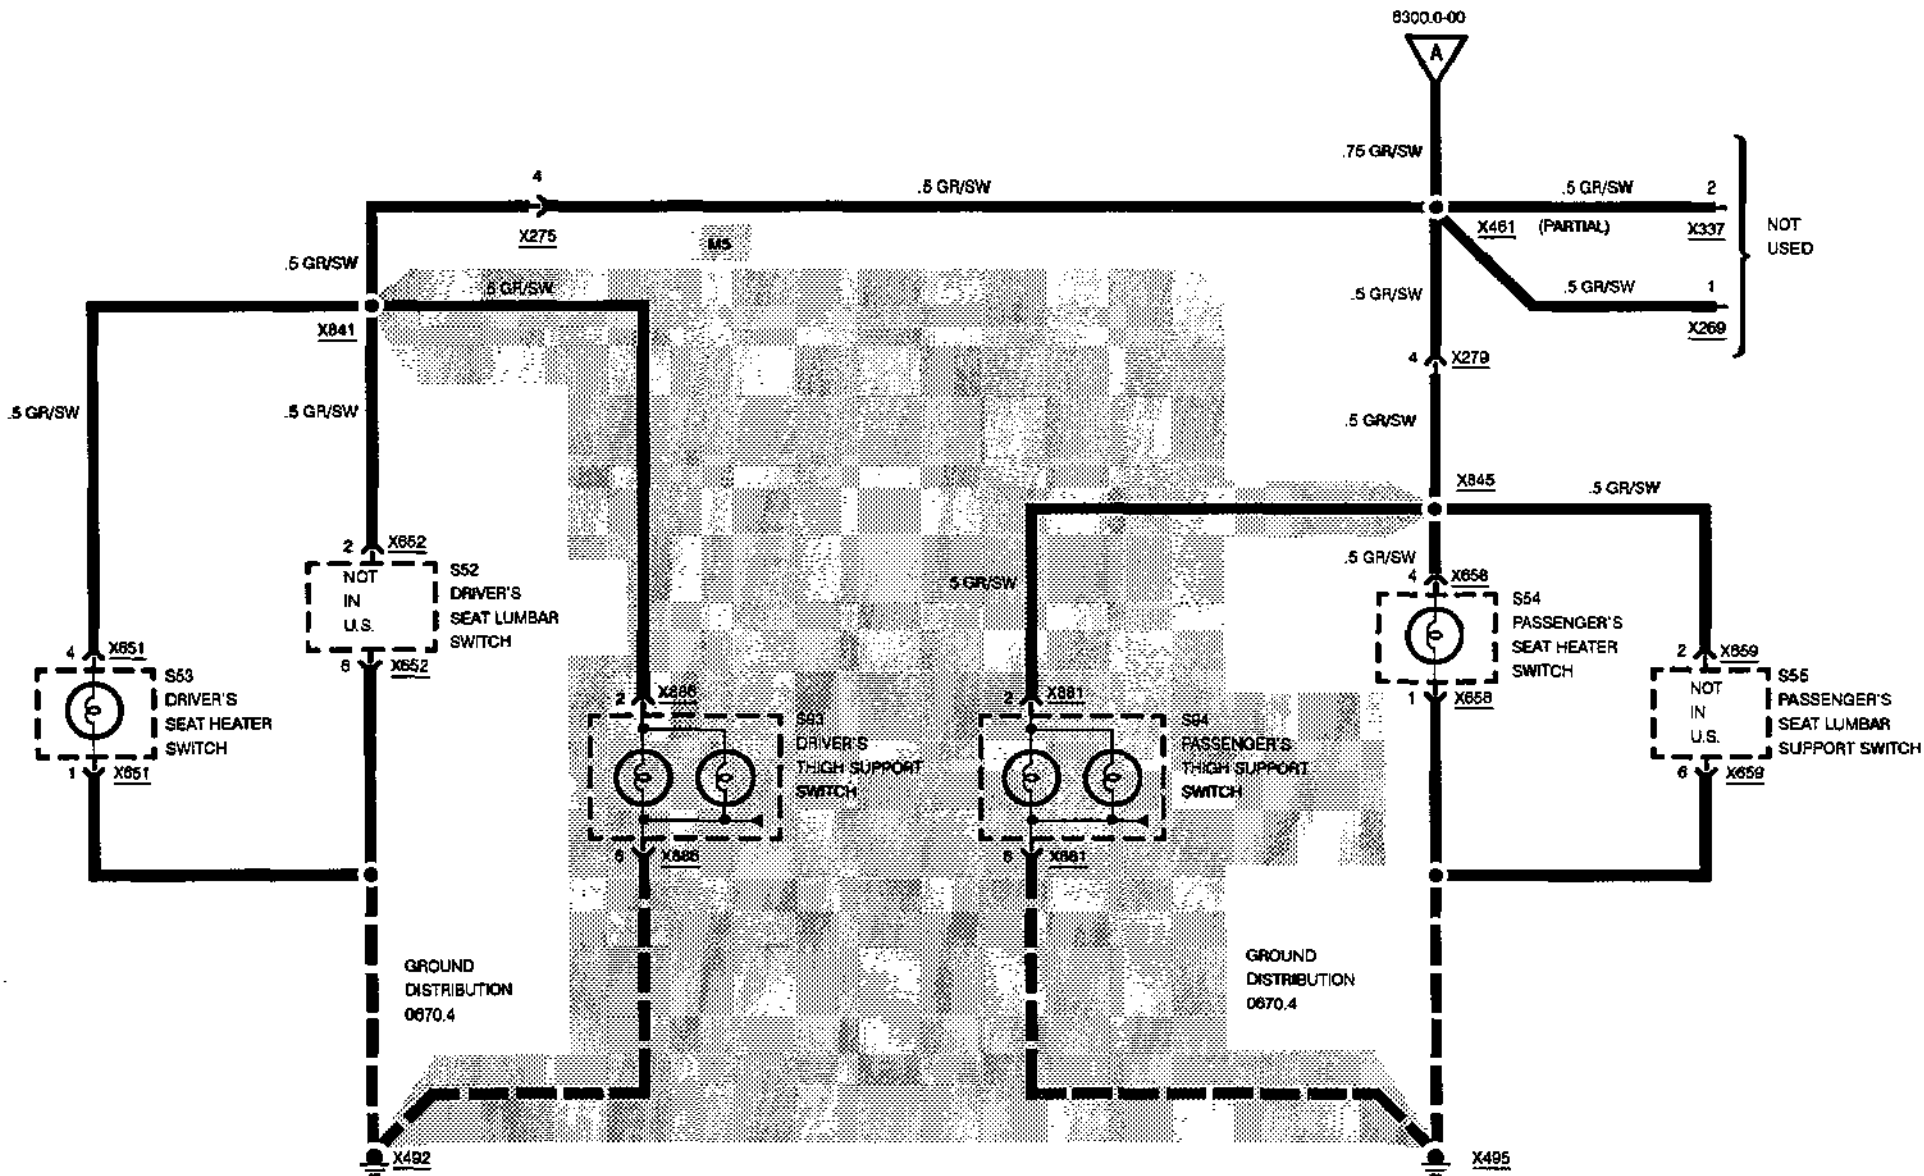




LIGHT SWITCH DETAILS

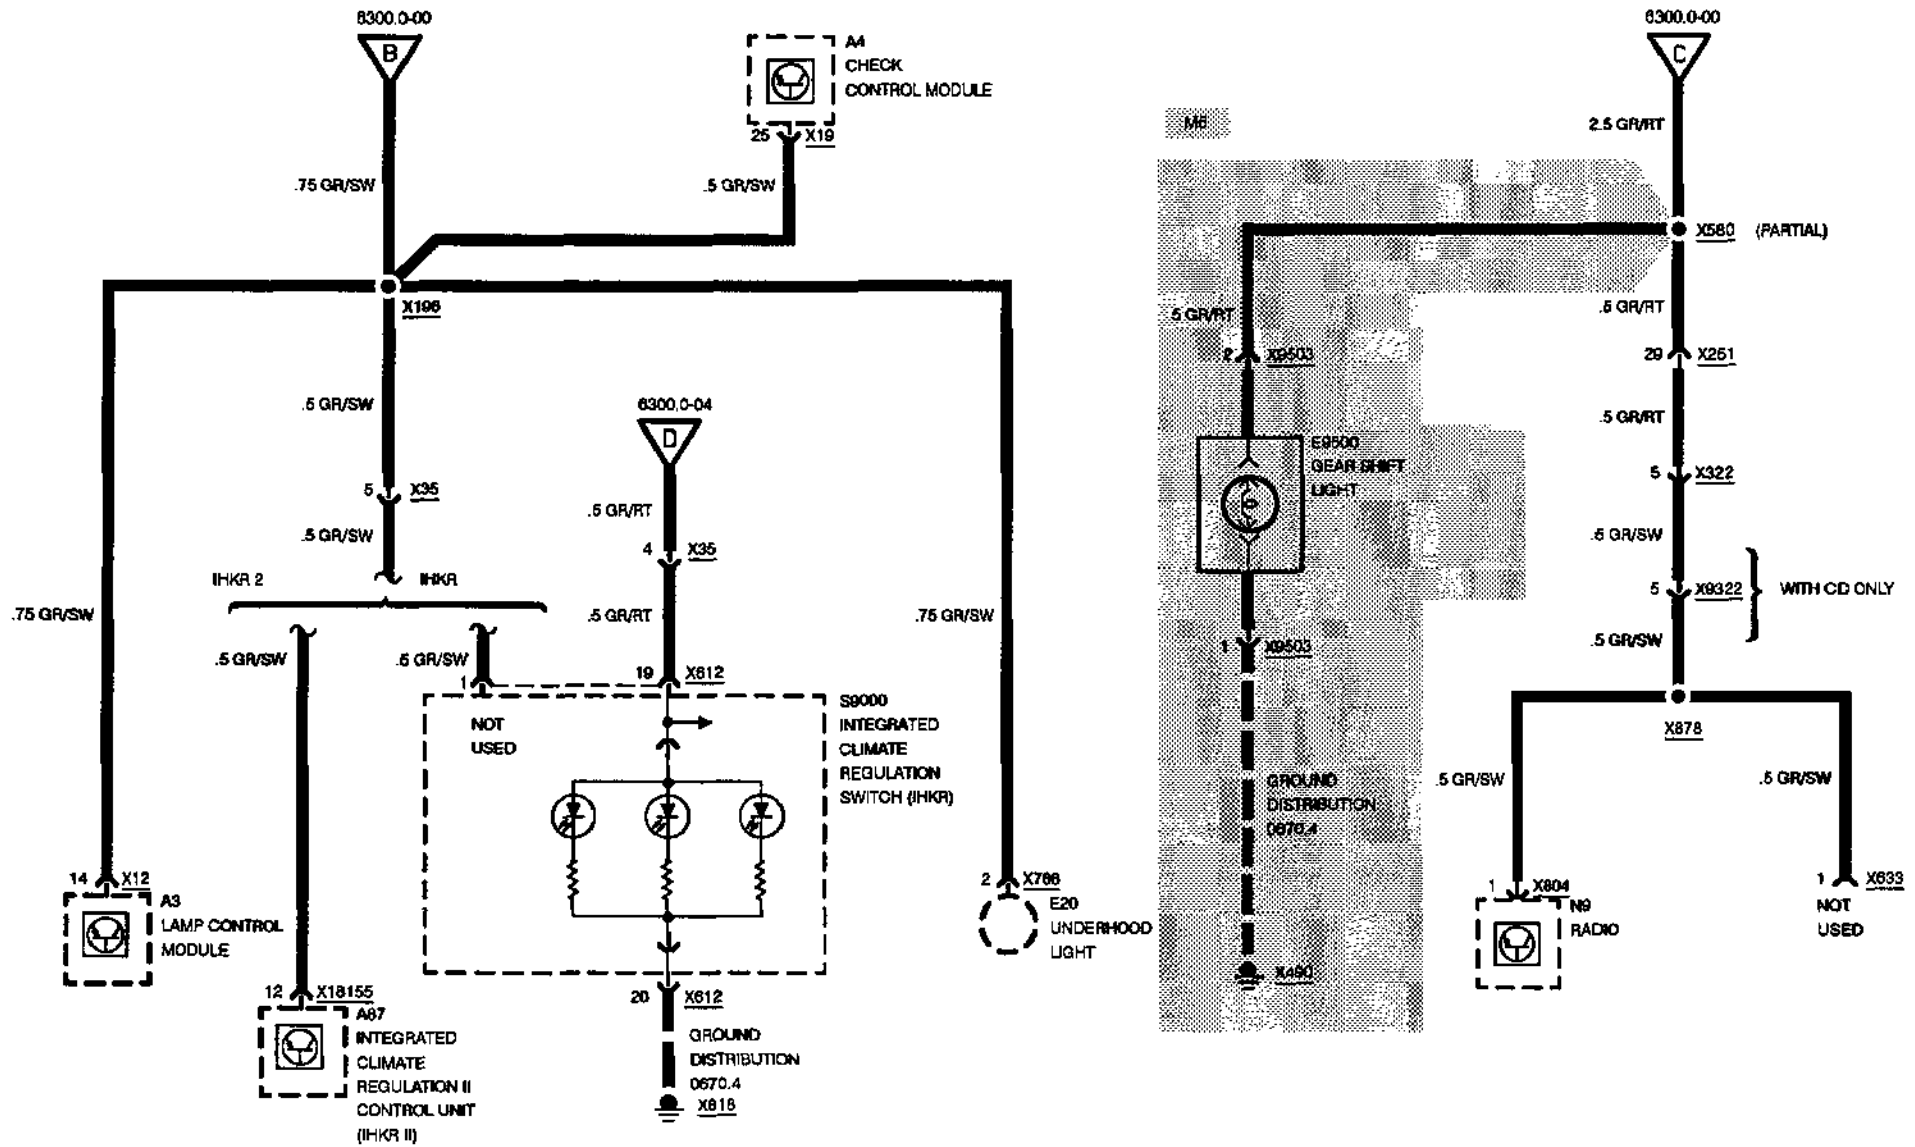



LIGHT SWITCH DETAILS

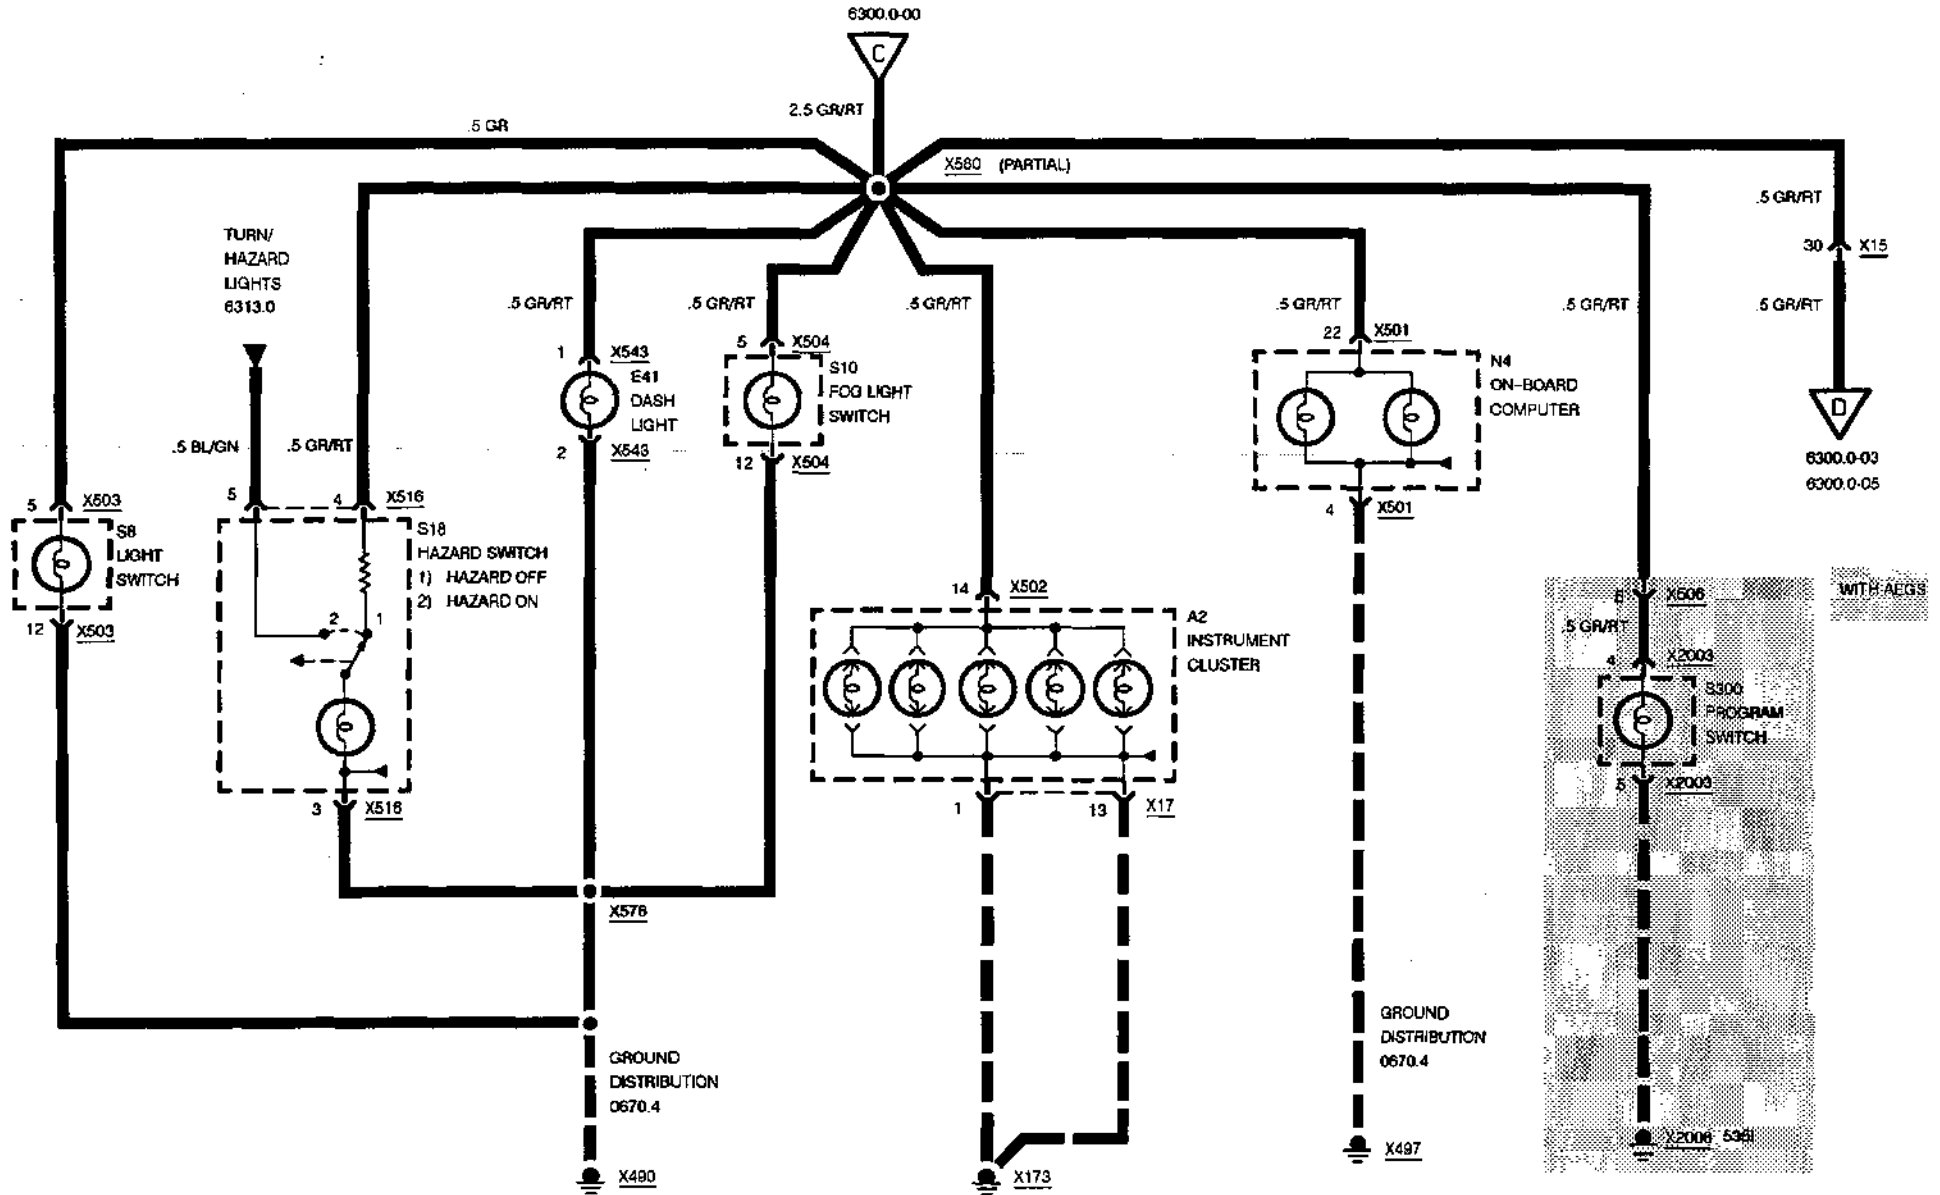




LIGHT SWITCH DETAILS


IHKR 2

POT IN RUN AND START

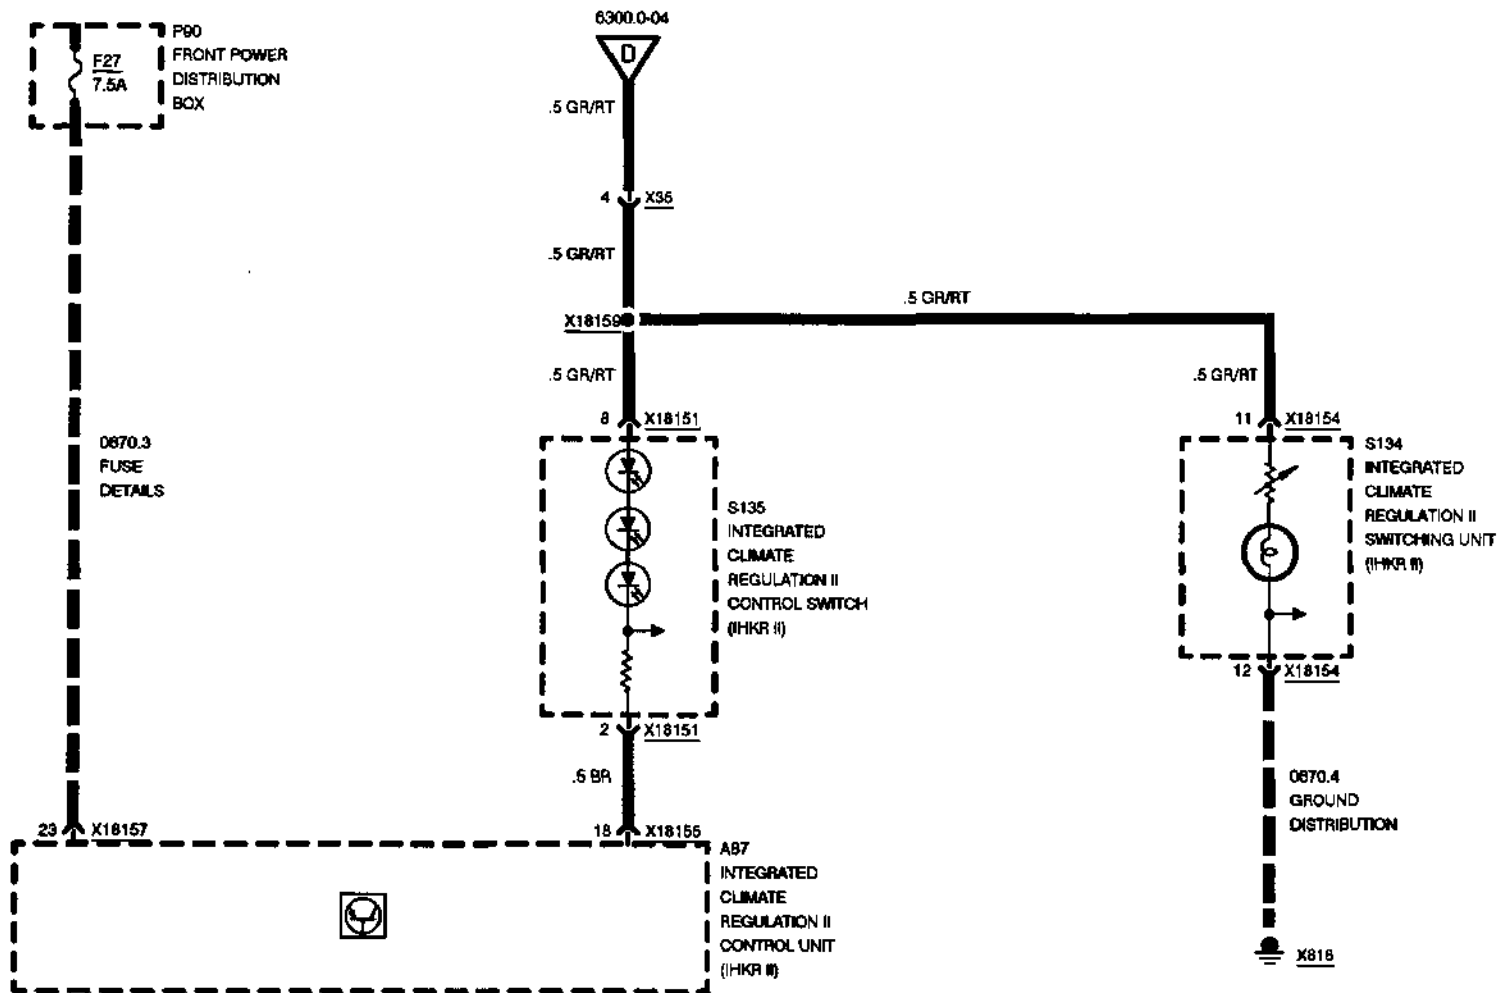




LAMP MONITOR (LKM)

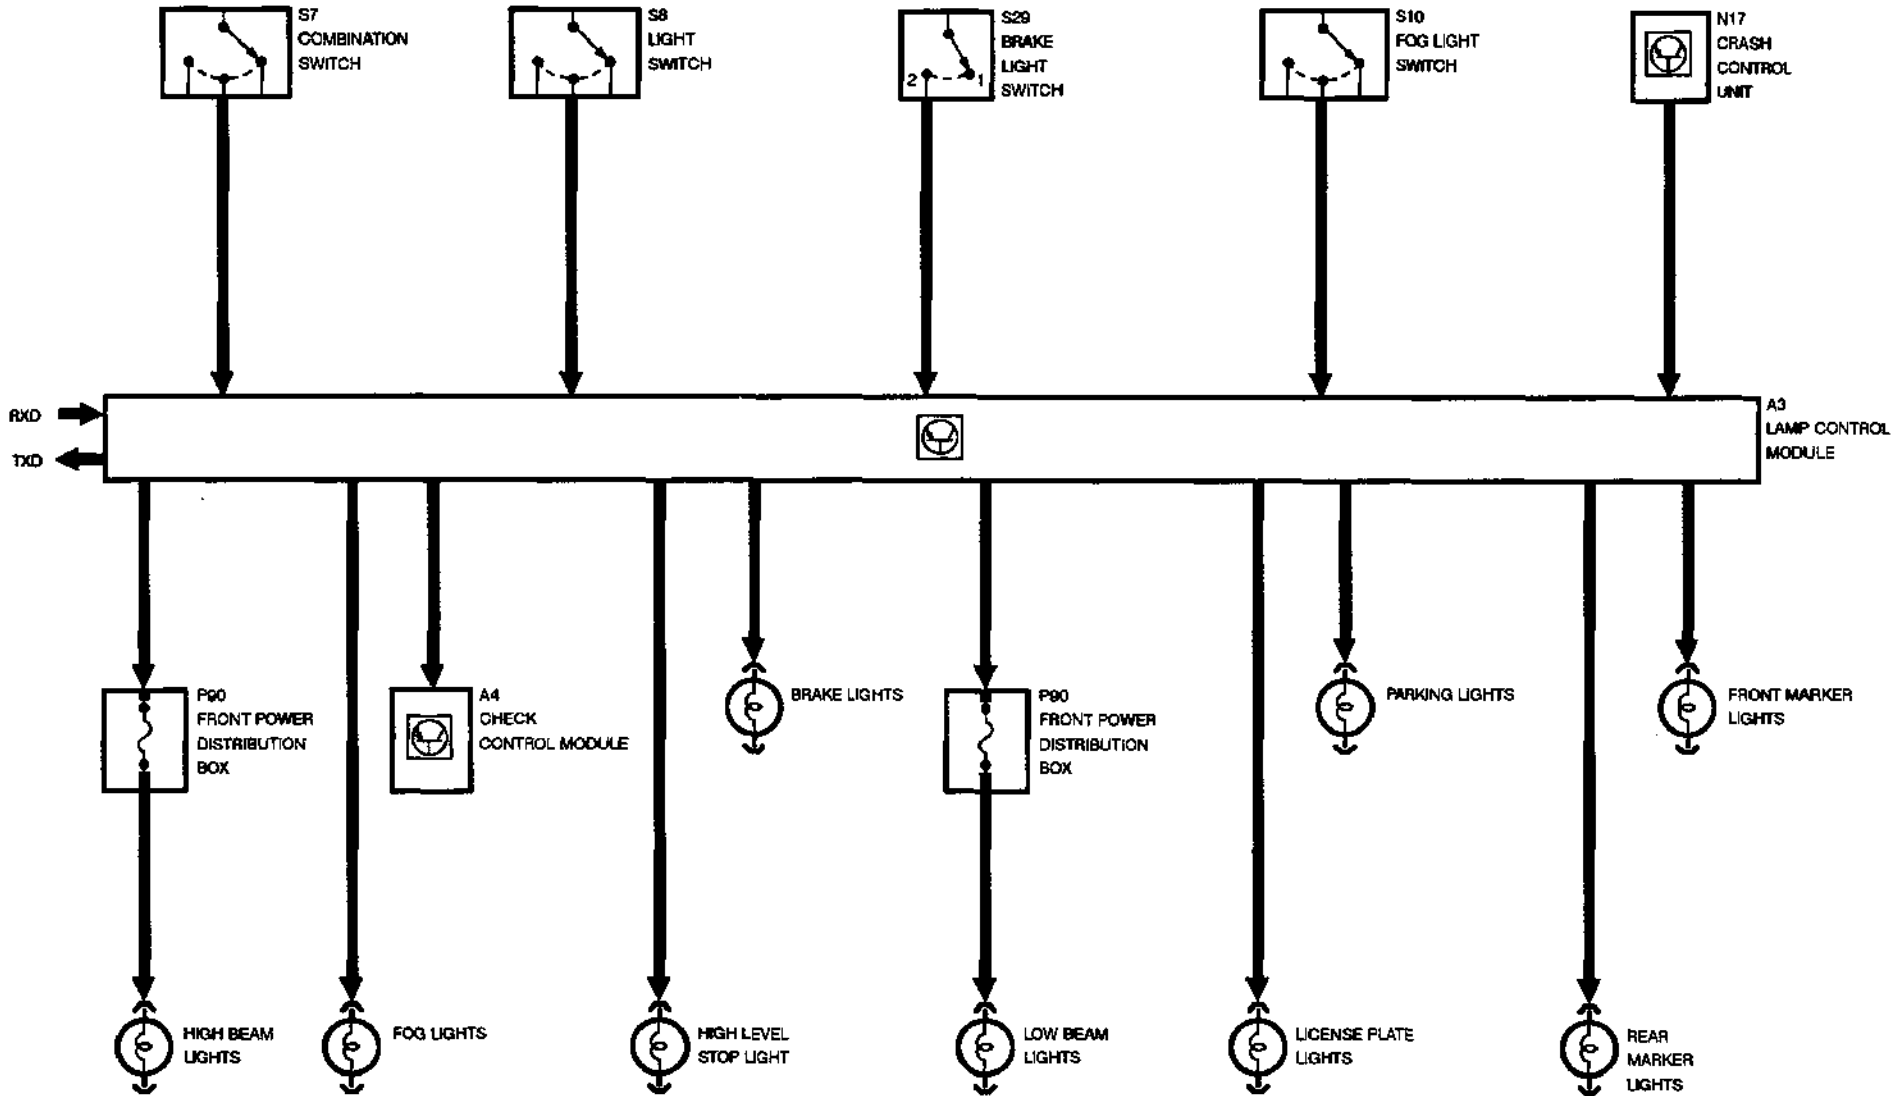


6301.0

LAMP MONITOR (LKM)

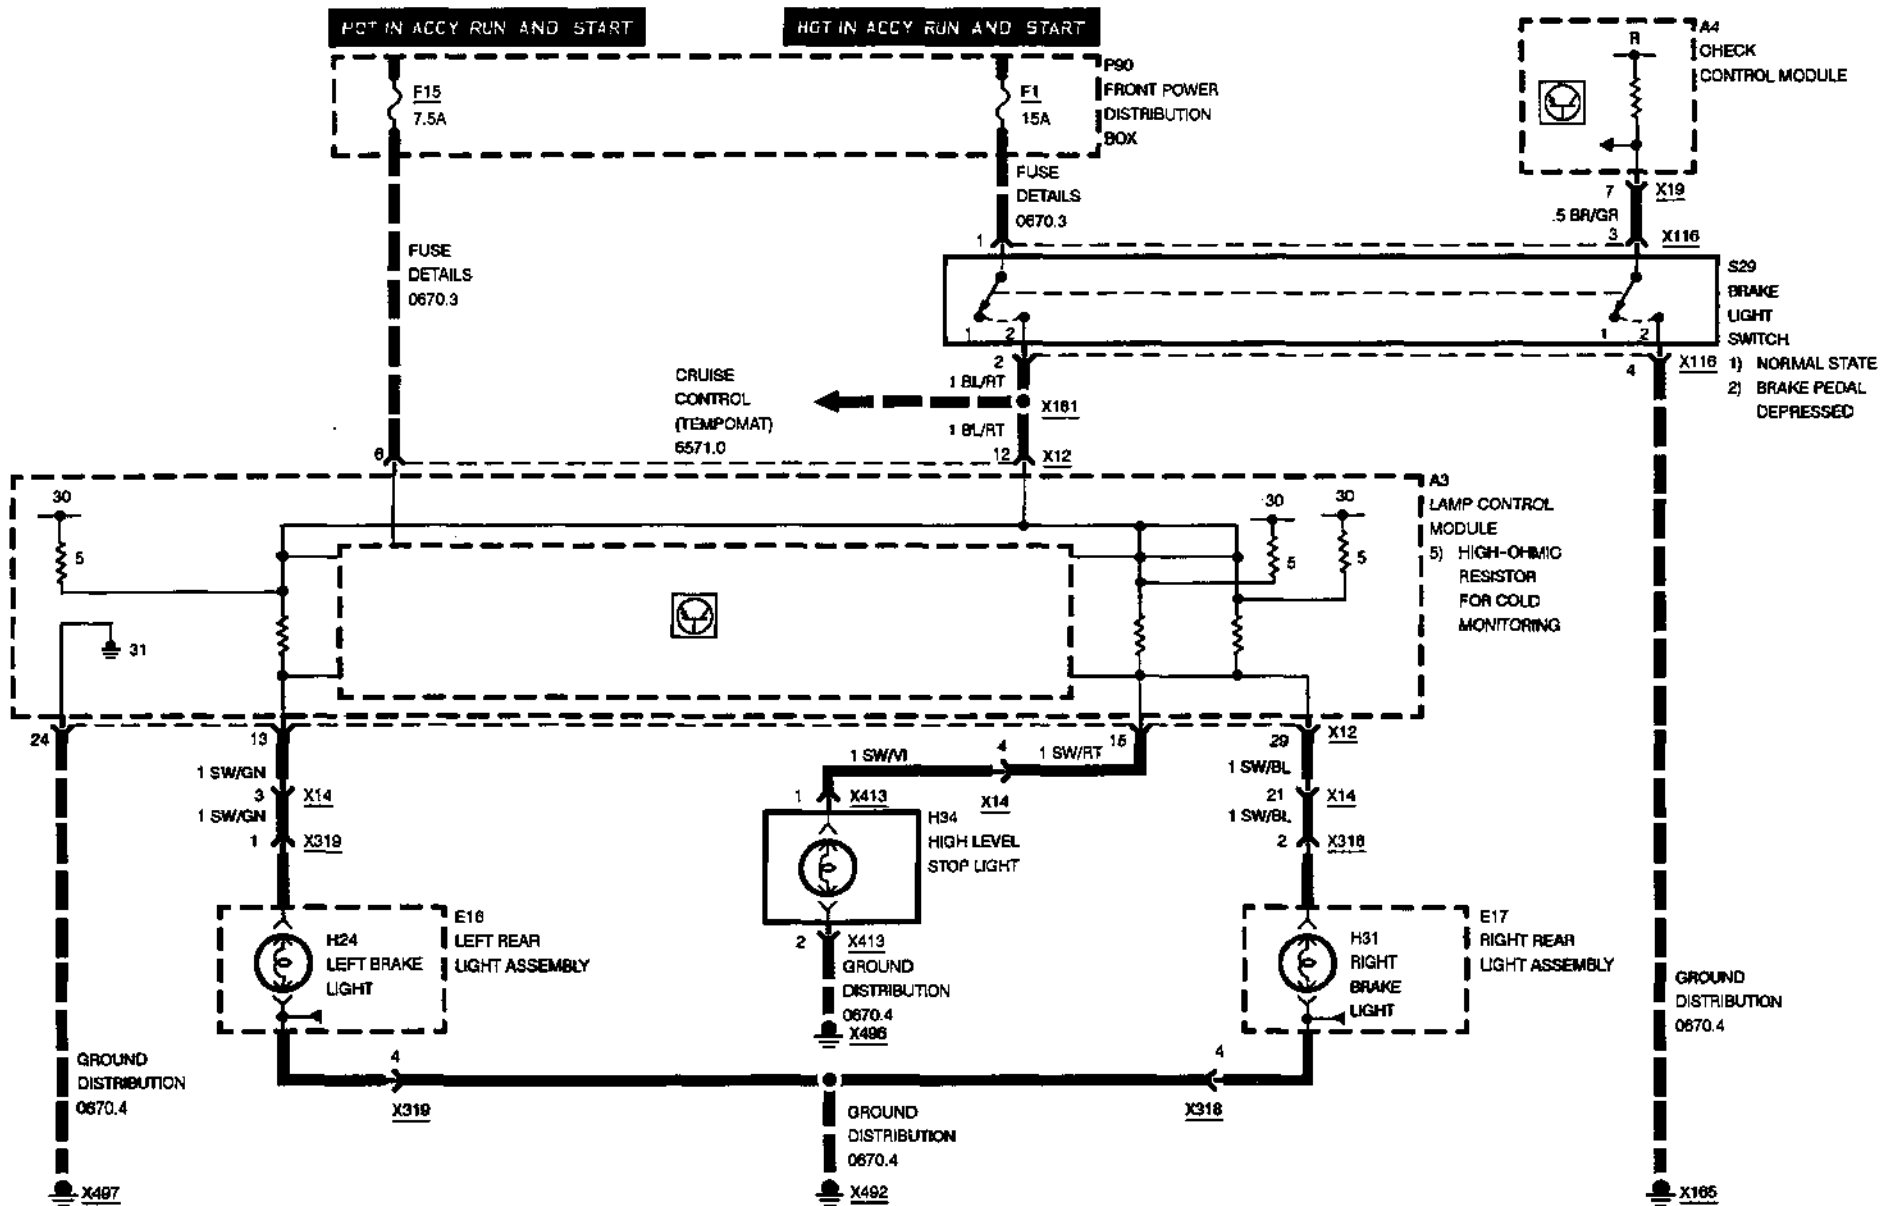




LAMP MONITOR (LKM)

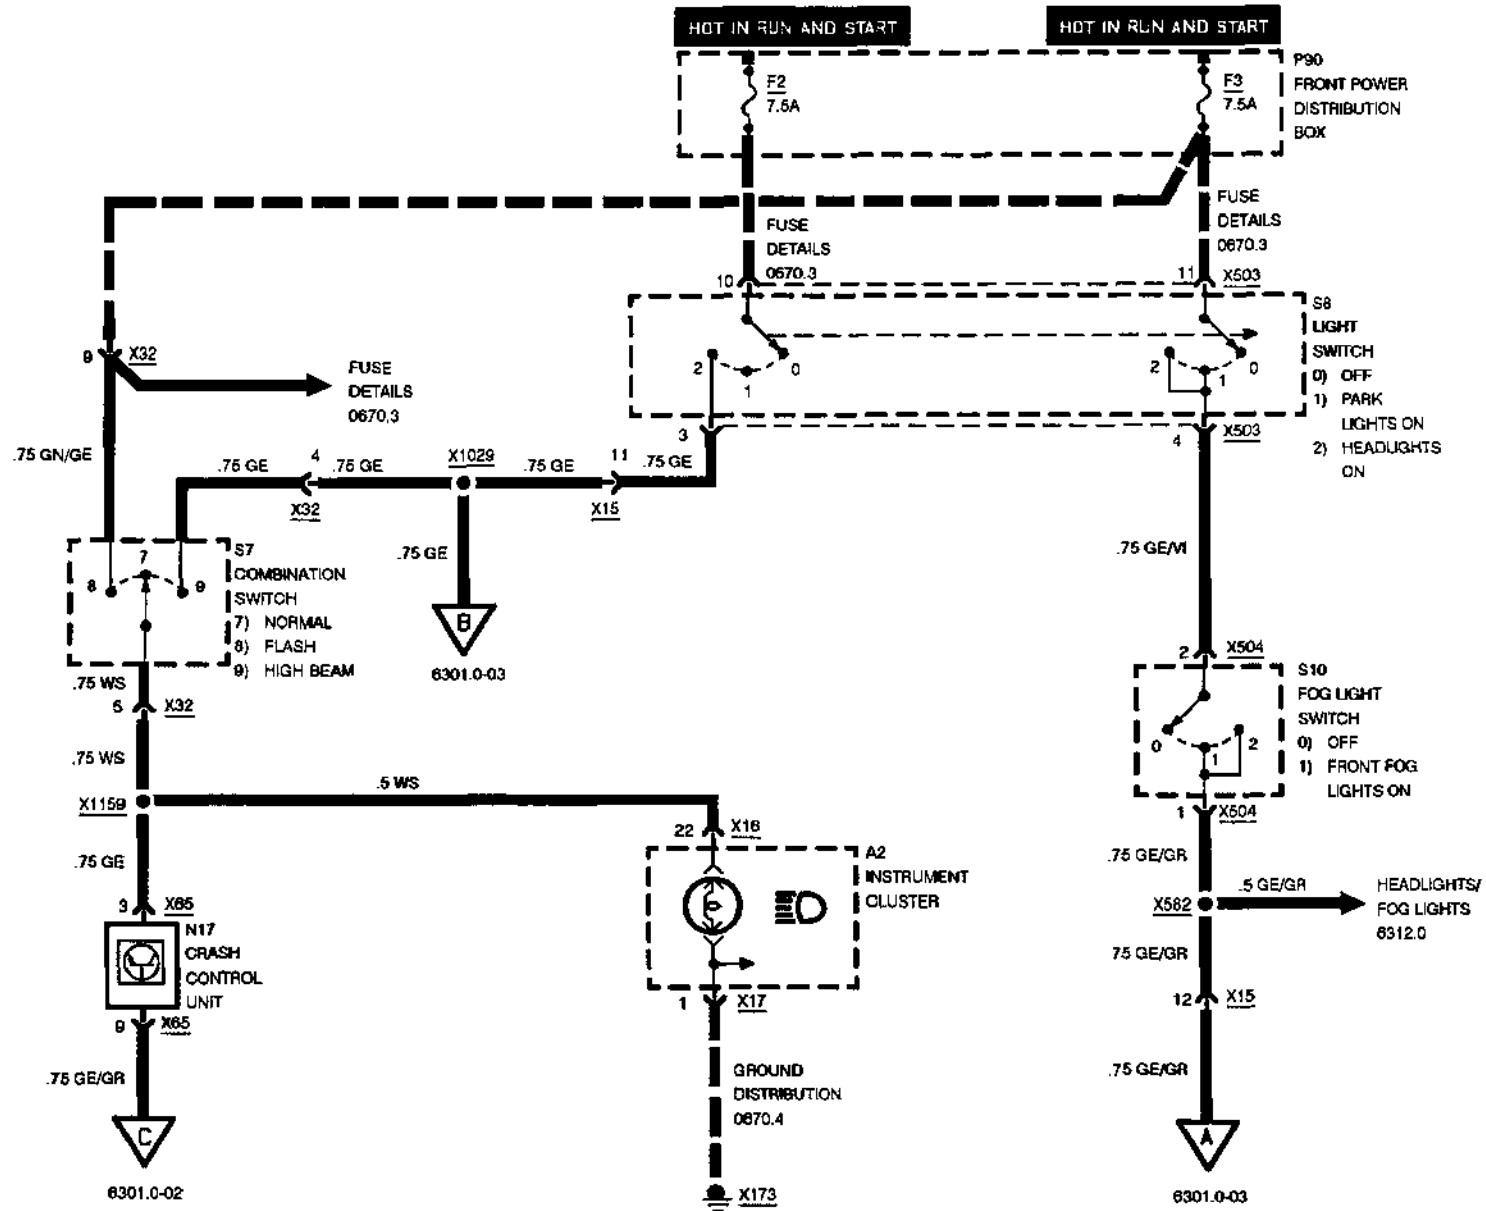




LAMP MONITOR (LKM)

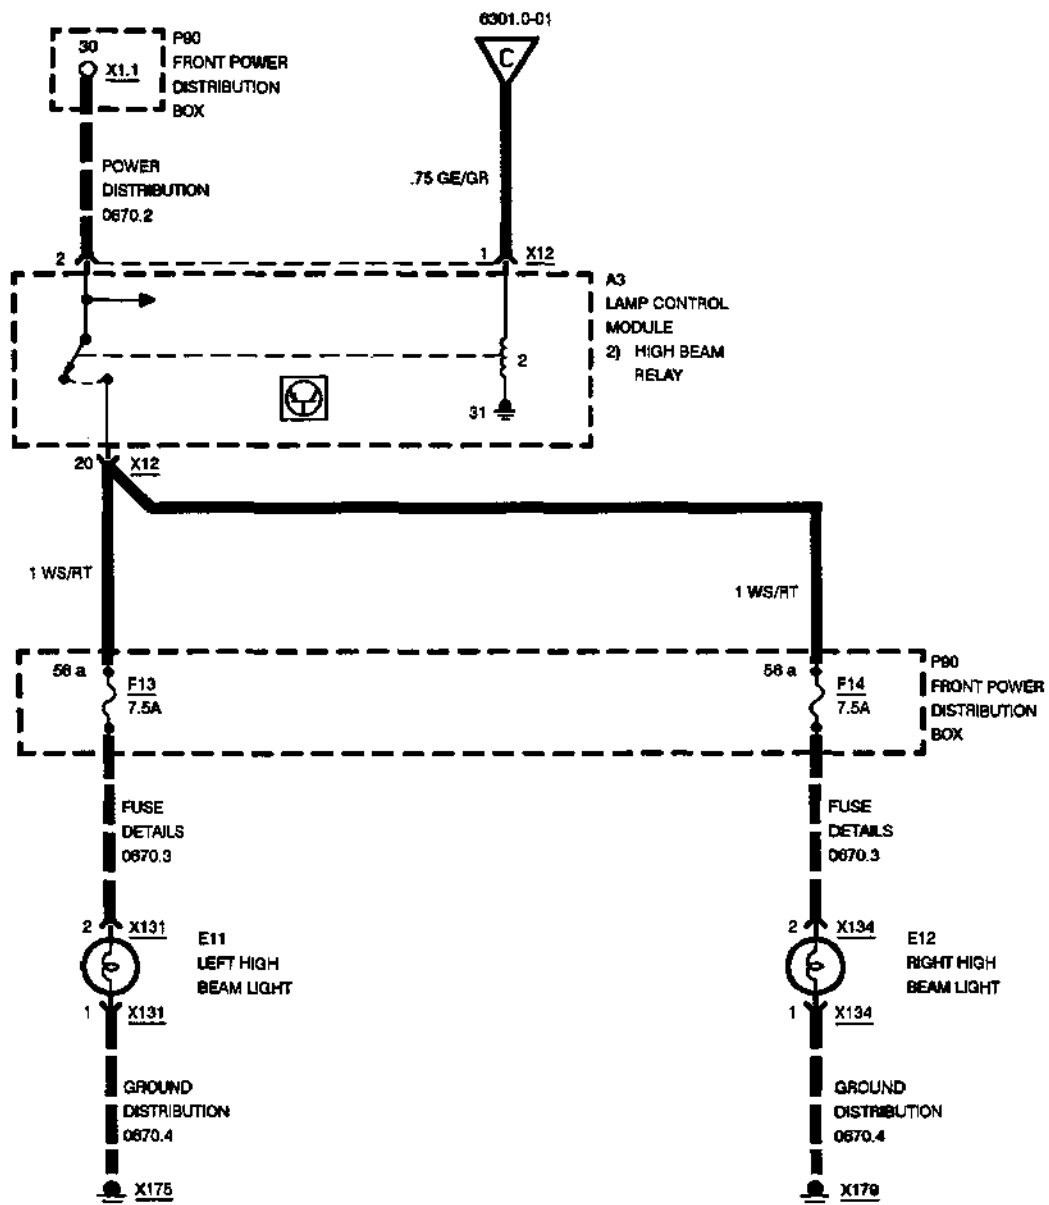


LAMP MONITOR (LKM)

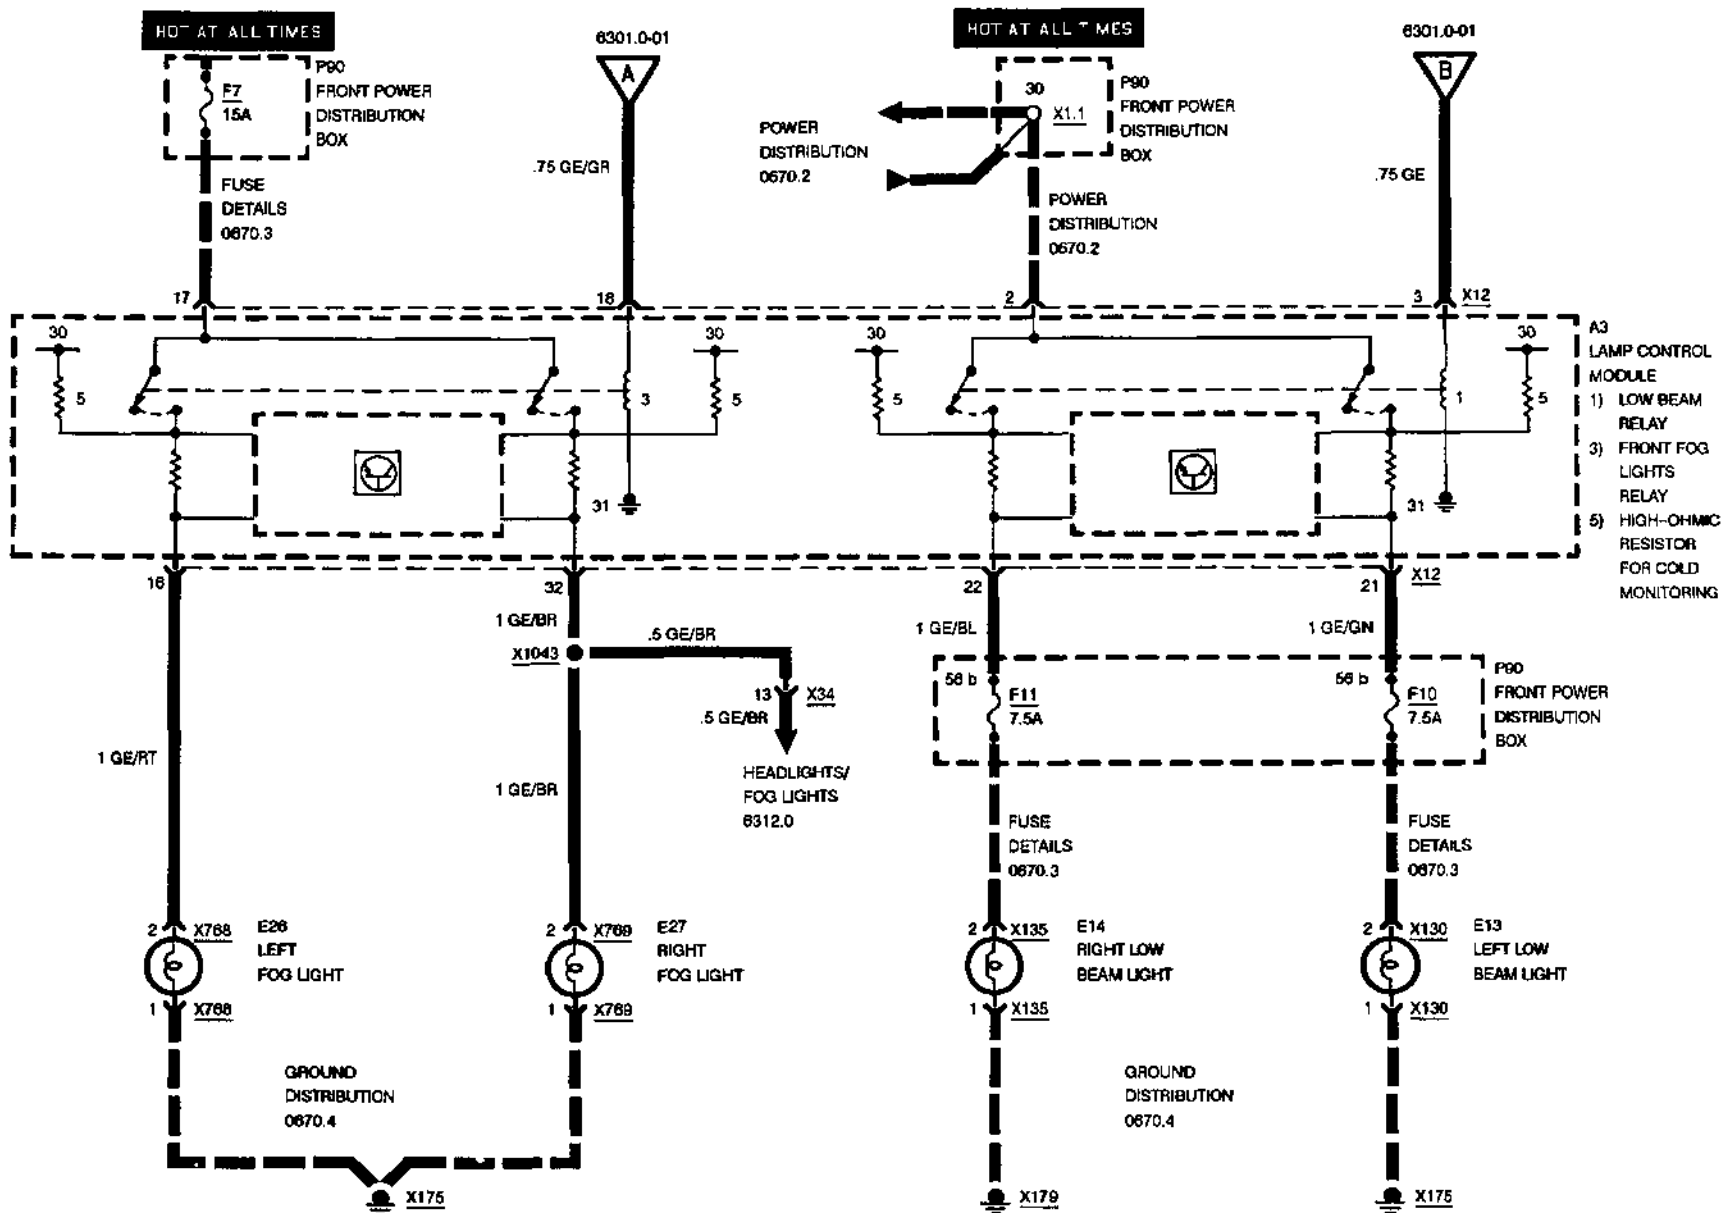




LAMP MONITOR (LKM)

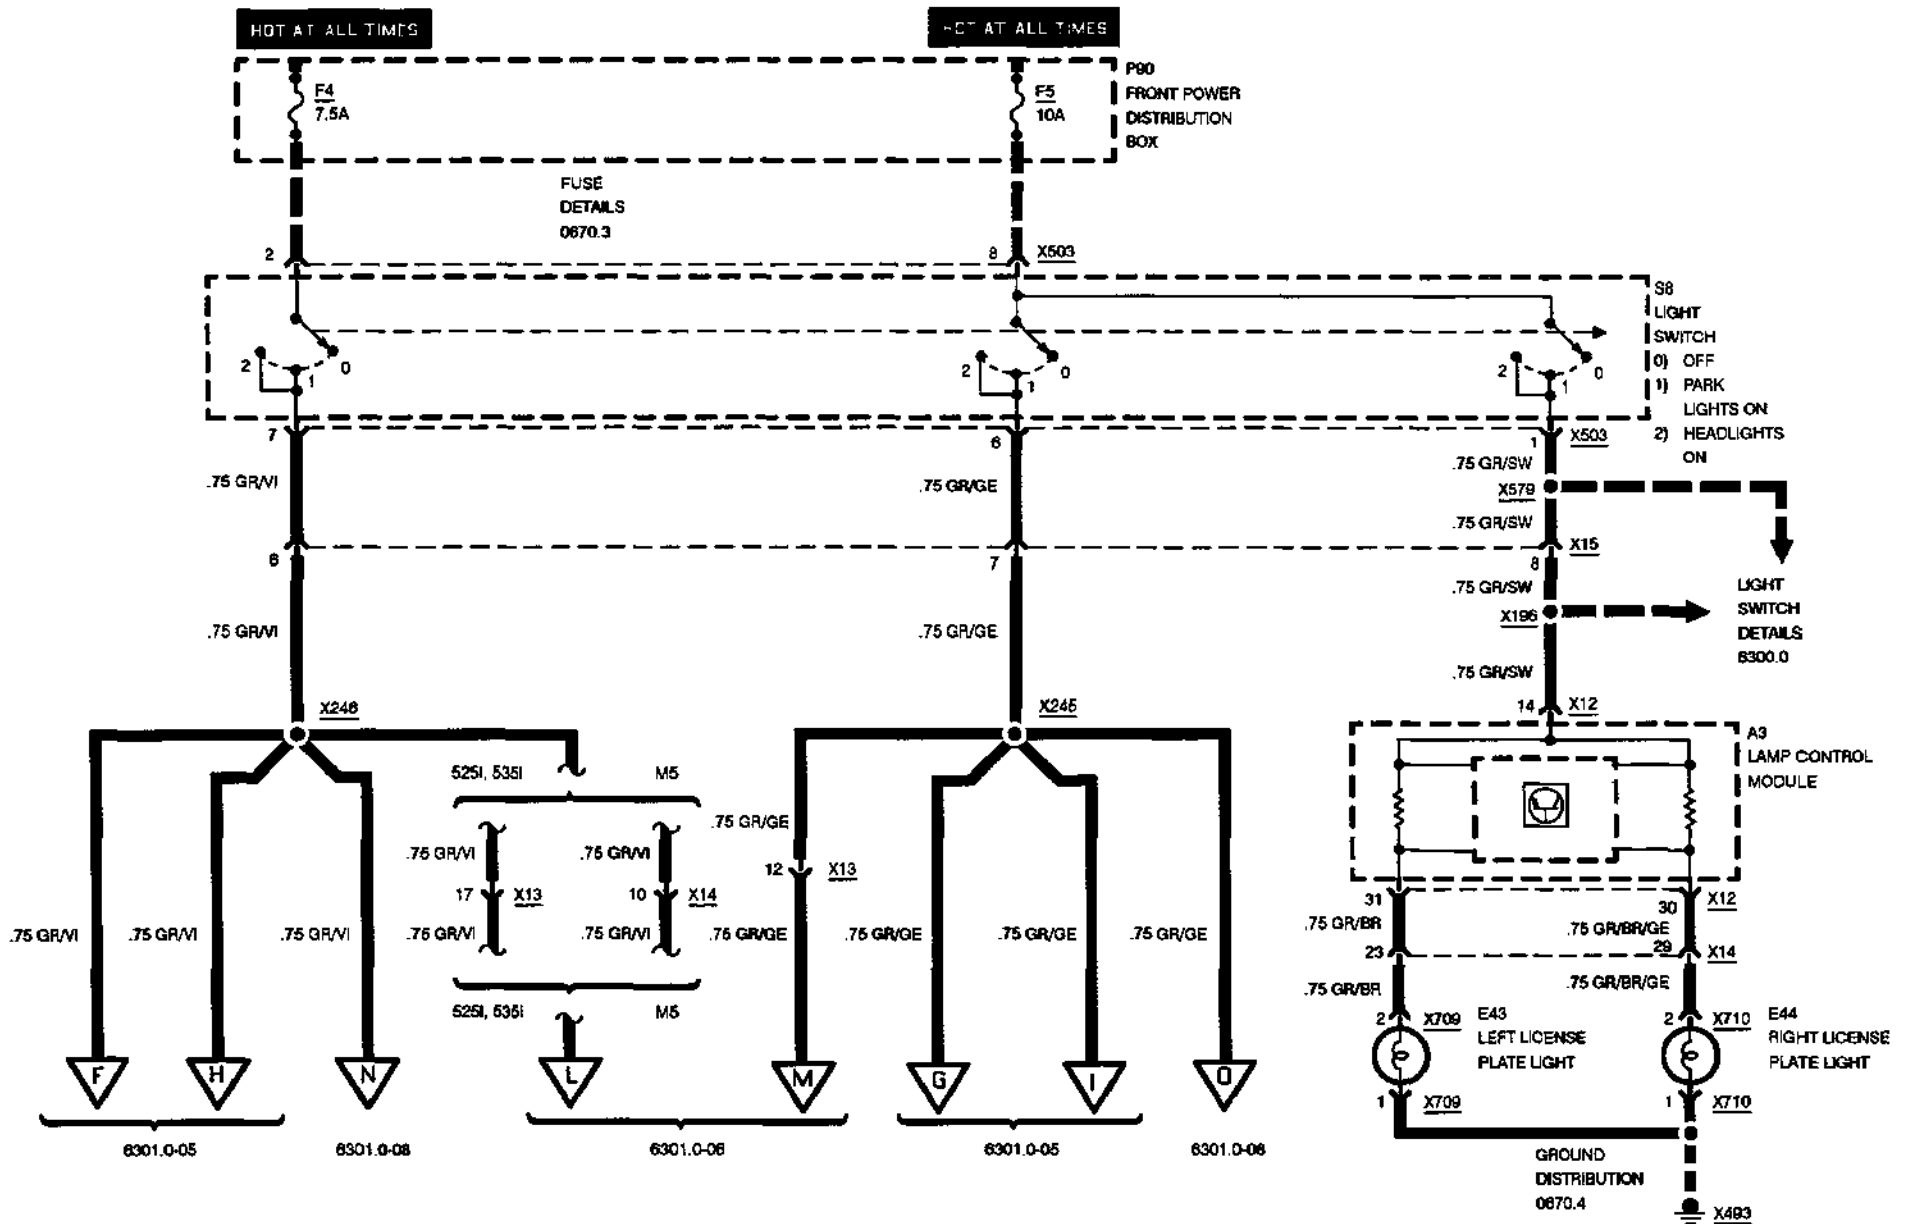




LAMP MONITOR (LKM)

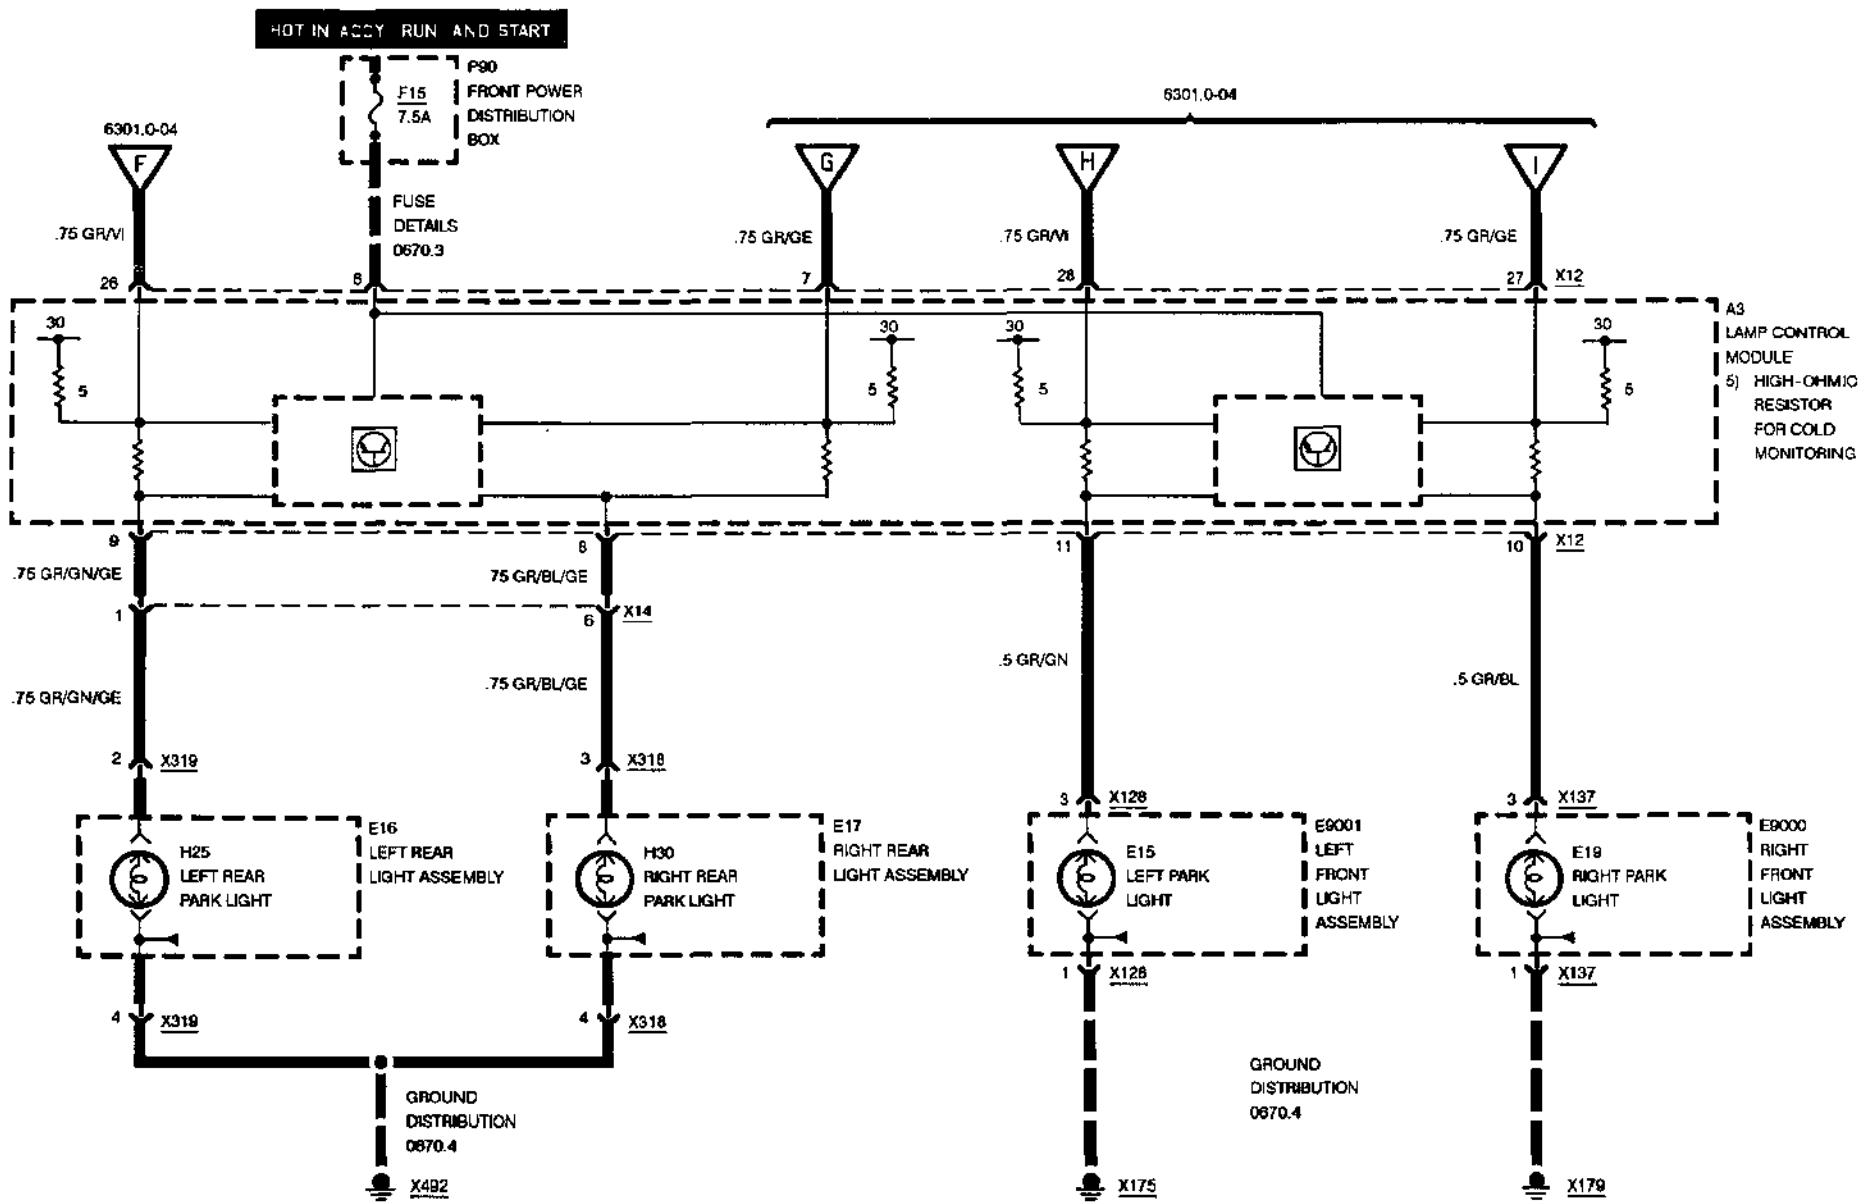




LAMP MONITOR (LKM)

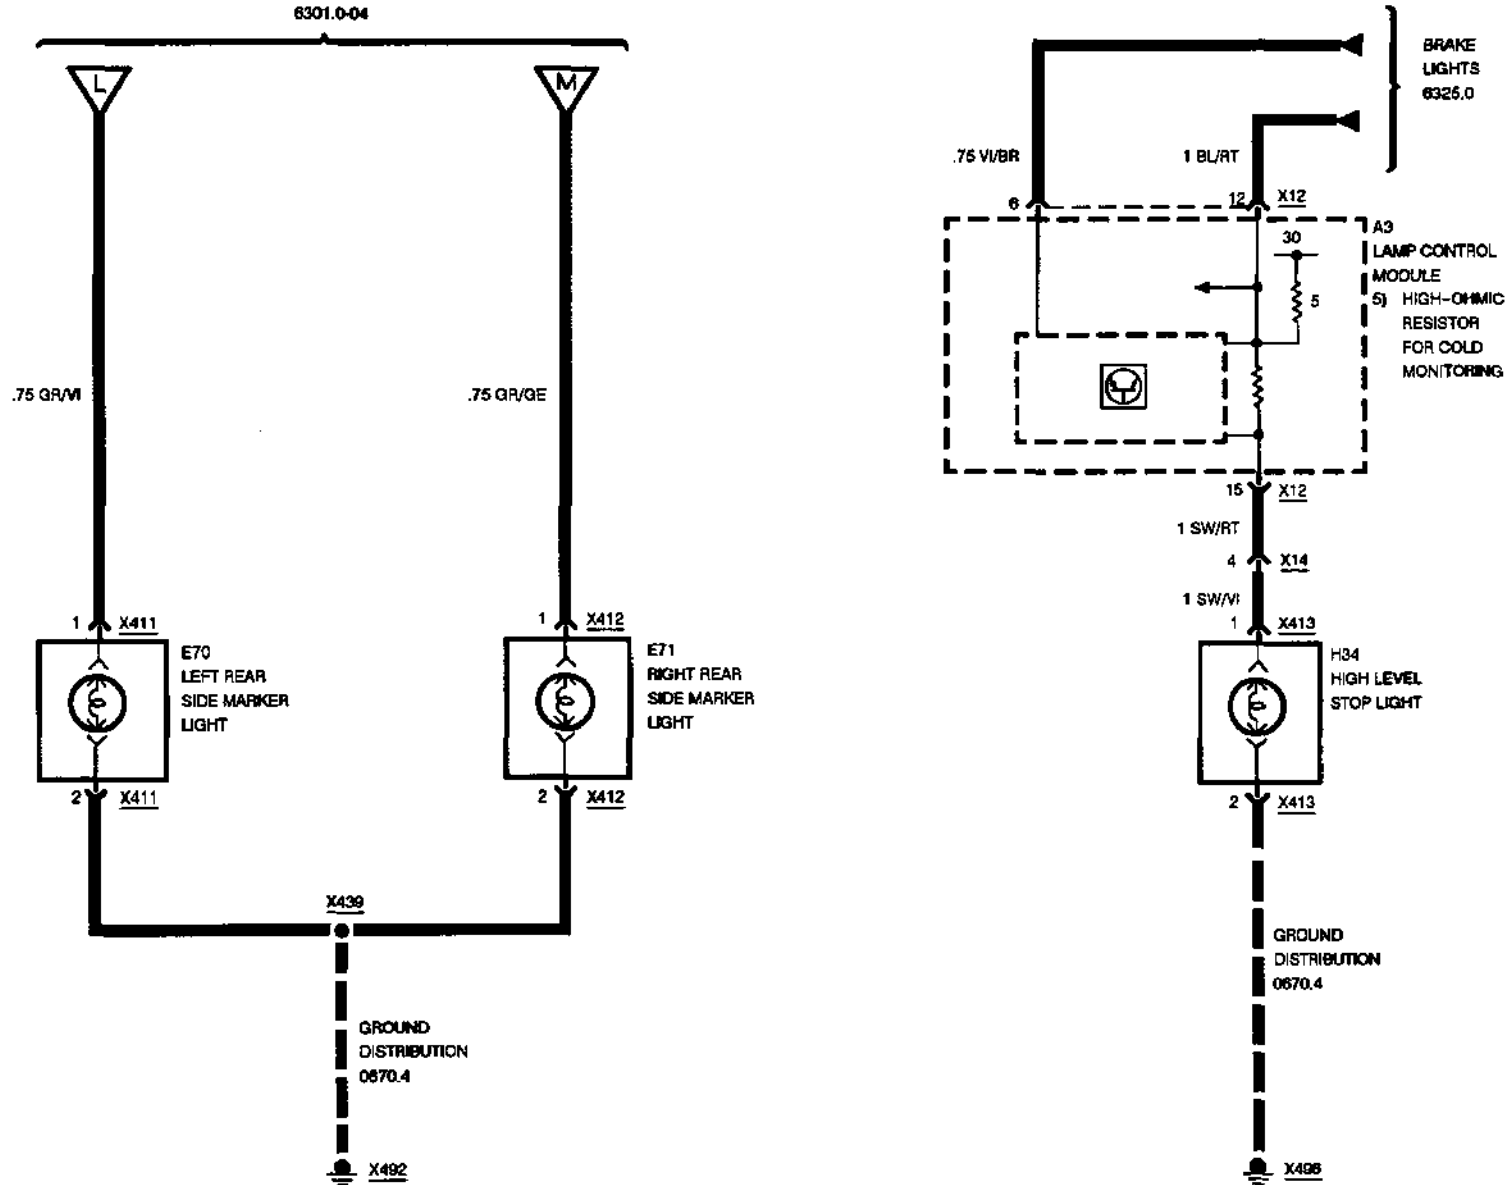




LAMP MONITOR (LKM)

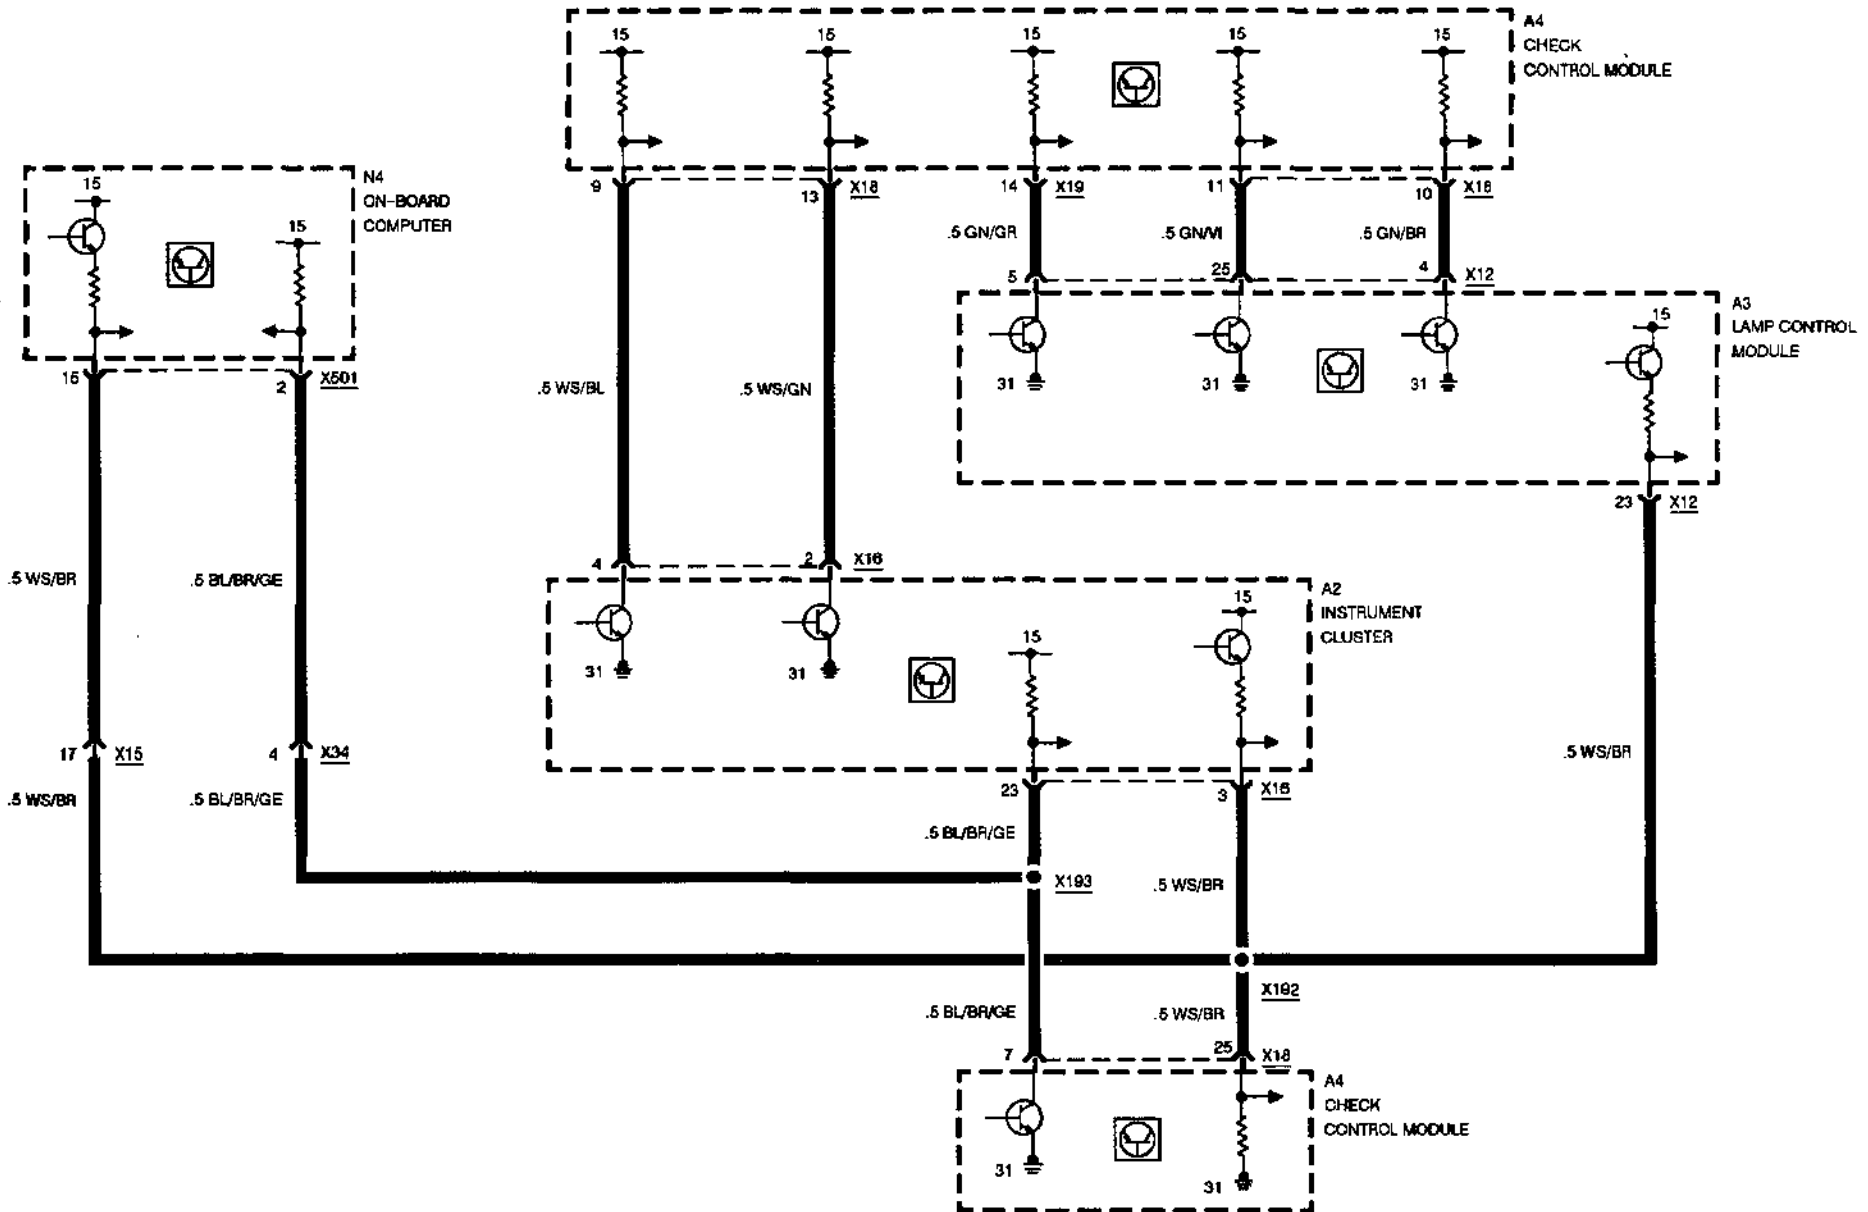




LAMP MONITOR (LKM)

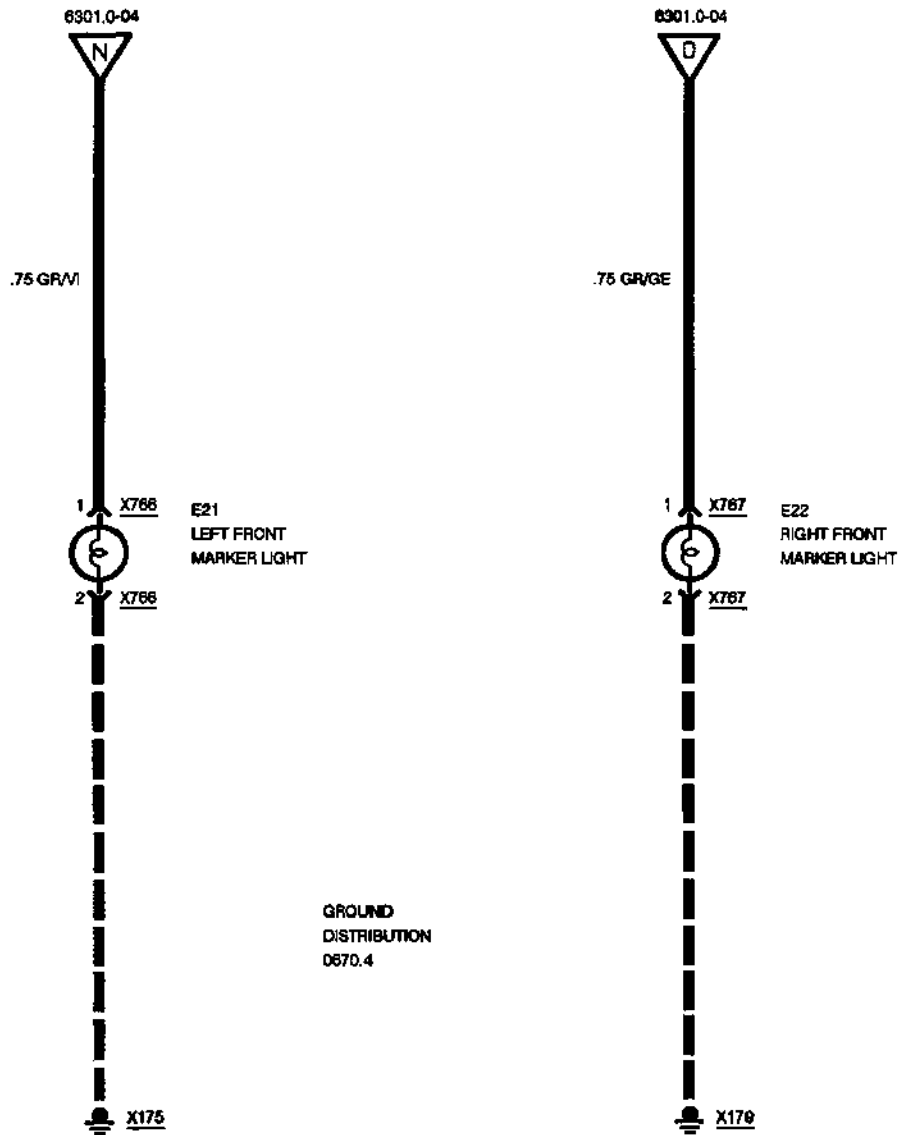


HEADLIGHTS/ FOG LIGHTS

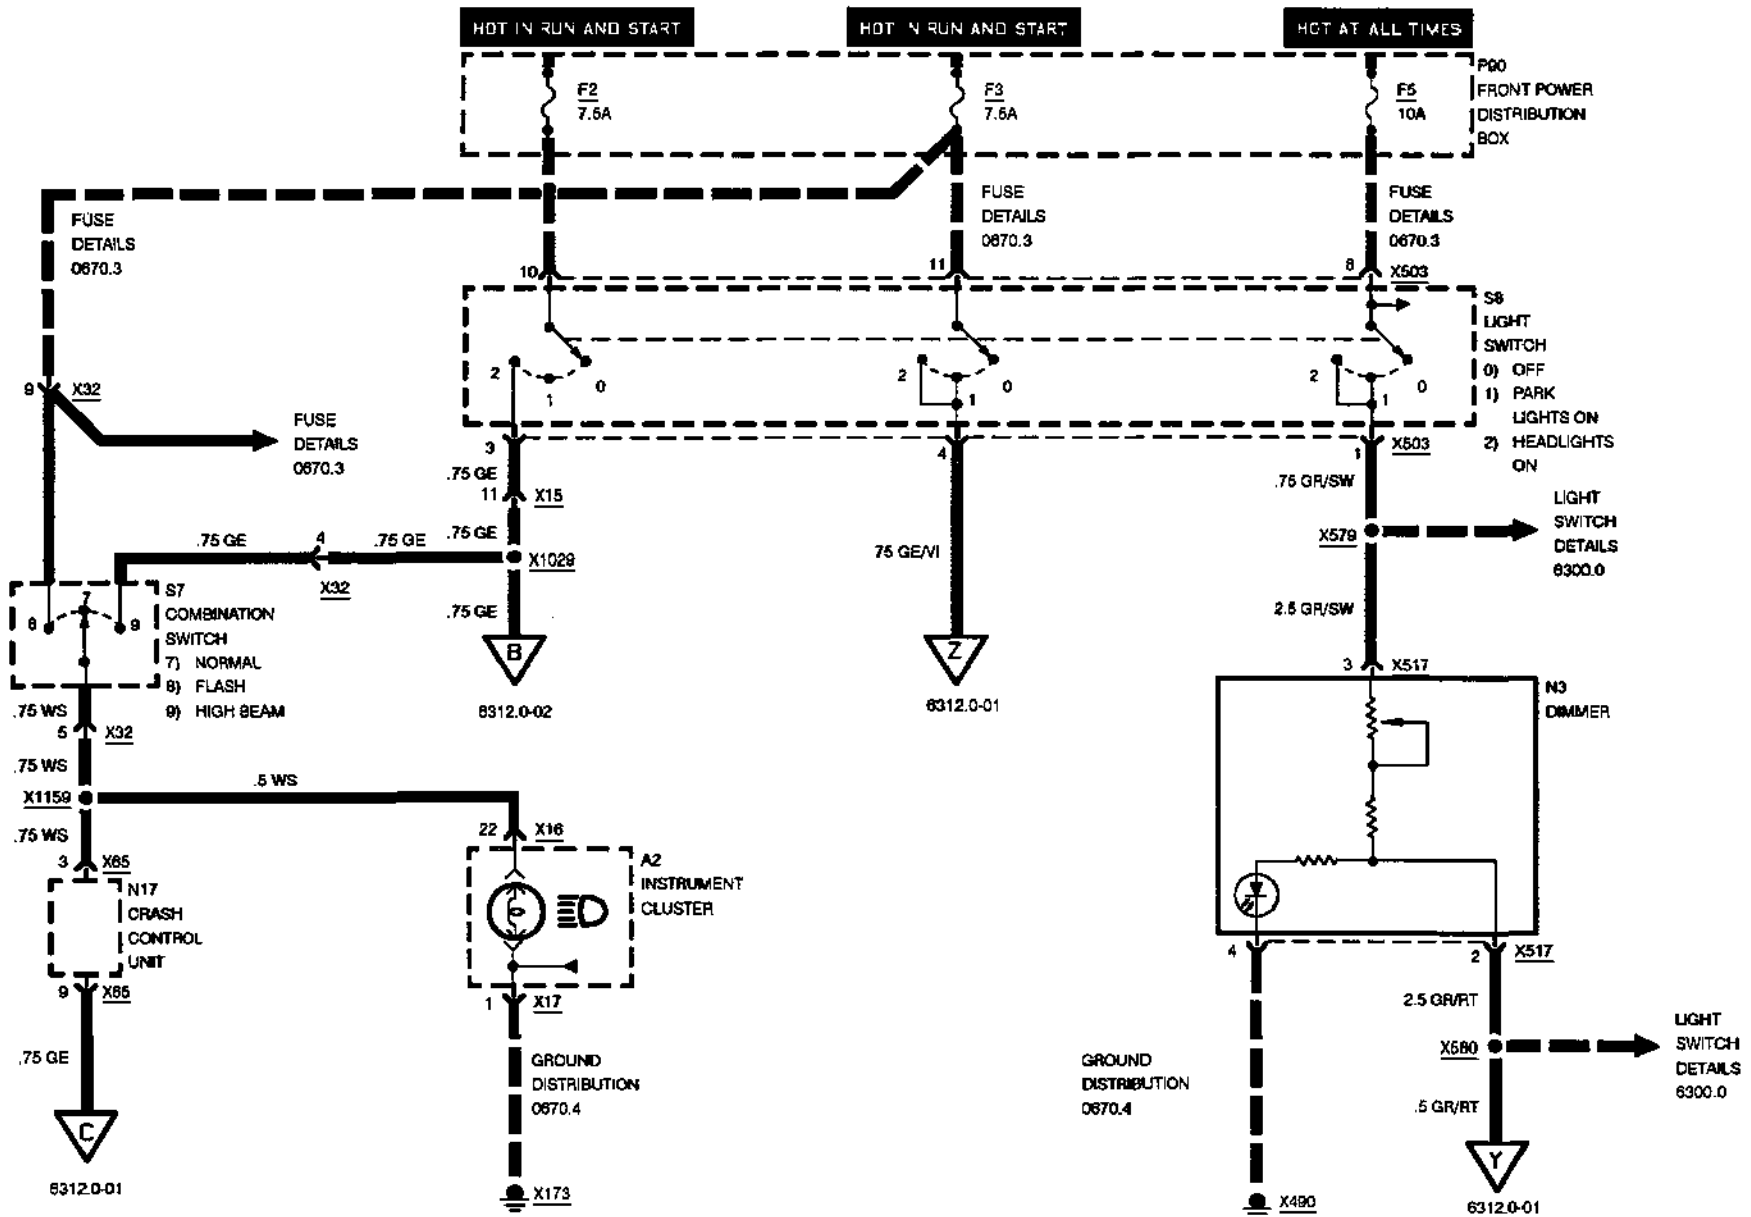




HEADLIGHTS/ FOG LIGHTS

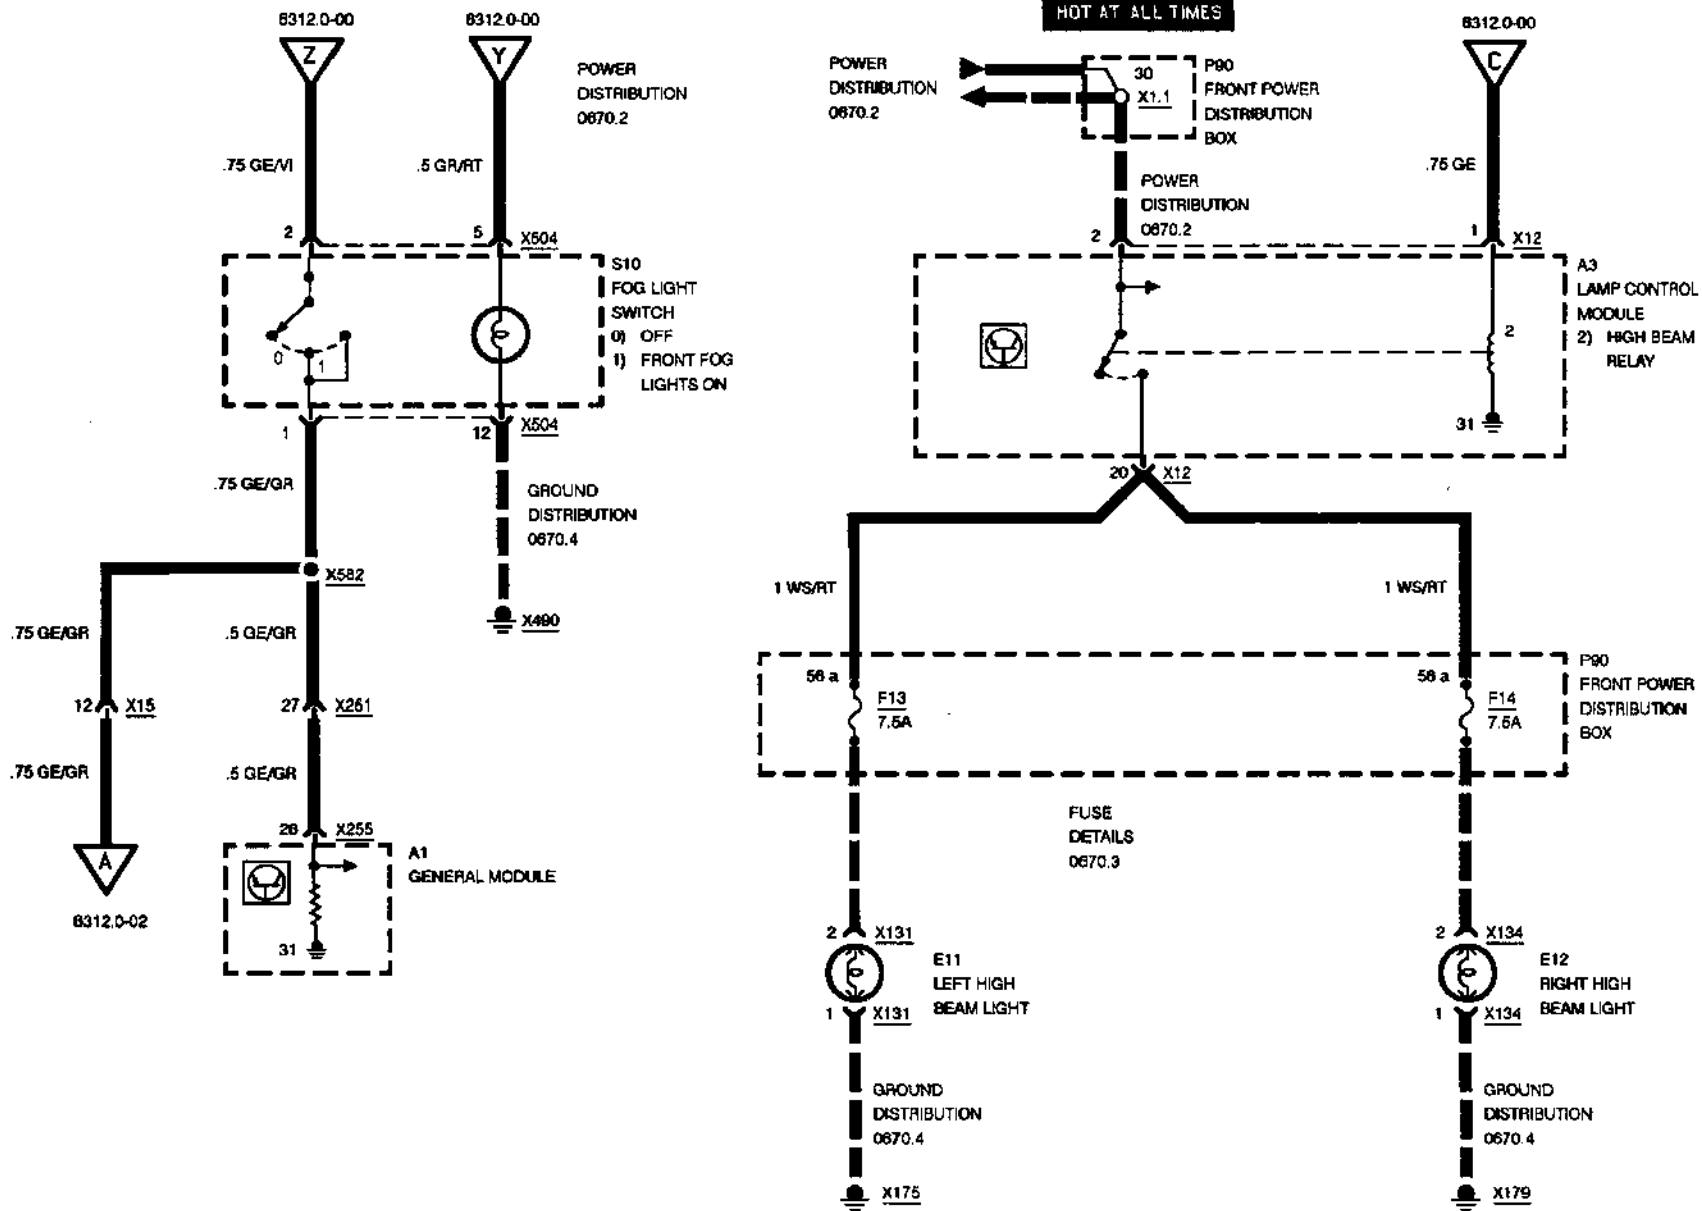



HEADLIGHTS/ FOG LIGHTS

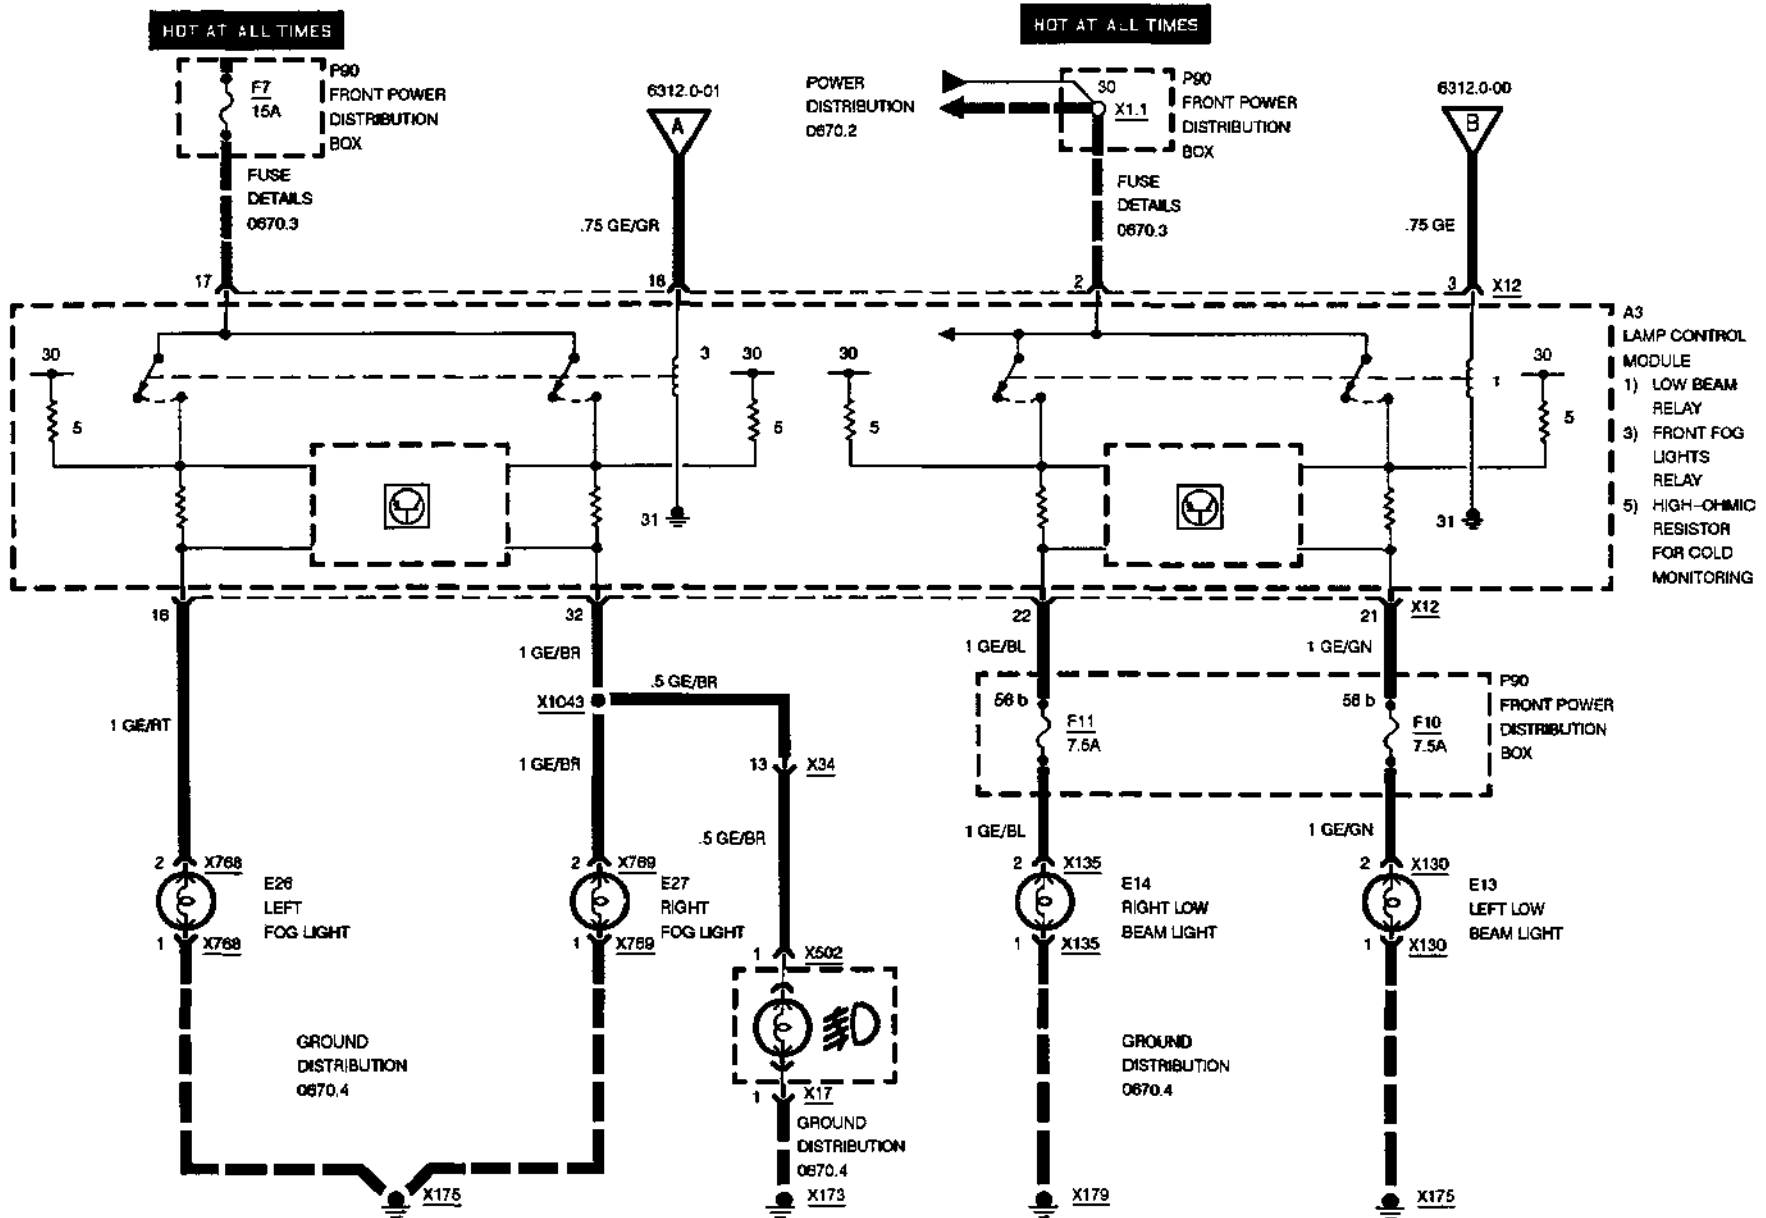




TURN/ HAZARD LIGHTS

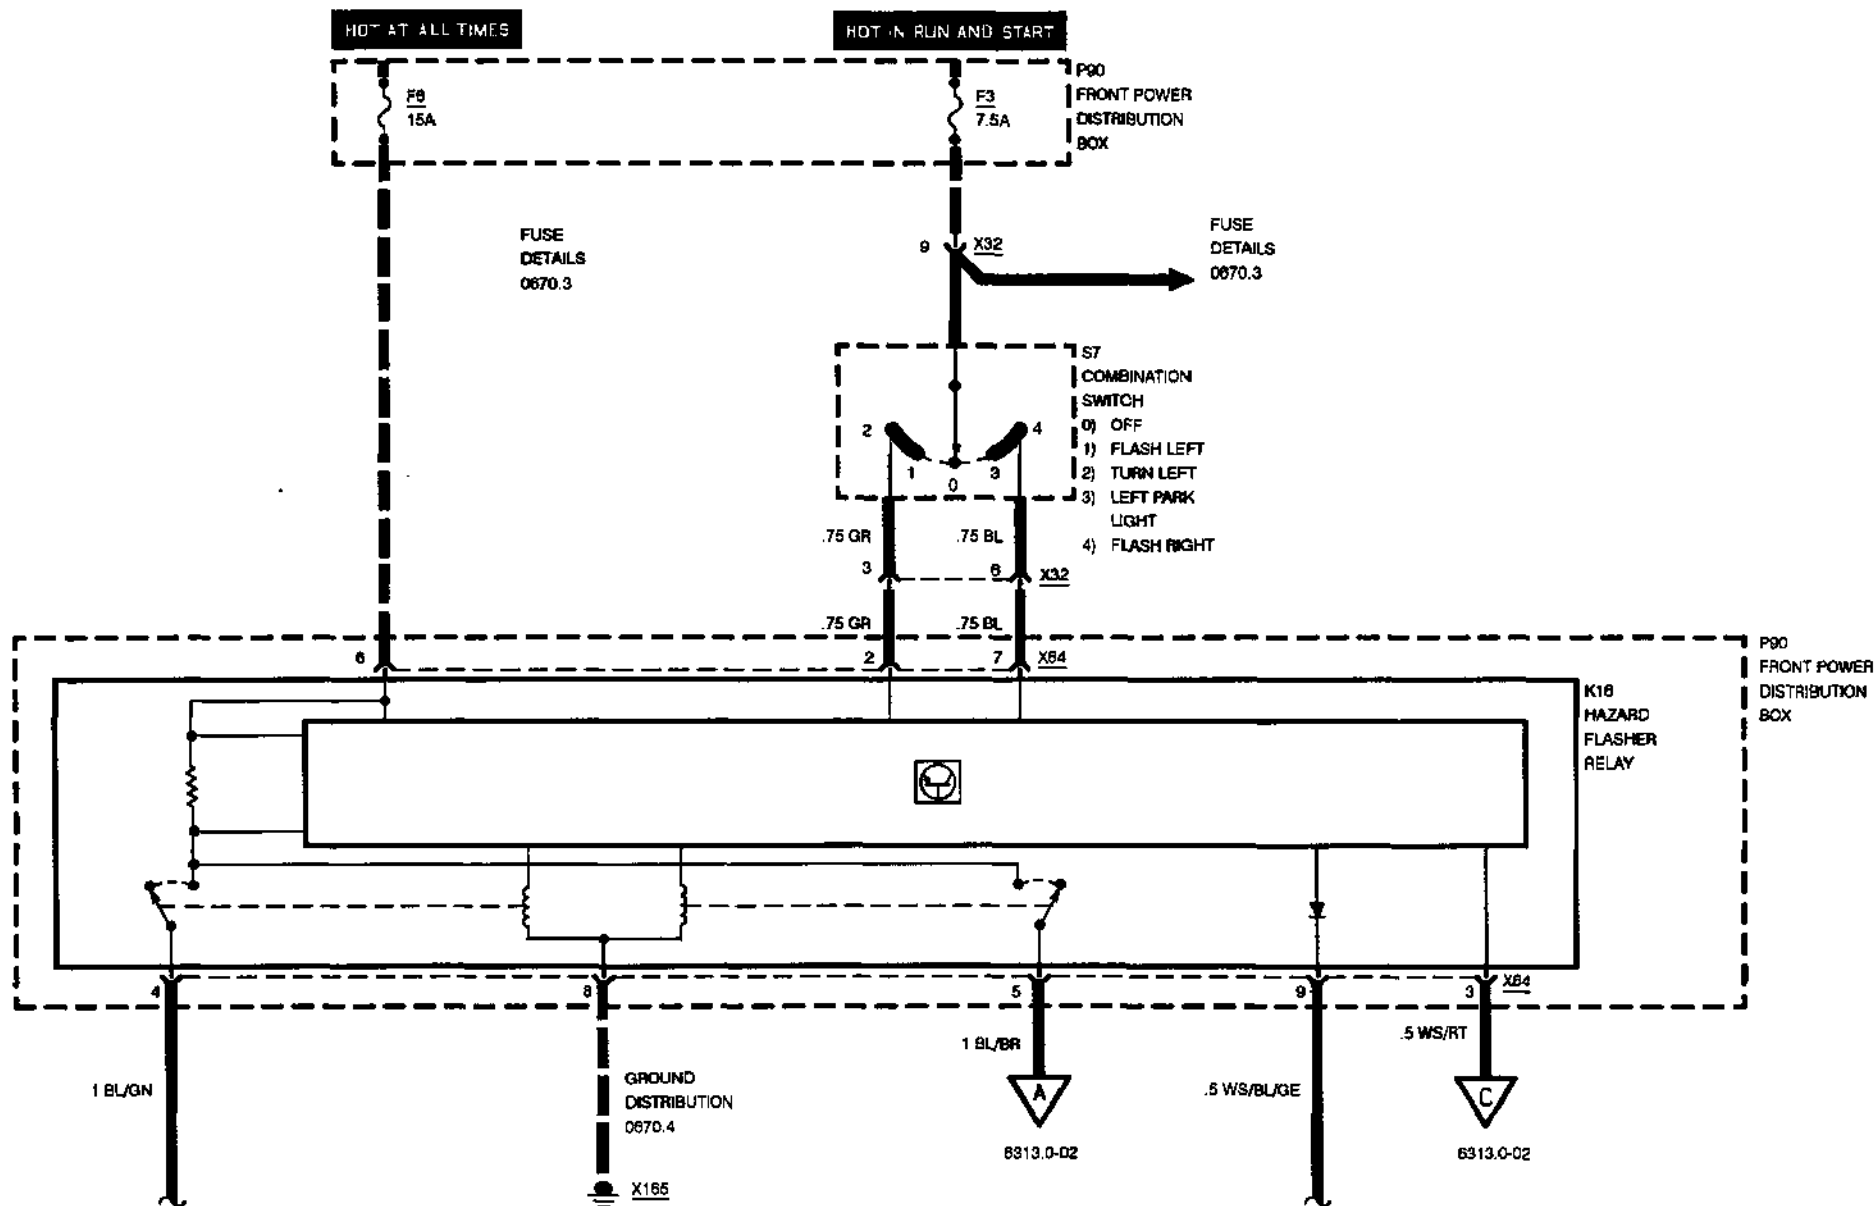

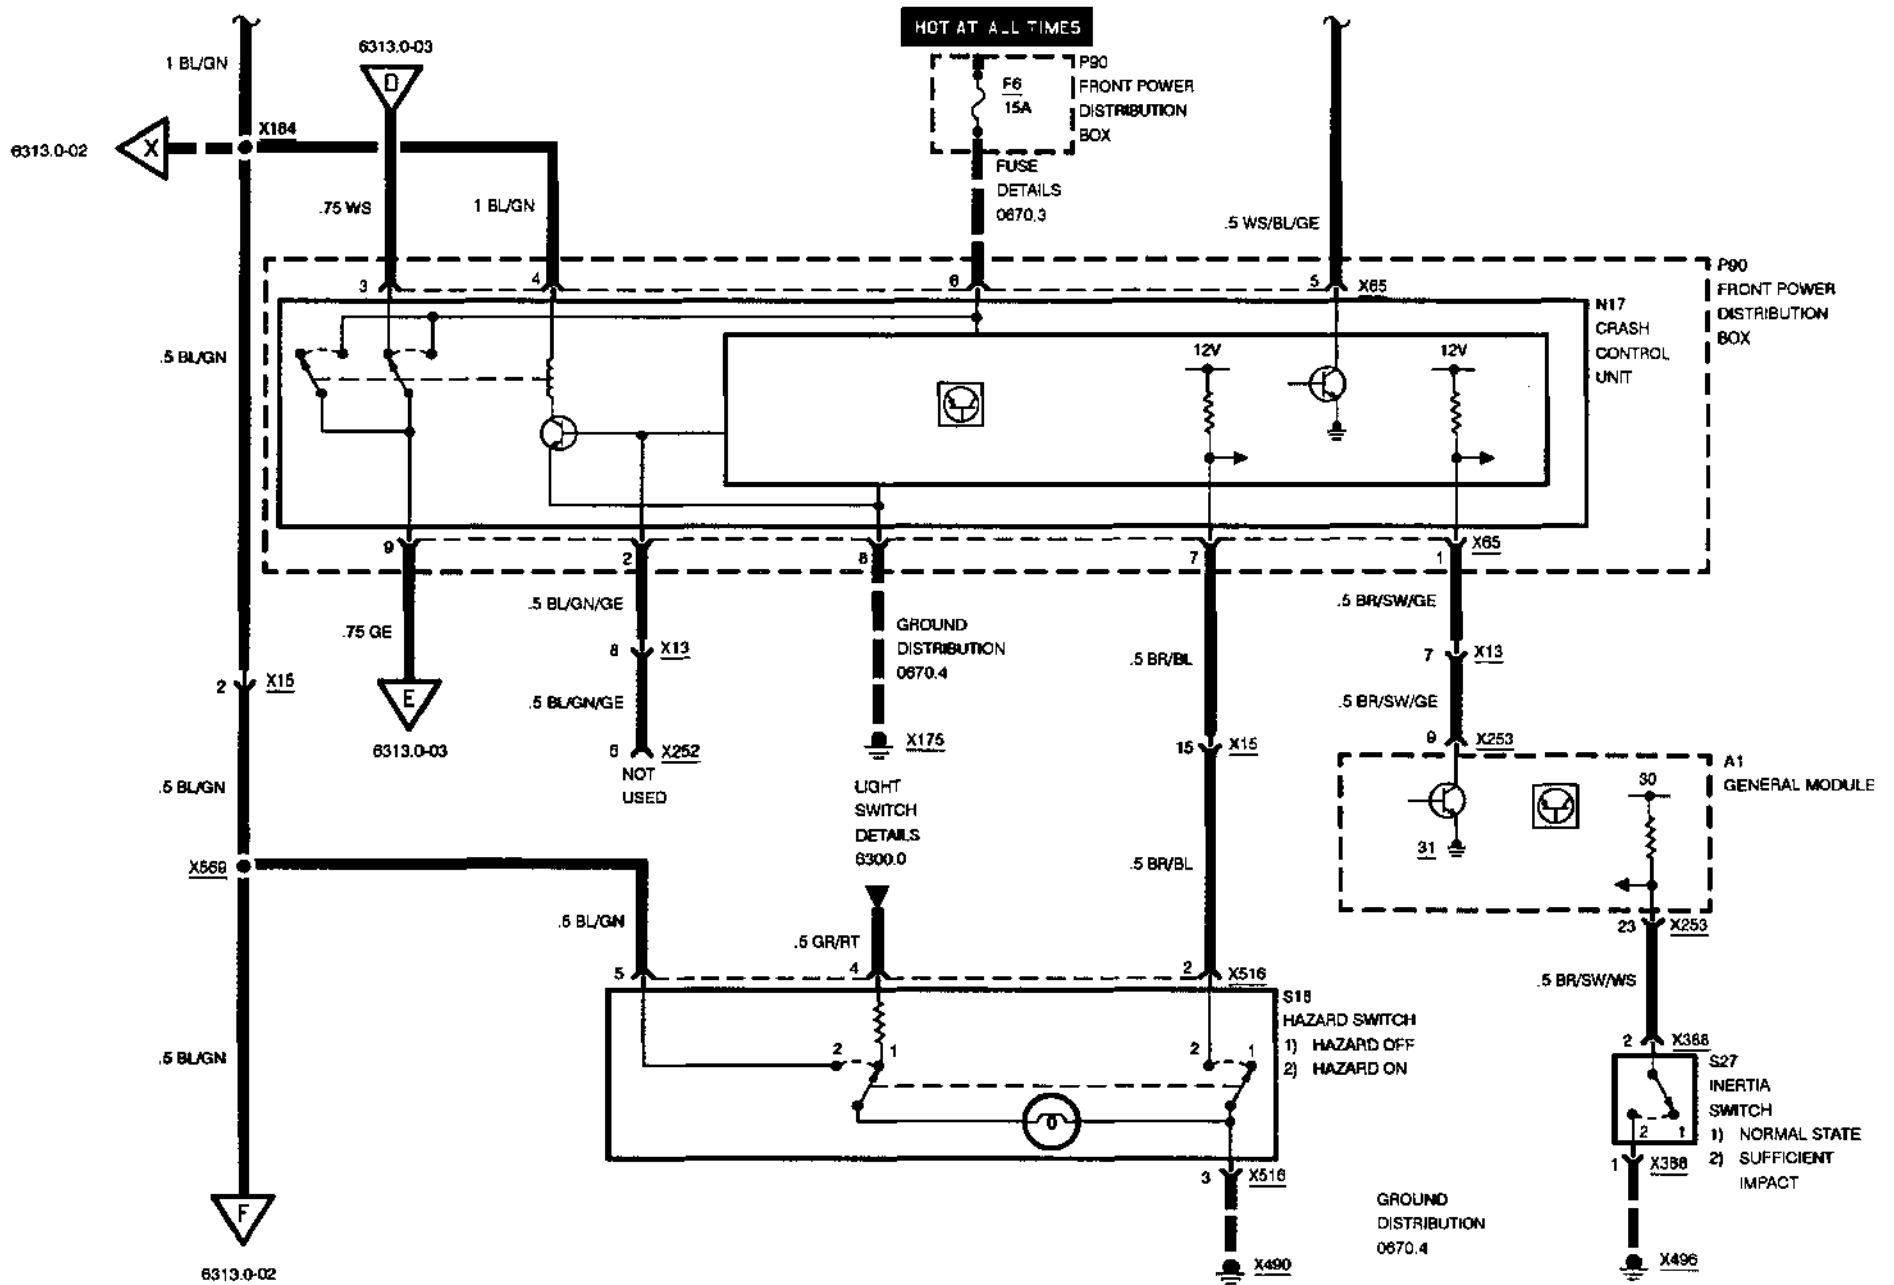




TURN/ HAZARD LIGHTS

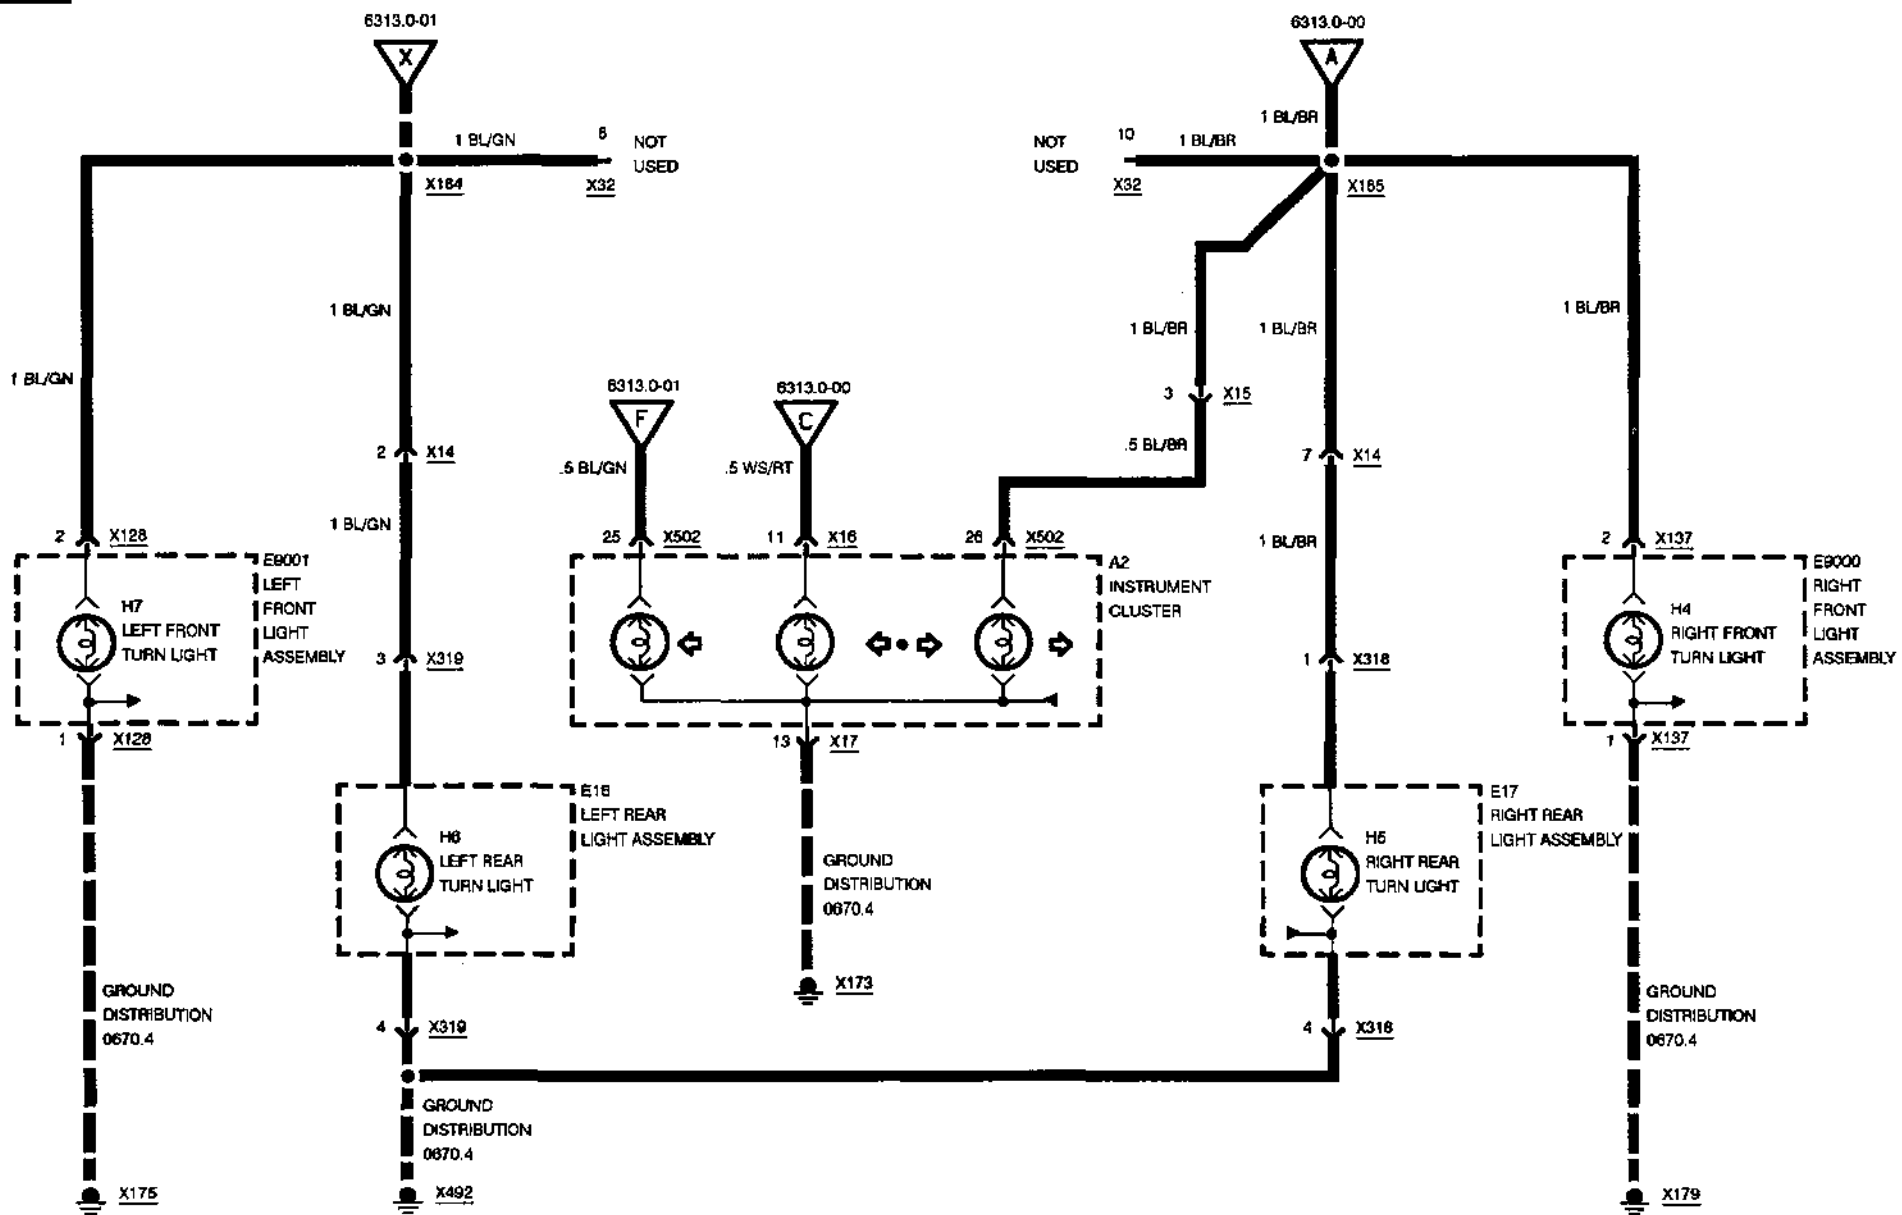





TURN/ HAZARD LIGHTS

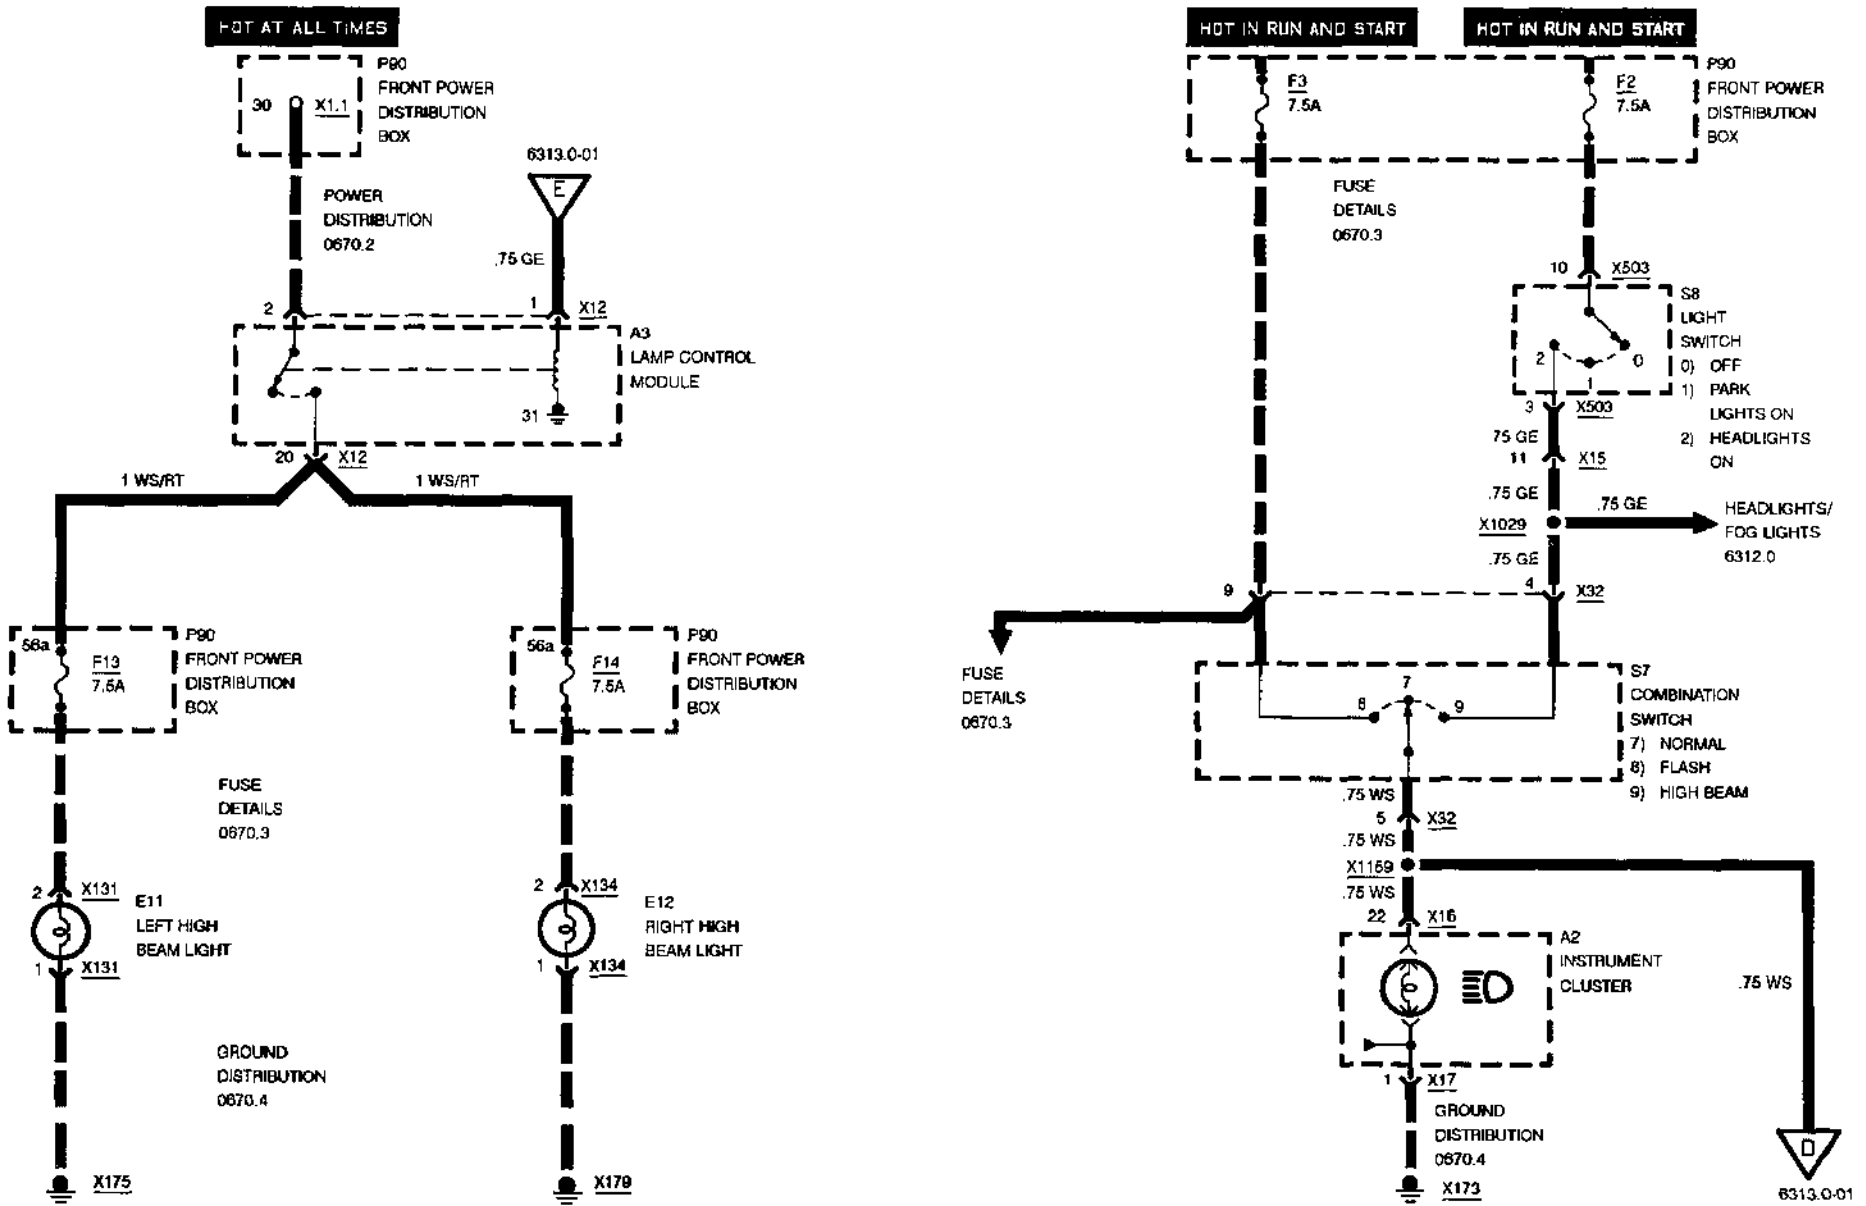




PARK/ TAIL/ UNDERHOOD LIGHTS

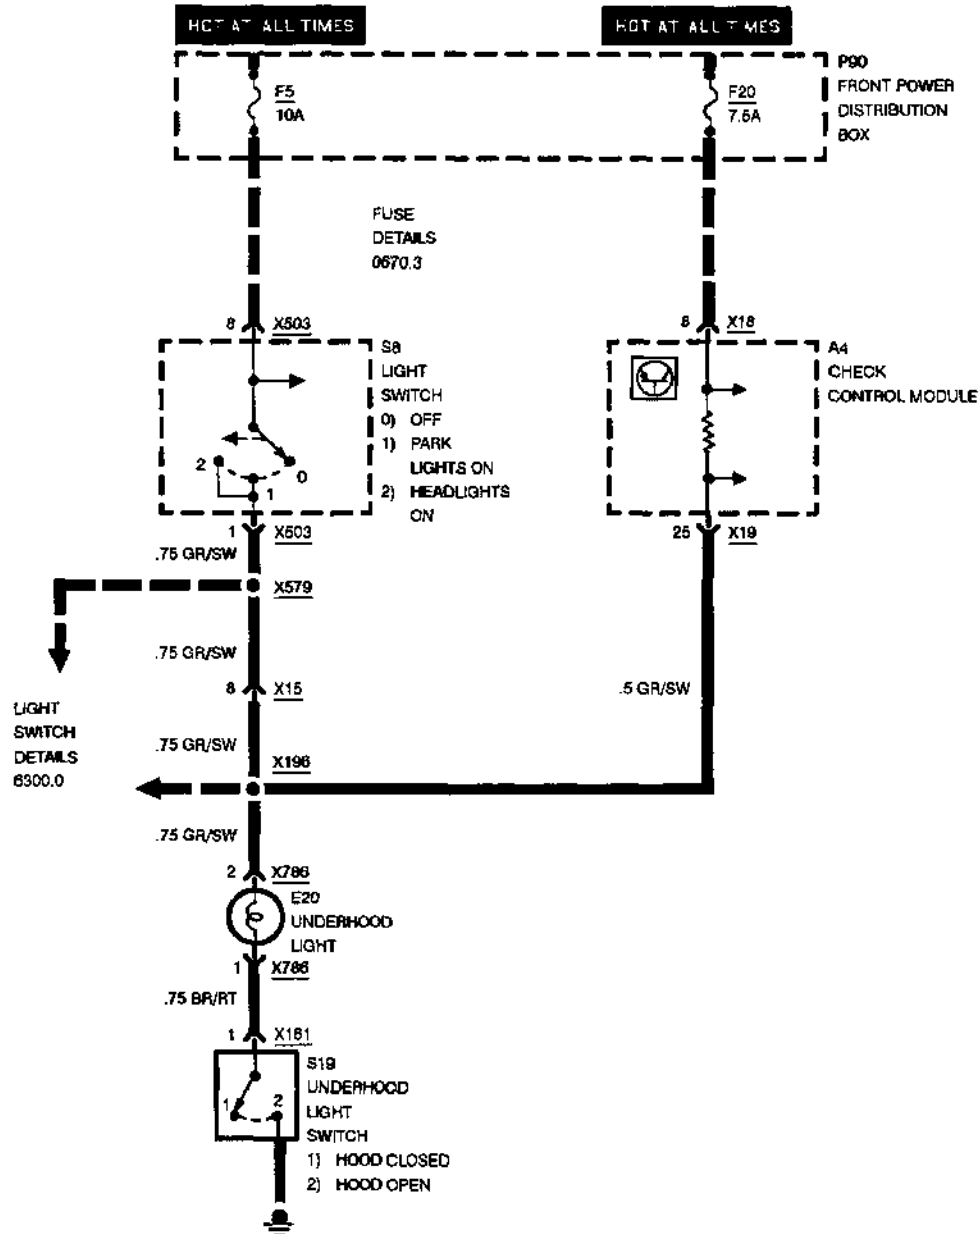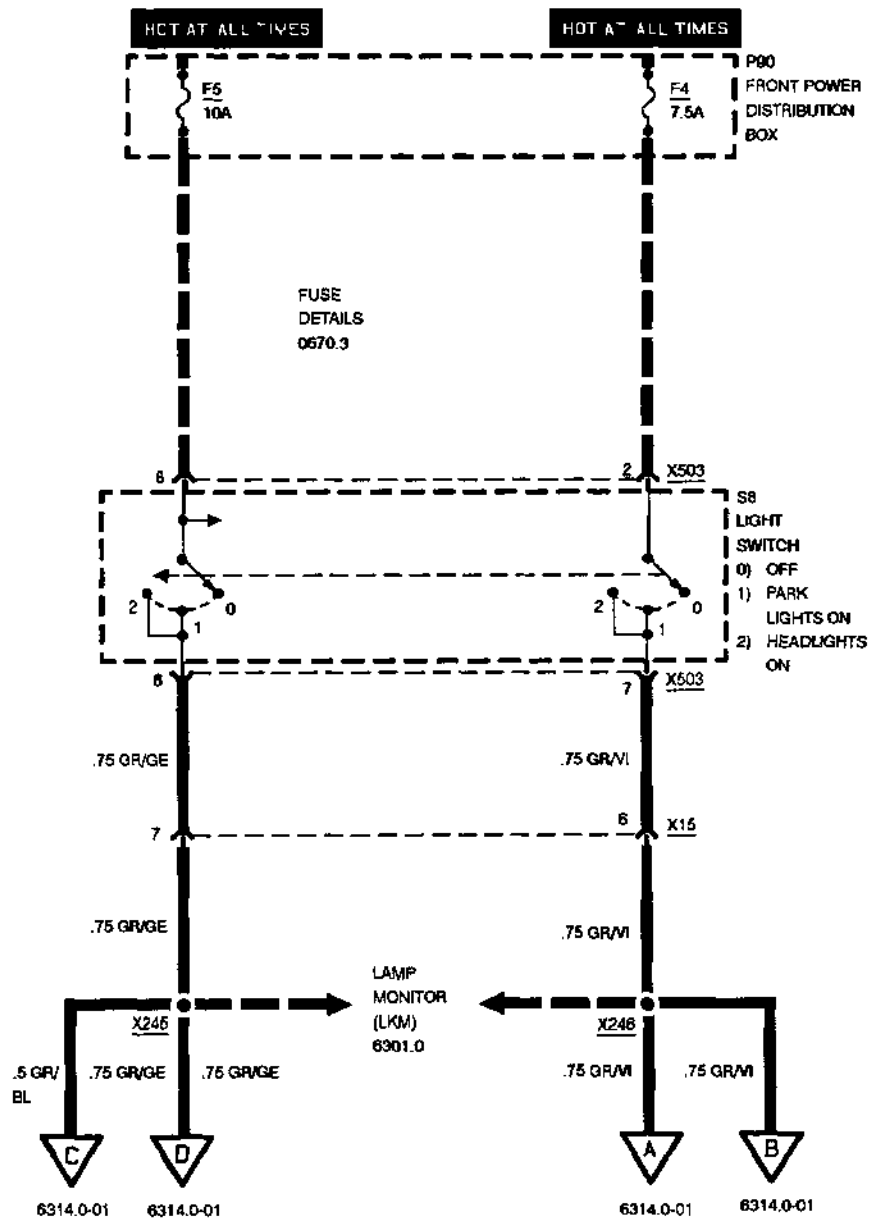



PARK/ TAIL/ UNDERHOOD LIGHTS


FRONT AND REAR PARK LIGHTS

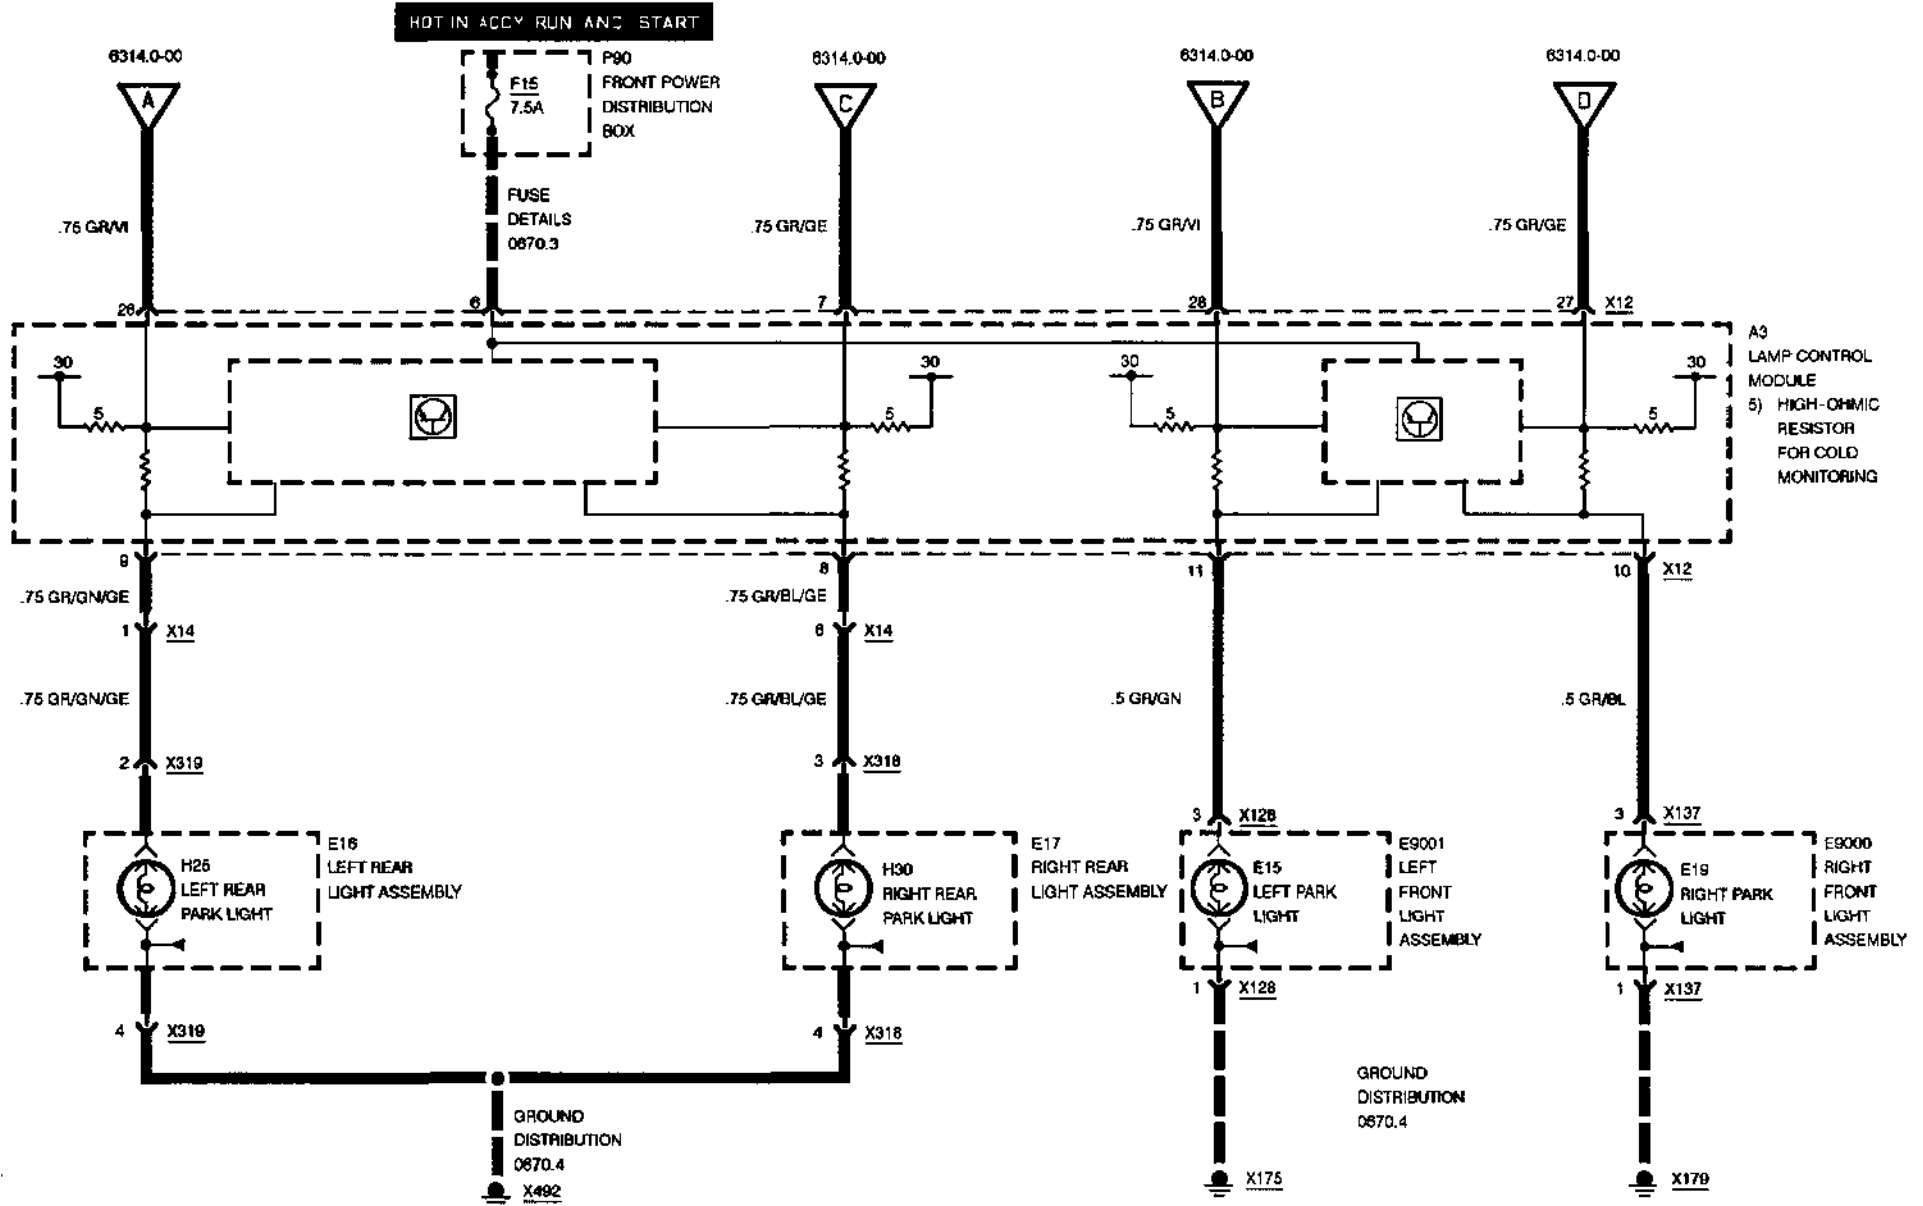




LICENSE/ TRUNK LIGHTS

LICENSE LIGHTS

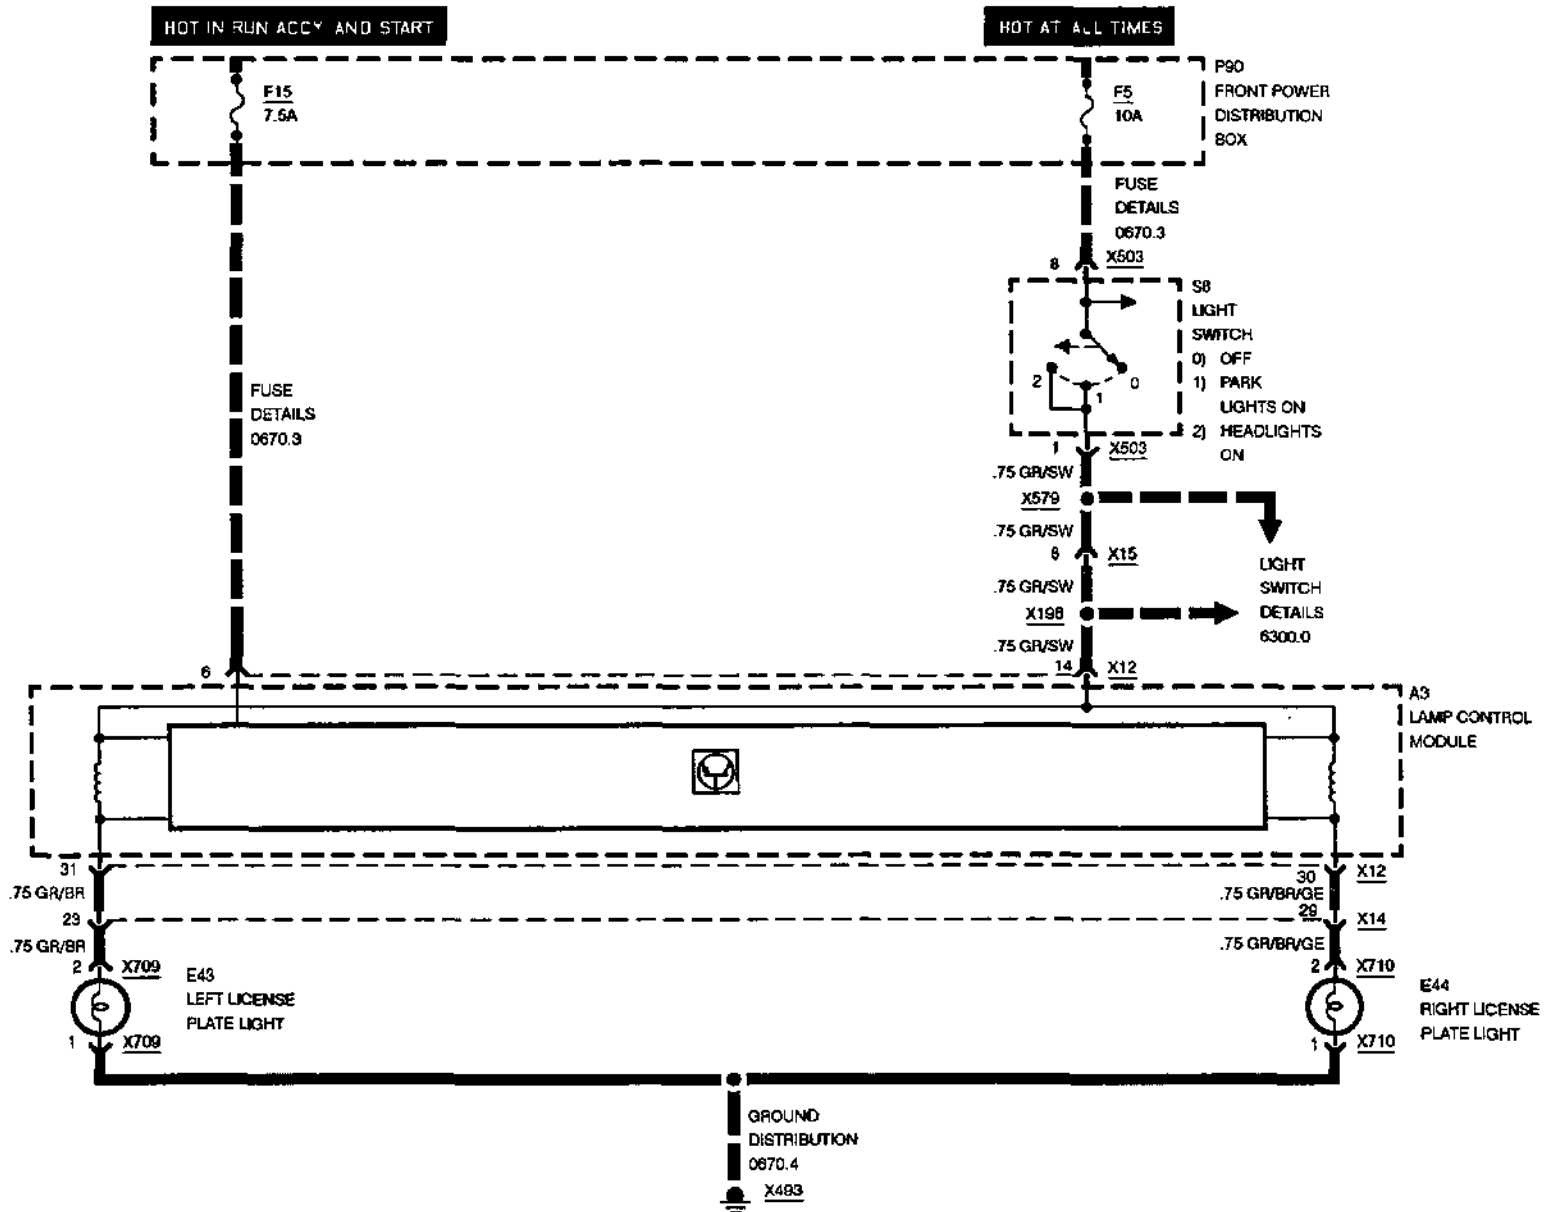





LICENSE/ TRUNK LIGHTS

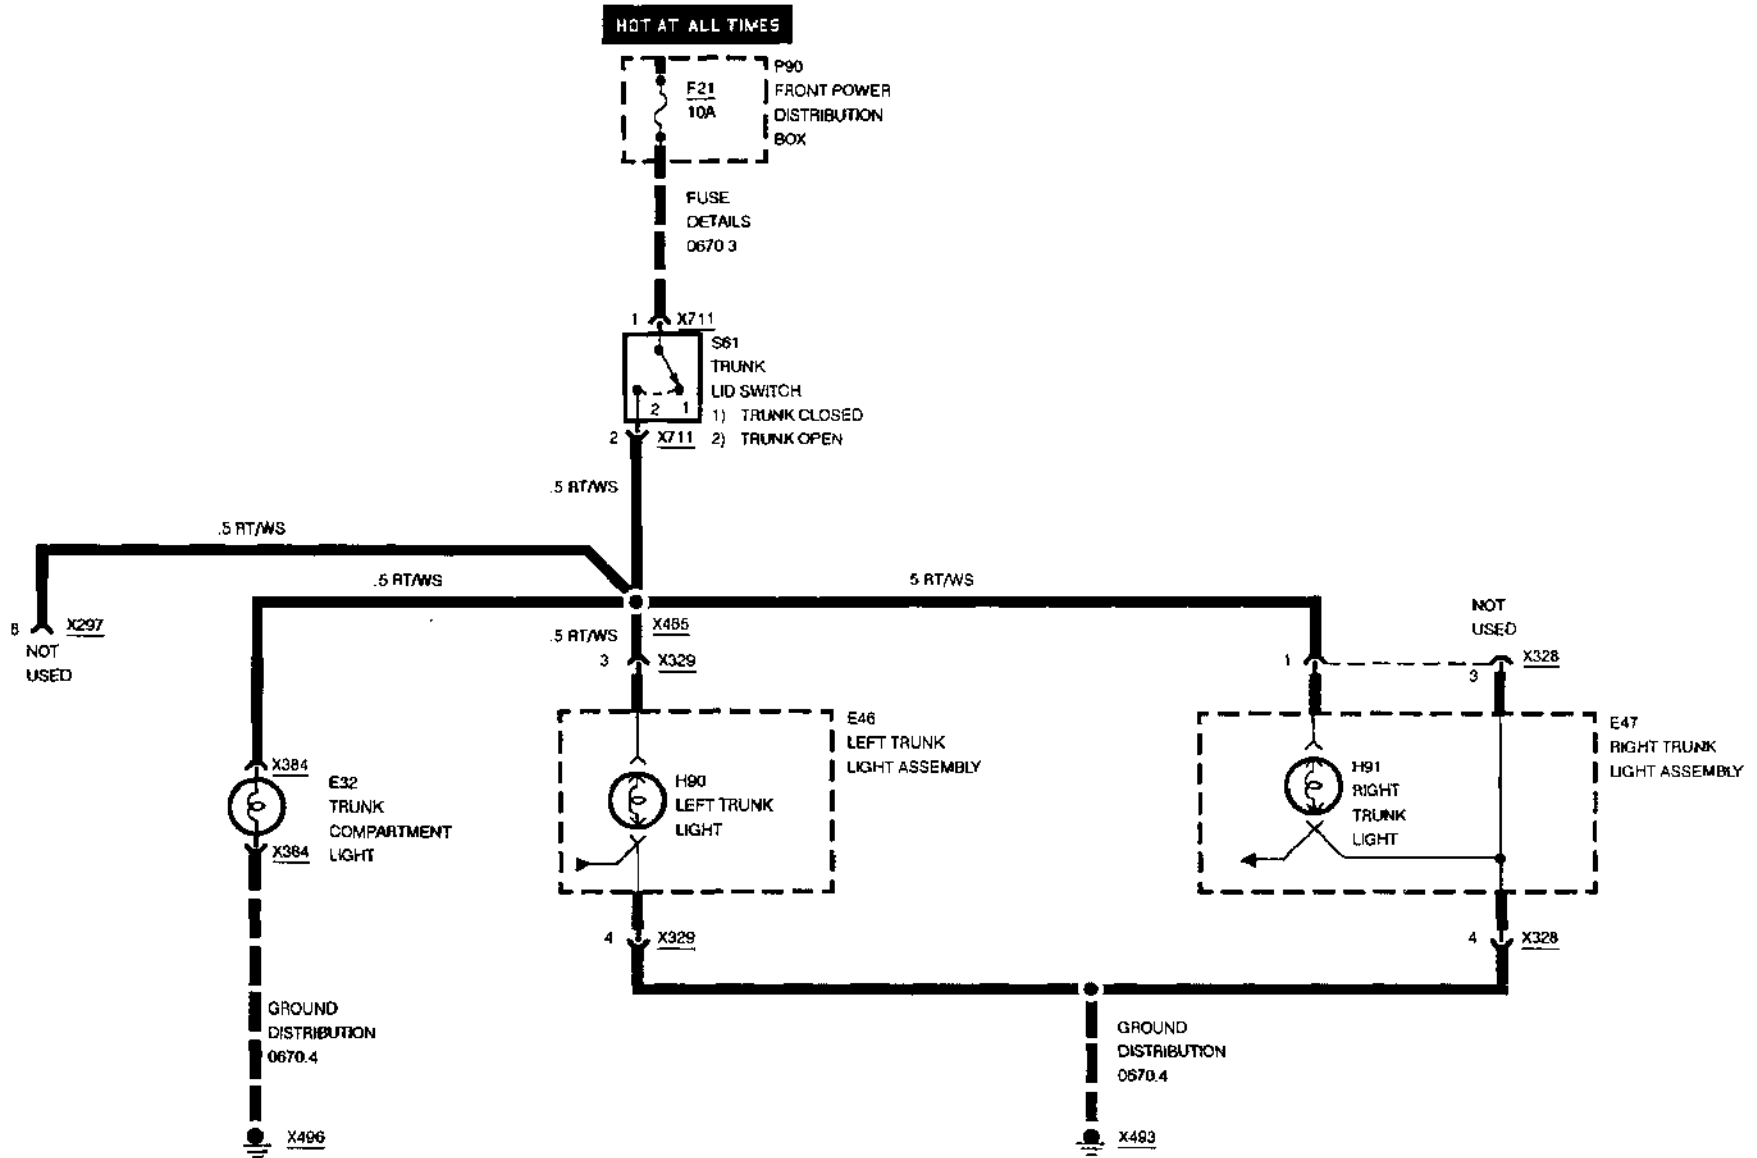




BACK UP LIGHTS

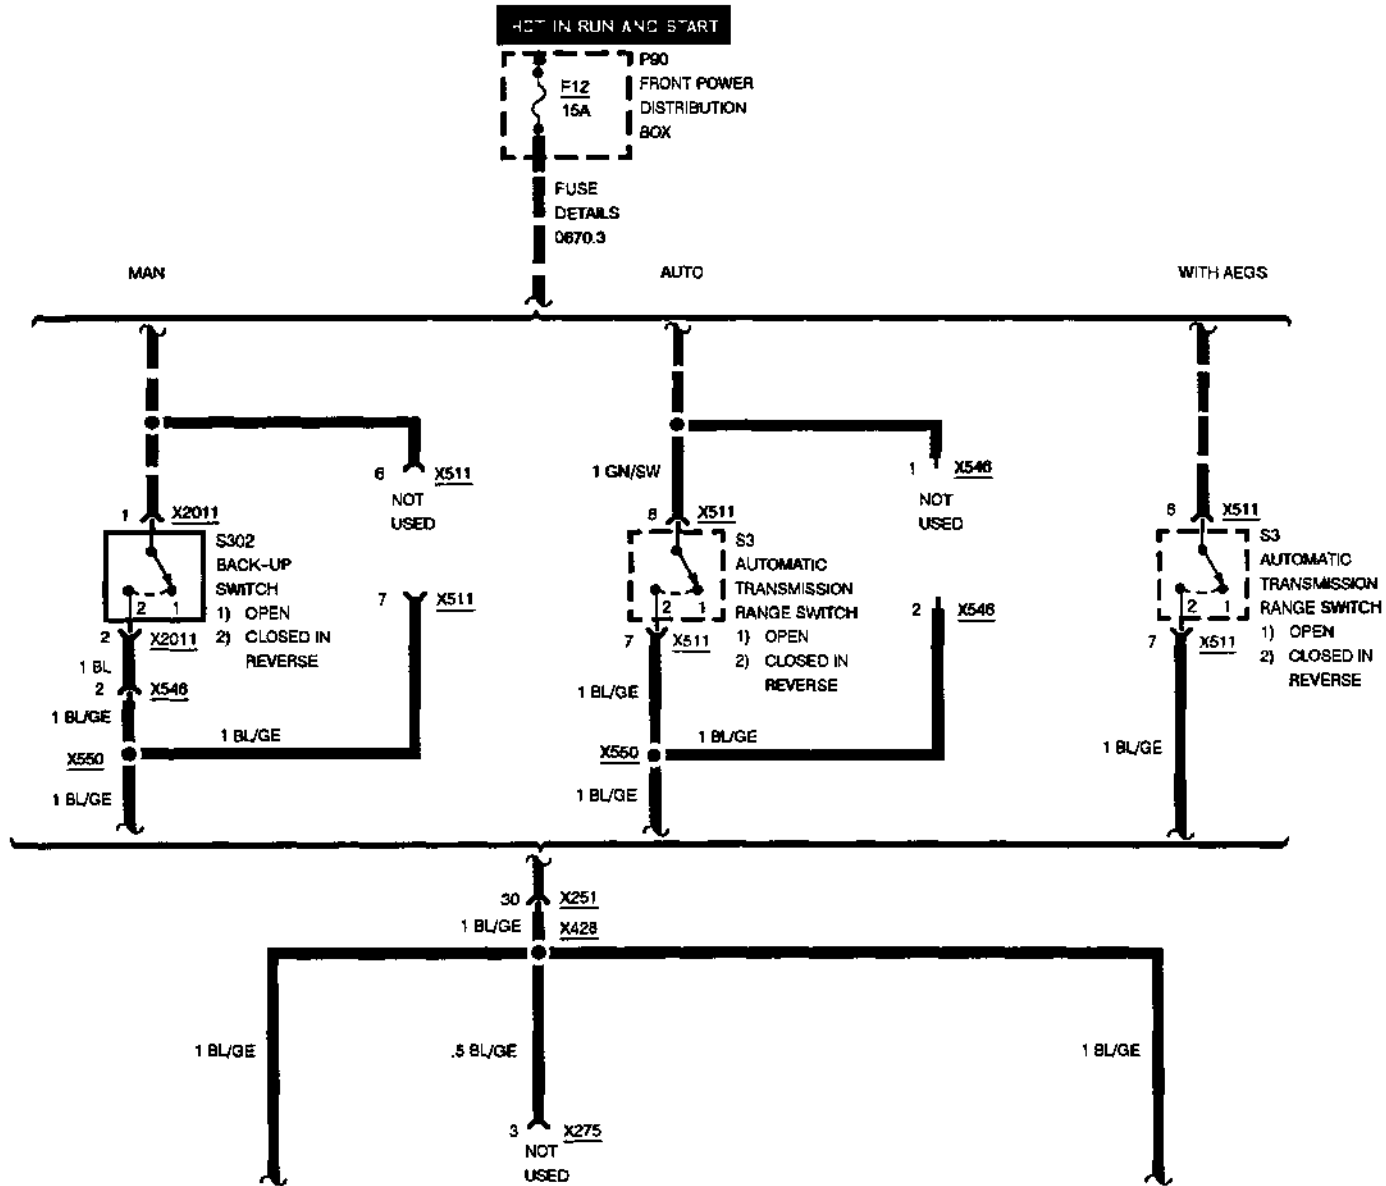

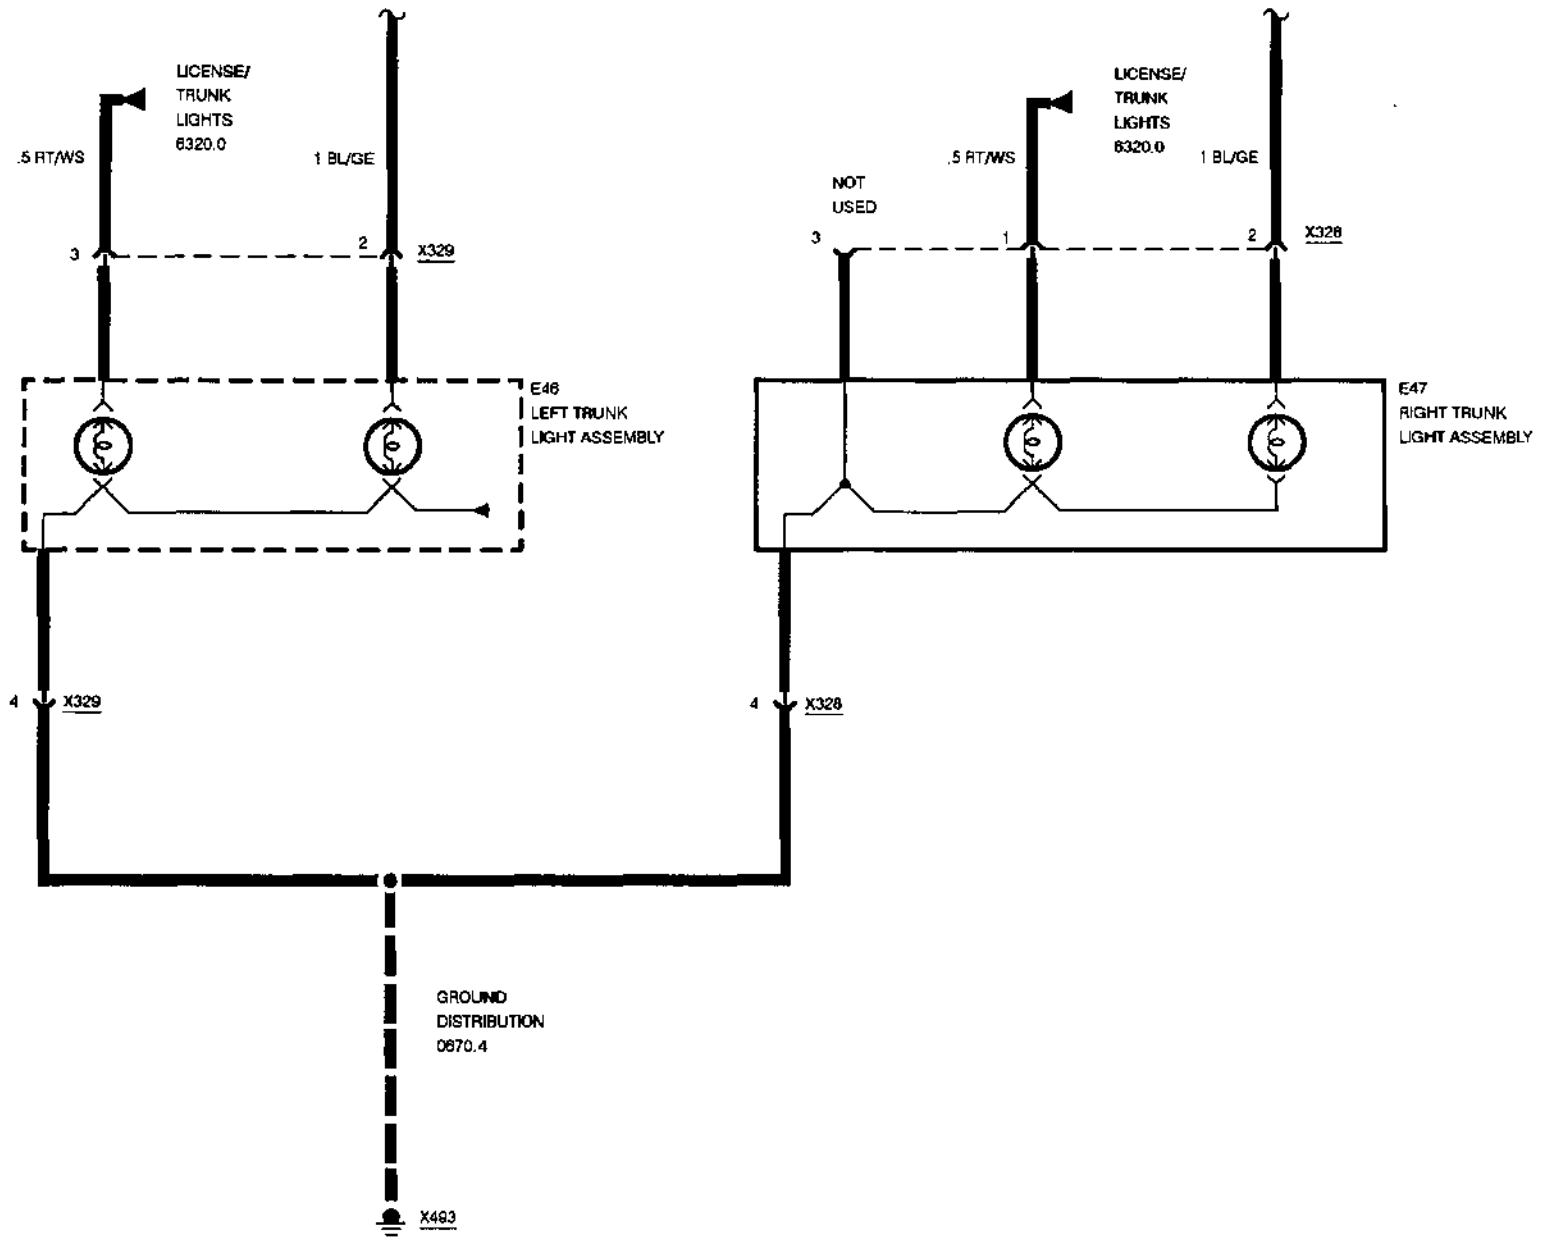




BRAKE LIGHTS

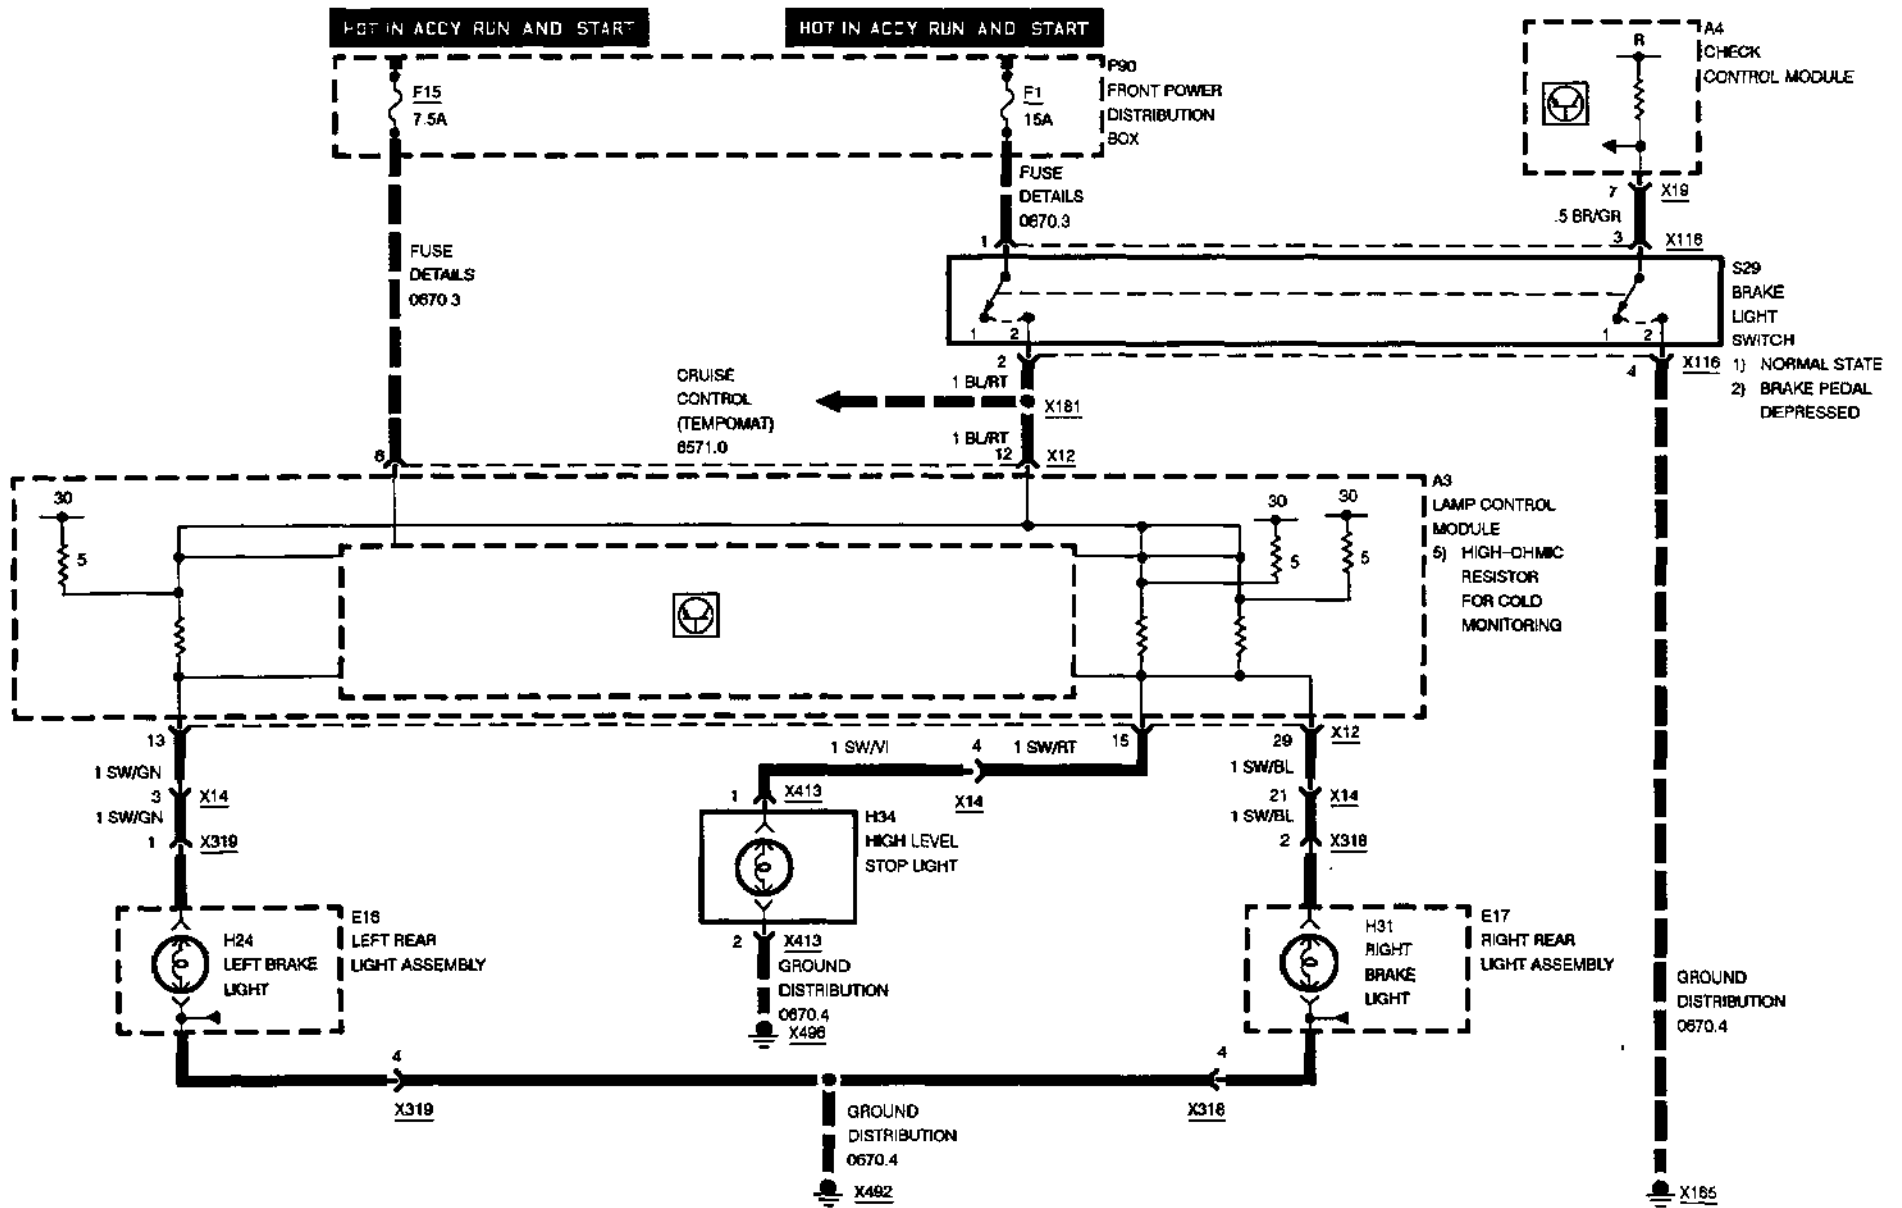



ZKE INTERIOR LIGHTS (IB)


INPUT DETAILS

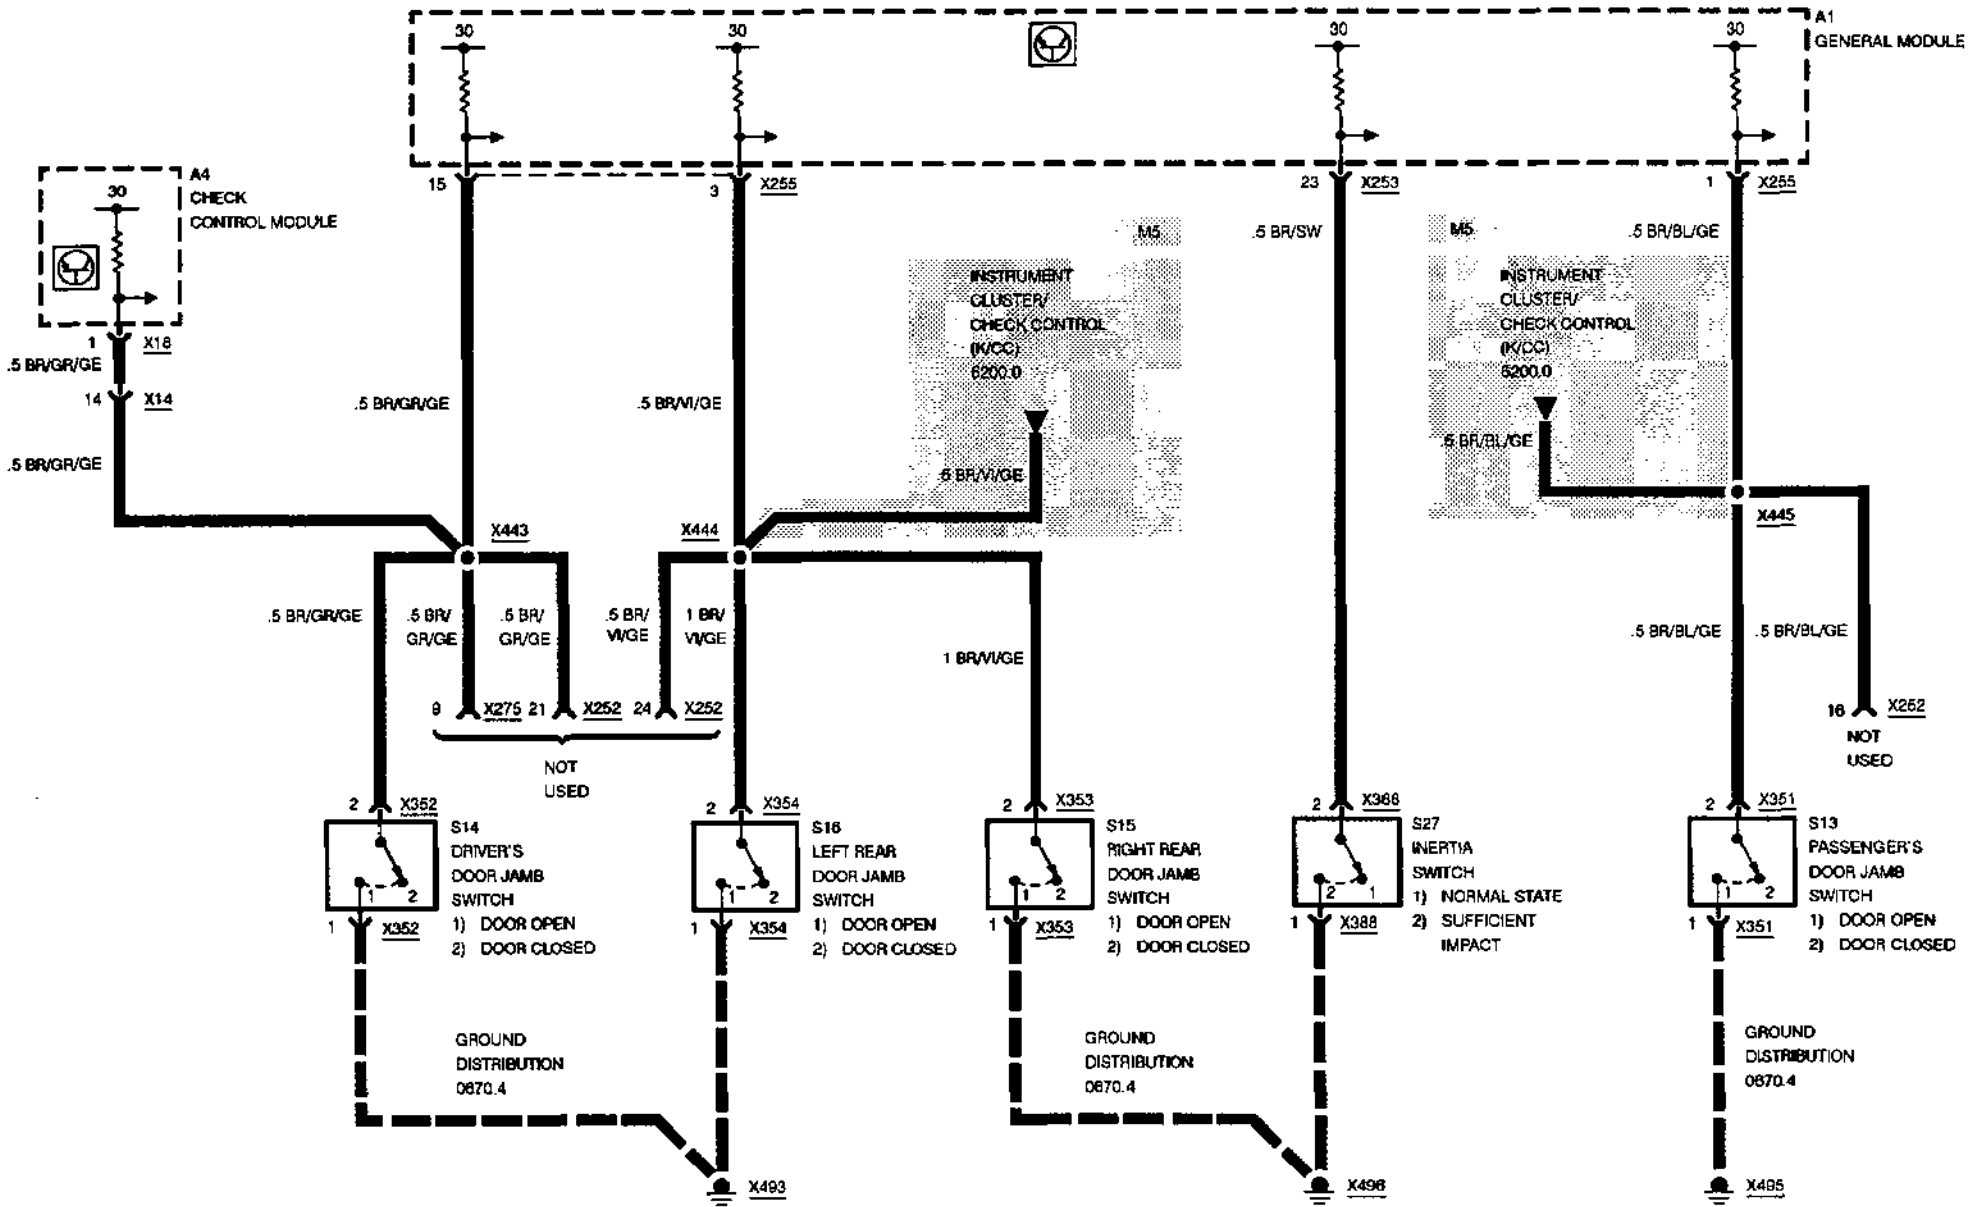




ZKE INTERIOR LIGHTS (IB)

OUTPUT DETAILS

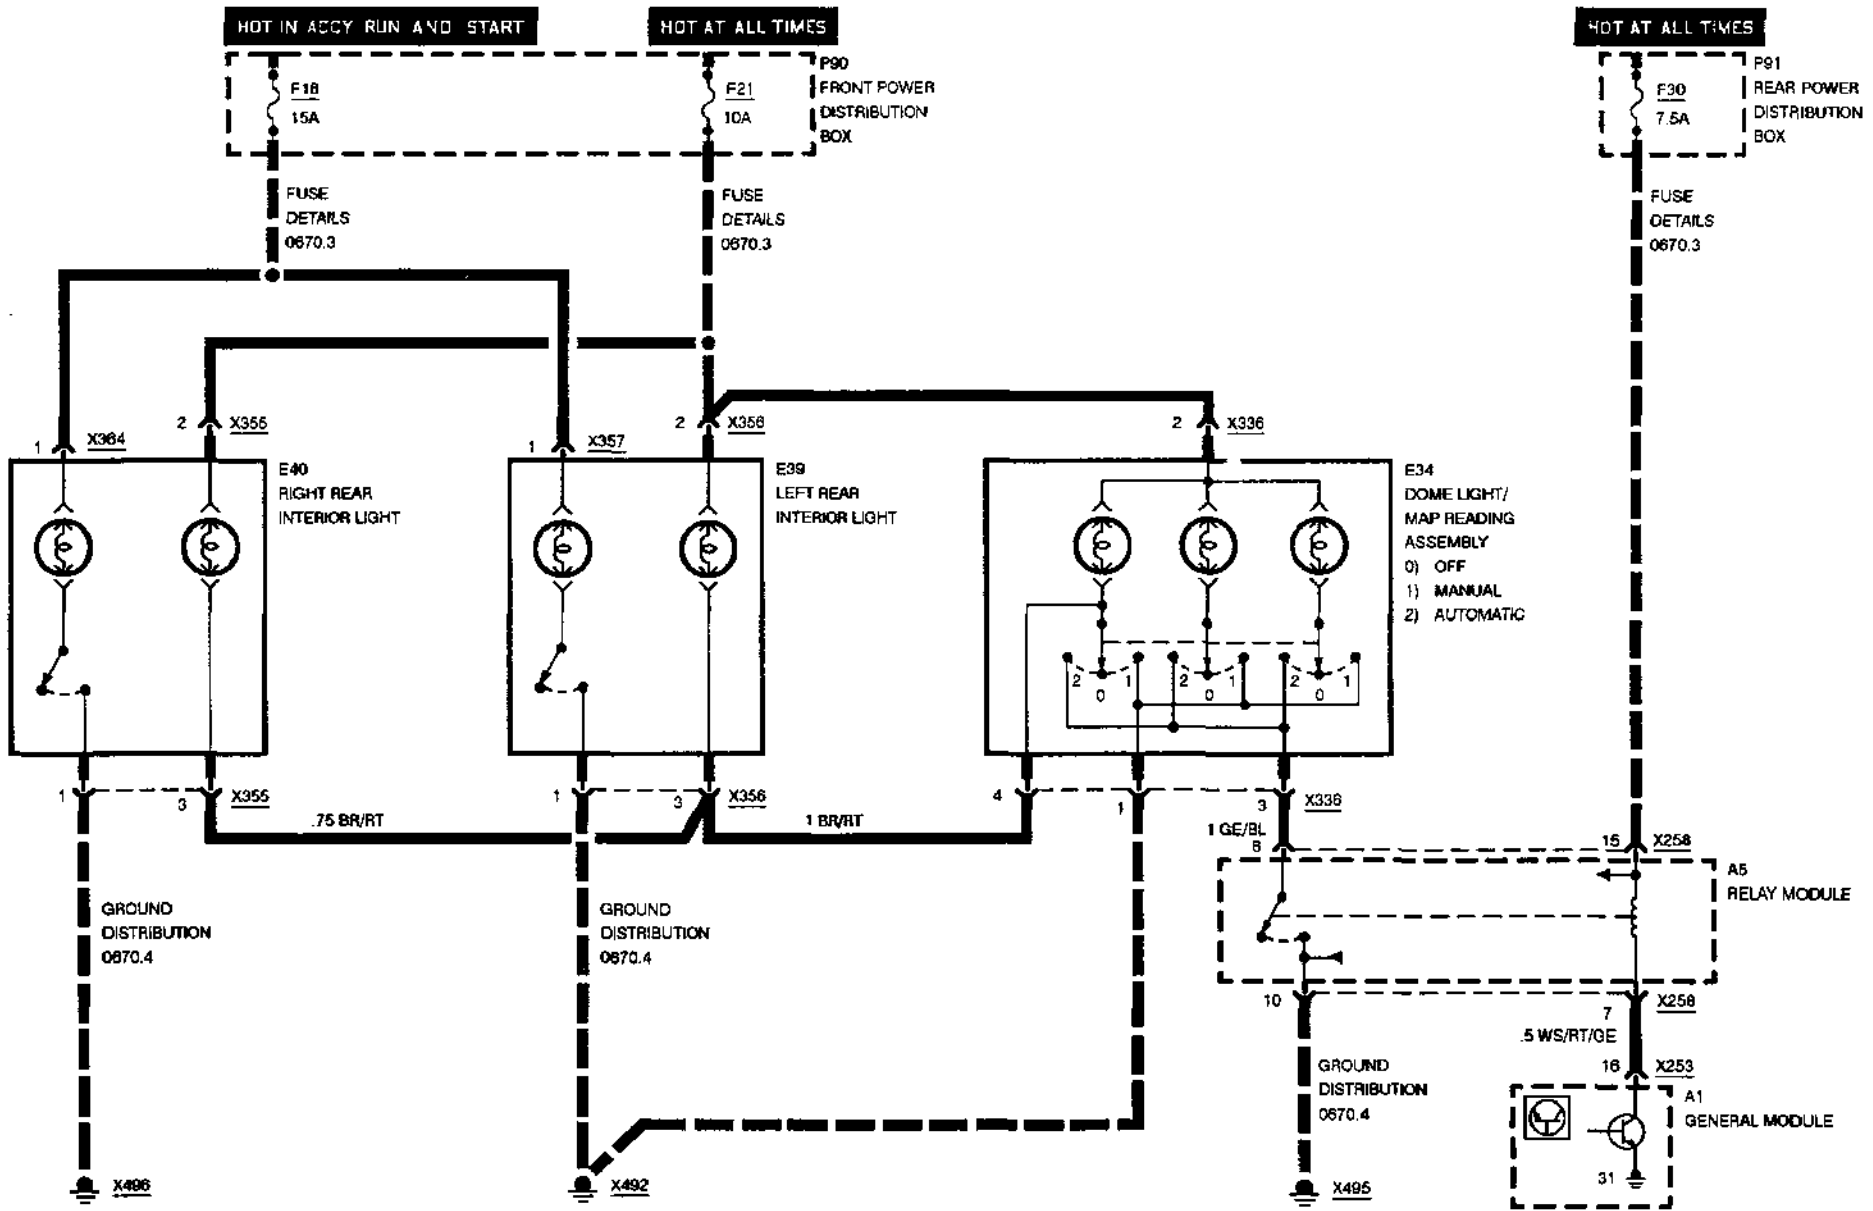




GLOVE BOX LIGHT/CIGAR LIGHTER/ CHARGING PLUG

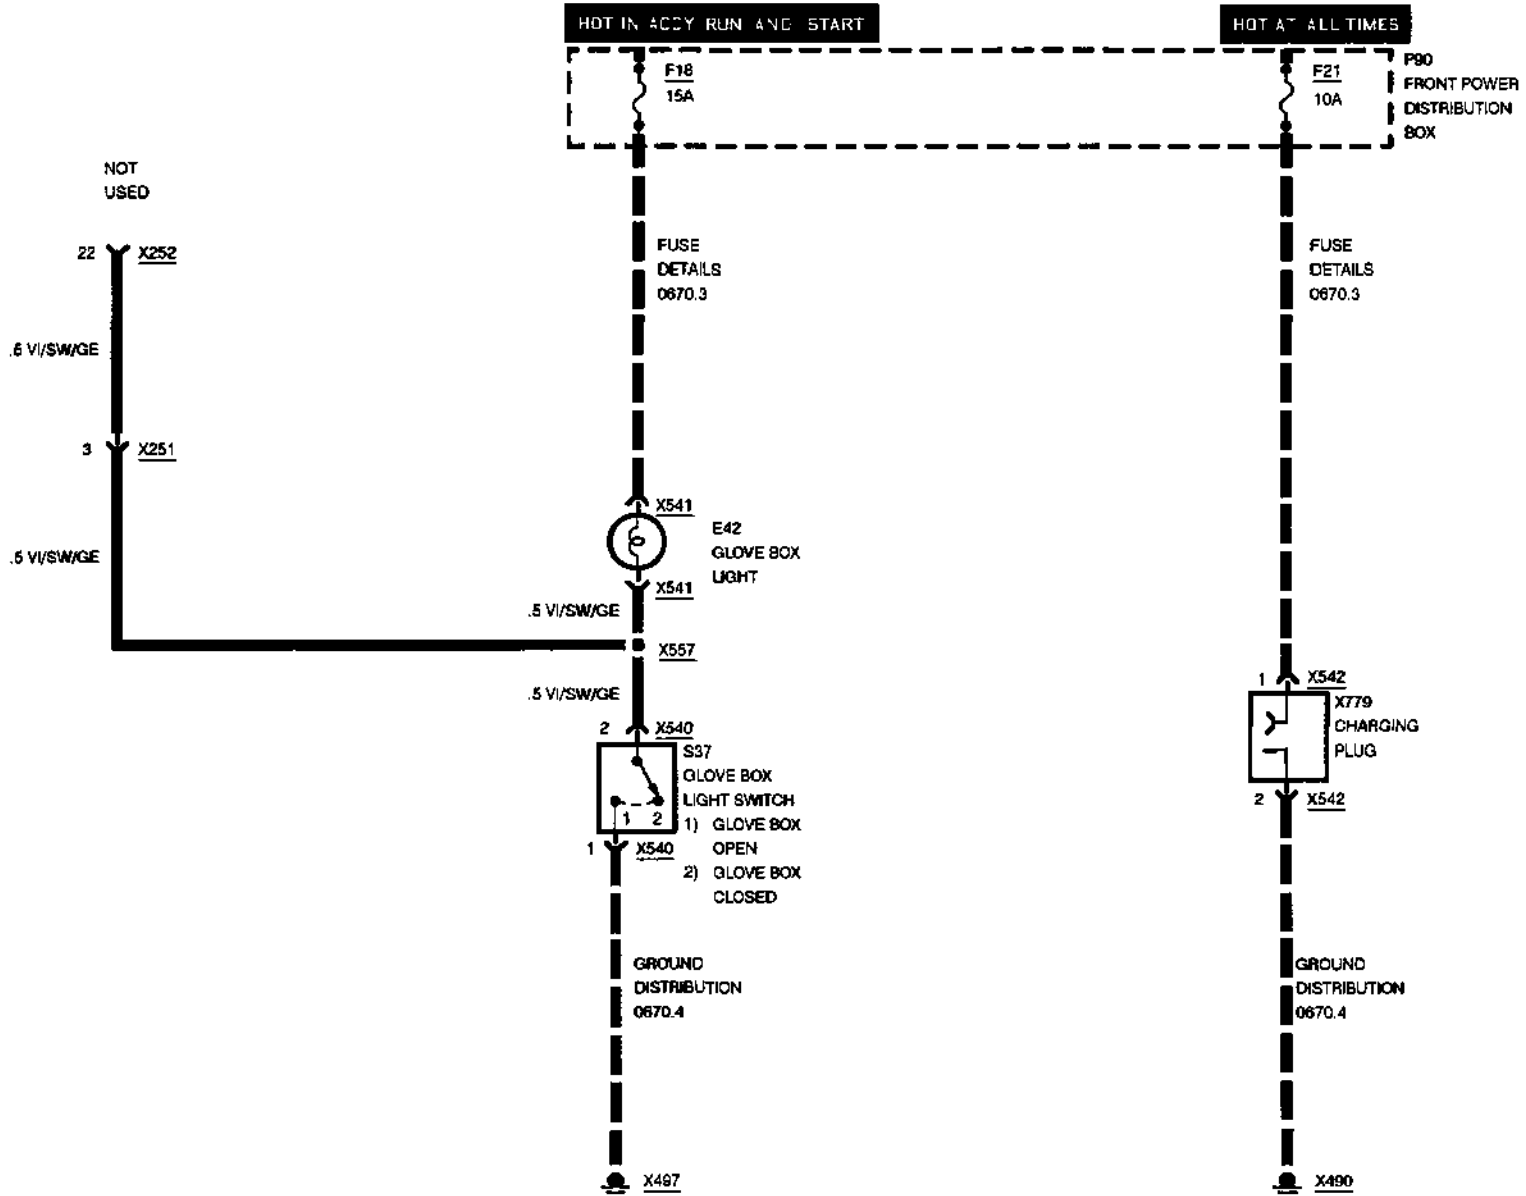





GLOVE BOX LIGHT/CIGAR LIGHTER/ CHARGING PLUG

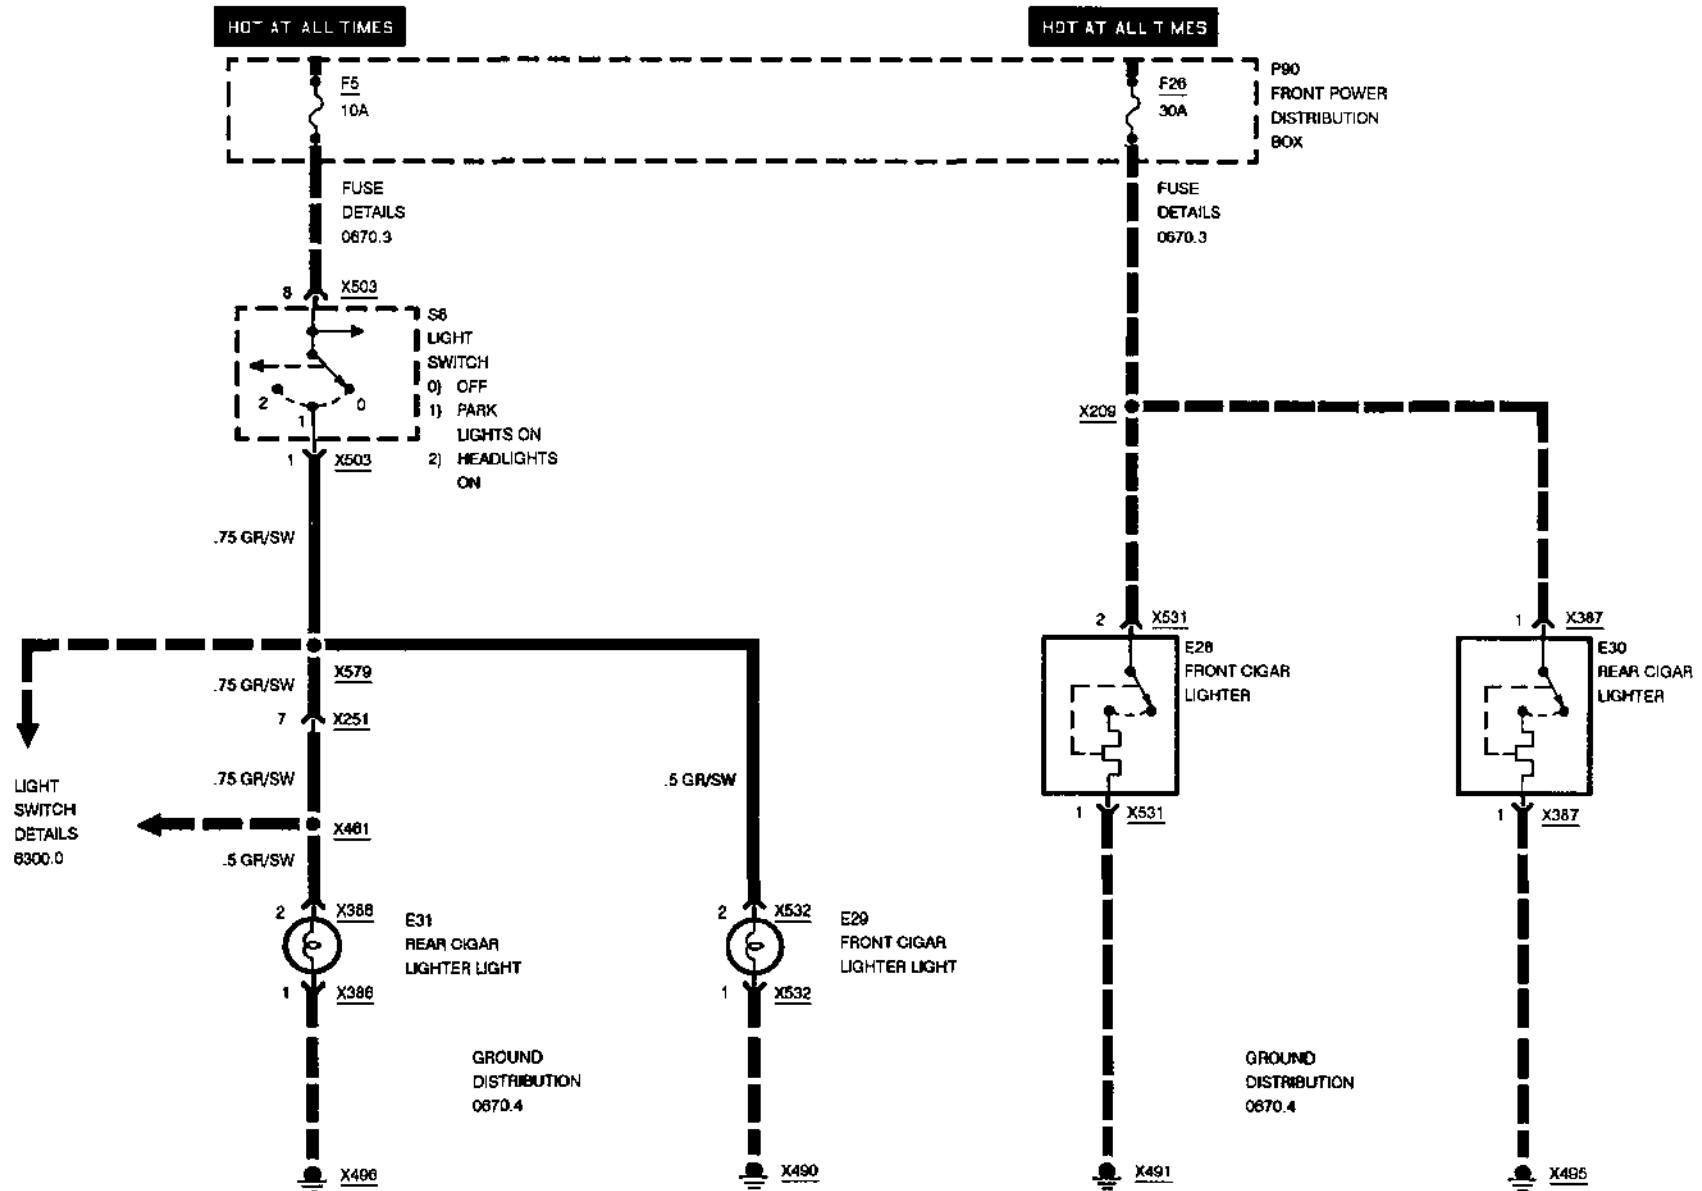


PARK VENTILATION WITH IHKR 2

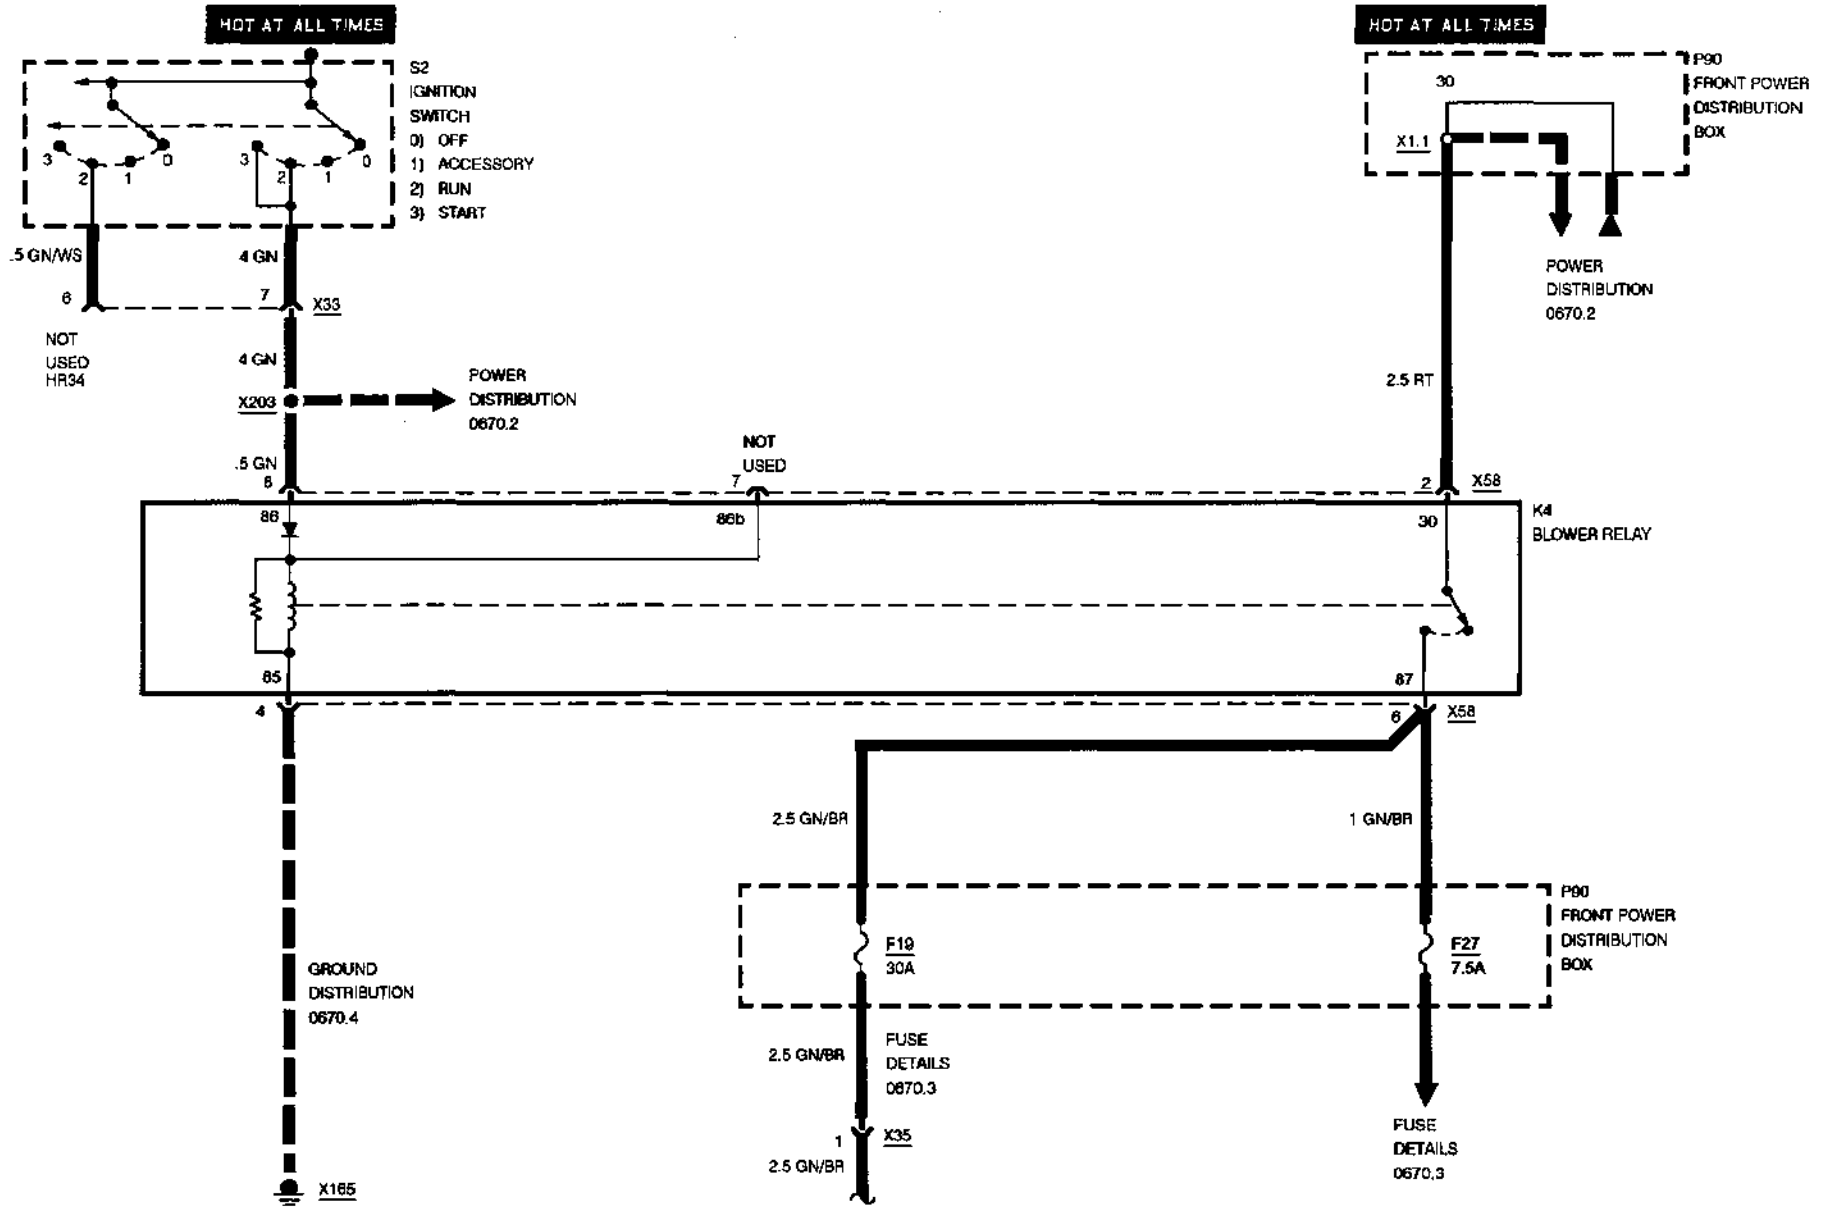


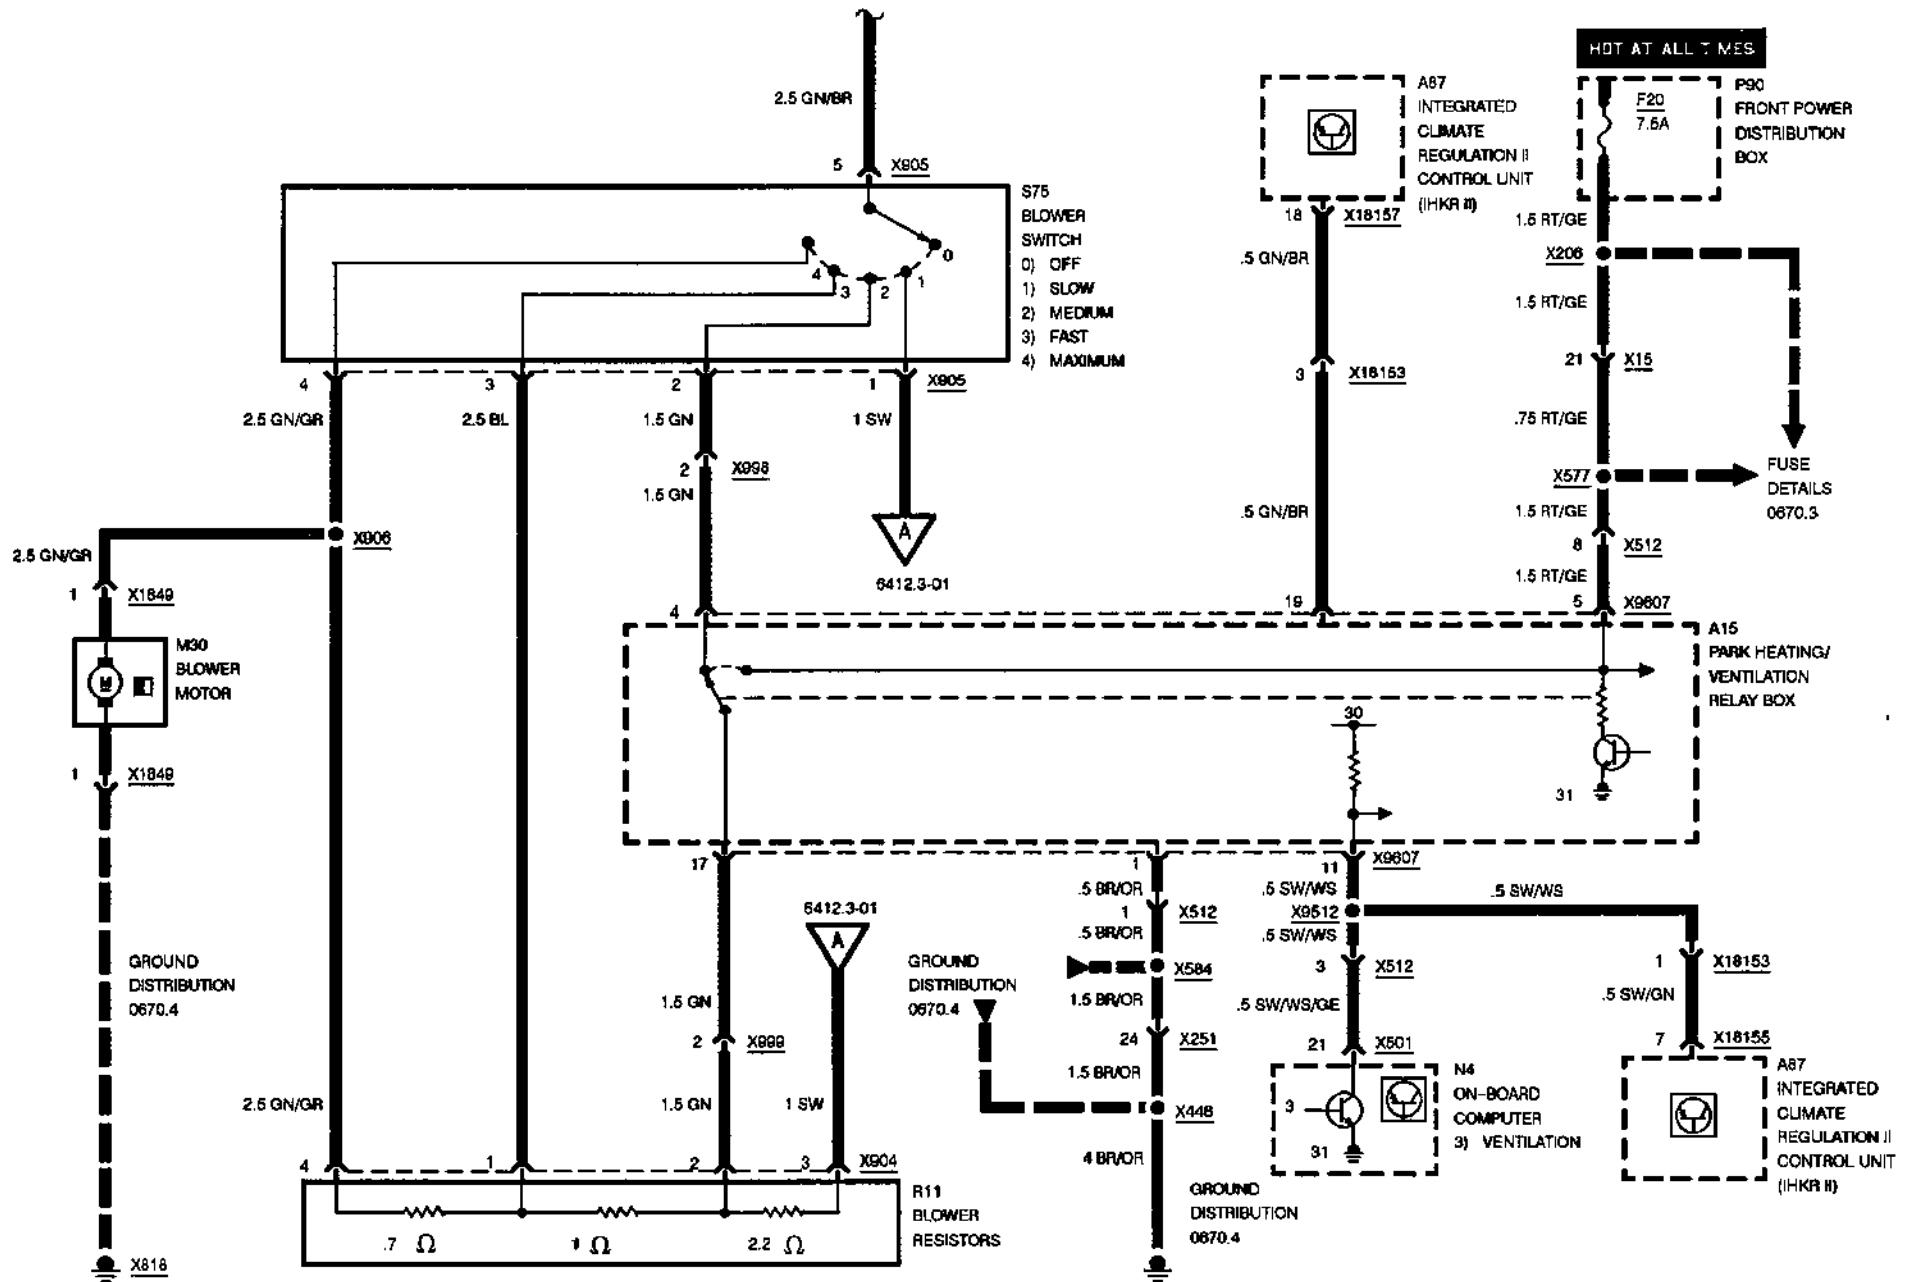

REAR WINDOW DEFOGGER

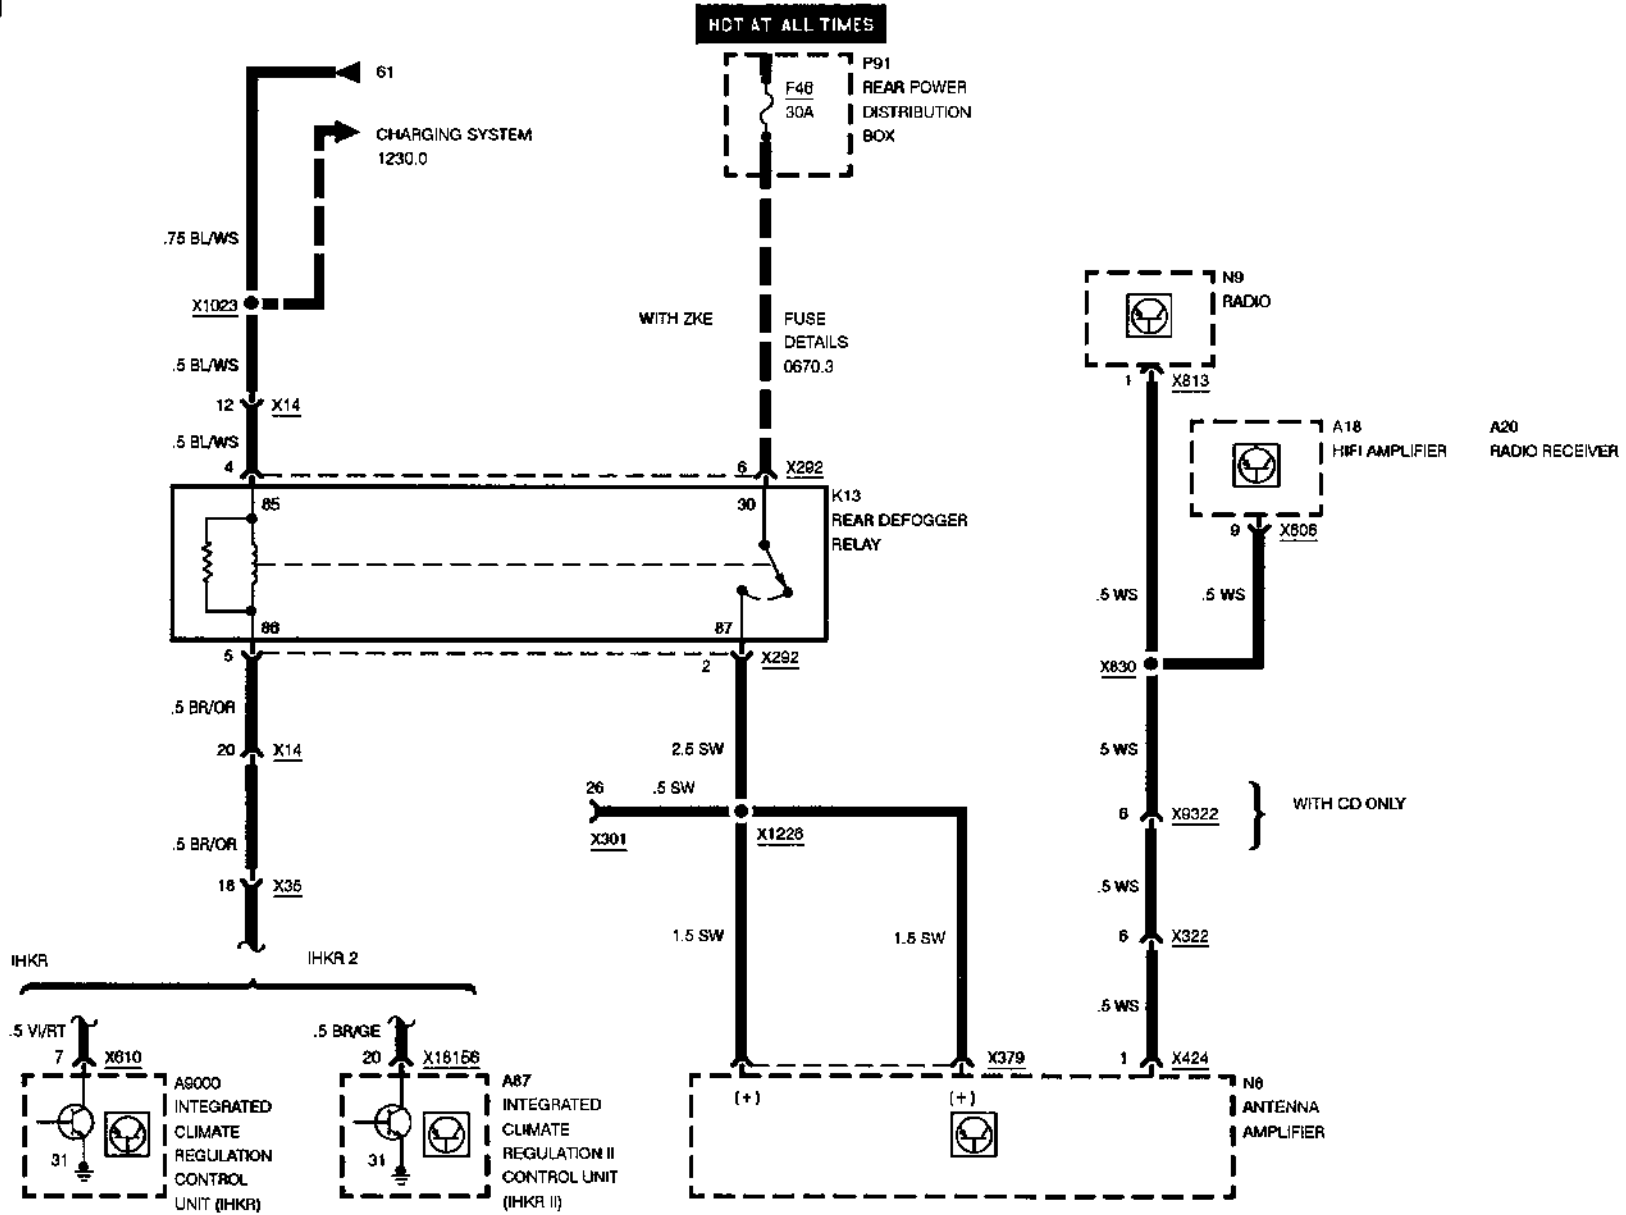

**BMW 5 REAR WINDOW DEFOGGER
REAR WINDOW ANTENNA**

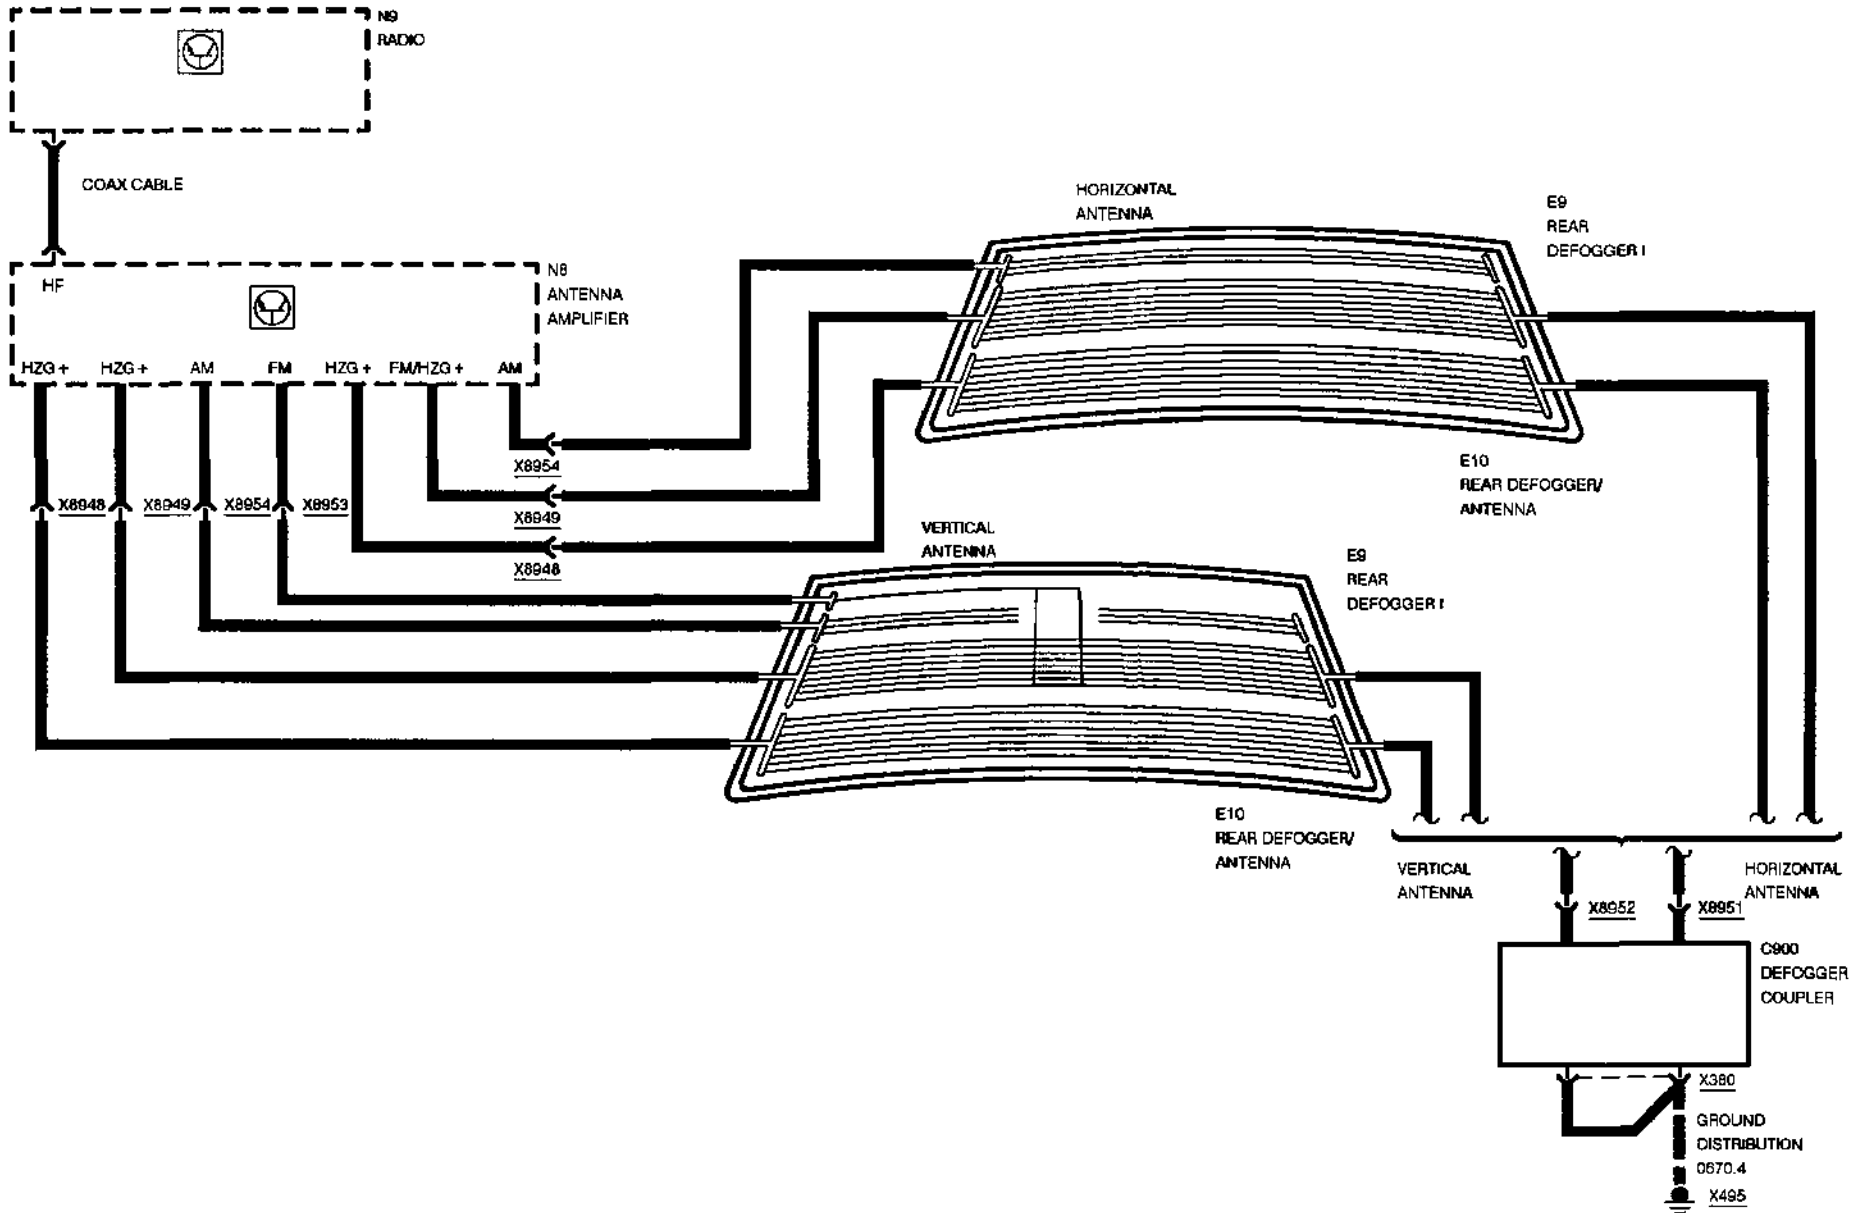


07/90

6424.0-01

1990

BMW 5 REAR WINDOW DEFOGGER
3-ANTENNA-DIVERSITY

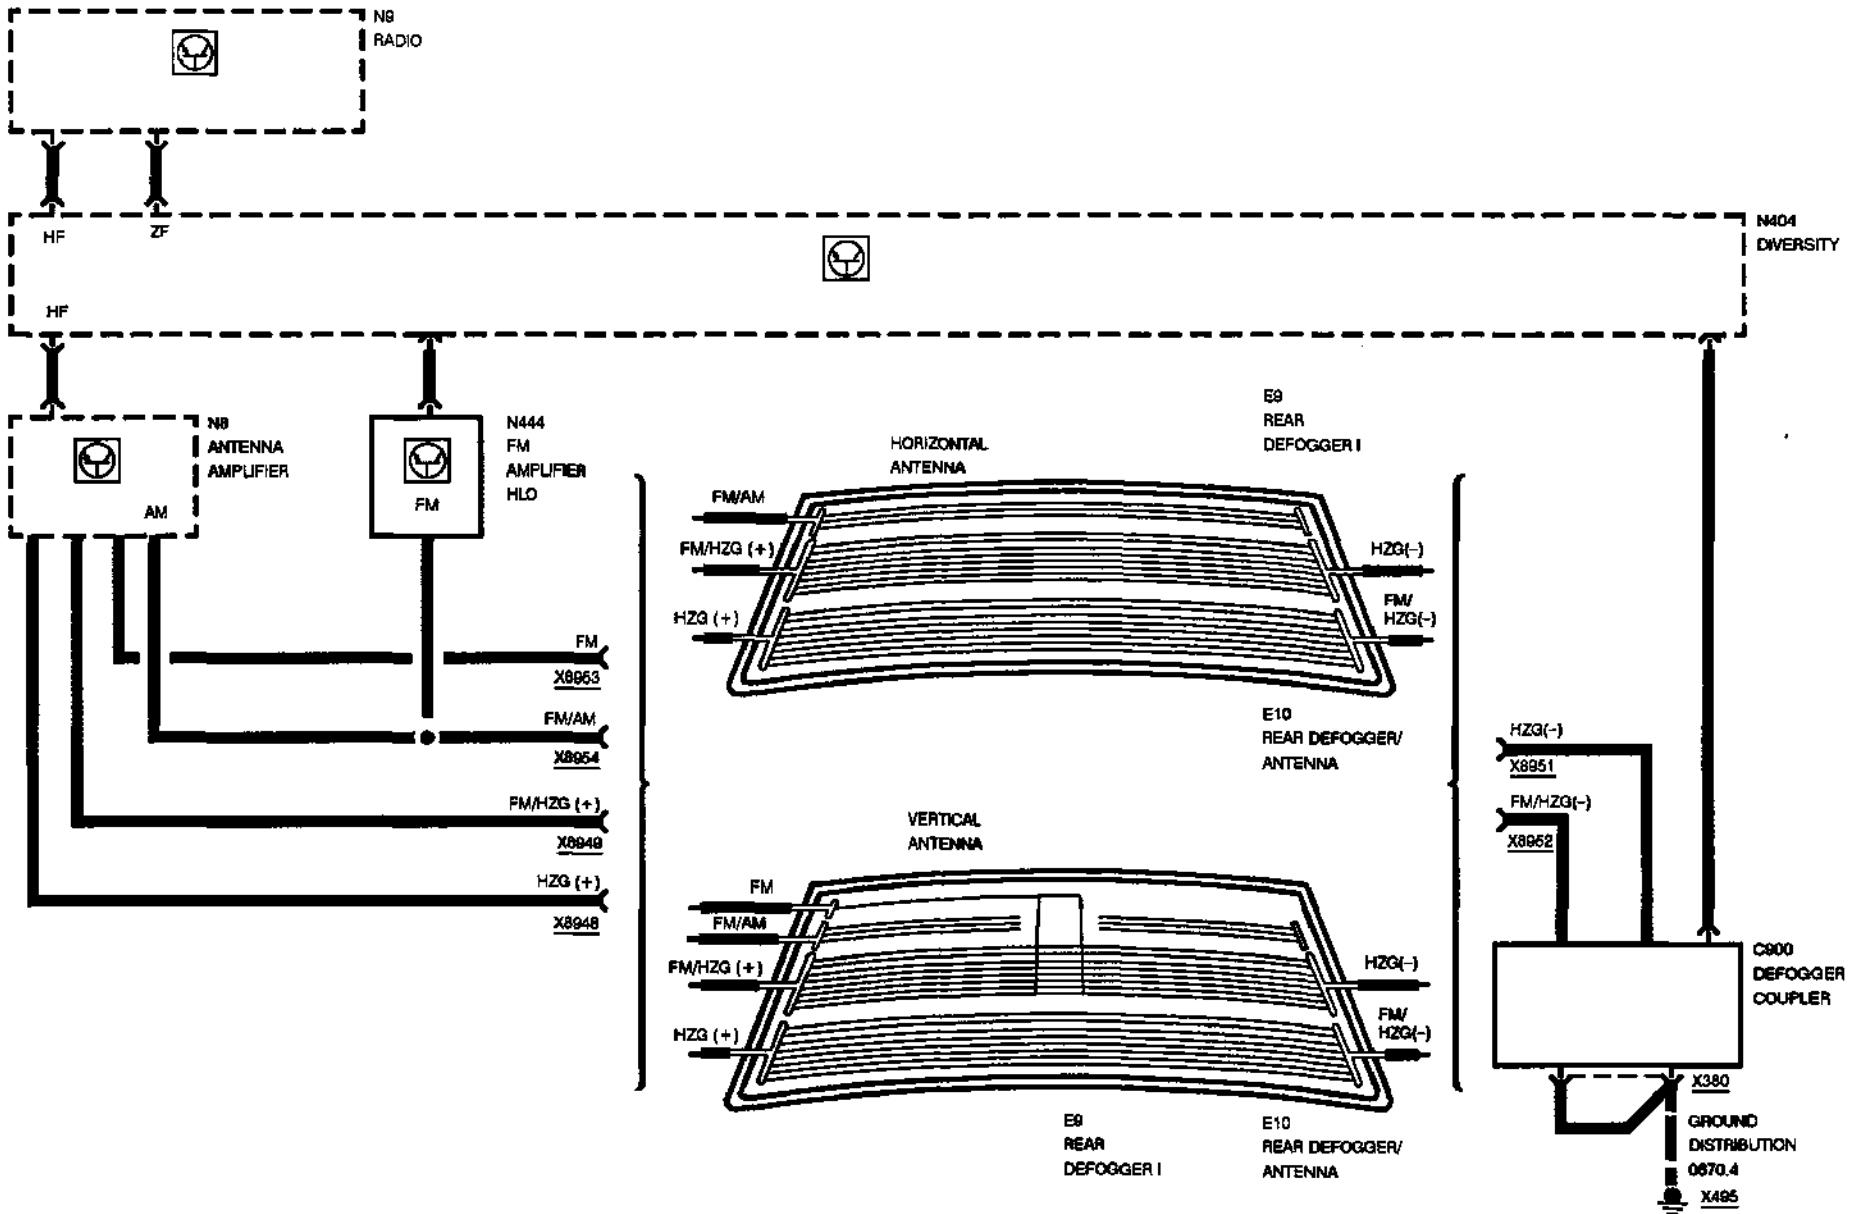


07/90

6424.0-02

1990



INTEGRATED CLIMATE REGULATION (IHKR)

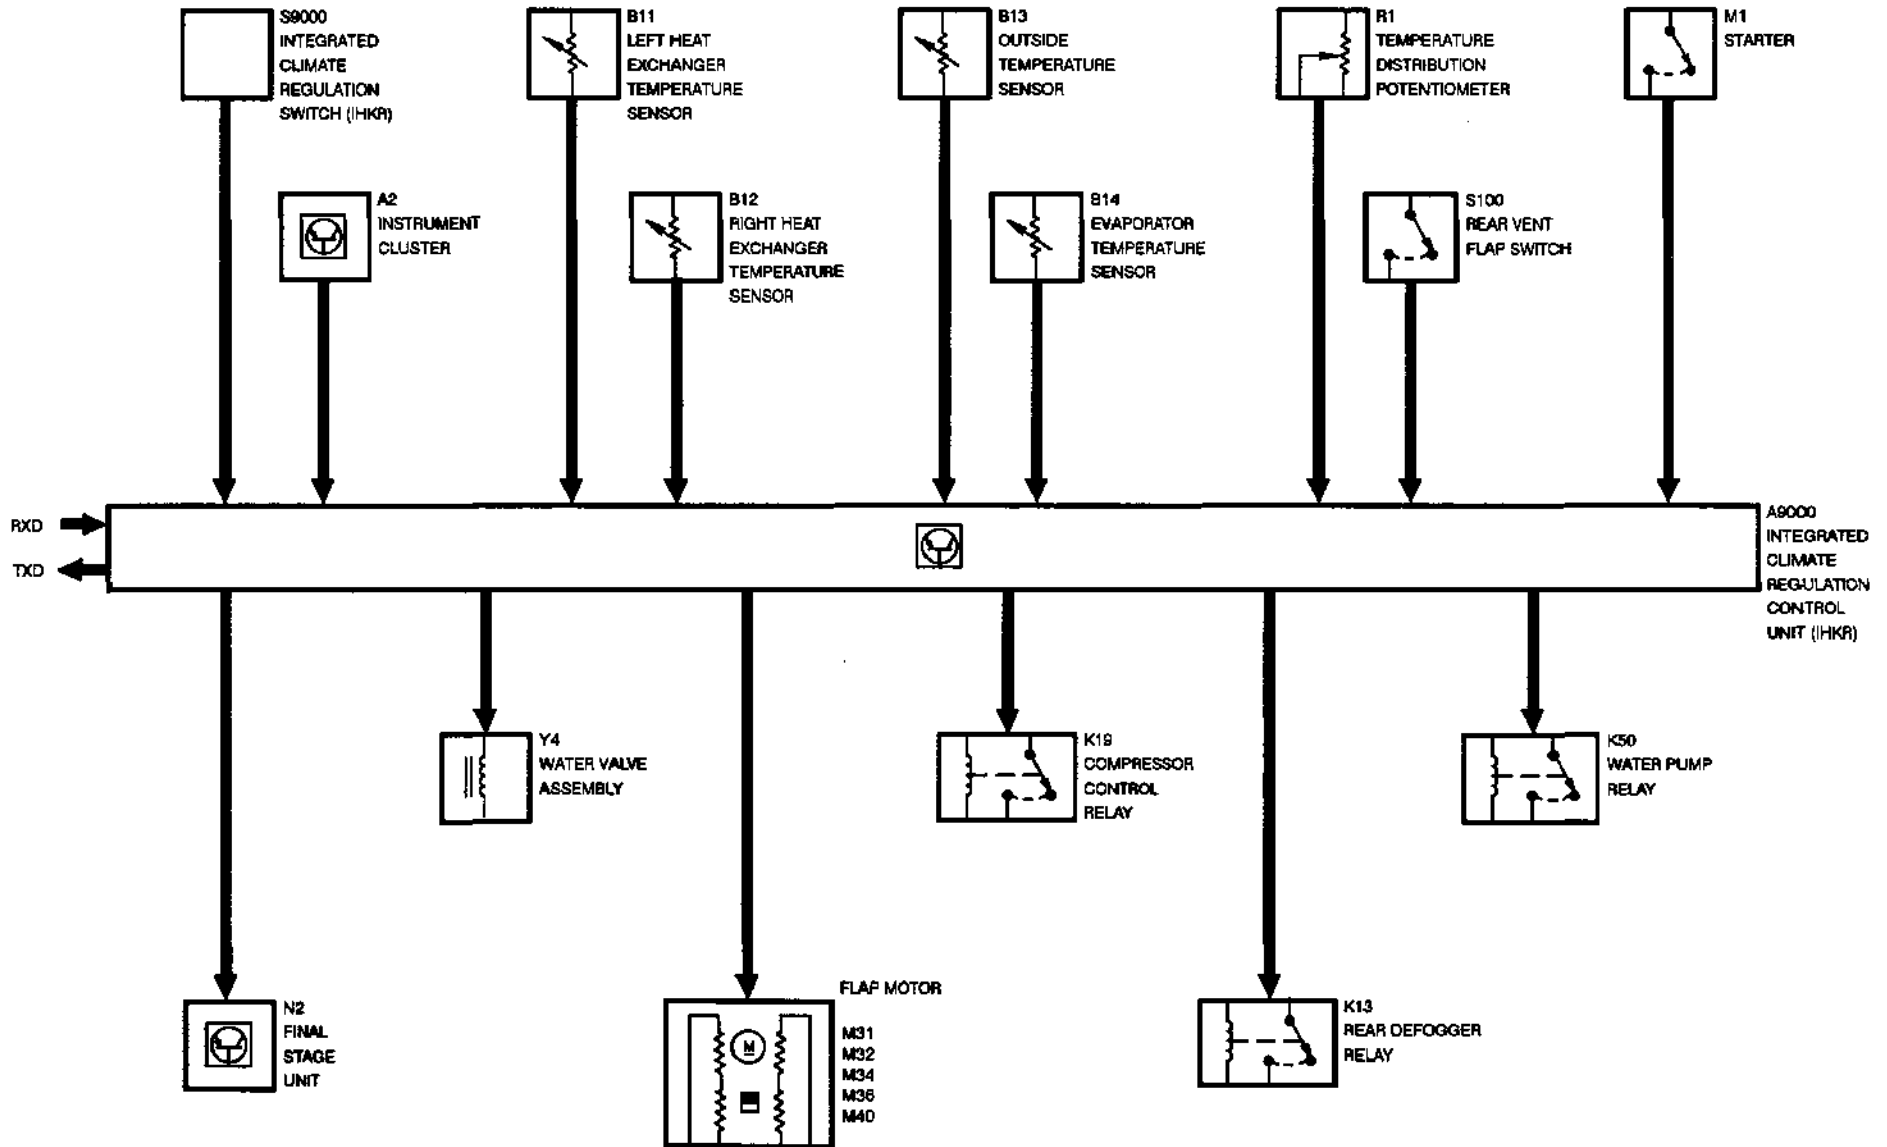


6450.1




INTEGRATED CLIMATE REGULATION (IHKR)

POWER

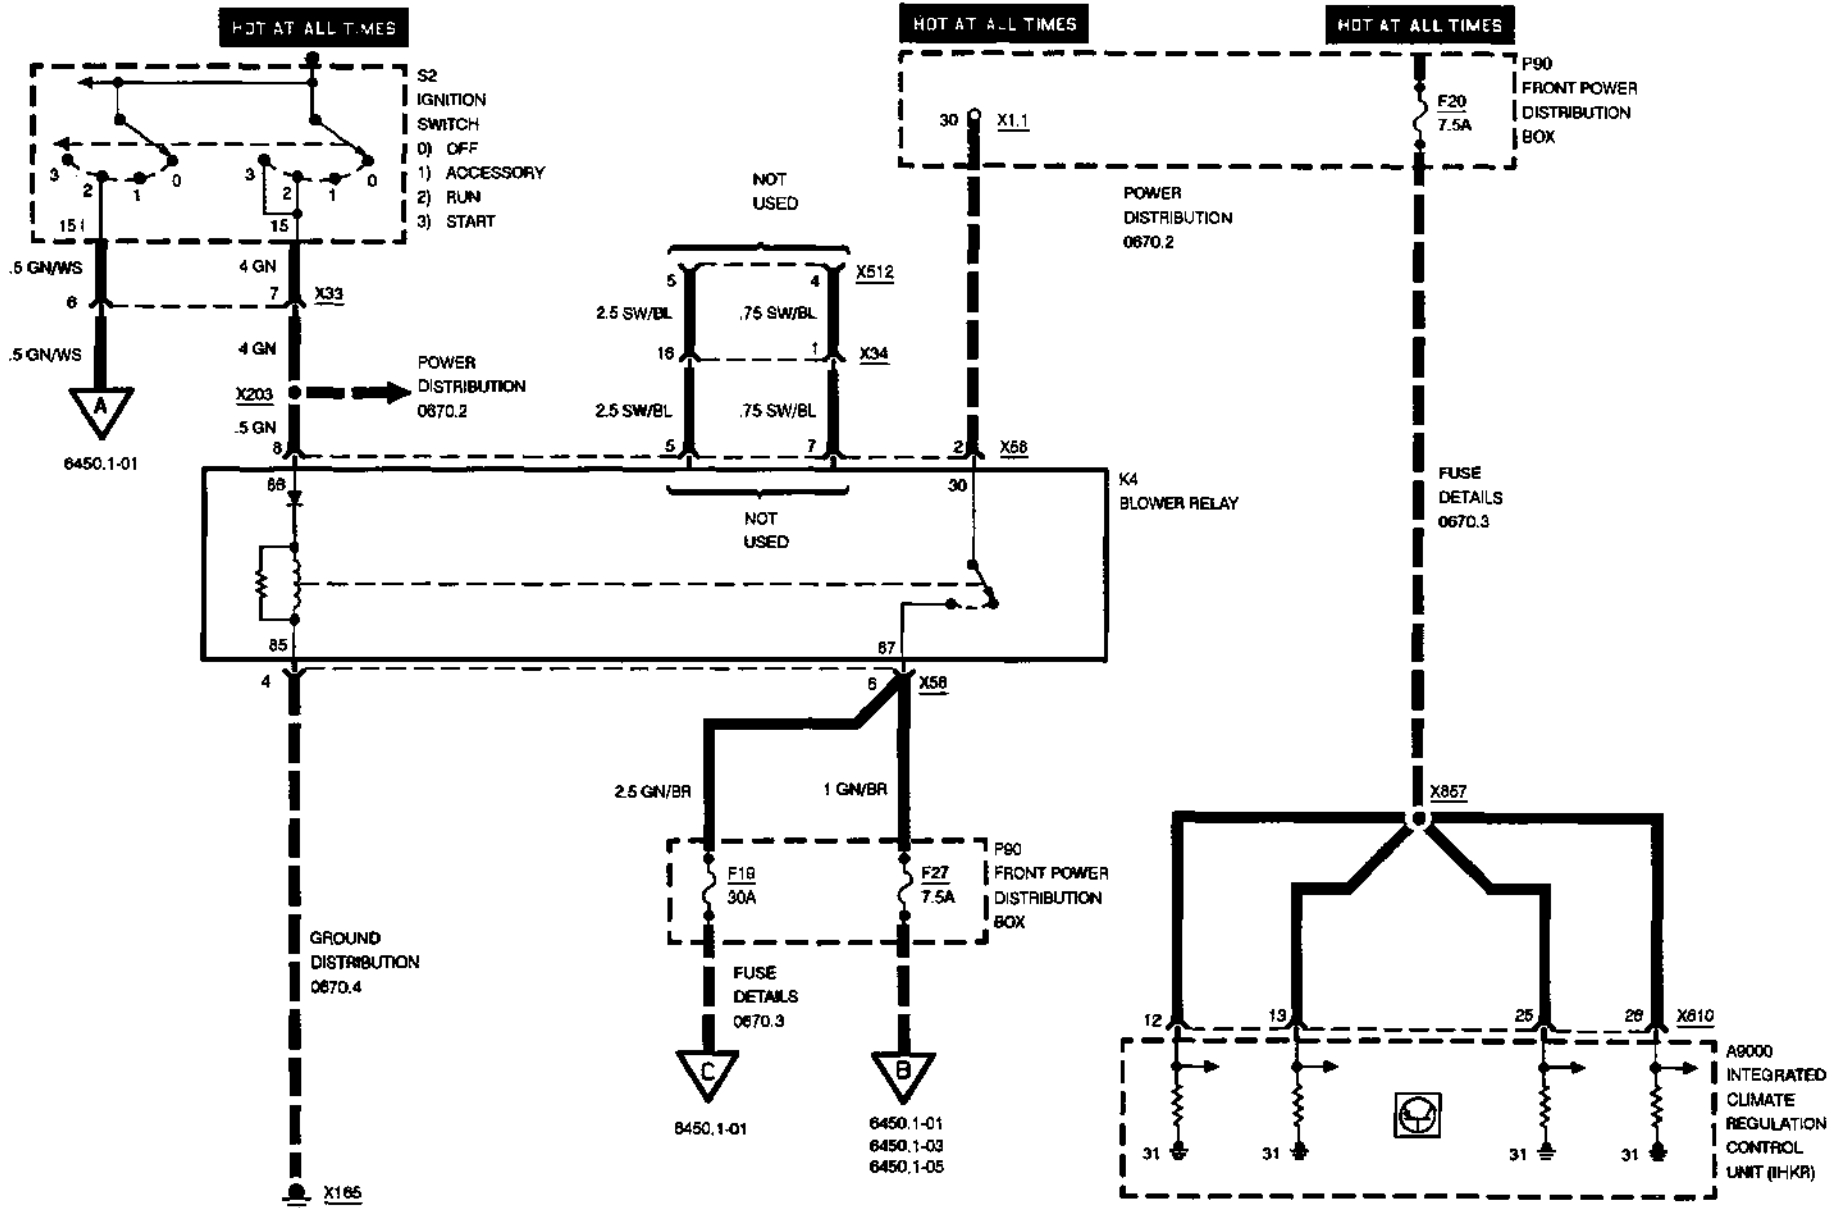


INTEGRATED CLIMATE REGULATION (IHKR) BLOWER CONTROLS

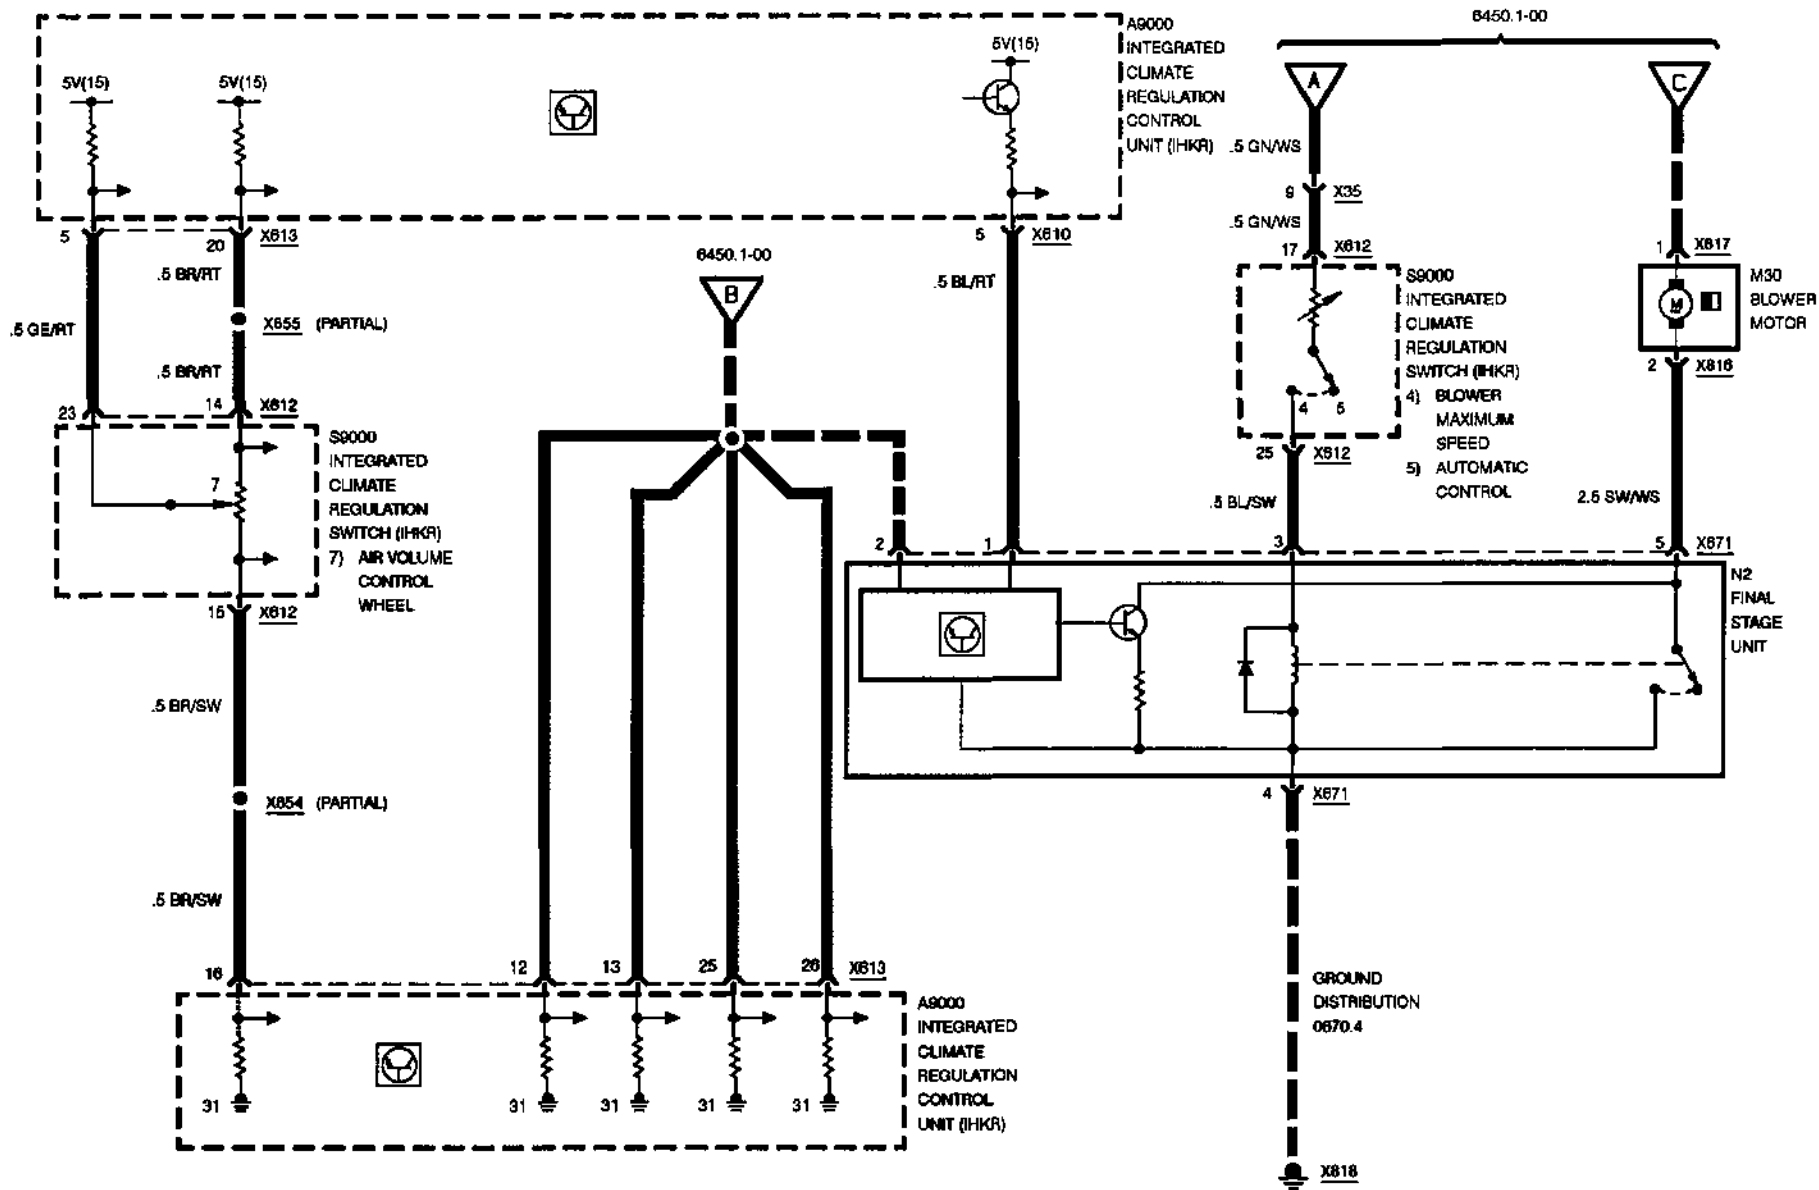




INTEGRATED CLIMATE REGULATION (IHKR) BLOWER CONTROLS

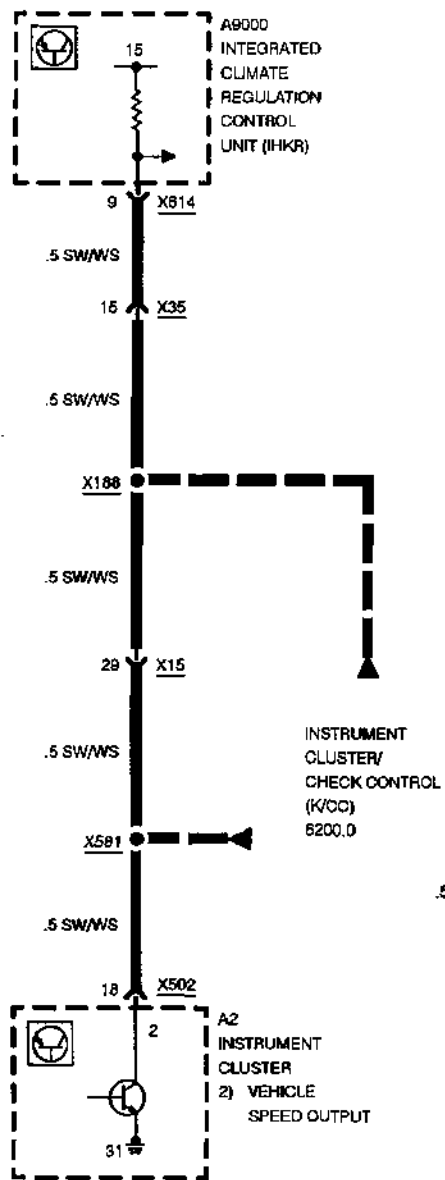


WATER VALVES

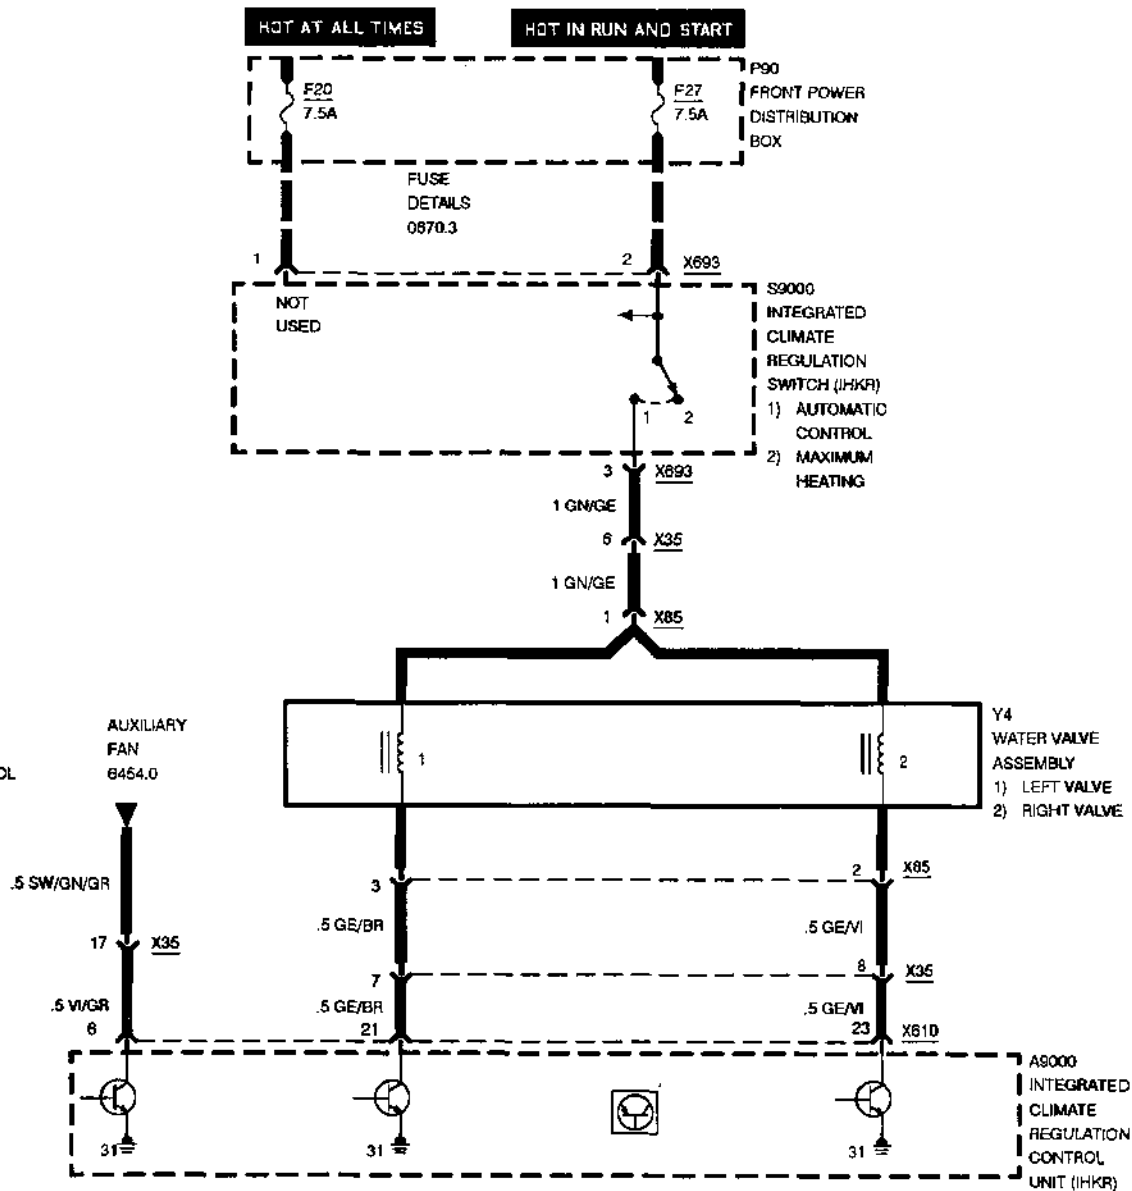




INTEGRATED CLIMATE REGULATION (IHKR) TEMPERATURE CONTROLS

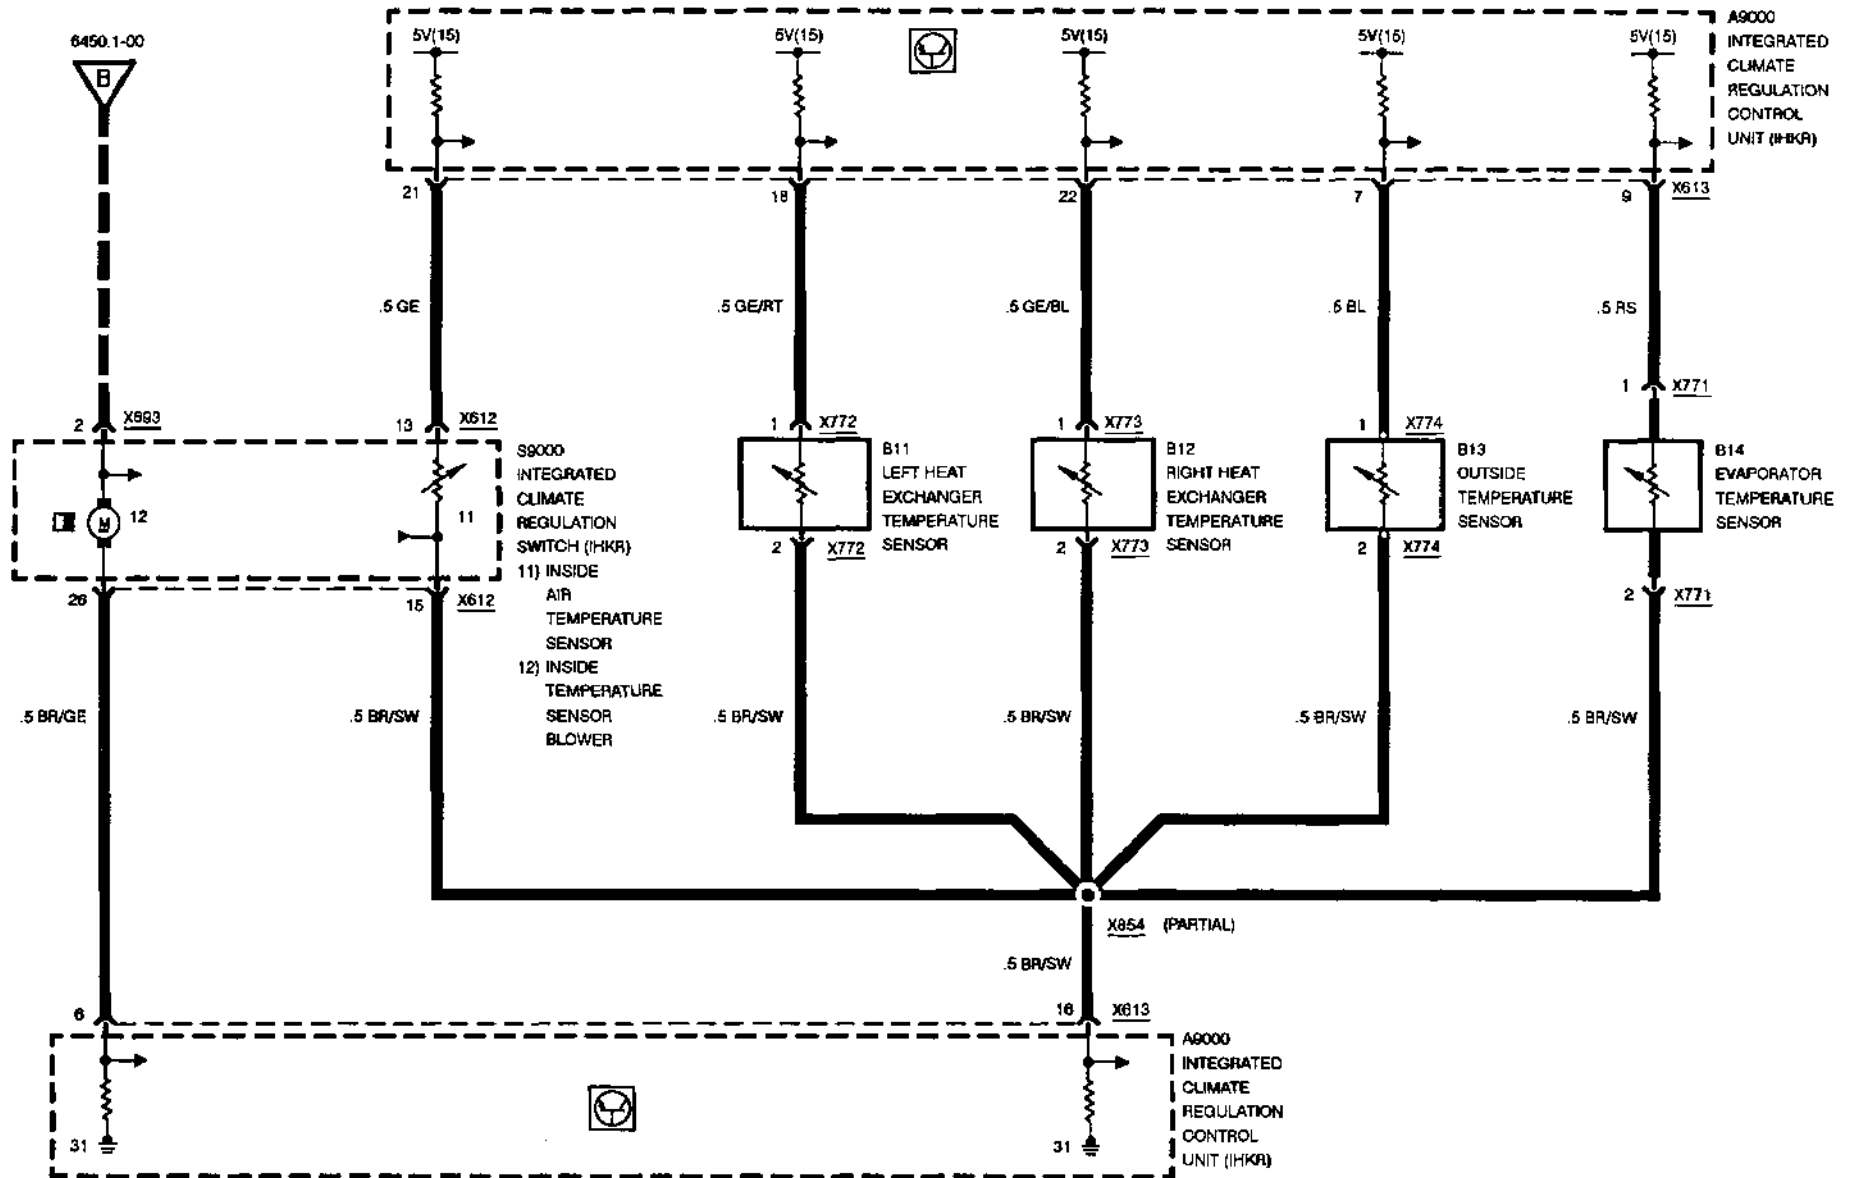



INTEGRATED CLIMATE REGULATION (IHKR)

TEMPERATURE CONTROLS

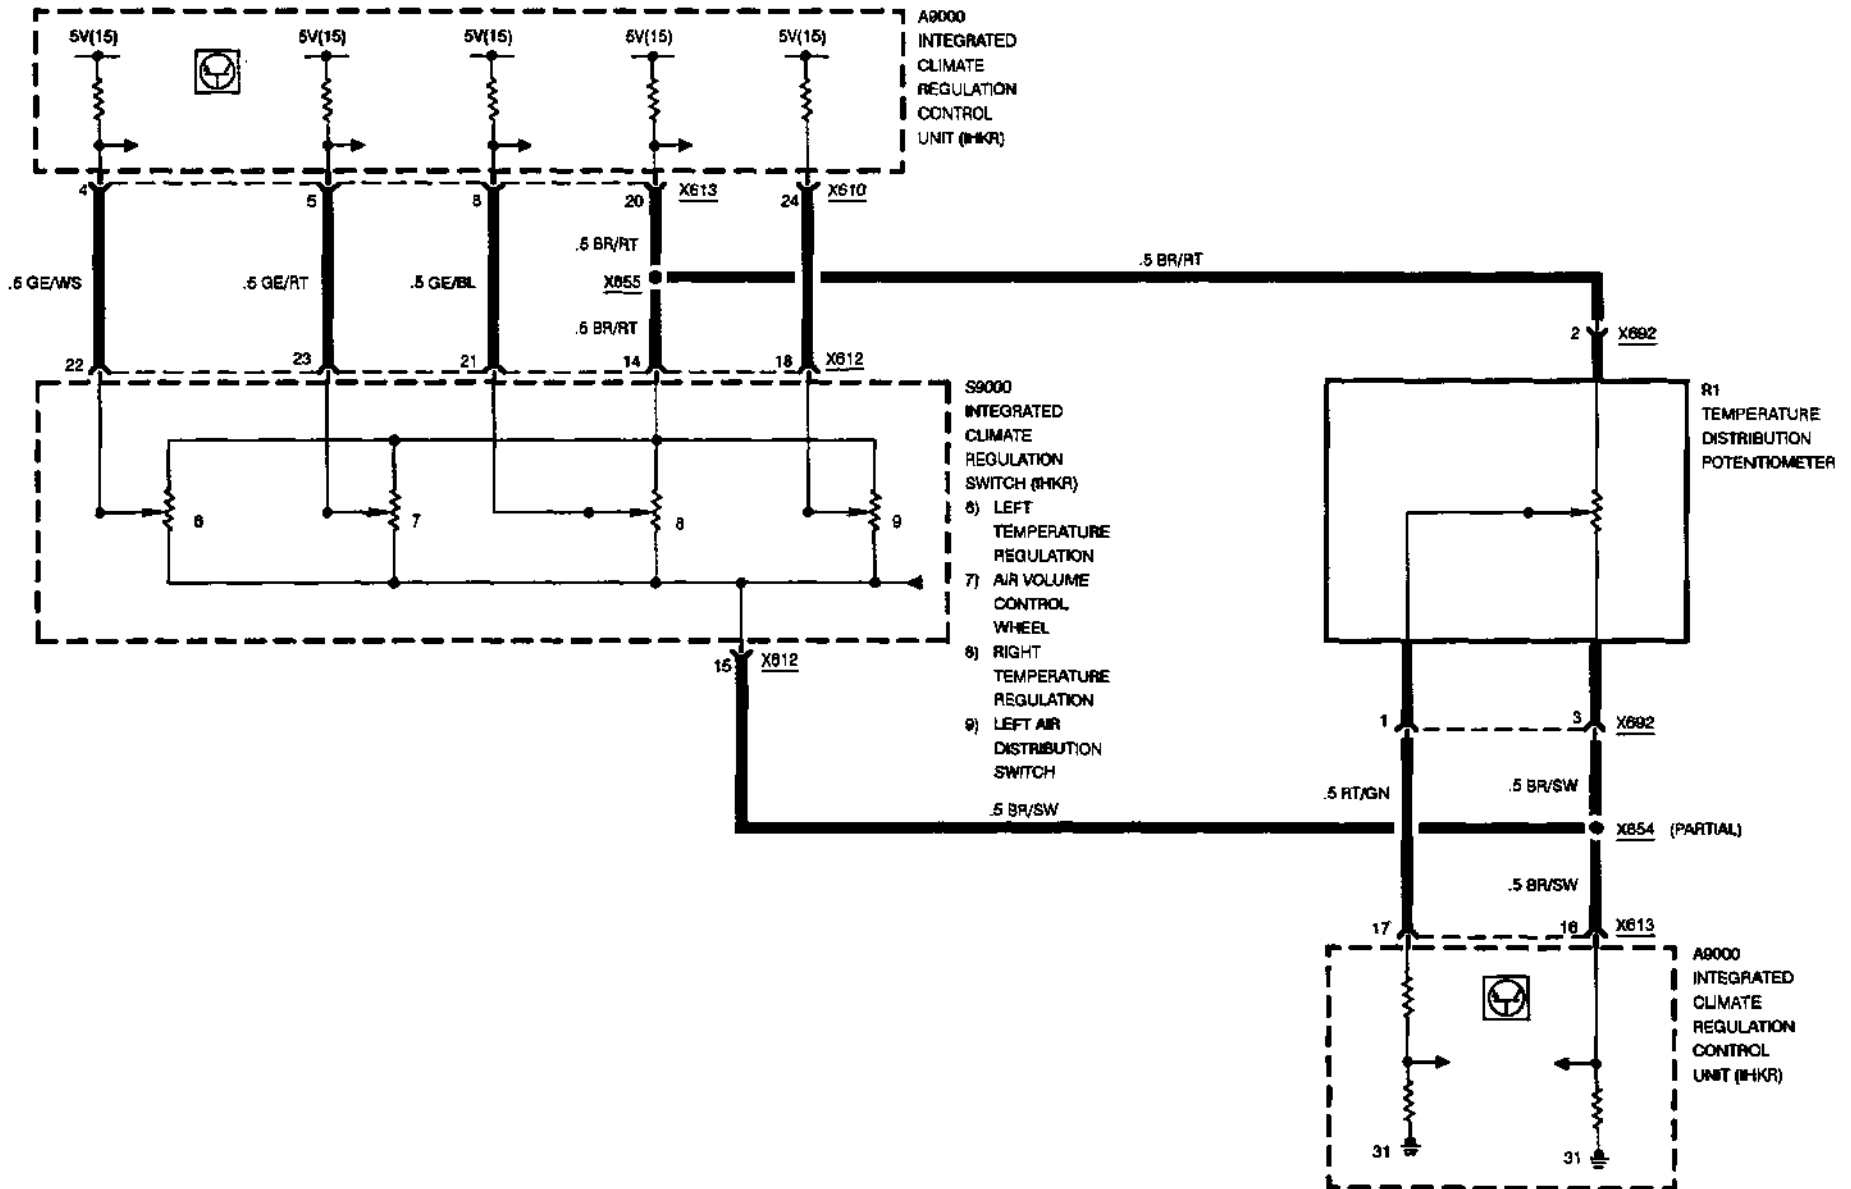

02/90


6450.1-04

1989



INTEGRATED CLIMATE REGULATION (IHKR)


AIR DELIVERY

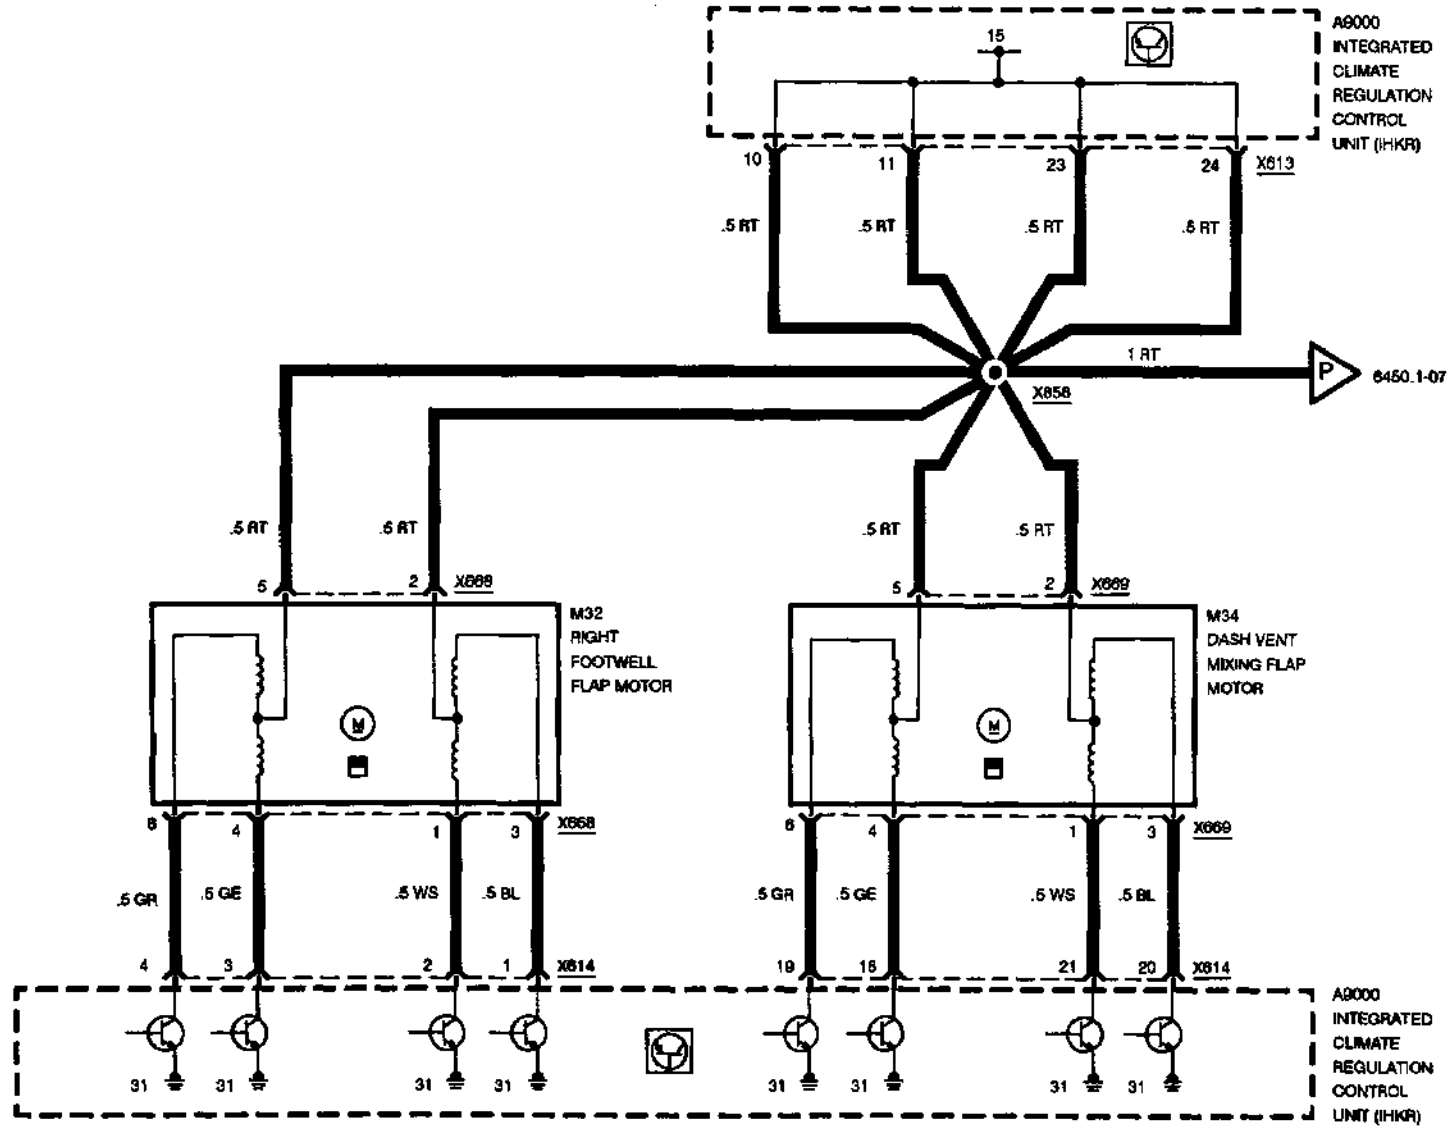



INTEGRATED CLIMATE REGULATION (IHKR)


AIR DELIVERY

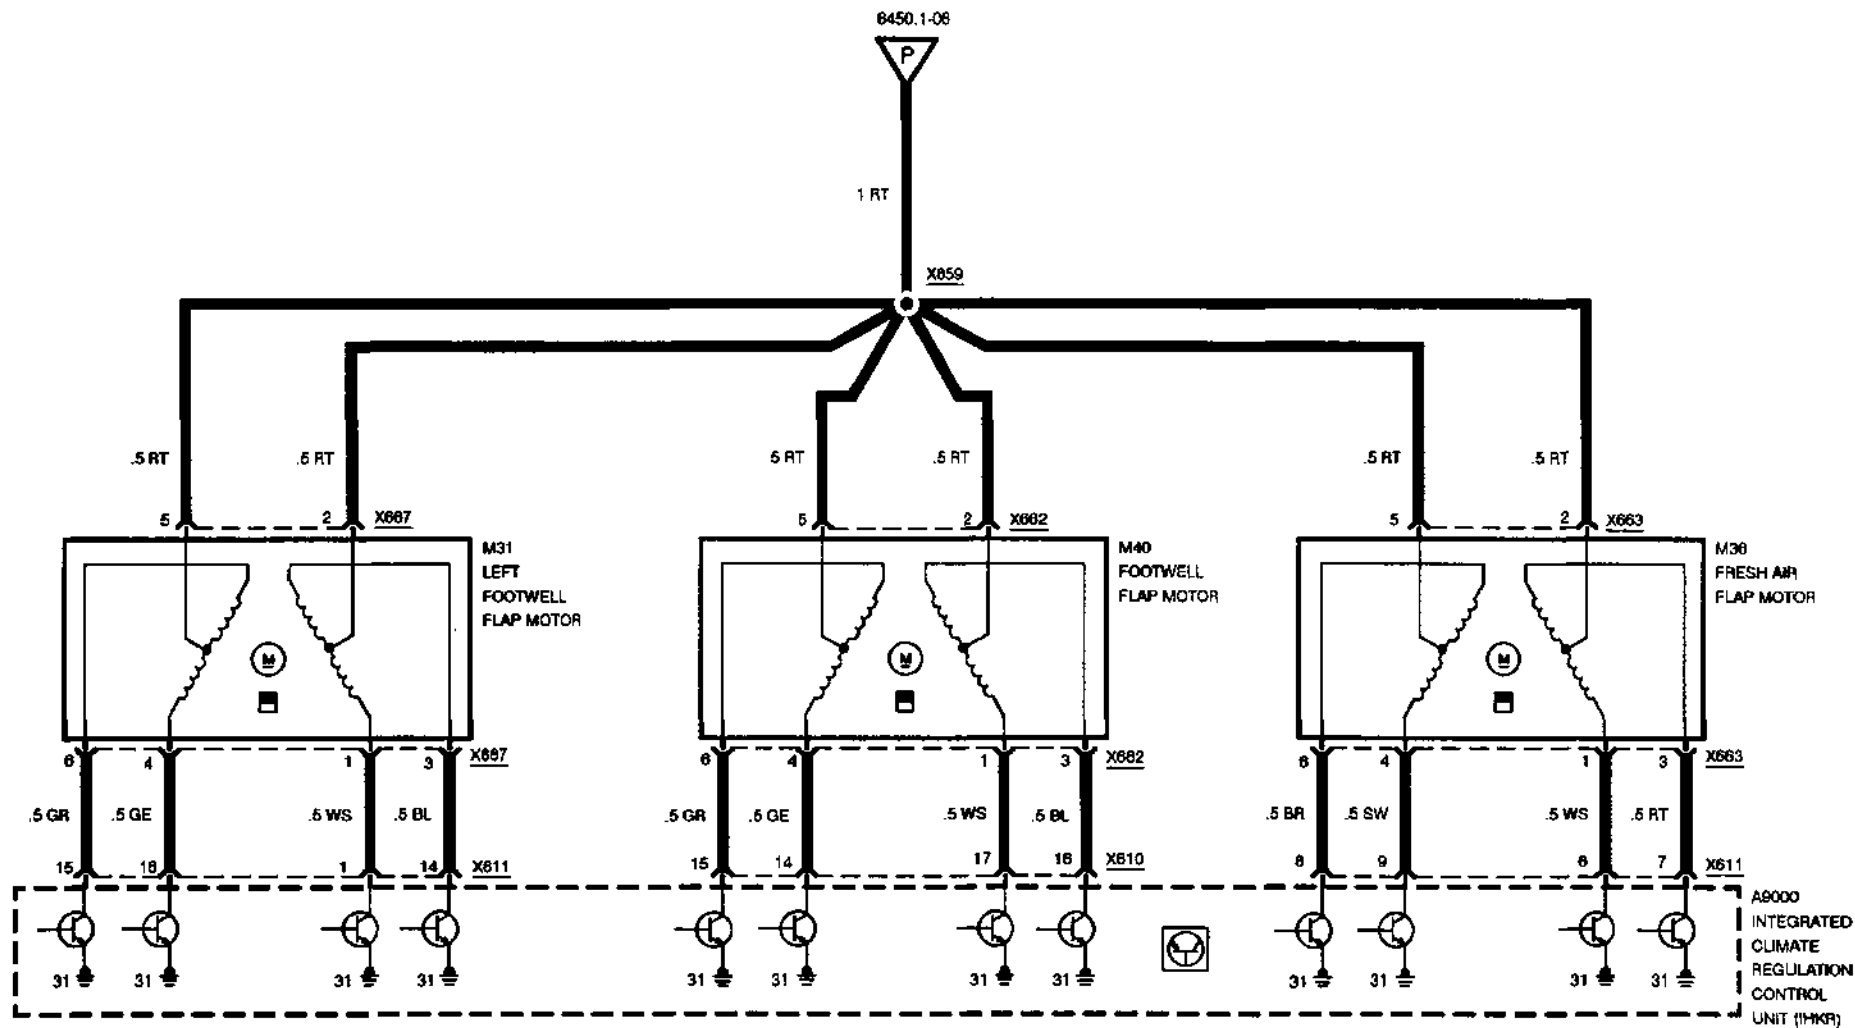



INTEGRATED CLIMATE REGULATION (HKR) COMPRESSOR CONTROLS

525i, 535i

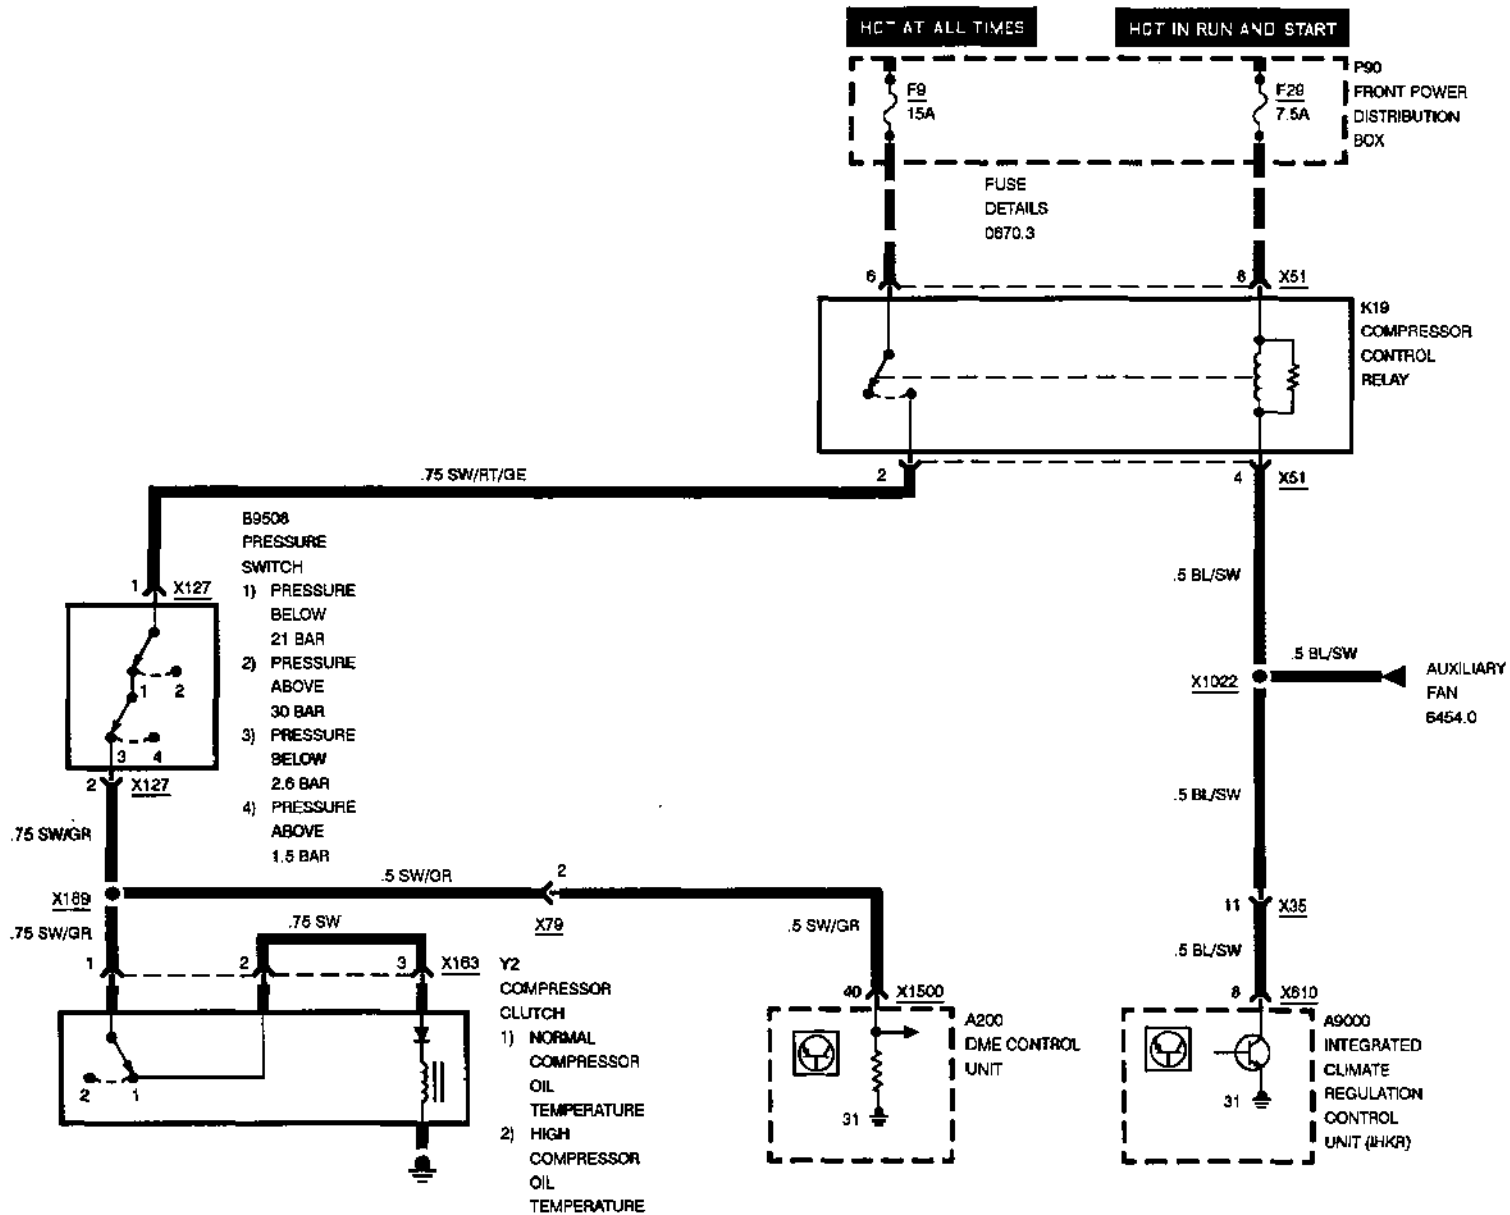

0290


6450.1-08

1989



INTEGRATED CLIMATE REGULATION (IHKR) COMPRESSOR CONTROLS

M5

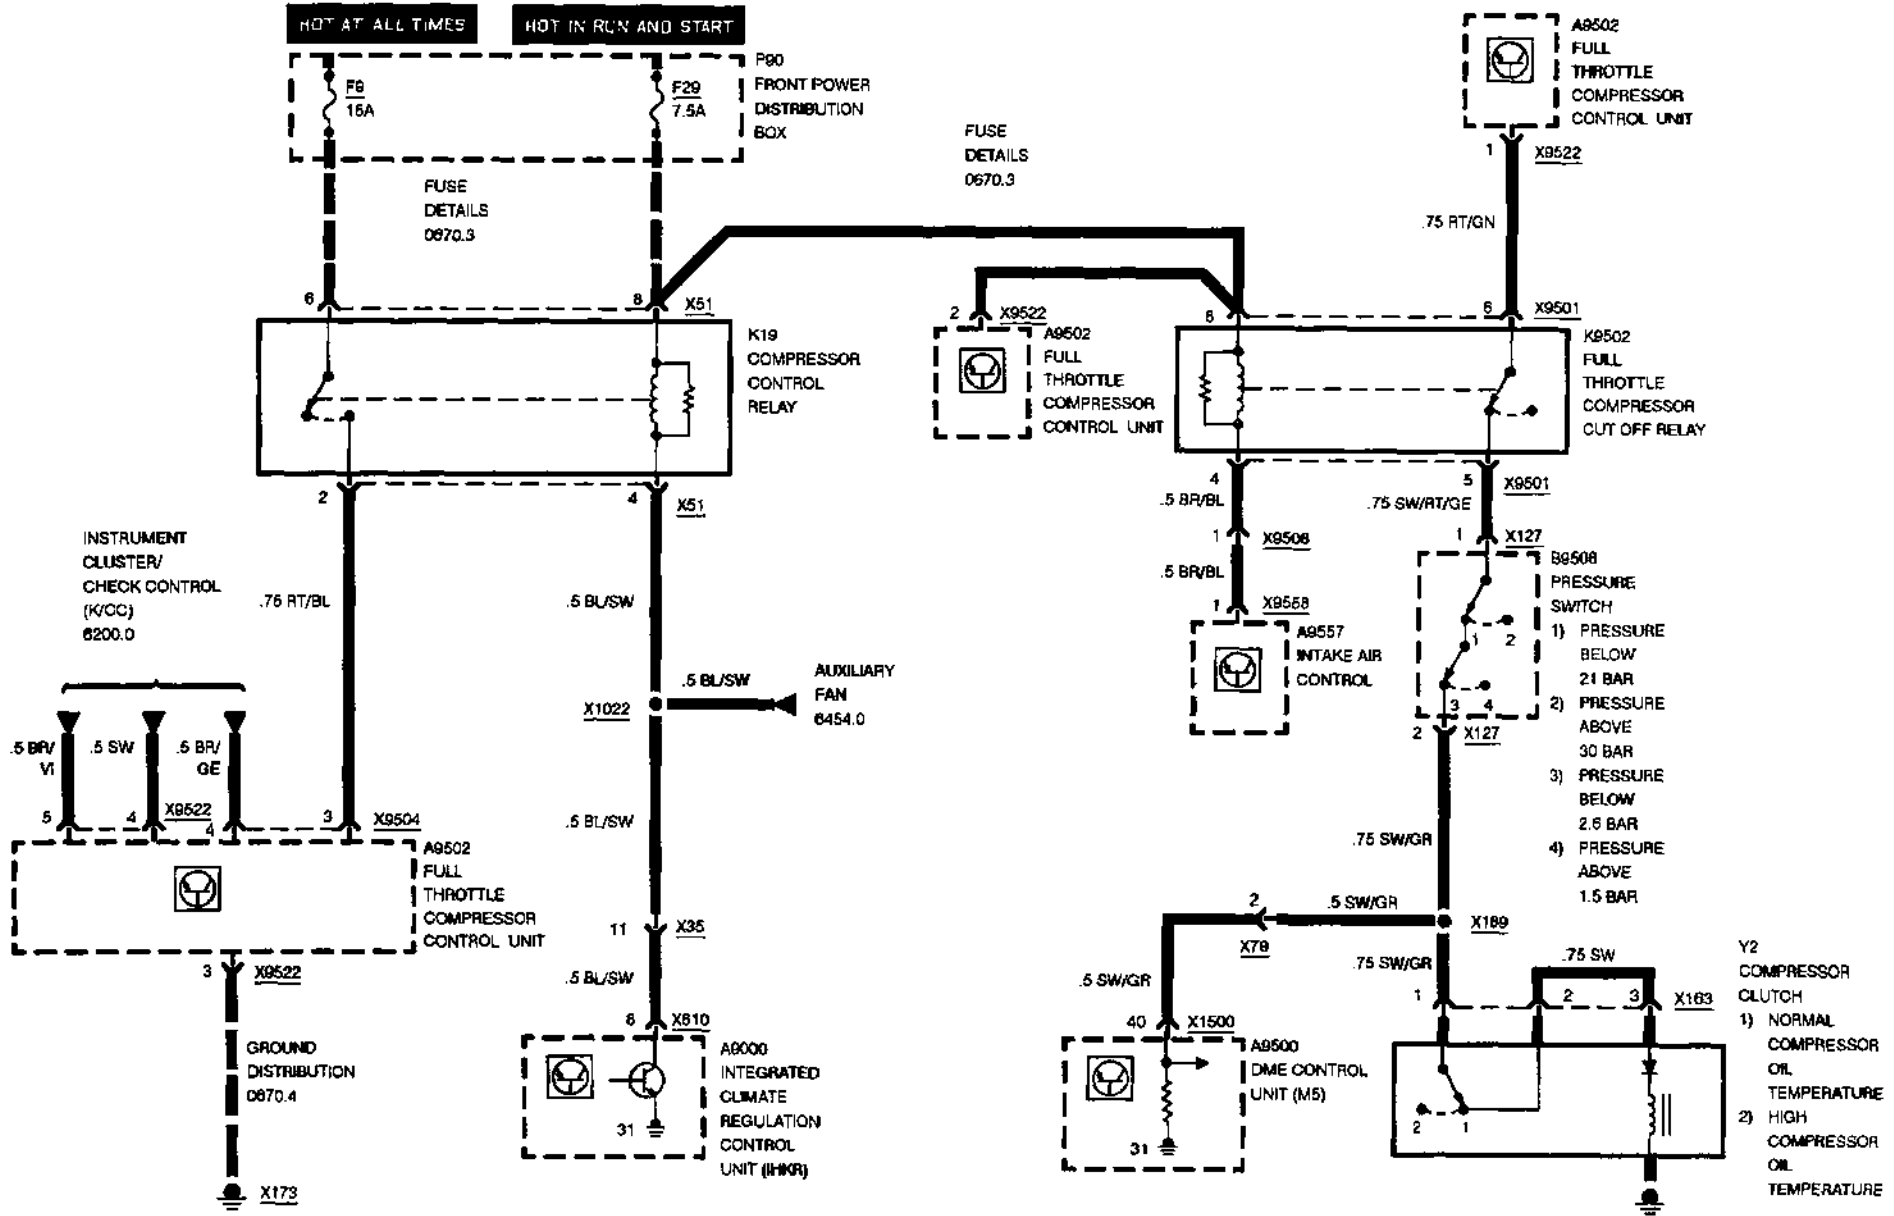

02/90


6450.1-09

1990




INTEGRATED CLIMATE REGULATION (IHKR)

AUXILIARY WATER PUMP

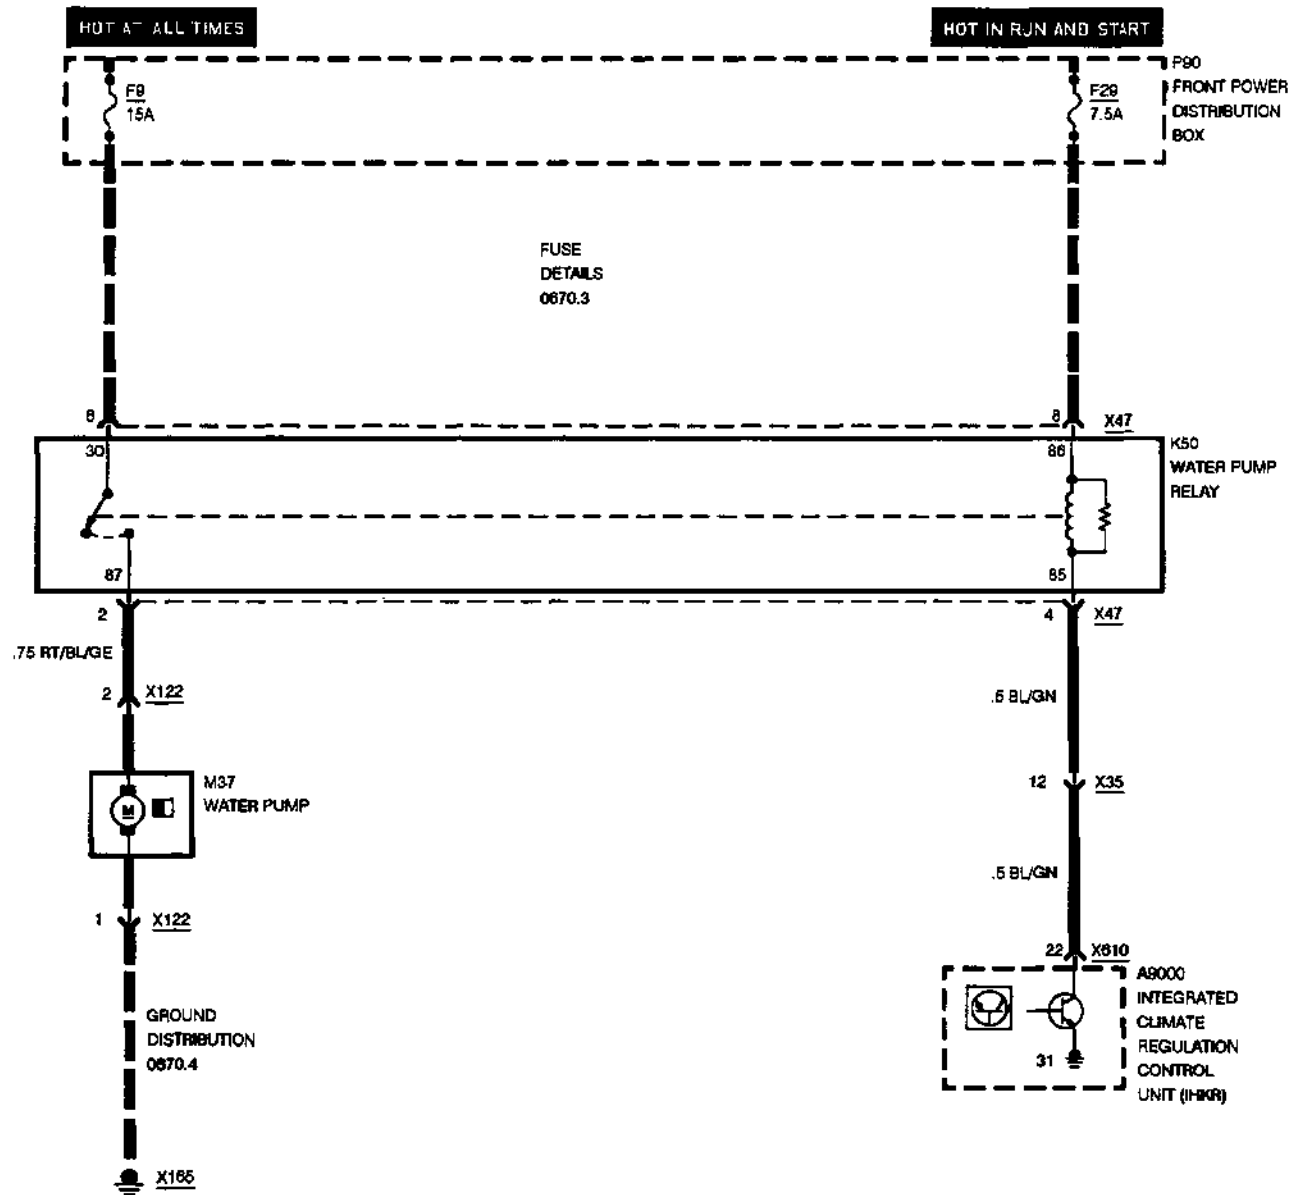




INTEGRATED CLIMATE REGULATION (IHKR) DIAGNOSTIC LINK AND STARTER INPUT

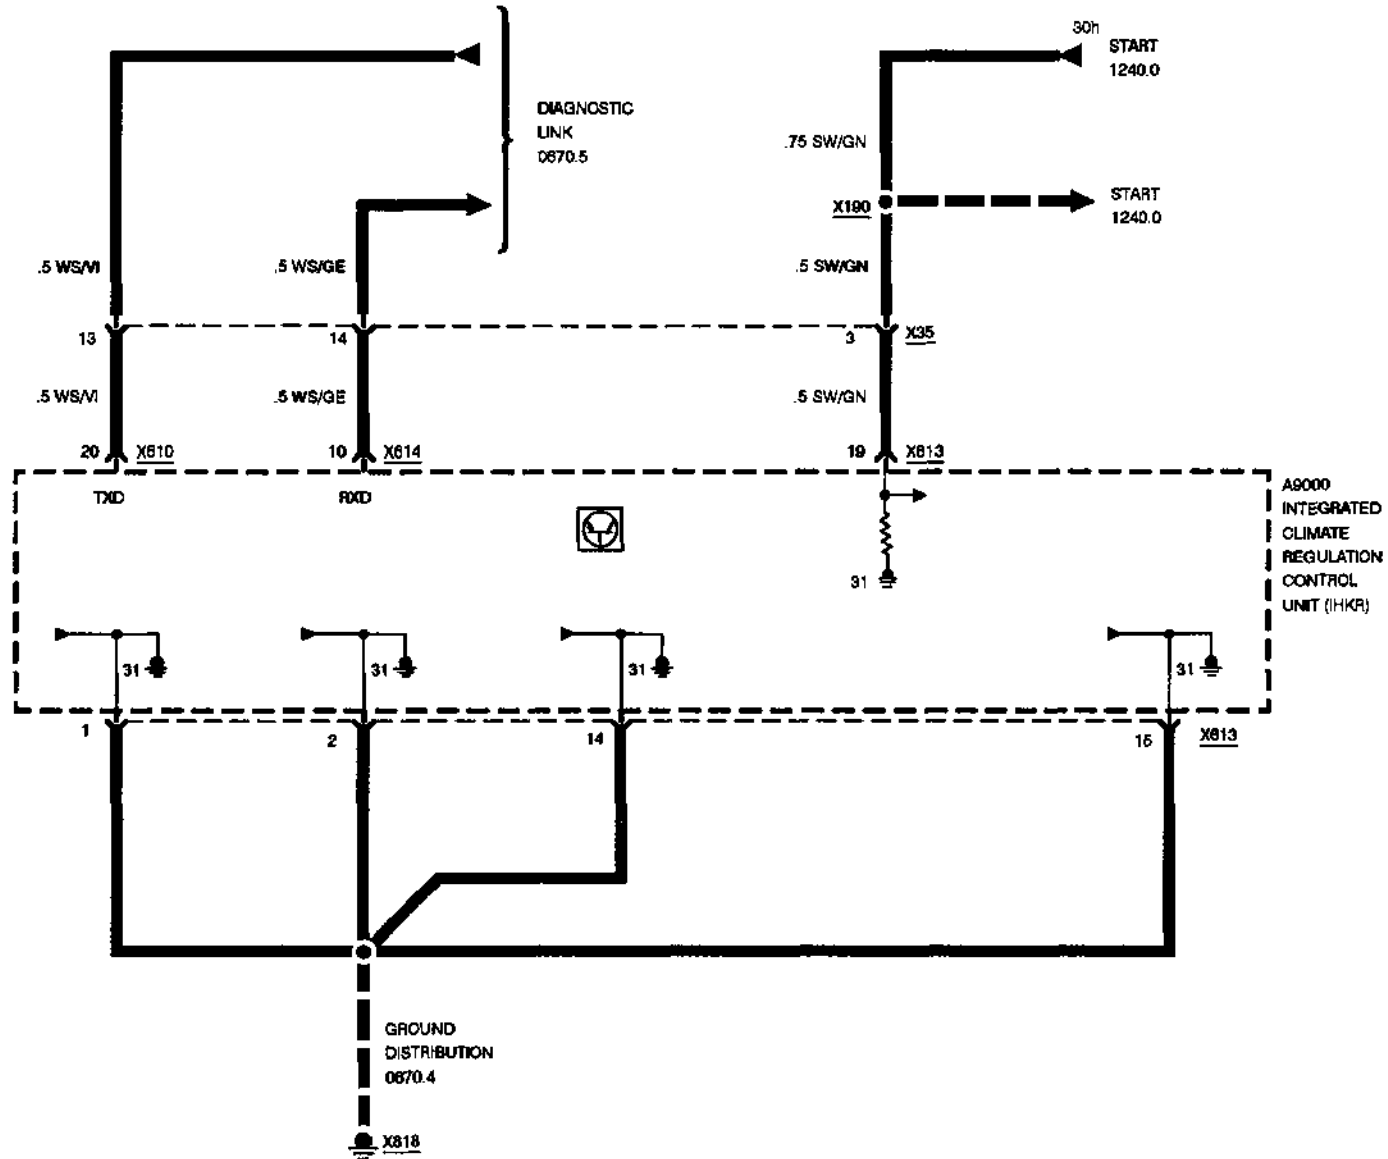


INTEGRATED CLIMATE REGULATION II (IHKR II)

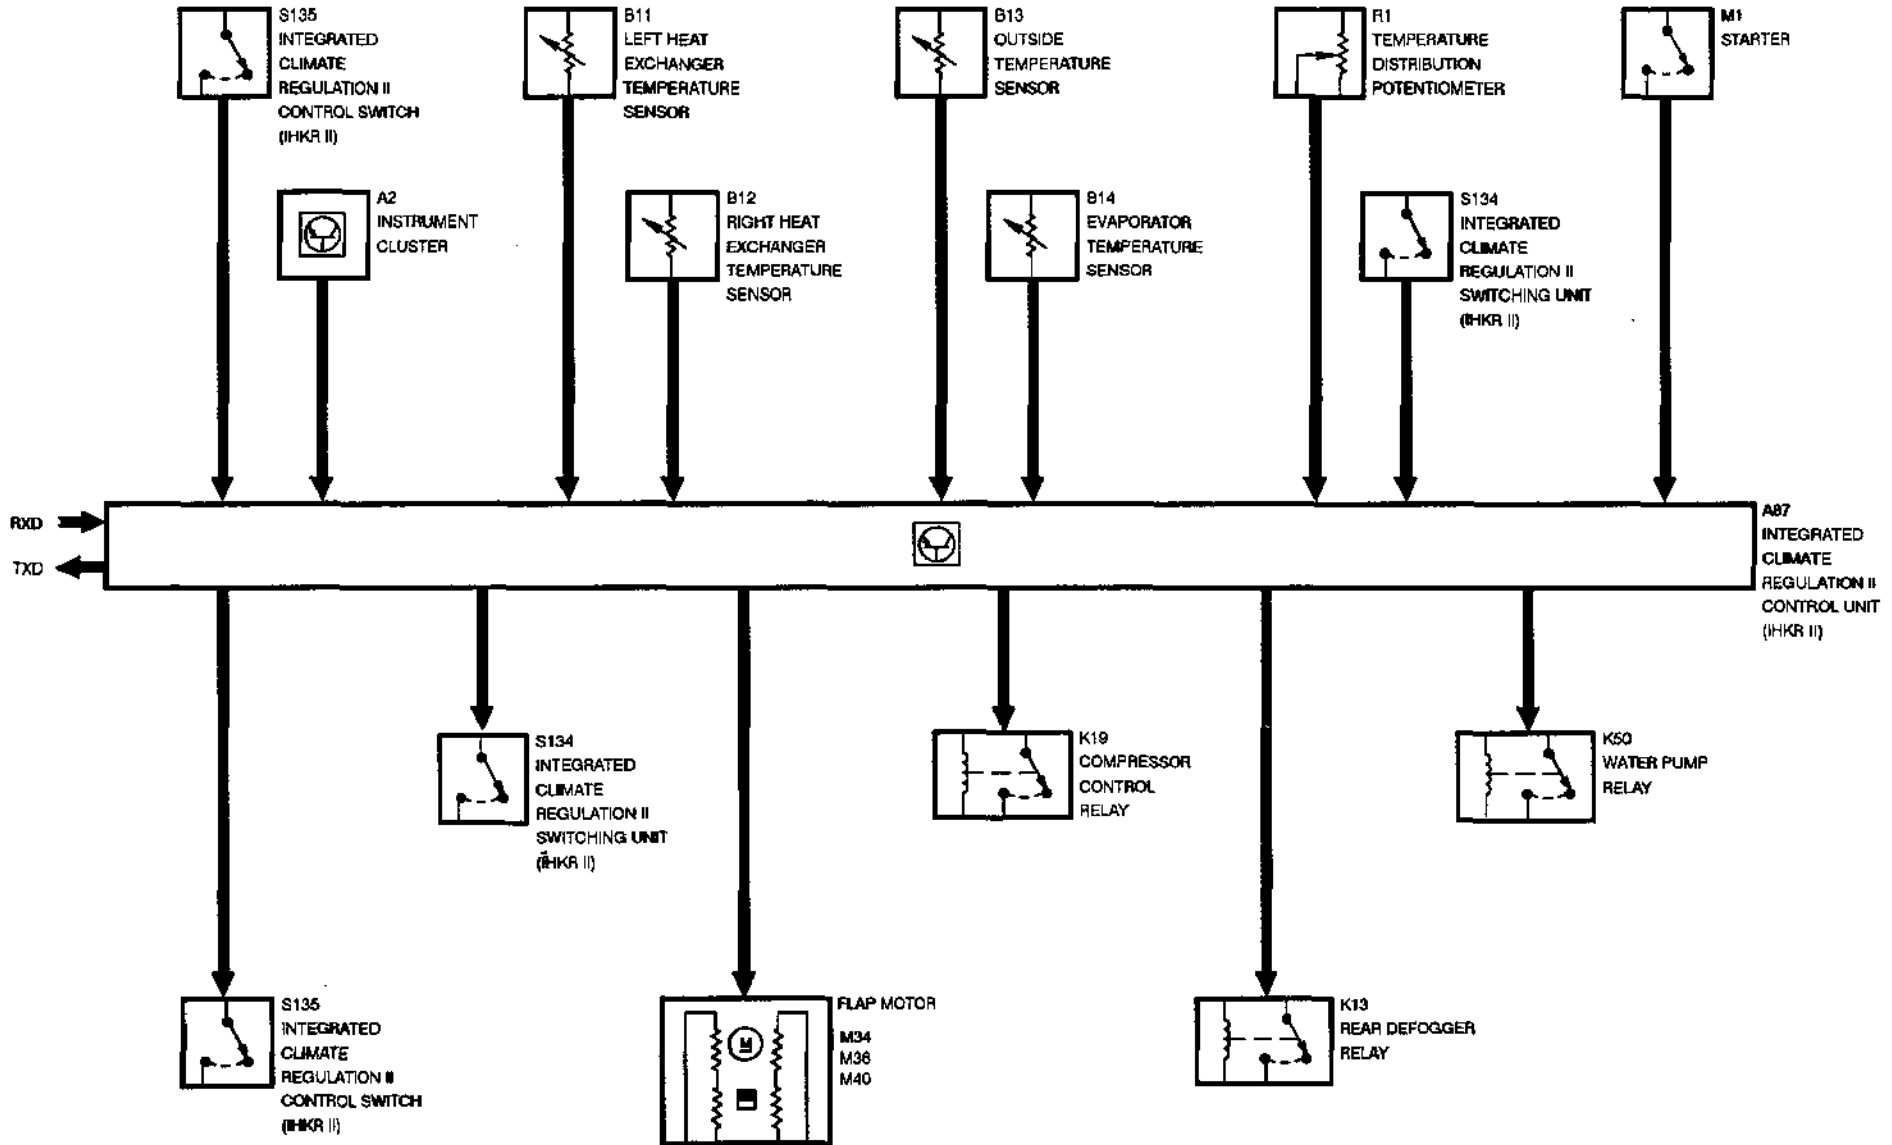



INTEGRATED CLIMATE REGULATION II (IHKR II)

POWER

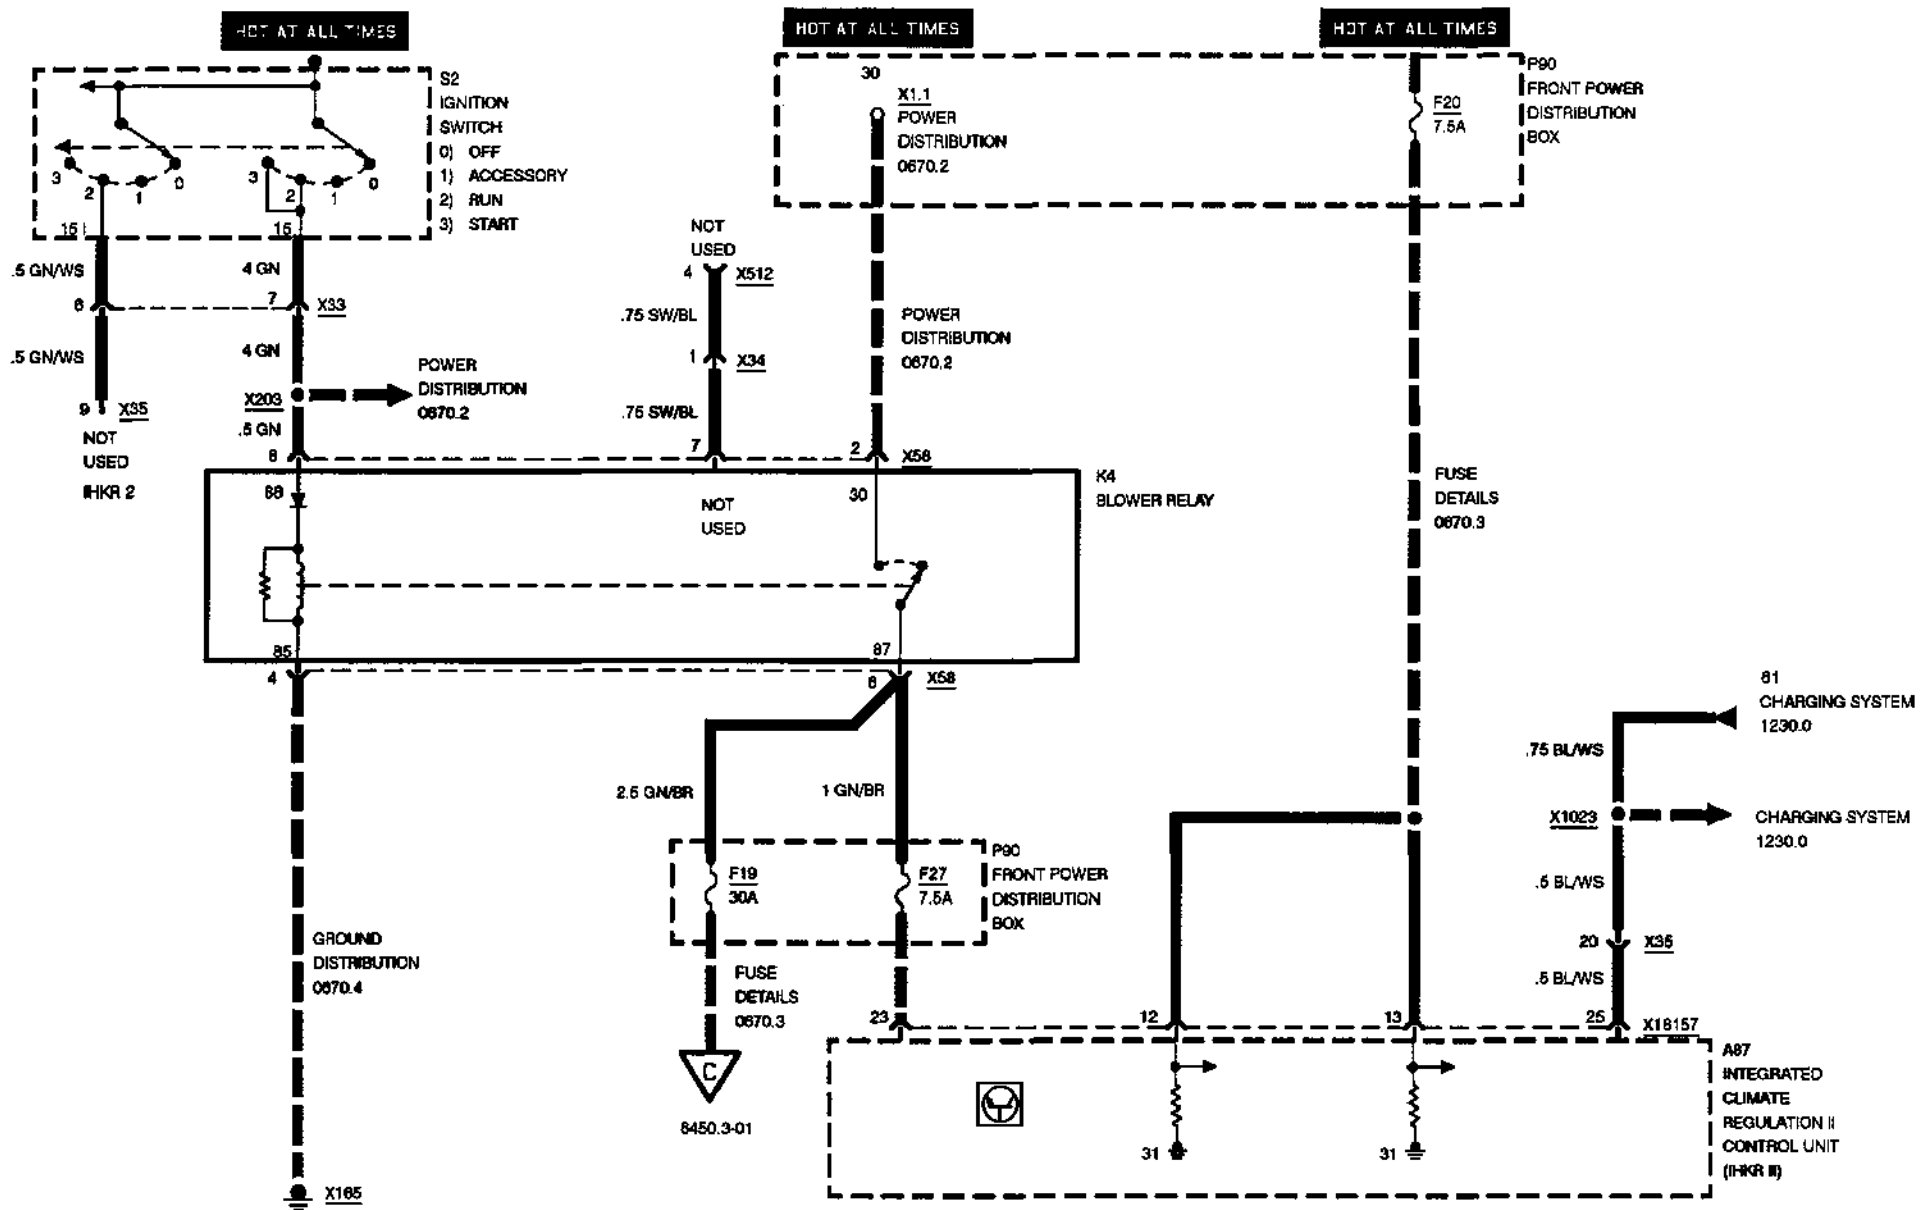


07/90

6450.3-00

19/90


INTEGRATED CLIMATE REGULATION II (IHKR II)

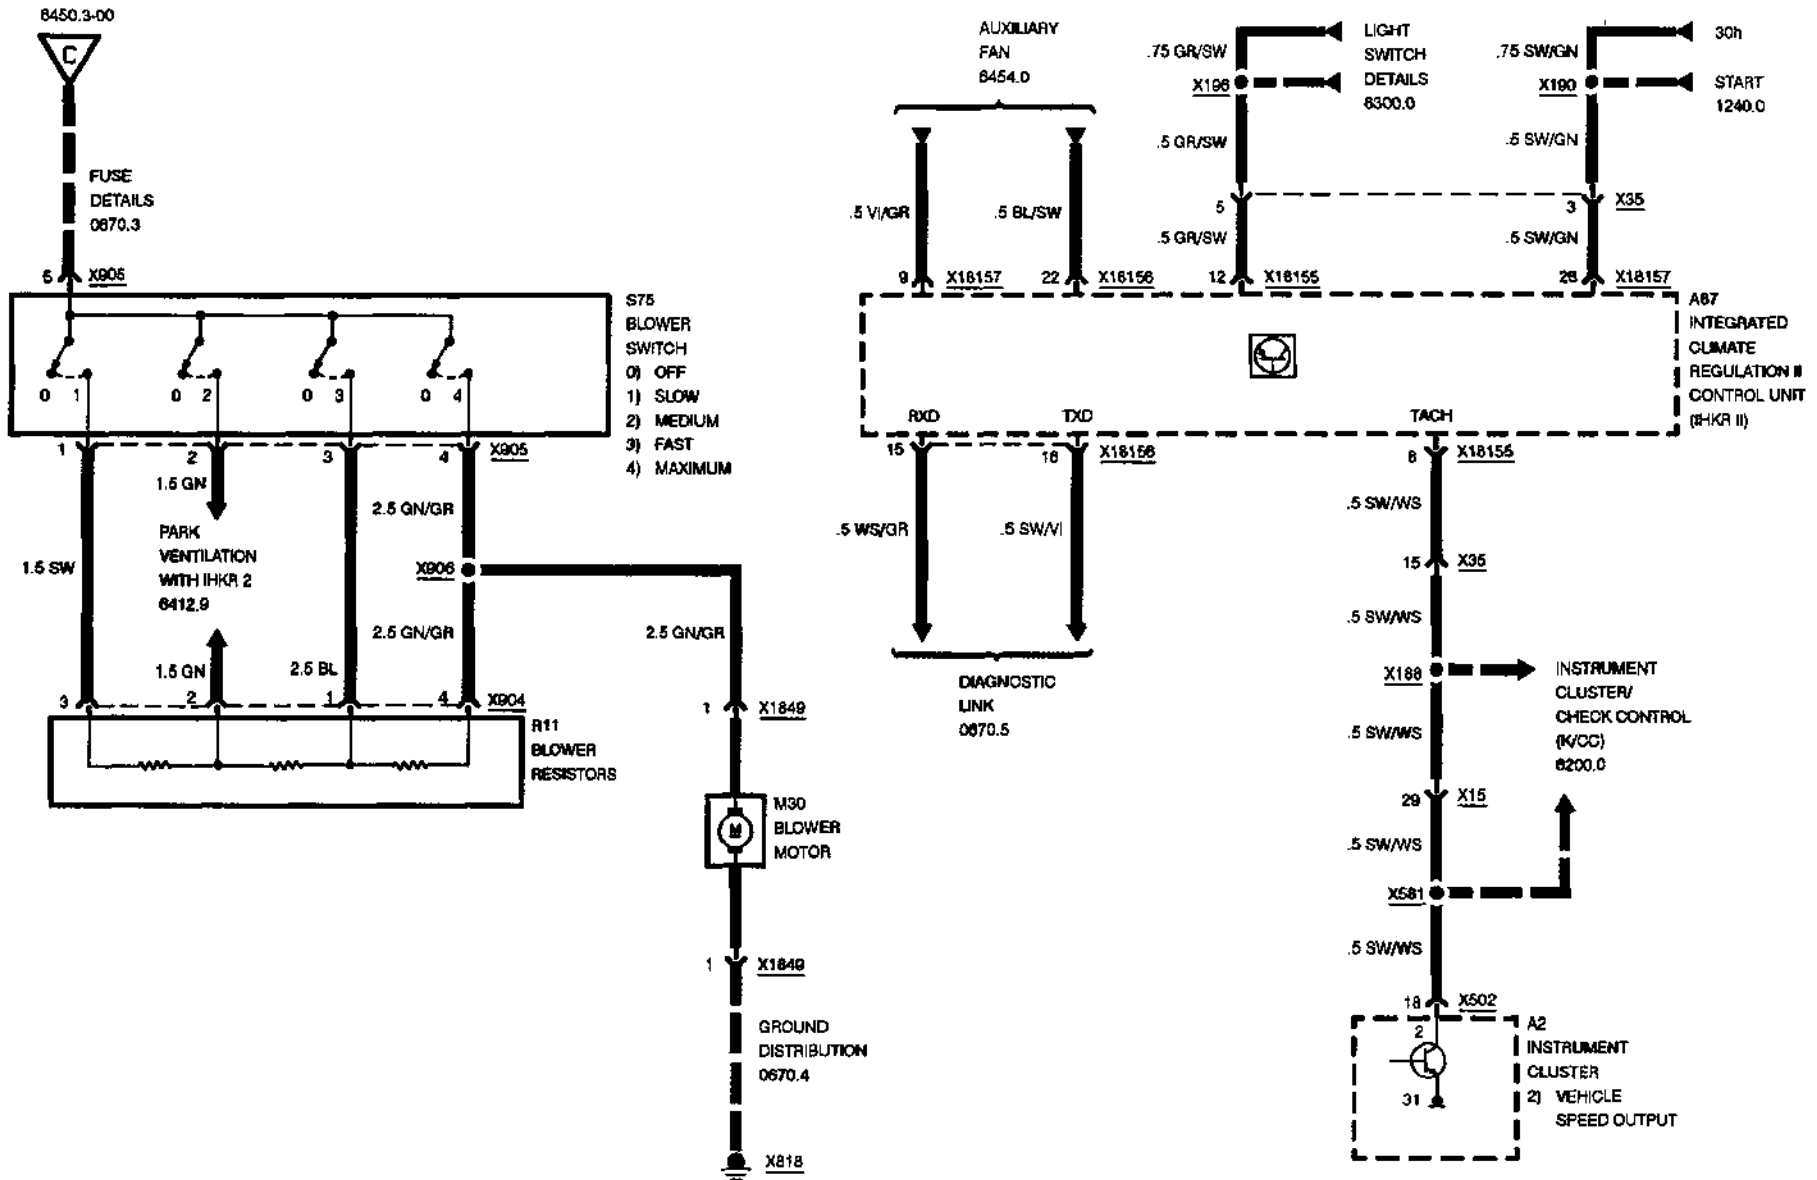




INTEGRATED CLIMATE REGULATION II (IHKR II)

TEMPERATURE CONTROLS

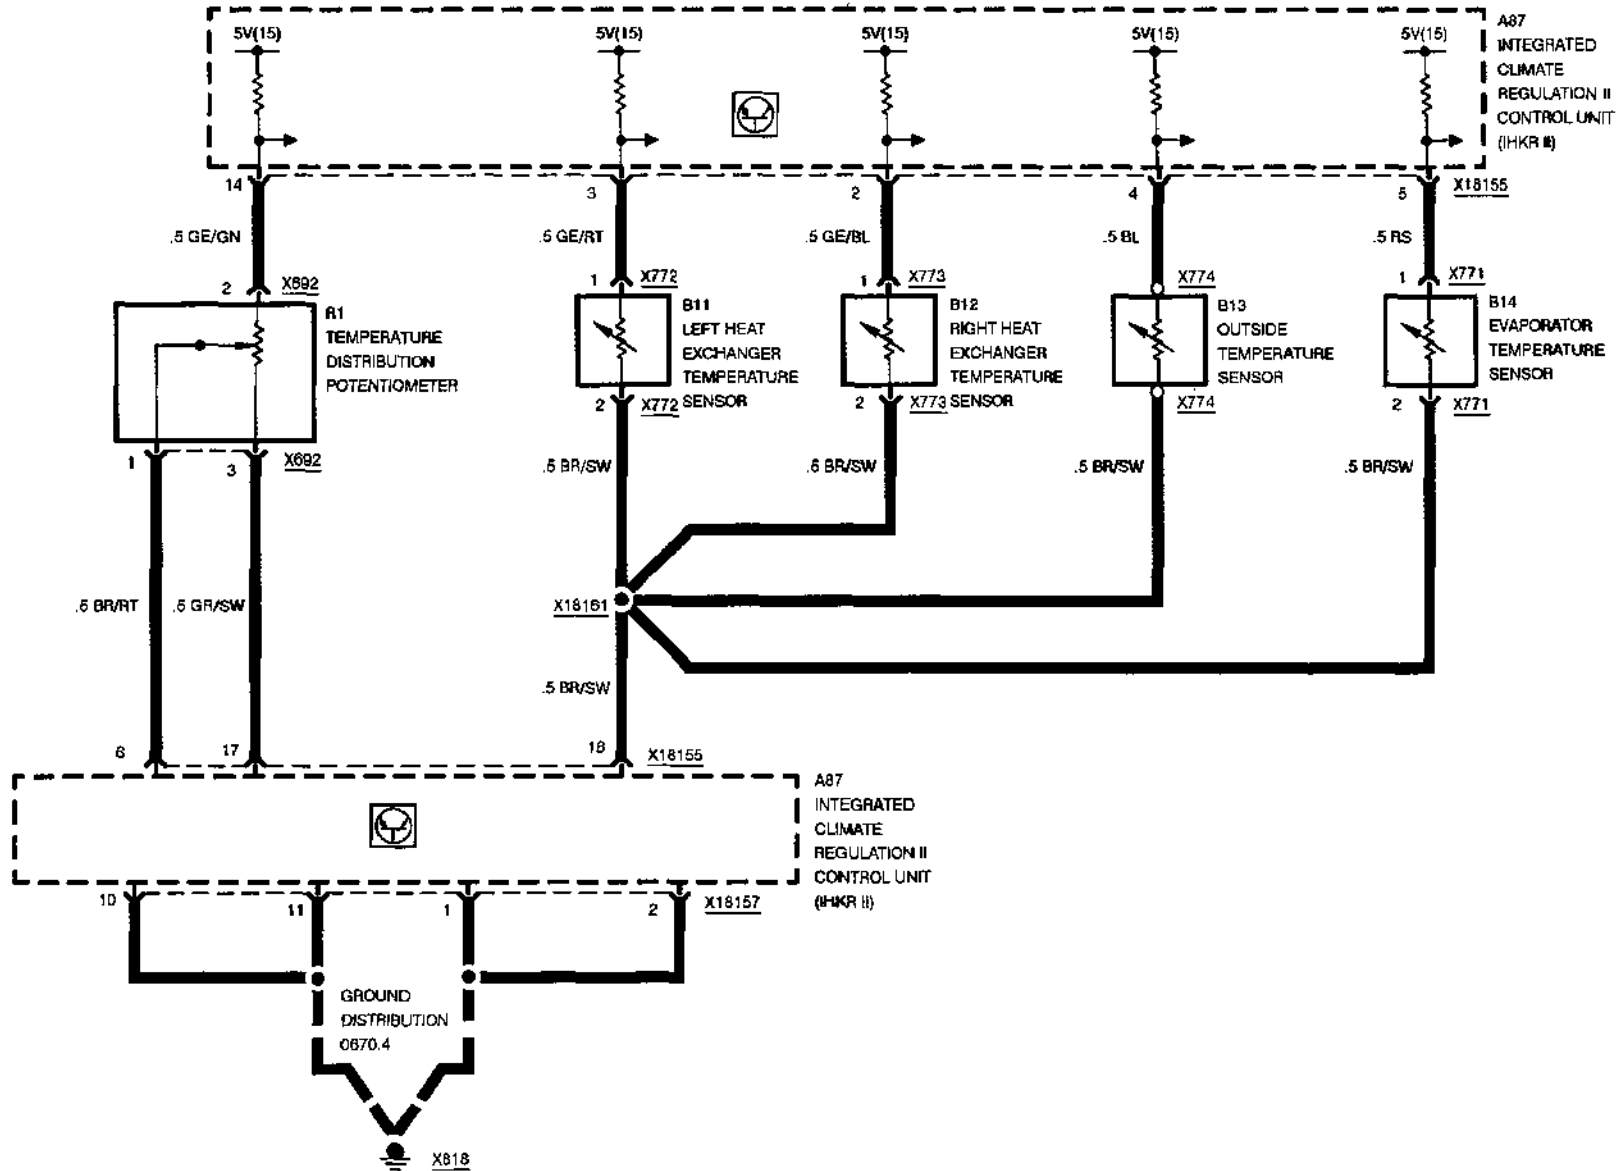



INTEGRATED CLIMATE REGULATION II (IHKR II) AIR DELIVERY

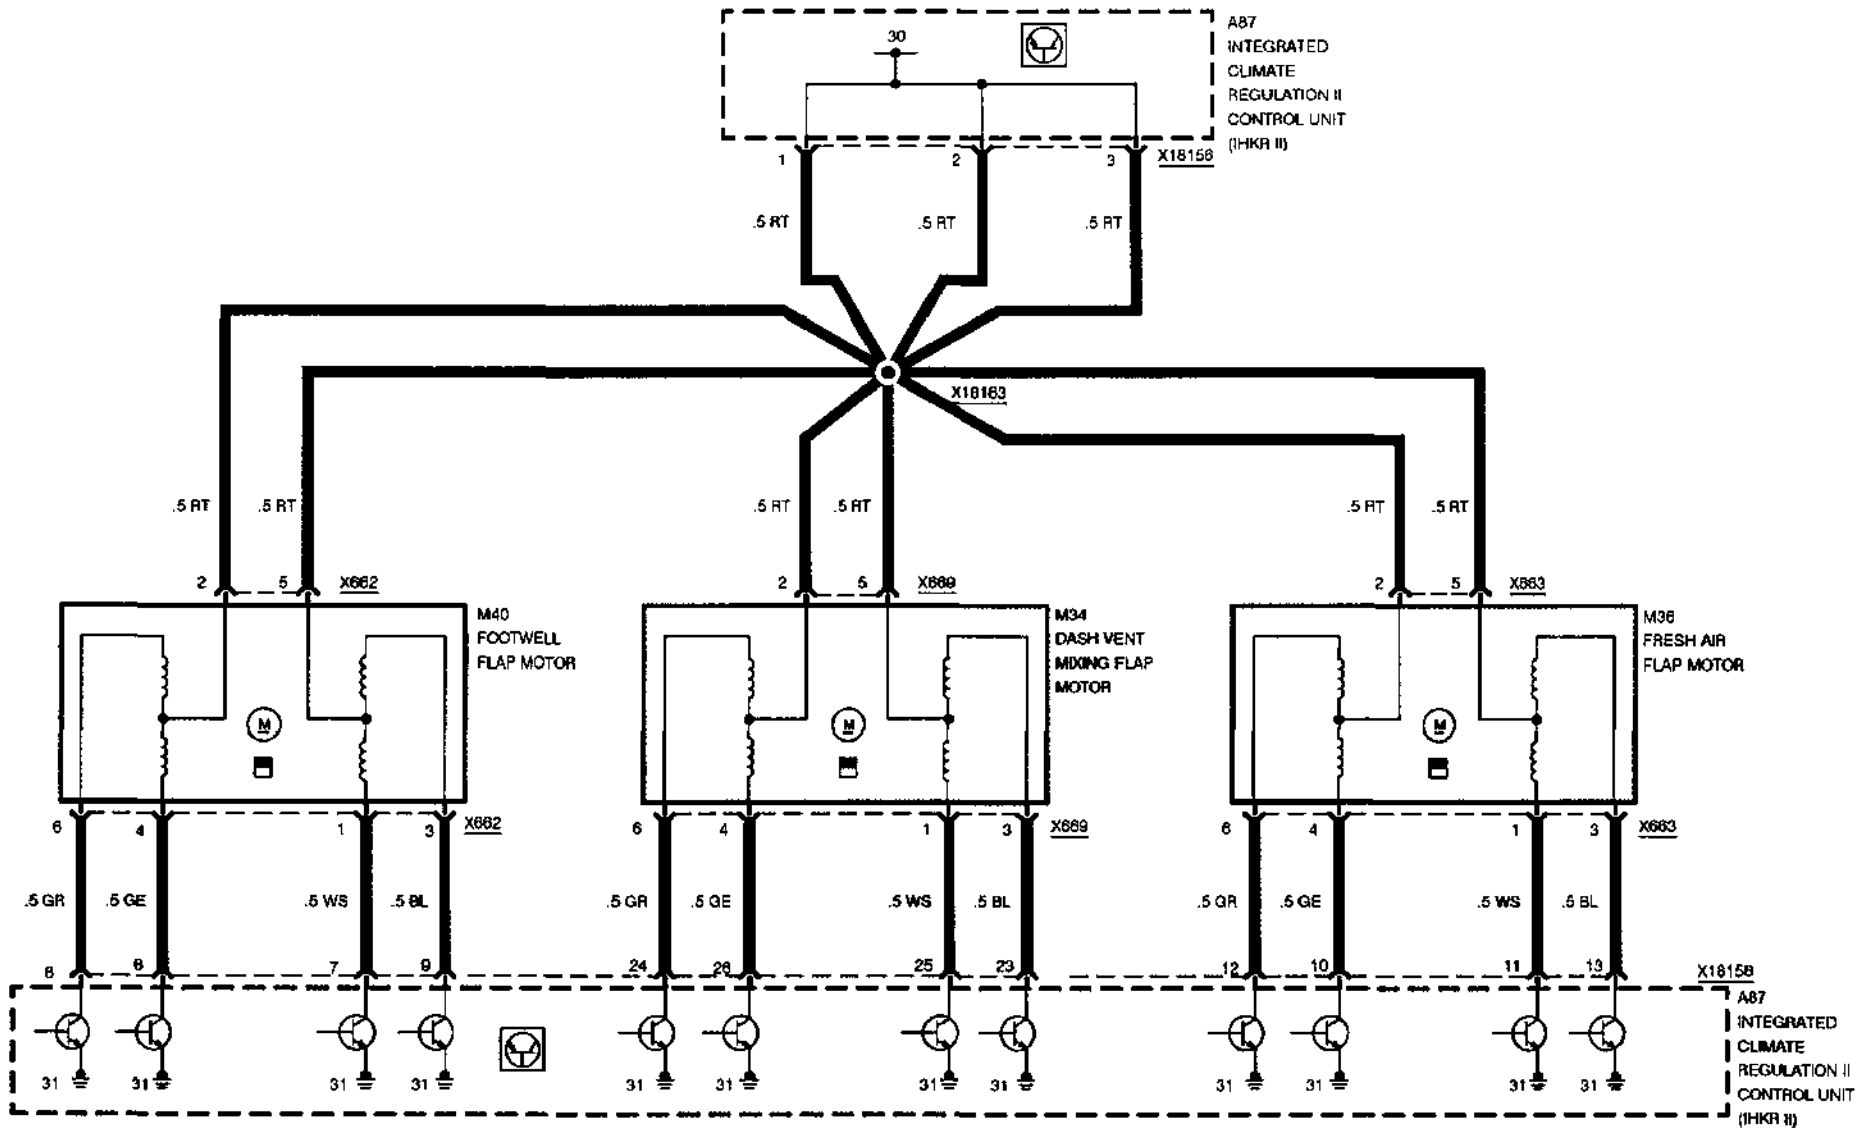

07/90


6450.3-03

1990




INTEGRATED CLIMATE REGULATION II (HKR II)

WATER VALVES

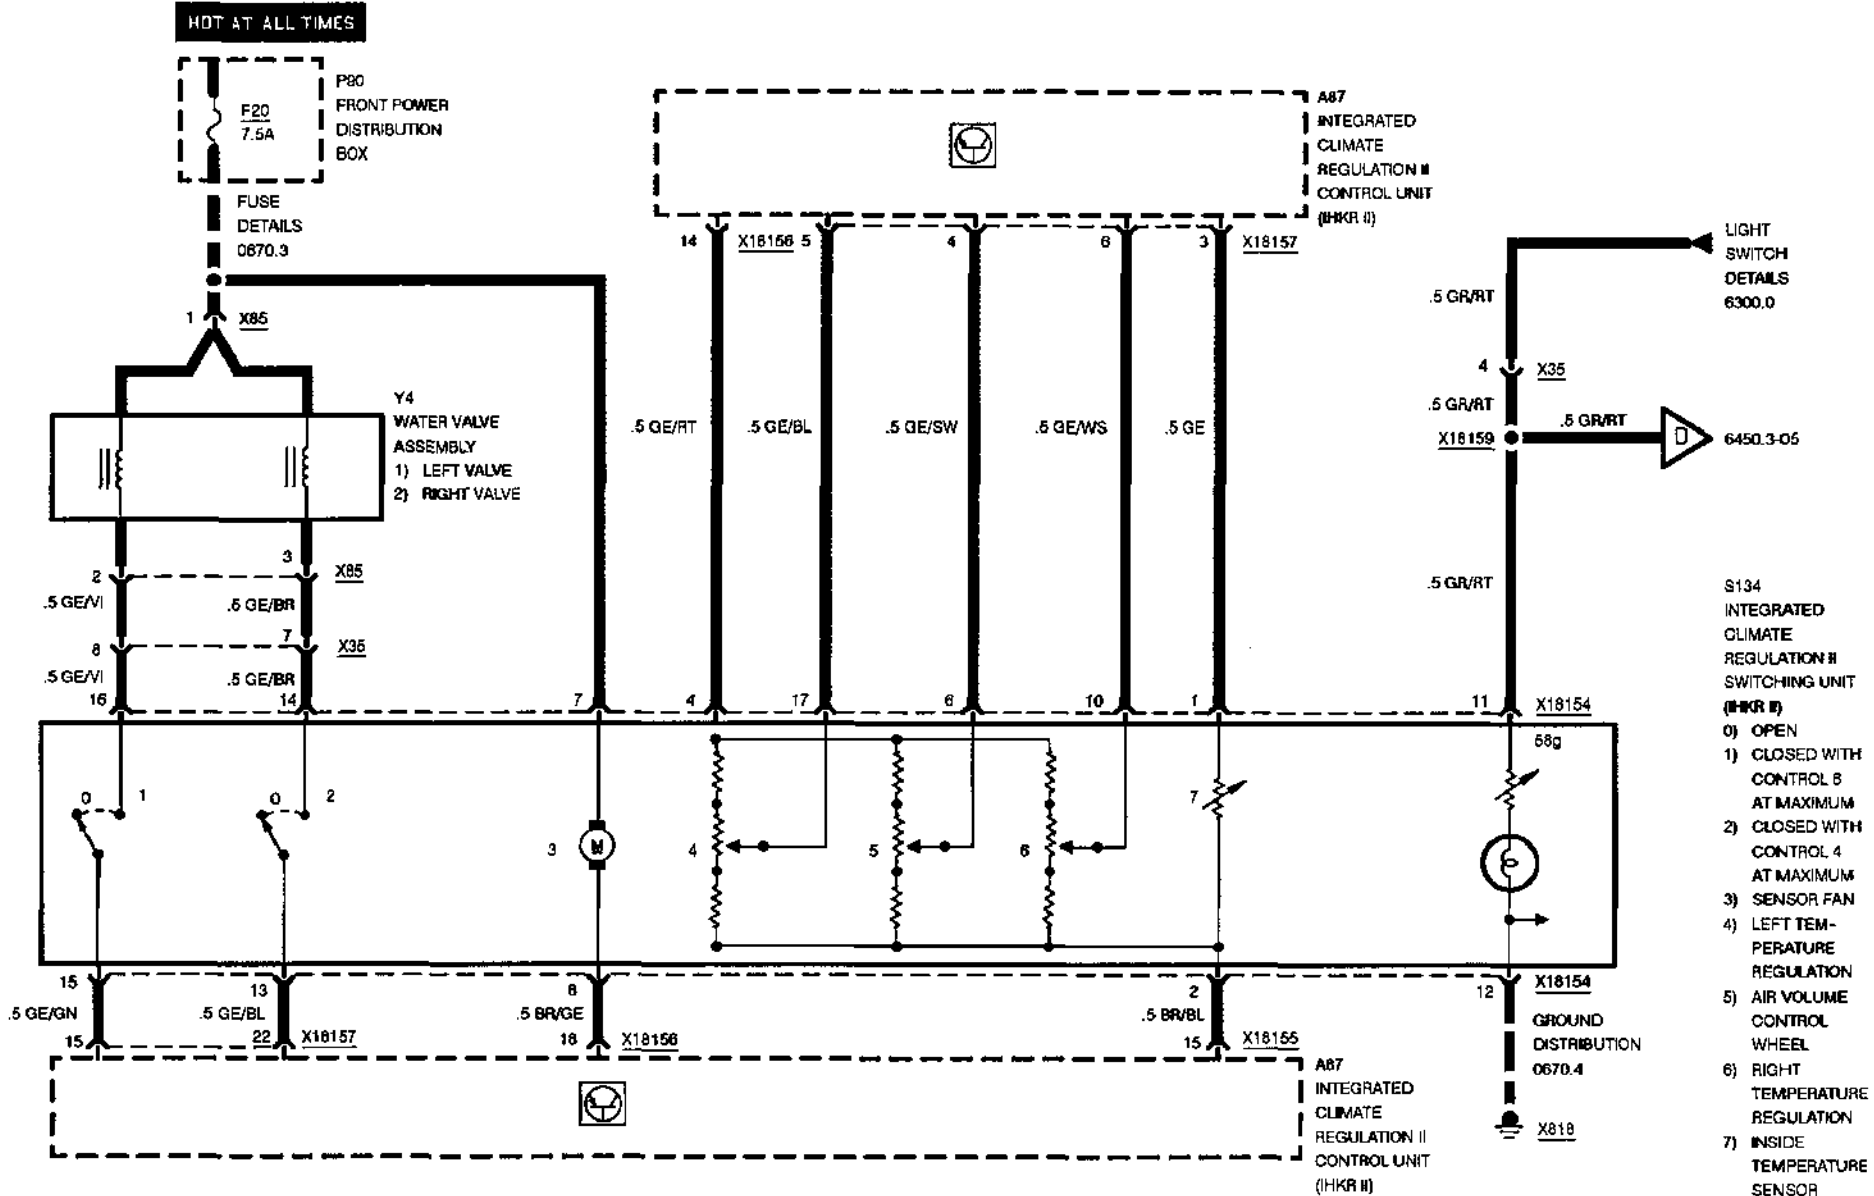

INTEGRATED CLIMATE REGULATION II (IHKR II)

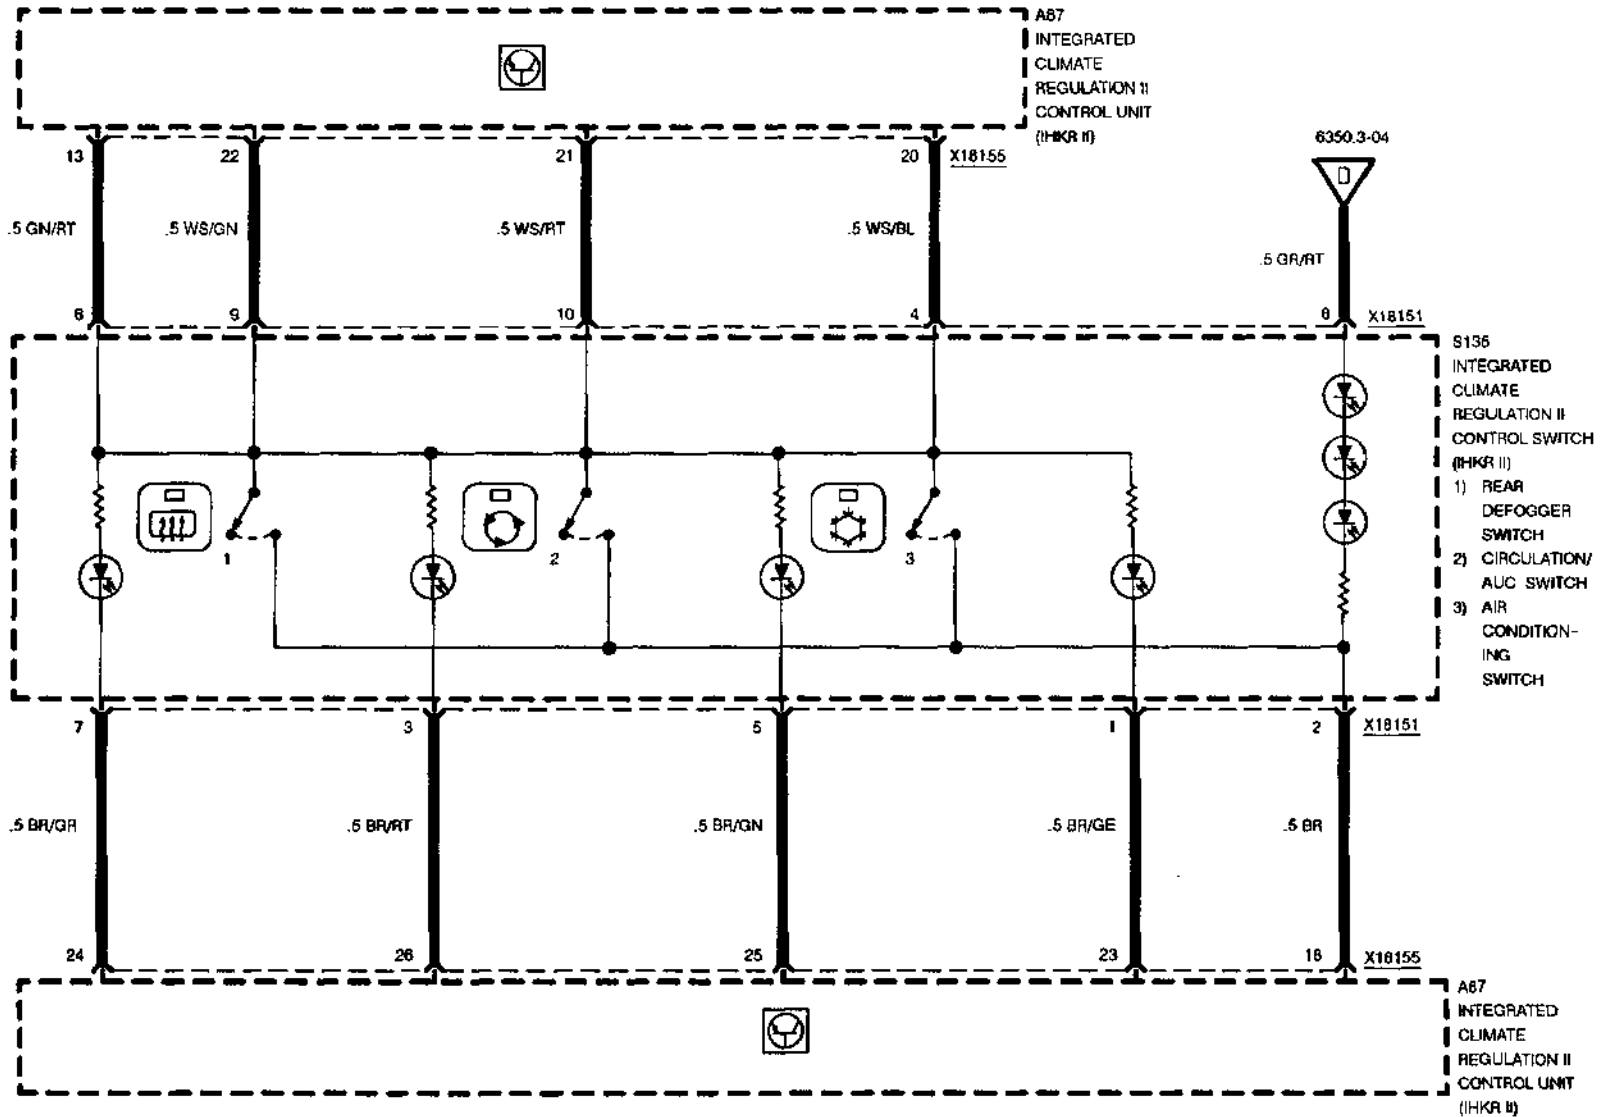




INTEGRATED CLIMATE REGULATION II (IHKR II)

COMPRESSOR CONTROLS

525i, 535i

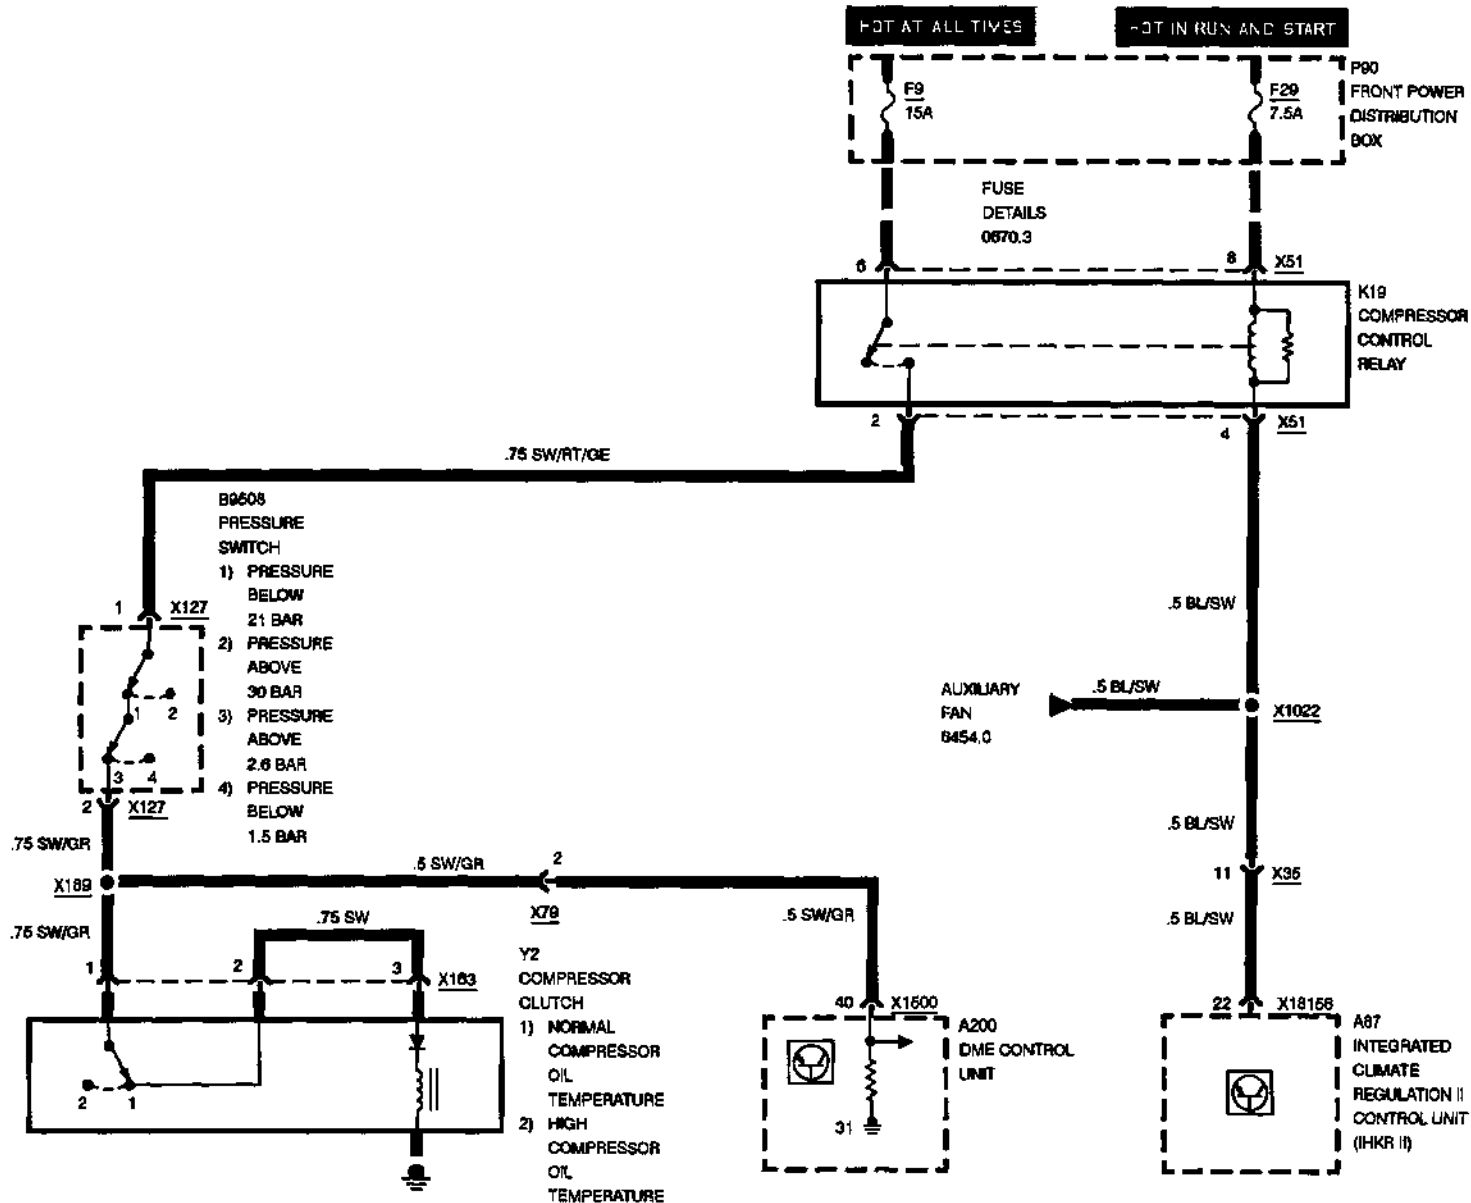


07/90 6450.3-06 1990



INTEGRATED CLIMATE REGULATION II (IHKR II)

M5

COMPRESSOR CONTROLS

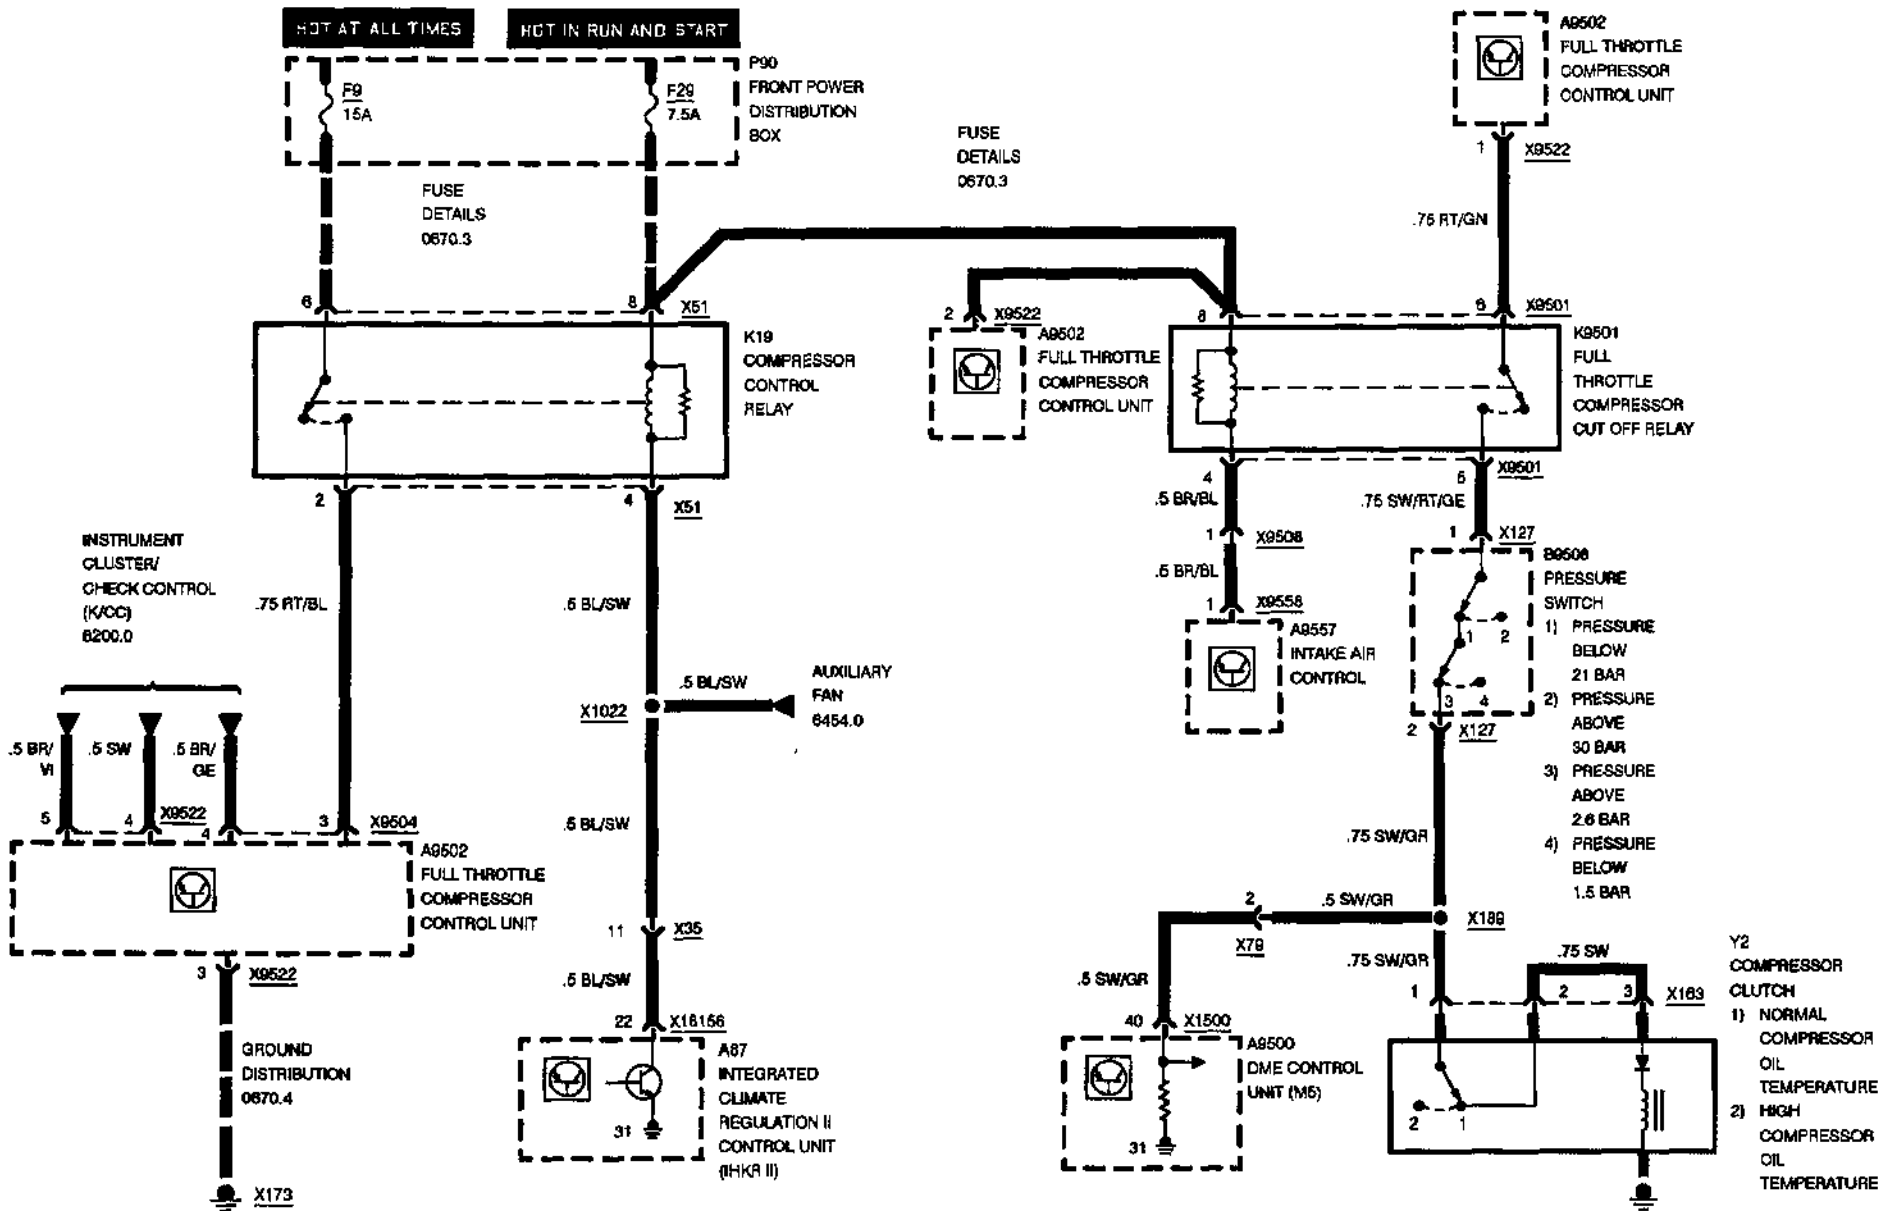

07/90


6450.3-07

1990




INTEGRATED CLIMATE REGULATION II (IHKR II)


AUXILIARY WATER PUMP

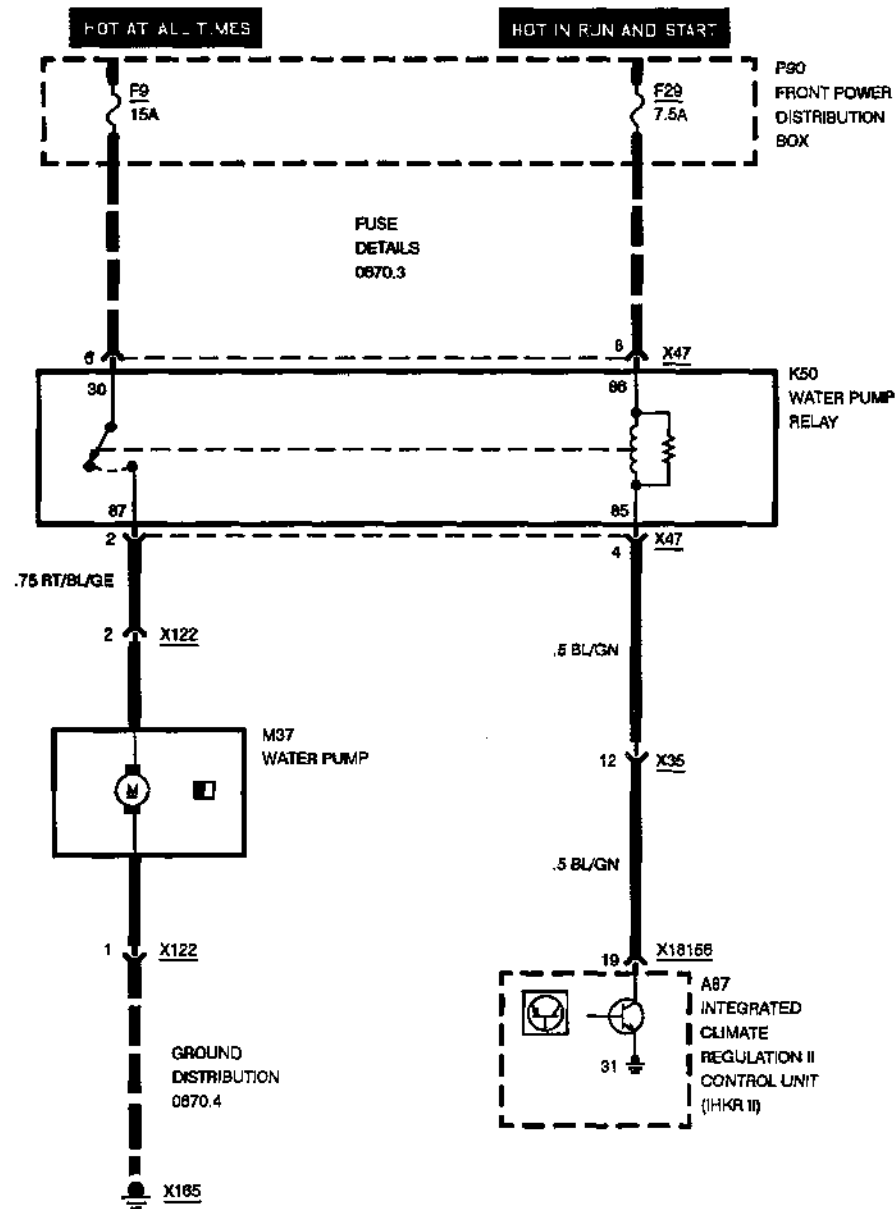

AUXILIARY FAN

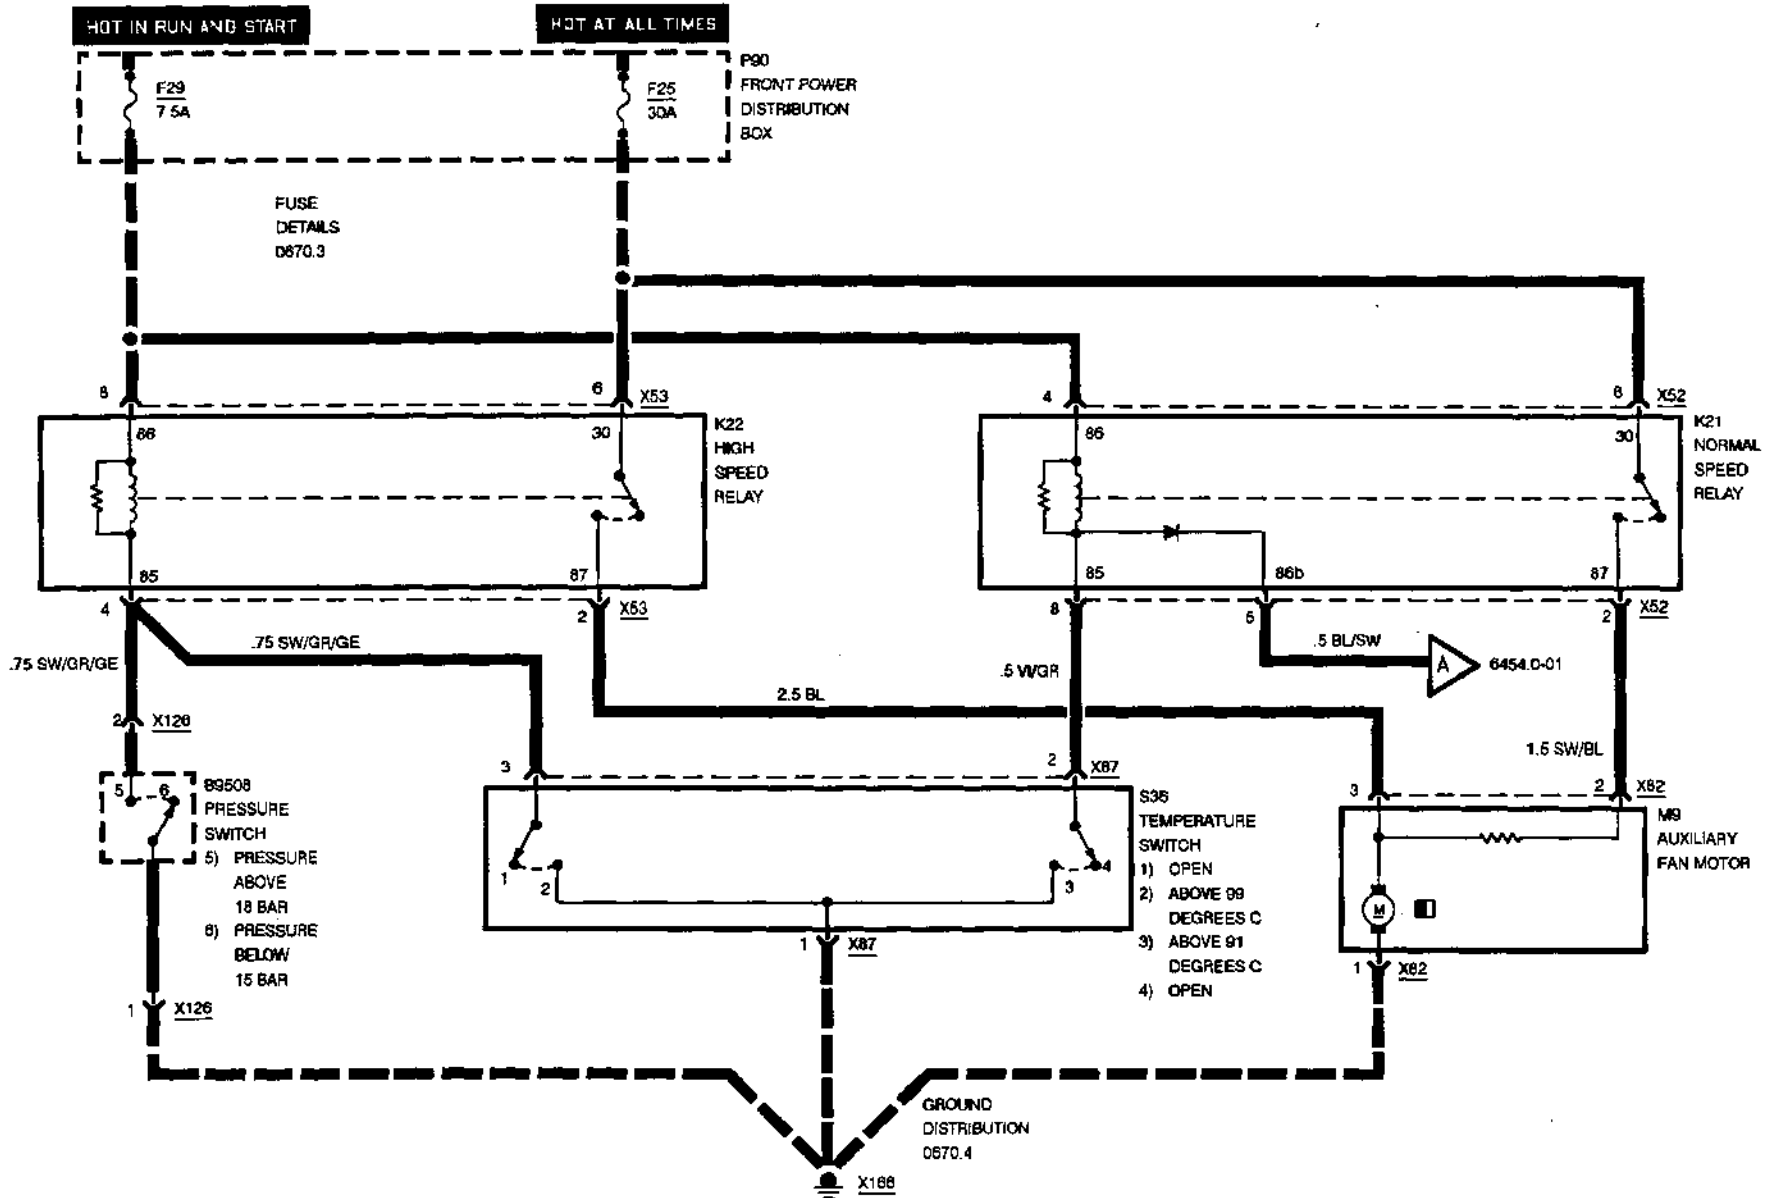


AUXILIARY FAN

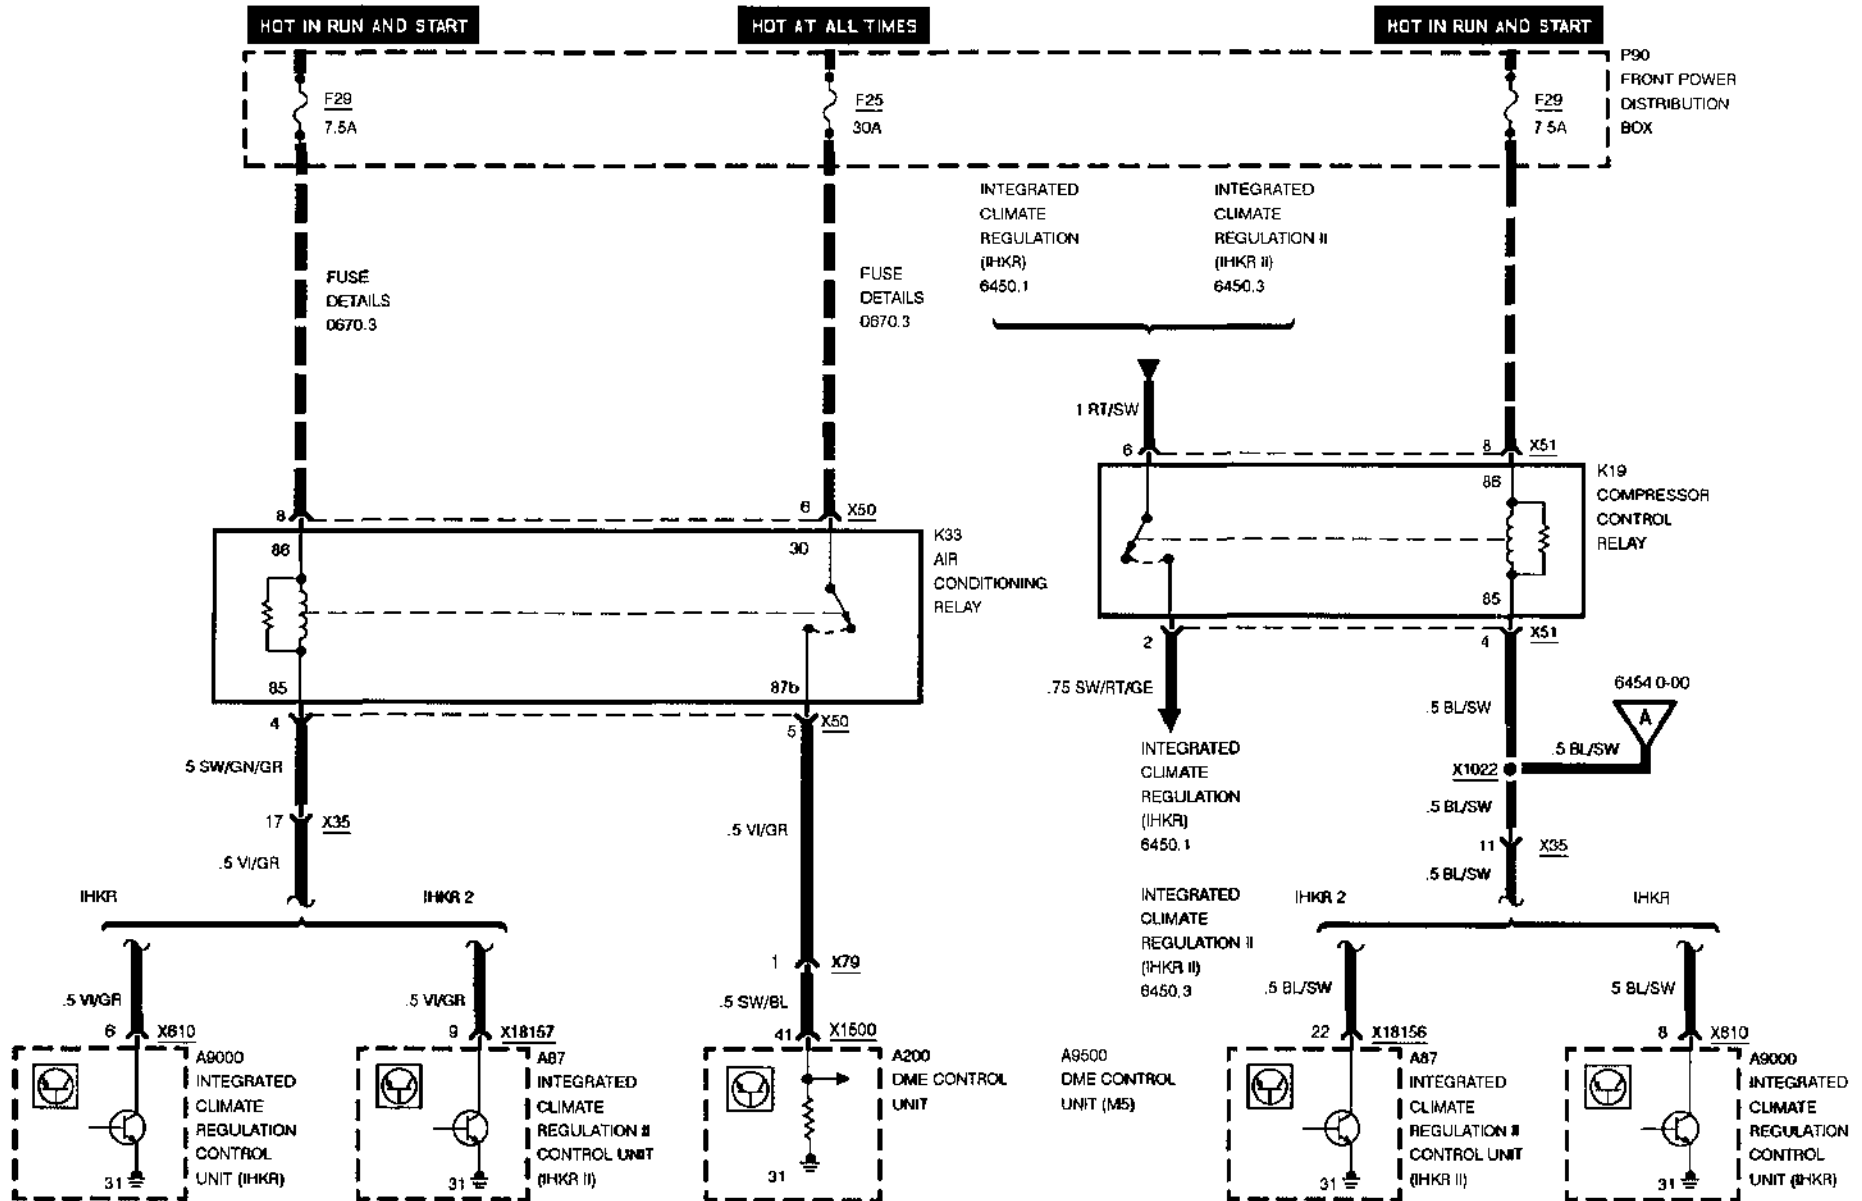



RADIO/ CD PLAYER (PROVISIONS) HIFI, TEN SPEAKER SYSTEM

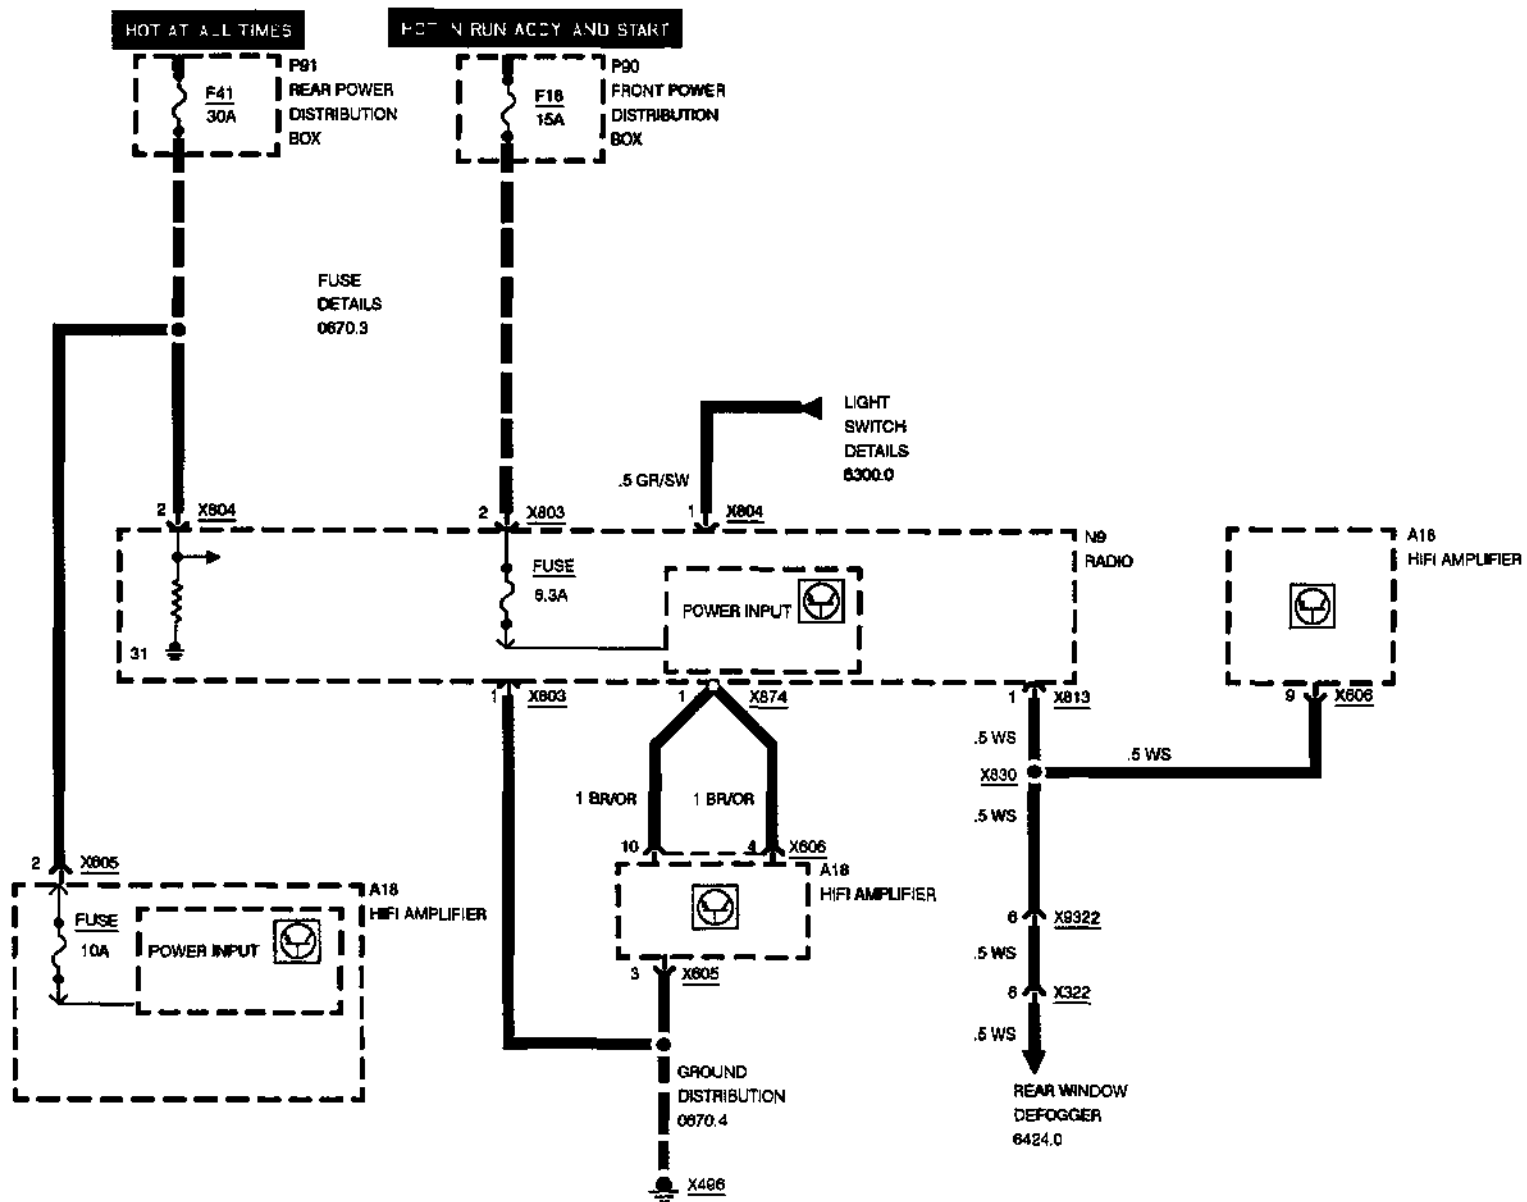

07/90


6510.0-00

1990



RADIO/ CD PLAYER (PROVISIONS)


HIFI, TEN SPEAKER SYSTEM

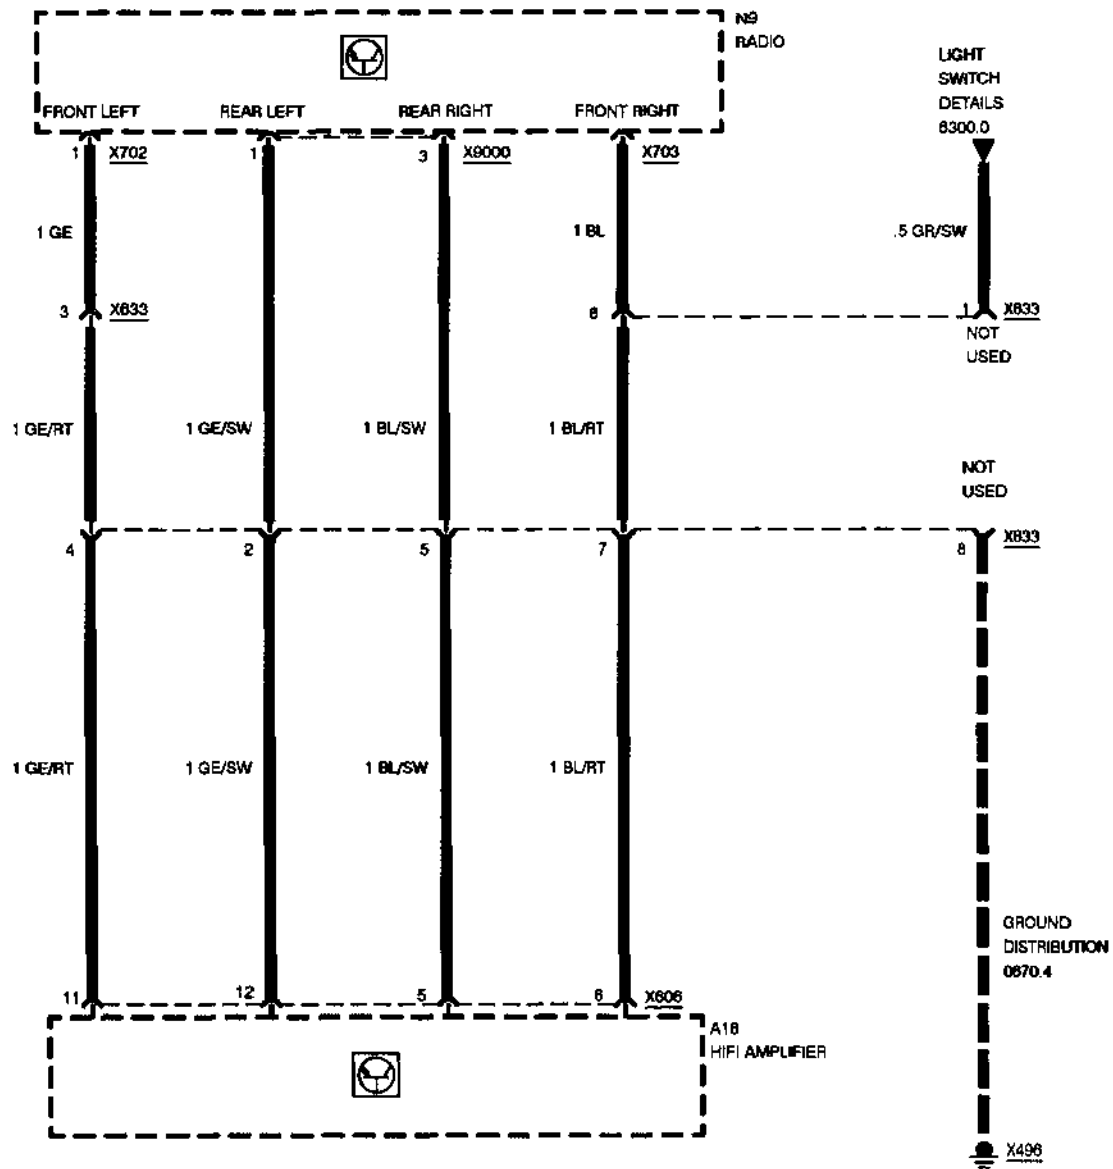



RADIO/ CD PLAYER (PROVISIONS)


HIFI, TEN SPEAKER SYSTEM

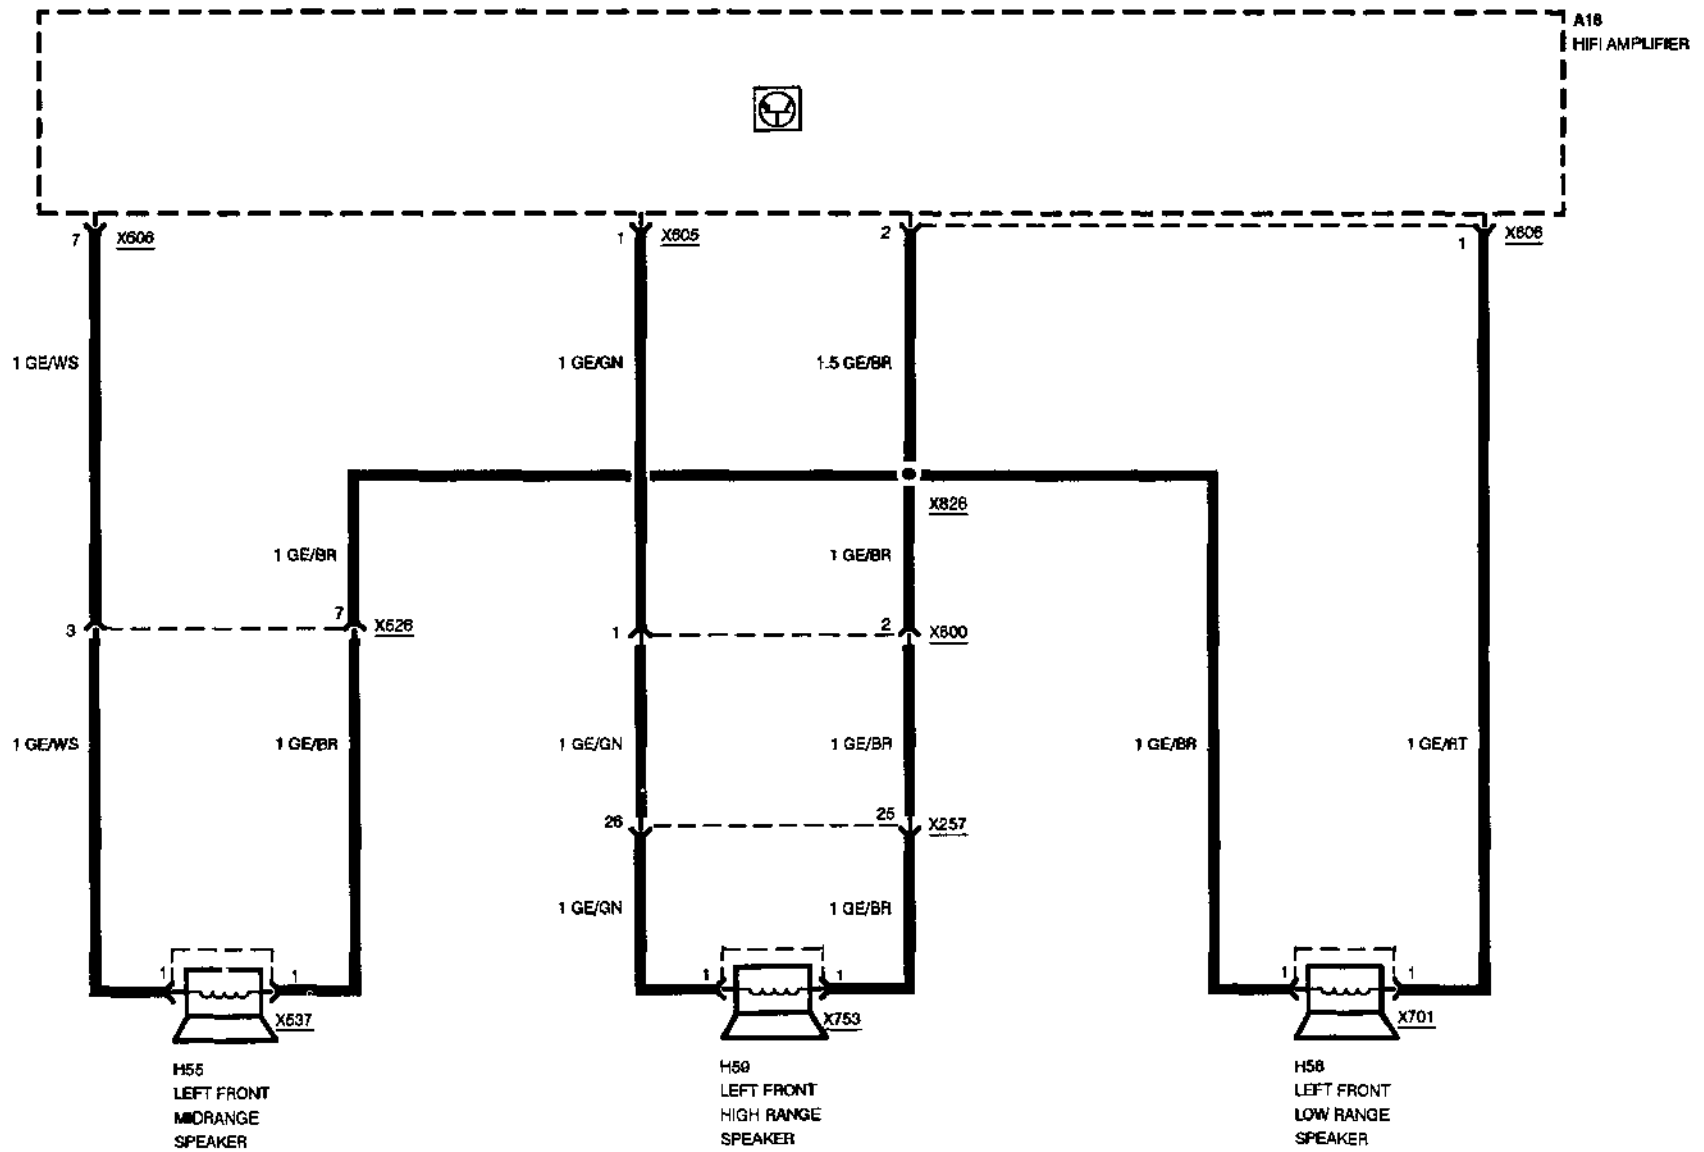



RADIO/ CD PLAYER (PROVISIONS)


HIFI, TEN SPEAKER SYSTEM

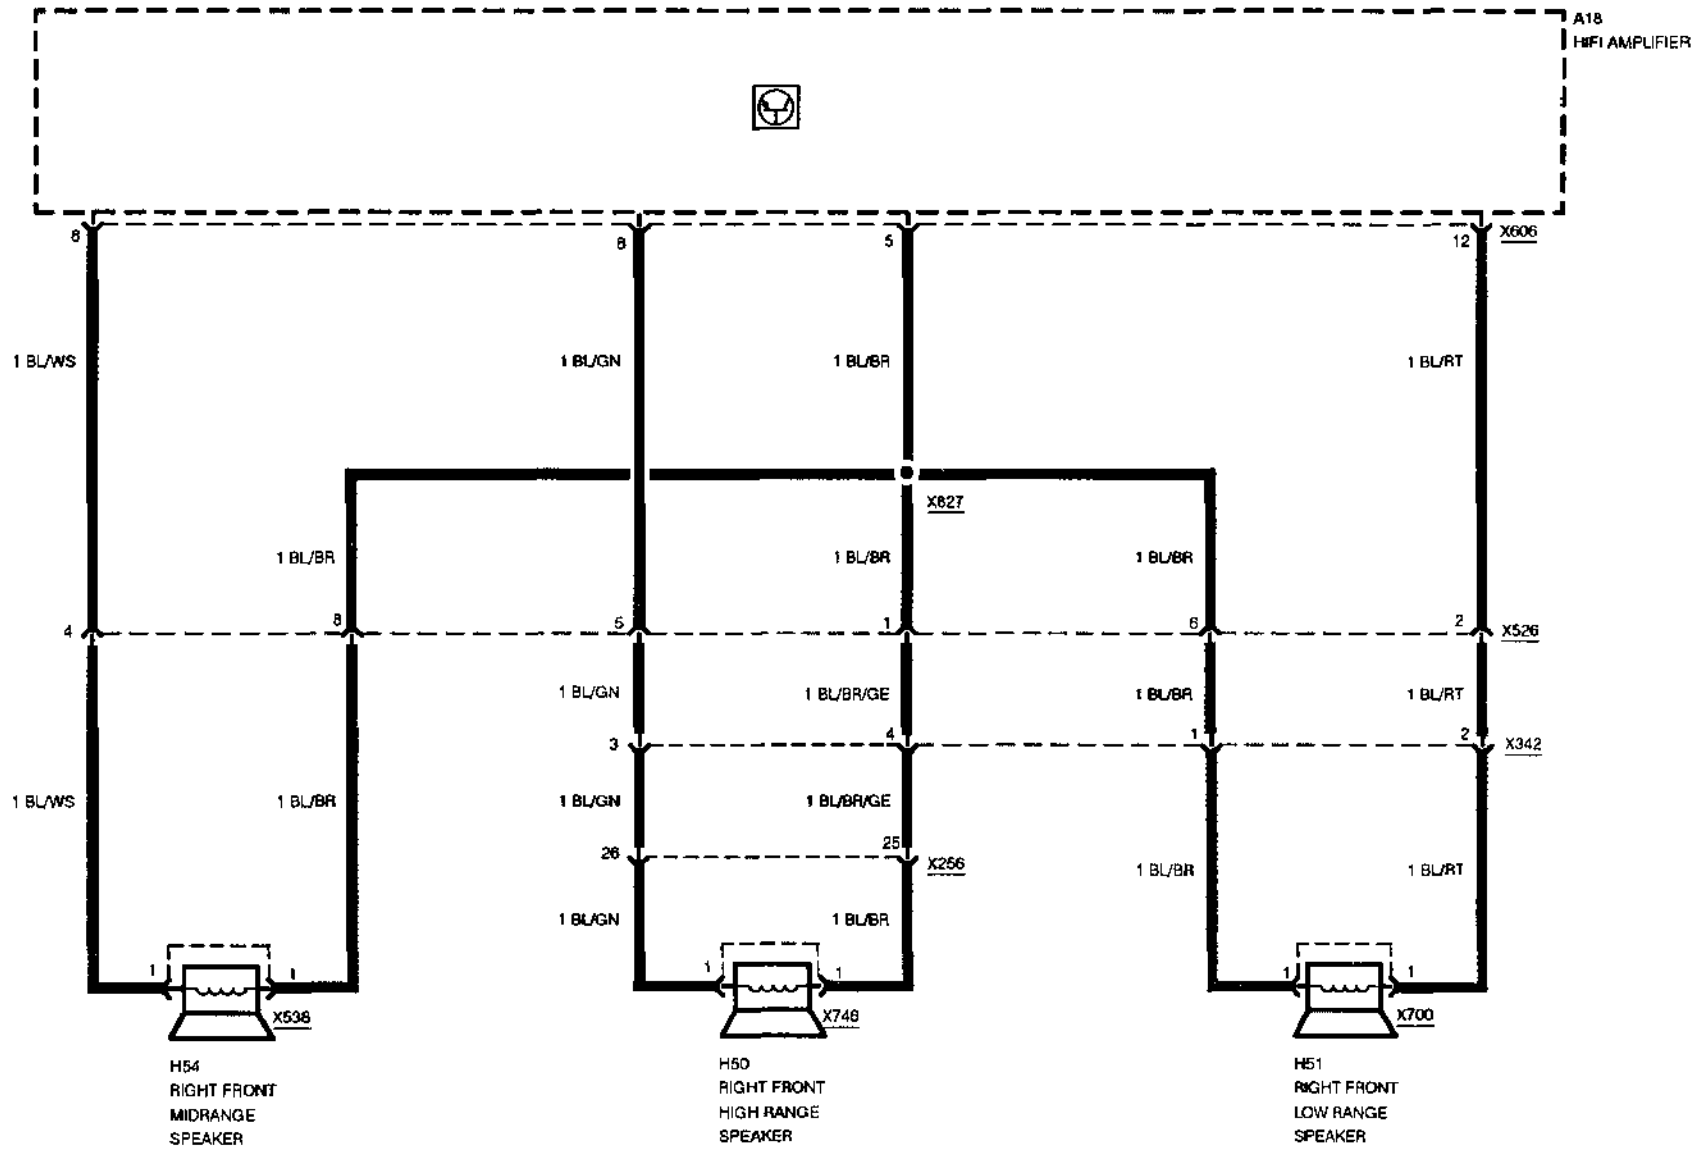




RADIO/ CD PLAYER (PROVISIONS)

HIFI, TEN SPEAKER SYSTEM

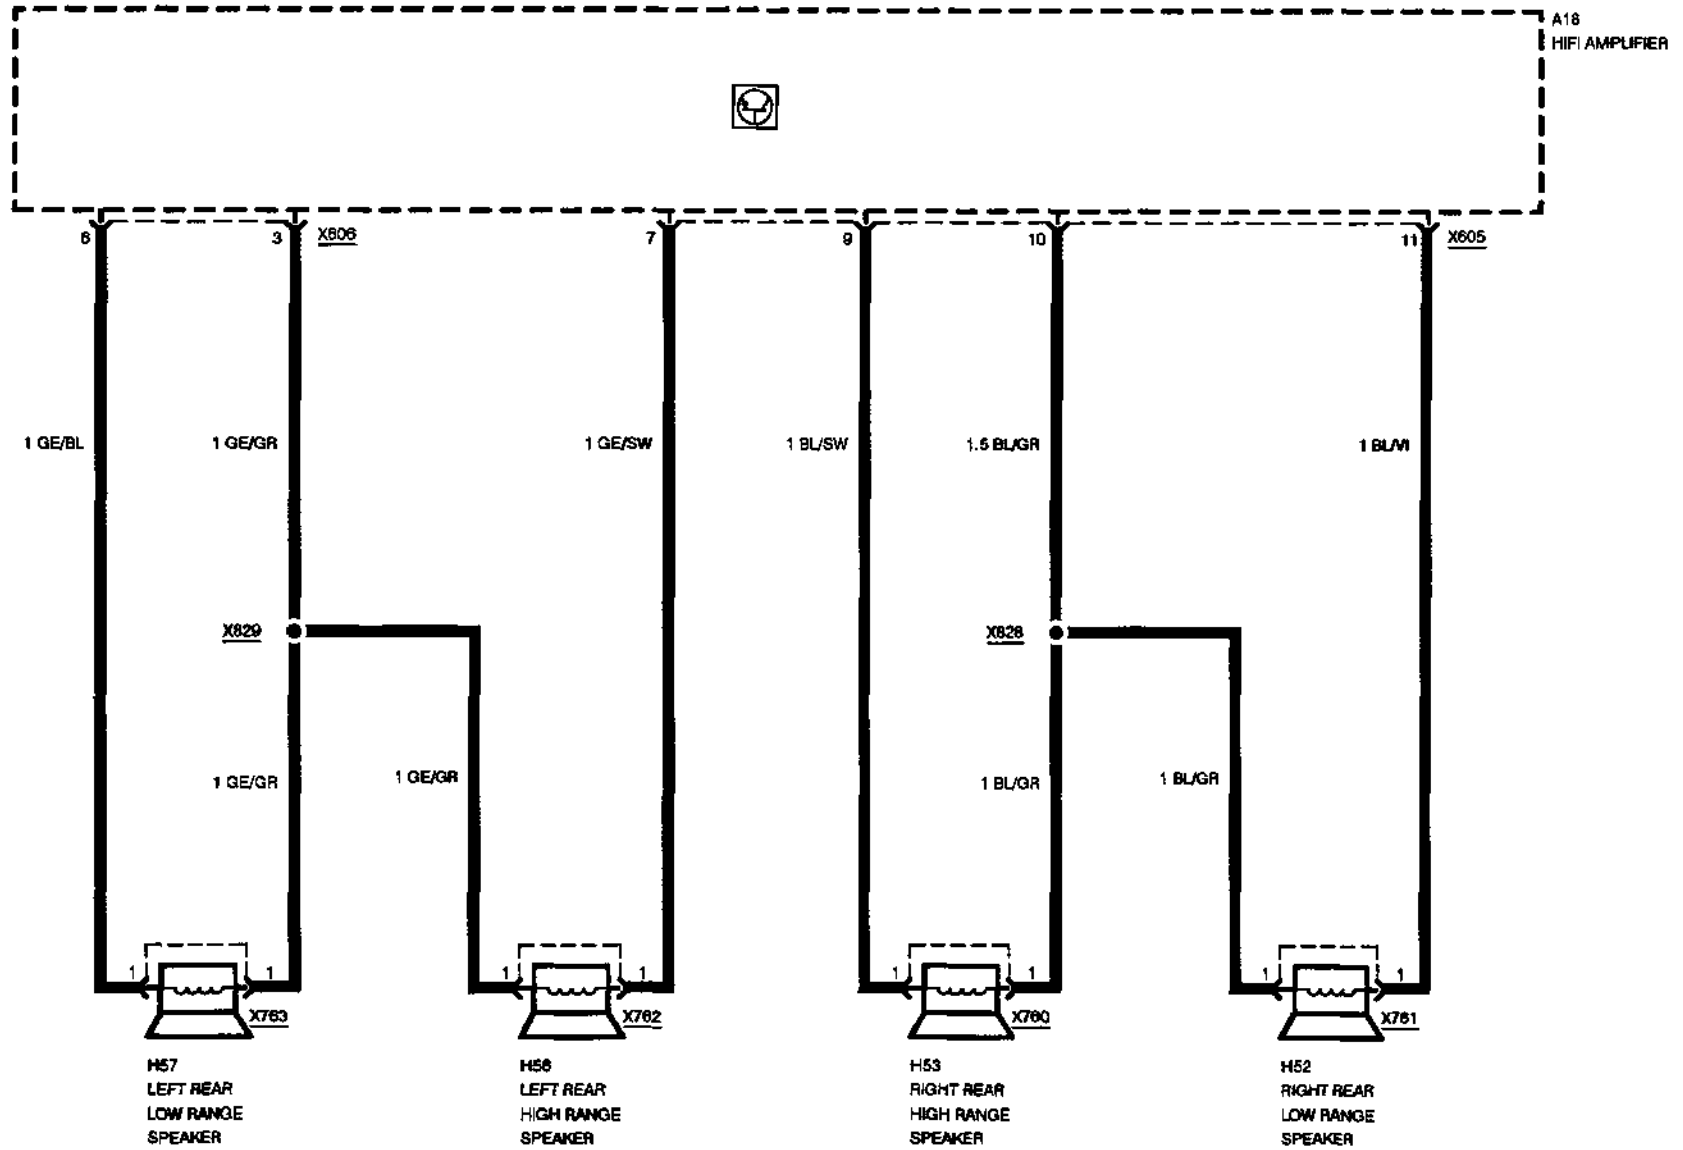


RADIO/ CD PLAYER (PROVISIONS)

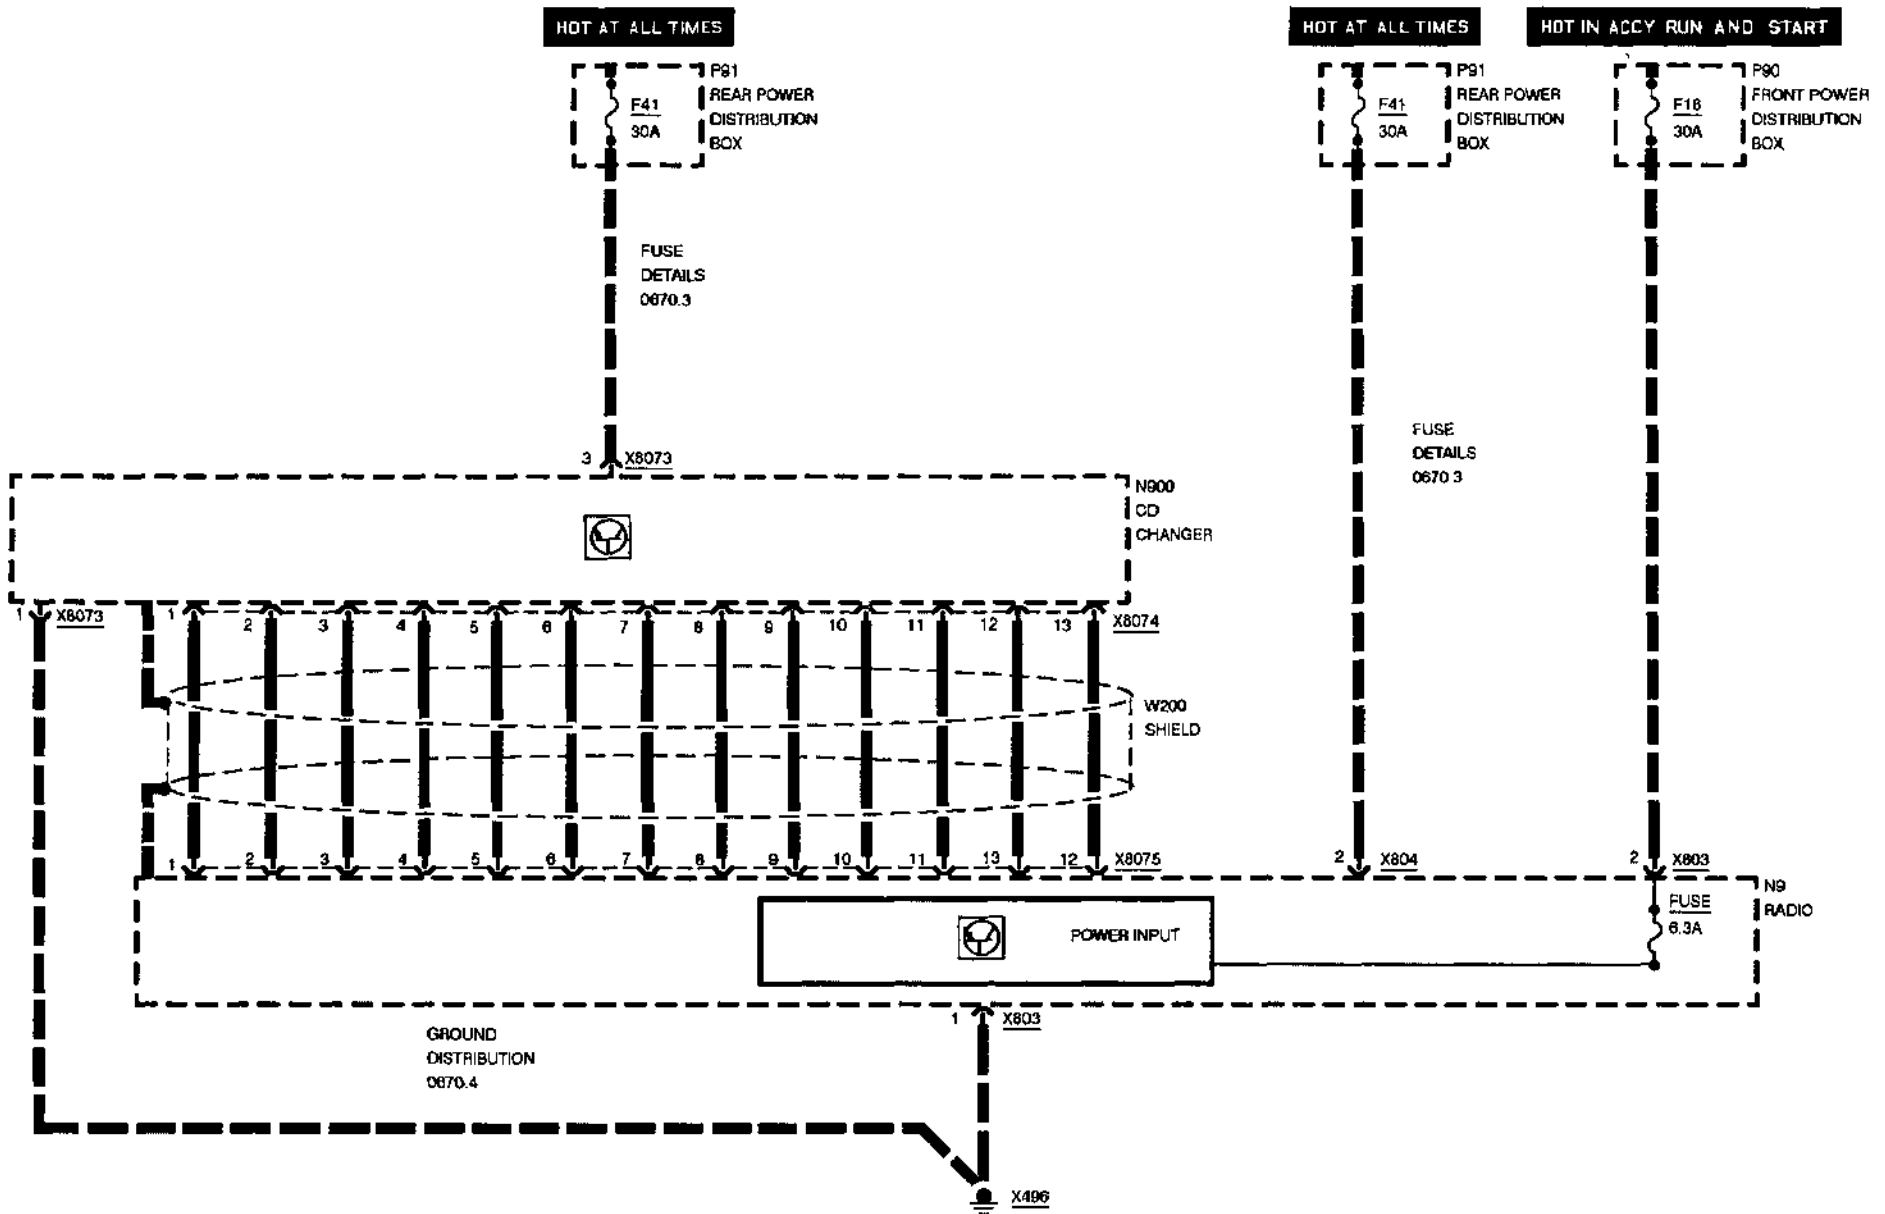




CELLULAR TELEPHONE (PROVISIONS)

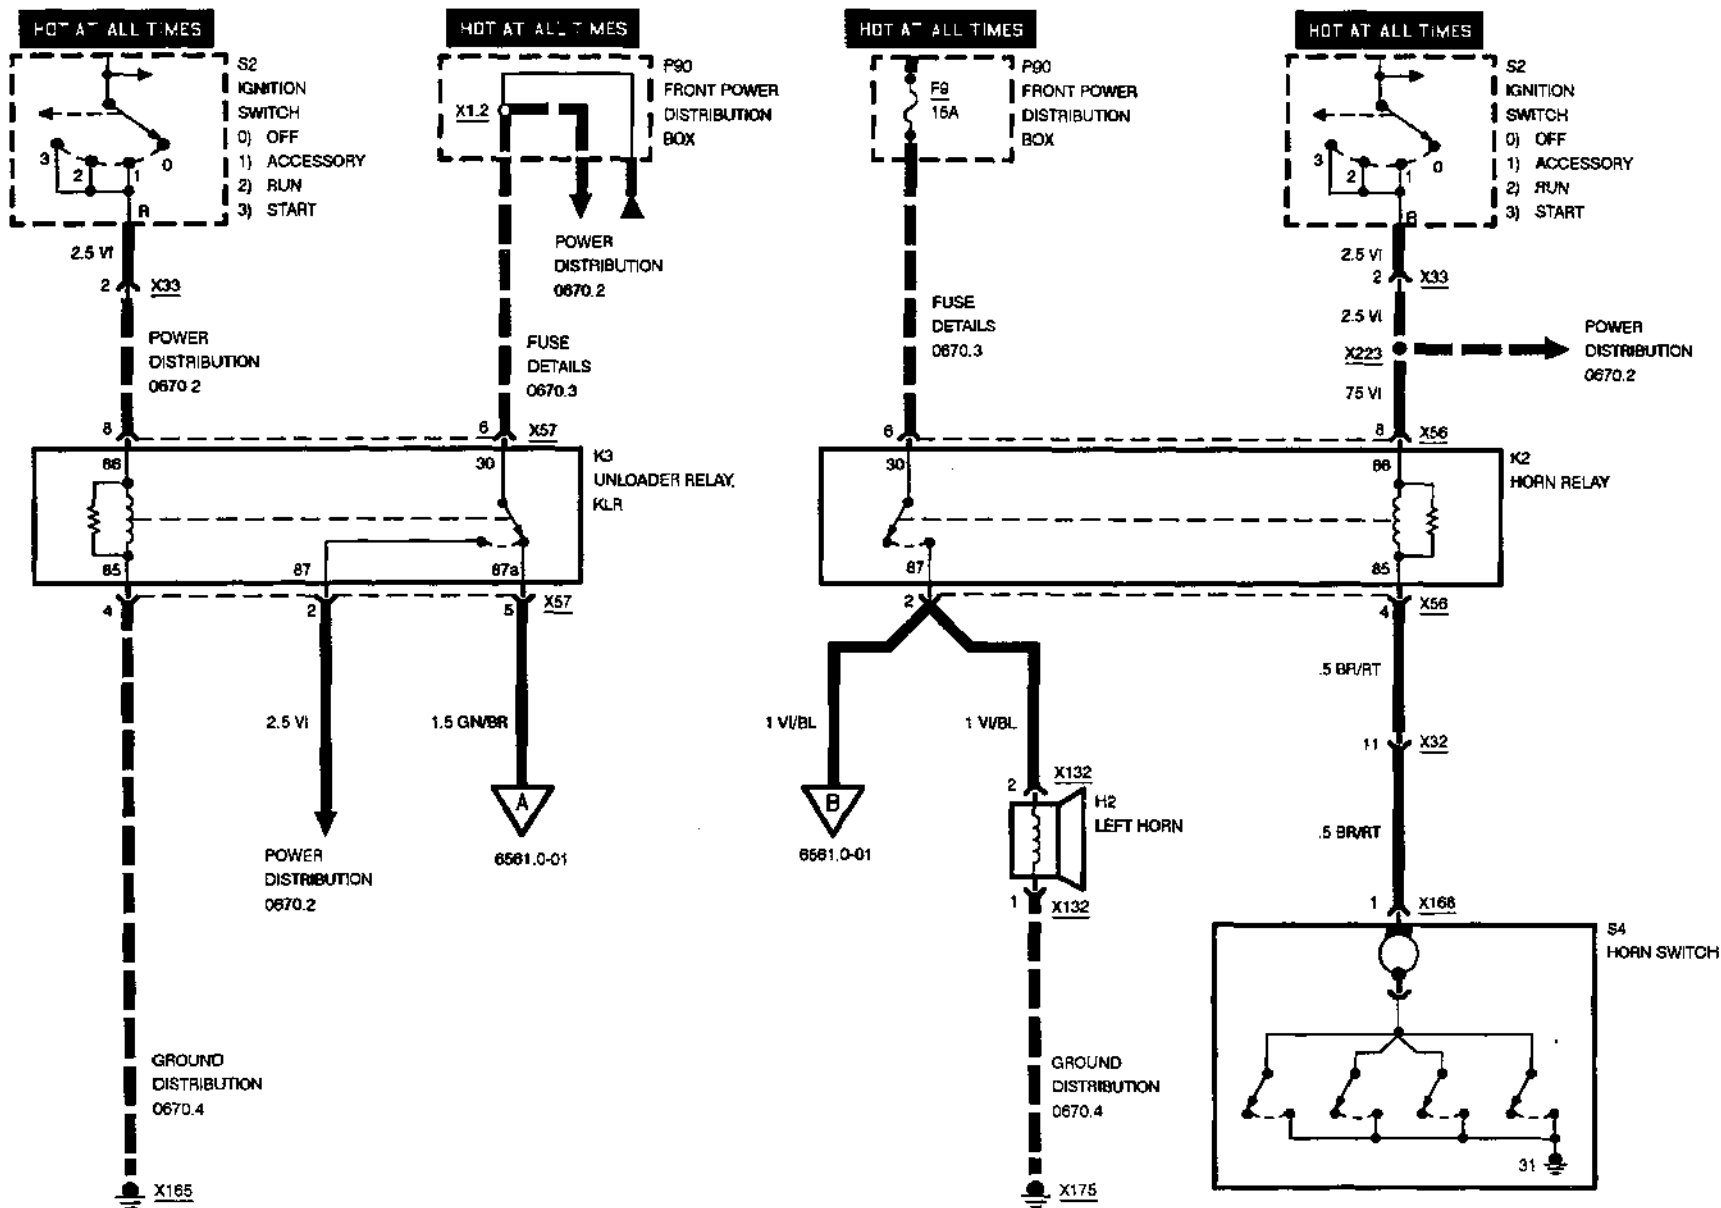



CELLULAR TELEPHONE (PROVISIONS)

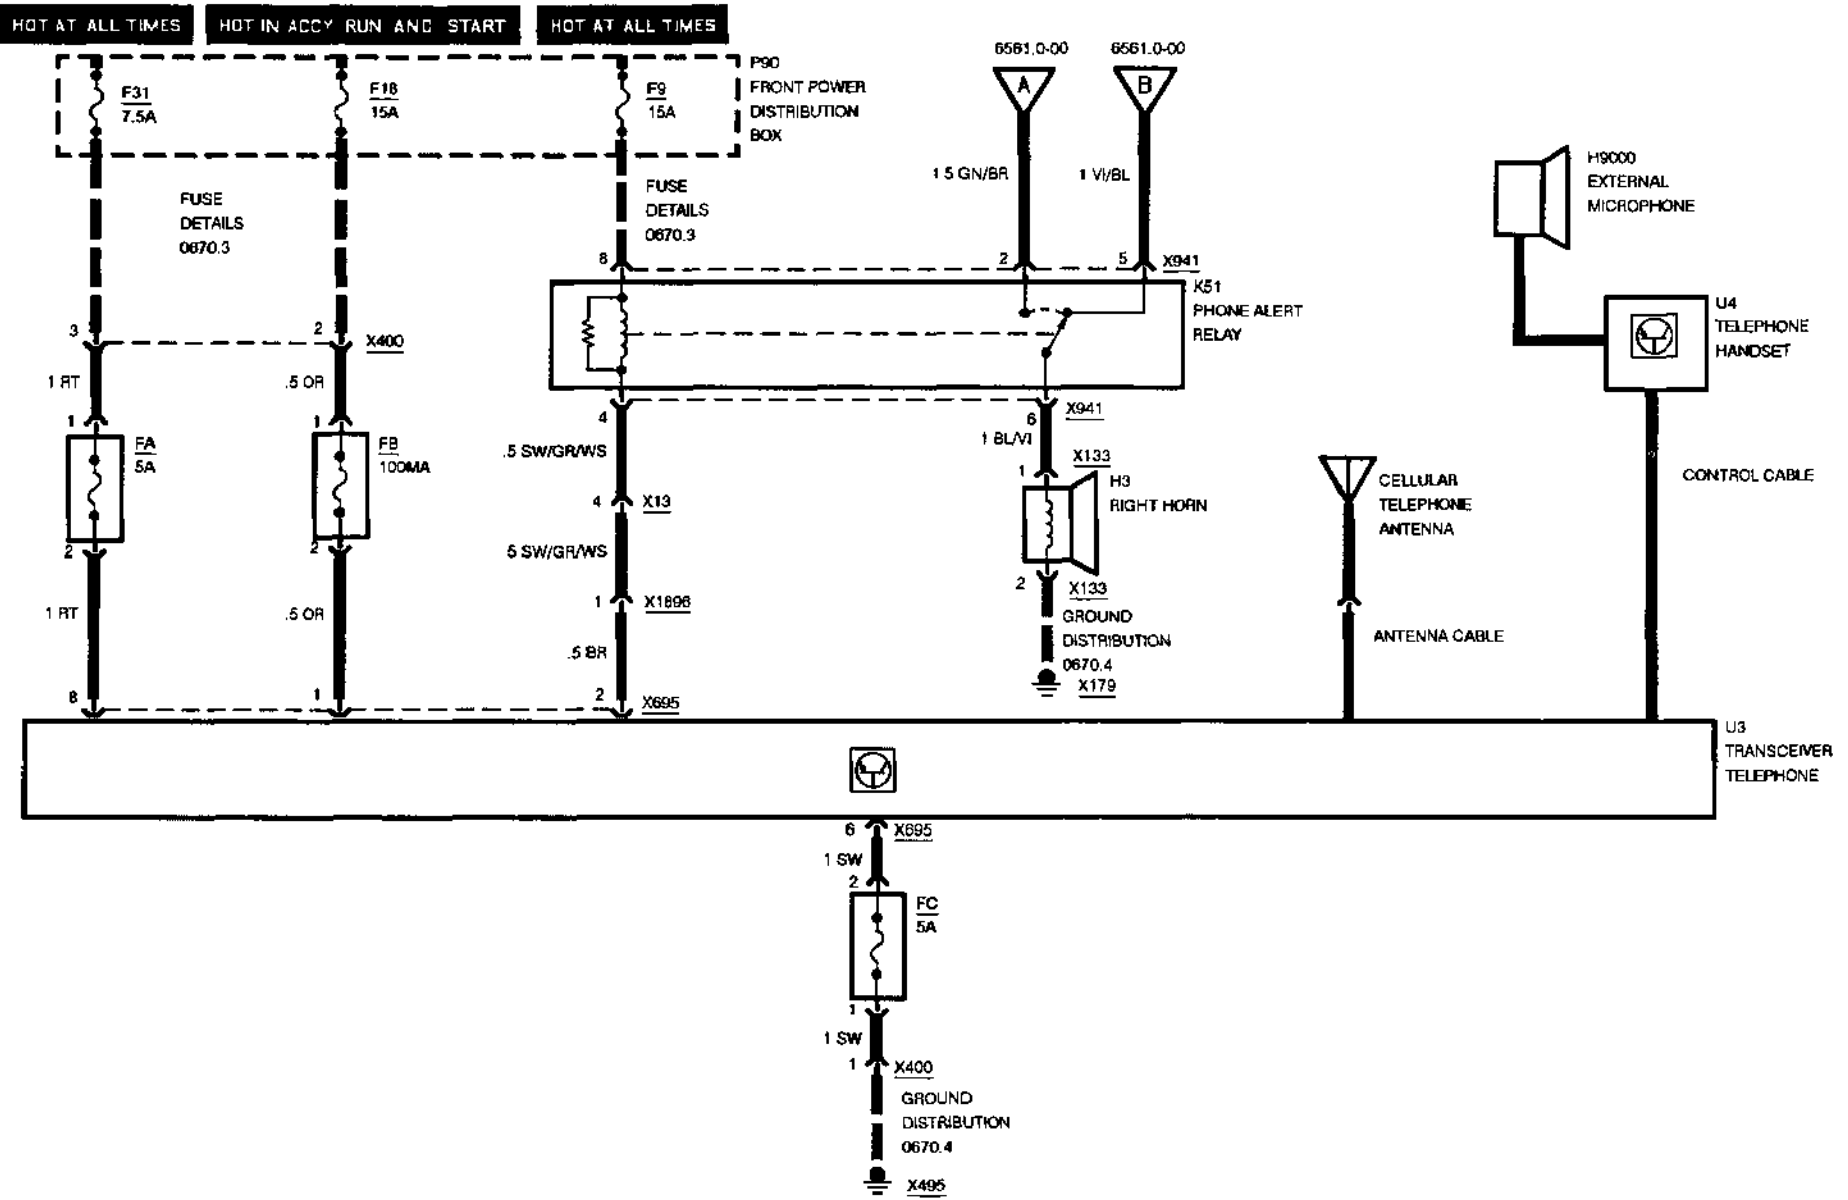




CRUISE CONTROL (TEMPOMAT)

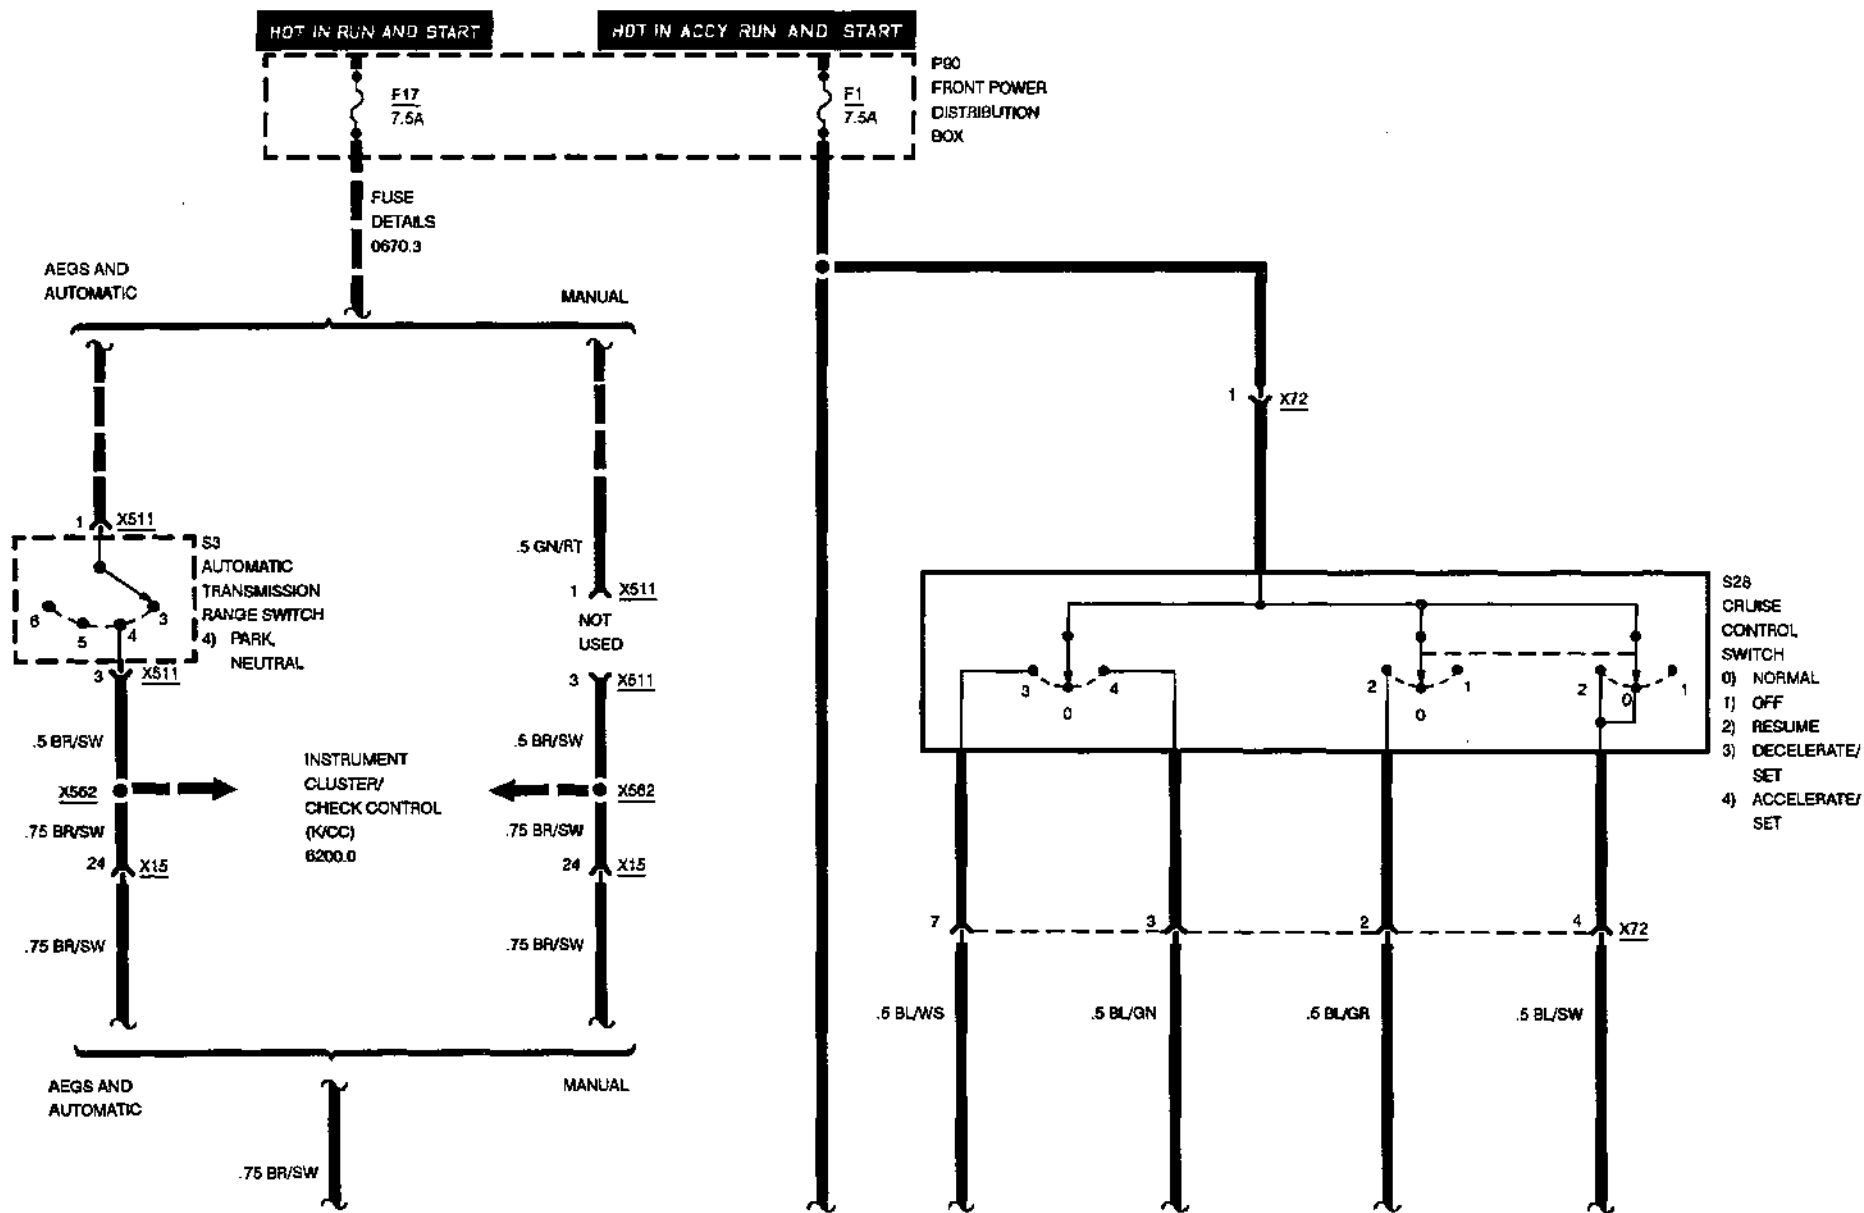

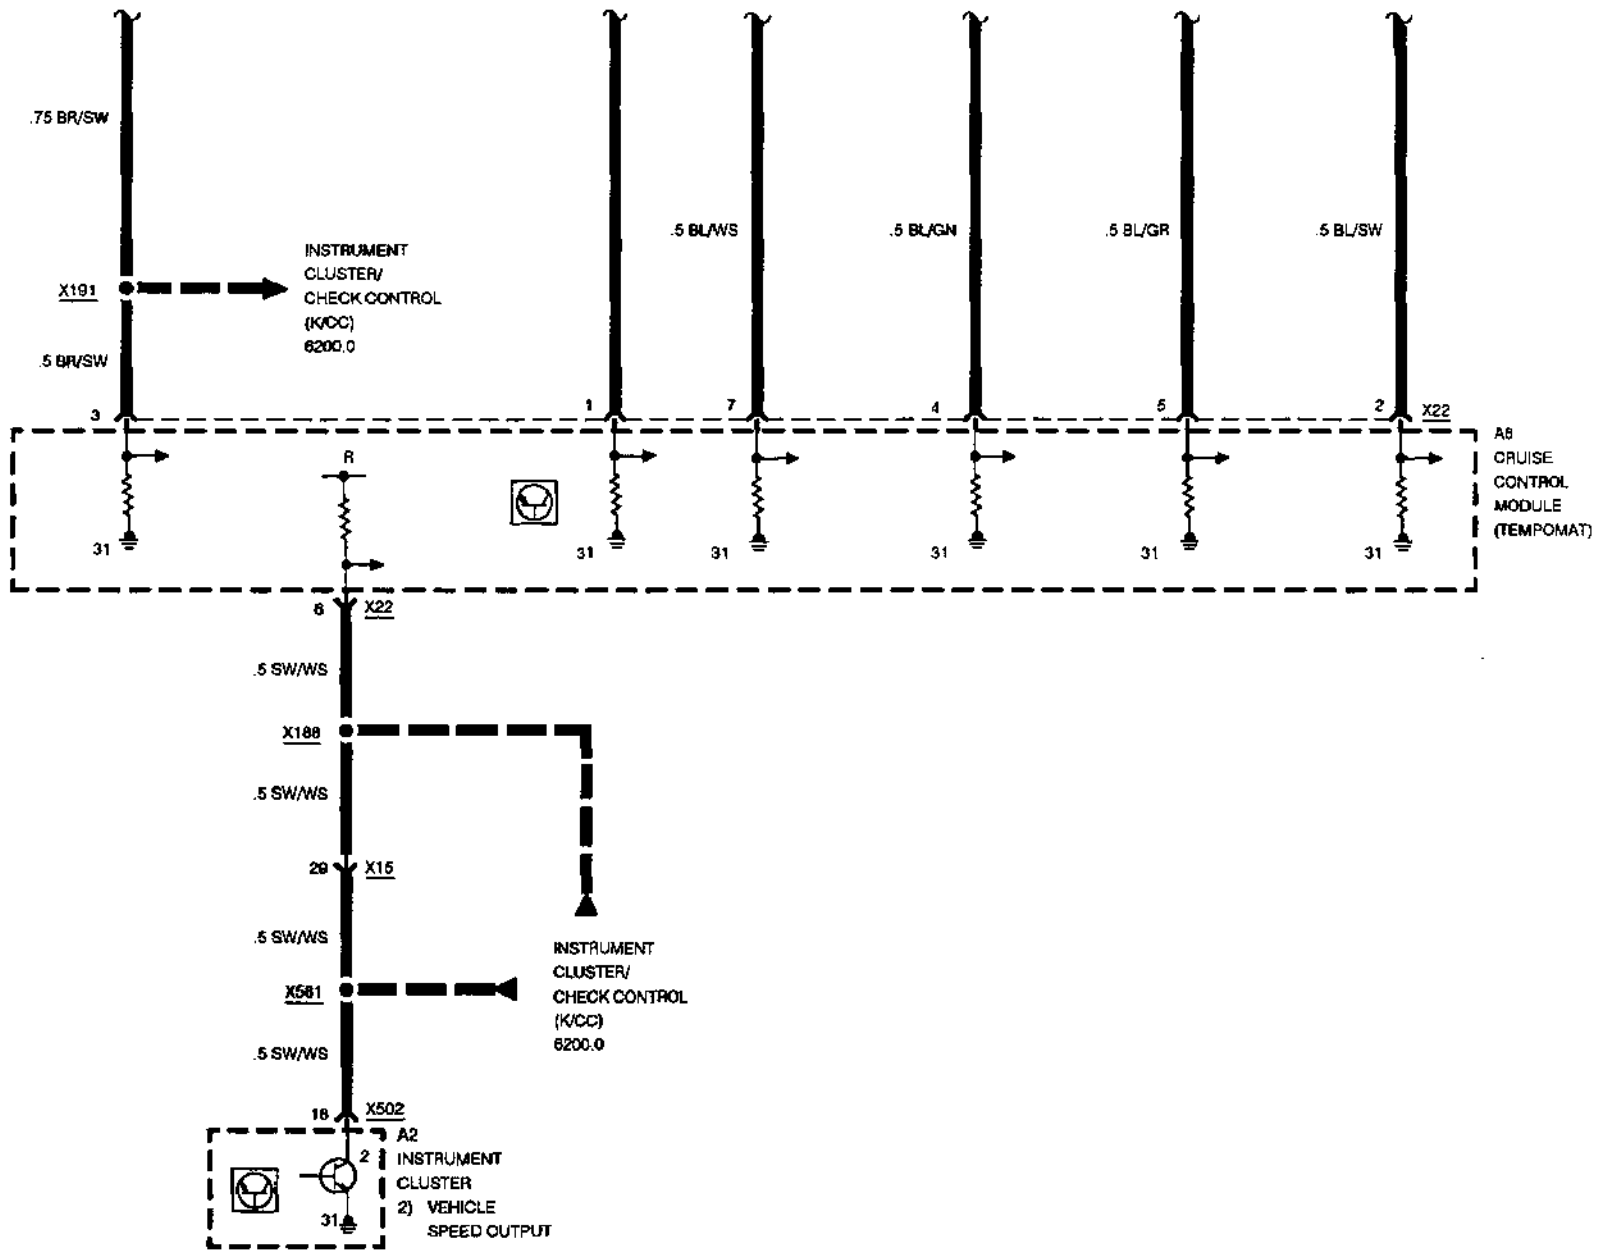




CRUISE CONTROL (TEMPOMAT)

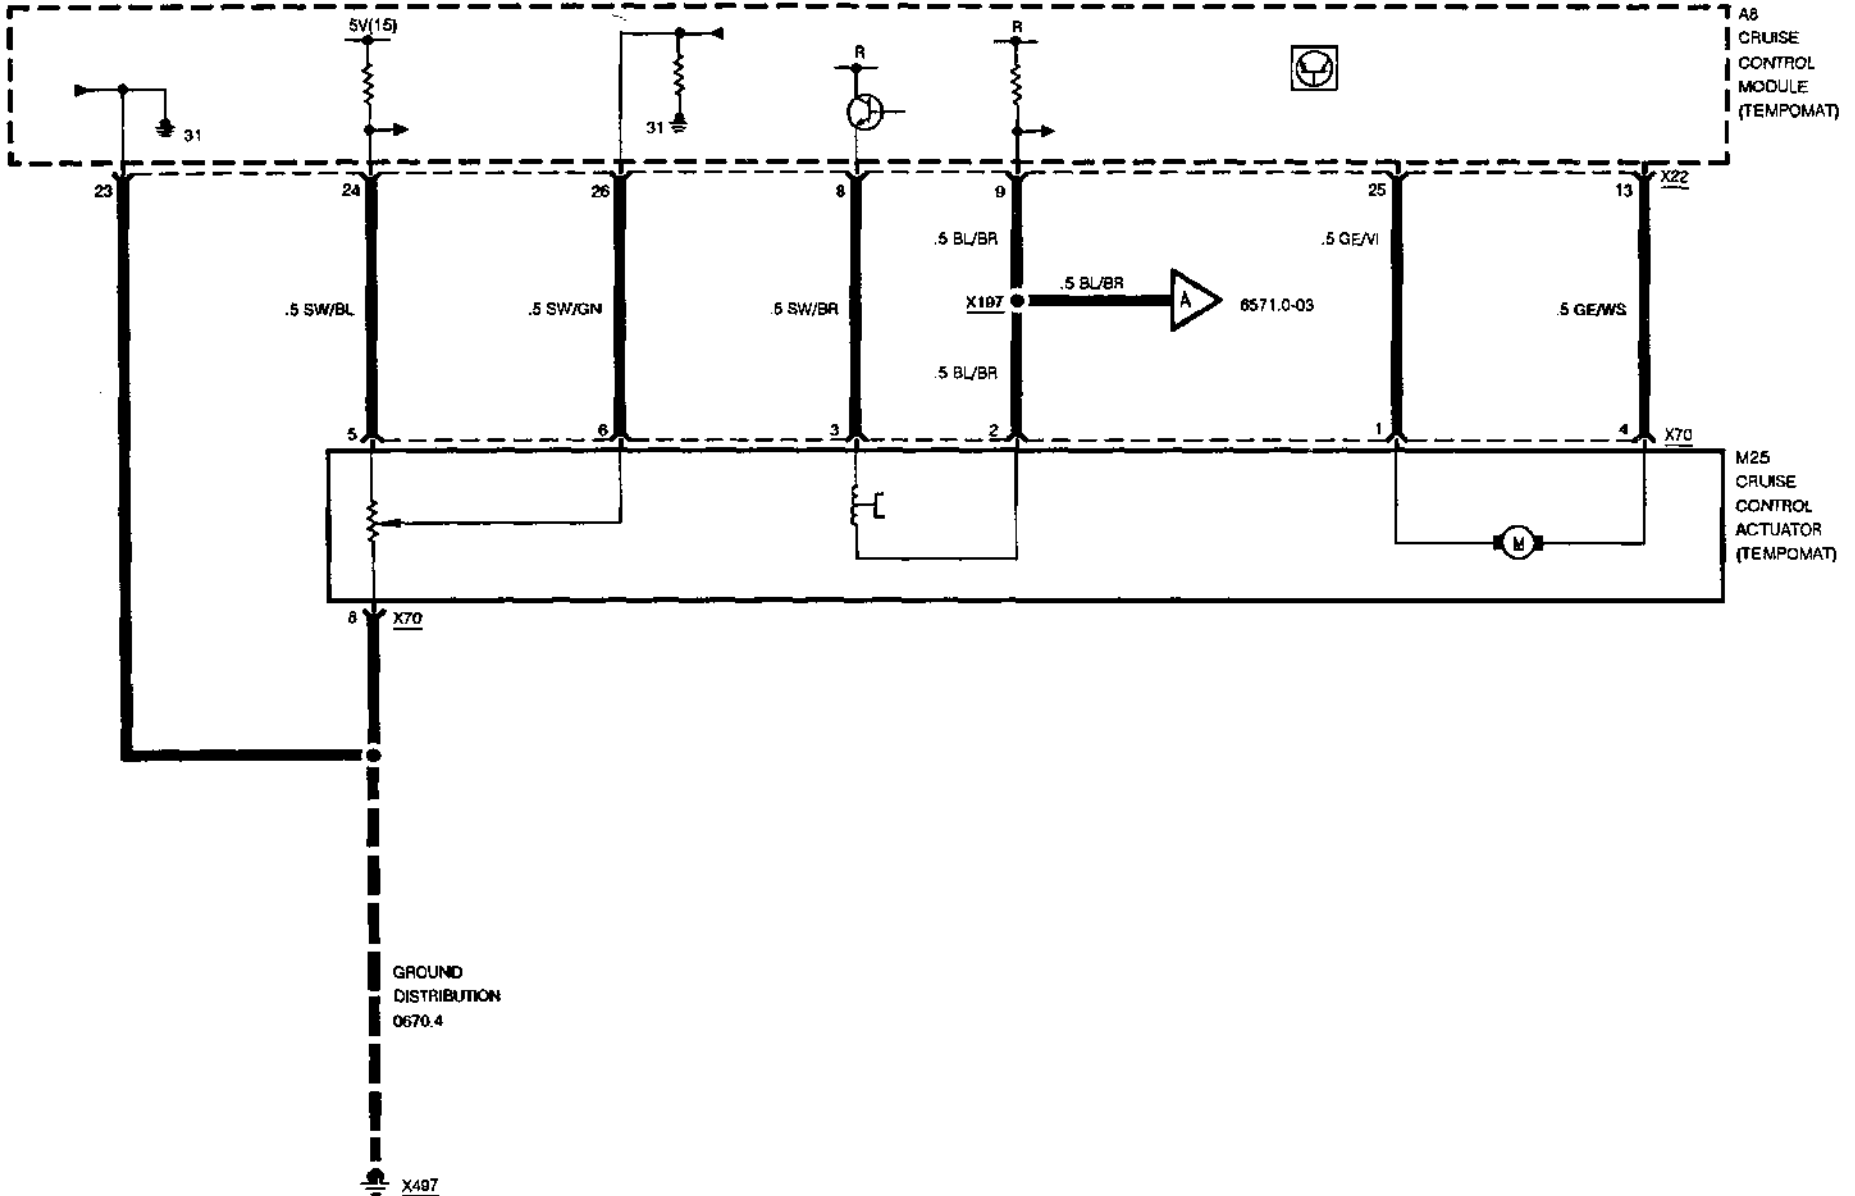




CRUISE CONTROL (TEMPOMAT)

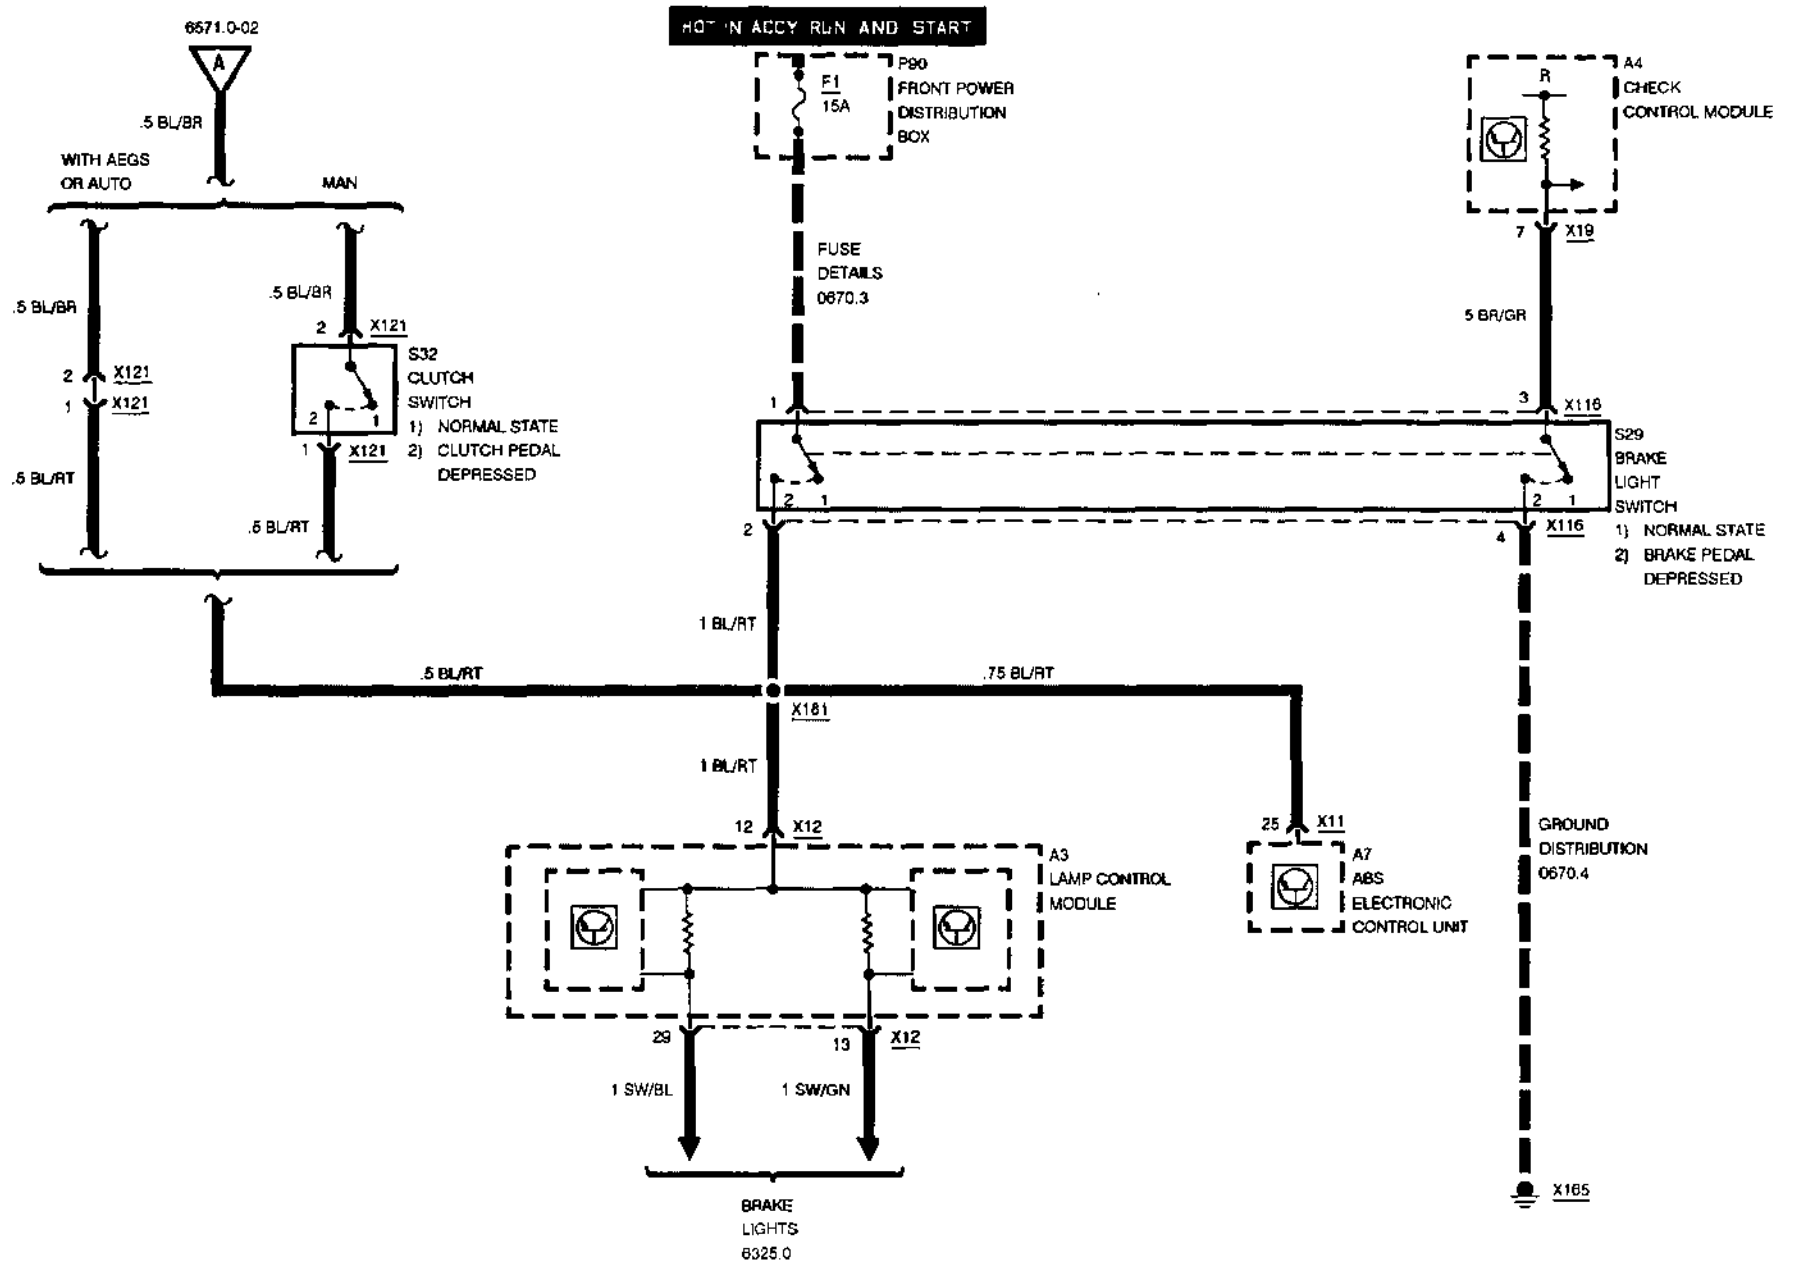




ON-BOARD COMPUTER (BCIV)

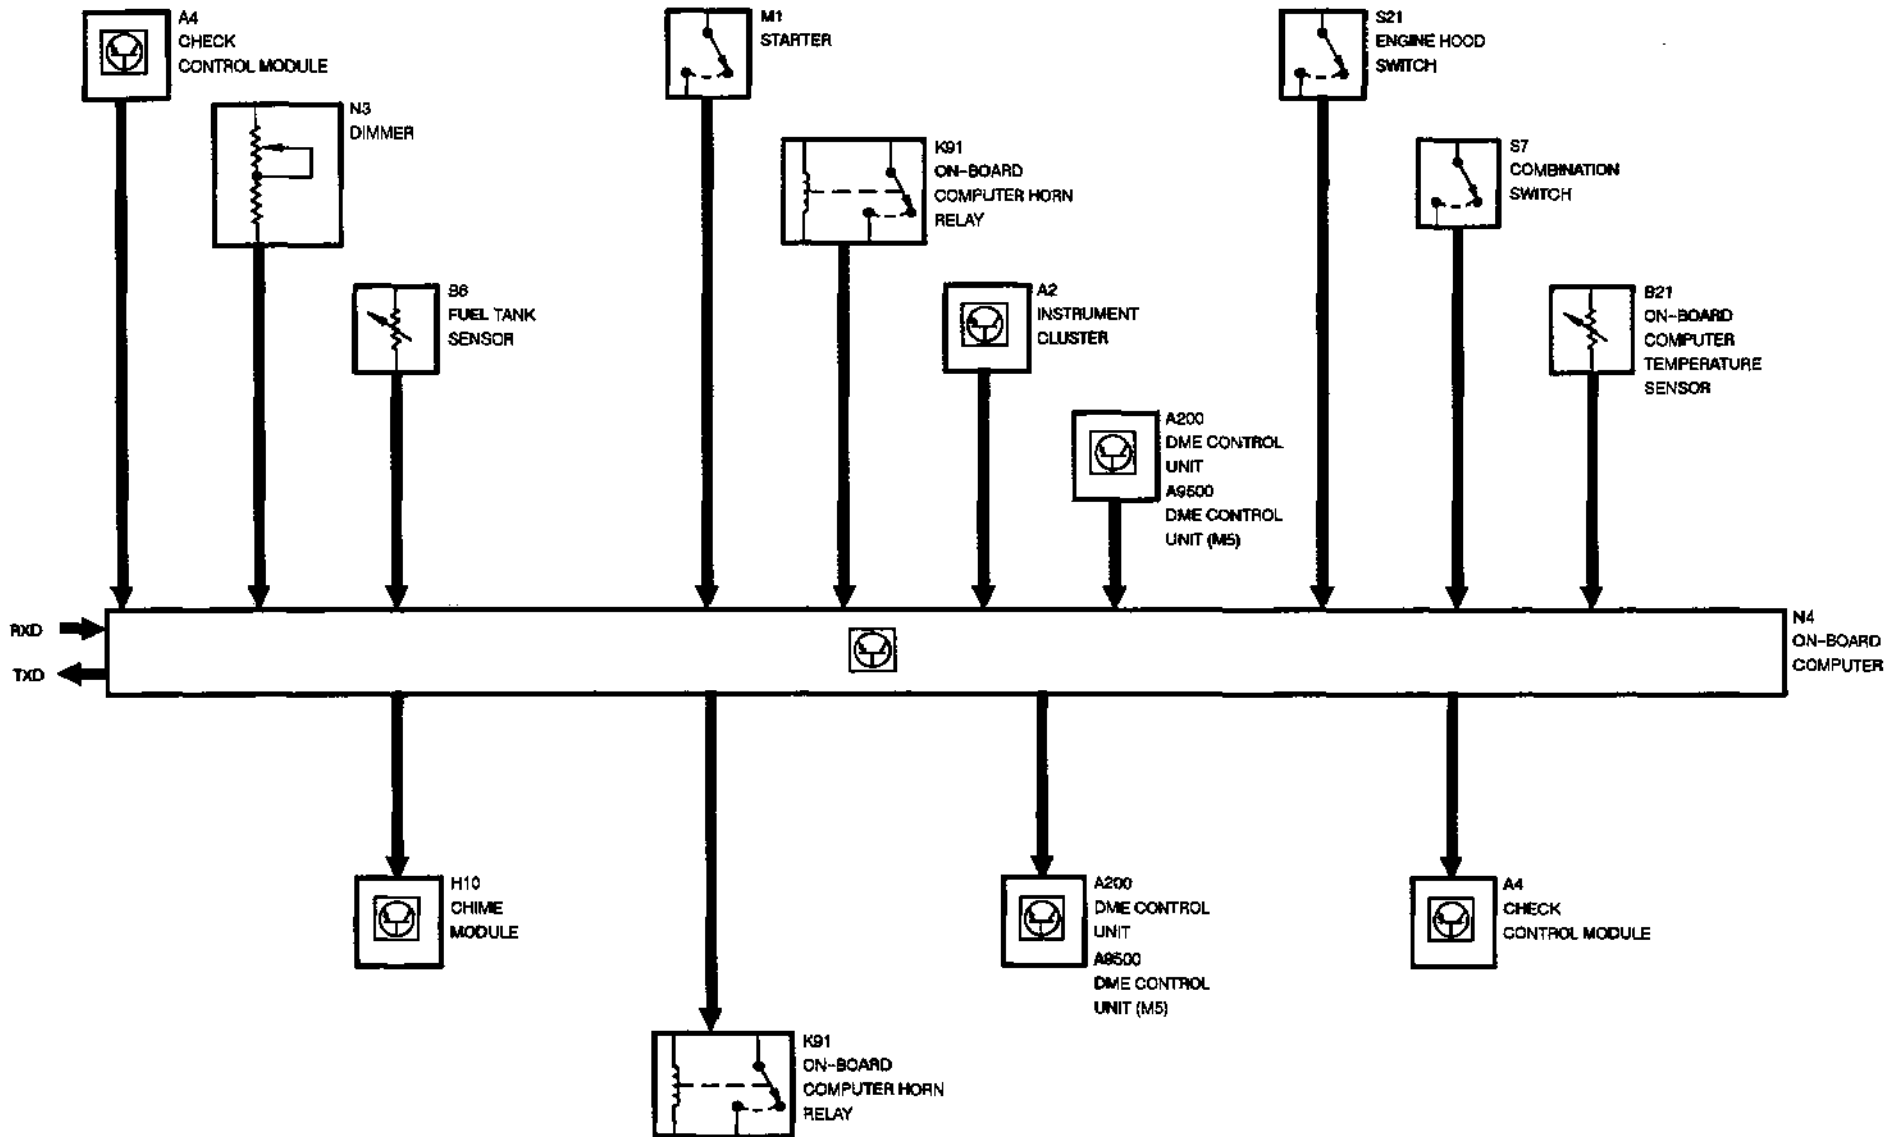

6581.0




ON-BOARD COMPUTER (BCIV)

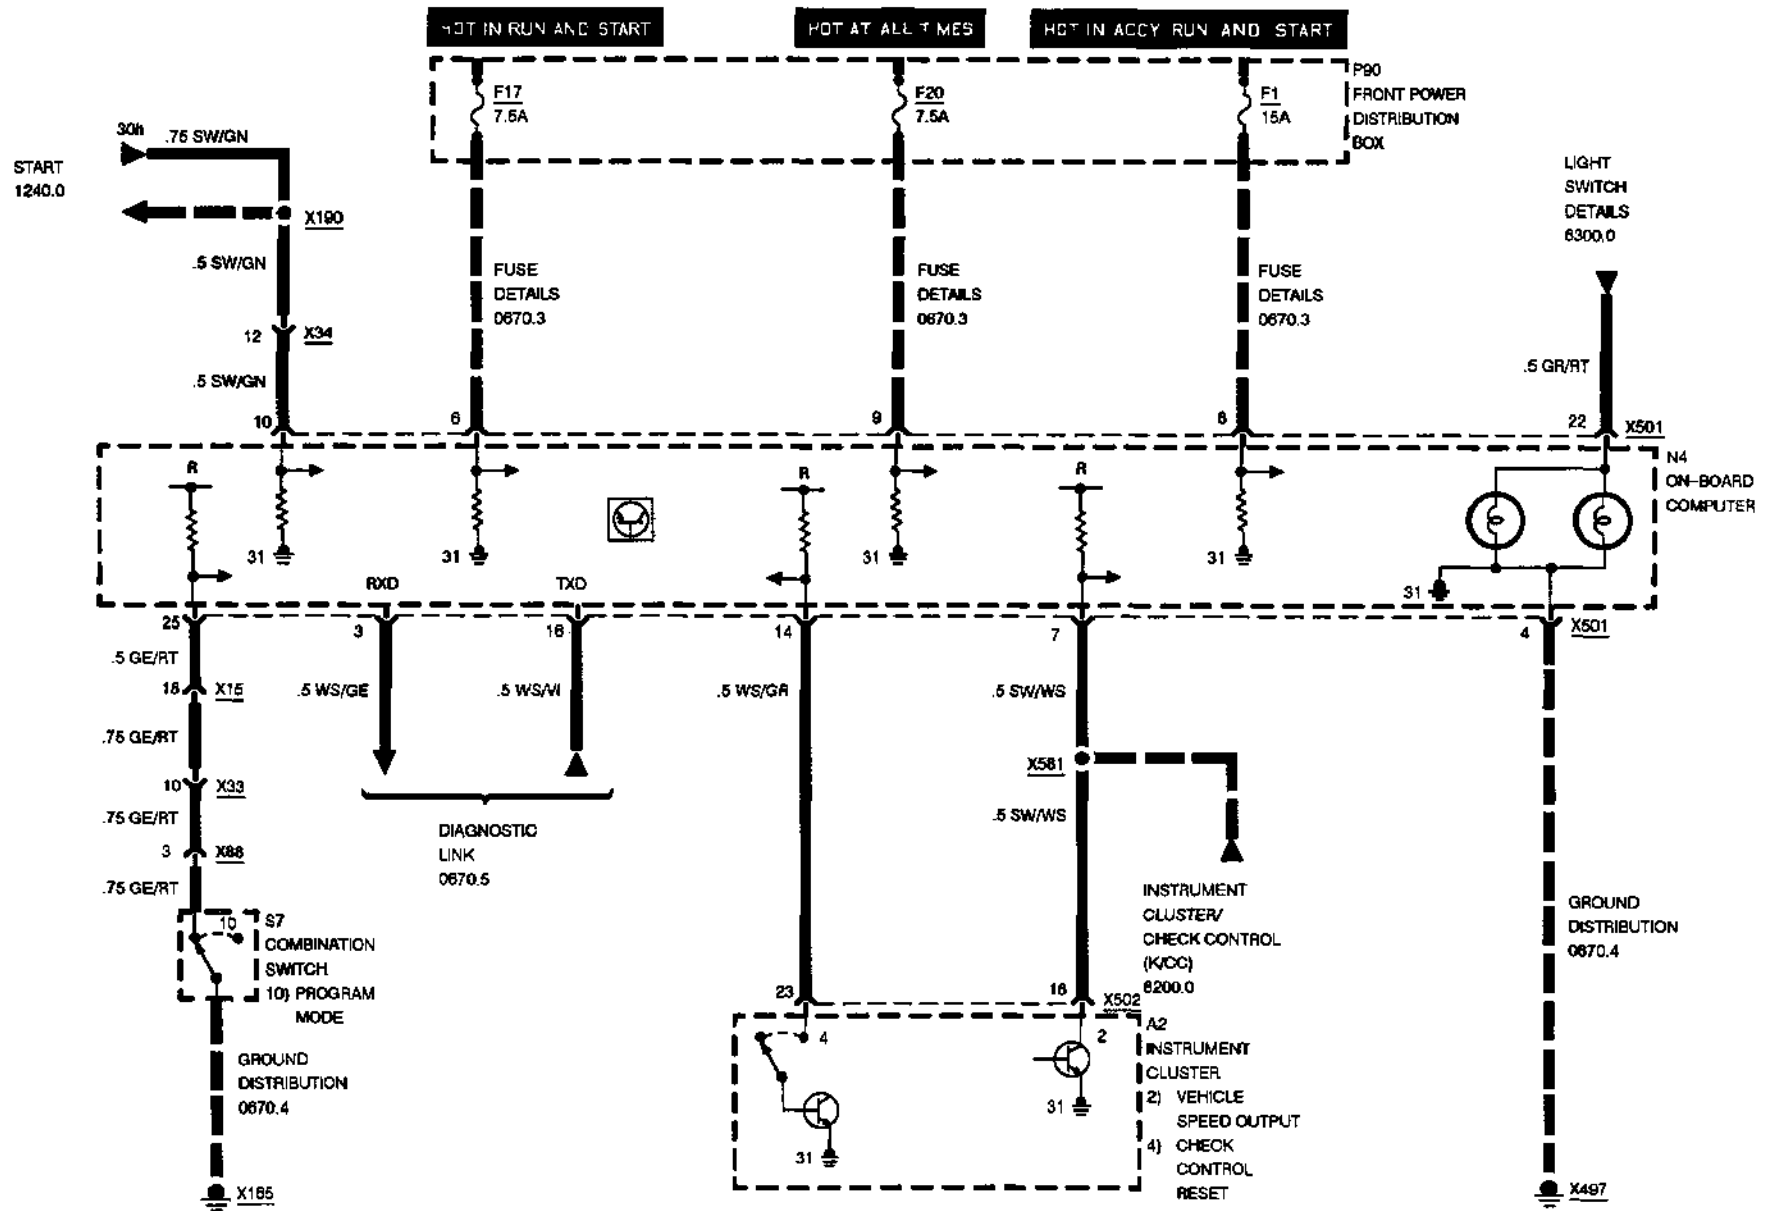




ON-BOARD COMPUTER (BCIV)

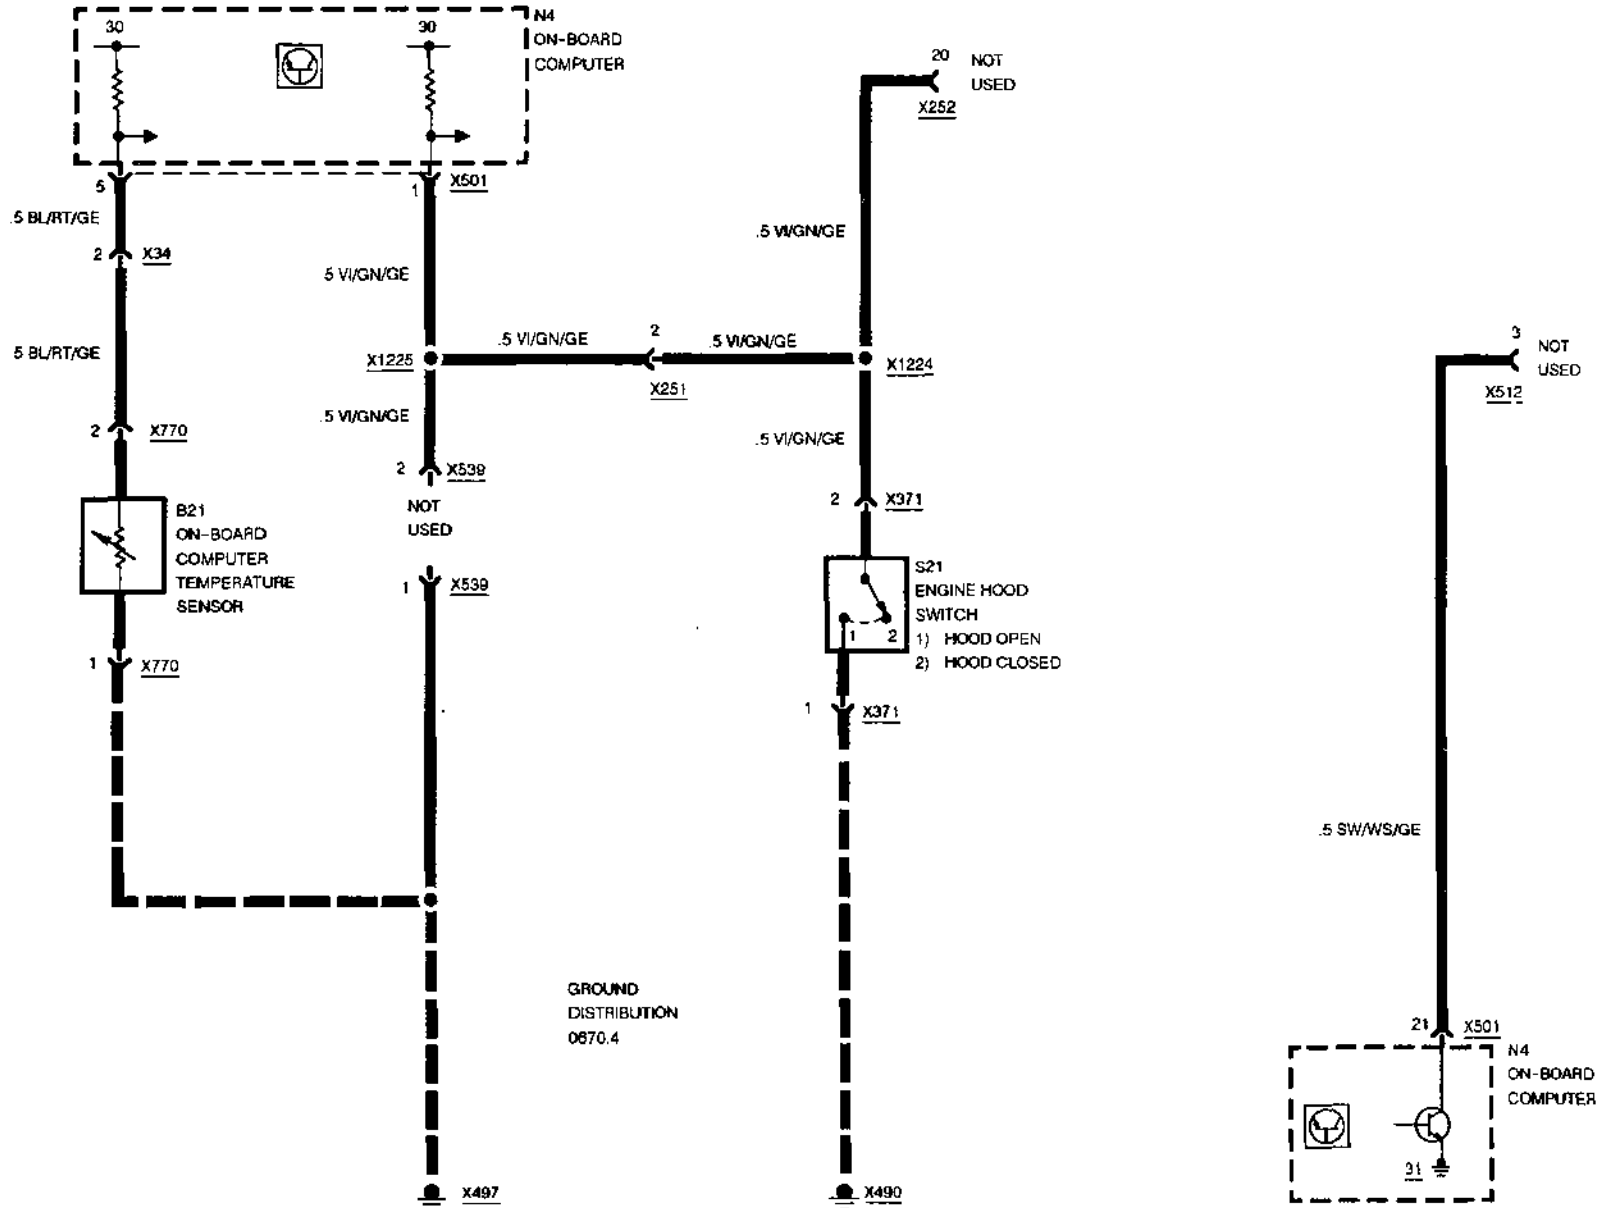




ON-BOARD COMPUTER (BCIV) ANTITHEFT HORN

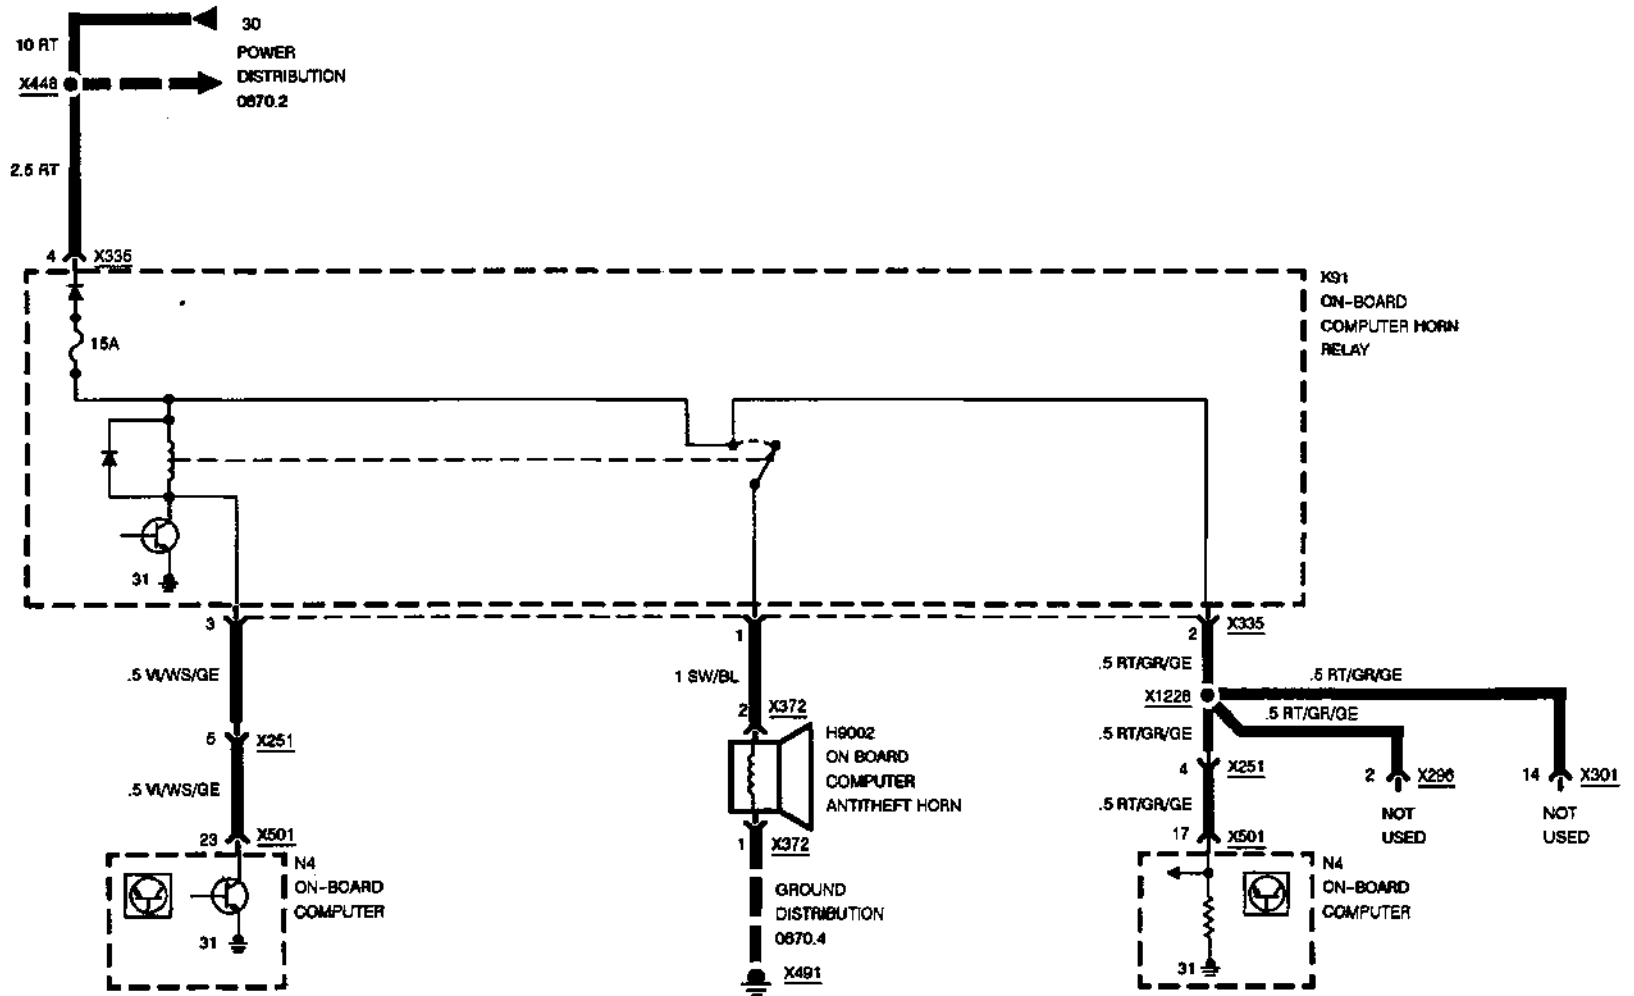



ON-BOARD COMPUTER (BCIV)


FUEL GAUGE

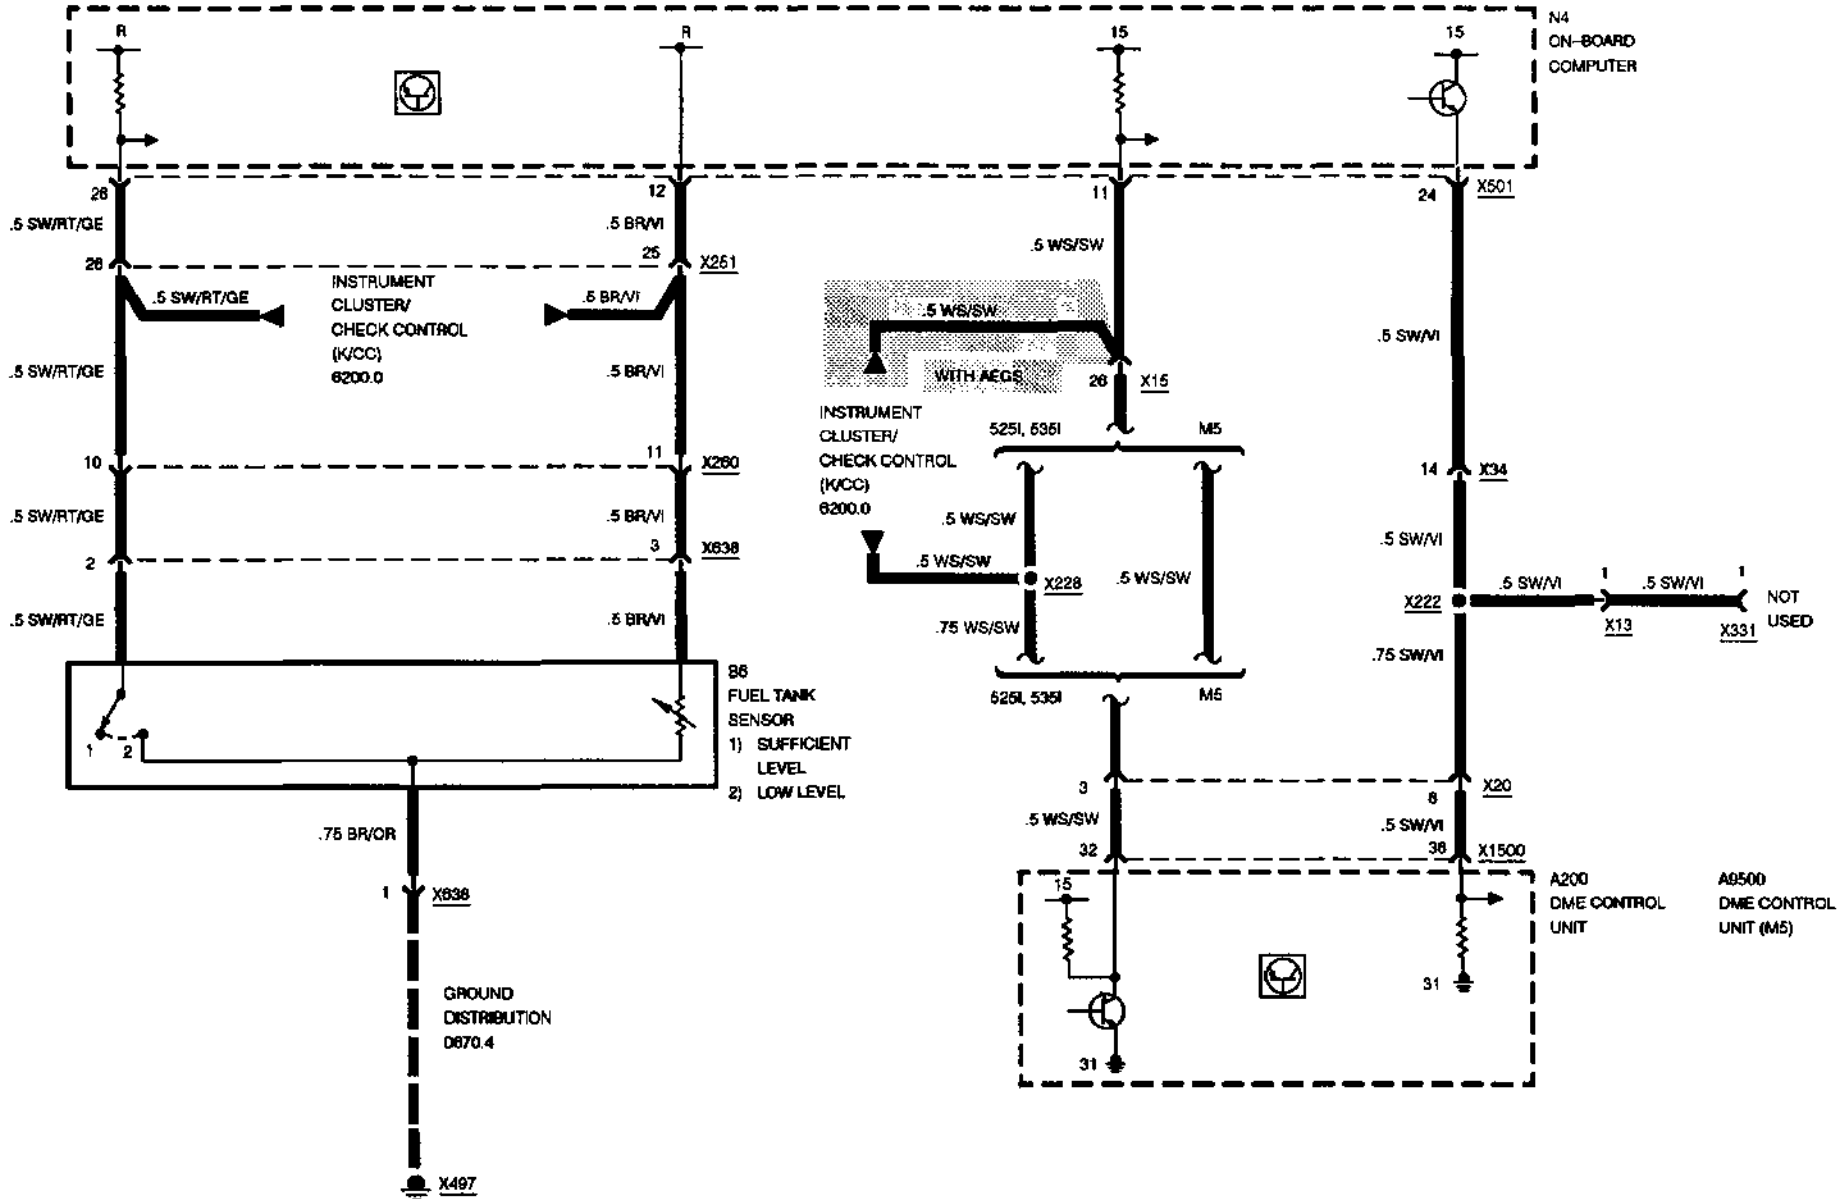




ON-BOARD COMPUTER (BCIV)

CHIME MODULE

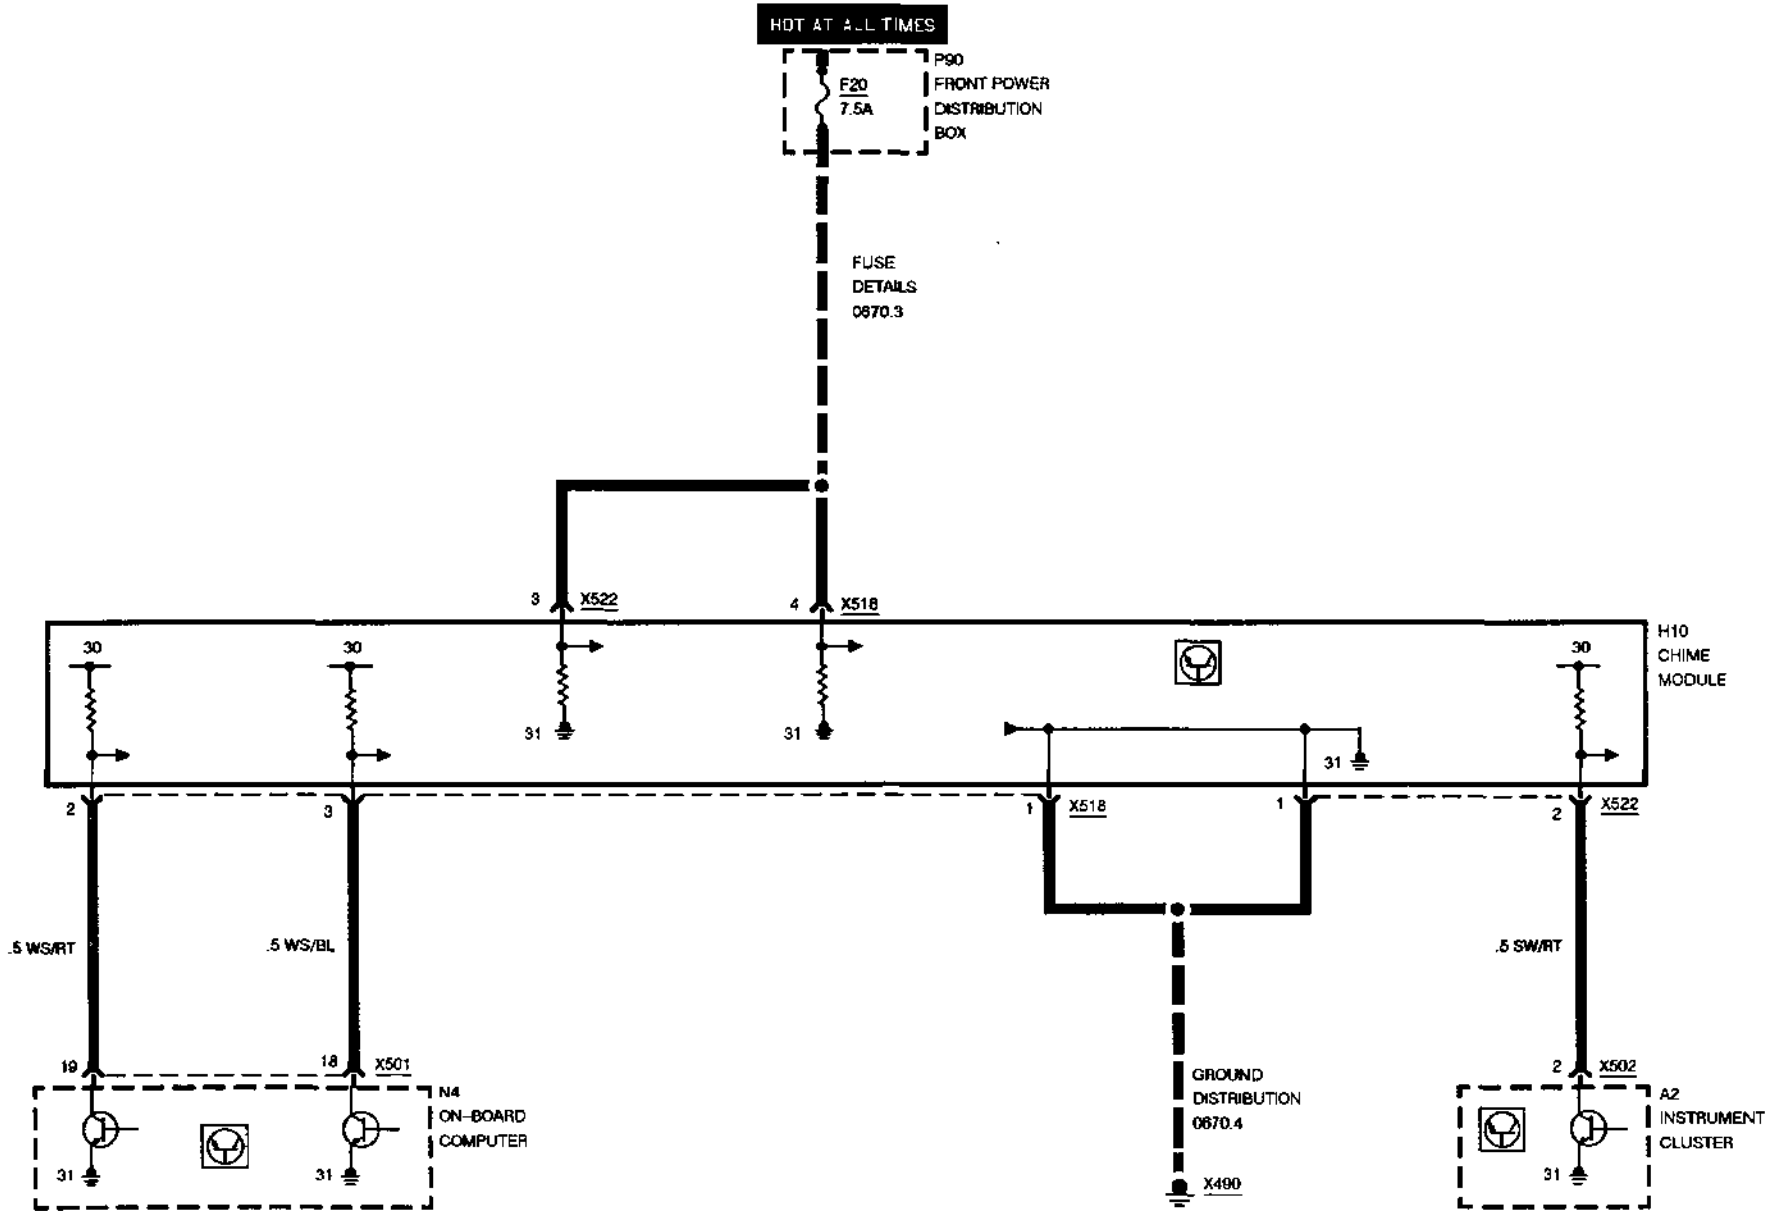



ON-BOARD COMPUTER (BCIV) DATA LINK

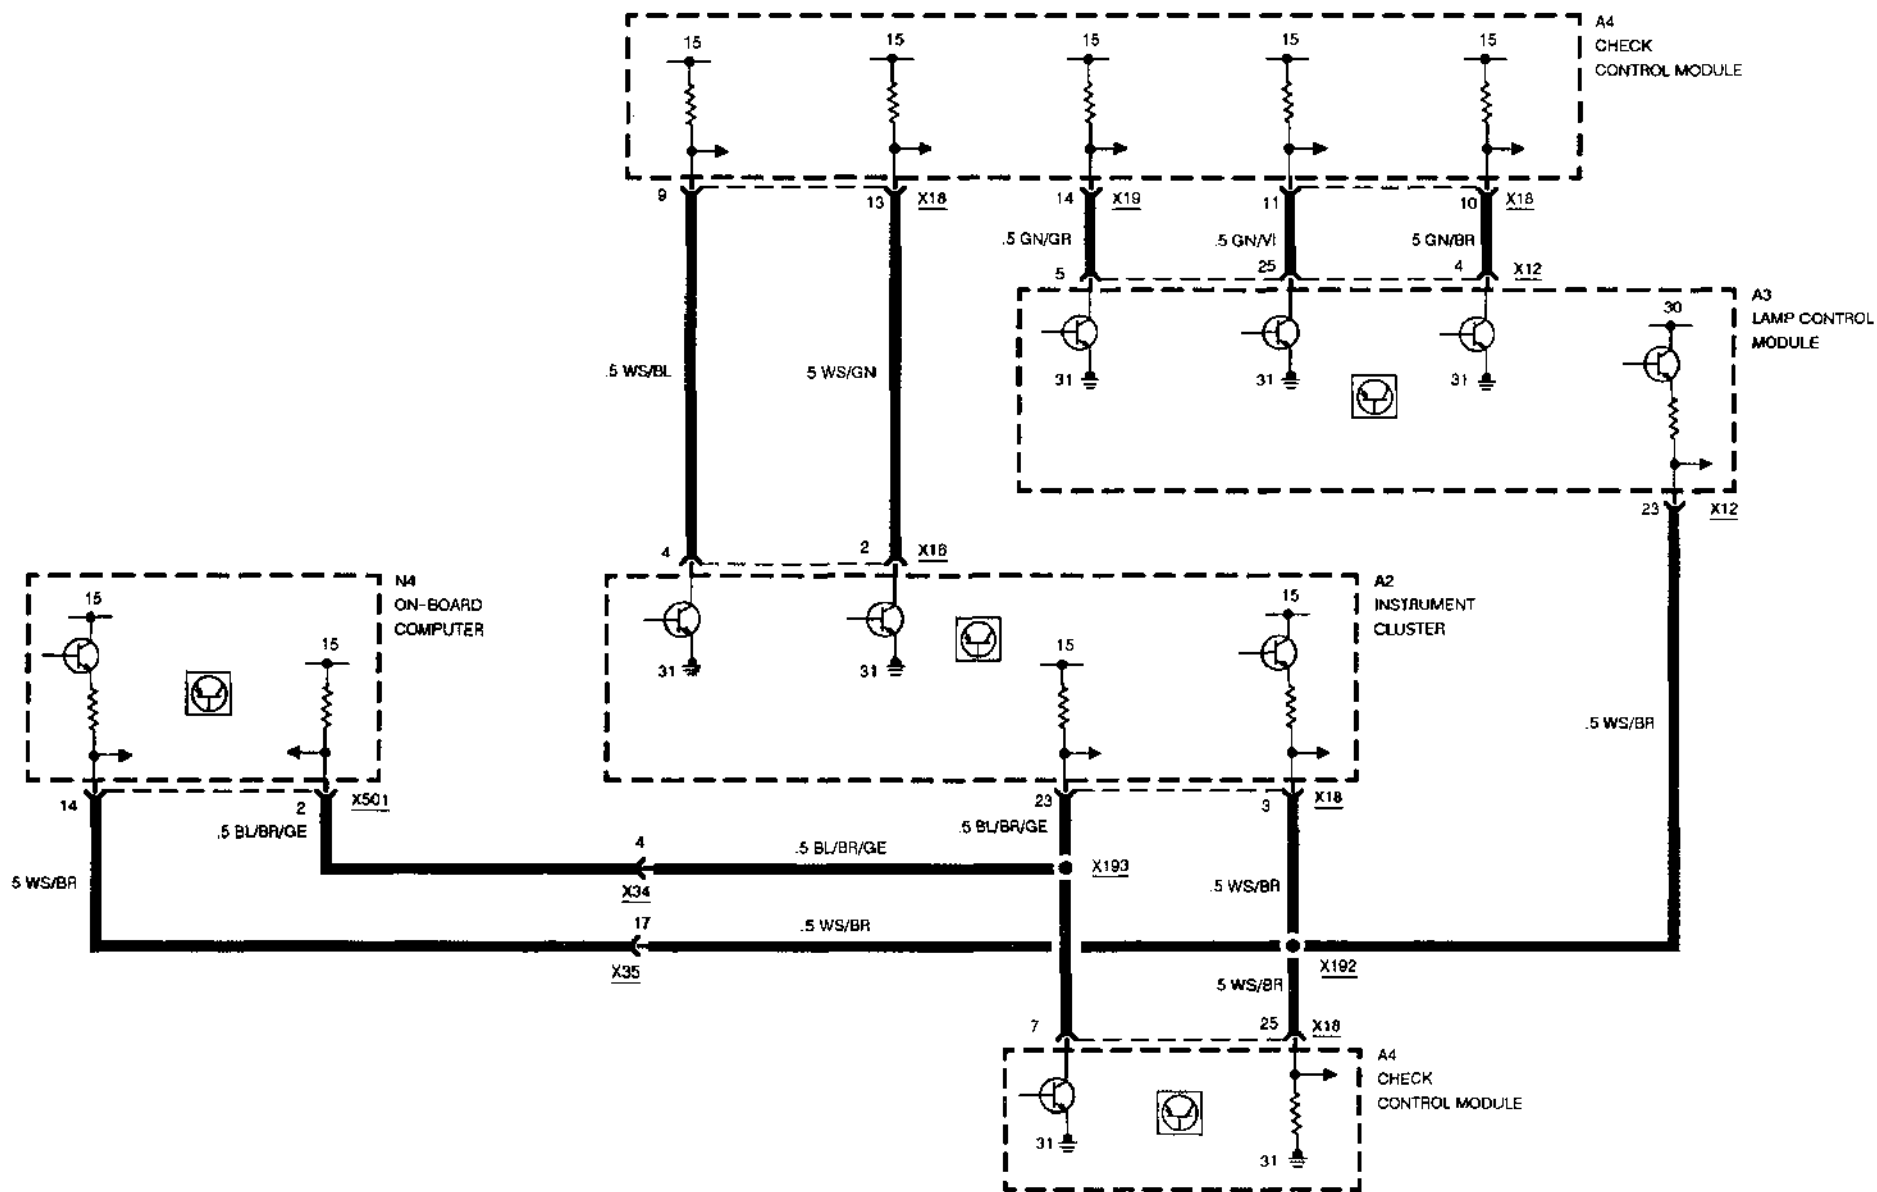



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
A1	General Module	Below LH side of rear seat, in P91 Rear Power Distribution Box. 7100.0-45-2
A3	Lamp Control Module	LH rear of engine compartment, in P90 Front Power Distribution Box 7100.0-01-1
A4	Check Control Module	LH rear of engine compartment, in P90 Front Power Distribution Box 7100.0-01-1
A5	Relay Module	Below LH side of rear seat, in P91 Rear Power Distribution Box. 7100.0-45-2
A7	ABS Electronic Control Unit	Behind RH front shock tower, in P93 E-Box 7100.0-18-3
A8	Cruise Control Module (Tempomat)	Behind RH front shock tower, in P93 E-Box 7100.0-18-3
A12	Diagnostic Module (SRS)	Below LH side of dash, LH side of steering column 7100.0-28-2
A15	Park Heating/Ventilation Box	Inside RH kick panel 7100.0-38-3
A17	Servotronic Control Unit	Inside LH kick panel Not in US
A18	HIFI Amplifier (M5)	LH side of trunk, on brace 7100.0-50-3
A18	HIFI Amplifier (525i/535i)	LH side of trunk, on brace 7100.0-50-2
A87	Integrated Climate Regulation II Control Unit	Below center of dash, ahead of IHKR 2 plenum 7100.0-37-3
A200	DME Control Unit	Behind RH front shock tower, in P93 E-Box 7100.0-18-3
A300	Electronic Transmission Control Unit (AEGS)	Inside RH kick panel 7100.0-38-2
A9000	Integrated Climate Regulation Control Unit (IHKR)	Below center of dash, ahead of IHKR plenum 7100.0-37-1
A9500	DME Control Unit	Behind RH front shock tower, in P93 E-Box 7100.0-19-3
A9502	Full Throttle Compressor Control Unit	Inside LH kick panel 7100.0-27-1
A9557	Intake Air Control	Behind RH front shock tower, in P93 E box 7100.0-19-3
B1	Right Front Speed Sensor	Behind RH front wheel 7100.0-22-2
B2	Left Front Speed Sensor	Behind LH front wheel 7100.0-22-1
B3	Right Rear Speed Sensor	Behind RH rear wheel 7100.0-23-1
B4	Left Rear Speed Sensor	Behind LH rear wheel 7100.0-22-3
B6	Fuel Tank Sensor	Below RH side of trunk, through maintenance cover, RH side of spare tire. 7100.0-51-2
B10	Vehicle Speed Sensor	Below rear of car, on rear differential 7100.0-26-2
B11	Left Heat Exchanger Temperature Sensor (IHKR 2)	Below LH side of dash, on LH side of IHKR 2 plenum 7100.0-32-3

7/90
7000.0-00
1990



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
B11	Left Heat Exchanger Temperature Sensor (IHKR)	Below LH side of dash, in LH side of IHKR plenum 7100.0-31-3
B12	Right Heat Exchanger Temperature Sensor (IHKR 2)	Below RH side of dash, in RH side of IHKR 2 plenum 7100.0-37-2
B12	Right Heat Exchanger Temperature Sensor (IHKR)	Below RH side of dash, in RH side of IHKR plenum 7100.0-36-3
B13	Outside Temperature Sensor	Behind center of fresh air cowl panel, on RH side of M30 Blower Motor 7100.0-21-3
B14	Evaporator Temperature Sensor (IHKR)	Below LH side of dash, on lower LH side of IHKR plenum . . 7100.0-32-1
B14	Evaporator Temperature Sensor (IHKR 2)	Below LH side of dash, on lower LH side of IHKR 2 plenum. 7100.0-32-2
B16	Left Front Brake Pad Sensor	Behind LH front wheel, on brake caliper. 7100.0-22-1
B17	Right Rear Brake Pad Sensor	Behind RH rear wheel, on brake caliper. 7100.0-23-1
B18	Brake Fluid Level Switch (M30 Engine)	LH rear of engine compartment, top of brake fluid reservoir. 7100.0-02-3
B18	Brake Fluid Level Switch (M20/M5 Engines)	LH rear of engine compartment, top of brake fluid reservoir. 7100.0-02-2
B21	On-Board Computer Temperature Sensor	Under RH side of front bumper 7100.0-12-1
B22	Wheel Camber Control Unit	Below RH rear of car, near rear differential 7100.0-25-3
B201	Cylinder Identification Sensor (M20/M30 Engines)	RH front of engine, near distributor 7100.0-14-3
B201	Cylinder Identification Sensor (M5 Engine)	Front of engine, near distributor 7100.0-15-1
B202	Engine Speed/Reference Point Sensor (M20/M30 Engines)	Front of engine, below distributor 7100.0-14-3
B202	Engine Speed/Reference Point Sensor (M5 Engine)	Front of engine, below distributor 7100.0-09-2
B203	Oxygen Sensor (M5 Engine)	Below center of catalytic converter. 7100.0-25-2
B203	Oxygen Sensor (M30 Engine)	In top of catalytic converter, near rear of transmission 7100.0-25-1
B203	Oxygen Sensor (M20 Engine)	Lower RH side of engine compartment, in exhaust manifold 7100.0-18-1
B204	Coolant Temperature Sensor (M5 Engine)	RH side of engine, on coolant inlet. 7100.0-15-3
B204	Coolant Temperature Sensor (M20 Engine)	On coolant inlet, near RH valve cover 7100.0-14-1
B204	Coolant Temperature Sensor (M30 Engine)	On coolant inlet, near RH valve cover 7100.0-14-2
B205	Oil Level Sensor (M30/M5 Engines)	Lower LH front of engine, on bottom of oil pan. 7100.0-23-3
B205	Oil Level Sensor (M20 Engine)	Lower LH front of engine, on bottom of oil pan. 7100.0-23-2
B206	Oil Pressure Switch (M30 Engine)	Top rear of engine, rear of cylinder head 7100.0-21-2
B206	Oil Pressure Switch (M5 Engine)	LH front of engine 7100.0-09-1
B206	Oil Pressure Switch (M20 Engine)	Lower RH front of engine 7100.0-24-2
B207	Coolant Temperature Sender (M5 Engine)	RH side of engine, on coolant inlet. 7100.0-15-3



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
B207	Coolant Temperature Sender (M20 Engine)	On coolant inlet, near RH valve cover 7100.0-14-1
B207	Coolant Temperature Sender (M30 Engine)	On coolant inlet, near RH valve cover 7100.0-14-2
B208	Air Flow Meter (M20 Engine)	LH side of engine 7100.0-06-1
B208	Air Flow Meter (M30 Engine)	Top center of engine, ahead of oil fill cap 7100.0-17-3
B210	Temperature Switch	Behind RH front shock tower, in P93 E-Box 7100.0-19-2
B900	Jumper Plug	LH rear of engine compartment, in P90 Front Power Distribution Box 7100.0-00-3
B9508	Pressure Switch	RH front of engine compartment 7100.0-13-2
B9550	Air Mass Meter	LH front of engine compartment, in front of LH shock tower 7100.0-06-2
B9554	Intake Air Temperature Sensor	LH front of engine compartment, in front of LH shock tower 7100.0-06-3
B9560	Oil Temperature Sensor	LH front of engine 7100.0-09-1
C100	Contact Ring	Inside steering wheel 7100.0-30-1
C900	Defogger Coupler (IHKR 2)	In RH "C" pillar 7100.0-50-1
C900	Defogger Coupler (IHKR)	In RH "C" Pillar 7100.0-49-2
D100	Diagnostic Connector	LH rear of engine compartment, RH side of shock tower 7100.0-01-3
E48	Door Lock Heater	In door, at key lock assembly
E51	Left Washer Jet Heater	LH rear of engine compartment hood, under cover 7100.0-11-1
E52	Right Washer Jet Heater	RH rear of engine compartment hood, under cover 7100.0-11-2
E56	Driver's Seatback Heater	In back of driver's seat
E57	Driver's Seat Heater	In driver's seat
E58	Passenger's Seat Heater	In passenger's seat
E59	Passenger's Seatback Heater	In back of passenger's seat
F0	Fusible Link 80A	RH side of engine compartment, on front of shock tower 7100.0-21-1
F99	Fusible Link 50A (525i)	Below RH side of rear seat 7100.0-47-1
F99	Fusible Link 50A (535i And M5)	Below RH side of rear seat 7100.0-47-3
FA	Fuse 5A	RH front of trunk, near U3 Transceiver Telephone
FB	Fuse 100ma	RH front of trunk, near U3 Transceiver Telephone
FC	Fuse 5A	RH front of trunk, on U3 Transceiver Telephone
FD	Fuse 3A	LH front of trunk 7100.0-51-1
G1	Battery (M20 Engine)	RH front of engine compartment 7100.0-21-1



COMPONENT LOCATION CHART

COMPONENTS

			Page-Figure
G1	Battery (M30/M5 Engines)	Below RH side of rear seat	7100.0-47-3
G2	Alternator	Lower LH front of engine	7100.0-10-1
G5	Driver's Air Bag Generator	Inside center of steering wheel	7100.0-30-1
H2	Left Horn	Front of car, behind grille	7100.0-11-3
H3	Right Horn	Front of car, behind grille	7100.0-11-3
H10	Chime Module	Below LH side of dash, mounted in hush panel	7100.0-28-1
H9002	On Board Computer Antitheft Horn	Behind center of fresh air cowl panel	7100.0-21-3
K1	Starter Relay	LH rear of engine compartment, in P90 Front Power Distribution Box	7100.0-00-3
K2	Horn Relay	LH rear of engine compartment, in P90 Front Power Distribution Box	7100.0-00-3
K3	Unloader Relay, KLR	LH rear of engine compartment, in P90 Front Power Distribution Box	7100.0-00-3
K4	Blower Relay	LH rear of engine compartment, in P90 Front Power Distribution Box	7100.0-00-3
K5	Washer Pump Relay	LH rear of engine compartment, in P90 Front Power Distribution Box	Not in US
K9	Unloader Relay, KL15	LH rear of engine compartment, in P90 Front Power Distribution Box	7100.0-01-1
K11	Wiper Relay	Below LH side of rear seat, on P91 Rear Power Distribution Box	7100.0-45-3
K12	Wiper Pressure Control (ADV) Relay	Below LH side of rear seat, on P91 Rear Power Distribution Box	7100.0-45-2
K13	Rear Defogger Relay	Below LH side of rear seat, on P91 Rear Power Distribution Box	7100.0-45-3
K15	Electric Power Protection Relay	Below LH side of rear seat, on P91 Rear Power Distribution Box	7100.0-45-3
K16	Hazard Flasher Relay	LH rear of engine compartment, in P90 Front Power Distribution Box	7100.0-00-3
K19	Compressor Control Relay	Inside LH kick panel	7100.0-27-1



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
K21	Normal Speed Relay	LH side of engine compartment, in P92 Auxiliary Relay Box 7100.0-04-2
K22	High Speed Relay	LH side of engine compartment, in P92 Auxiliary Relay Box 7100.0-04-2
K33	Air Conditioning Relay	LH side of engine compartment, in P92 Auxiliary Relay Box 7100.0-04-2
K50	Water Pump Relay	LH rear of engine compartment, in P90 Front Power Distribution Box 7100.0-01-1
K51	Phone Alert Relay	LH rear of engine compartment, in P90 Front Power Distribution Box
K61	Unloader Relay, KL61	LH rear of engine compartment, in P90 Front Power Distribution Box 7100.0-00-3
K65	Driver's Seat Heater Relay	Below driver's seat
K66	Passenger's Seat Heater Relay	Below passenger's seat
K91	On-Board Computer Horn Relay	Below LH side of rear seat, ahead of P91 Rear Power Distribution Box 7100.0-46-1
K201	Fuel Pump Relay (M20/M30 Engines)	Behind RH front shock tower, in P93 E-Box 7100.0-19-1
K201	Fuel Pump Relay (M5)	Behind RH front shock tower, in P93 E-Box 7100.0-19-3
K202	Main Relay (M20/M30 Engines)	Behind RH front shock tower, in P93 E-Box 7100.0-19-1
K202	Main Relay (M5)	Behind RH front shock tower, in P93 E-Box 7100.0-19-3
K203	Oxygen Sensor Relay	Behind RH front shock tower, in P93 E-Box 7100.0-19-1
K9502	Full Throttle Compressor Cut Off Relay	Inside LH kick panel 7100.0-27-1
K9569	Air Pump Relay	Behind RH front shock tower, in P93 E-Box 7100.0-19-3
M1	Starter (M20 Engine)	Lower LH rear of engine, below intake manifold 7100.0-03-1
M1	Starter (M30 Engine)	Lower LH rear of engine, below intake manifold 7100.0-03-2
M1	Starter (M5 Engine)	Lower LH side of engine, below intake manifold 7100.0-03-3
M2	Fuel Pump	Below trunk, RH side of spare tire 7100.0-51-2
M3	Wiper Motor	Behind LH side of fresh air cowl panel 7100.0-00-1
M4	Washer Pump	RH front of engine compartment, on windshield washer fluid reservoir 7100.0-13-1
M5	Intensive Wash Pump	RH front of engine compartment, on windshield washer fluid reservoir Not in US
M9	Auxiliary Fan Motor	Center front of engine compartment, behind bumper 7100.0-11-3



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
M12	Driver's Door Lock Motor	Top rear of driver's door 7100.0-40-1
M13	Passenger's Door Lock Motor	Top rear of passenger's door 7100.0-40-1
M14	Right Rear Door Lock Motor	Top rear of RH rear door 7100.0-41-1
M15	Left Rear Door Lock Motor	Top rear of LH rear door 7100.0-41-1
M16	Gas Filler Lock Motor	RH side of trunk, behind wheel well 7100.0-51-3
M17	Trunk Lock Motor	In trunk lid, RH side of lid lock assembly 7100.0-52-3
M20	Left Rear Window Motor	Lower front of LH rear door 7100.0-41-1
M21	Driver's Window Motor	Lower front of driver's door 7100.0-40-1
M22	Right Rear Window Motor	Lower front of RH rear door 7100.0-41-1
M23	Passenger's Window Motor	Lower front of passenger's door 7100.0-40-1
M24	Sunroof Motor	In center of windshield header, near rear view mirror 7100.0-33-3
M25	Cruise Control Actuator (Tempomat) (M20/M30 Engines)	LH side of engine compartment, ahead of LH shock tower 7100.0-07-1
M25	Cruise Control Actuator (Tempomat) (M5 Engine)	LH front of engine compartment, ahead of LH shock tower 7100.0-07-2
M30	Blower Motor	Behind center of fresh air cowl panel 7100.0-21-3
M31	Left Footwell Flap Motor (IHKR)	Below LH side of dash, on LH side of IHKR plenum 7100.0-31-3
M32	Right Footwell Flap Motor (IHKR)	Below RH side of dash, on RH side of IHKR plenum 7100.0-36-3
M34	Dash Vent Mixing Flap Motor (IHKR)	Behind center of dash, RH side of N9 Radio 7100.0-36-3
M34	Dash Vent Mixing Flap Motor (IHKR 2)	Below RH side of dash, on RH side of IHKR 2 plenum 7100.0-37-3
M36	Fresh Air Flap Motor (IHKR 2)	Below LH side of dash, on LH side of IHKR 2 plenum 7100.0-32-3
M36	Fresh Air Flap Motor (IHKR)	Below LH side of dash, on LH side of IHKR plenum 7100.0-31-3
M37	Water Pump	LH rear of engine compartment, on engine bulkhead 7100.0-02-1
M40	Footwell Flap Motor (IHKR)	Below LH side of dash, on LH side of IHKR plenum 7100.0-31-3
M40	Footwell Flap Motor (IHKR 2)	Below LH side of dash, on LH side of IHKR 2 plenum 7100.0-32-3
M50	Driver's Seat Cushion Tilt Motor	Under LH side of driver's seat 7100.0-42-1
M51	Driver's Seat Movement Motor	Under RH side of driver's seat 7100.0-42-2
M52	Driver's Seat Height Motor	Under front of driver's seat 7100.0-42-1
M53	Driver's Seatback Recliner Motor	Under front of driver's seat 7100.0-42-1
M54	Driver's Headrest Motor	In top RH corner of driver's seatback 7100.0-43-2
M57	Passengers Headrest Motor	In top RH corner of passenger's seatback 7100.0-43-2
M58	Passenger's Seatback Recliner Motor	Under front of passenger's seat 7100.0-43-3



COMPONENT LOCATION CHART

COMPONENTS

			Page-Figure
M59	Passenger's Seat Height Motor	Under front of passenger's seat	7100.0-43-3
M60	Passenger's Seat Movement Motor	Under RH side of passenger's seat	7100.0-43-3
M61	Passenger's Seat Cushion Tilt Motor	Under LH side of passenger's seat	7100.0-43-3
M201	E-Box Fan	In P93 E-Box, below modules	7100.0-20-1
M900	Passenger's Thigh Support Motor	In RH front corner of passenger's seat	7100.0-43-1
M901	Driver's Thigh Support Motor	In RH front corner of driver's seat	7100.0-43-1
M9571	Air Pump	Top of engine, below distributor	7100.0-09-2
N2	Final Stage Unit	In LH side of RH footwell, ahead of IHKR plenum	7100.0-37-1
N4	On-Board Computer	Center of dash, RH side of N9 Radio	7100.0-34-1
N8	Antenna Amplifier (IHKR)	In LH "C" pillar	7100.0-49-1
N8	Antenna Amplifier (IHKR 2)	In LH "C" pillar	7100.0-49-3
N17	Crash Control Unit	LH rear of engine compartment, in P90 Front Power Distribution Box	7100.0-01-1
P90	Front Power Distribution Box	LH rear of engine compartment	7100.0-02-1
P91	Rear Power Distribution Box	Below LH side of rear seat	7100.0-45-2
P92	Auxiliary Relay Box (M5 Engine)	LH front of engine compartment, ahead of LH shock tower	7100.0-07-2
P92	Auxiliary Relay Box (M20/M30 Engines)	LH side of engine compartment, ahead of LH shock tower	7100.0-07-1
P93	E-Box	RH rear of engine, behind RH front shock tower	7100.0-18-2
R1	Temperature Distribution Potentiometer	Behind center of dash, above N9 Radio	7100.0-34-1
R11	Blower Resistors	Below LH side of dash, on LH rear of IHKR 2 plenum	7100.0-32-2
S10000	Rear Vent Flap Switch	In rear of console, on rear vent flap	
S2	Ignition Switch	Top RH side of steering column	7100.0-30-2
S3	Automatic Transmission Range Switch	Below center console, at base of gear shift lever	7100.0-35-3
S4	Horn Switch	Top of steering column, in steering wheel	
S7	Combination Switch	Inside top of steering column	7100.0-29-3
S13	Passenger's Door Jamb Switch	In center rear of passenger's door jamb, in latch assembly	7100.0-40-3
S14	Driver's Door Jamb Switch	In center rear of driver's door jamb, in latch assembly	7100.0-40-3
S15	Right Rear Door Jamb Switch	In top rear of RH rear door jamb, in latch assembly	7100.0-41-3
S16	Left Rear Door Jamb Switch	In top rear of LH rear door jamb, in latch assembly	7100.0-41-3
S19	Underhood Light Switch	LH front of engine compartment hood	7100.0-10-3



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
S21	Engine Hood Switch	LH rear of engine compartment, rear of shock tower 7100.0-01-1
S22	Battery Switch	Under RH side of rear seat, near battery Not in US
S24	Rear Seat Switch	Under RH side of rear seat, right of battery Not in US
S27	Inertia Switch	Below center of rear seat, RH side of P91 Rear Power Distribution Box 7100.0-46-3
S29	Brake Light Switch	Below LH side of dash, on brake pedal support bracket. 7100.0-28-2
S31	Park Brake Switch	Below center console, on rear of park brake lever 7100.0-36-1
S32	Clutch Switch	Behind LH side of dash, on clutch pedal support bracket
S36	Temperature Switch	Top RH side of radiator 7100.0-12-3
S37	Glove Box Light Switch	In LH side of glove box. 7100.0-36-2
S39	Sunroof Position Switch	In center of windshield header, near rear view mirror. 7100.0-33-3
S43	Driver's Window Limit Switch	Center front of driver's door 7100.0-40-1
S44	Passenger's Window Limit Switch	Center front of passenger's door 7100.0-40-1
S45	Left Rear Window Limit Switch	Center front of LH rear door 7100.0-41-1
S46	Right Rear Window Limit Switch	Center front of RH rear door. 7100.0-41-1
S47	Driver's Door Lock Switch	Behind driver's door lock assembly
S48	Driver's Door Handle Switch	In top rear of driver's door, near door handle cable
S49	Passenger's Door Lock Switch	Behind passenger's door lock assembly
S58	Driver's Seat Belt Switch	In driver's seat belt buckle
S61	Trunk Lid Switch	In center of trunk lid, in trunk latch assembly 7100.0-52-2
S63	Coolant Level Switch (M5 Engine)	RH side of engine, on coolant reservoir 7100.0-16-2
S63	Coolant Level Switch (M30 Engine)	Center rear of engine compartment, top of coolant reservoir 7100.0-17-3
S63	Coolant Level Switch (M20 Engine)	Lower LH side of radiator 7100.0-12-2
S64	Washer Fluid Level Switch	RH side of engine compartment, RH side of windshield washer fluid reservoir 7100.0-13-1
S71	Left Front Crash Sensor	Ahead of LH shock tower 7100.0-04-2
S72	Right Front Crash Sensor	Ahead of RH shock tower. 7100.0-16-3
S77	Driver's Makeup Mirror Switch	In driver's visor
S78	Passenger's Makeup Mirror Switch	In passenger's visor
S200	Throttle Switch (M5 Engine)	Top front of engine, on throttle body. 7100.0-08-3



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
S200	Throttle Switch (M20 Engine)	LH rear of engine 7100.0-04-1
S200	Throttle Switch (M30 Engine)	Top of engine, on throttle body 7100.0-17-3
S301	Transmission Kickdown Switch	Below LH side of dash, underneath accelerator pedal 7100.0-30-3
S302	Back-Up Switch	Top RH side of transmission
S901	Passenger's Visor Switch	LH hinge of passenger's visor 7100.0-33-2
S902	Driver's Visor Switch	RH hinge of driver's visor 7100.0-33-2
T200	Ignition Coil	RH side of engine compartment, at strut tower 7100.0-20-2
V6	Uncoupling Diode	Behind center of dash
V9501	Uncoupling Diode (KL61)	Below male side of the engine harness connector
X779	Charging Plug	In LH side of glove box 7100.0-36-2
Y1	ABS Hydraulic Unit (M30 Engine)	LH side of engine compartment, near shock tower 7100.0-02-3
Y1	ABS Hydraulic Unit (M20/M5 Engines)	LH center of engine compartment, near shock tower 7100.0-02-2
Y2	Compressor Clutch	Lower RH front of engine 7100.0-24-1
Y4	Water Valve Assembly	LH rear of engine compartment, on engine bulkhead 7100.0-02-1
Y201	Fuel Injector 1 (M5 Engine)	Top of engine, on intake manifold 7100.0-17-2
Y201	Fuel Injector 1 (M20/M30 Engines)	Top of engine, on intake manifold 7100.0-17-1
Y202	Fuel Injector 2 (M20/M30 Engines)	Top of engine, on intake manifold 7100.0-17-1
Y202	Fuel Injector 2 (M5 Engine)	Top of engine, on intake manifold 7100.0-17-2
Y203	Fuel Injector 3 (M5 Engine)	Top of engine, on intake manifold 7100.0-17-2
Y203	Fuel Injector 3 (M20/M30 Engines)	Top of engine, on intake manifold 7100.0-17-1
Y204	Fuel Injector 4 (M5 Engine)	Top of engine, on intake manifold 7100.0-17-2
Y204	Fuel Injector 4 (M20/M30 Engines)	Top of engine, on intake manifold 7100.0-17-1
Y205	Fuel Injector 5 (M5 Engine)	Top of engine, on intake manifold 7100.0-17-2
Y205	Fuel Injector 5 (M20/M30 Engines)	Top of engine, on intake manifold 7100.0-17-1
Y206	Fuel Injector 6 (M20/M30 Engines)	Top of engine, on intake manifold 7100.0-17-1
Y206	Fuel Injector 6 (M5 Engine)	Top of engine, on intake manifold 7100.0-17-2
Y213	Fuel Air Valve (M30 Engine)	LH side of engine, RH side of oil filter 7100.0-05-1
Y213	Fuel Air Valve (M20 Engine)	LH rear of engine 7100.0-04-1
Y213	Fuel Air Valve (M5)	LH side of engine, near oil level stick 7100.0-08-1
Y214	Idle Speed Actuator (M30 Engine)	Top of engine, center rear of throttle body 7100.0-17-3



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
Y214	Idle Speed Actuator (M20 Engine)	LH side of engine, center rear of throttle body 7100.0-06-1
Y214	Idle Speed Actuator (M5 Engine)	Top of engine
Y300	Transmission	LH rear side of transmission. 7100.0-24-3
Y9556	Changeover Valve I	LH side of engine, near oil level stick 7100.0-08-1
Y9573	Changeover Valve II	LH front of engine
X1.0	Junction Post for Front Power Distribution Box	Below LH side of dash, under carpet, near kick panel 7100.0-27-3
X1.1	Junction Post for Front Power Distribution Box	LH rear of engine compartment, in P90 Front Power Distributor Box 7100.0-01-2
X1.2	Junction Post for Front Power Distribution Box	LH rear of engine compartment, in P90 Front Power Distributor Box 7100.0-01-2
X13	Connector (21 pins)	Below LH side of dash, below driver's footrest (White) 7100.0-27-2
X14	Connector (30 pins)	Below LH side of dash, below driver's footrest (Yellow) 7100.0-27-2
X15	Connector (30 pins)	Below LH side of dash, near kick panel 7100.0-28-3
X16	Connector (26 pins) (525i/535i)	Behind LH side of dash, on rear of A2 Instrument Cluster (Yellow) 7100.0-31-1
X16	Connector (26 pins) (M5)	Behind LH side of dash, on rear of A2 Instrument Cluster (Yellow) 7100.0-31-2
X17	Connector (24 pins) (525i/535i)	Behind LH side of dash, on rear of A2 Instrument Cluster (Brown) 7100.0-31-1
X17	Connector (12 pins) (M5)	Behind LH side of dash, on rear of A2 Instrument Cluster (Brown) 7100.0-31-2
X18	Connector (26 pins)	LH rear of engine compartment, on A4 Check Control Module (Blue) 7100.0-00-2
X19	Connector (26 pins)	LH rear of engine compartment, on A4 Check Control Module (Green) 7100.0-00-2
X20	Connector (20 pins)	LH rear of engine compartment, near shock tower 7100.0-01-3
X31	Connector (12 pins)	LH side of engine compartment, on Y1 ABS Hydraulic Unit, under plastic cover 7100.0-04-3
X32	Connector (12 pins)	Below LH side of dash, LH side of steering column 7100.0-28-3
X33	Connector (12 pins)	Below LH side of dash, near kick panel 7100.0-28-3



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
X34	Connector (21 pins)	Below LH side of dash, near kick panel 7100.0-28-3
X35	Connector (21 pins)	Below LH side of dash, near kick panel 7100.0-29-1
X61	Connector (9 pins)	LH side of engine compartment 7100.0-04-2
X62	Connector (9 pins)	LH rear of engine compartment, in P90 Front Power Distribution Box 7100.0-00-3
X72	Connector (8 pins)	Below LH side of dash, LH side of steering column 7100.0-28-3
X74	Connector (8 pins)	Below LH side of dash, above footrest 7100.0-29-2
X75	Connector (6 pins)	Below LH side of dash, above footrest 7100.0-29-2
X79	Connector (4 pins)	Behind RH front shock tower, in P93 E-Box 7100.0-19-2
X81	Connector (3 pins)	Ahead of LH shock tower, left of P92 auxiliary relay box. 7100.0-04-2
X83	Connector (3 pins)	Inside LH kick panel (Yellow) 7100.0-26-3
X84	Connector (3 pins)	Inside LH kick panel (Yellow) 7100.0-26-3
X85	Connector (3 pins)	LH rear of engine compartment 7100.0-01-3
X86	Connector (3 pins)	Ahead of RH shock tower. 7100.0-16-3
X88	Connector (3 pins)	Below LH side of dash, LH side of steering column 7100.0-29-1
X105	Connector (2 pins)	LH rear of engine compartment hood, under cover 7100.0-11-1
X106	Connector (2 pins)	LH rear of engine compartment hood, under cover 7100.0-11-2
X110	Connector (2 pins) (M5 Engine)	RH side of engine compartment. 7100.0-16-2
X110	Connector (2 pins) (M20/M30 Engines)	RH front corner of engine compartment 7100.0-13-1
X113	Connector (2 pins)	RH rear of engine compartment, near base of shock tower 7100.0-16-1
X114	Connector (2 pins)	LH rear of engine compartment, bottom of shock tower 7100.0-04-3
X118	Connector (2 pins)	Behind LH front wheel, above brake caliper. 7100.0-22-1
X120	Connector (2 pins)	LH side of engine compartment 7100.0-04-3
X121	Connector (2 pins)	Below LH side of dash, near clutch switch 7100.0-29-1
X122	Connector (2 pins)	LH rear of engine compartment 7100.0-01-3
X126	Connector (2 pins)	RH front corner of engine compartment 7100.0-13-2
X127	Connector (2 pins)	RH front corner of engine compartment 7100.0-13-3
X163	Connector (3 pins)	RH front of engine compartment, near Y2 Compressor Clutch. 7100.0-15-2
X165	Ground	Below LH side of dash, LH side of steering column 7100.0-28-2

7/90

7000.0-10

1990



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
X166	Ground	RH front of engine compartment, ahead of wheel well 7100.0-13-3
X167	Ground	LH front of engine compartment, on fender wall ahead of wheel well 7100.0-10-2
X170	Terminal Post	LH side of engine compartment, on Y1 ABS Hydraulic Unit 7100.0-04-3
X173	Ground	Below LH side of dash, LH side of steering column 7100.0-28-2
X175	Ground	LH front of engine compartment, on fender wall ahead of wheel well 7100.0-10-2
X179	Ground	RH front of engine compartment, ahead of wheel well 7100.0-13-3
X251	Connector (30 pins)	Below LH side of dash, LH side of steering column 7100.0-28-2
X252	Connector (26 pins)	Below LH side of rear seat 7100.0-46-1
X253	Connector (26 pins)	Below LH side of rear seat, on bottom of A1 General Module (Green) 7100.0-45-1
X254	Connector (26 pins)	Below LH side of rear seat, on bottom of A1 General Module (White) 7100.0-45-1
X255	Connector (26 pins)	Below LH side of rear seat, on bottom of A1 General Module (Yellow) 7100.0-45-1
X256	Connector (26 pins)	Inside front of RH front door jamb, in wire grommet housing 7100.0-39-1
X257	Connector (26 pins)	Inside front of LH front door jamb, in wire grommet housing 7100.0-39-1
X258	Connector (20 pins)	Below LH side of rear seat, on bottom of A5 Relay Module (White) 7100.0-45-1
X259	Connector (20 pins)	Below LH side of rear seat, on bottom of A5 Relay Module (Black) 7100.0-45-1
X260	Connector (21 pins)	Below RH side of rear seat, near battery 7100.0-48-3
X262	Connector (26 pins)	Below LH side of rear seat, on P91 rear power distribution box 7100.0-45-2
X269	Connector (6 pins)	Below LH side of rear seat 7100.0-45-3
X271	Connector (12 pins) (M5)	Behind LH side of dash, on rear of A2 Instrument Cluster (Gray) 7100.0-31-2
X271	Connector (12 pins) (525i/535i)	Behind LH side of dash, on rear of A2 Instrument Cluster (Gray) 7100.0-31-1



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
X272	Connector (12 pins)	Below LH side of rear seat, on P91 Rear Power Distribution Box. 7100.0-45-2
X273	Connector (12 pins)	Inside front of LH rear door jamb, in wire grommet housing . 7100.0-39-2
X274	Connector (12 pins)	Inside front of RH rear door jamb, in wire grommet housing. 7100.0-39-2
X275	Connector (12 pins)	Under driver's seat. 7100.0-42-2
X277	Connector (10 pins)	Inside front of LH rear door jamb, in wire grommet housing . 7100.0-39-2
X278	Connector (10 pins)	Inside front of RH rear door jamb, in wire grommet housing. 7100.0-39-2
X279	Connector (12 pins)	Under passenger's seat 7100.0-44-2
X295	Connector (8 pins)	Below LH side of dash, LH side of steering column 7100.0-28-3
X296	Connector (6 pins)	LH rear of trunk 7100.0-50-3
X297	Connector (9 pins)	Below LH side of rear seat 7100.0-45-1
X301	Connector (26 pins)	LH rear of trunk 7100.0-50-3
X316	Connector (6 pins)	In center console, on S40 Front Console Window Switch Assembly (White) 7100.0-36-1
X317	Connector (6 pins)	In center console, on S40 Front Console Window Switch Assembly (Black) 7100.0-36-1
X318	Connector (4 pins)	RH rear of trunk, forward of E17 Right Rear Light Assembly 7100.0-51-3
X319	Connector (4 pins) (M5)	LH rear of trunk, forward of E16 Left Rear Light Assembly . . 7100.0-50-3
X319	Connector (4 pins) (525i/535i)	LH rear of trunk, forward of E16 Left Rear Light Assembly . . 7100.0-50-2
X322	Connector (6 pins)	Below LH side of rear seat, on P91 Rear Power Distribution Box. 7100.0-45-2
X328	Connector (4 pins)	RH side of trunk lid, on E47 Right Trunk Light Assembly . . . 7100.0-52-3
X329	Connector (4 pins)	LH side of trunk lid, on E46 Left Trunk Light Assembly 7100.0-52-1
X331	Connector (5 pins)	Below LH side of rear seat, on K91 On-Board Computer Horn Relay (Green)
X332	Connector (5 pins)	Below LH side of rear seat, on A1 General Module (White)
X333	Connector (4 pins)	Behind LH side of fresh air cowl panel 7100.0-00-1
X334	Connector (4 pins)	Behind LH side of fresh air cowl panel 7100.0-00-1
X335	Connector (4 pins)	Below LH side of rear seat, on K91 On-Board Computer Horn Relay (Green)



COMPONENT LOCATION CHART

COMPONENTS

			Page-Figure
X336	Connector (4 pins)	In center of windshield header	7100.0-33-3
X337	Connector (4 pins)	Below LH side of rear seat	7100.0-45-3
X342	Connector (4 pins)	Below RH side of dash, above RH kick panel	7100.0-38-2
X355	Connector (3 pins) (IHKR)	In RH "C" pillar	7100.0-49-2
X355	Connector (3 pins) (IHKR 2)	In RH "C" pillar	7100.0-50-1
X356	Connector (3 pins) (IHKR)	In LH "C" pillar	7100.0-49-1
X356	Connector (3 pins) (IHKR 2)	In LH "C" pillar	7100.0-49-3
X358	Connector (3 pins)	In RH rear of trunk lid	7100.0-52-3
X360	Connector (3 pins)	LH side of windshield header, above LH visor	7100.0-33-1
X371	Connector (2 pins)	Behind LH side of fresh air cowl panel	7100.0-00-1
X374	Connector (3 pins)	Below RH side of rear seat	7100.0-48-2
X375	Connector (3 pins)	Below RH side of rear seat	7100.0-48-1
X376	Connector (2 pins)	Below LH side of rear seat, behind P91 Rear Power Distribution Box	7100.0-45-2
X377	Connector (2 pins)	Below RH side of rear seat, behind battery	7100.0-48-1
X380	Connector (1 pin)	In RH "C" pillar	7100.0-50-1
X381	Connector (2 pins)	LH side of windshield header, above LH visor	7100.0-33-1
X382	Connector (2 pins)	RH side of windshield header, above RH visor	7100.0-33-1
X391	Connector (2 pins)	Behind center of dash	
X393	Connector (6 pins)	In LH rear corner of trunk	7100.0-50-2
X400	Connector (4 pins)	In LH rear corner of trunk	7100.0-50-2
X416	Connector (2 pins)	LH side of windshield header, near LH visor	
X417	Connector (2 pins)	RH side of windshield header, near RH visor	
X490	Ground	Below LH side of dash, LH side of steering column	7100.0-28-2
X491	Ground	Below LH side of dash, LH side of steering column	7100.0-28-2
X492	Ground	Below LH side of rear seat, near P91 Rear Power Distribution Box	7100.0-46-2
X493	Ground	Below LH side of rear seat, near P91 Rear Power Distribution Box	7100.0-46-2
X495	Ground	Below RH side of rear seat, RH side of battery	7100.0-47-3



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
X496	Ground	Below RH side of rear seat, RH side of battery. 7100.0-47-3
X497	Ground (Battery)	Ahead of RH side of rear seat, behind access panel 7100.0-47-2
X502	Connector (26 pins) (M5)	Behind LH side of dash, on rear of A2 Instrument Cluster (White) 7100.0-31-2
X502	Connector (26 pins) (525i/535i)	Behind LH side of dash, on rear of A2 Instrument Cluster (White) 7100.0-31-1
X506	Connector (12 pins)	Below center console, front of gear shift lever 7100.0-35-3
X511	Connector (8 pins)	Below center console 7100.0-35-3
X512	Connector (8 pins)	Below RH side of dash, taped to harness. 7100.0-38-1
X514	Connector (6 pins)	Behind center of dash, in harness
X518	Connector (4 pins)	Below LH side of dash, on H10 Chime Module (Black) 7100.0-28-1
X520	Connector (3 pins)	Below center console 7100.0-35-2
X522	Connector (3 pins)	Below LH side of dash, on H10 Chime Module (White). 7100.0-28-1
X526	Connector (8 pins)	Below LH side of dash, at kick panel 7100.0-28-3
X539	Connector (2 pins)	Behind center of dash, LH side of N9 Radio
X546	Connector (2 pins)	Below center console, LH side of manual gear selector 7100.0-35-2
X605	Connector (12 pins)	LH side of trunk, on A18 HIFI Amplifier (Black)
X606	Connector (12 pins)	LH side of trunk, on A18 HIFI Amplifier (White)
X610	Connector (26 pins)	Below center of dash, on A9000 Integrated Climate Regulation Control Unit (HKR) (White). 7100.0-32-1
X611	Connector (26 pins)	Below center of dash, on A9000 Integrated Climate Regulation Control Unit (HKR) (Green) 7100.0-32-1
X612	Connector (26 pins)	Below center of dash, on S9000 Integrated Climate Regulation Switch (HKR) (Blue). 7100.0-35-1
X613	Connector (26 pins)	Below center of dash, on A9000 Integrated Climate Regulation Control Unit (HKR) (Blue). 7100.0-37-1
X614	Connector (26 pins)	Below center of dash, on A9000 Integrated Climate Regulation Control Unit (HKR) (Yellow) 7100.0-37-1
X623	Connector (10 pins)	In top front of driver's door, near mirror 7100.0-39-3
X624	Connector (10 pins)	In top front of passenger's door, near mirror 7100.0-39-3



COMPONENT LOCATION CHART

COMPONENTS

			Page-Figure
X627	Connector (8 pins)	In center of windshield header	7100.0-33-3
X633	Connector (8 pins)	Behind center of dash, near N9 Radio	7100.0-34-2
X638	Connector (6 pins)	Below trunk, RH side of spare tire	7100.0-51-2
X652	Connector (7 pins)	Under driver's seat	7100.0-43-1
X659	Connector (7 pins)	Under passenger's seat	7100.0-43-1
X684	Connector (3 pins)	In passenger's door, near door handle	7100.0-40-2
X685	Connector (3 pins)	In driver's door, near door handle	7100.0-40-2
X692	Connector (3 pins)	Behind center of dash, behind LH side of N9 Radio	7100.0-34-3
X693	Connector (3 pins)	Behind center of dash, on S9000 Integrated Climate Regulation Switch (IHKR) (Black)	7100.0-35-1
X702	Connector (2 pins)	Behind center of dash, on N9 Radio (White)	7100.0-34-2
X703	Connector (2 pins)	Behind center of dash, on N9 Radio (Black)	7100.0-34-2
X705	Connector (2 pins)	Below rear of car, near RH rear suspension frame attachment point	7100.0-26-1
X713	Connector (2 pins)	Behind RH rear wheel, above brake caliper	7100.0-23-1
X714	Connector (2 pins)	In lower rear of LH rear door	7100.0-41-1
X715	Connector (2 pins)	In center rear of LH rear door	7100.0-41-1
X720	Connector (2 pins)	In lower rear of RH rear door	7100.0-41-1
X721	Connector (2 pins)	In center rear of RH rear door	7100.0-41-1
X726	Connector (2 pins)	Under RH side of driver's seat	7100.0-42-2
X727	Connector (2 pins)	Under LH side of driver's seat	7100.0-42-3
X728	Connector (2 pins)	Under front of driver's seat	7100.0-42-1
X729	Connector (2 pins)	Under front of driver's seat	7100.0-42-1
X731	Connector (2 pins)	Inside RH side of driver's seatback	7100.0-43-2
X732	Connector (2 pins)	Inside RH side of driver's seatback	7100.0-43-2
X733	Connector (2 pins)	Under driver's seat	7100.0-43-1
X734	Connector (2 pins)	Under RH side of passenger's seat	7100.0-44-2
X735	Connector (2 pins)	Under LH side of passenger's seat	7100.0-44-3
X736	Connector (2 pins)	Under front of passenger's seat	7100.0-44-1
X737	Connector (2 pins)	Under front of passenger's seat	7100.0-44-1



COMPONENT LOCATION CHART

COMPONENTS

			Page-Figure
X738	Connector (2 pins)	Inside RH side of passenger's seatback	7100.0-43-2
X740	Connector (2 pins)	Under passenger's seat	7100.0-43-1
X741	Connector (2 pins)	Inside RH side of passenger's seatback	7100.0-43-2
X742	Connector (2 pins)	In passenger's door, near door handle	7100.0-40-2
X743	Connector (2 pins)	In center front of passenger's door	7100.0-40-1
X744	Connector (2 pins)	In lower front of passenger's door	7100.0-40-1
X747	Connector (2 pins)	In driver's door, near door handle	7100.0-40-2
X749	Connector (2 pins)	In lower front of driver's door	7100.0-40-1
X750	Connector (2 pins)	In center front of driver's door	7100.0-40-1
X751	Connector (2 pins)	In driver's door, near door handle	7100.0-40-2
X752	Connector (2 pins)	In driver's door, near door handle	7100.0-40-2
X771	Connector (2 pins) (IHKR)	Below LH side of dash, on lower LH side of IHKR plenum	7100.0-32-1
X771	Connector (2 pins) (IHKR 2)	Below LH side of dash, on lower LH side of IHKR 2 plenum	7100.0-32-2
X778	Connector (2 pins)	Under LH side of driver's seat	7100.0-42-3
X783	Connector (2 pins)	Underside of steering column	7100.0-30-2
X784	Connector (2 pins)	Below LH side of dash, at kick panel	7100.0-28-2
X789	Connector (2 pins)	Below rear of car, near rear differential	7100.0-26-2
X800	Connector (2 pins)	Inside LH kick panel	7100.0-26-3
X803	Connector (2 pins)	Behind center of dash, on N9 Radio (Black)	7100.0-34-3
X804	Connector (2 pins)	Behind center of dash, on N9 Radio (White)	7100.0-34-3
X813	Connector (1 pin)	Behind center of dash, on N9 Radio (Black)	7100.0-34-3
X815	Connector (1 pin)	Behind center of dash, near N9 Radio	7100.0-34-3
X818	Ground	Below LH side of dash, LH side of steering column	7100.0-28-2
X882	Connector (2 pins)	In RH front corner of driver's seat	7100.0-43-1
X883	Connector (2 pins)	In RH front corner of passenger's seat	7100.0-43-1
X910	B+ Junction Post	LH rear of engine compartment	7100.0-01-3
X948	Connector (1 pin)	In LH "C" pillar	7100.0-49-1
X949	Connector (1 pin)	In LH "C" pillar	7100.0-49-1
X951	Connector (1 pin)	In RH "C" pillar	7100.0-49-2
X952	Connector (1 pin)	In RH "C" pillar	7100.0-49-2



COMPONENT LOCATION CHART

COMPONENTS

COMPONENTS		Page-Figure
X954	Connector (1 pin)	In LH "C" pillar 7100.0-49-1
X955	Ground (Battery)	Lower RH front of engine compartment 7100.0-24-1
X960	B+ Junction Post	Below LH side of dash, near accelerator pedal. 7100.0-31-3
X962	B+ Junction Post	RH side of engine compartment, inside fusible link cover. 7100.0-21-1
X963	B+ Junction Post	Below RH side of rear seat, inside cover 7100.0-47-1
X964	B+ Junction Post	Lower LH rear of engine compartment, on M1 Starter 7100.0-03-1
X998	Connector (4 pins)	Below RH side of dash, on RH side of IHKR 2 Plenum. 7100.0-38-1
X999	Connector (4 pins)	Below LH side of dash, on LH side of IHKR 2 Plenum 7100.0-32-3
X1514	Connector (3 pins)	Top of engine 7100.0-08-3
X1521	Connector (3 pins) (M30 Engine)	Top front of engine 7100.0-14-2
X1521	Connector (3 pins) (M5 Engine)	Front of engine, near distributor 7100.0-09-2
X1521	Connector (3 pins) (M20 Engine)	Lower LH side of engine. 7100.0-07-3
X1522	Connector (3 pins) (M20 Engine)	Lower LH side of engine. 7100.0-07-3
X1522	Connector (3 pins) (M30 Engine)	Top front of engine 7100.0-14-2
X1522	Connector (3 Pins) (M5 Engine)	Front of engine, near distributor 7100.0-09-2
X1523	Connector (4 pins) (M5)	Lower LH side of engine. 7100.0-08-2
X1523	Connector (4 pins) (M30 Engine)	Lower LH rear side of engine 7100.0-05-1
X1523	Connector (4 pins) (M20 Engine)	RH rear of engine, LH side of P93 E-Box 7100.0-20-3
X1525	Connector (3 pins) (M30 Engine)	Lower LH front of engine 7100.0-05-2
X1525	Connector (3 pins) (M5 Engine)	Lower LH side of engine. 7100.0-05-3
X1525	Connector (3 pins) (M20 Engine)	LH front of engine 7100.0-09-3
X1532	Diagnostic Connector D100 (20 pins)	LH rear of engine compartment, RH side of shock tower 7100.0-01-3
X1533	Connector (3 pins) (M30 Engine)	Lower LH rear side of engine 7100.0-05-1
X1533	Connector (3 pins) (M5)	Lower LH side of engine. 7100.0-08-2
X1537	Connector (8 pins)	Behind RH front shock tower, in P93 E-Box 7100.0-19-2
X1540	B+ Junction Post for E-Box	Behind RH front shock tower, in P93 E-Box 7100.0-18-3
X1541	Ground	RH rear of engine compartment, near shock tower 7100.0-20-2
X1542	Ground	RH rear of engine compartment, near shock tower 7100.0-20-2
X1552	Connector (4 pins)	Behind RH front shock tower, in P93 E-Box 7100.0-19-3
X1563	Connector (7 pins)	LH side of engine, in front of M1 Starter. 7100.0-03-1



COMPONENT LOCATION CHART

COMPONENTS

		Page-Figure
X2001	Connector (12 pins)	Behind RH corner of glove box. 7100.0-38-2
X2005	Connector (8 pins)	On LH side of transmission 7100.0-24-3
X2008	Ground	Below RH side of rear seat, RH side of battery. 7100.0-48-2
X8073	Connector (3 pins)	LH front of trunk. 7100.0-51-1
X8074	Connector (12 pins)	LH front of trunk. 7100.0-51-1
X8948	Connector (1 pin)	In LH "C" pillar 7100.0-49-3
X8949	Connector (1 pin)	In LH "C" pillar 7100.0-49-3
X8953	Connector (1 pin)	In LH "C" pillar 7100.0-49-3
X8954	Connector (1 pin)	In LH "C" pillar 7100.0-49-3
X9000	Connector (2 pins)	Behind center of dash, on N9 Radio (Black). 7100.0-34-2
X9322	Connector	Below LH side of rear seat, near P91 Rear Power Distribution Box
X9503	Connector (2 pins)	Below center console, near gear shift lever 7100.0-35-2
X9571	Connector (3 pins)	Front of engine, near distributor 7100.0-09-2
X9997	Connector (2 pins)	Inside steering wheel, on G5 Driver's Air Bag Generator 7100.0-30-1
X18049	Connector (2 pins)	Lower part of LH rear door 7100.0-41-2
X18052	Connector (2 pins)	Lower part of RH rear door. 7100.0-41-2
X18153	Connector (3 pins)	Below RH side of dash, on RH side of IHKR 2 plenum. 7100.0-38-1
X18155	Connector (26 pins)	Below center of dash, mounted on A87 Integrated Regulation II Control Unit 7100.0-37-3
X18156	Connector (26 pins)	Below center of dash, mounted on A87 Integrated Regulation II Control Unit 7100.0-37-3
X18157	Connector (26 pins)	Below center of dash, mounted on A87 Integrated Regulation II Control Unit 7100.0-37-3
X181499	Connector (1 pin)	Below RH side of dash. 7100.0-38-1

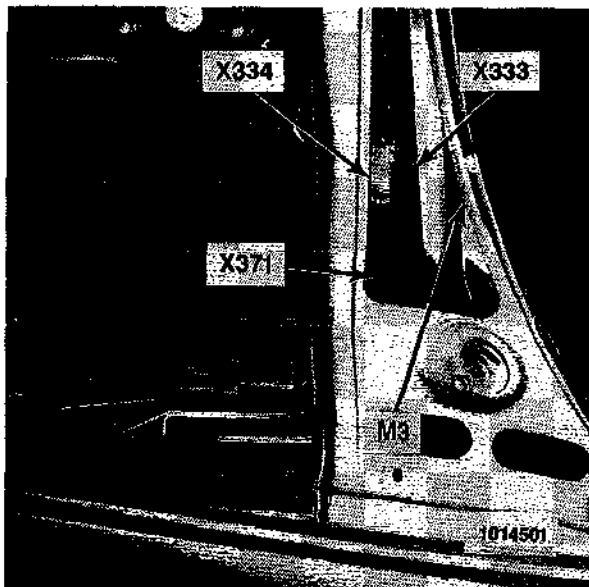


Figure 1- Behind LH Fresh Air Cowl

- M3** Wiper Motor
- X333** Connector (4 pins) SW
- X334** Connector (4 pins) WS
- X371** Connector (2 pins) SW

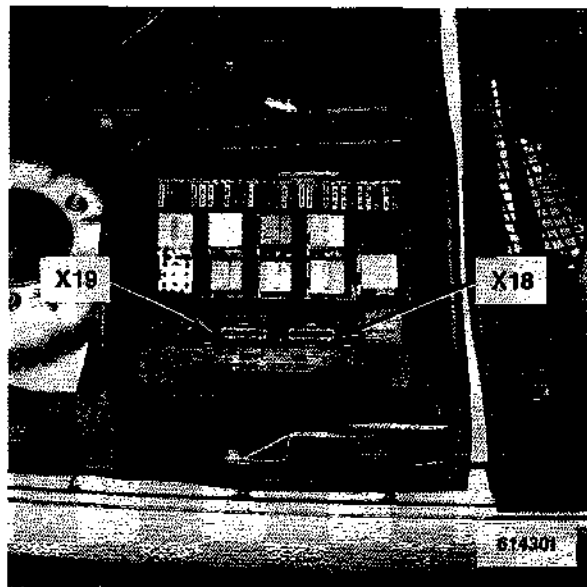


Figure 2- LH Rear Corner Of Engine Compartment

- X18** Connector (26 pins) BL
- X19** Connector (26 pins) GN

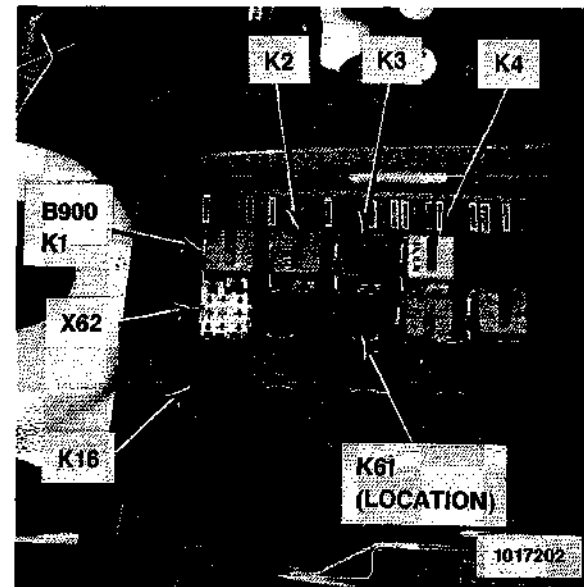


Figure 3- LH Rear Corner Of Engine Compartment

- B900** Jumper Plug
- K1** Starter Relay
- K2** Horn Relay
- K3** Unloader Relay, KLR
- K4** Blower Relay
- K16** Hazard Flasher Relay
- K61** Unloader Relay, KL61
- X62** Connector (9 pins) WS

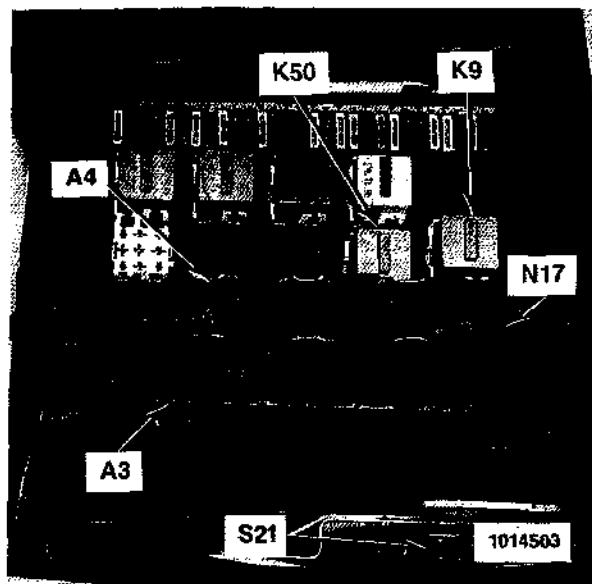


Figure 1- LH Rear Corner Of Engine Compartment

- A3 Lamp Control Module**
- A4 Check Control Module**
- K9 Unloader Relay, KL15**
- K50 Water Pump Relay**
- N17 Crash Control Unit**
- S21 Engine Hood Switch**

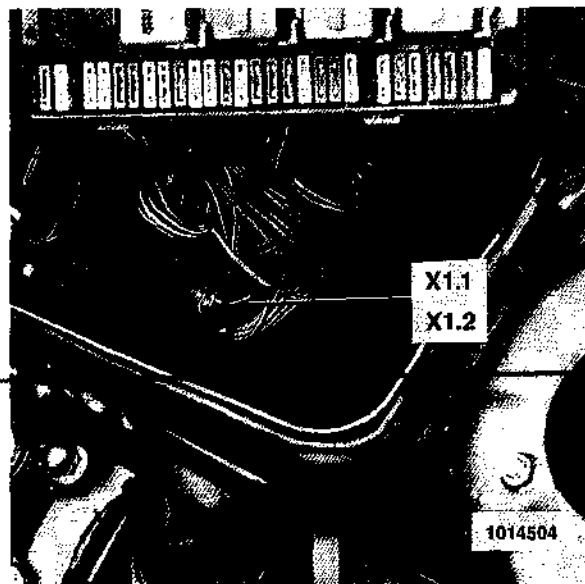


Figure 2- LH Rear Corner Of Engine Compartment

- X1.1 Junction Post For Front Power Distribution Box**
- X1.2 Junction Post For Front Power Distribution Box**

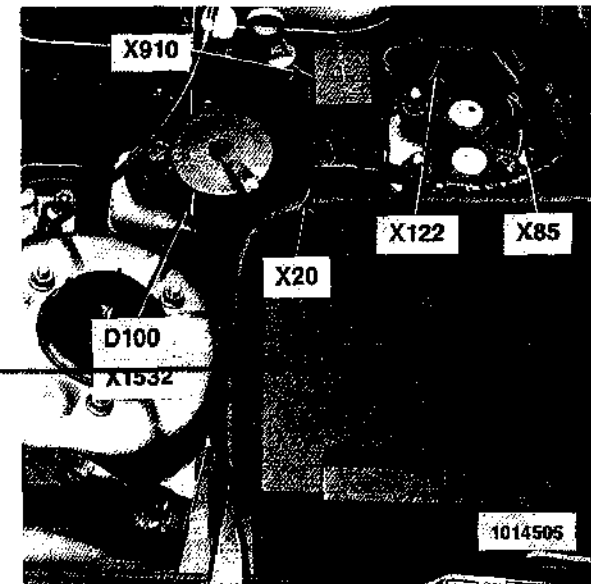


Figure 3- LH Rear Of Engine Compartment (M30 Engine Shown; M20 And M5 Engines Similar)

- D100 Diagnostic Connector**
- X20 Connector (20 pins) SW**
- X85 Connector (3 pins) SW**
- X122 Connector (2 pins) SW**
- X910 B+ Junction Post**
- X1532 Diagnostic Connector (20 pins) SW**

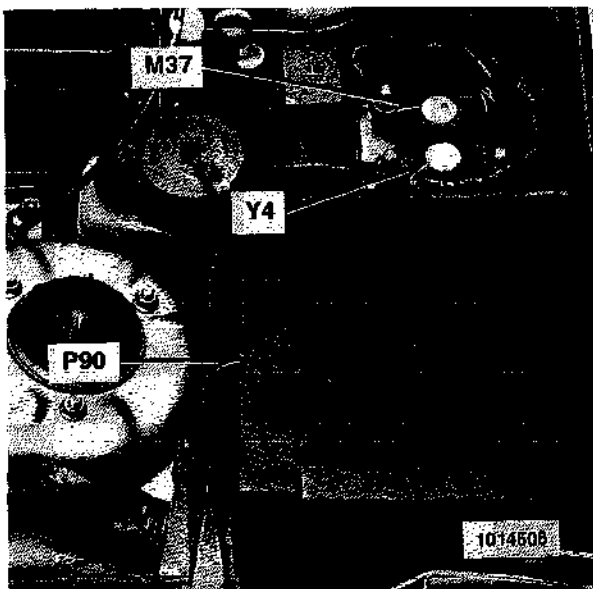


Figure 1- LH Rear Of Engine Compartment (M30 Engine Shown; M20 And M5 Engines Similar)

- M37 Water Pump (Under Y4 Water Valve Assembly)**
- P90 Front Power Distribution Box**
- Y4 Water Valve Assembly**



Figure 2- LH Side Of Engine Compartment (M20 Engine Shown; M5 Engine Similar)

- B18 Brake Fluid Level Switch**
- Y1 ABS Hydraulic Unit**



Figure 3- LH Side Of Engine Compartment (M30 Engine)

- B18 Brake Fluid Level Switch**
- Y1 ABS Hydraulic Unit**

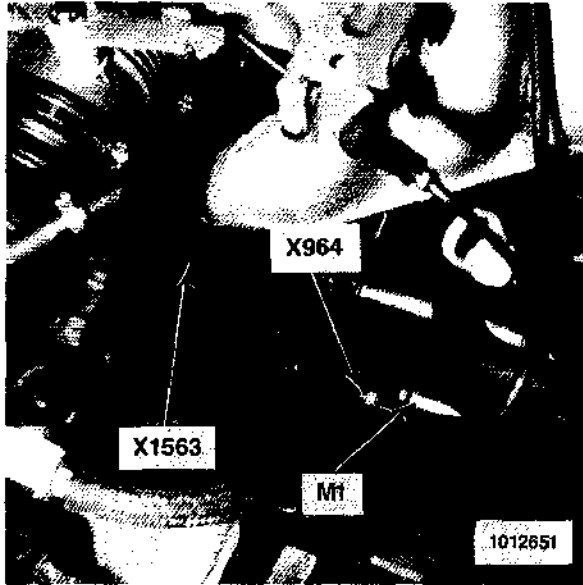


Figure 1- LH Rear Of Engine (M20 Engine)

- M1 Starter**
- X964 B+ Junction Post**
- X1563 Connector (7 pins) SW**

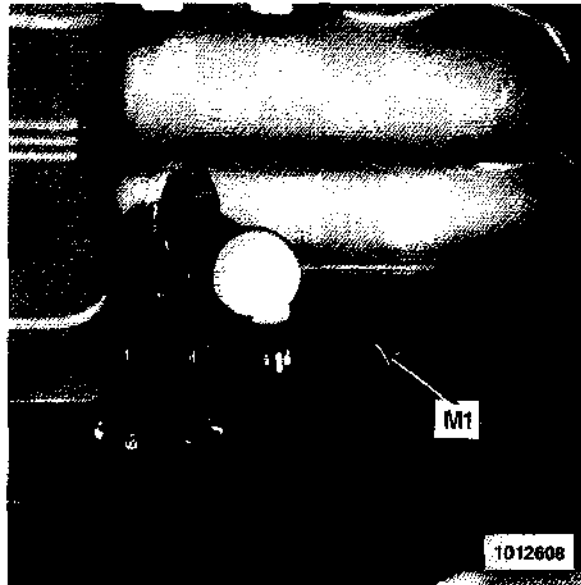


Figure 2- LH Rear Of Engine (M30 Engine)

- M1 Starter**

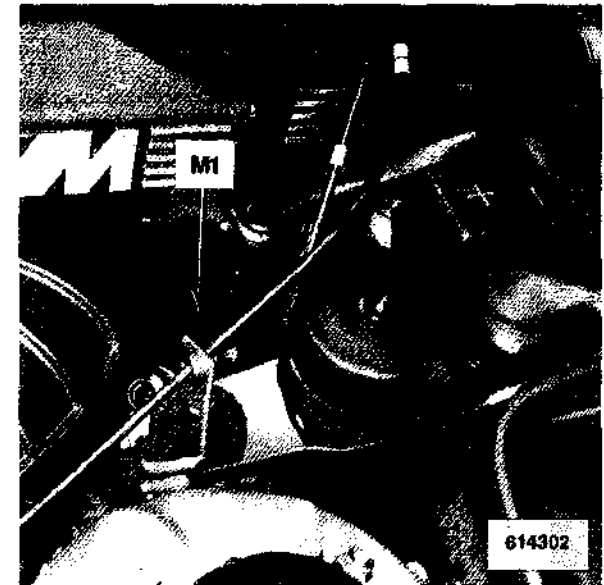


Figure 3- LH Rear Of Engine (M5 Engine)

- M1 Starter**



Figure 1- LH Rear Of Engine (M20 Engine)

S200 Throttle Switch
Y213 Fuel Air Valve

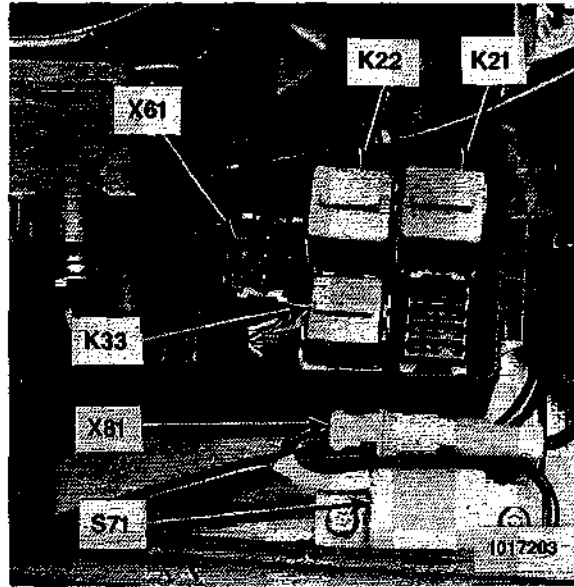


Figure 2- LH Side Of Engine Compartment (M30 Engine Shown; M20 And M5 Engines Similar)

K21 Normal Speed Relay
K22 High Speed Relay
K33 Air Conditioning Relay
S71 Left Front Crash Sensor
X61 Connector (9 pins) SW
X81 Connector (3 pins) OR

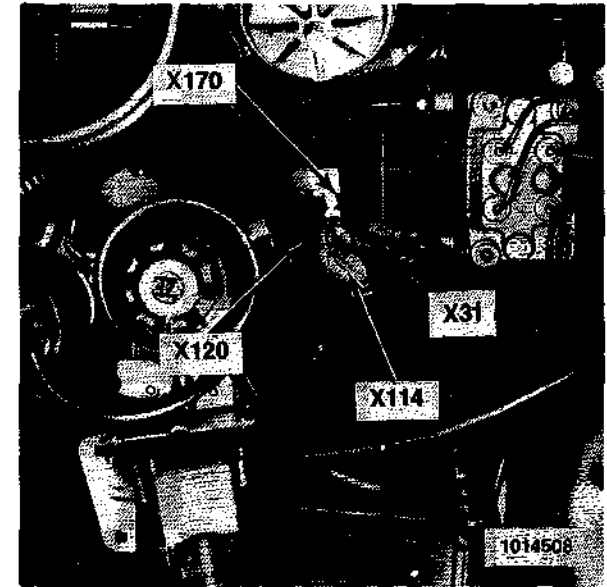


Figure 3- LH Side Of Engine Compartment (M30 Engine Shown; M20 And M5 Engines Similar)

X31 Connector (12 pins) SW
X114 Connector (2 pins) WS
X120 Connector (2 pins) SW
X170 Terminal Post

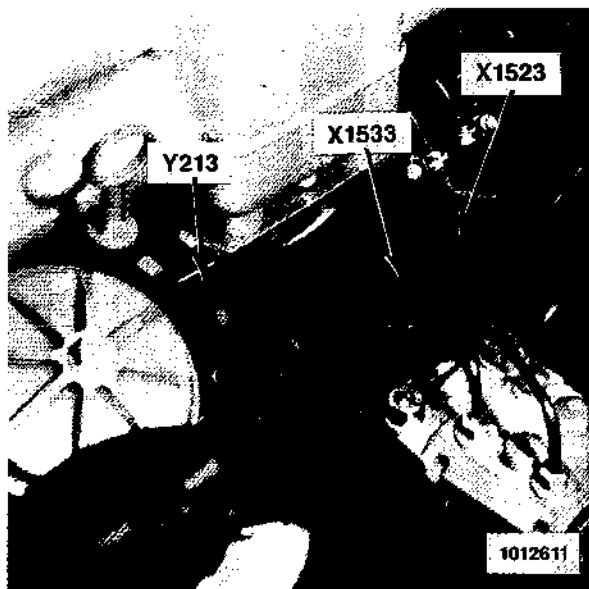


Figure 1- Lower LH Side Of Engine (M30 Engine)

- Y213 Fuel Air Valve**
- X1523 Connector (4 pins) SW**
- X1533 Connector (3 pins) SW**

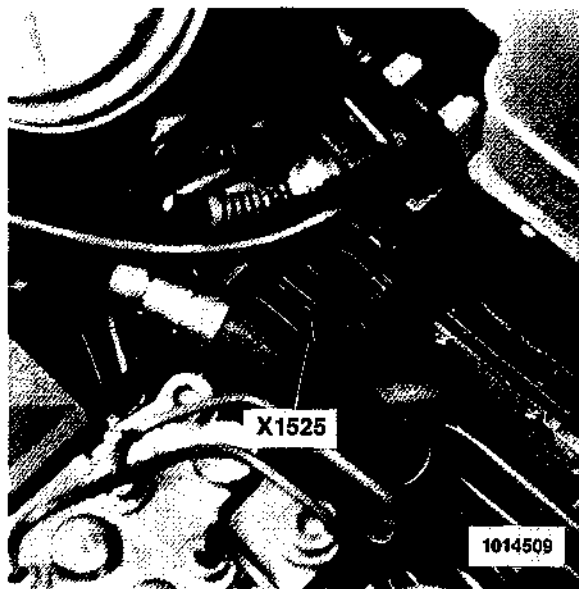


Figure 2- Lower LH Side Of Engine (M30 Engine)

- X1525 Connector (3 pins) SW**


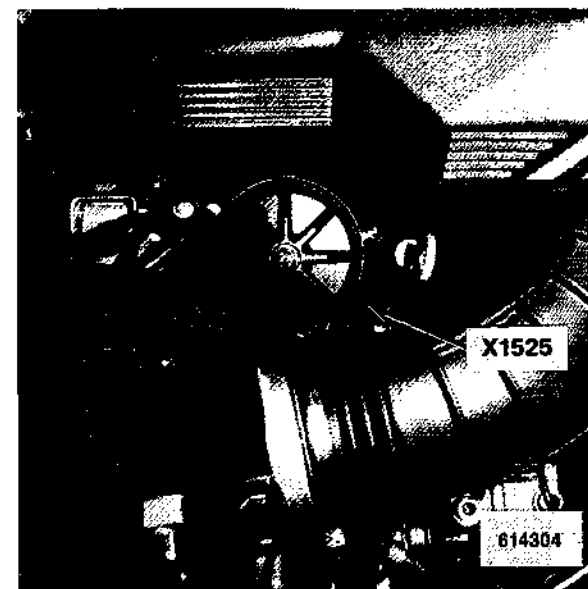


Figure 3- LH Side Of Engine Compartment (M5 Engine)

- X1525 Connector (3 pins) SW**




COMPONENT LOCATION VIEWS

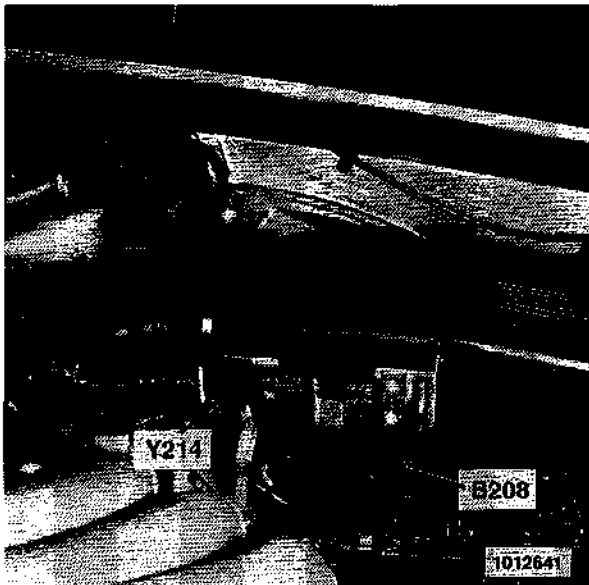


**Figure 1- LH Side Of Engine
Compartment (M20 Engine)**

B208 Air Flow Meter
Y214 Idle Speed Actuator

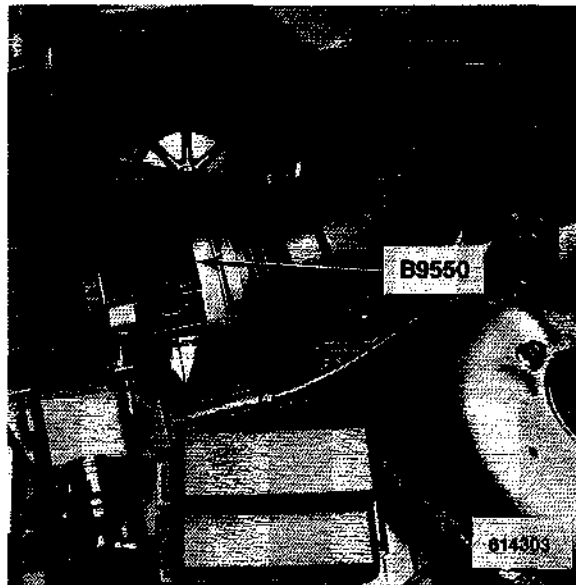

**Figure 2- LH Side Of Engine
Compartment (M5 Engine)**

B9550 Air Mass Meter

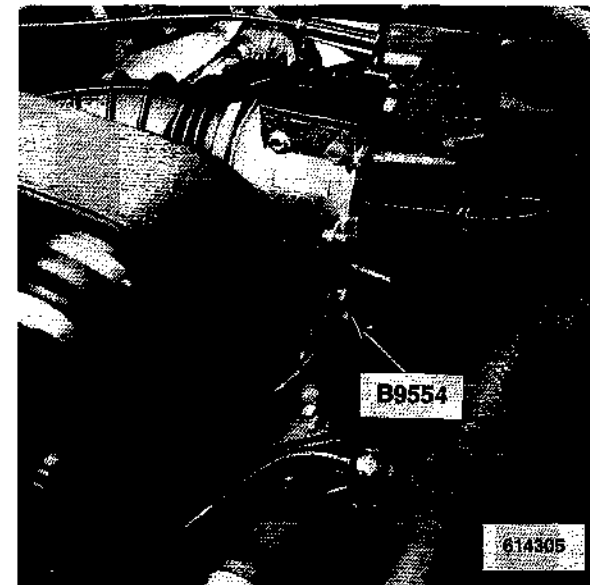

**Figure 3- LH Side Of Engine
Compartment (M5 Engine)**

B9554 Intake Air Temperature Sensor

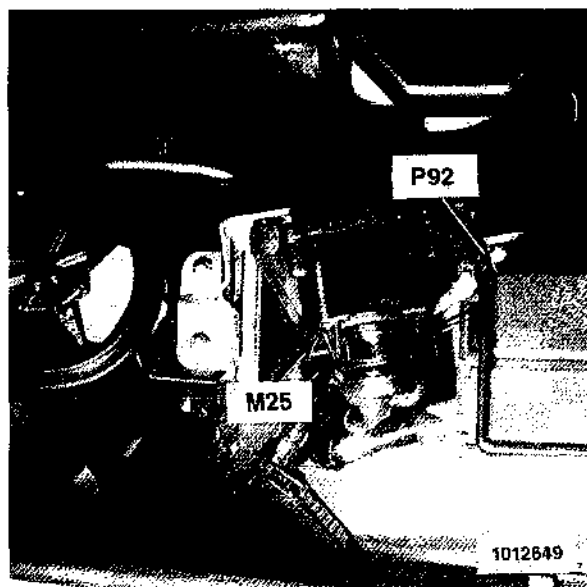


Figure 1- LH Side Of Engine Compartment (M20 Engine Shown; M30 Engine Similar)

- M25 Cruise Control Actuator (Tempomat)**
- P92 Auxiliary Relay Box**

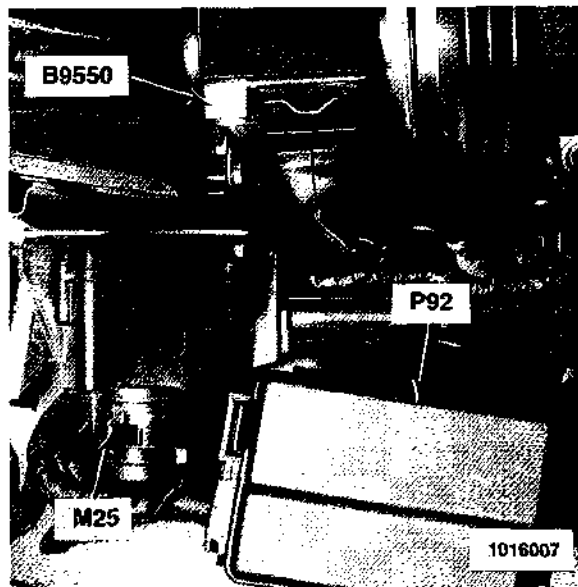


Figure 2- LH Side Of Engine Compartment (M5 Engine)

- B9550 Air Mass Meter**
- M25 Cruise Control Actuator (Tempomat)**
- P92 Auxiliary Relay Box**

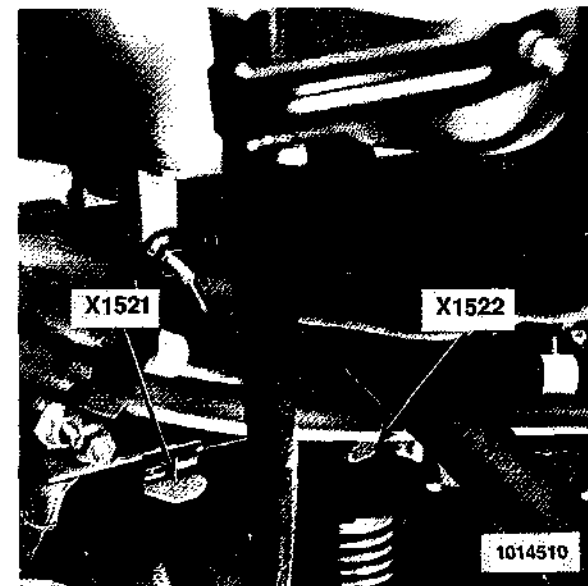


Figure 3- Lower LH Front Side Of Engine (M20 Engine) (Air Cleaner Assembly Removed)

- X1521 Connector (3 pins) SW**
- X1522 Connector (3 pins) SW**

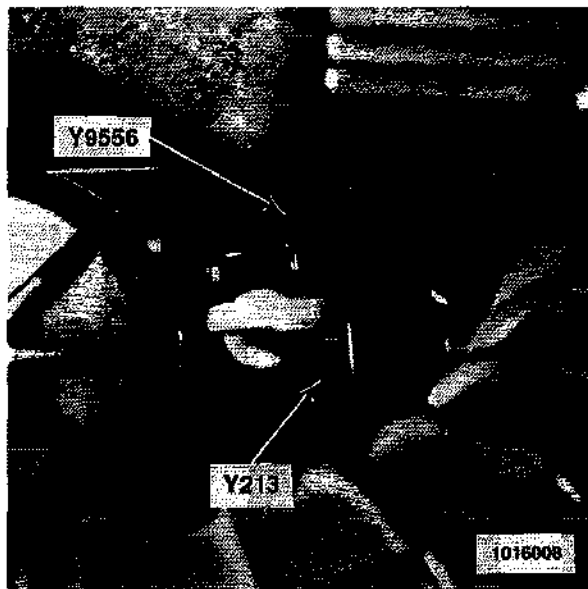


Figure 1- LH Front Of Engine (M5 Engine)

Y213 Fuel Air Valve
Y9556 Changeover Valve I

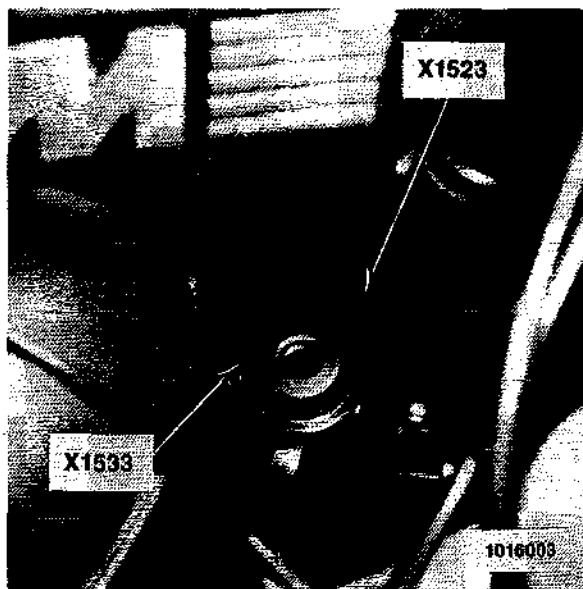


Figure 2- LH Rear Of Engine (M5 Engine)

X1523 Connector (4 pins) SW
X1533 Connector (3 pins) SW

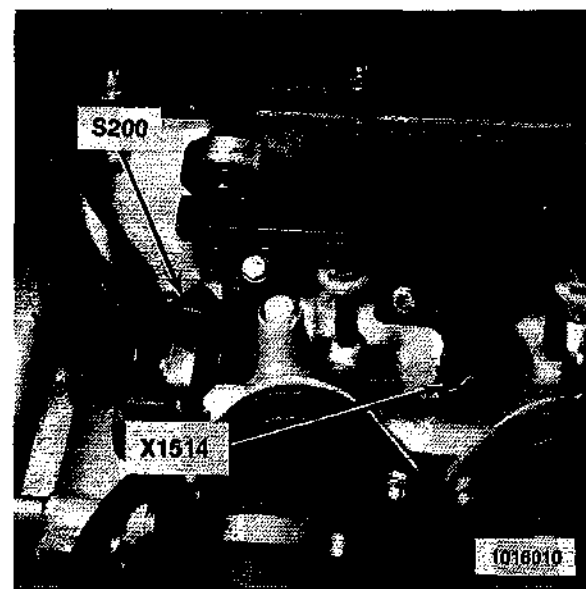


Figure 3- Top Front Of Engine (M5 Engine)

S200 Throttle Switch
X1514 Connector (3 pins) SW

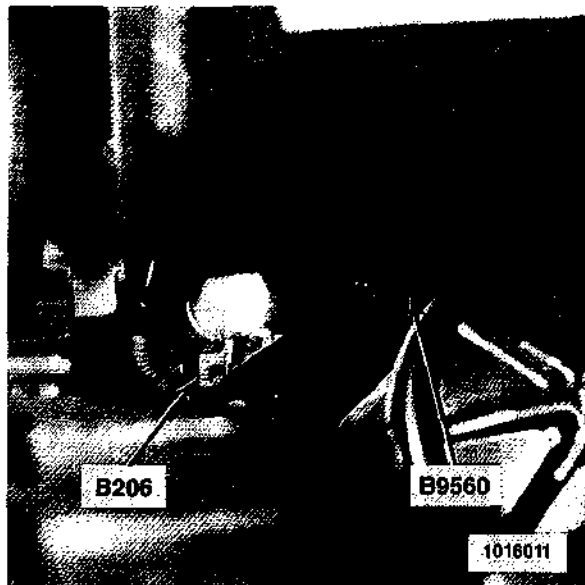


Figure 1- LH Front Of Engine (M5 Engine)

- B206 Oil Pressure Switch**
- B9560 Oil Temperature Sensor**

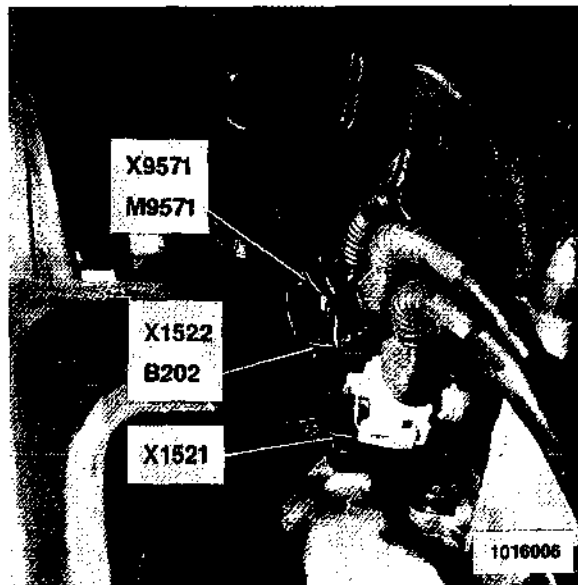


Figure 2- Top Front Of Engine (M5 Engine)

- B202 Engine Speed/Reference Point Sensor**
- M9571 Air Pump**
- X1521 Connector (3 pins) GR**
- X1522 Connector (3 pins) SW**
- X9571 Connector (3 pins) SW**

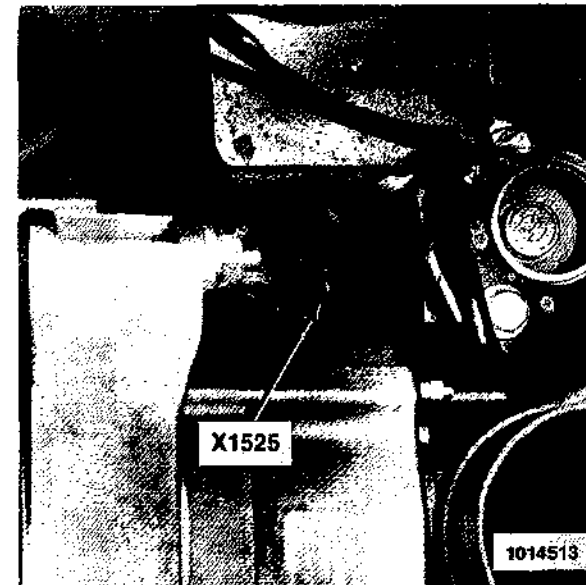


Figure 3- Lower LH Front Of Engine (M20 Engine) (Air Flow Assembly Removed)

- X1525 Connector (3 pins) SW**

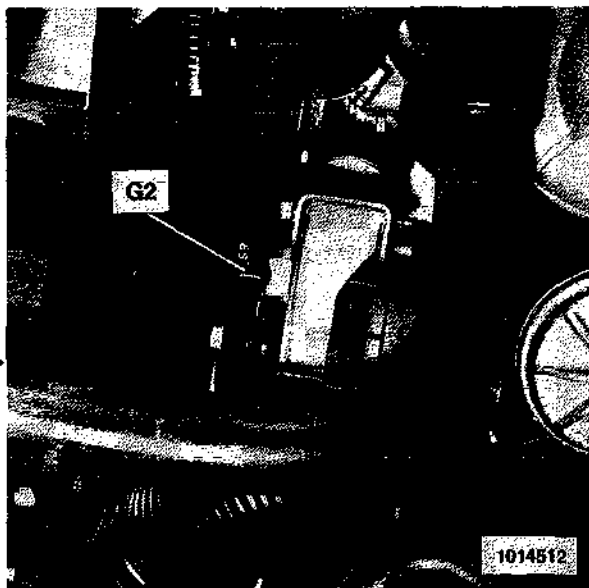


Figure 1- Lower LH Front Of Engine Compartment (M30 Engine Shown; M20 And M5 Engines Similar)

G2 Alternator

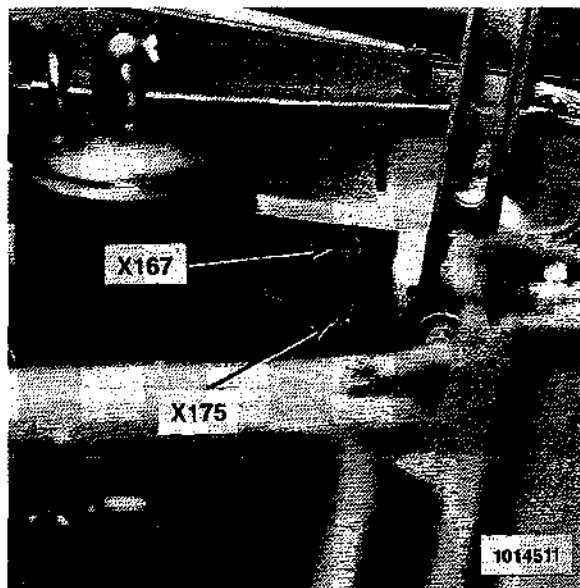


Figure 2- LH Front Of Engine Compartment (M30 Engine Shown; M20 And M5 Engines Similar)

**X167 Ground
X175 Ground**



Figure 3- LH Front Of Engine Compartment Hood

S19 Underhood Light Switch

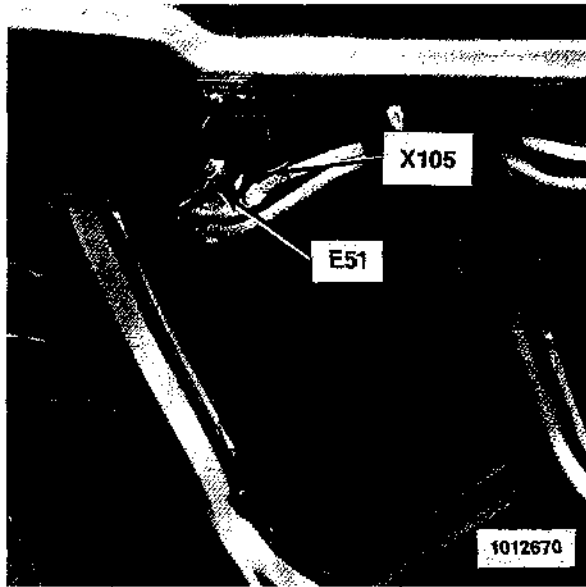


Figure 1- Rear Of Engine Compartment Hood

E51 Left Washer Jet Heater
X105 Connector (2 pins) SW

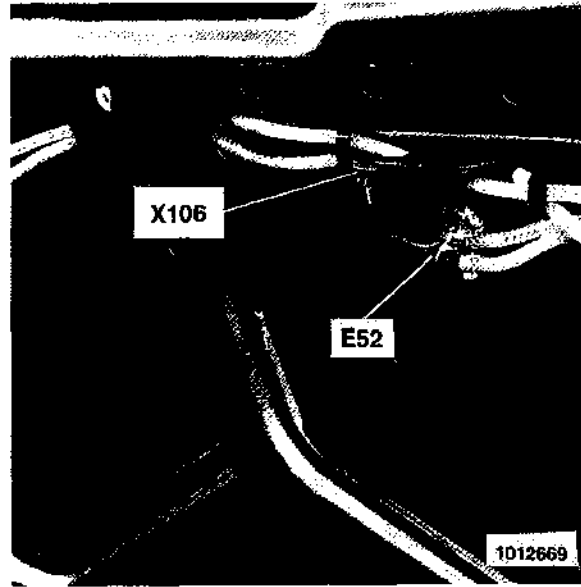


Figure 2- Rear Of Engine Compartment Hood

E52 Right Washer Jet Heater
X106 Connector (2 pins) SW

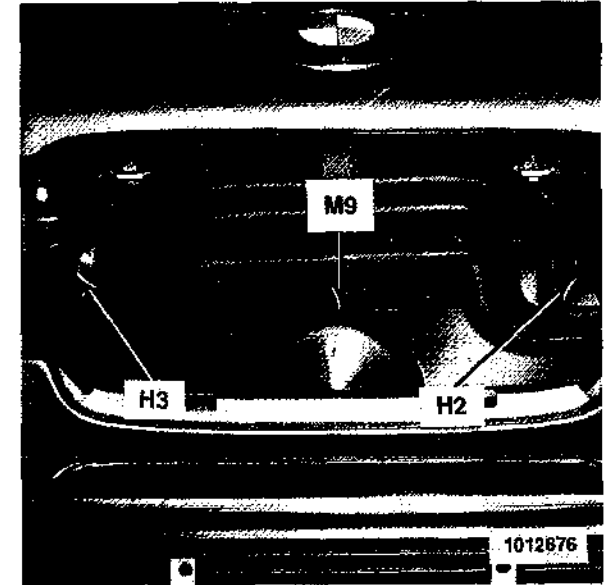


Figure 3- Front Of Car (Grille Removed)

H2 Left Horn
H3 Right Horn
M9 Auxiliary Fan Motor



Figure 1- Behind RH Corner Of Front Bumper

B21 On-Board Computer Temperature Sensor

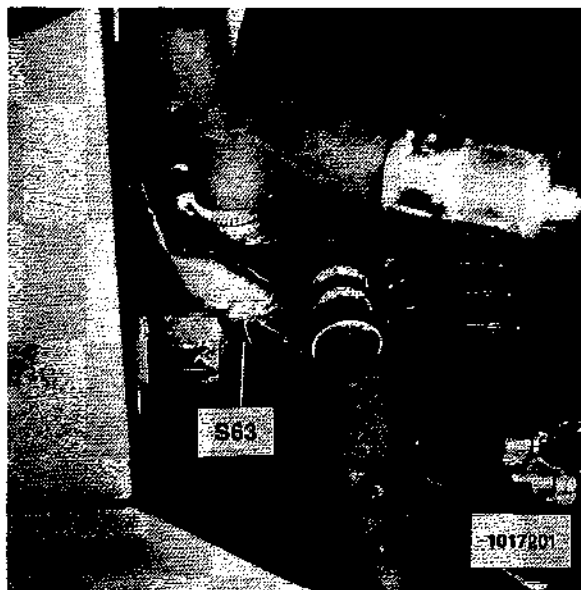


Figure 2- Lower LH Side Of Radiator (M20 Engine)

S63 Coolant Level Switch

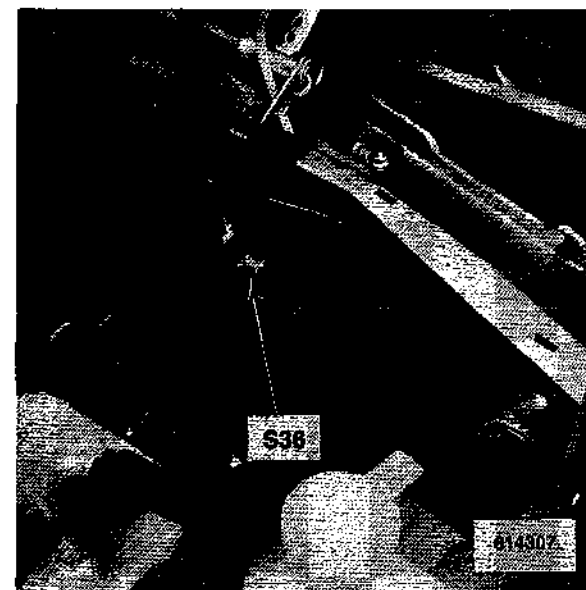


Figure 3- Top RH Side Of Radiator (M5 Engine Shown; M20 And M30 Engines Similar)

S36 Temperature Switch

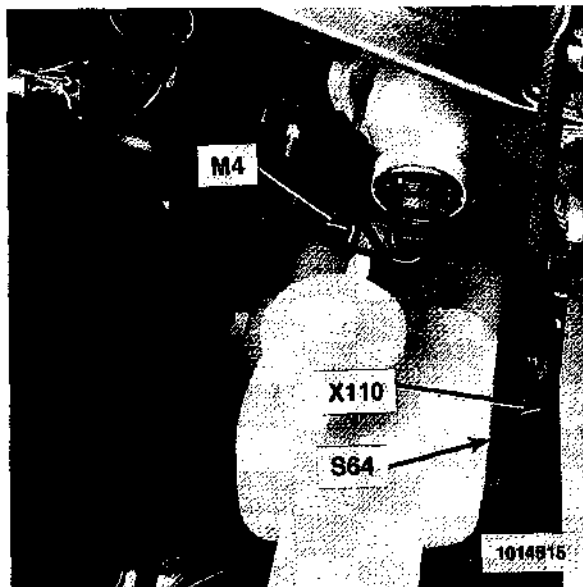


Figure 1- RH Front Corner Of Engine Compartment (M30 Engine Shown; M20 Engine Similar)

- M4 Washer Pump**
- S64 Washer Fluid Level Switch**
- X110 Connector (2 pins) BL**



Figure 2- RH Front Corner Of Engine Compartment (M5 Engine Shown; M20 And M30 Engines Similar)

- B9508 Pressure Switch**
- X126 Connector**

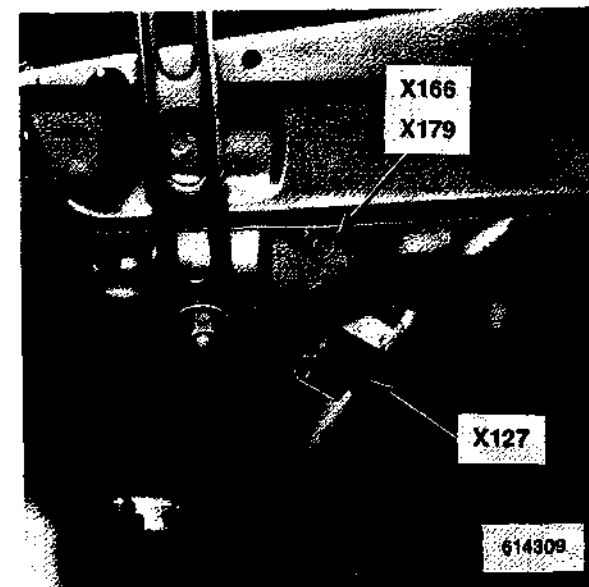


Figure 3- RH Front Corner Of Engine Compartment (M5 Engine Shown; M20 and M30 Engines Similar)

- X127 Connector (2 pins) SW**
- X166 Ground**
- X179 Ground**

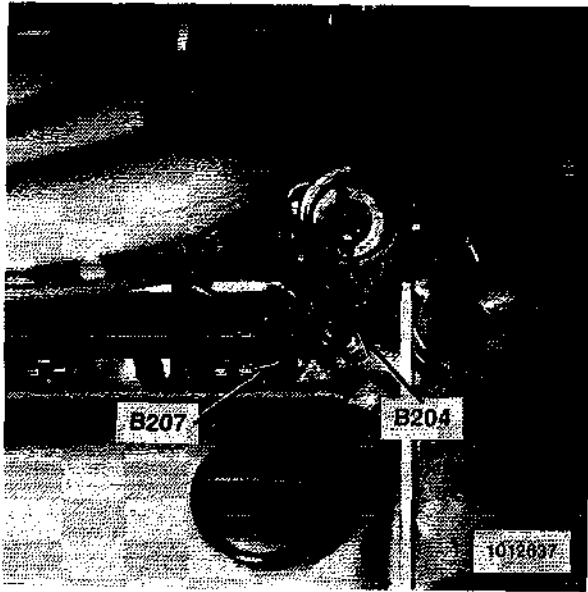


Figure 1- Top Front Of Engine (M20 Engine)

- B204 Coolant Temperature Sensor**
- B207 Coolant Temperature Sender**

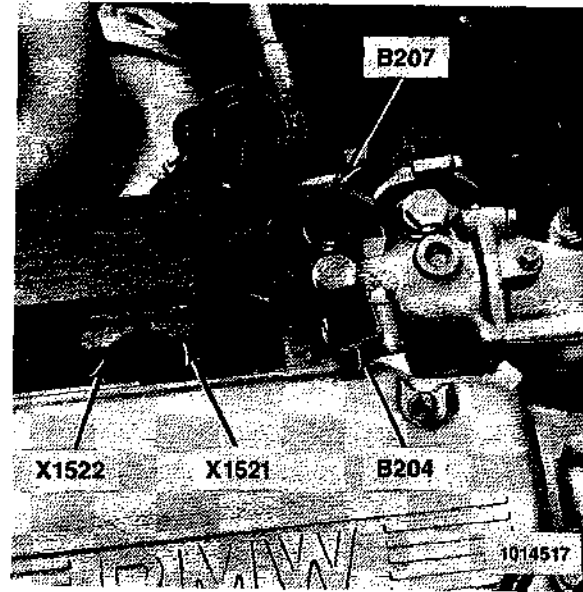


Figure 2- Top Front Of Engine (M30 Engine)

- B204 Coolant Temperature Sensor**
- B207 Coolant Temperature Sender**
- X1521 Connector (3 pins) SW**
- X1522 Connector (3 pins SW)**



Figure 3- RH Front Of Engine (M20 Engine Shown; M30 Engine Similar)

- B201 Cylinder Identification Sensor**
- B202 Engine Speed/Reference Point Sensor**

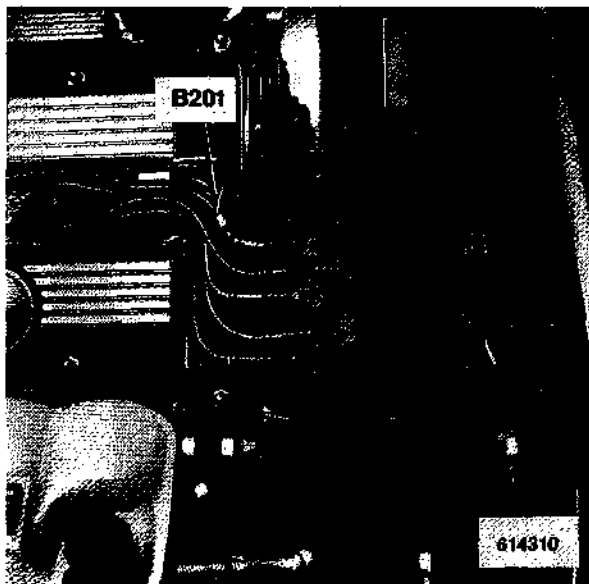


Figure 1- Top RH Front Of Engine (M5 Engine)

B201 Cylinder Identification Sensor



Figure 2- RH Front Of Engine (M20 Engine Shown; M30 And M5 Engines Similar)

X163 Connector (3 pins) SW

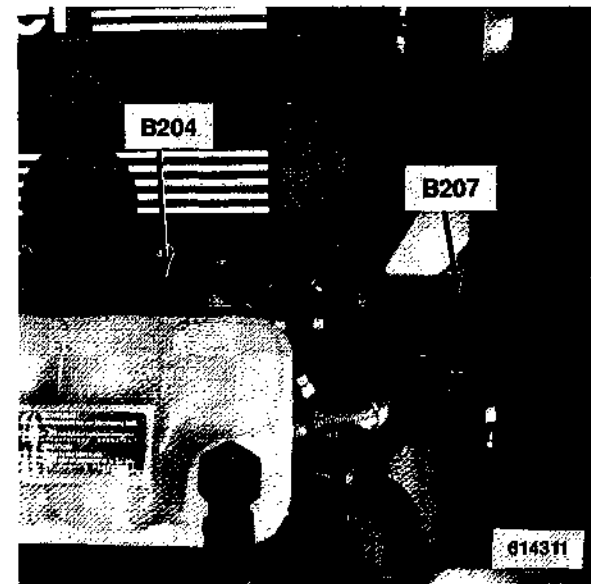


Figure 3- RH Front Of Engine (M5 Engine)

**B204 Coolant Temperature Sensor
B207 Coolant Temperature Sender**

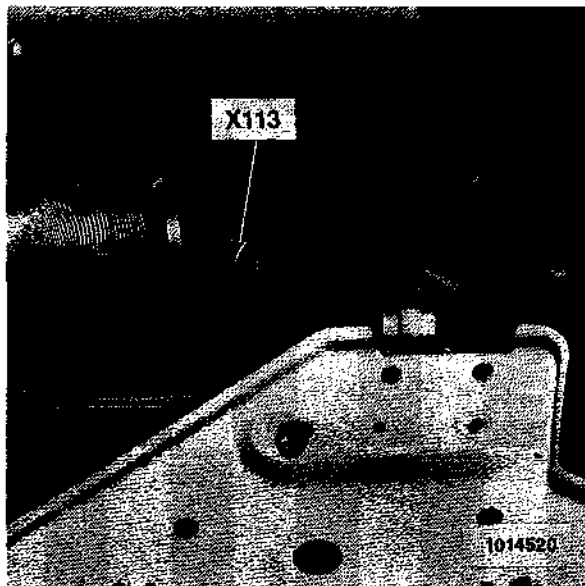


Figure 1- Lower RH Side Of Engine (M20 Engine Shown; M30 And M5 Engines Similar)

X113 Connector (2 pins) WS

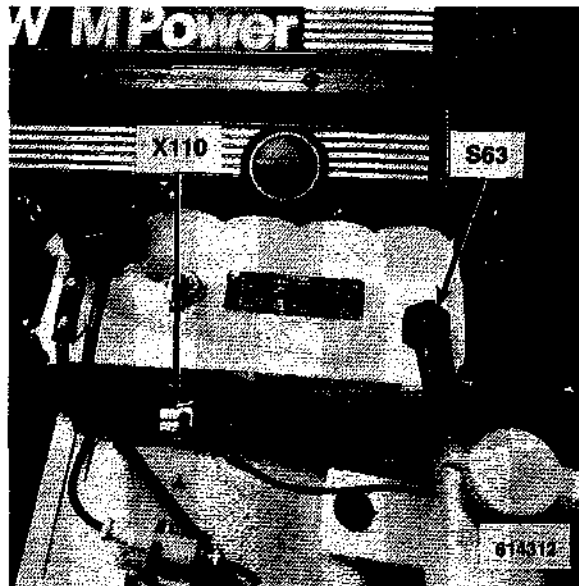


Figure 2- RH Side Of Engine Compartment (M5 Engine)

S63 Coolant Level Switch
X110 Connector (2 pins) BL

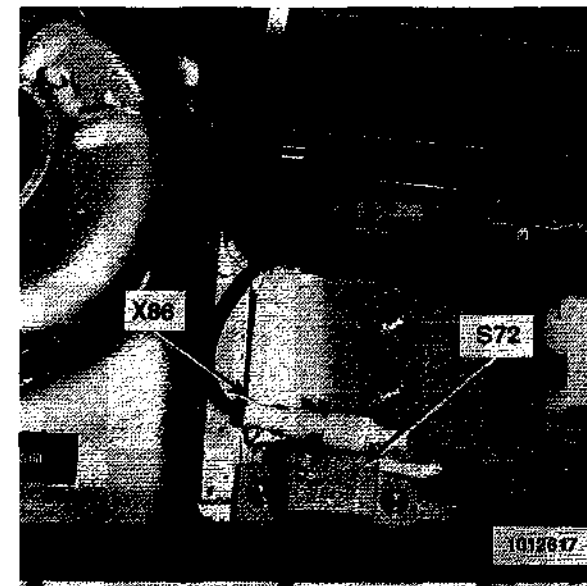


Figure 3- RH Side Of Engine Compartment (M30 Engine Shown; M20 And M5 Engines Similar)

S72 Right Front Crash Sensor
X86 Connector (3 pins) OR

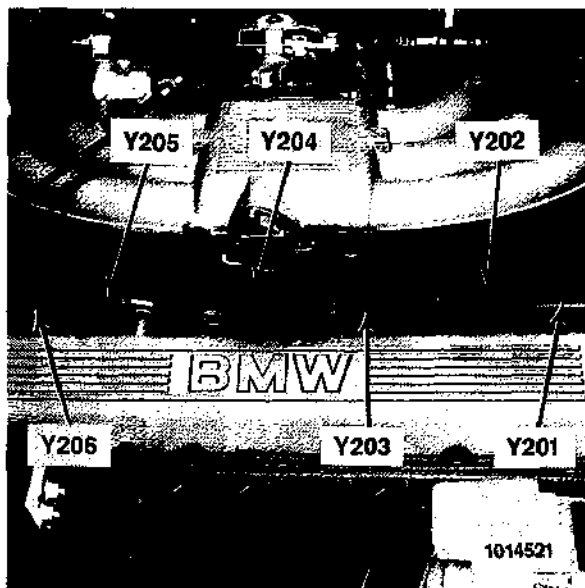


Figure 1- Top Of Engine (M20 Engine Shown; M30 Engine Similar)

- Y201 Fuel Injector 1**
- Y202 Fuel Injector 2**
- Y203 Fuel Injector 3**
- Y204 Fuel Injector 4**
- Y205 Fuel Injector 5**
- Y206 Fuel Injector 6**

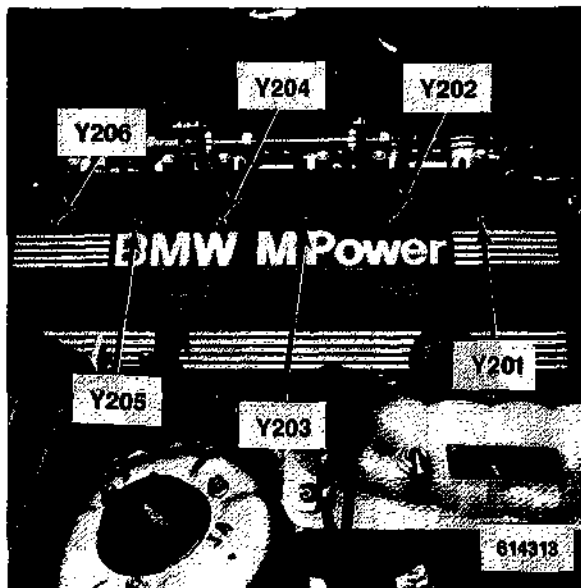


Figure 2- Top Of Engine (M5 Engine)

- Y201 Fuel Injector 1**
- Y202 Fuel Injector 2**
- Y203 Fuel Injector 3**
- Y204 Fuel Injector 4**
- Y205 Fuel Injector 5**
- Y206 Fuel Injector 6**

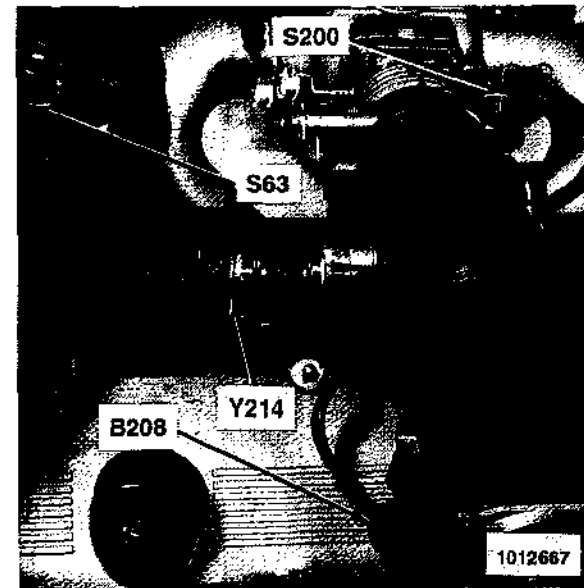


Figure 3- Top RH Rear Of Engine (M30 Engine)

- B208 Air Flow Meter**
- S63 Coolant Level Switch**
- S200 Throttle Switch**
- Y214 Idle Speed Actuator**



Figure 1- Lower RH Side Of Engine (M20 Engine)

B203 Oxygen Sensor

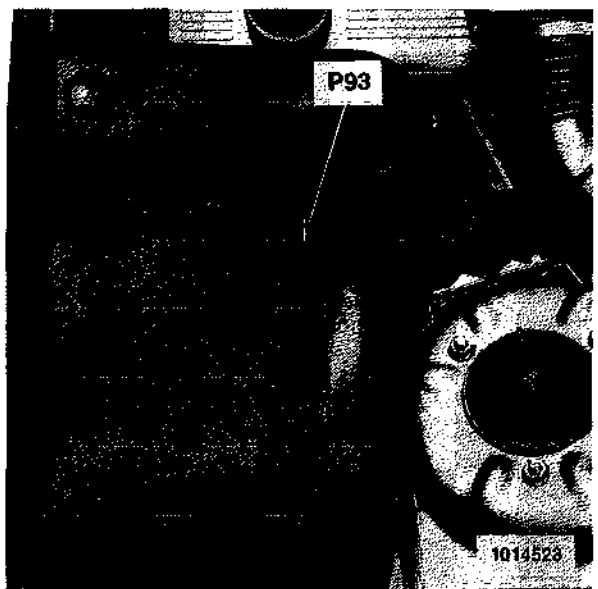


Figure 2- RH Rear Of Engine Compartment

P93 E-Box

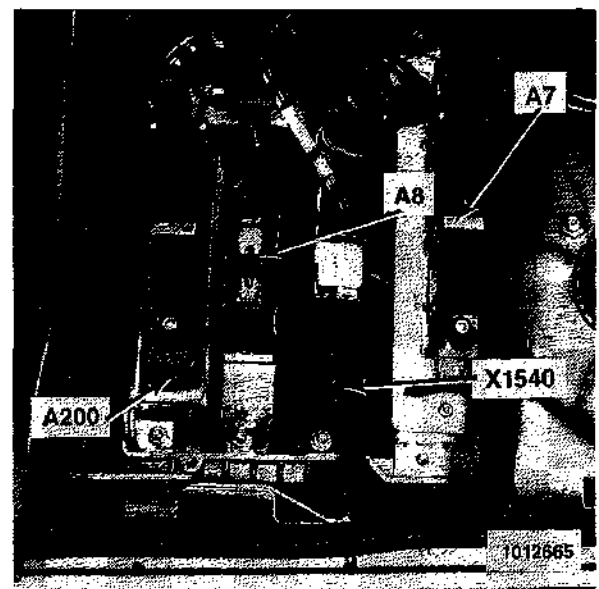


Figure 3- RH Rear Of Engine Compartment (M20 Engine Shown; M30 And M5 Engine Similar)

- A7 ABS Electronic Control Unit**
- A8 Cruise Control Module (Tempomat)**
- A200 Motronic Control Unit (DME)**
- X1540 B+ Junction Post for E-Box**

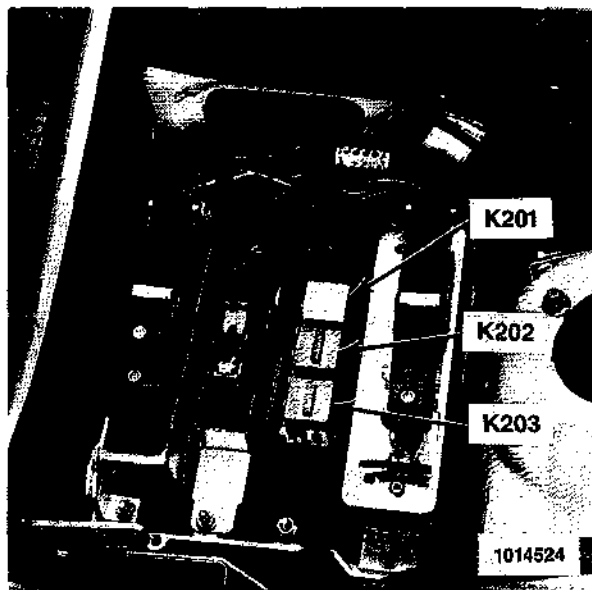


Figure 1- RH Rear Of Engine Compartment (M30 Engine Shown; M20 Engine Similar)

- K201 Fuel Pump Relay**
- K202 Main Relay**
- K203 Oxygen Sensor Relay**

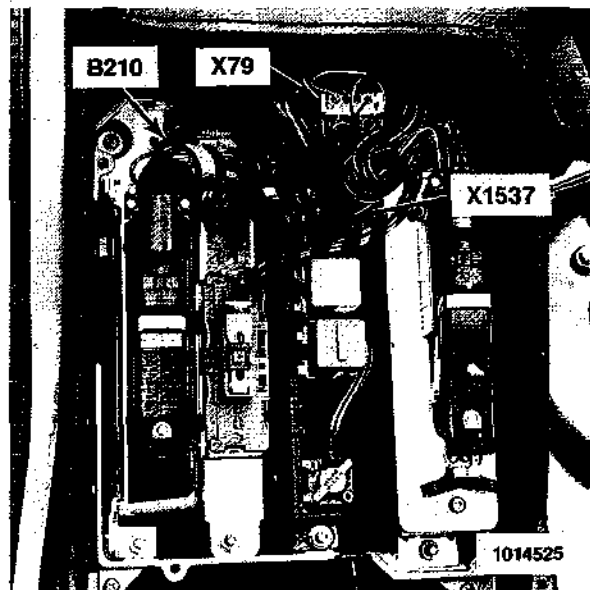


Figure 2- RH Rear Of Engine Compartment (M20 Engine Shown; M30 And M5 Engines Similar)

- B210 Temperature Switch**
- X79 Connector (4 pins) WS**
- X1537 Connector (8 pins) SW**


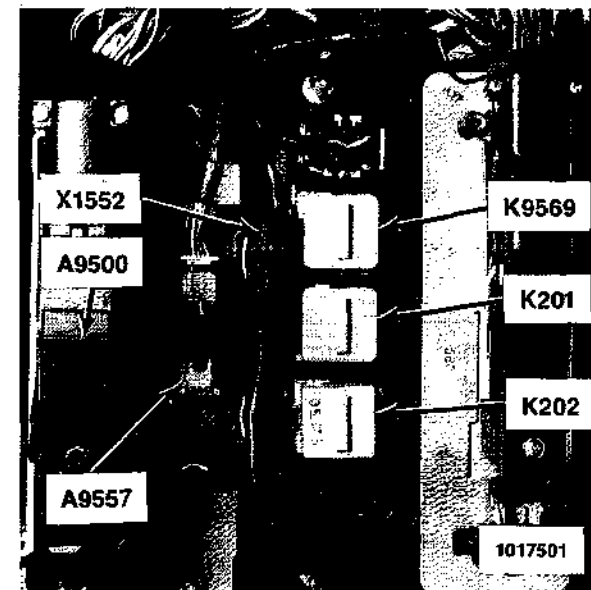



Figure 3- RH Rear Of Engine Compartment (M5 Engine)

- A9500 DME Control Unit**
- A9557 Intake Air Control**
- K201 Fuel Pump Relay**
- K202 Main Relay**
- K9569 Air Pump Relay**
- X1552 Connector (4 pins) SW**

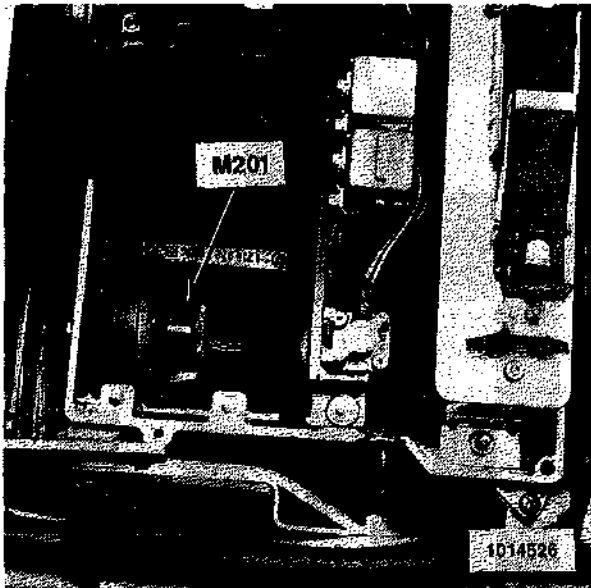


**Figure 1- RH Rear Of Engine
Compartment (M30 Engine
Shown; M20 And M5 Engines
Similar)**

M201 E-Box Fan

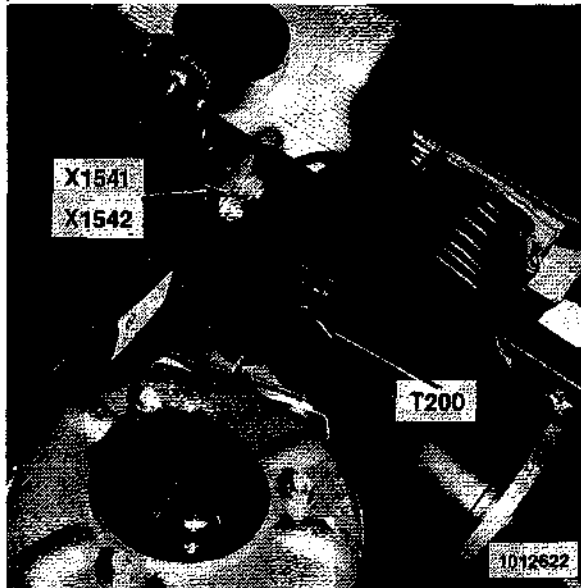

**Figure 2- RH Rear Of Engine
Compartment (M30 Engine
Shown; M20 And M5 Engines
Similar)**

**T200 Ignition Coil
X1541 Ground
X1542 Ground**

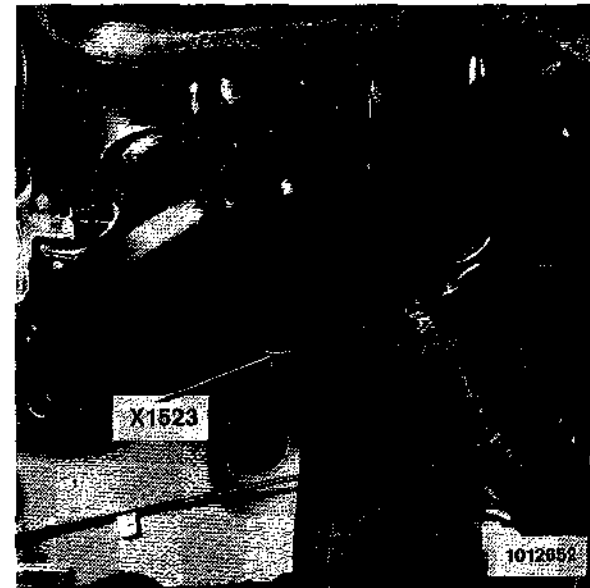

**Figure 3- RH Rear Of Engine
Compartment (M20 Engine)**

X1523 Connector (4 pins) SW

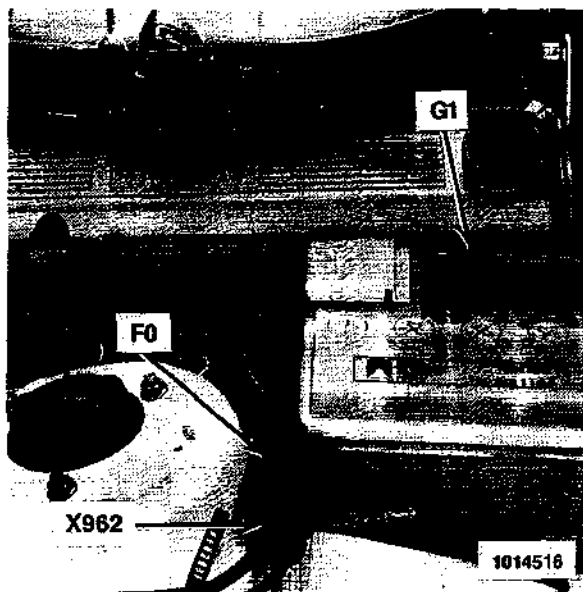


Figure 1- RH Front Of Engine Compartment (M20 Engine)

- F0** Fusible Link 80A
- G1** Battery
- X962** B+ Junction Post



Figure 2- Rear Of Engine (M30 Engine)

- B206** Oil Pressure Switch

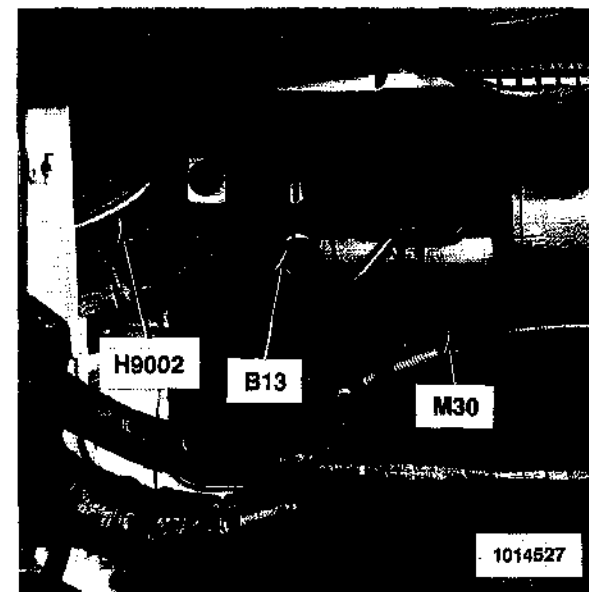


Figure 3- Behind Center Of Fresh Air Cowl Panel

- B13** Outside Temperature Sensor
- H9002** On Board Computer Antitheft Horn
- M30** Blower Motor

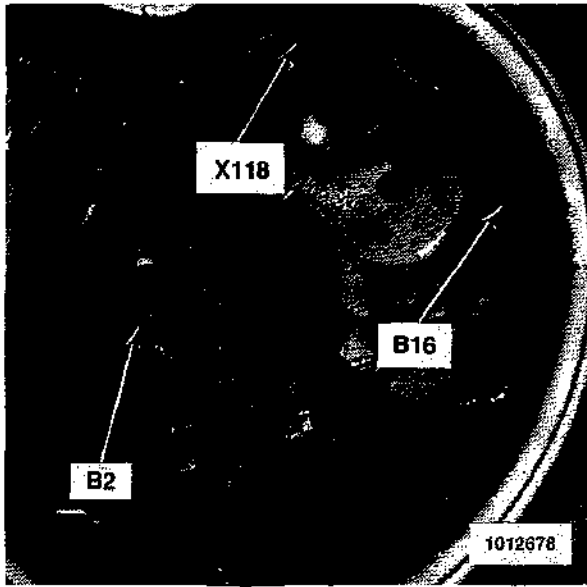


Figure 1- Behind LH Front Wheel

- B2 Left Front Speed Sensor**
- B16 Left Front Brake Pad Sensor**
- X118 Connector (2 pins) SW**

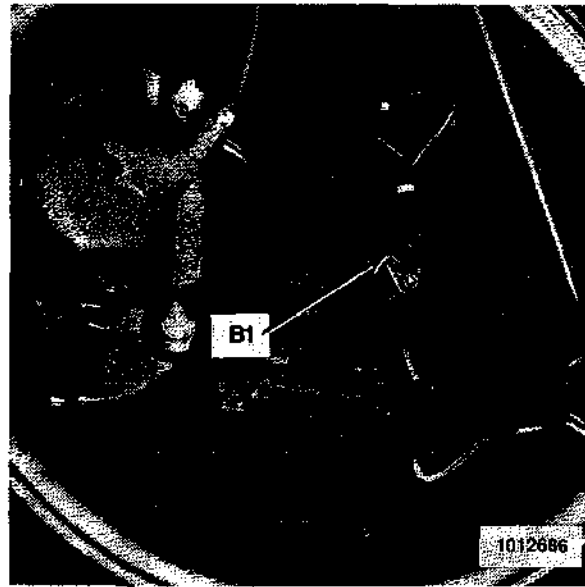


Figure 2- Behind RH Front Wheel

- B1 Right Front Speed Sensor**

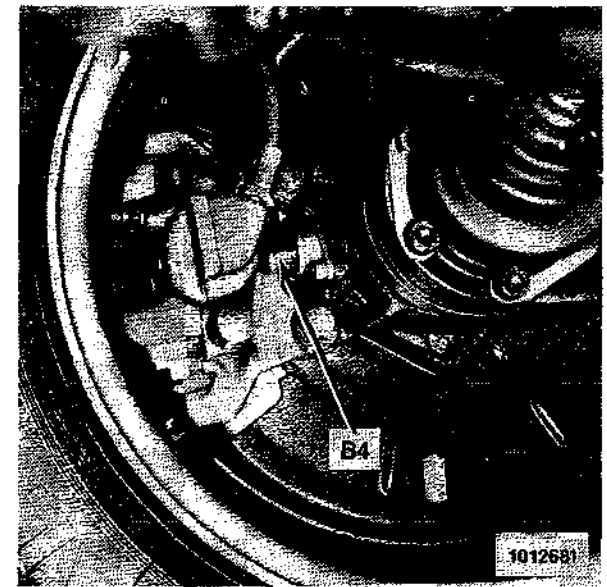


Figure 3- Behind LH Rear Wheel

- B4 Left Rear Speed Sensor**

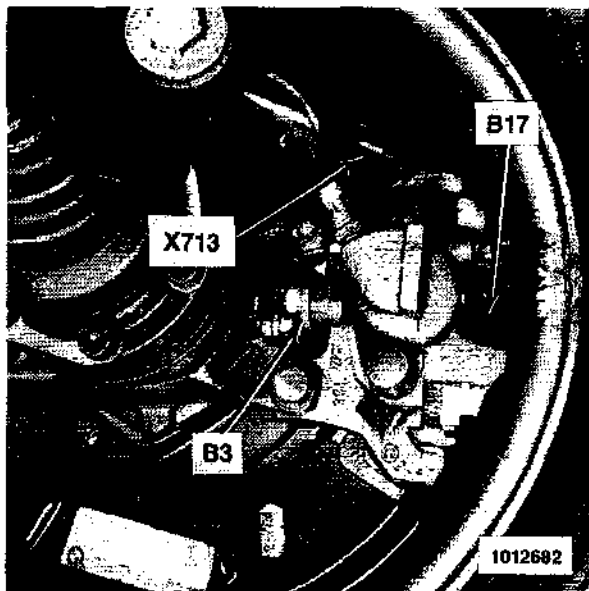


Figure 1- Behind RH Rear Wheel

- B3 Right Rear Speed Sensor**
- B17 Right Rear Brake Pad Sensor**
- X713 Connector (2 pins) SW**

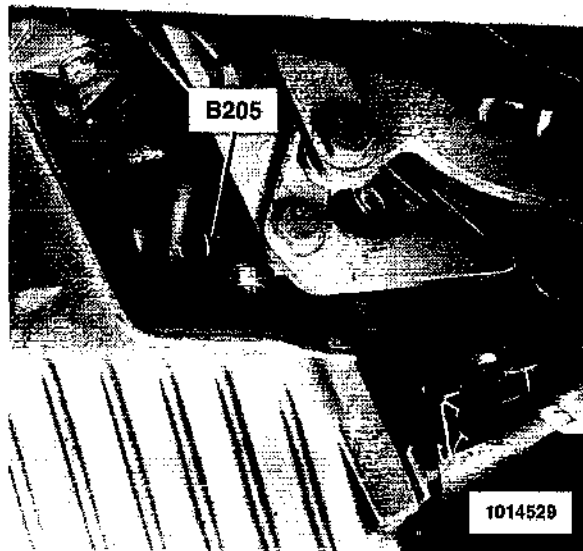


Figure 2- Lower LH Front Of Engine (M20 Engine)

- B205 Oil Level Sensor**

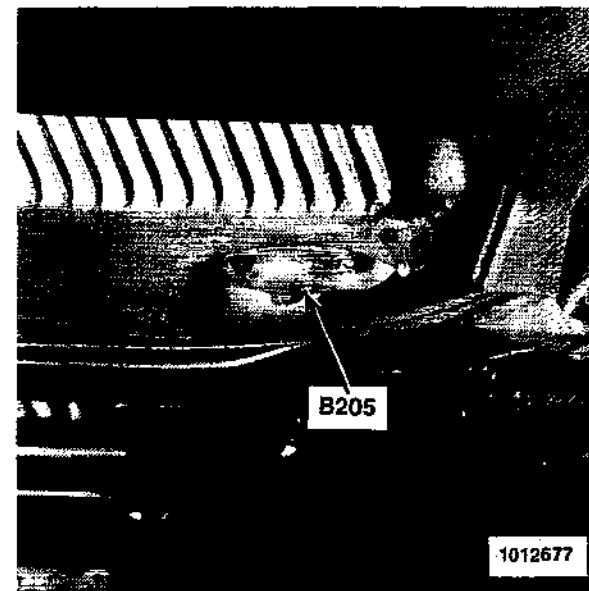


Figure 3- Lower Front Of Engine (M30 Engine Shown; M5 Engine Similar)

- B205 Oil Level Sensor**

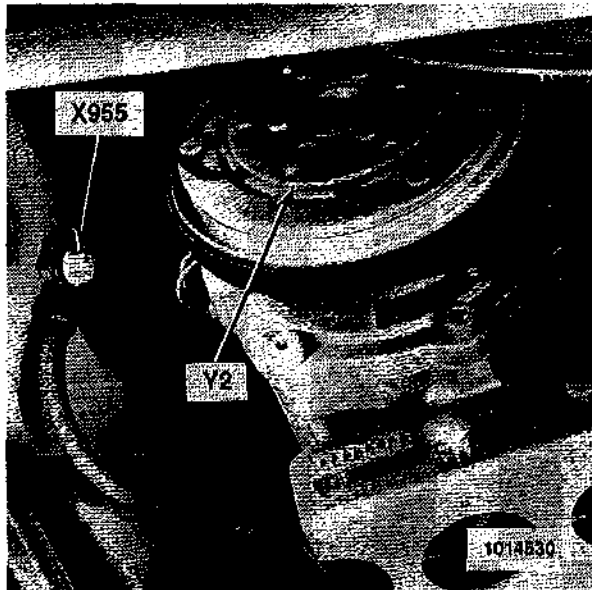


Figure 1- Lower RH Front Of Engine (M20 Engine Shown; M30 And M5 Engines Similar)

Y2 Compressor Clutch
X955 Ground (Battery)

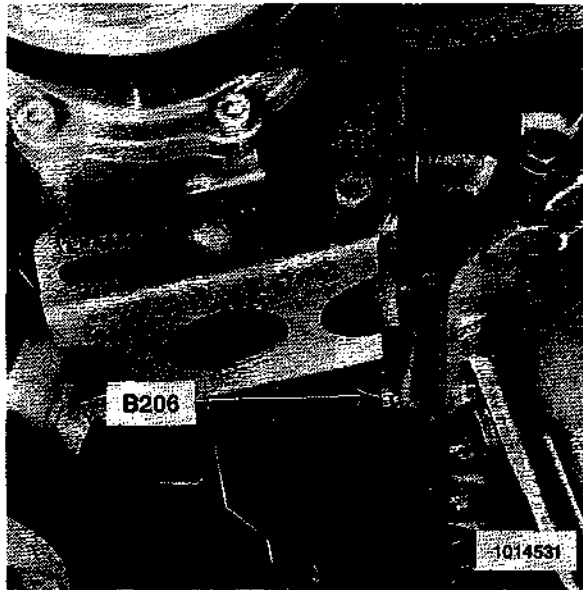


Figure 2- Lower RH Side Of Engine (M20 Engine)

B206 Oil Pressure Switch

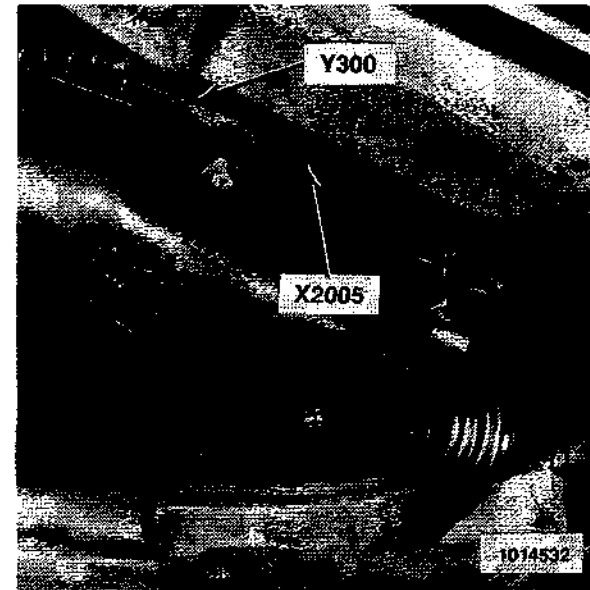


Figure 3- LH Side Of Transmission

Y300 Transmission
X2005 Connector (8 pins) SW

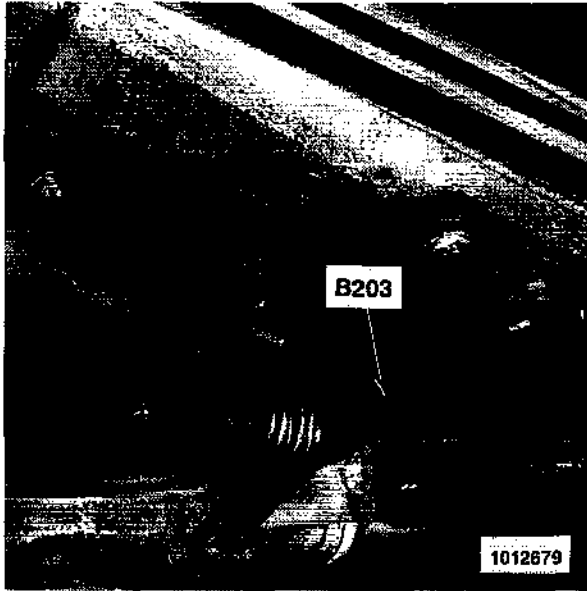


Figure 1- LH Side Of Transmission (M30 Engine)

B203 Oxygen Sensor

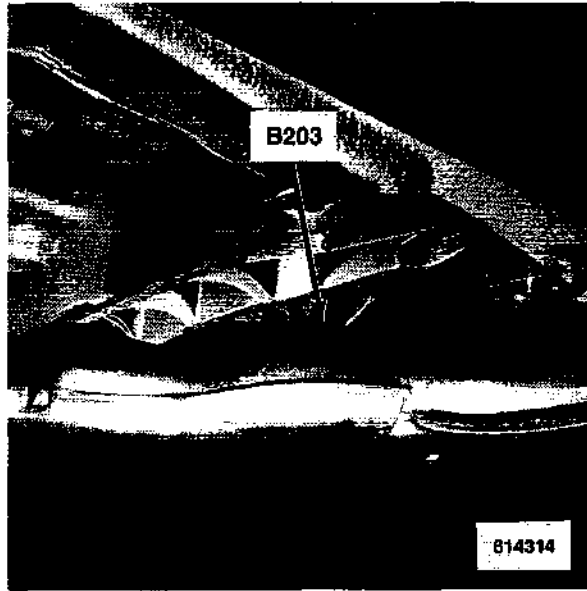


Figure 2- LH Side Of Transmission (M5 Engine)

B203 Oxygen Sensor

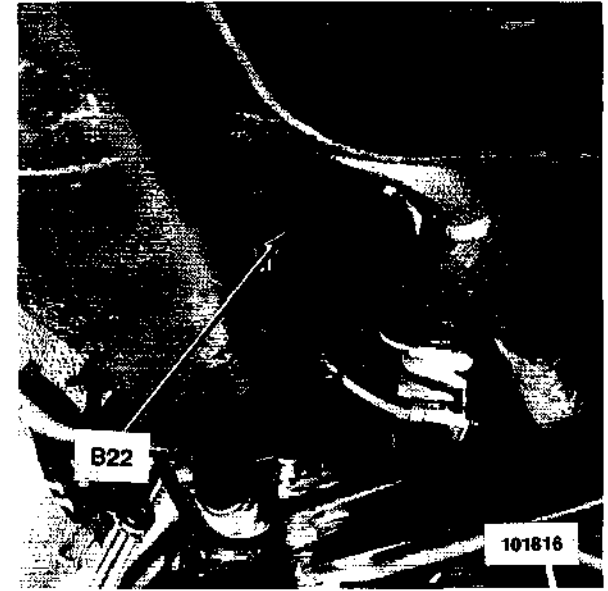


Figure 3- Below RH Rear Of Car

B22 Wheel Camber Control Unit

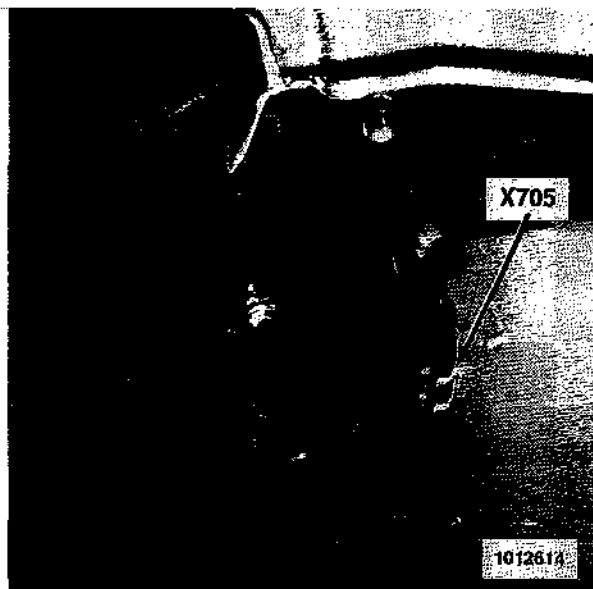


Figure 1- Below Rear Of Car, Forward Wheel Well

X705 Connector (2 pins) SW

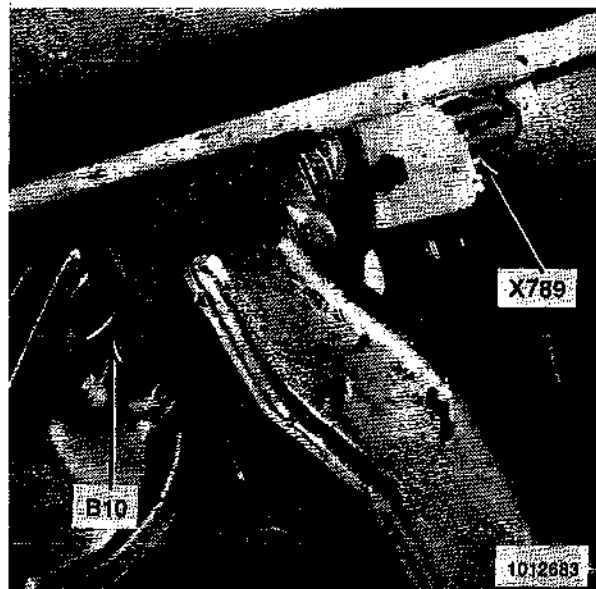


Figure 2- Below Rear Of Car, On Rear Differential

B10 Vehicle Speed Sensor
X789 Connector (2 pins) GE

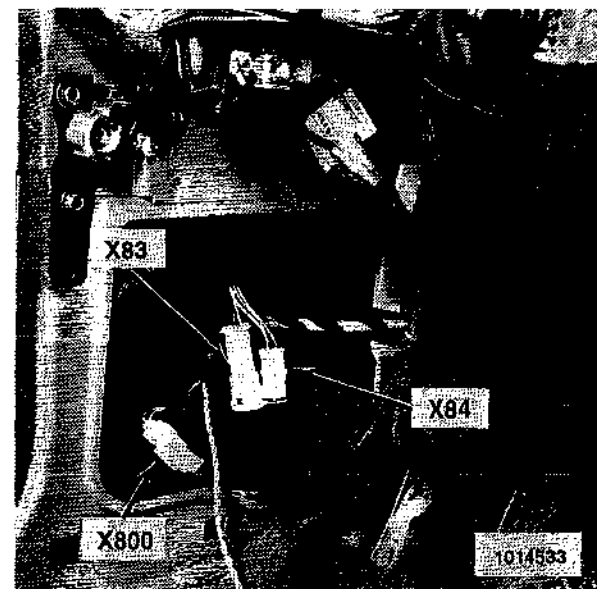


Figure 3- Inside LH Kick Panel

X83 Connector (3 pins) GE
X84 Connector (3 pins) GE
X800 Connector (2 pins) WS

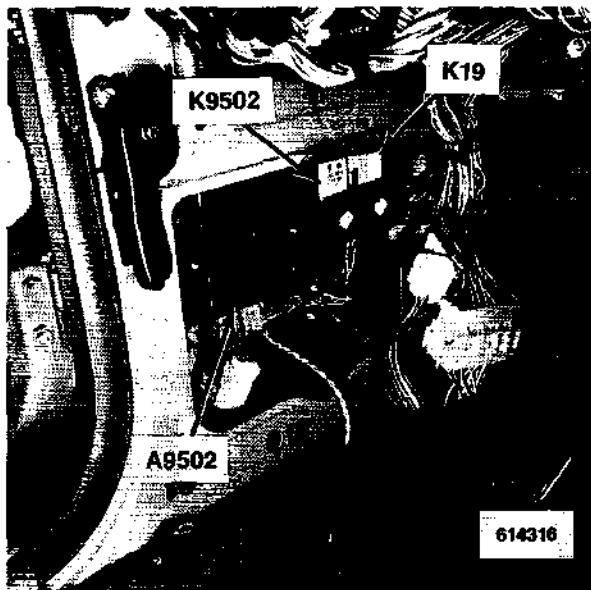


Figure 1- Inside LH Kick Panel

- A9502 Full Throttle Compressor Control Unit
- K19 Compressor Control Relay
- K9502 Full Throttle Compressor Cut Off Relay

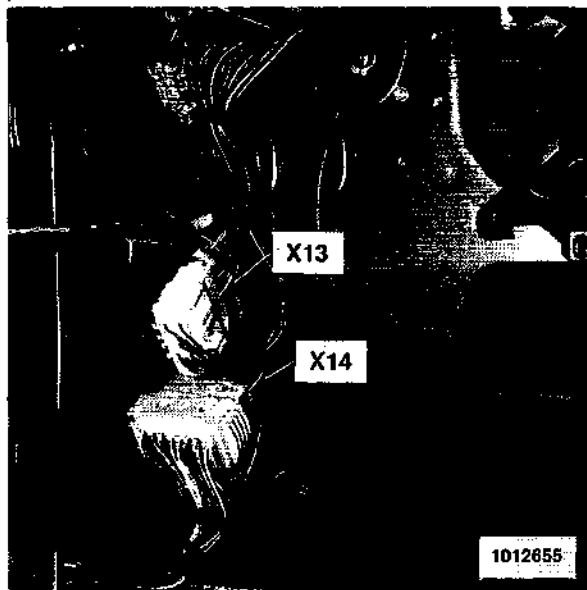


Figure 2- Below LH Side Of Dash, Below Driver's Footrest

- X13 Connector (21 pins) WS
- X14 Connector (30 pins) GE

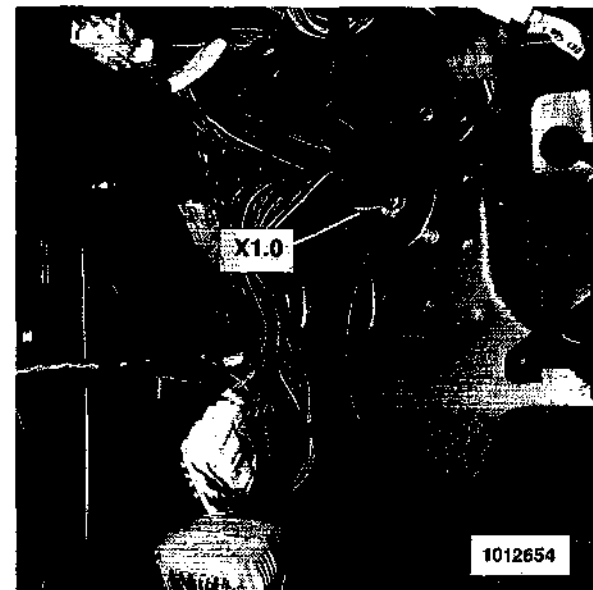


Figure 3- Below LH Side Of Dash, Top Of Kick Panel

- X1.0 Junction Post For Front Power Distribution Box

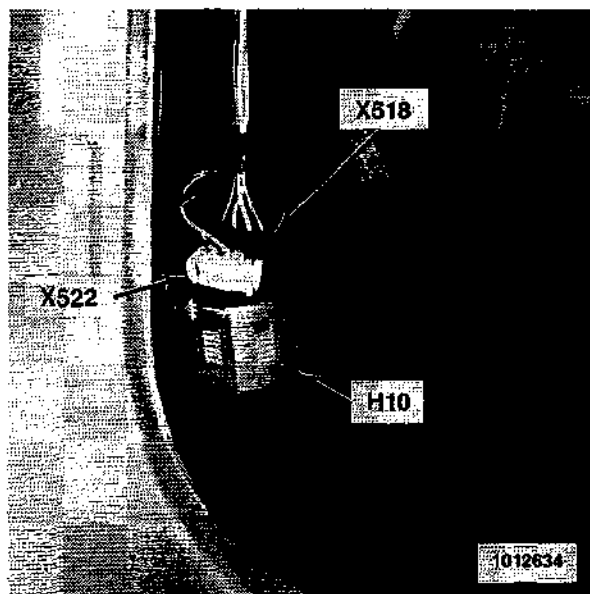


Figure 1- Below LH Side Of Dash (Hush Panel Removed)

- H10 Chime Module**
- X518 Connector (4 pins) SW**
- X522 Connector (3 pins) WS**

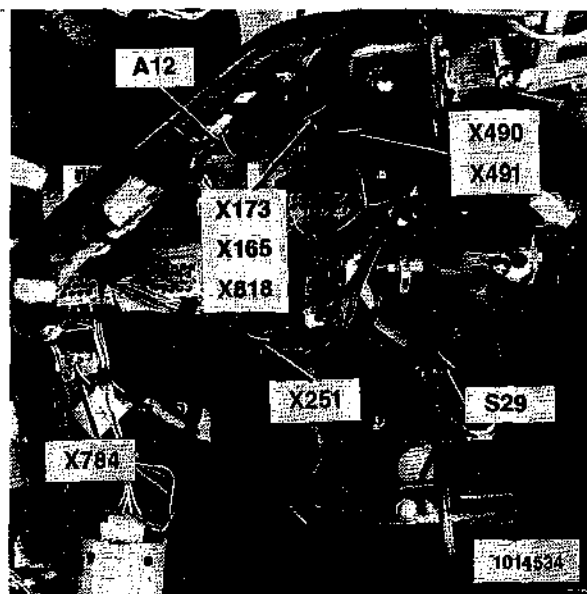


Figure 2- Below LH Side Of Dash, Left Of Steering Column

- A12 Diagnostic Module (SRS)**
- S29 Brake Light Switch**
- X165 Ground**
- X173 Ground**
- X251 Connector (30 pins) SW**
- X490 Ground**
- X491 Ground**
- X784 Connector (2 pins) OR**
- X818 Ground**

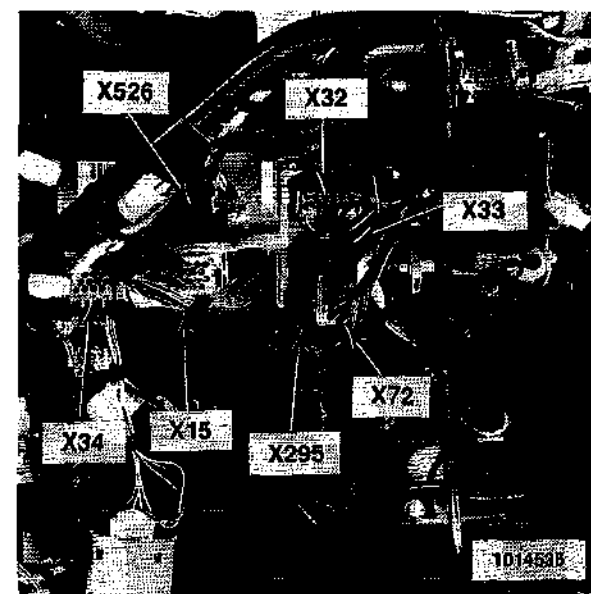


Figure 3- Below LH Side Of Dash, Left Of Steering Column

- X15 Connector (30 pins) WS**
- X32 Connector (12 pins) WS**
- X33 Connector (12 pins) SW**
- X34 Connector (21 pins) WS**
- X72 Connector (8 pins) WS**
- X295 Connector (8 pins) SW**
- X526 Connector (8 pins) SW**

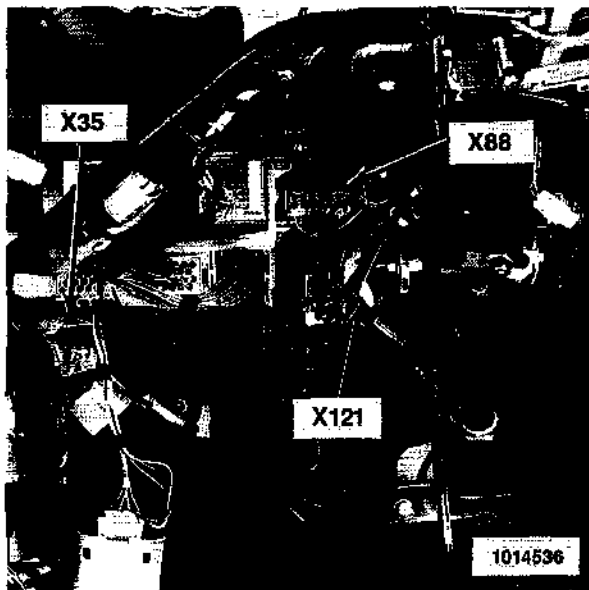


Figure 1- Below LH Side Of Dash, Left Of Steering Column

- X35 Connector (21 pins) SW**
- X88 Connector (3 pins) SW**
- X121 Connector (2 pins) WS**

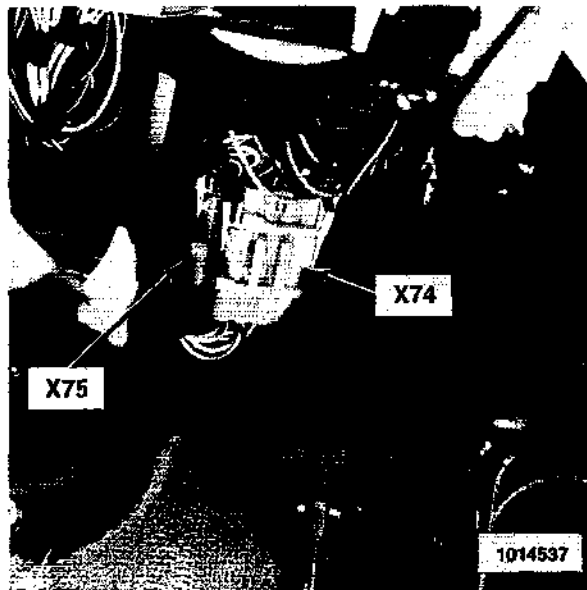


Figure 2- Below LH Side Of Dash, LH Side Of Steering Column

- X74 Connector (8 pins) OR**
- X75 Connector (6 pins) OR**

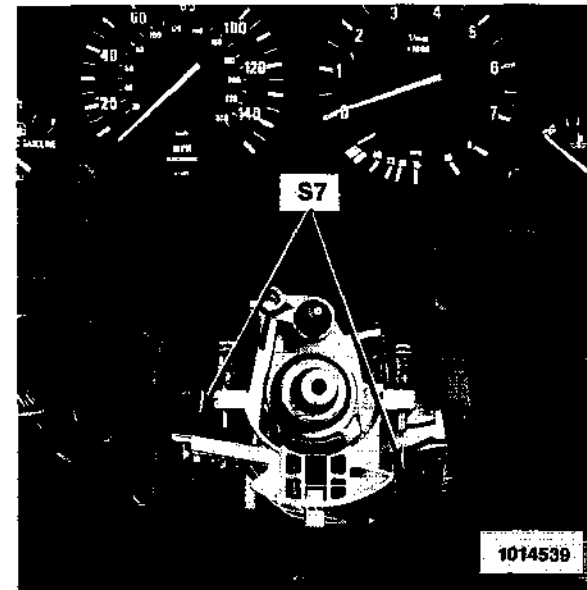


Figure 3- Top Of Steering Column (Steering Wheel Removed)

- S7 Combination Switch**

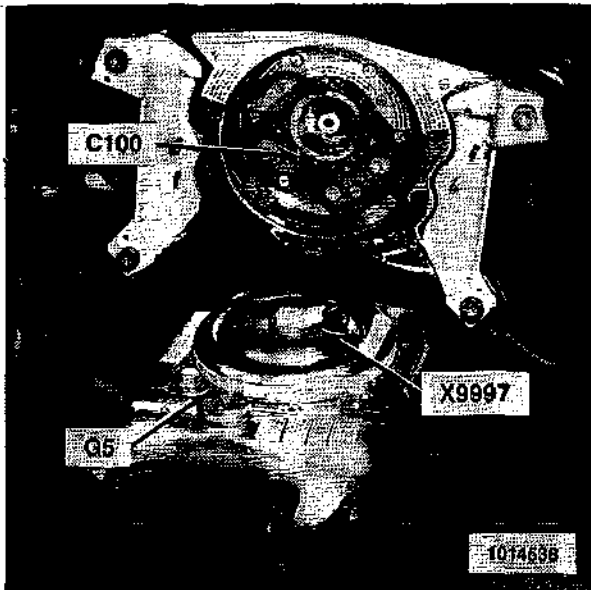


Figure 1- Inside Steering Wheel

- C100 Contact Ring**
- G5 Driver's Air Bag Generator**
- X9997 Connector (2 pins) OR**

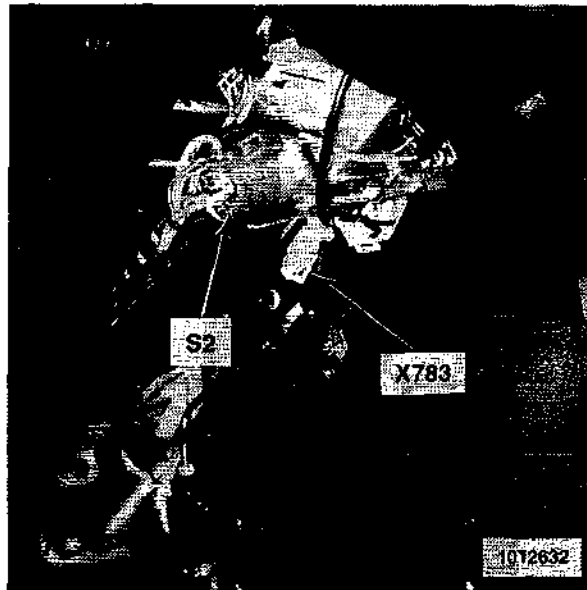


Figure 2- Underside Of Steering Column

- S2 Ignition Switch**
- X783 Connector (2 plns) OR**

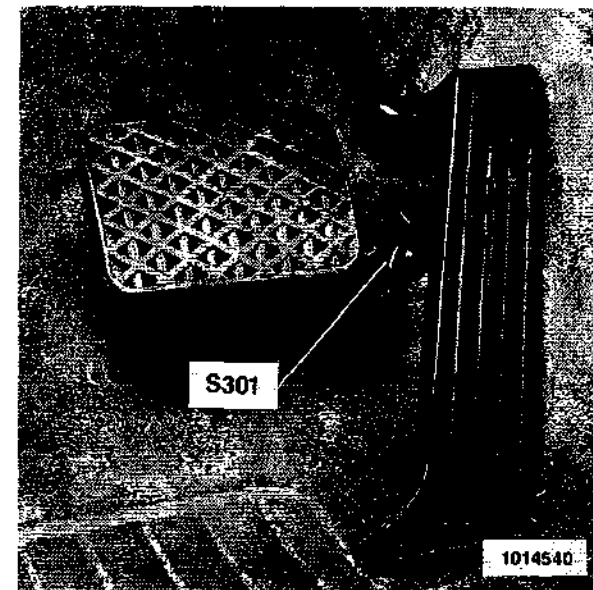


Figure 3- Below LH Side Of Dash

- S301 Transmission Kickdown Switch**

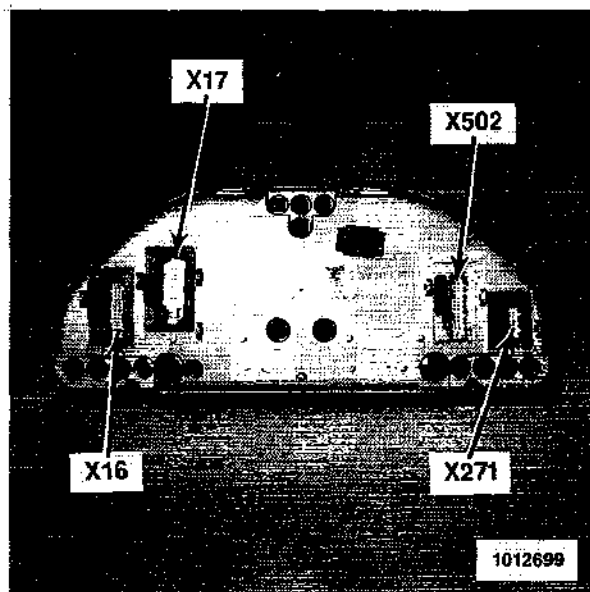


Figure 1- Rear Of Instrument Cluster (525i/535i)

- X16 Connector (26 pins) GE**
- X17 Connector (24 pins) BR**
- X271 Connector (12 pins) GR**
- X502 Connector (26 pins) WS**

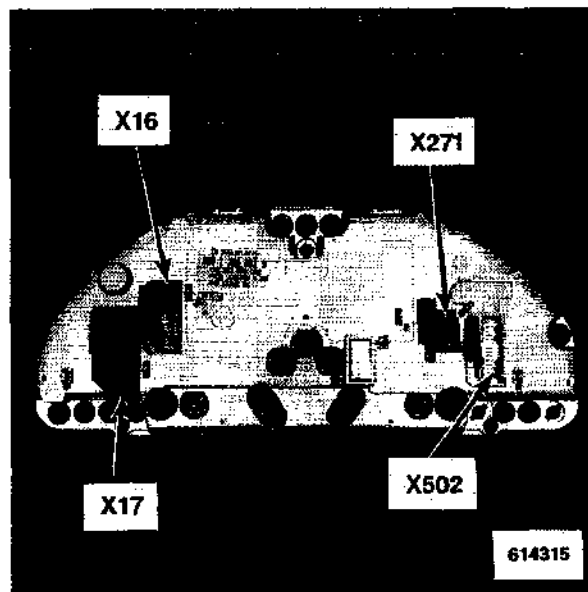


Figure 2- Rear Of Instrument Cluster (M5)

- X16 Connector (26 pins) GE**
- X17 Connector (12 pins) BR**
- X271 Connector (12 pins) GR**
- X502 Connector (26 pins) WS**

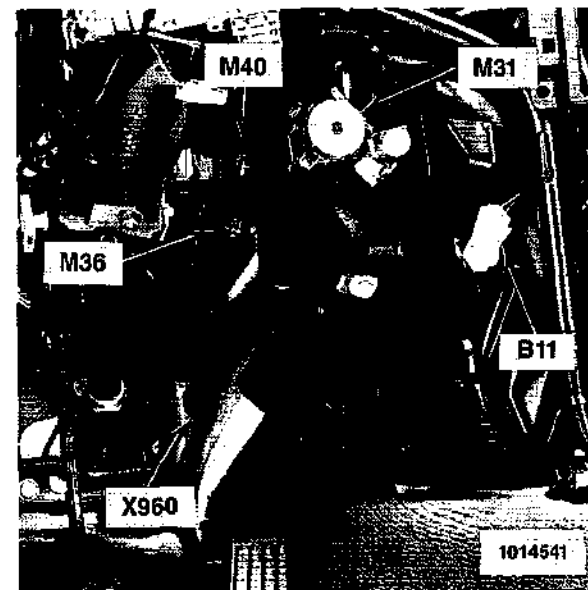


Figure 3- Below Center Of Dash, LH Side Of IHKR Plenum (IHKR)

- B11 Left Heat Exchanger Temperature Sensor**
- M31 Left Footwell Flap Motor**
- M36 Fresh Air Flap Motor**
- M40 Footwell Flap Motor**
- X960 B+ Junction Post**

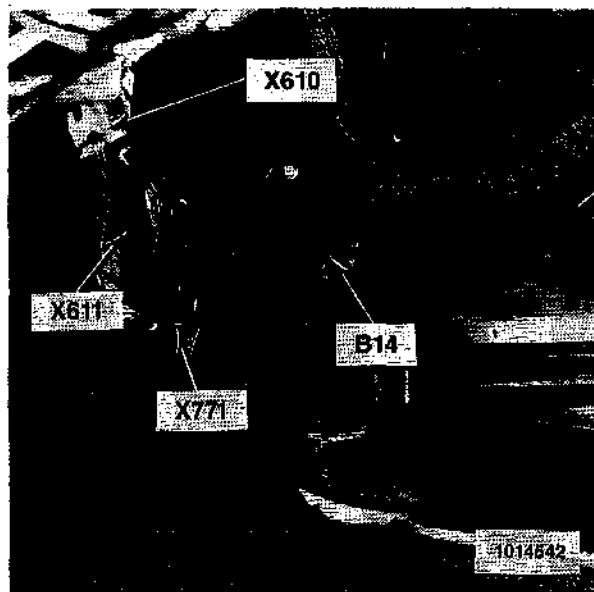


Figure 1- Below Center Of Dash, LH Side Of IHKR Plenum (IHKR)

- B14** Evaporator Temperature Sensor
- X610** Connector (26 pins) WS
- X611** Connector (26 pins) GN
- X771** Connector (2 pins) SW

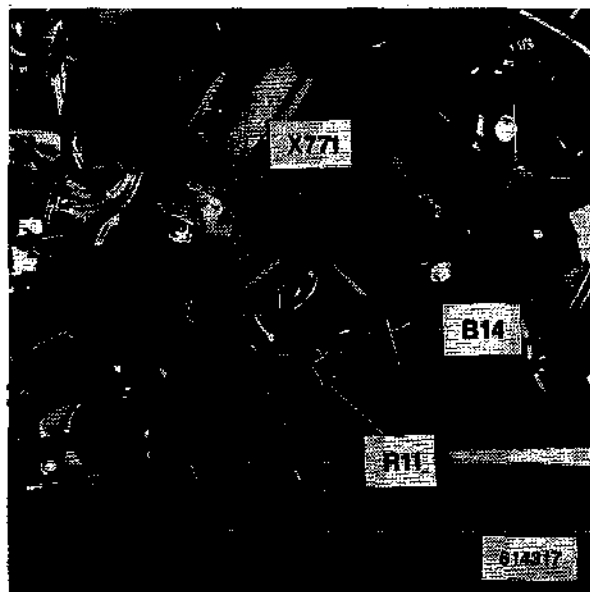


Figure 2- Below Center Of Dash, LH Side Of IHKR 2 Plenum (IHKR 2)

- B14** Evaporator Temperature Sensor
- R11** Blower Resistors
- X771** Connector (2 pins) SW


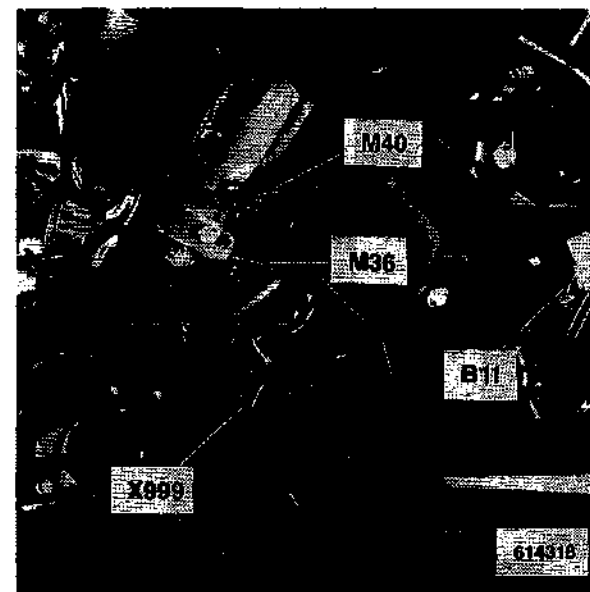


Figure 3- Below Center Of Dash, LH Side Of IHKR 2 Plenum (IHKR 2)

- B11** Left Heat Exchanger Temperature Sensor
- M36** Fresh Air Flap Motor
- M40** Footwell Flap Motor
- X999** Connector (4 pins) SW

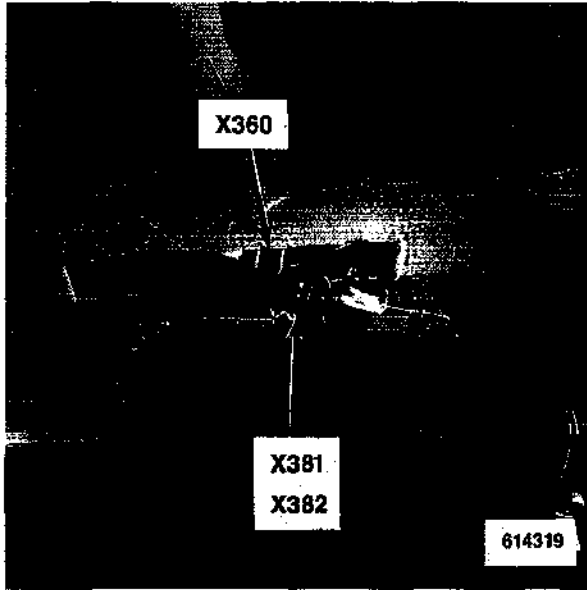

**Figure 1- LH Side Of Windshield Header
(RH Similar)**

- X360** Connector (3 pins) WS
- X381** Connector (LH) (2 pins) SW
- X382** Connector (RH) (2 pins) SW

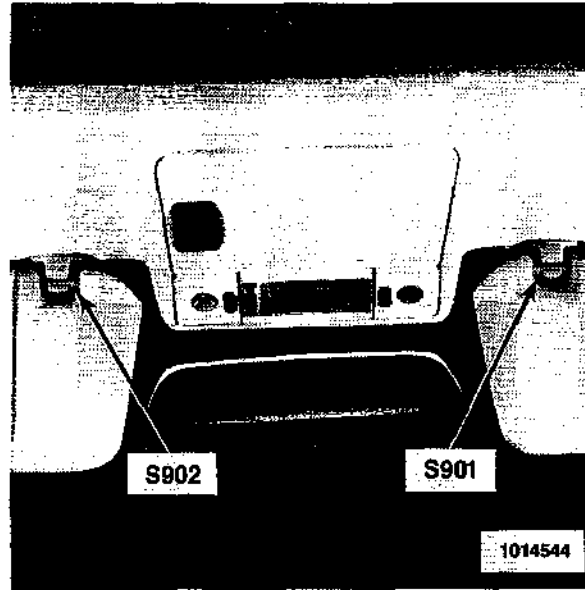


Figure 2- Center Of Windshield Header

- S901** Passenger's Visor Switch
- S902** Driver's Visor Switch

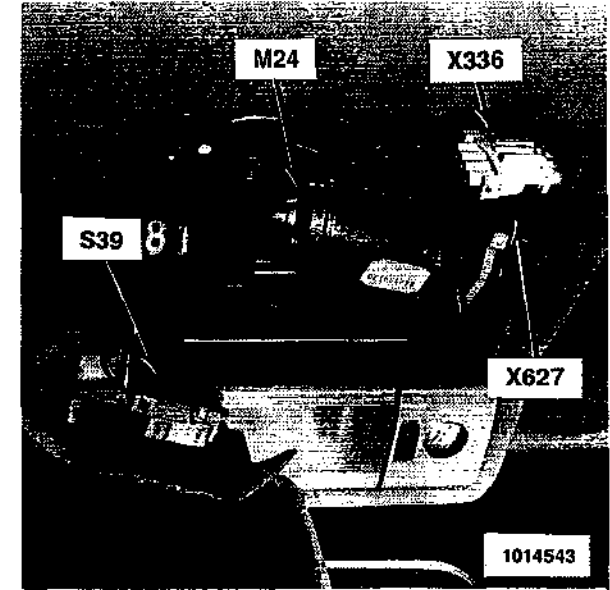


Figure 3- Center Of Windshield Header

- M24** Sunroof Motor
- S39** Sunroof Position Switch
- X336** Connector (4 pins) WS
- X627** Connector (8 pins) SW

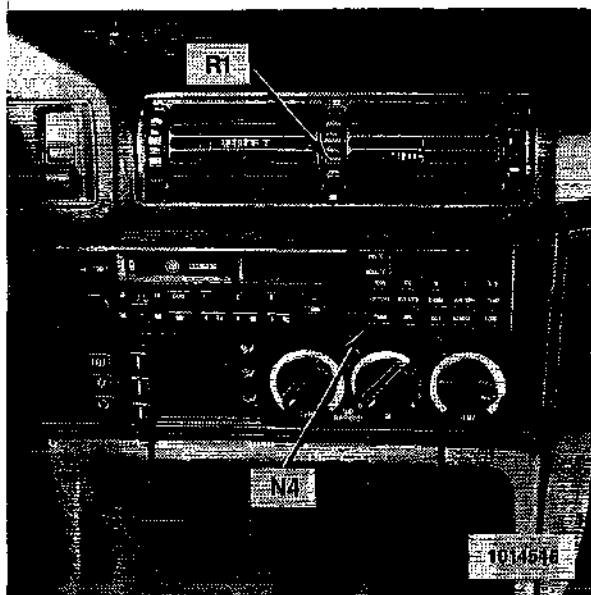


Figure 1- Center Of Dash

- N4 On-Board Computer**
- R1 Temperature Distribution Potentiometer**

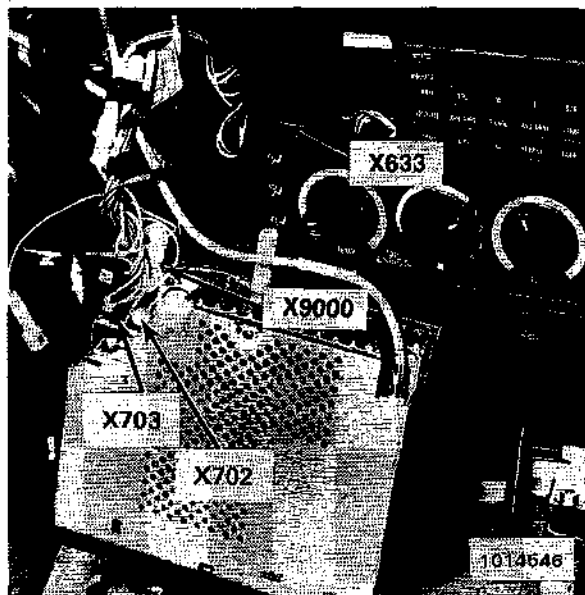


Figure 2- Behind Center Of Dash

- X633 Connector (8 pins) SW**
- X702 Connector (2 pins) WS**
- X703 Connector (2 pins) SW**
- X9000 Connector (2 pins) SW**

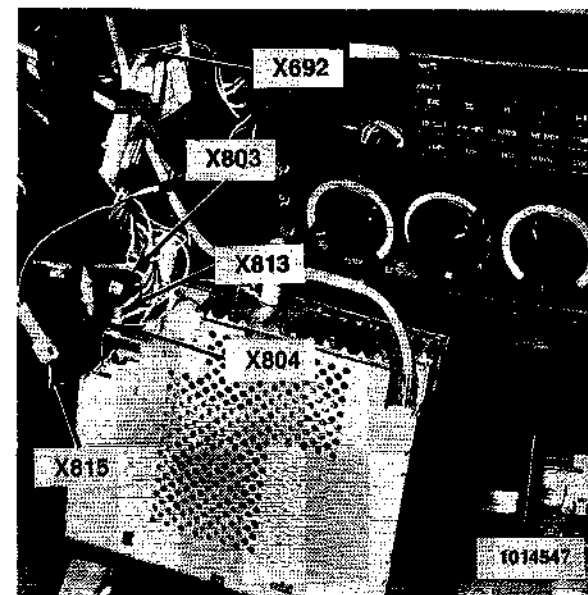


Figure 3- Behind Center Of Dash

- X692 Connector (3 pins) SW**
- X803 Connector (2 pins) SW**
- X804 Connector (2 pins) WS**
- X813 Connector (1 pin) SW**
- X815 Connector (1 pin) WS**

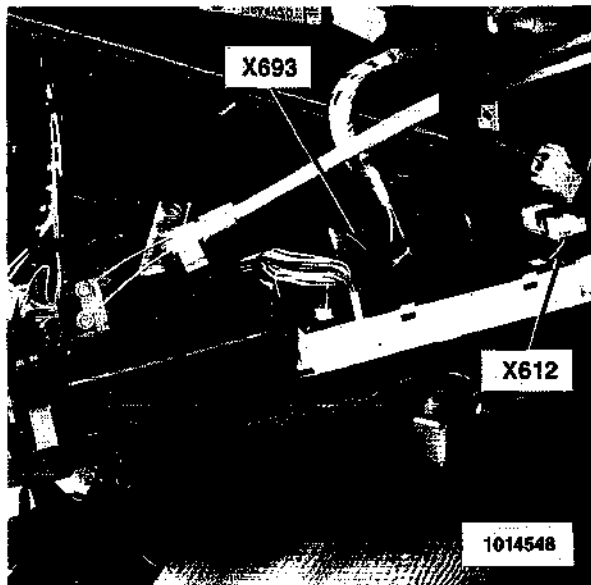


Figure 1- Behind Center Of Dash

- X612 Connector (26 pins) BL
- X693 Connector (3 pins) SW

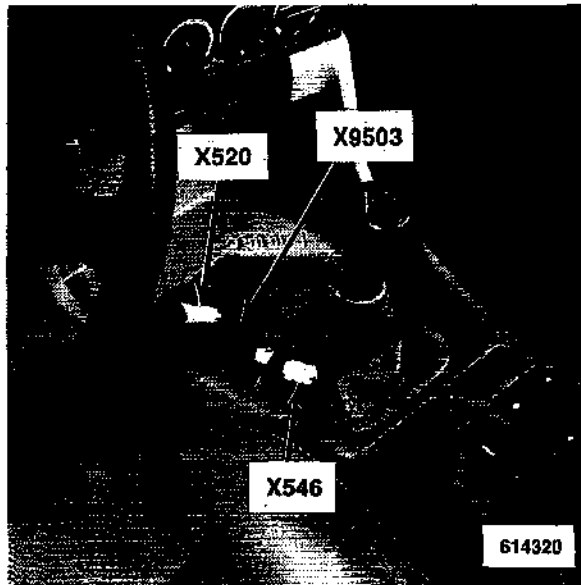


Figure 2- Below Center Console

- X520 Connector (3 pins) WS
- X546 Connector (2 pins) WS
- X9503 Connector (2 pins) SW

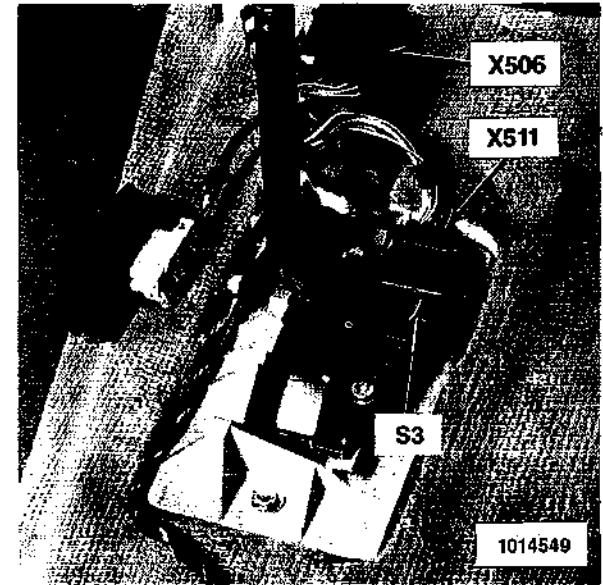


Figure 3- Below Center Console (Console Removed)

- S3 Automatic Transmission Range Switch
- X506 Connector (12 pins) SW
- X511 Connector (8 pins) SW

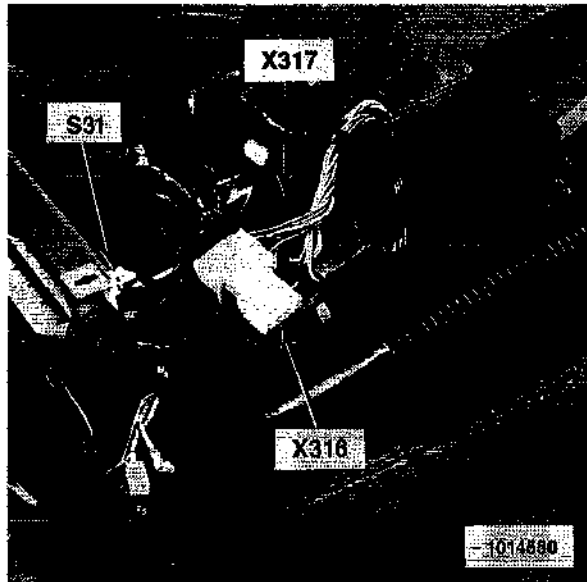


Figure 1- Below Center Console (Console Removed)

- S31 Park Brake Switch**
- X316 Connector (6 pins) WS**
- X317 Connector (6 pins) SW**

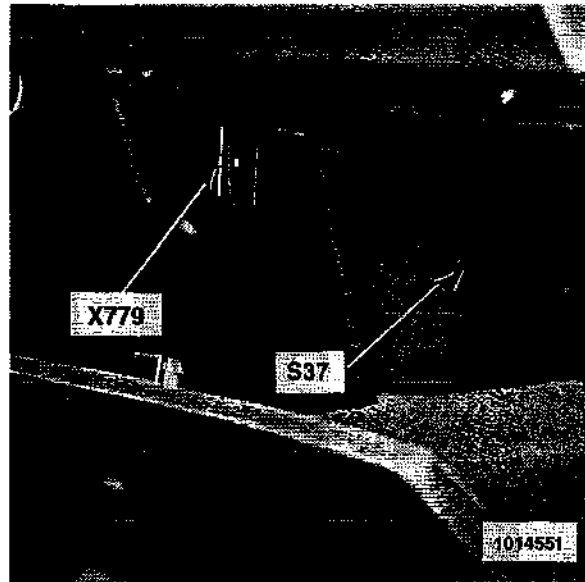


Figure 2- In LH Side Of Glove Box

- S37 Glove Box Light Switch**
- X779 Charging Plug**

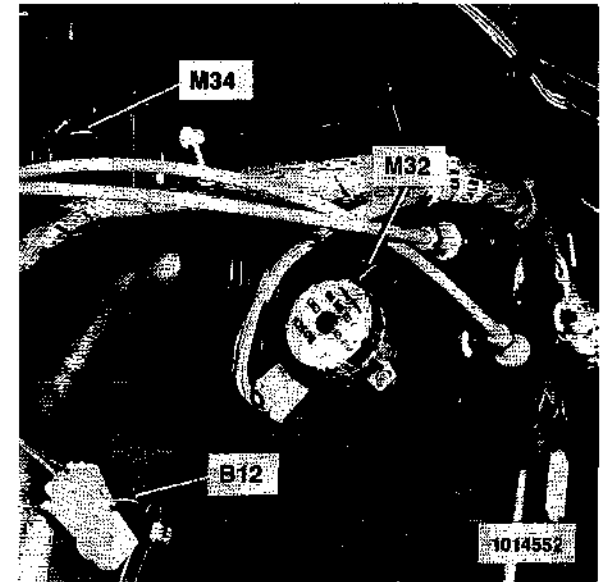


Figure 3- Below Center Of Dash, RH Side Of IHKR Plenum (IHKR)

- B12 Right Heat Exchanger Temperature Sensor**
- M32 Right Footwell Flap Motor**
- M34 Dash Vent Mixing Flap Motor**

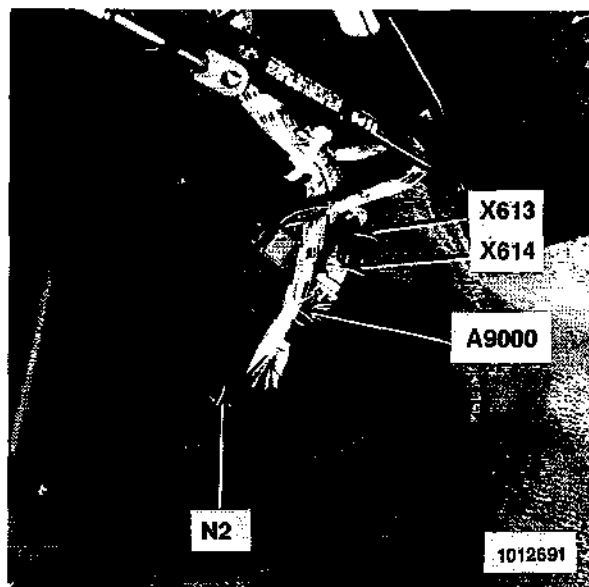


Figure 1- Below Center Of Dash, RH Side Of IHKR Plenum (IHKR)

- A9000 Integrated Climate Regulation Control Unit (IHKR)
- N2 Final Stage Unit
- X613 Connector (26 pins) BL
- X614 Connector (26 pins) GE

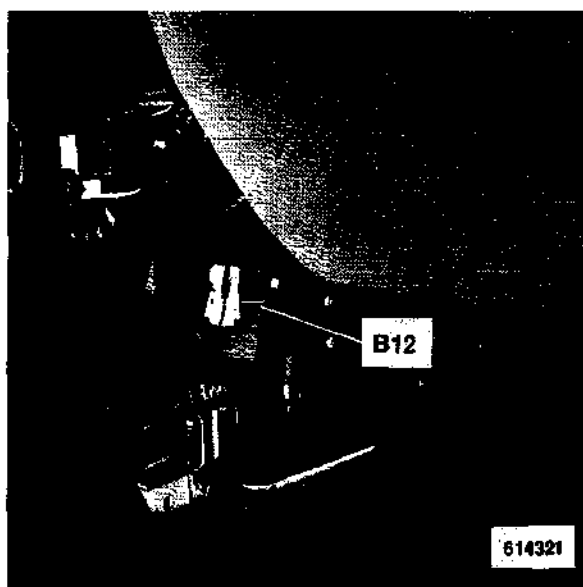


Figure 2- Below Center Of Dash, RH Side Of IHKR 2 Plenum (IHKR 2)

- B12 Right Heat Exchanger Temperature Sensor

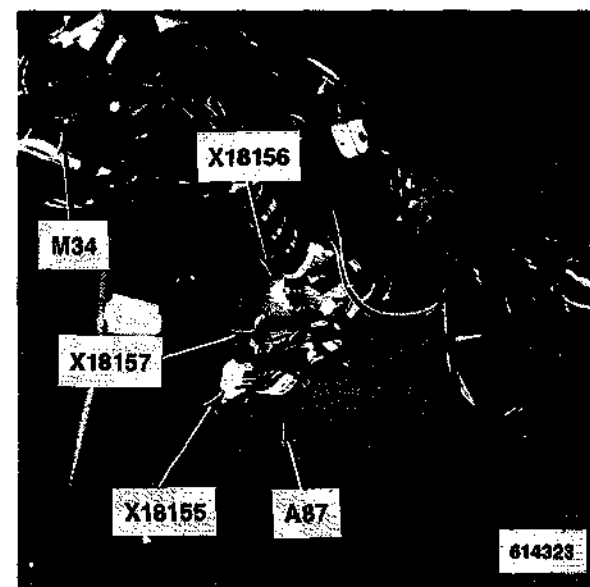


Figure 3- Below Center Of Dash, RH Side Of IHKR 2 Plenum (IHKR 2)

- A87 Integrated Climate Regulation II Control Unit
- M34 Dash Vent Mixing Flap Motor
- X18155 Connector (26 pins) WS
- X18156 Connector (26 pins) BL
- X18157 Connector (26 pins) SW

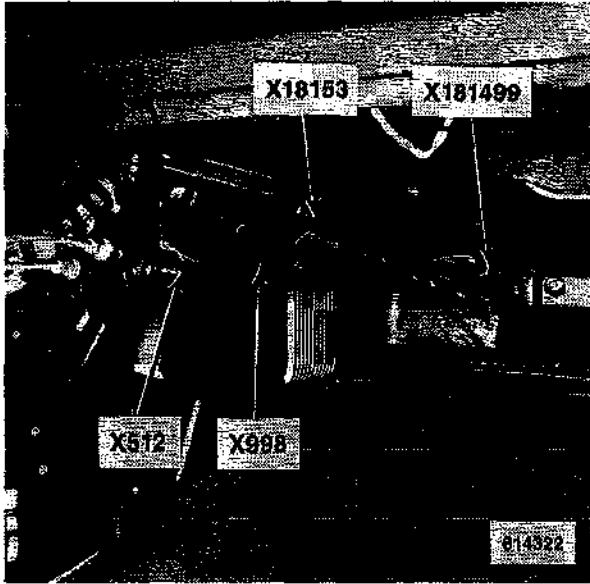


Figure 1- Below RH Side Of Dash

- X512 Connector (8 pins) SW**
- X998 Connector (4 pins) SW**
- X181499 Connector (1 pin) WS**
- X18153 Connector (3 pins) SW**

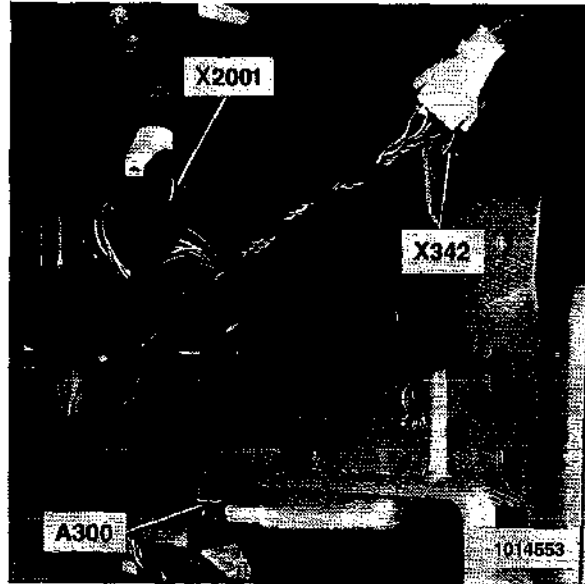


Figure 2- Below RH Side Of Dash, A. Panel

- A300 Electronic Transmission Con Unit (AEGS)**
- X342 Connector (4 pins) WS**
- X2001 Connector (12 pins) SW**

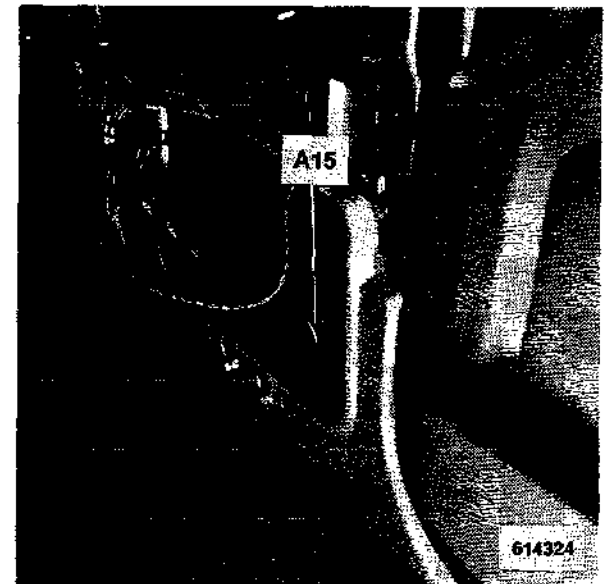


Figure 3- In RH Kick Panel

- A15 Park Heating Ventilation Box**

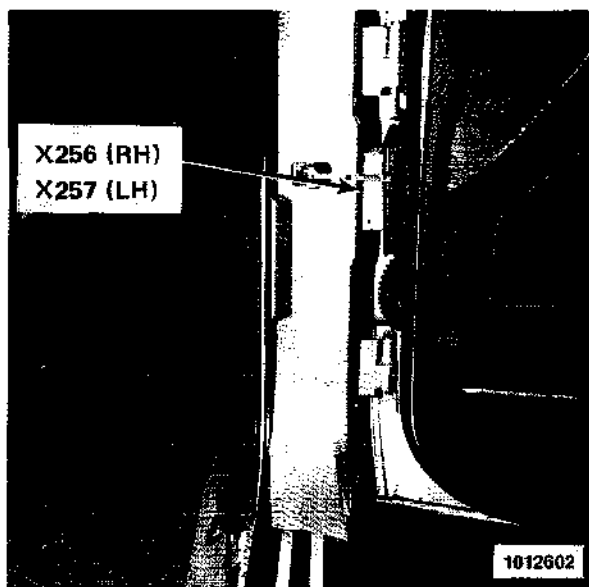


Figure 1- Front Of Passenger's Door Jamb (Driver's Similar)

X256 Connector (RH) (26 pins) GR
X257 Connector (LH) (26 pins) GR

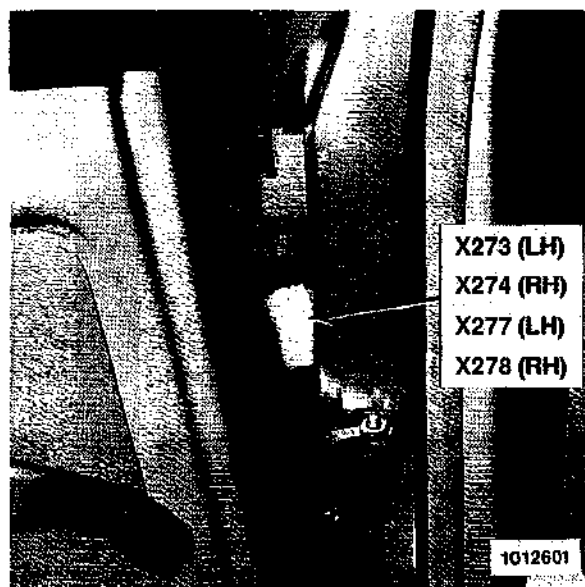


Figure 2- Front Of Rear Door Jamb (RH Similar)

X273 Connector (LH) (12 pins) GR
X274 Connector (RH) (12 pins) GR
X277 Connector (LH) (10 pins) BL
X278 Connector (RH) (10 pins) BL



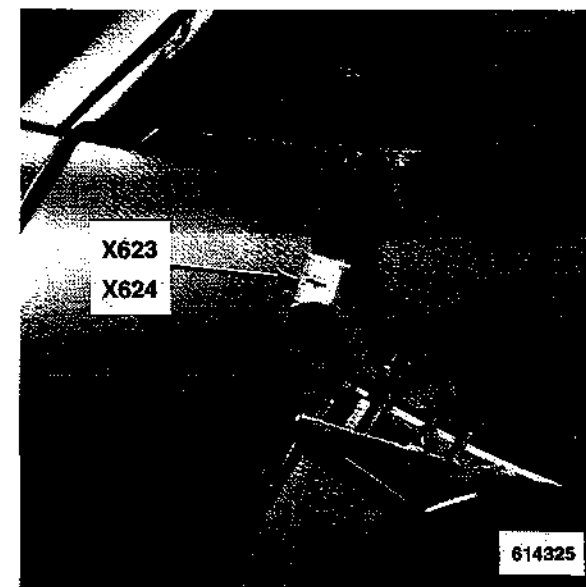


Figure 3- Top Front of Driver's Door (Passenger's Similar)

X623 Connector (10 pins) WS
X624 Connector (10 pins) WS

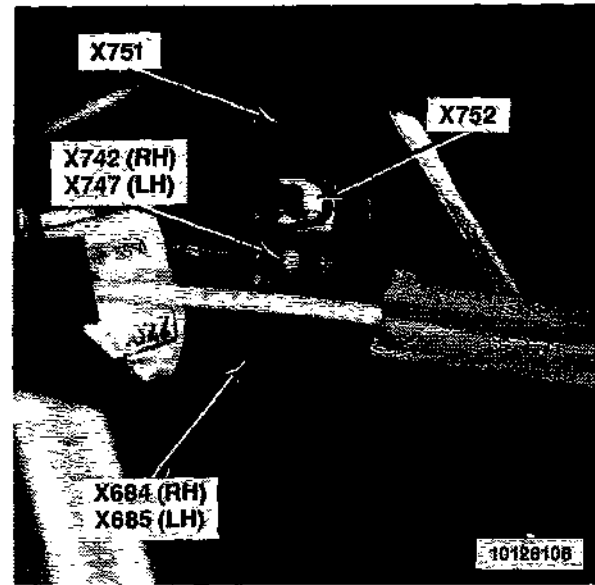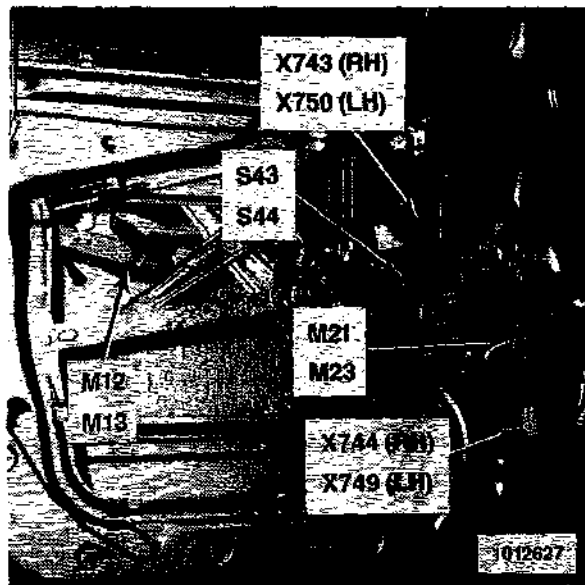

**Figure 1- Behind Driver's Door Panel
(Passenger's Similar)**

**Figure 2- Inside Driver's Door
(Passenger's Similar)**

**Figure 3- Rear Of Driver's Door Jamb
(Passenger's Similar)**

- M12 Driver's Door Lock Motor**
- M13 Passenger's Door Lock Motor**
- M21 Driver's Window Motor**
- M23 Passenger's Window Motor**
- S43 Driver's Window Limit Switch**
- S44 Passenger's Window Limit Switch**
- X743 Connector (2 pins) (RH) SW**
- X744 Connector (2 pins) (RH) BL**
- X749 Connector (2 pins) (LH) BL**
- X750 Connector (2 pins) (LH) SW**

- X684 Connector (3 pins) (RH) SW**
- X685 Connector (3 pins) (LH) SW**
- X742 Connector (2 pins) (RH) GE**
- X747 Connector (2 pins) (LH) GE**
- X751 Connector (2 pins) GY**
- X752 Connector (2 pins) WS**

- S13 Passenger's Door Jamb Switch**
- S14 Driver's Door Jamb Switch**

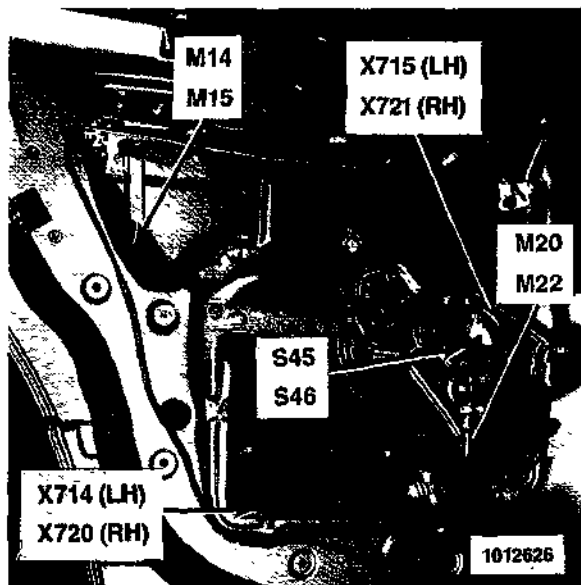


Figure 1- Behind LH Rear Door Panel (RH Rear Similar)

- M14** Right Rear Door Lock Motor
- M15** Left Rear Door Lock Motor
- M20** Left Rear Window Motor
- M22** Right Rear Window Motor
- S45** Left Rear Window Limit Switch
- S46** Right Rear Window Limit Switch
- X714** Connector (2 pins) (LH) BL
- X715** Connector (2 pins) (LH) BL
- X720** Connector (2 pins) (RH) BL
- X721** Connector (2 pins) (RH) SW

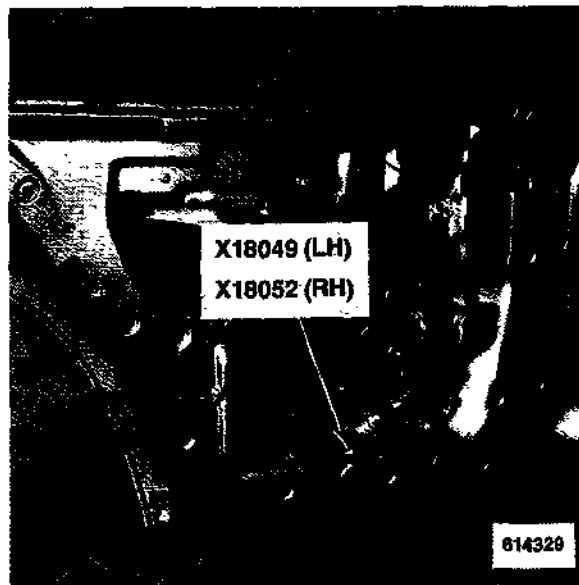


Figure 2- Behind LH Rear Door Panel (RH Rear Similar)

- X18049** Connector (2 pins) (LH) WS
- X18052** Connector (2 pins) (RH) WS

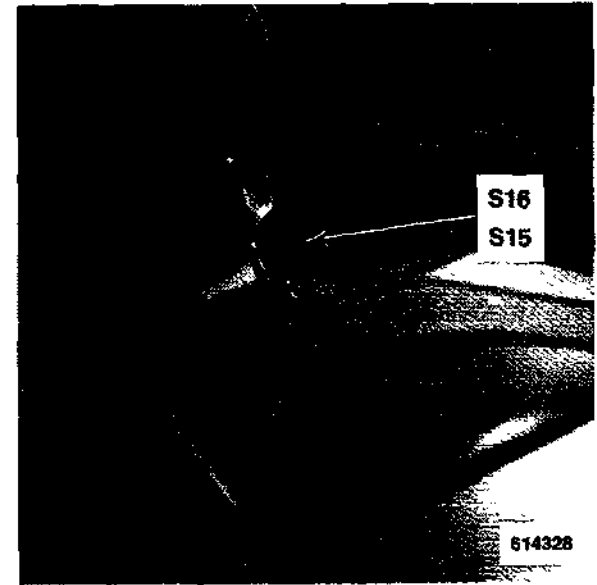


Figure 3- Rear Of LH Rear Door Jamb (RH Rear Similar)

- S15** Right Rear Door Jamb Switch
- S16** Left Rear Door Jamb Switch

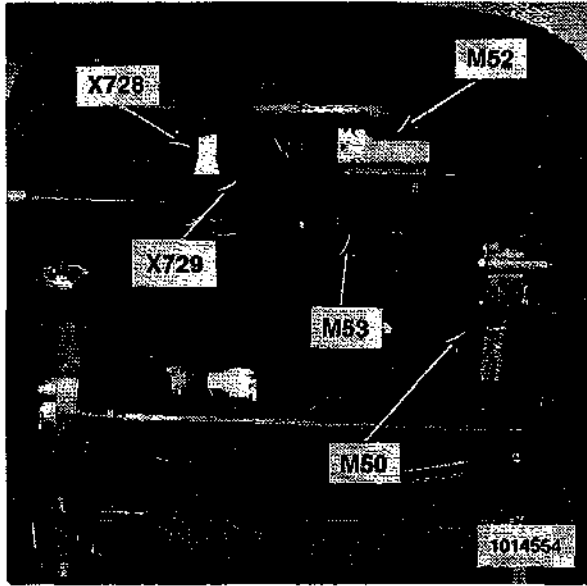


Figure 1- Under Driver's Seat

- M50** Driver's Seat Cushion Tilt Motor
- M52** Driver's Seat Height Motor
- M53** Driver's Seatback Recliner Motor
- X728** Connector (2 pins) WS
- X729** Connector (2 pins) SW

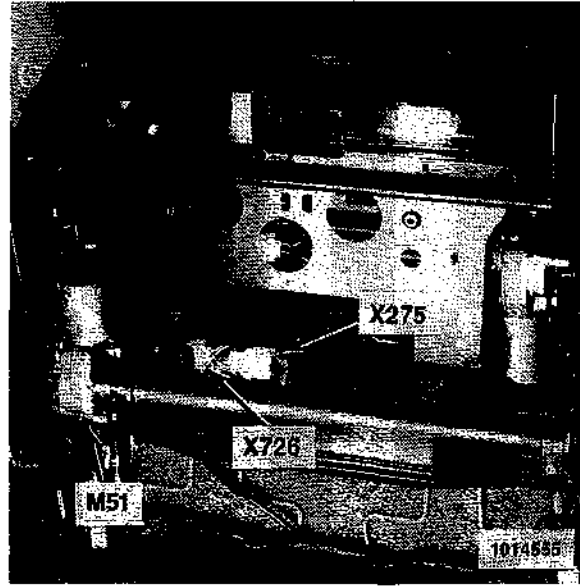


Figure 2- Under Driver's Seat

- M51** Driver's Seat Movement Motor
- X275** Connector (12 pins) WS
- X726** Connector (2 pins) WS


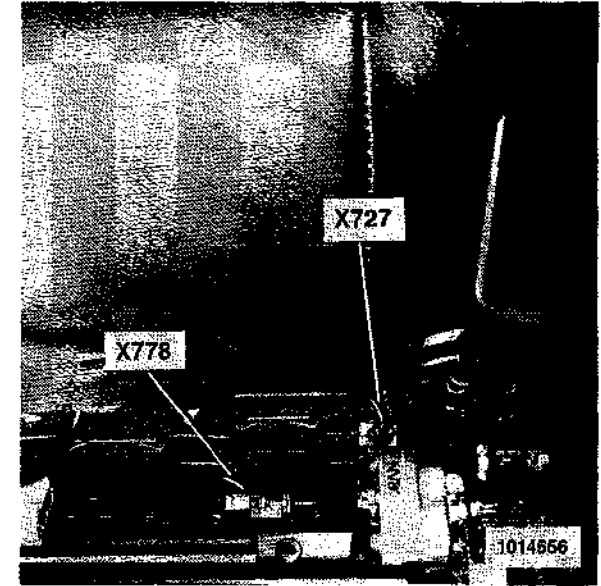



Figure 3- Under Front Of Driver's Seat

- X727** Connector (2 pins) SW
- X778** Connector (2 pins) SW

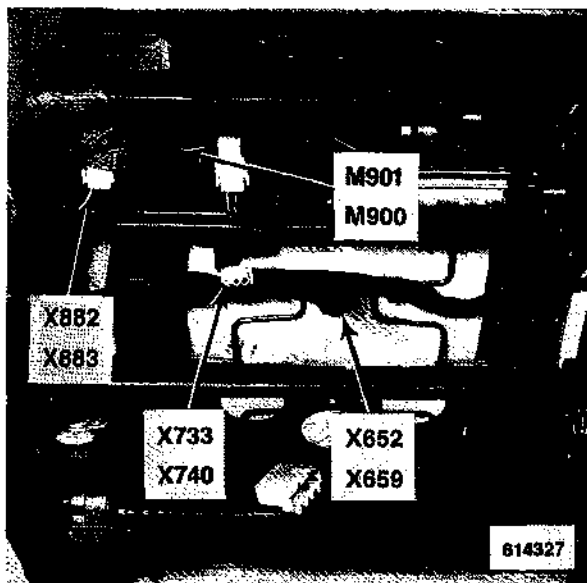

**Figure 1- Under Driver's Seat
(Passenger's Similar)**

- M900** Passenger's Thigh Support Motor
- M901** Driver's Thigh Support Motor
- X652** Connector (LH) (7 pins) SW
- X659** Connector (RH) (7 pins) SW
- X733** Connector (LH) (2 pins) WS
- X740** Connector (RH) (2 pins) WS
- X882** Connector (LH) (2 pins) WS
- X883** Connector (RH) (2 pins) WS

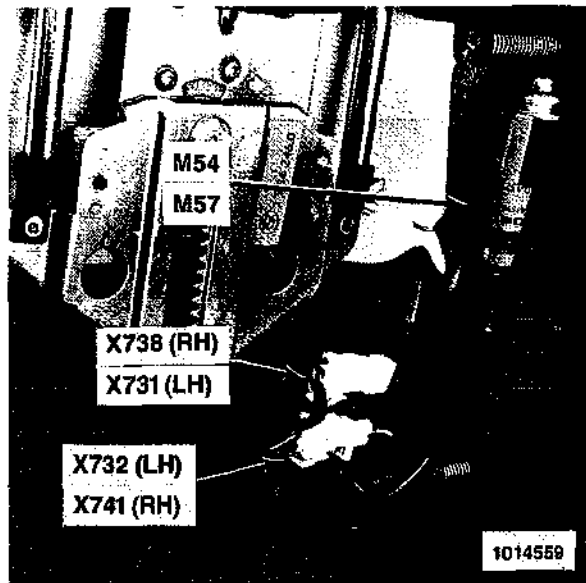

**Figure 2- Inside Back Of Driver's Seat
(Passenger's Similar)**

- M54** Driver's Headrest Motor
- M57** Passenger's Headrest Motor
- X731** Connector (2 pins) (LH) WS
- X732** Connector (2 pins) (LH) WS
- X738** Connector (2 pins) (RH) WS
- X741** Connector (2 pins) (RH) WS

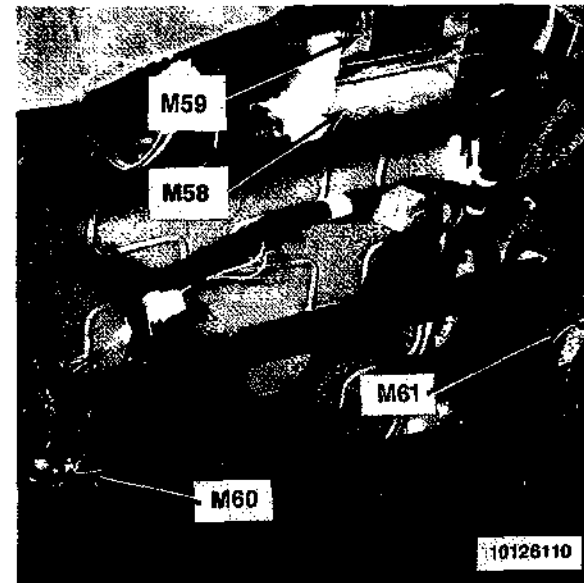


Figure 3- Under Passenger's Seat

- M58** Passenger's Seatback Recliner Motor
- M59** Passenger's Seat Height Motor
- M60** Passenger's Seat Movement Motor
- M61** Passenger's Seat Cushion Tilt Motor



Figure 1- Under Passenger's Seat

- X736 Connector (2 pins) SW**
- X737 Connector (2 pins) WS**

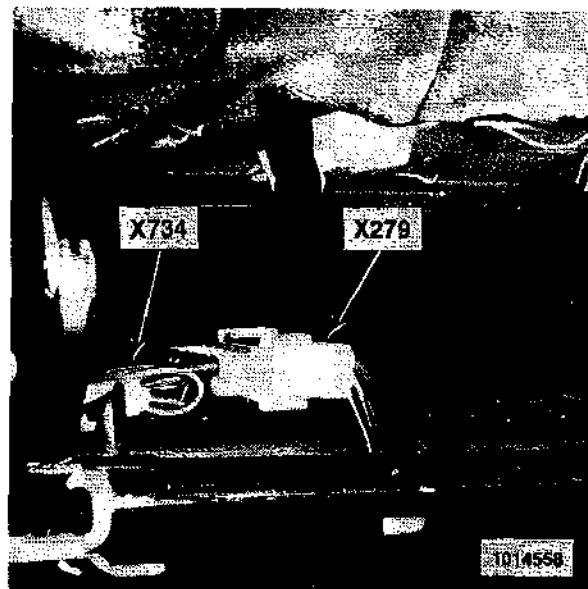


Figure 2- Under Passenger's Seat

- X279 Connector (12 pins) WS**
- X734 Connector (2 pins) WS**


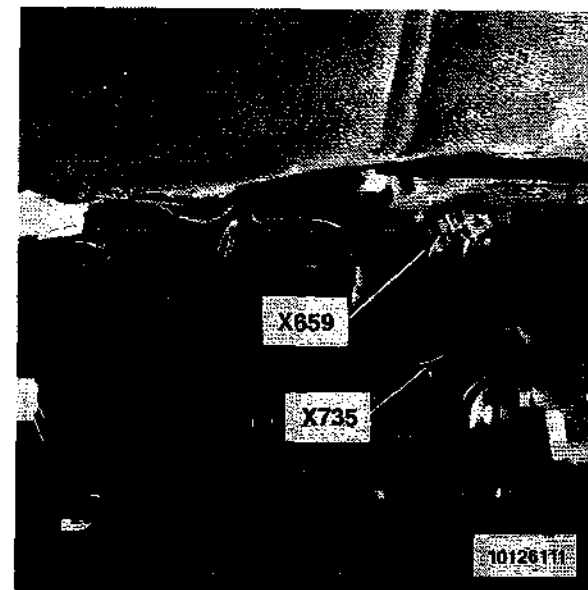


Figure 3- Under Front Of Passenger's Seat

- X659 Connector (7 pins) BL**
- X735 Connector (2 pins) SW**

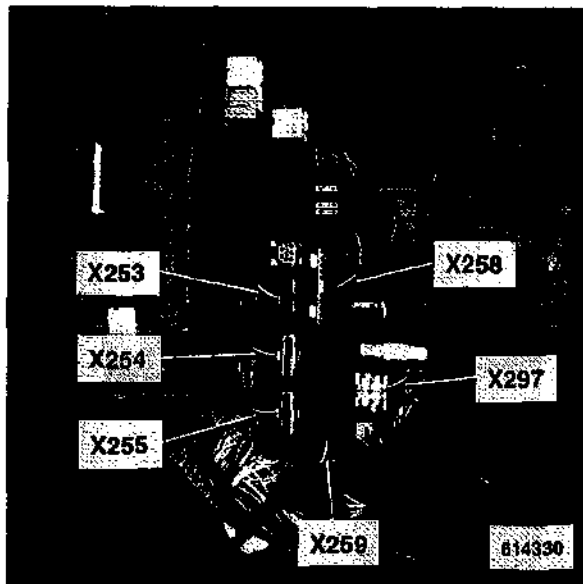

**Figure 1- Below LH Side Of Rear Seat
(Modules Removed)**

- X253 Connector (26 pins) GN**
- X254 Connector (26 pins) WS**
- X255 Connector (26 pins) GE**
- X258 Connector (20 pins) WS**
- X259 Connector (20 pins) SW**
- X297 Connector (9 pins) WS**

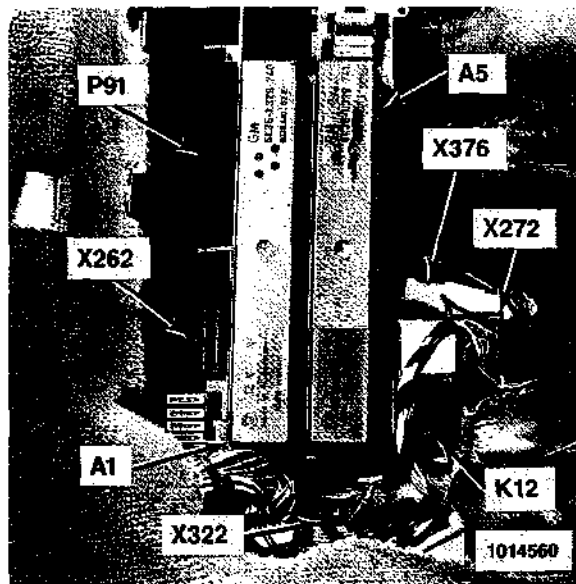


Figure 2- Below LH Side Of Rear Seat

- A1 General Module**
- A5 Relay Module**
- K12 Wiper Pressure Control (ADV) Relay**
- P91 Rear Power Distribution Box**
- X262 Connector (26 pins) BL**
- X272 Connector (12 pins) SW**
- X322 Connector (6 pins) SW**
- X376 Connector (2 pins) WS**


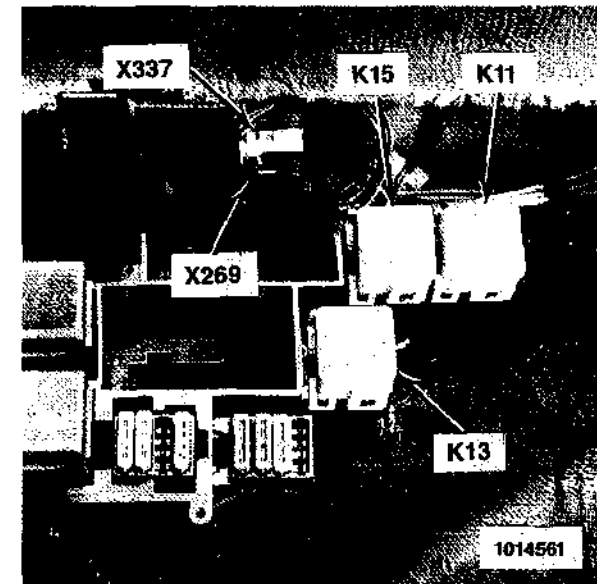


Figure 3- Below LH Side Of Rear Seat

- K11 Wiper Relay**
- K13 Rear Defogger Relay**
- K15 Electric Power Protection Relay**
- X269 Connector (6 pins) SW**
- X337 Connector (4 pin) WS**

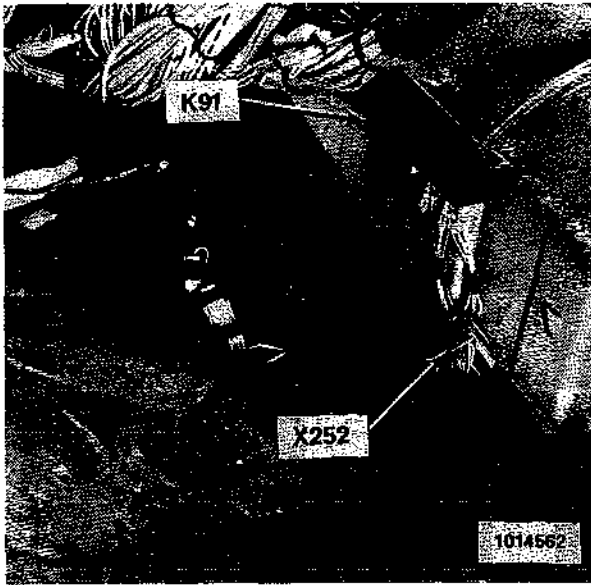

**Figure 1- Below LH Side Of Rear Seat
(Rear Power Distribution Box
Removed)**

K91 On-Board Computer Horn Relay
X252 Connector (26 pins) GN

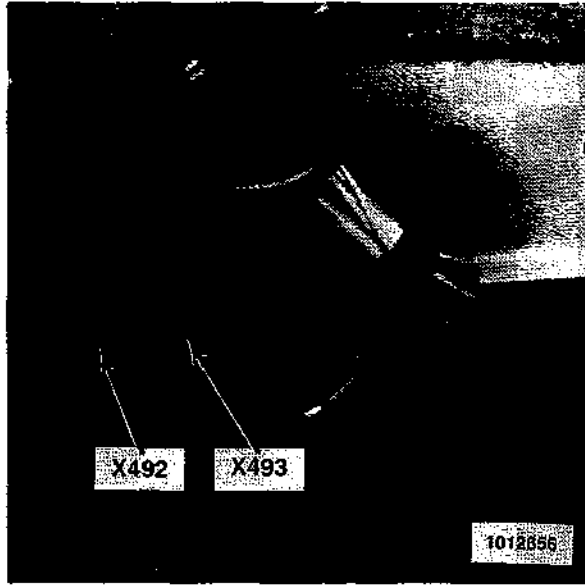


Figure 2- Below LH Side Of Rear Seat

X492 Ground
X493 Ground

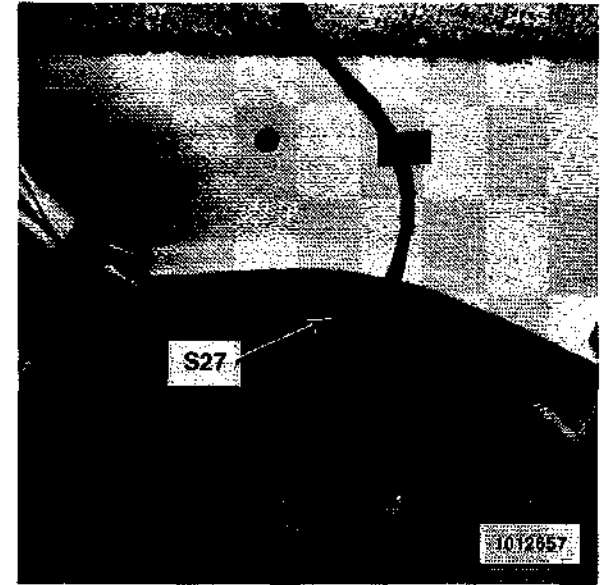


Figure 3- Below LH Side Of Rear Seat

S27 Inertia Switch

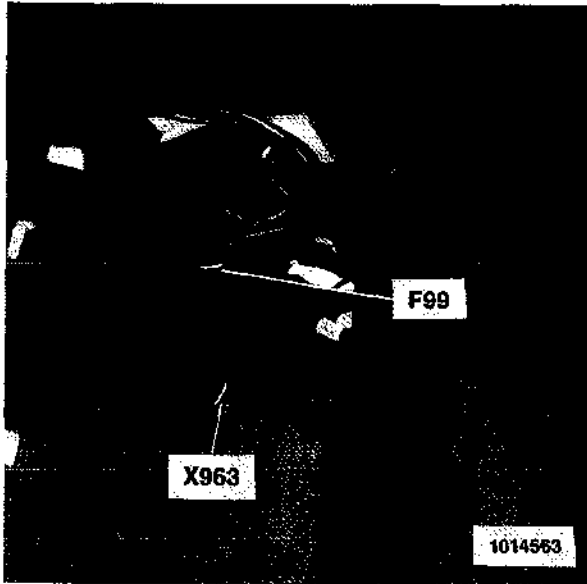


Figure 1- Below RH Side Of Rear Seat (525i)

F99 Fusible Link 50A
X963 B+ Junction Post

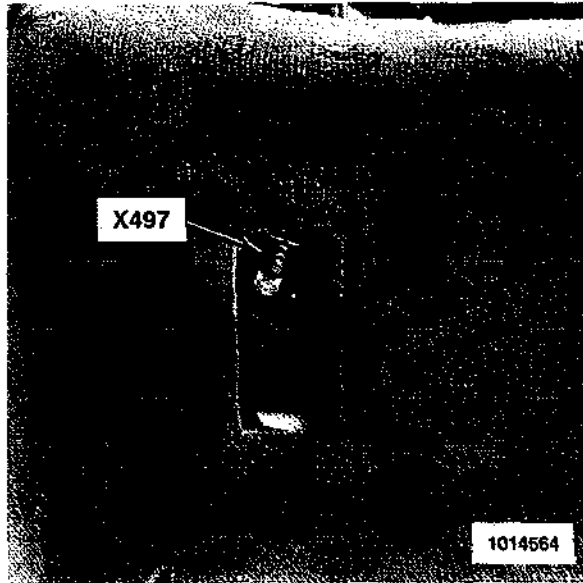


Figure 2- Ahead Of RH Side Of Rear Seat

X497 Ground (Battery)


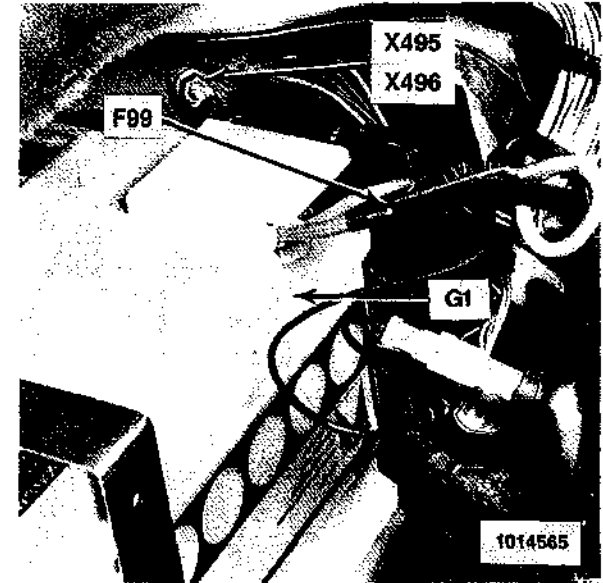



Figure 3- Below RH Side Of Rear Seat (535i Shown; 525i And M5 Similar)

F99 Fusible Link
G1 Battery
X495 Ground
X496 Ground

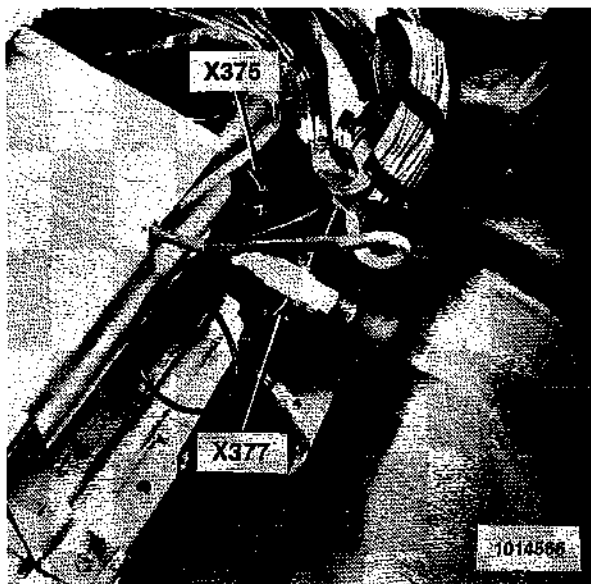


**Figure 1- Below RH Side Of Rear Seat
(535i Shown; 525i And M5
Similar)**

**X375 Connector (3 pins) SW
X377 Connector (2 pins) WS**

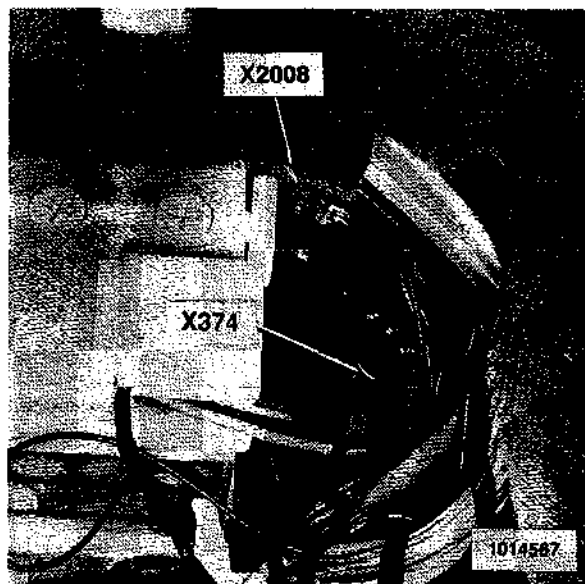

**Figure 2- Below RH Side Of Rear Seat
(535i Shown; 525i And M5
Similar)**

**X374 Connector (3 pins) SW
X2008 Ground**

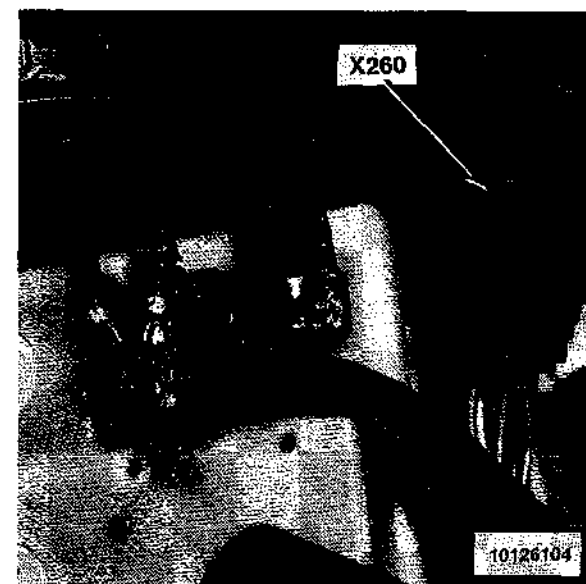

**Figure 3- Below RH Side Of Rear Seat
(535i Shown; 525i And M5
Similar)**

X260 Connector (21 pins) SW

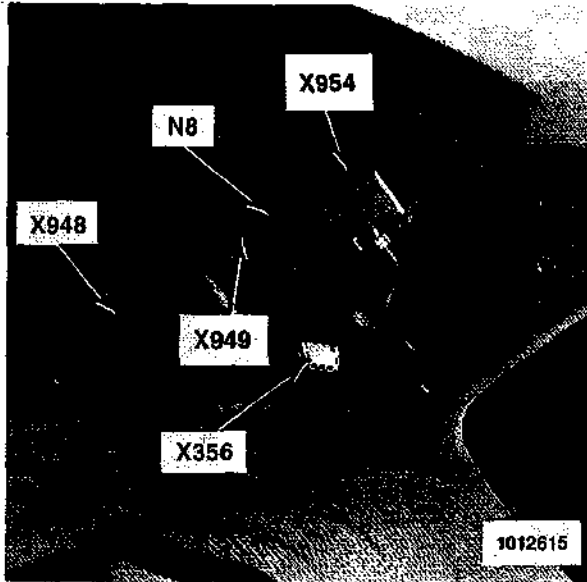


Figure 1- LH "C" Pillar (IHKR)

- N8** Antenna Amplifier
- X356** Connector (3 pins) WS
- X948** Connector (1 pin) SW
- X949** Connector (1 pin) SW
- X954** Connector (1 pin) SW

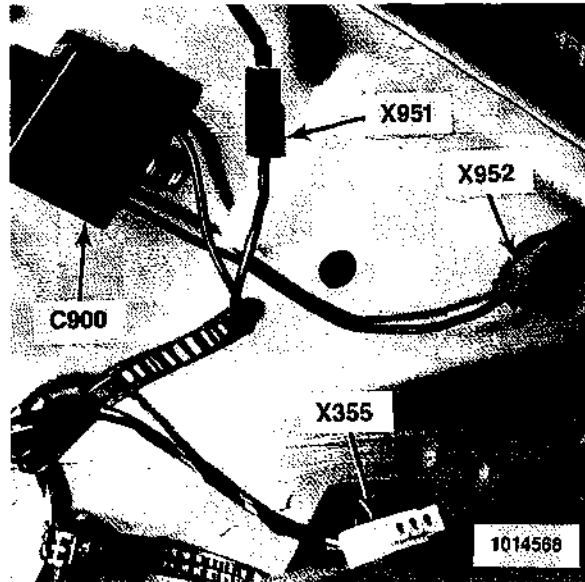


Figure 2- RH "C" Pillar (IHKR)

- C900** Defogger Coupler
- X355** Connector (3 pins) WS
- X951** Connector (1 pin) SW
- X952** Connector (1 pin) SW

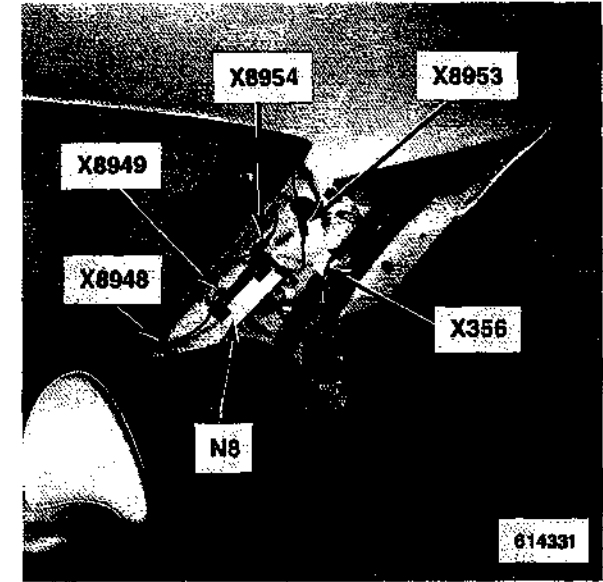


Figure 3- LH "C" Pillar (IHKR 2)

- N8** Antenna Amplifier
- X356** Connector (3 pins) WS
- X8948** Connector (1 pin) SW
- X8949** Connector (1 pin) SW
- X8953** Connector (1 pin) SW
- X8954** Connector (1 pin) SW

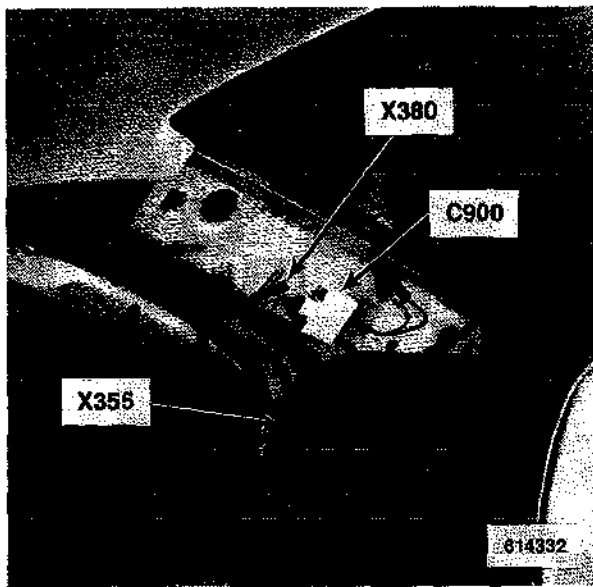


Figure 1- RH "C" Pillar (IHKR 2)

- C900 Defogger Coupler**
- X355 Connector (3 pins) WS**
- X380 Connector (1 pin) SW**

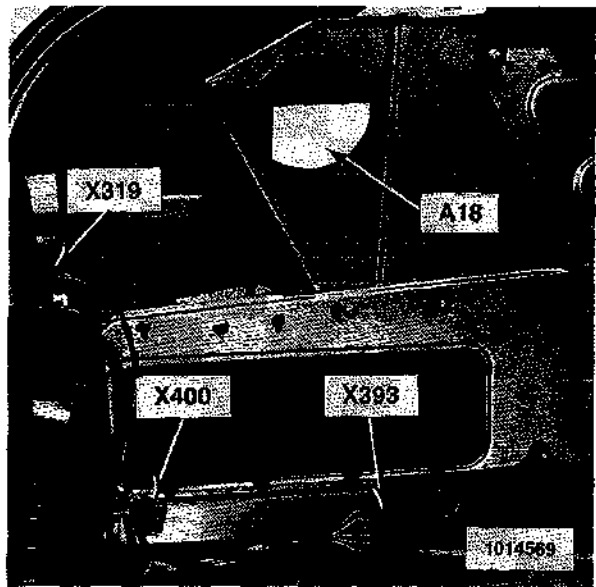


Figure 2- LH Side Of Trunk (525i/535i)

- A18 HIFI Amplifier**
- X319 Connector (4 pins) SW**
- X393 Connector (6 pins) SW**
- X400 Connector (4 pins) SW**

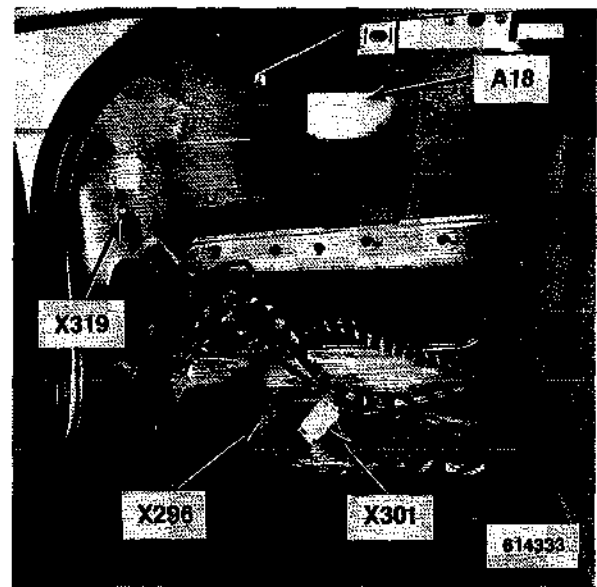


Figure 3- LH Side Of Trunk (M5)

- A18 HIFI Amplifier**
- X296 Connector (6 pins) WS**
- X301 Connector (26 pins) GN**
- X319 Connector (4 pins) SW**

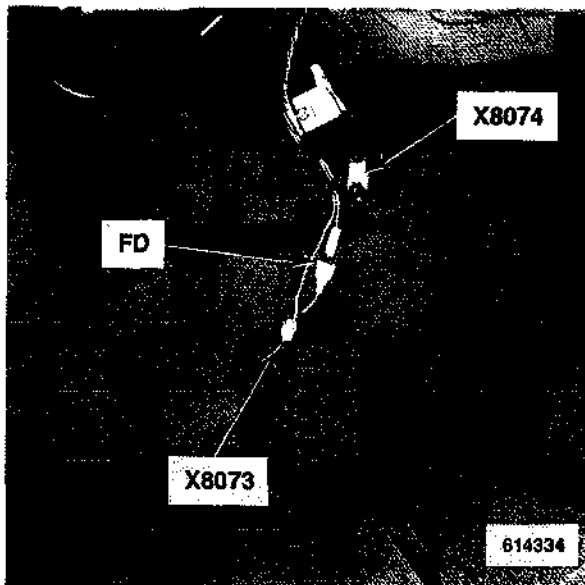


Figure 1- LH Front Of Trunk

- FD Fuse 3A**
- X8073 Connector (3 pins) WS**
- X8074 Connector (12 pins) BL**

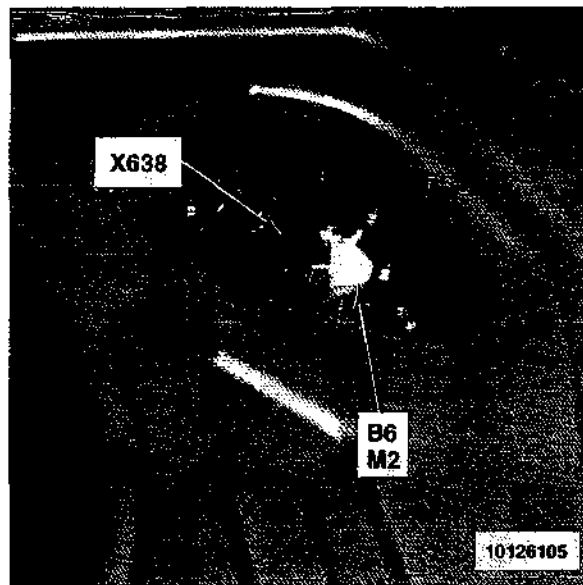


Figure 2- RH Side Of Trunk, Below Maintenance Cover

- B6 Fuel Tank Sensor**
- M2 Fuel Pump**
- X638 Connector (6 pins) SW**

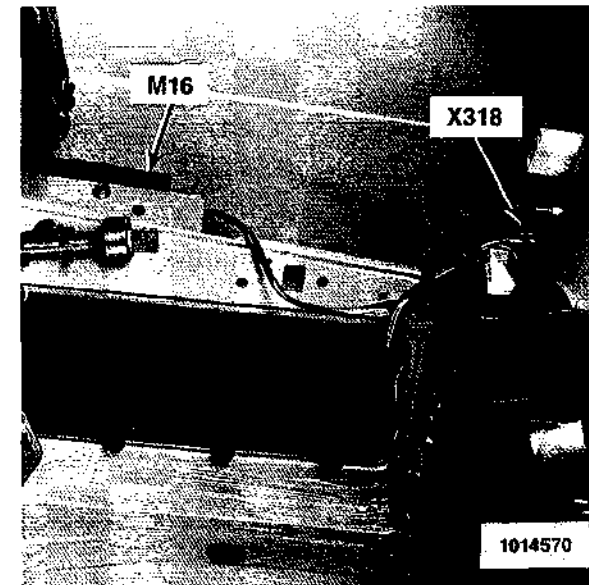


Figure 3- RH Side Of Trunk

- M16 Gas Filler Lock Motor**
- X318 Connector (4 pins) SW**

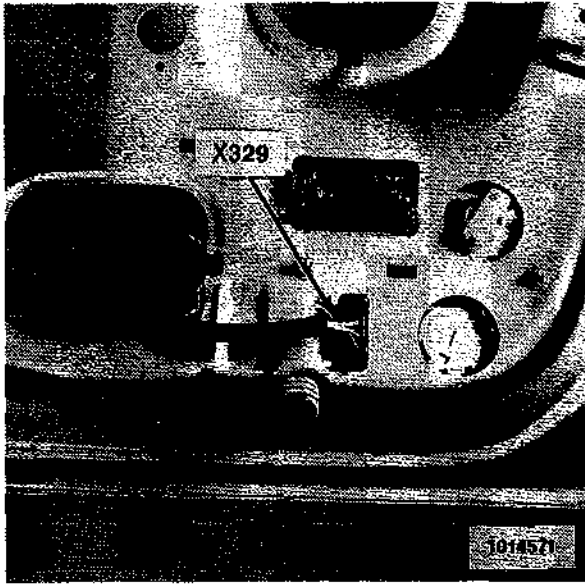


Figure 1- LH Rear Of Trunk Lid
X329 Connector (4 pins) SW

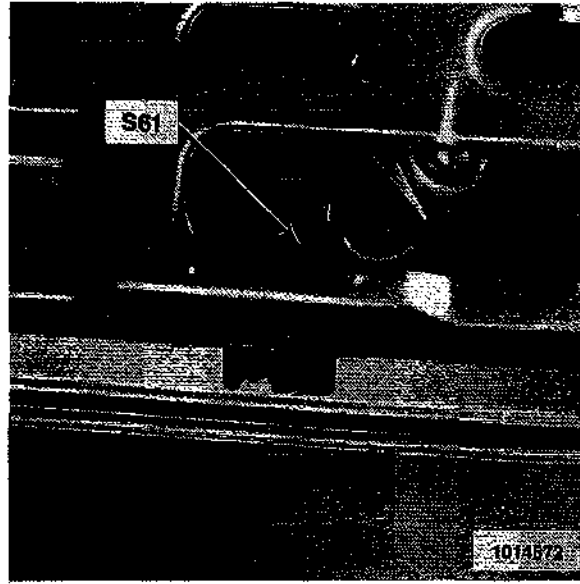


Figure 2- Center Rear Of Trunk Lid
S61 Trunk Lid Switch

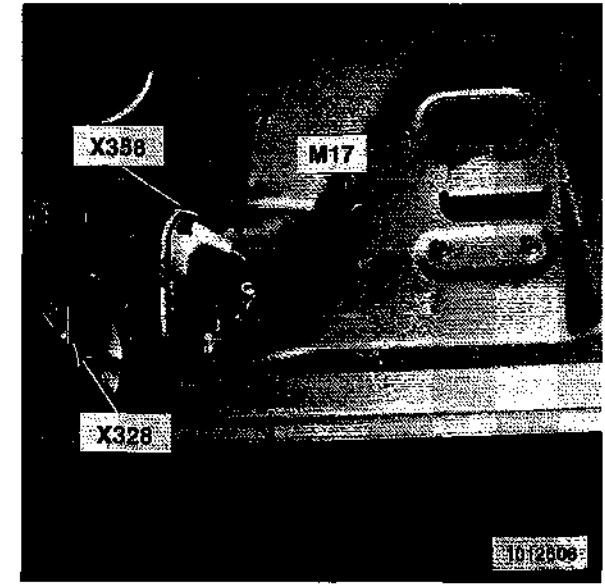


Figure 3- RH Rear Of Trunk Lid
M17 Trunk Lock Motor
X328 Connector (4 pins) SW
X358 Connector (3 pins) SW



SPLICE LOCATION VIEWS


INDEX

This index contains all the splices in the car, what harness each one is in, and the page that the splices appear on. The drawings after the index show how the harness is routed through the car and where the splices are located on the harness.

Splice	Harness	Page	Splice	Harness	Page
X181-X246	Front	8000.0-01	X1047	Front	8000.0-01
X433-X479	Rear	8000.0-06	X1159	Front	8000.0-01
X557-X584	Instrument	8000.0-05	X1202	Front	8000.0-01
X831	Sunroof	Not shown	X1224	Rear	8000.0-06
X833	Rear	8000.0-06	X1226	Rear	8000.0-06
X834	LH Rear Door	Not shown	X1228	Rear	8000.0-06
X835	RH Rear Door	Not shown	X1456	Rear	8000.0-06
X836	Driver's Seat	Not shown	X1902-X1955	M20 Engine	8000.0-03
X839-X843	Driver's Seat	Not shown	X1902-X1955	M30 Engine	8000.0-02
X844-X847	Passenger's Seat	Not shown	X1902-X1955	S38 Engine	8000.0-04
X848-X851	Driver's Door	Not shown	X2010	AEGS	Not shown
X852-X860	IHKR	Not shown	X9465	Rear	8000.0-06
X863	Passenger's Door	Not shown	X9505	Front	8000.0-01
X900	Driver's Door	Not shown	X9506	Front	8000.0-01
X906	Park Ventilation	Not shown	X9512	Park Ventilation	Not shown
X994	Front	8000.0-01	X9513	S38 Engine	8000.0-04
X1022	Front	8000.0-01	X9525	S38 Engine	8000.0-04
X1023	Front	8000.0-01	X9572	S38 Engine	8000.0-04
X1029	Front	8000.0-01	X9574	S38 Engine	8000.0-04
X1043	Front	8000.0-01	X18158-X18164	IHKR 2	Not shown
X1044	IHKR	Not shown			



SPLICE LOCATION VIEWS

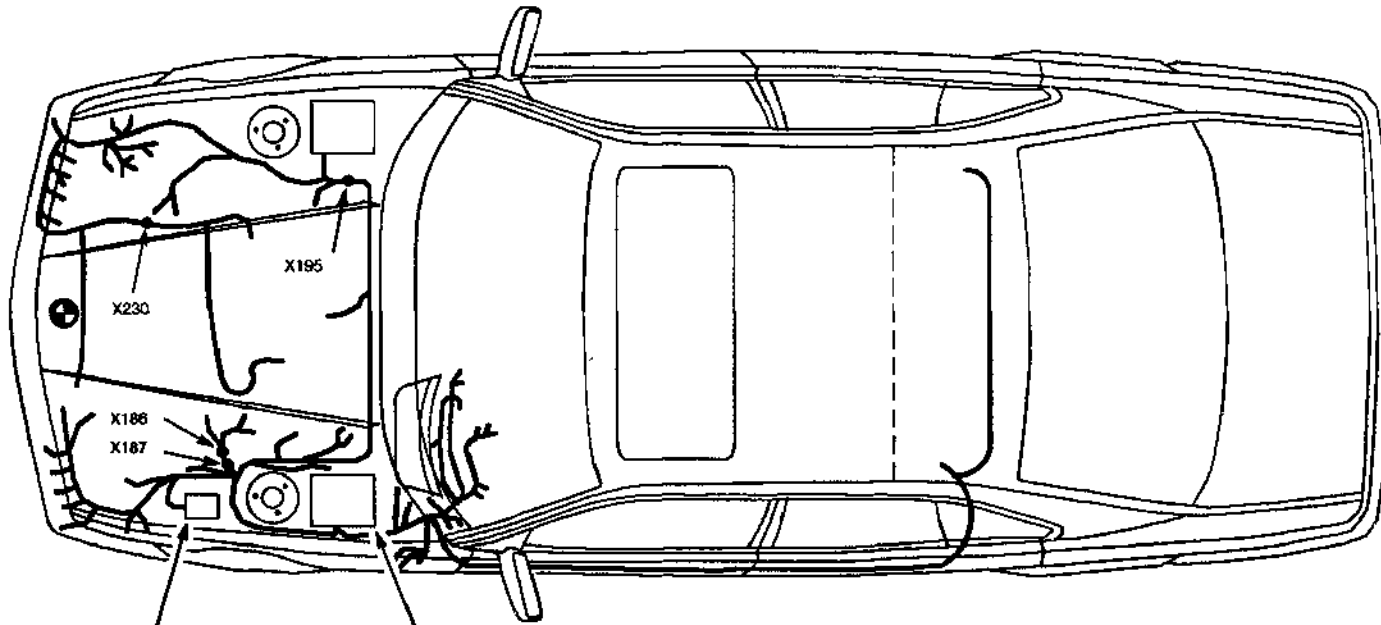

- X186 ●
- X202 ●


X161 ●	X165 ●	X206 ●	X223 ●	X1022 ●
X182 ●	X166 ●	X207 ●	X225 ●	X1023 ●
X183 ●	X167 ●	X208 ●	X226 ●	X1029 ●
X184 ●	X168 ●	X209 ●	X227 ●	X1043 ●
X185 ●	X169 ●	X212 ●	X228 ●	X1047 ●
X186 ●	X200 ●	X213 ●	X241 ●	X1159 ●
X190 ●	X201 ●	X214 ●	X245 ●	X1202 ●
X191 ●	X203 ●	X215 ●	X246 ●	X9505 ●
X192 ●	X204 ●	X217 ●	X249 ●	X9506 ●
X193 ●	X205 ●	X222 ●	X288 ●	



SPLICE LOCATION VIEWS

M30 ENGINE HARNESS

535i

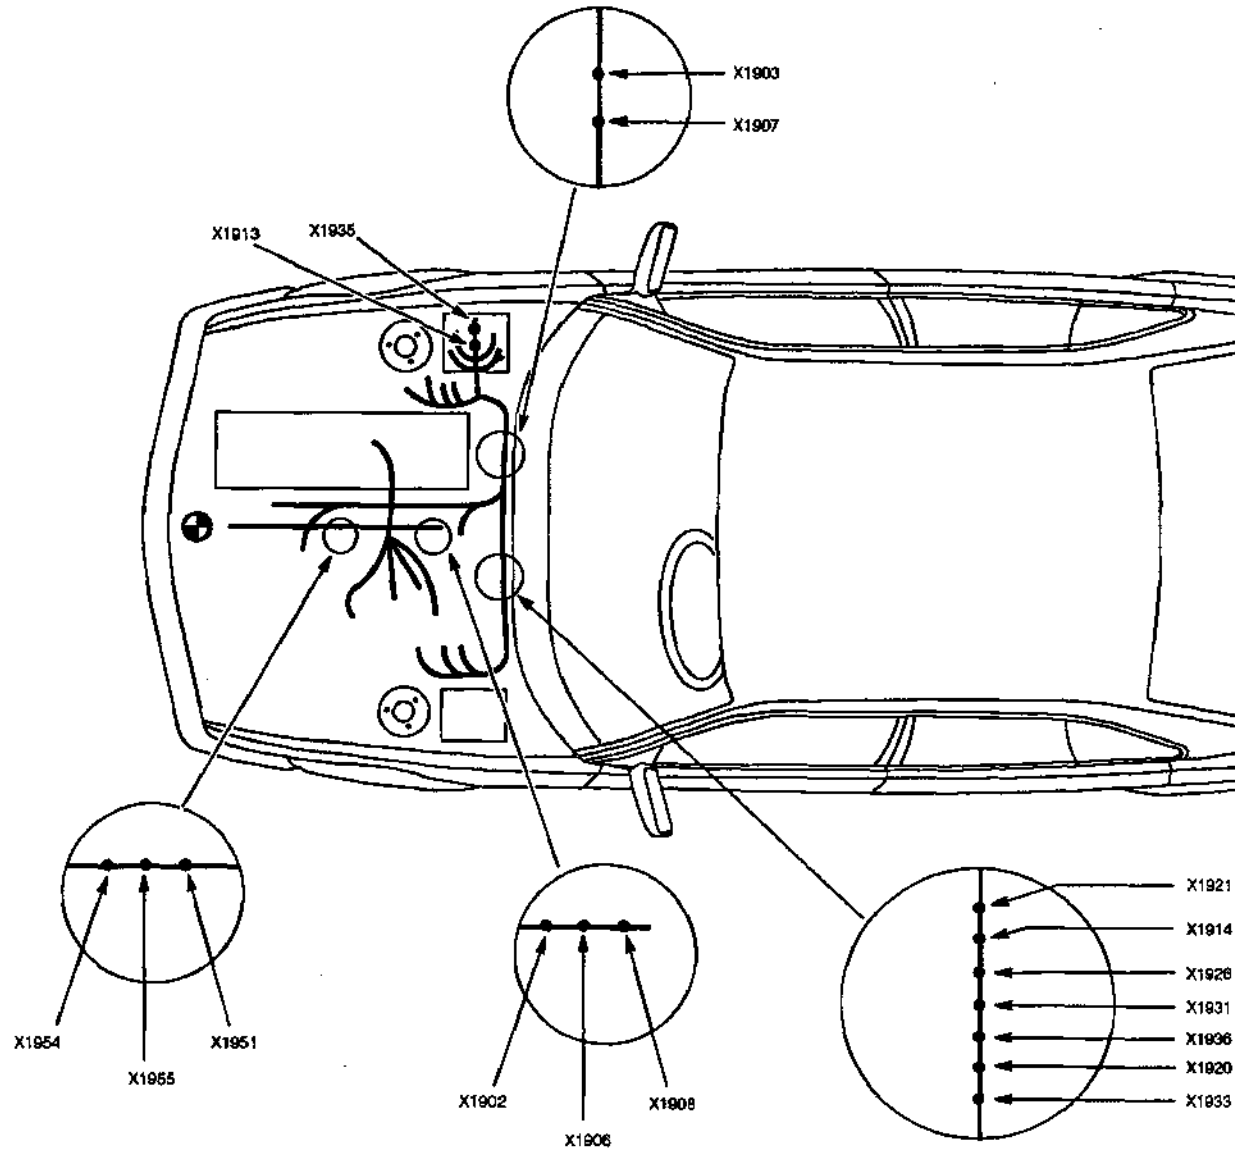




SPLICE LOCATION VIEWS

M20 ENGINE HARNESS (525i)


525i

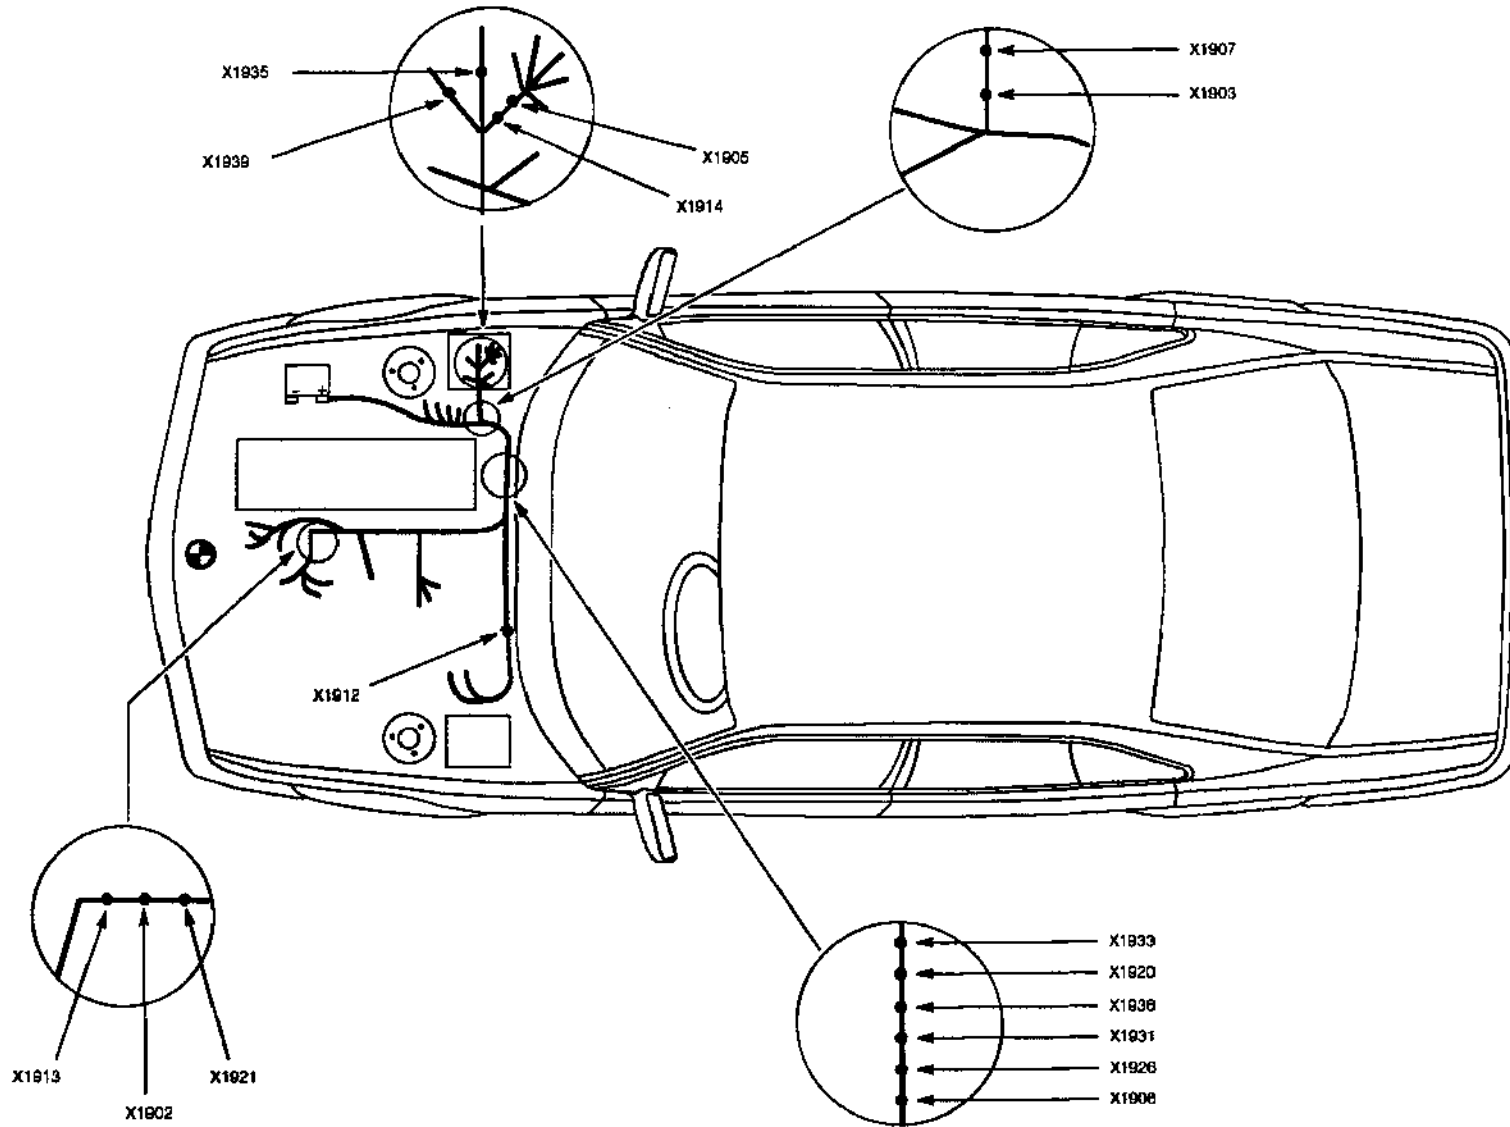



SPLICE LOCATION VIEWS
M5 ENGINE HARNESS


M5

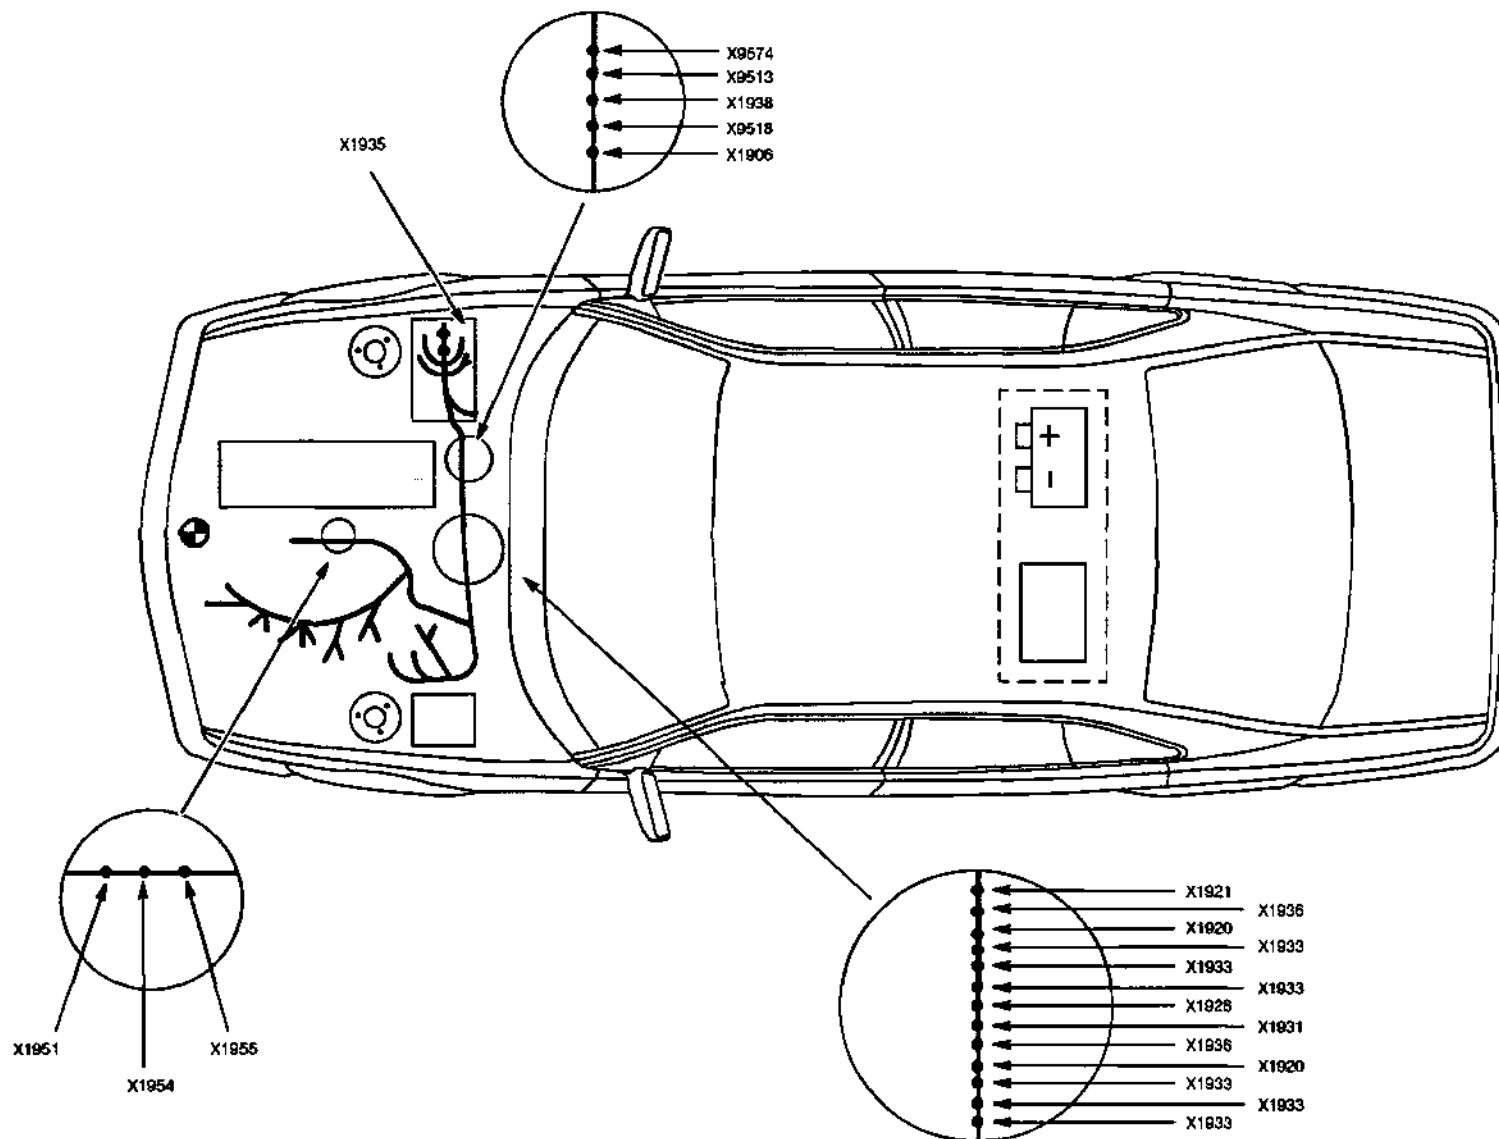



SPLICE LOCATION VIEWS


INSTRUMENT HARNESS

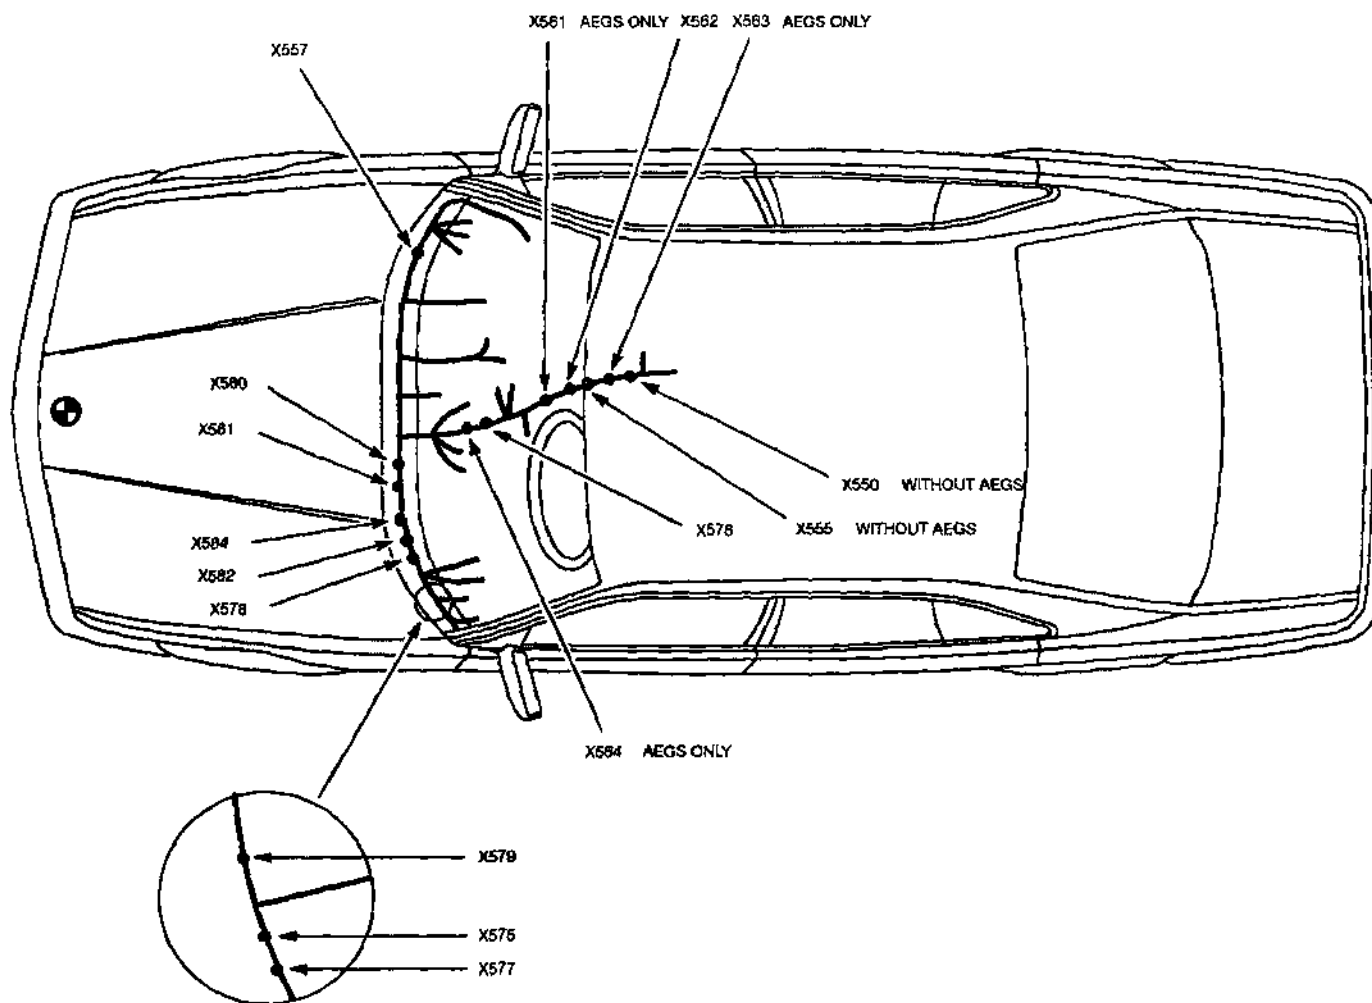



SPLICE LOCATION VIEWS

REAR HARNESS

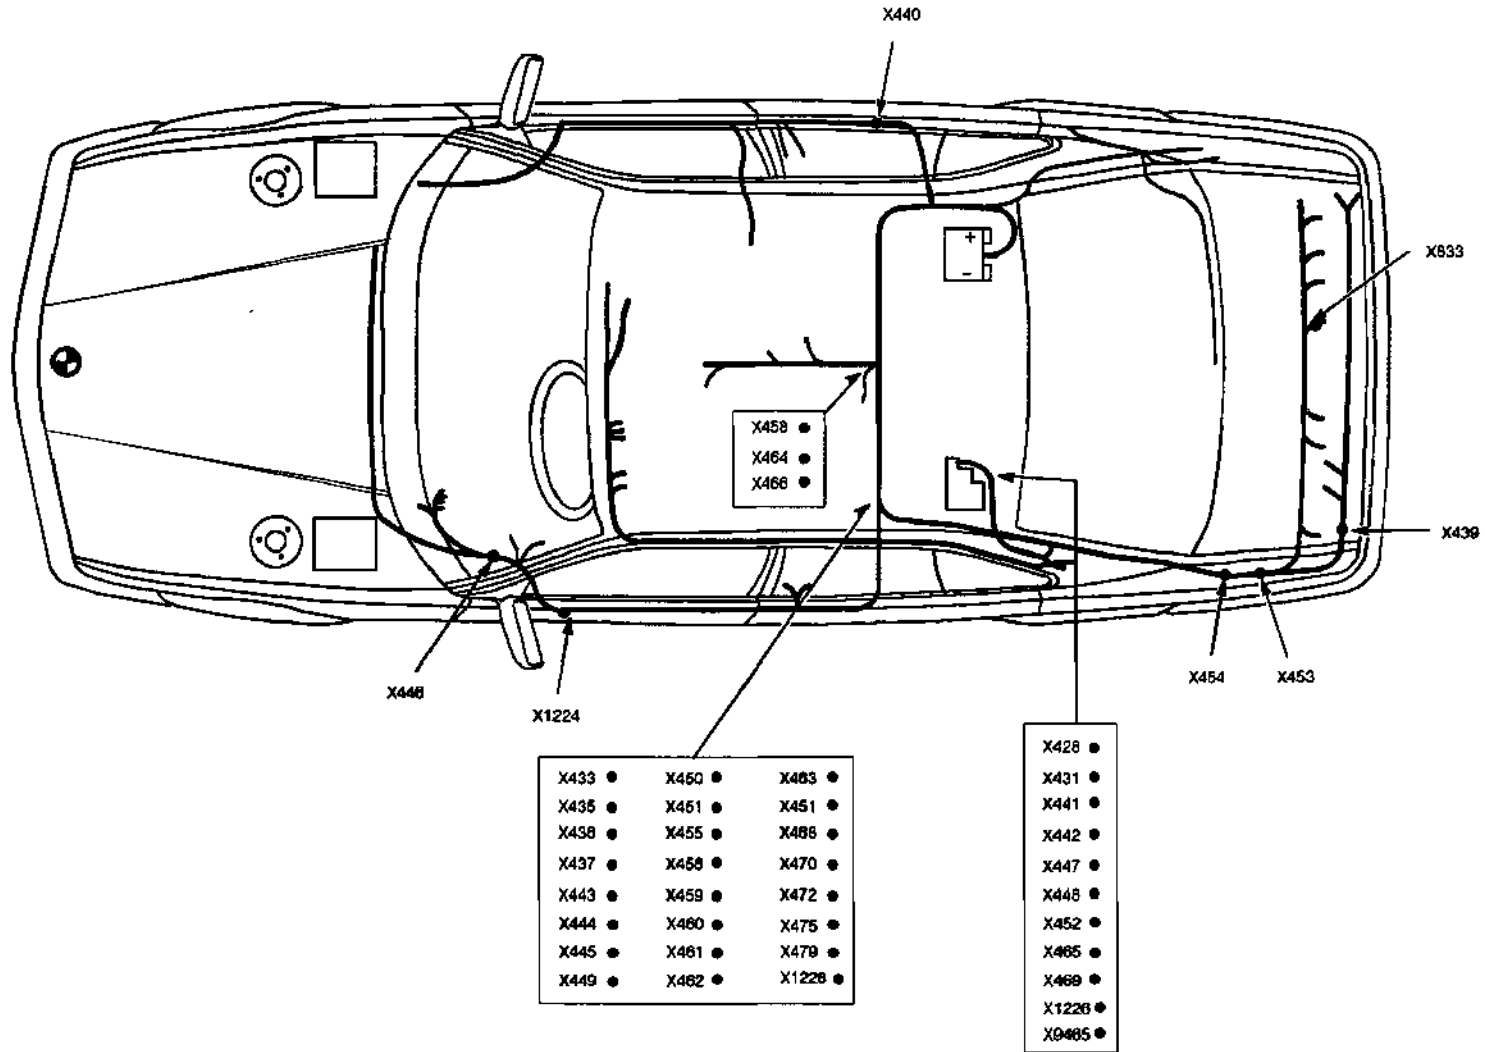



Connector Views Chart

Connector		Page - Fig.	Connector		Page - Fig.
X11	Connector (35-Pins, Natural)	8500.0-00-3	X61	Connector (9-Pins, Black)	8500.0-02-3
X12	Connector (35-Pins, Black)	8500.0-00-2	X62	Connector (9-Pins, White)	8500.0-02-3
X13	Connector (21-Pins, White)	8500.0-01-3	X63	Connector (9-Pins, White)	8500.0-02-3
X14	Connector (30-Pins, Yellow)	8500.0-00-4	X64	Connector (9-Pins, Black)	8500.0-02-3
X15	Connector (30-Pins, White)	8500.0-00-4	X69	Connector (8-Pins, White)	8500.0-03-1
X16	Connector (26-Pins, Beige)	8500.0-01-1	X70	Connector (8-Pins, Black)	8500.0-03-2
X17	Connector (24-Pins, Brown)	8500.0-01-4	X71	Connector (8-Pins, Black)	8500.0-03-2
X18	Connector (26-Pins, Blue)	8500.0-01-1	X72	Connector (8-Pins, White)	8500.0-03-1
X19	Connector (26-Pins, Green)	8500.0-01-1	X73	Connector (8-Pins, Black)	8500.0-03-1
X20	Connector (20-Pins, Black)	8500.0-01-2	X74	Connector (8-Pins, Orange)	8500.0-03-1
X21	Connector (20-Pins, Black)	8500.0-01-5	X75	Connector (6-Pins, Orange)	8500.0-04-1
X22	Connector (26-Pins, Blue)	8500.0-01-1	X76	Connector (6-Pins, Black)	8500.0-04-1
X31	Connector (12-Pins, Black)	8500.0-01-6	X79	Connector (4-Pins, White)	8500.0-06-5
X32	Connector (12-Pins, White)	8500.0-02-1	X81	Connector (3-Pins, Orange)	8500.0-04-4
X33	Connector (12-Pins, Black)	8500.0-02-1	X82	Connector (3-Pins, Black)	8500.0-04-2
X34	Connector (21-Pins, White)	8500.0-01-3	X83	Connector (3-Pins, Yellow)	8500.0-04-5
X35	Connector (21-Pins, Black)	8500.0-01-3	X84	Connector (3-Pins, Yellow)	8500.0-04-3
X48	Connector (9-Pins, White)	8500.0-02-3	X85	Connector (3-Pins, Black)	8500.0-04-2
X49	Connector (9-Pins, White)	8500.0-02-3	X86	Connector (3-Pins, Orange)	8500.0-04-4
X50	Connector (9-Pins, White)	8500.0-02-3	X87	Connector (3-Pins, Black)	8500.0-04-4
X51	Connector (9-Pins, Black)	8500.0-02-3	X88	Connector (3-Pins, Black)	8500.0-03-3
X52	Connector (9-Pins, White)	8500.0-02-3	X89	Connector (3-Pins, Black)	8500.0-03-6
X53	Connector (9-Pins, White)	8500.0-02-3	X90	Connector (3-Pins, Black)	8500.0-03-6
X54	Connector (9-Pins, Black)	8500.0-02-3	X93	Connector (3-Pins, Black)	8500.0-03-6
X55	Connector (9-Pins, White)	8500.0-02-3	X94	Connector (3-Pins, Black)	8500.0-03-6
X56	Connector (9-Pins, White)	8500.0-02-3	X116	Connector (4-Pins, Black)	8500.0-06-5
X57	Connector (9-Pins, White)	8500.0-02-3	X163	Connector (3-Pins, Black)	8500.0-04-2
X58	Connector (9-Pins, White)	8500.0-02-3	X251	Connector (30-Pins, Black)	8500.0-00-4
X59	Connector (9-Pins, White)	8500.0-02-3	X252	Connector (26-Pins, Green)	8500.0-01-1



Connector Views Chart

Connector		Page - Fig.	Connector		Page - Fig.
X253	Connector (26-Pins, Green)	8500.0-01-1	X296	Connector (6-Pins, White)	8500.0-04-1
X254	Connector (26-Pins, White)	8500.0-01-1	X297	Connector (9-Pins, White)	8500.0-02-3
X255	Connector (26-Pins, Yellow)	8500.0-01-1	X311	Connector (6-Pins, Black)	8500.0-08-3
X256	Connector (26-Pins, Black)	8500.0-13-1	X299	Connector (6-Pins, White)	8500.0-04-1
X257	Connector (26-Pins, Black)	8500.0-13-1	X301	Connector (26-Pins, Green)	8500.0-01-1
X258	Connector (20-Pins, Black)	8500.0-08-4	X312	Connector (6-Pins, Black)	8500.0-08-3
X259	Connector (20-Pins, White)	8500.0-08-4	X316	Connector (6-Pins, White)	8500.0-05-4
X260	Connector (21-Pins, Black)	8500.0-01-3	X317	Connector (6-Pins, Black)	8500.0-05-4
X262	Connector (26-Pins, Blue)	8500.0-01-1	X318	Connector (4-Pins, Black)	8500.0-06-5
X263	Connector (26-Pins, Green)	8500.0-01-1	X319	Connector (4-Pins, Black)	8500.0-06-5
X269	Connector (6-Pins, Black)	8500.0-04-1	X322	Connector (6-Pins, Black)	8500.0-04-1
X270	Connector (12-Pins, Black)	8500.0-08-5	X323	Connector (6-Pins, Black)	8500.0-06-1
X271	Connector (12-Pins, Grey)	8500.0-08-2	X328	Connector (4-Pins, Black)	8500.0-06-5
X272	Connector (12-Pins, Black)	8500.0-02-1	X329	Connector (4-Pins, Black)	8500.0-06-5
X273	Connector (12-Pins, Gray)	8500.0-02-2	X331	Connector (5-Pins, Green)	8500.0-02-4
X274	Connector (12-Pins, Gray)	8500.0-02-2	X332	Connector (5-Pins, White)	8500.0-05-2
X275	Connector (12-Pins, White)	8500.0-02-1	X333	Connector (4-Pins, Black)	8500.0-08-6
X277	Connector (10-Pins, Blue)	8500.0-02-2	X334	Connector (4-Pins, White)	8500.0-08-6
X278	Connector (10-Pins, Blue)	8500.0-02-2	X335	Connector (4-Pins, Green)	8500.0-02-6
X279	Connector (12-Pins, White)	8500.0-02-1	X336	Connector (4-Pins, White)	8500.0-06-5
X290	Connector (9-Pins, Black)	8500.0-02-3	X337	Connector (4-Pins, White)	8500.0-06-5
X291	Connector (9-Pins, Black)	8500.0-02-3	X338	Connector (4-Pins, Black)	8500.0-06-3
X292	Connector (9-Pins, White)	8500.0-02-3	X339	Connector (4-Pins, Black)	8500.0-06-3
X293	Connector (9-Pins, White)	8500.0-02-3	X342	Connector (4-Pins, White)	8500.0-06-5
X294	Connector (9-Pins, White)	8500.0-02-3	X355	Connector (3-Pins, White)	8500.0-05-5
X295	Connector (8-Pins, Black)	8500.0-03-1	X356	Connector (3-Pins, White)	8500.0-05-5



Connector Views Chart

Connector		Page - Fig.	Connector		Page - Fig.
X358	Connector (3-Pins, Black)	8500.0-03-3	X604	Connector (12-Pins, Black)	8500.0-06-6
X360	Connector (3-Pins, Natural)	8500.0-05-3	X605	Connector (12-Pins, Black)	8500.0-02-1
X393	Connector (6-Pins, Black)	8500.0-04-1	X606	Connector (12-Pins, White)	8500.0-02-1
X400	Connector (3-Pins, Black)	8500.0-03-3	X607	Connector (12-Pins, Black)	8500.0-08-5
X501	Connector (26-Pins, Green)	8500.0-01-1	X608	Connector (12-Pins, Black)	8500.0-07-2
X502	Connector (26-Pins, White)	8500.0-01-1	X609	Connector (15-Pins, Black)	8500.0-12-2
X503	Connector (12-Pins, Black)	8500.0-05-6	X610	Connector (26-Pins, White)	8500.0-01-1
X504	Connector (12-Pins, Black)	8500.0-05-6	X611	Connector (26-Pins, Green)	8500.0-01-1
X506	Connector (12-Pins, Black)	8500.0-02-1	X612	Connector (26-Pins, Blue)	8500.0-01-1
X509	Connector (9-Pins, Black)	8500.0-02-3	X613	Connector (26-Pins, Blue)	8500.0-01-1
X510	Connector (9-Pins, Black)	8500.0-02-3	X614	Connector (26-Pins, Yellow)	8500.0-01-1
X511	Connector (8-Pins, Black)	8500.0-03-1	X620	Connector (9-Pins, White)	8500.0-02-3
X512	Connector (8-Pins, Black)	8500.0-03-1	X621	Connector (10-Pins, Black)	8500.0-07-1
X514	Connector (6-Pins, Black)	8500.0-06-1	X622	Connector (10-Pins, Black)	8500.0-07-1
X516	Connector (5-Pins, Black)	8500.0-06-2	X623	Connector (4-Pins, Black)	8500.0-06-3
X517	Connector (4-Pins, Black)	8500.0-06-5	X624	Connector (4-Pins, Black)	8500.0-06-3
X518	Connector (4-Pins, Black)	8500.0-06-5	X625	Connector (6-Pins, Black)	8500.0-07-4
X519	Connector (4-Pins, White)	8500.0-06-5	X626	Connector (8-Pins, Black)	8500.0-03-1
X520	Connector (3-Pins, White)	8500.0-03-3	X627	Connector (8-Pins, Black)	8500.0-03-1
X521	Connector (6-Pins, Black)	8500.0-06-4	X628	Connector (3-Pins, Black)	8500.0-07-5
X522	Connector (3-Pins, White)	8500.0-05-5	X629	Connector (8-Pins, Natural)	8500.0-07-3
X523	Connector (6-Pins, Black)	8500.0-09-2	X630	Connector (13-Pins, Black)	8500.0-07-6
X524	Connector (4-Pins, Black)	8500.0-06-5	X631	Connector (9-Pins, White)	8500.0-02-3
X526	Connector (8-Pins, Black)	8500.0-03-1	X632	Connector (9-Pins, White)	8500.0-02-3
X529	Connector (6-Pins, Black)	8500.0-06-1	X633	Connector (8-Pins, Black)	8500.0-09-5
X601	Connector (26-Pins, White)	8500.0-01-1	X634	Connector (6-Pins, White)	8500.0-04-1
X602	Connector (26-Pins, Yellow)	8500.0-01-1			
X603	Connector (12-Pins, Black)	8500.0-06-6			



Connector Views Chart

Connector		Page - Fig.	Connector		Page - Fig.
X635	Connector (6-Pins, Black)	8500.0-04-1	X666	Connector (6-Pins, Black)	8500.0-10-4
X636	Connector (6-Pins, Black)	8500.0-08-3	X667	Connector (6-Pins, Black)	8500.0-10-4
X637	Connector (6-Pins, Black)	8500.0-08-3	X668	Connector (6-Pins, Black)	8500.0-10-4
X638	Connector (6-Pins, Black)	8500.0-09-4	X669	Connector (6-Pins, Black)	8500.0-10-4
X641	Connector (6-Pins, Black)	8500.0-09-4	X670	Connector (6-Pins, Black)	8500.0-10-4
X642	Connector (6-Pins, Black)	8500.0-09-3	X671	Connector (5-Pins, Green)	8500.0-02-4
X643	Connector (6-Pins, Blue)	8500.0-10-2	X672	Connector (4-Pins, Black)	8500.0-10-5
X644	Connector (6-Pins, Black)	8500.0-09-4	X673	Connector (4-Pins, Black)	8500.0-06-5
X645	Connector (6-Pins, Black)	8500.0-08-3	X674	Connector (4-Pins, Black)	8500.0-06-5
X646	Connector (6-Pins, Black)	8500.0-09-4	X677	Connector (9-Pins, Black)	8500.0-10-6
X647	Connector (6-Pins, Black)	8500.0-08-3	X681	Connector (3-Pins, White)	8500.0-03-3
X648	Connector (6-Pins, Black)	8500.0-08-3	X682	Connector (3-Pins, Natural)	8500.0-10-3
X649	Connector (6-Pins, White)	8500.0-08-3	X684	Connector (3-Pins, Black)	8500.0-04-2
X650	Connector (6-Pins, Black)	8500.0-08-3	X685	Connector (3-Pins, Black)	8500.0-04-2
X651	Connector (6-Pins, Black)	8500.0-08-3	X686	Connector (3-Pins, Blue)	8500.0-10-3
X652	Connector (6-Pins, Blue)	8500.0-08-3	X687	Connector (3-Pins, Blue)	8500.0-10-3
X653	Connector (6-Pins, Black)	8500.0-08-3	X688	Connector (3-Pins, Blue)	8500.0-10-3
X654	Connector (6-Pins, White)	8500.0-08-3	X689	Connector (3-Pins, Blue)	8500.0-10-3
X655	Connector (6-Pins, Blue)	8500.0-08-3	X690	Connector (3-Pins, Blue)	8500.0-10-3
X656	Connector (6-Pins, Green)	8500.0-08-3	X692	Connector (3-Pins, Black)	8500.0-03-3
X657	Connector (6-Pins, Brown)	8500.0-08-3	X693	Connector (3-Pins, Black)	8500.0-05-5
X658	Connector (6-Pins, Black)	8500.0-08-3	X694	Connector (3-Pins, Natural)	8500.0-10-3
X659	Connector (6-Pins, Blue)	8500.0-08-3	X695	Connector (3-Pins, Black)	8500.0-03-3
X661	Connector (6-Pins, Black)	8500.0-10-4	X696	Connector (3-Pins, Black)	8500.0-07-5
X662	Connector (6-Pins, Black)	8500.0-10-4	X881	Connector (6-Pins, White)	8500.0-08-3
X663	Connector (6-Pins, Black)	8500.0-10-4	X886	Connector (6-Pins, Black)	8500.0-08-3
X664	Connector (6-Pins, Black)	8500.0-10-4	X902	Connector (9-Pins, Black)	8500.0-10-6
X665	Connector (6-Pins, Black)	8500.0-10-4			



Connector Views Chart

Connector		Page - Fig	Connector		Page - Fig
X903	Connector (3-Pins, Natural)	8500 0-08-3	X2005	Connector (8-Pins, Black)	8500 0-11-1
X918	Connector (6-Pins, Black)	8500 0-08-3	X3500	Connector (3-Pins, White)	8500 0-03-3
X919	Connector (6-Pins, Black)	8500 0-08-3	X3502	Connector (3-Pins, White)	8500 0-03-3
X926	Connector (3-Pins, Natural)	8500 0-10-3	X3505	Connector (4-Pins, Black)	8500 0-06-5
X928	Connector (3-Pins, Black)	8500 0-04-2	X3506	Connector (21-Pins, White)	8500 0-01-3
X929	Connector (3-Pins, Black)	8500 0-04-2	X3510	Connector (3-Pins, Black)	8500 0-13-2
X941	Connector (9-Pins, White)	8500 0-02-3	X3511	Connector (3-Pins, Black)	8500 0-13-2
X1021	Connector (9-Pins, White)	8500 0-02-3	X3524	Connector (3-Pins, White)	8500 0-03-3
X1500	Connector (55-Pins, Natural)	8500 0-00-1	X8062	Connector (9-Pins, Gray)	8500 0-13-3
X1514	Connector (3-Pins, Black)	8500 0-03-5	X8063	Connector (9-Pins, Black)	8500 0-02-3
X1515	Connector (9-Pins, White)	8500 0-02-3	X8073	Connector (3-Pins)	Not shown
X1516	Connector (9-Pins, White)	8500 0-02-3	X8074	Connector (13-Pins)	Not shown
X1517	Connector (9-Pins, White)	8500 0-02-3	X8075	Connector (13-Pins)	Not shown
X1521	Connector (3-Pins, Black)	8500 0-03-5	X9269	Connector (26-Pins, White)	8500 0-01-1
X1522	Connector (3-Pins, Black)	8500 0-03-5	X9322	Connector (6-Pins, Black)	8500 0-04-1
X1523	Connector (4-Pins, Black)	8500 0-11-4	X9501	Connector (9-Pins, White)	8500 0-02-3
X1525	Connector (3-Pins, Black)	8500 0-03-5	X9522	Connector (5-Pins, Green)	8500 0-02-4
X1528	Connector (5-Pins, Black)	8500 0-11-2	X9504	Connector (4-Pins, Green)	8500 0-02-6
X1532	Connector (20-Pins, Black)	8500 0-11-5	X9550	Connector (6-Pins, Black)	8500 0-13-4
X1533	Connector (3-Pins, Black)	8500 0-03-5	X9557	Connector (5-Pins, Black)	8500 0-02-4
X1536	Connector (6-Pins, Black)	8500 0-11-3	X9558	Connector (4-Pins, Black)	8500 0-13-4
X1537	Connector (8-Pins, Black)	8500 0-03-1	X9569	Connector (9-Pins, White)	8500 0-02-3
X1550	Connector (35-Pins, Black)	8500 0-00-3	X9607	Connector (20-Pins, Black)	8500 0-08-4
X1552	Connector (4-Pins, Black)	8500 0-06-3	X18059	Connector (9-Pins, Black)	8500 0-02-3
X1554	Connector (8-Pins, Black)	8500 0-10-1	X18060	Connector (9-Pins, Black)	8500 0-02-3
X1563	Connector (7-Pins, Black)	8500 0-12-4	X18064	Connector (6-Pins, White)	8500 0-08-3
X2000	Connector (35-Pins, Natural)	8500 0-00-3	X18065	Connector (6-Pins, White)	8500 0-08-3
X2001	Connector (12-Pins, Black)	8500 0-02-1	X18069	Connector (6-Pins, Orange)	8500 0-04-1
X2003	Connector (6-Pins, Blue)	8500 0-08-3	X18130	Connector (4-Pins, Black)	8500 0-06-5
X2004	Connector (12-Pins, Black)	8500 0-07-2			



Connector Views Chart

Connector		Page - Fig.
X18151	Connector (12-Pins)	8500.0-08-2
X18154	Connector (18-Pins)	8500.0-12-3
X18155	Connector (26-Pins)	8500.0-12-4
X18156	Connector (26-Pins)	8500.0-12-4
X18157	Connector (26-Pins)	8500.0-12-4

CONNECTOR VIEWS

FIGURE 1

B550001.00

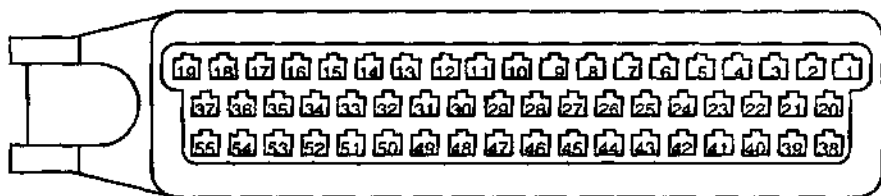


FIGURE 2

B350001.00

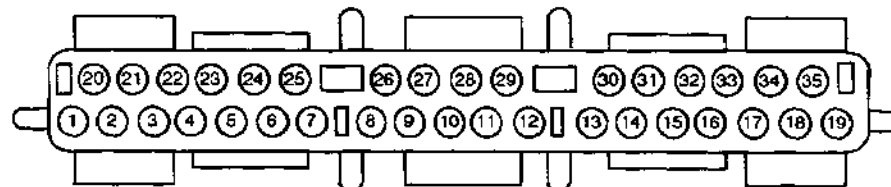


FIGURE 3

B350002.00

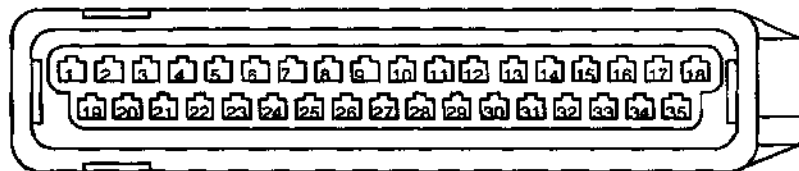


FIGURE 4

B300001.00

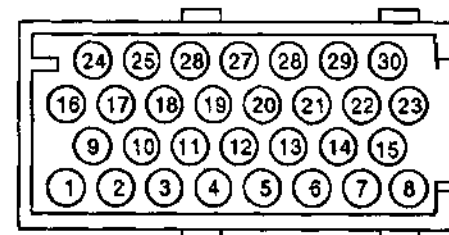


FIGURE 1

B260002.00

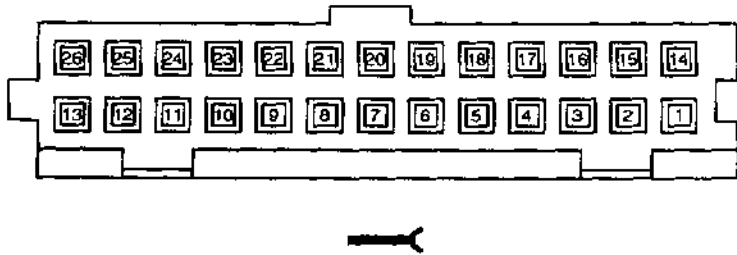


FIGURE 2

B200002.00

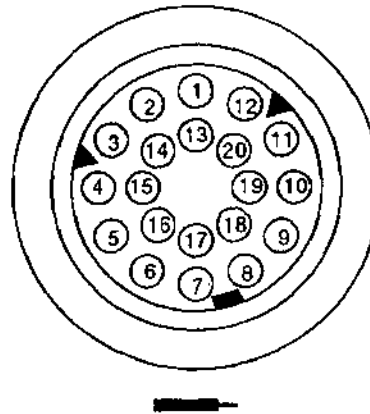


FIGURE 3

B210001.00

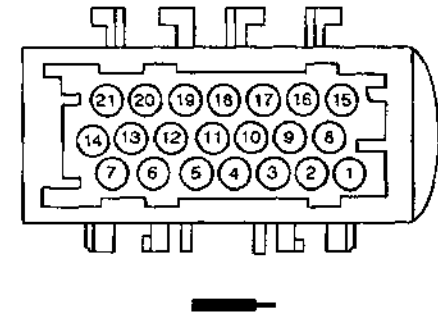


FIGURE 4

B240001.00

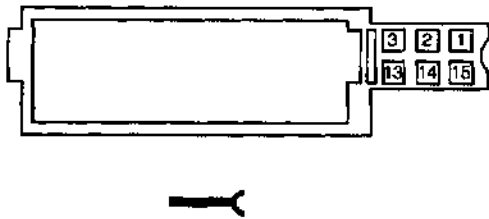


FIGURE 5

B200004.00

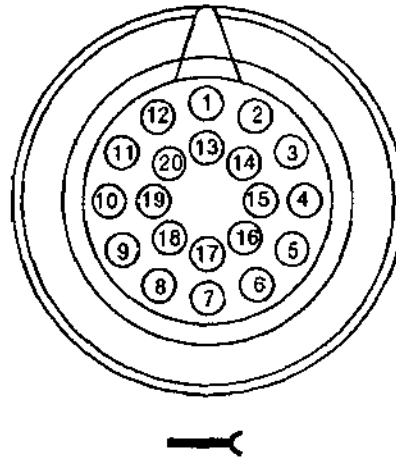


FIGURE 6

B120013.00

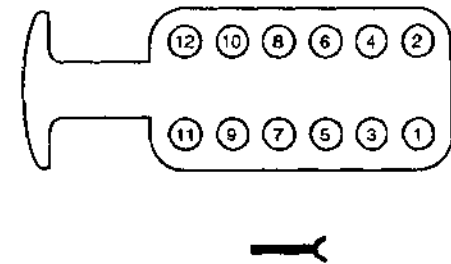


FIGURE 1

B120002.01


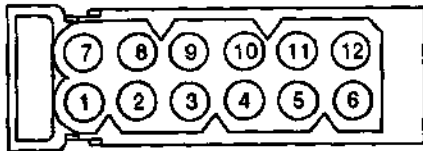


FIGURE 2

B120003.00

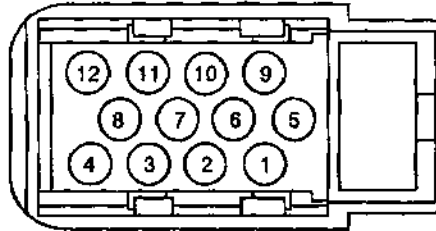

B100001.00

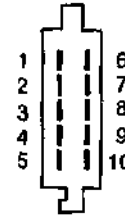


FIGURE 3

B090001.00

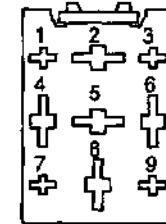


FIGURE 4

B050005.00


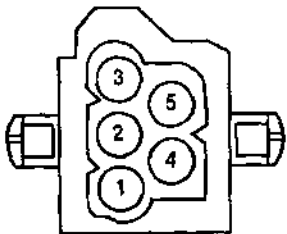


FIGURE 5

B120007.00

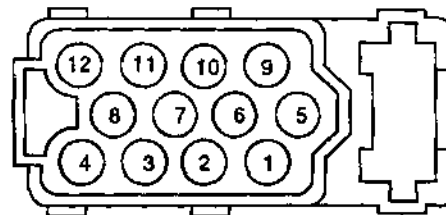

B100003.00

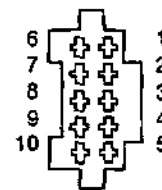


FIGURE 6

B040003.00

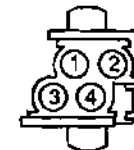


FIGURE 1

B080002.00

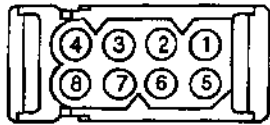


FIGURE 2

B080004.00

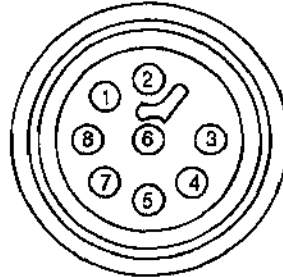


FIGURE 3

B030001.00

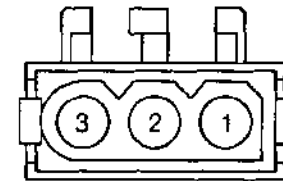


FIGURE 4

B080003.00

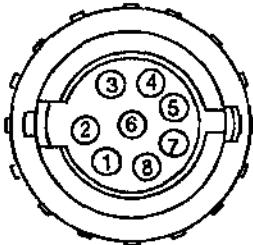


FIGURE 5

B030016.00


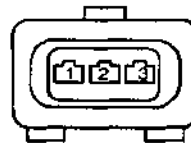


FIGURE 6

B030014.00

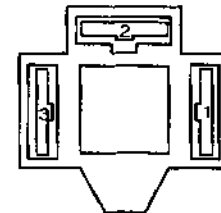

CONNECTOR VIEWS

FIGURE 1

B060017.00



FIGURE 2

B030004.00



FIGURE 3

B030013.00

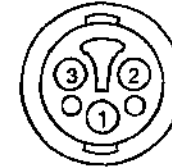


FIGURE 4

B030005.00

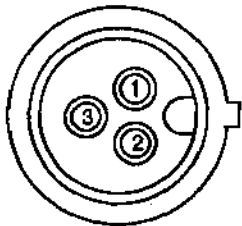


FIGURE 5

B030012.00



FIGURE 6

B030006.00





CONNECTOR VIEWS

FIGURE 1
B060004.00



FIGURE 2
B050005.00

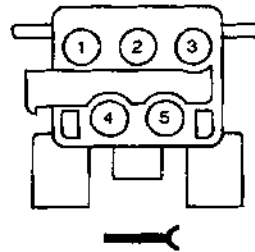


FIGURE 3
B0300010.00

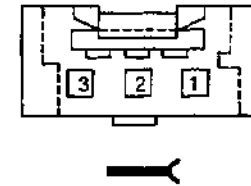


FIGURE 4
B060002.00


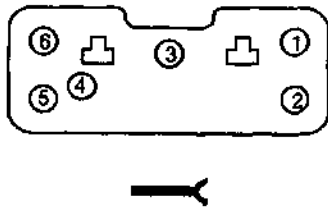


FIGURE 5
B030003.04



FIGURE 6
B120006.00



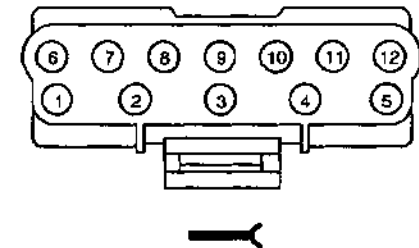

CONNECTOR VIEWS

FIGURE 1

B060006.00

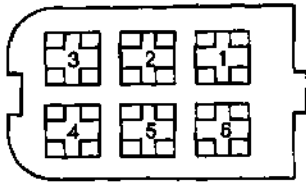


FIGURE 2

B060003.00



FIGURE 3

B040004.00

 


FIGURE 4

B060020.00

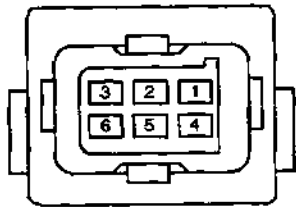


FIGURE 5

B040002.00


 


FIGURE 6

B120008.00

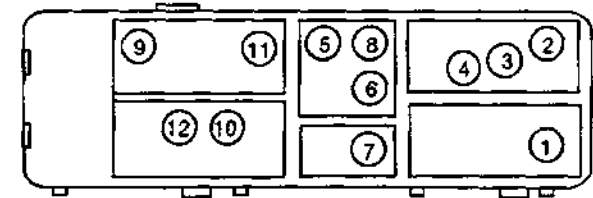

CONNECTOR VIEWS

FIGURE 1

B100002.00

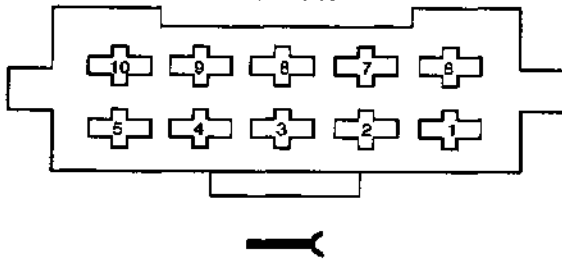


FIGURE 2

B120009.00

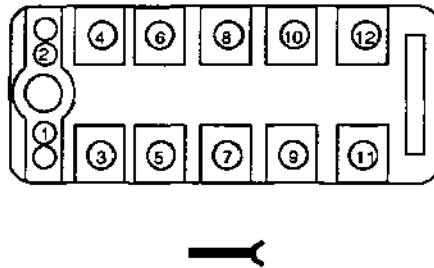


FIGURE 3

B080006.00

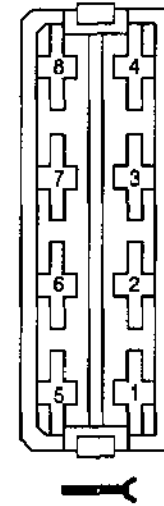


FIGURE 4

B060013.00

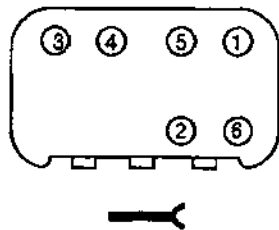


FIGURE 5

B030009.00


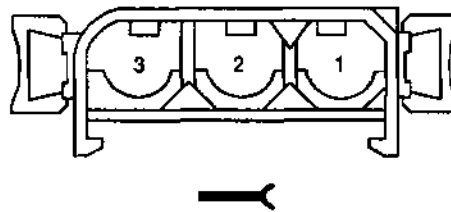


FIGURE 6

B130002.00



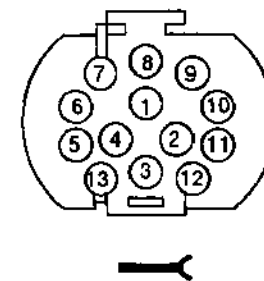

CONNECTOR VIEWS

FIGURE 1

B210002.00

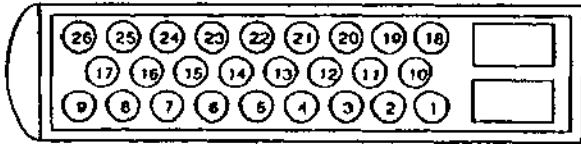


FIGURE 2

B120011.00

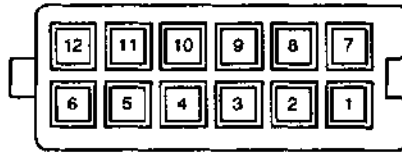


FIGURE 3

B120011.00

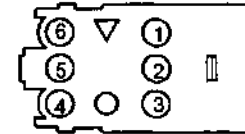


FIGURE 4

B200001.00

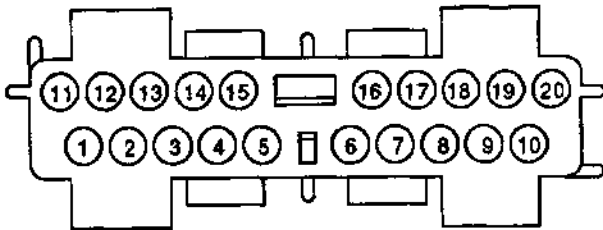


FIGURE 5

B120005.00


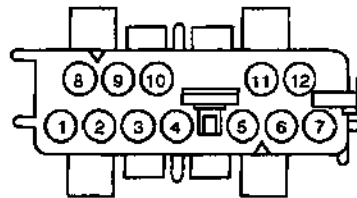


FIGURE 6



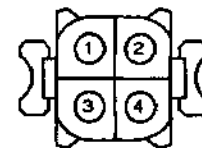

CONNECTOR VIEWS

FIGURE 1

B060007.00

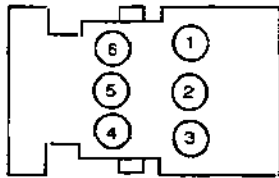


FIGURE 2

B060023.00

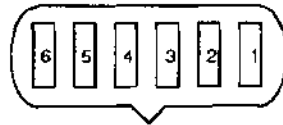


FIGURE 3

B060016.00

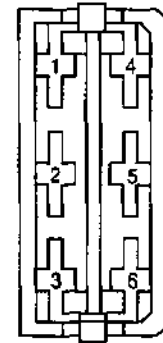


FIGURE 4

B060009.00

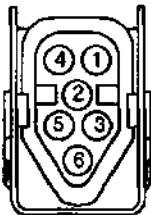


FIGURE 5

B080010.00


 


FIGURE 6

B0400011.00



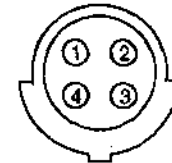

CONNECTOR VIEWS

FIGURE 1
B080009.00

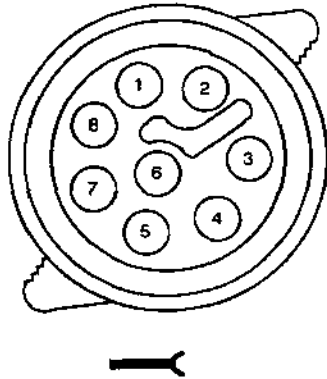


FIGURE 2
B060011.00

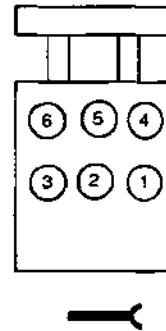


FIGURE 3
B030018.00

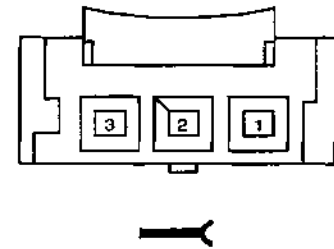


FIGURE 4
B060010.01

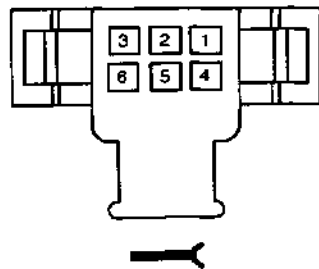


FIGURE 5
B040013


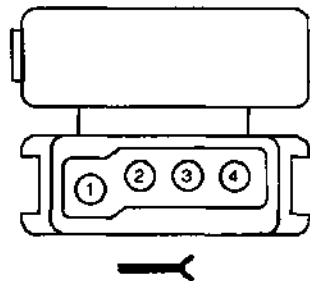


FIGURE 6
B090002.00




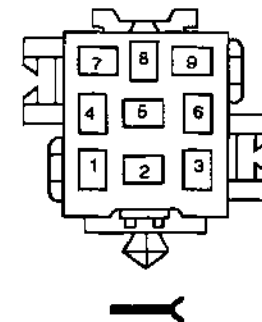

Connector Views

J241

B060005.00

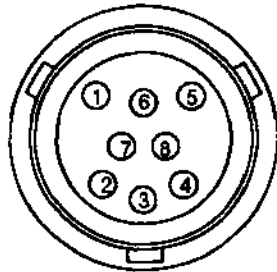


J242

B050006.00




J243

B060014.00

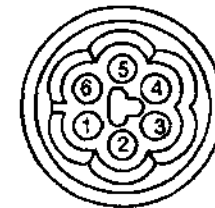


J244

B040006.00

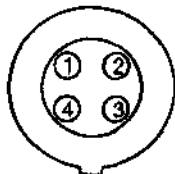


J245

B200003.00

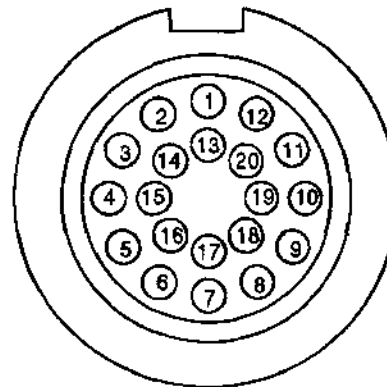

J246

B07000.00

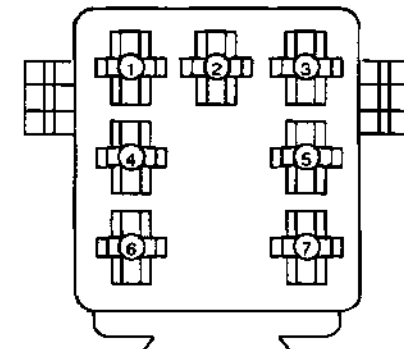




Connector Views


J241

 B170000.00




J242


B150003.00

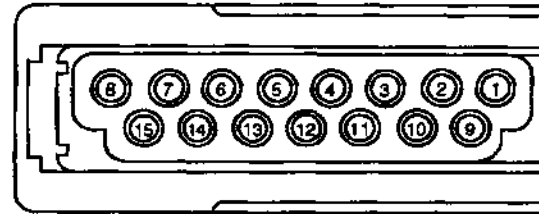

J243

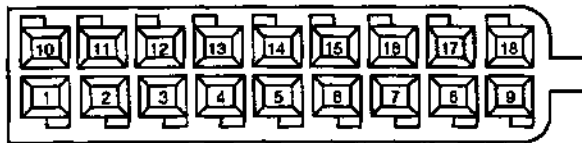

J244

 



CONNECTOR VIEWS

FIGURE 1

B260003.00

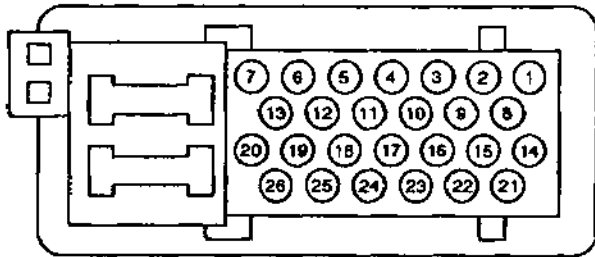


FIGURE 2

B070001.00

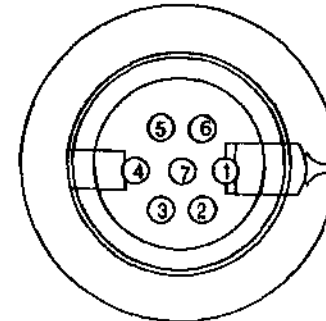


FIGURE 3

B100006.00

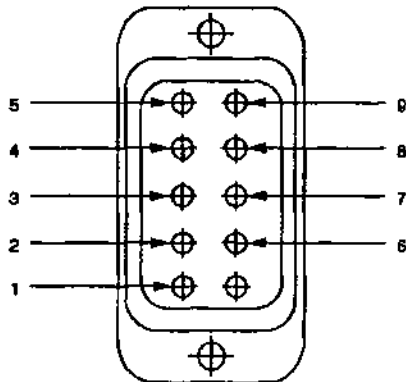


FIGURE 4

B060030.00

